



Wired Internet Camera RXS-3211

User Manual



Content

Chapter 1 Knowing your IP Camera.....	3
1.1 Check your package.....	3
1.2 Basic Information.....	4
1.3 Product Highlights	4
1.4 Camera Front and Rear View.....	5
1.5 LED Activities Description.....	6
1.6 Camera Hardware Installation	7
1.7 Camera Software Installation.....	8
Chapter 2 Connecting your IP Camera	14
2.1 Camera Installation	14
2.1.1 IP Camera connects with Computer.....	14
2.1.2 IP Camera connects with Router/Wireless Router.....	20
Chapter 3 Camera's Management Interface	23
3.1 Camera Settings	23
3.2 LAN Settings	25
3.2.1 LAN	26
3.2.2 RTSP	28
3.2.3 Dynamic DNS.....	29
3.2.4 UPnP	29
3.2.5 LoginFree.....	31
3.3 Video Settings	31
3.3.1 Dual Mode	32
3.3.2 MPEG4	32
3.3.3 MJPEG.....	33
3.4 E-mail/FTP Settings.....	34
3.4.1 E-Mail (with Gmail and hotmail setup examples).....	35
3.4.2 FTP Configuration	38
3.5 Motion Detection Settings	39
3.5.1 Motion Detection Basic Setting.....	39
3.5.2 Motion Detection Region Setting	40
3.6 Schedule Settings.....	41
3.7 System Settings.....	42
3.7.1 Camera Information	43
3.7.2 Date / Time Setting	44
3.8 Status.....	46
3.9 Account Settings	46

3.10 Log	48
Chapter 4 Using Surveillance Software	50
4.1 Installing Surveillance Software	50
4.2 Using Surveillance Software.....	53
4.3 Configure Surveillance Software	56
4.3.1 Configure cameras	56
4.3.2 General Options	62
4.4 Change Display Layout.....	65
4.5 Full-Screen Mode.....	67
4.6 Scan.....	67
4.7 Zoom-in / Zoom-Out.....	68
4.8 Snapshot.....	69
4.9 Recording	70
4.10 Video Playback	70
Chapter 5 Appendix	72
5.1 Product Specification	72
5.2 FAQ / Troubleshooting	73
5.2.1 I can not connect to IP camera	73
5.2.2 Image refreshes very slow	74
5.2.3 IP camera is not responding	75
5.2.4 Image is fuzzy	75
5.2.5 I set the IP camera to send image by Email or FTP, but nothing is received	76
5.3 Additional Setup guides	77
5.3.1 Obtain a free DynDNS account to view while away.....	77
5.3.2 Using this IP Camera with a router or firewall	81
5.3.3 Using cell phone as IP Camera's Image Viewer	84

Chapter 1 Knowing your IP Camera

1.1 Check your package

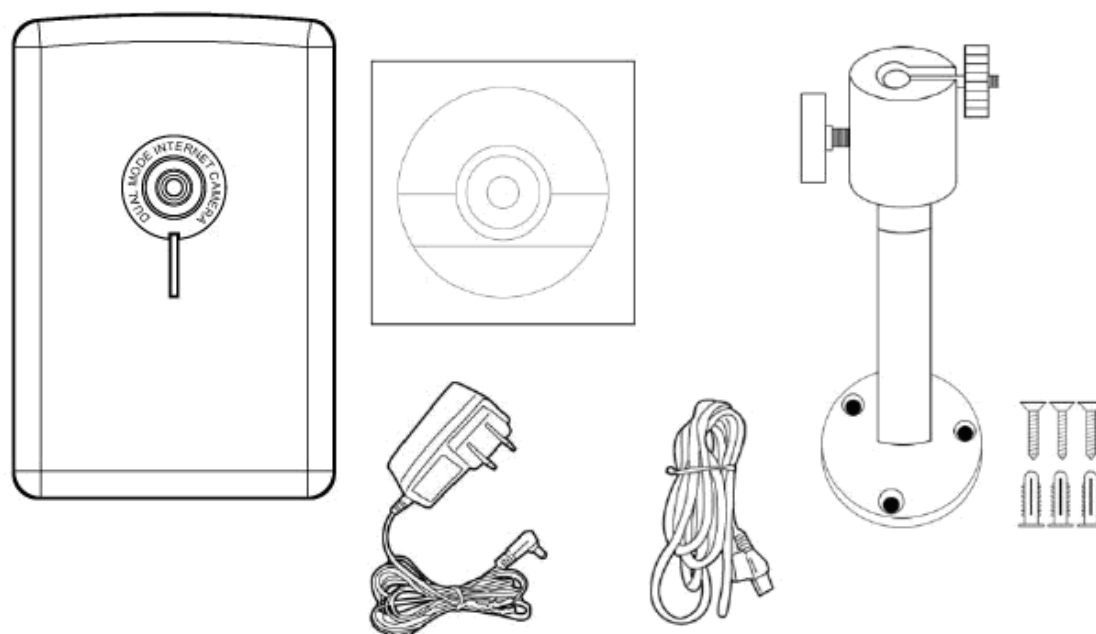


Figure 1.1-1

	Item Name	Quantity	
1	Rosewill RXS-3211 Wired Internet Camera	1	<input type="checkbox"/>
2	5V/1A Power Adapter	1	<input type="checkbox"/>
3	Camera Stand accessory kit		
	Wall Mount Stand	1	<input type="checkbox"/>
	Wall Anchors	3	<input type="checkbox"/>
	Screws	3	<input type="checkbox"/>
4	39.3in (100cm) Category 5 Ethernet Cable	1	<input type="checkbox"/>
5	Quick Installation Guide	1	<input type="checkbox"/>
6	CD (Including User Manual/Utility/Driver)	1	<input type="checkbox"/>

If any of the above items are missing, please contact Rosewill Support.

1.2 Basic Information

Thank you for purchasing this Internet IP camera! This IP camera is an ideal product for all kinds of video-surveillance purposes, like home/office safety, kid/pet monitoring, and remote video acquire etc. Unlike conventional close-circuit video camera, you're not limited to the length of cable! Once this IP camera is connected to Internet, you can check video from anywhere in the world where Internet access is available.

You can discover more useful functions in next section!

1.3 Product Highlights

- No pre-loaded software required - all you need is a browser like Internet Explorer 6 (and above, with plugin installed).
- Supports VGA (640 x 480), QVGA (320 x 240), and QQVGA (160 x 120) video resolution.
- Supports two video compression formats (MJPEG and MPEG4).
- Supports DHCP and you can also assign a fixed IP address to the camera.
- Supports Dynamic DNS (used to allocate the IP camera's Internet address, when the ISP you're using does not assign you with a fixed Internet address).
- Supports UPnP, Windows XP (and above) will discover this IP camera in network neighbor automatically.
- Send captured picture by Email or FTP when motion is detected.

- Configurable motion detection sensitivity (6 levels from most sensitive to least sensitive) with three adjustable areas support.
- Built-in real-time clock, date and time information will be recorded with every captured picture / video clip (also supports auto time synchronization via network time protocol).
- Supports up to 4 users login simultaneously, and you can set different password to different user.
- Usage and event logging.

1.4 Camera Front and Rear View

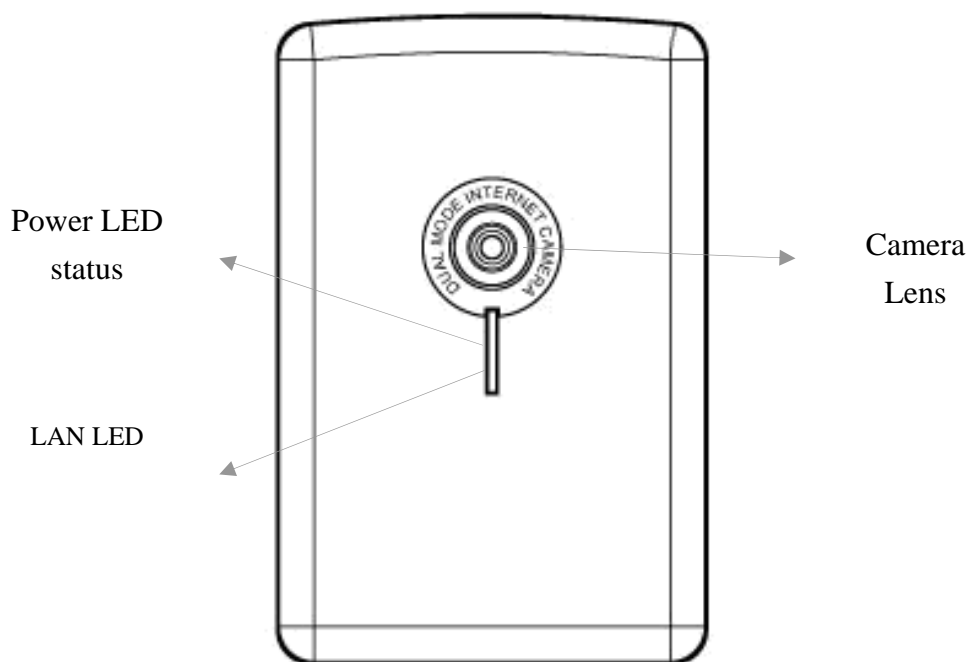



Figure 1.4-1 Front View

Power LED: Indicates power and WPS status

LAN LED: Indicates LAN activity

Camera: Video camera with lens

LED activity for LAN / Power LED will be given later.

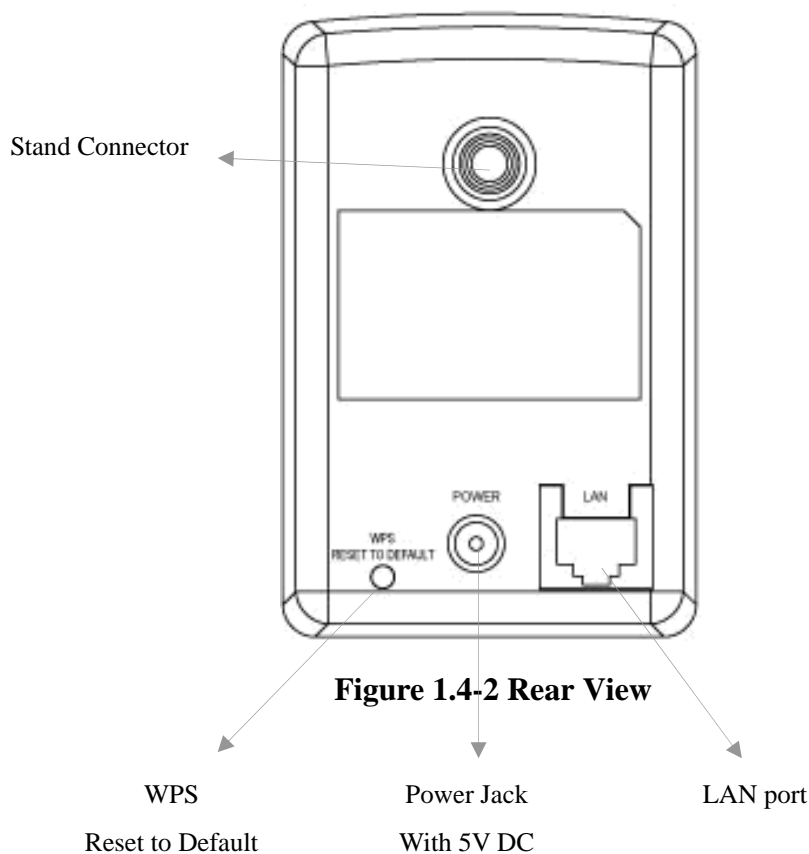

Stand Connector: Connects to any standard tripod / camera wall holder.

WPS / Reset Button: Press and release this button to activate WPS mode (WPS mode is not available in Wired Camera); press and hold this button for 10 seconds to clear all settings of this camera and return to factory default.

Power Jack: Connect to 5V power adapter.

LAN Jack: Connect to LAN by Ethernet cable.

1.5 LED Activities Description

LED Name	Status	Description
Blue	Slow Blinking	Camera is booting
	Steady On	Camera is correctly powered
	Off	Camera is off
Green	On	Camera is correctly powered
	Off	Camera is not connected to LAN
	Flash	Camera is logged in

1.6 Camera Hardware Installation

Please follow the following instructions to set your IP camera up.

1. Unpack the product package and check if anything missing.
2. Insert supplied LAN cable to “LAN” jack. You can choose to plug the other end onto one of the following: your computer, and your wired or wireless router.

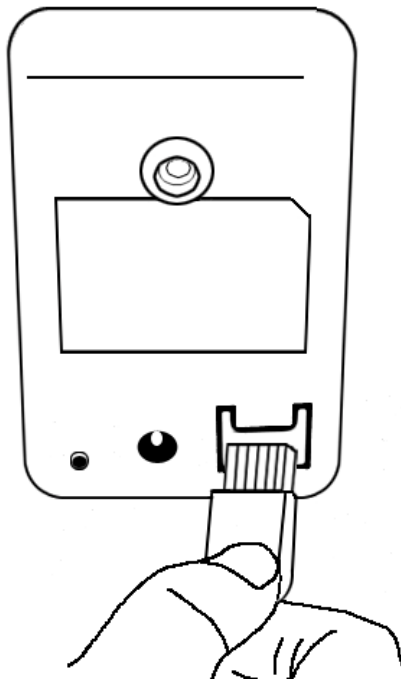


Figure 1.6-1

3. Plug the power adapter to wall socket, and connect the power connector to the power jack located at the back of the IP camera.

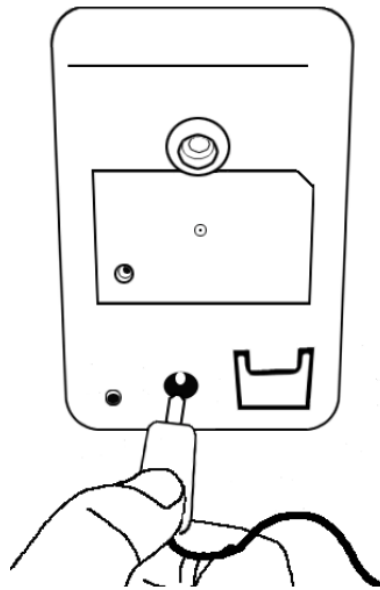


Figure 1.6-2

4. Connect your stand to the connector or place the camera in a secure place, and point the camera to the place you wish to monitor.

1.7 Camera Software Installation

Follow the simple steps below to run the Install Wizard to guide you quickly through the Installation process. The following installation is implemented in Windows XP. The installation procedures in Windows 2000/XP/Server 2003/Vista/Win7 are similar.

1. Insert the CD shipped along with the Internet Camera into your CD-ROM drive. The “**Autorun.exe**” program should be executed automatically. If not, run “**Autorun.exe**” manually from “**Autorun**” folder in the CD.
2. The Install Wizard will show four selections, select the program you want to install or click “**Exit**” to install the program later. The following installation steps are the demonstration of “**Install Administrator Utility**” and “**Install**

16 Chan Camera Viewer“.

“Install the Administrator Utility” provides the driver and Admin



Utility. Administrator Utility helps your computer to search, configure, and view the camera through IE browser.



Figure 1.7-1

3. First click “**Install Administrator Utility**” and when the following window appears, click “**Next**”.

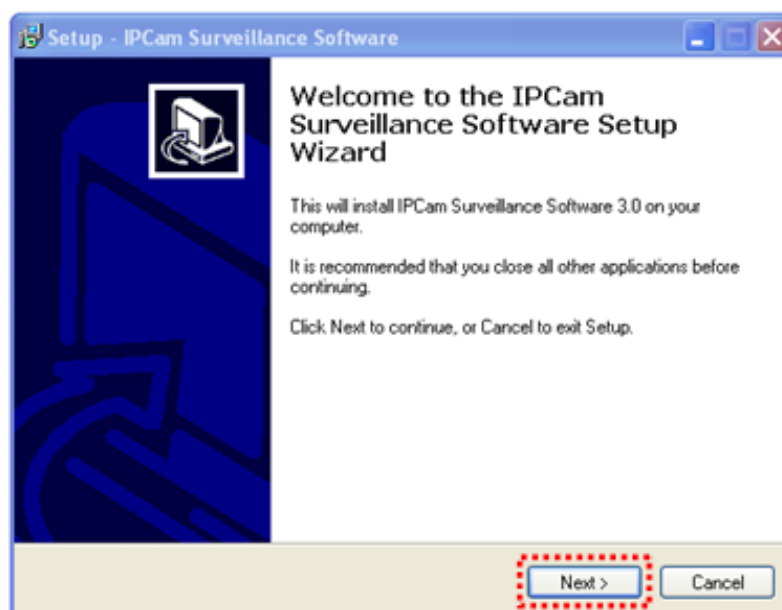


Figure 1.7-2

4. You can specify the destination folder of software installation; you can just use the default folder, and click “**Next**” to continue.

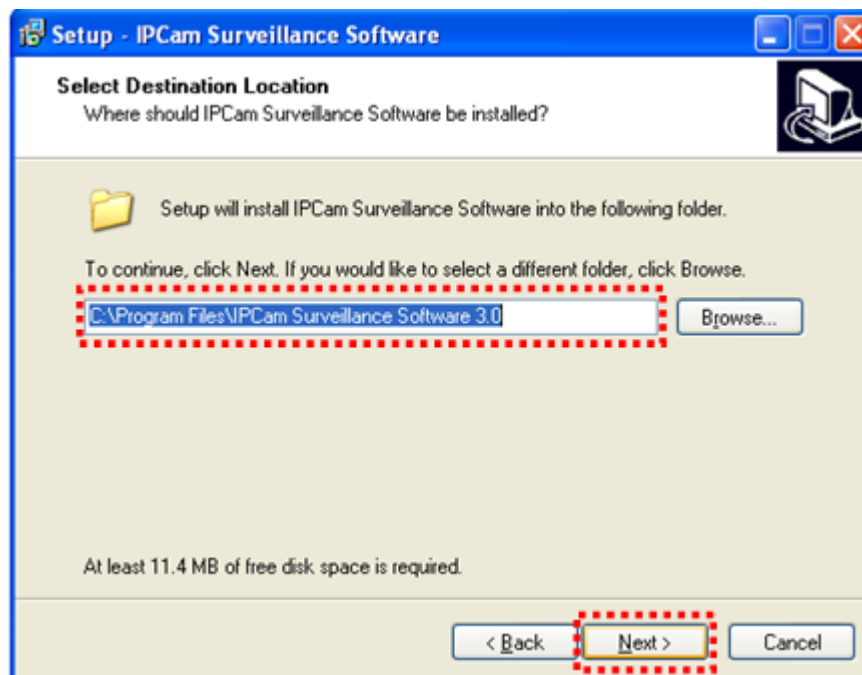


Figure 1.7-3

5. If you need installation program to create a desktop icon or a quick launch icon for you, click all items you need here, and click “**Next**” to continue.

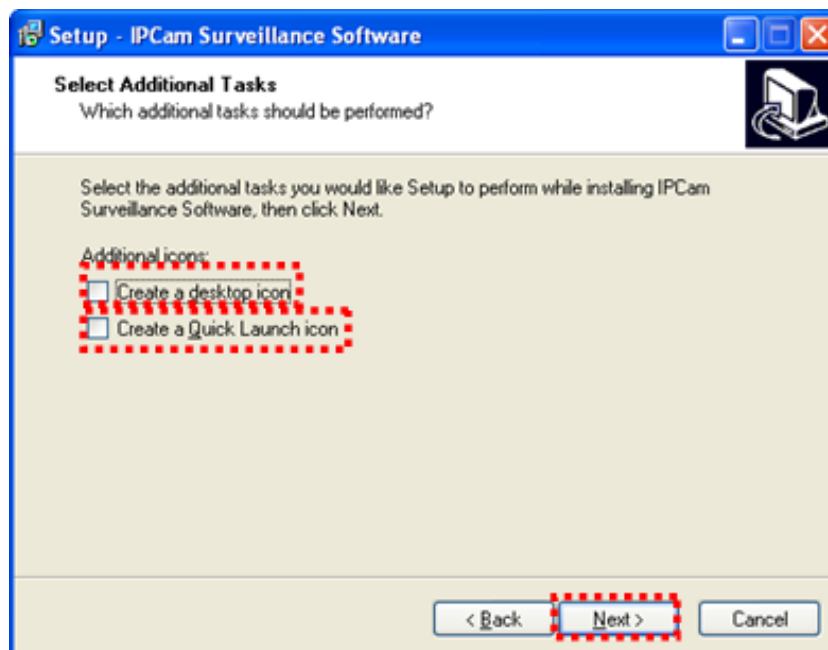


Figure 1.7-4

6. Here lists all options you chose in previous steps, if everything is correct, click **“Install”** to start installing procedure, or click **“Back”** to go back to previous step to modify installing settings.

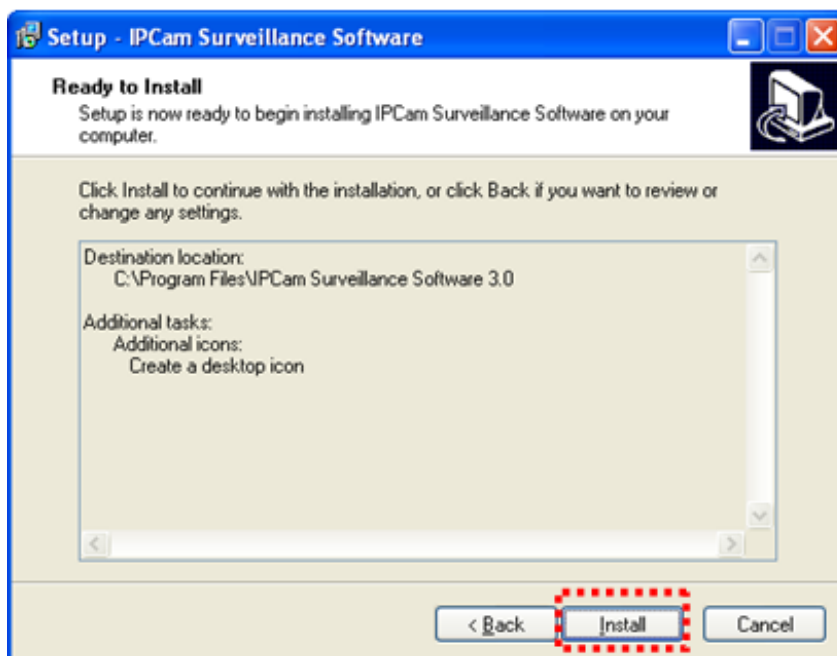


Figure 1.7-5

7. The installing procedure will take some time, please be patient.

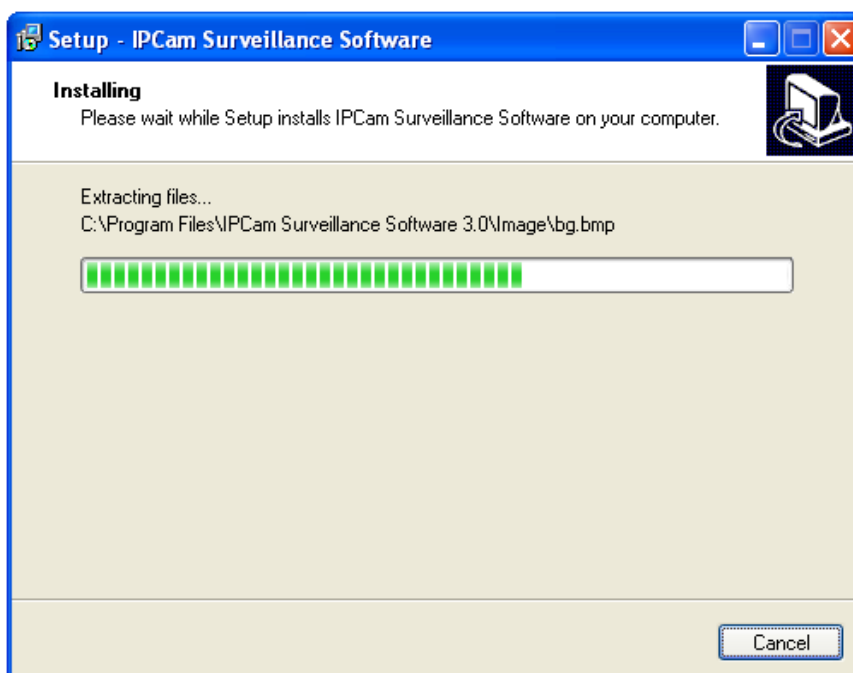


Figure 1.7-6

8. When you see this window, it means the software installing procedure is complete. Please click **“Finish”** to finish the procedure (IP camera surveillance software will start after you click **“Finish”** button, if you want to start it later, uncheck **“Launch IP Cam Surveillance Software”** box).

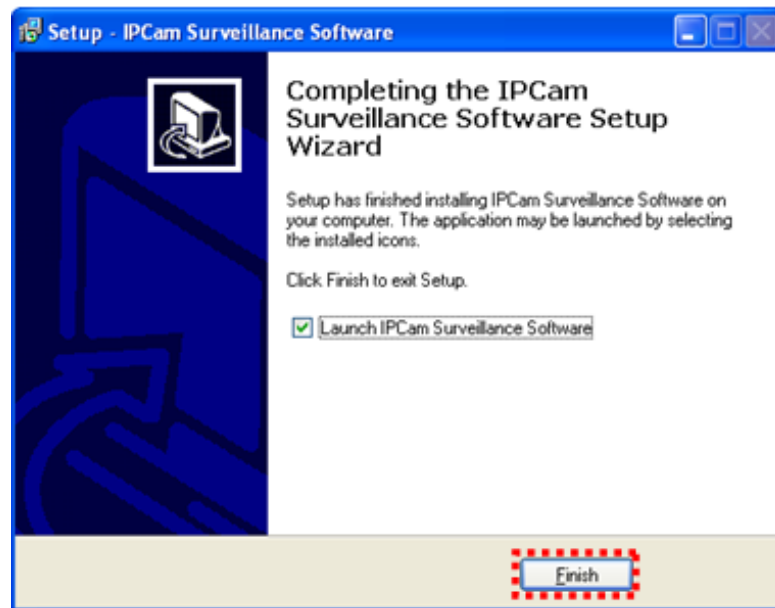


Figure 1.7-7

9. After finished the installation of Administrator Utility, please go back to wizard page and click **“Install Surveillance Software”**, the system will start running viewer installation and the procedures are similar to the installation of administration utility.



Figure 1.7-8

10. When the “**Administrator Utility**” and “**Surveillance Software**” installed completely. You should see both Icons on your desktop.



➤ **Administrator Utility**



➤ **Surveillance Software (16 Channels Camera Viewer)**

You have completed the installation process for RXS-3211's software.

Please follow Chapter 2 for details on Connecting your IP Camera with your computer or router.

Chapter 2 Connecting your IP Camera

There are two ways to connect up the RXS-3211 IP camera:

- **Connect directly to your computer through LAN port**
- **Connect directly to your router or wireless router**

Connecting Device	Computer/Laptop	Your wired/wireless router
Time to Install	Long	Short
Setup Process	See 2.1.1	See 2.1.2

2.1 Camera Installation

2.1.1 IP Camera connects with Computer

When connecting the RXH-3111 with your computer directly. You will need:

1. Plug in both the IP Camera and your computer's LAN port with Ethernet Cable.

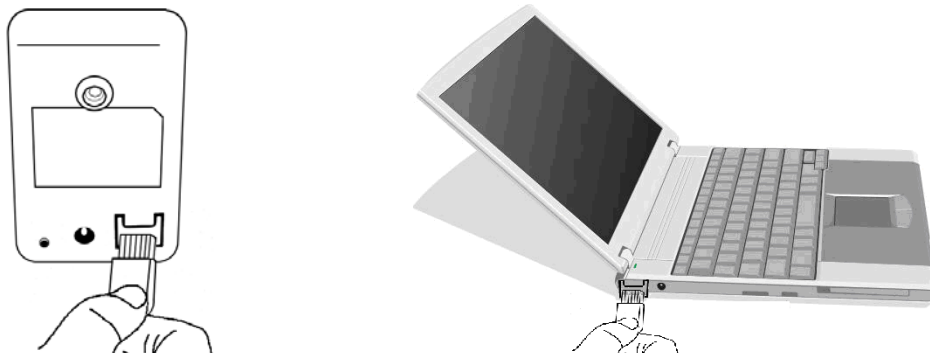


Figure 2.1.1-1

2. Please run the “**Administrator Utility**” program. You should see below as the Administrator Utility first appears.

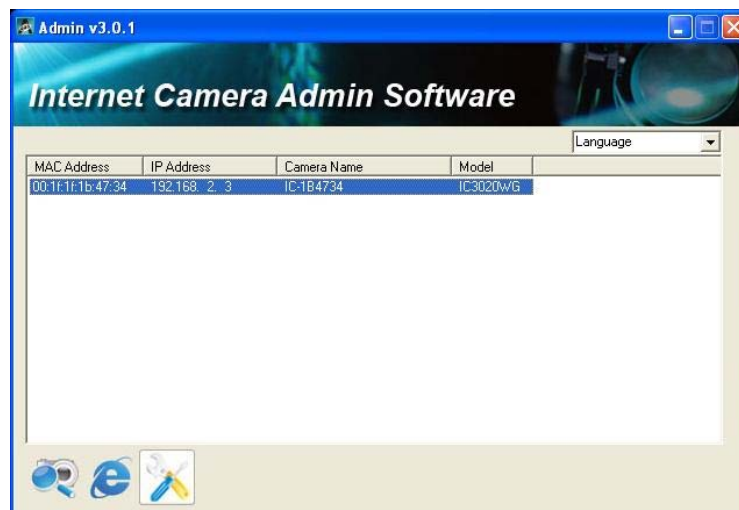


Figure 2.1.1-2



3. This window may appear at your Local Area Connection as “**Limited or no connectivity**”. This is because IP camera cannot assign IP to your computer. Therefore, you will need to **manually** assign your computer’s IP to connect to the IP Camera.

2.1.1.1 Manually Assign IP for Camera

1. Click “**Start**” -> “**Control Panel**”

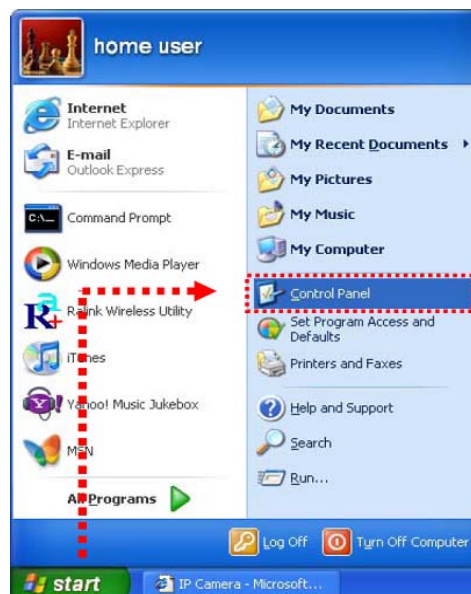


Figure 2.1.1-3

2. Double-click “**Network Connections**” icon.

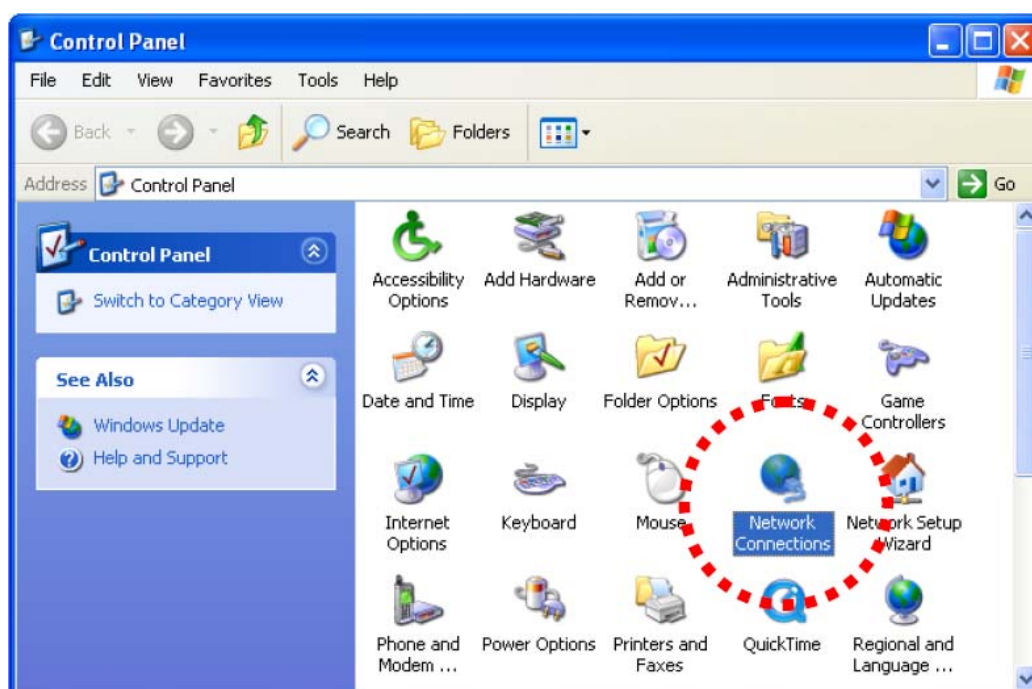


Figure 2.1.1-4

3. Right-click “**Local Area Connection**”, and click “**Properties**”

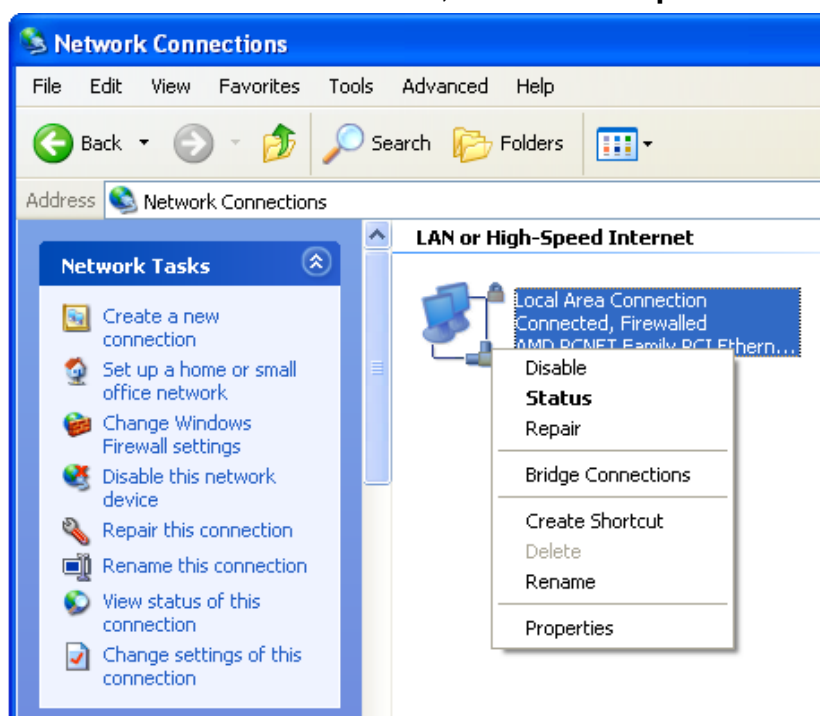


Figure 2.1.1-5

4. Select “Internet Protocol (TCP/IP)”, then click “Properties”.

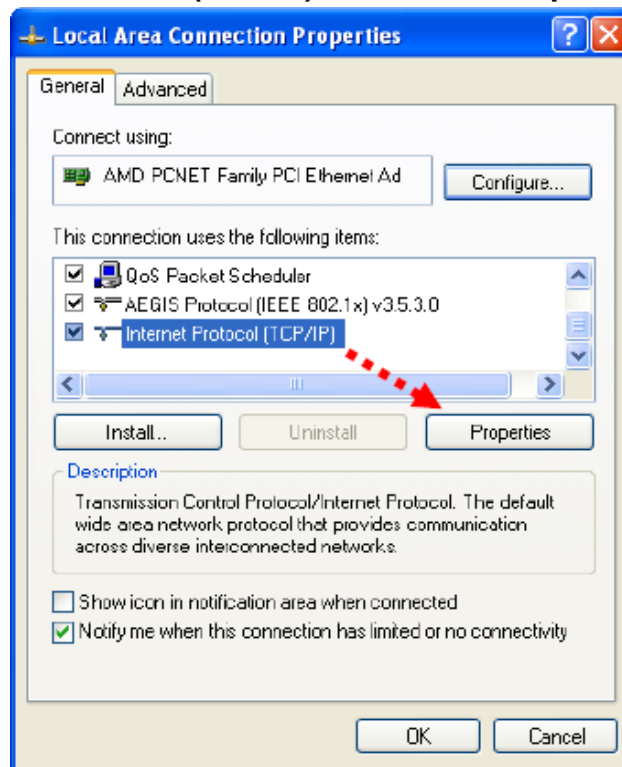


Figure 2.1.1-6

5. In “IP address” field, please fill in any IP address begins with “192.168.2”, and ends with a value greater than 2 and less than 254 (You can use the example in the picture “192.168.2.239”). In Subnet mask field, please fill “255.255.255.0”. Please keep all other fields empty, and click “OK”.

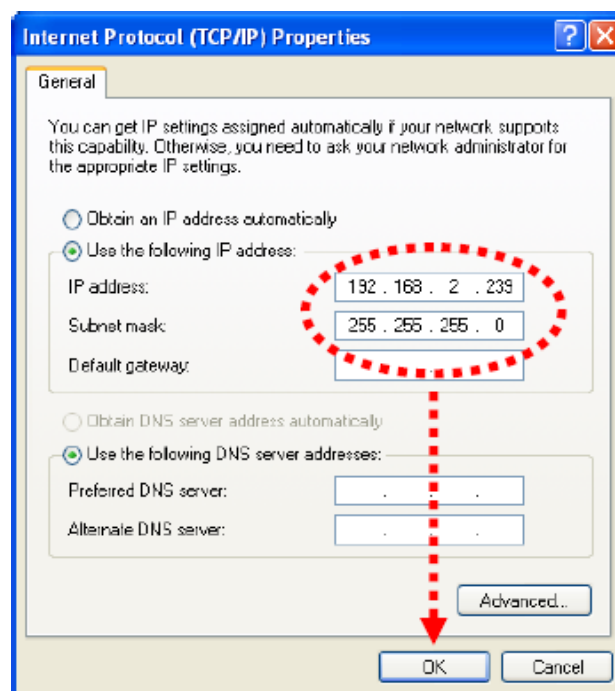


Figure 2.1.1-7

6. Open your Internet Explorer and type "**http://192.168.2.3**" in the address tab.

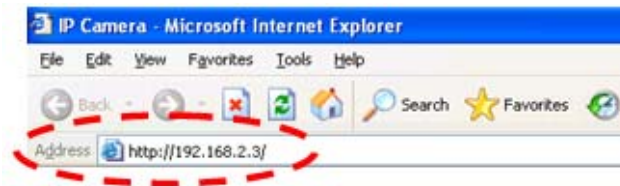


Figure 2.1.1-8

7. You should see a login window popup. The default login name and password is "**Admin**" and "**1234**".

(You should change the Login name and password after your first login.)

Click "**OK**" to continue after user name and password has entered. If you cannot login, maybe the password has been modified previously. This should not happen on your first login, if this is a newly-purchased camera, however, if you get the camera from someone else, the password would be changed. Please try to obtain the correct user name / password, or you'll have to reset the camera. ([Camera front and rear view](#) shows the reset button location)



Figure 2.1.1-9

2.1.1.2 Install Active X for Camera

1. After logged on, you should see the following messages at the top of Internet Explorer. This will install Active X into your computer. This IP camera requires a special ActiveX control (A.K.A. 'Plugin') to work. Please click on the message, and select 'Install ActiveX Control...':

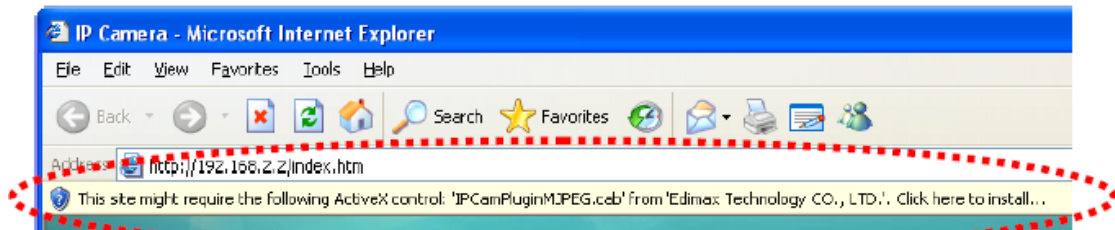


Figure 2.1.1-10

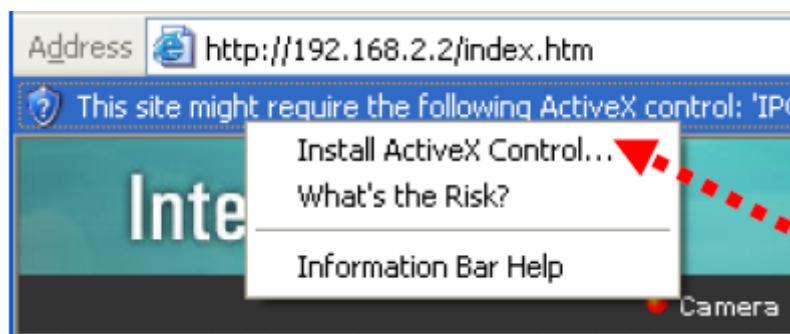


Figure 2.1.1-11

2. When you're prompted, click "Install" to continue.



Figure 2.1.1-12

3. After installed the Active X control, you should see the image from camera now:

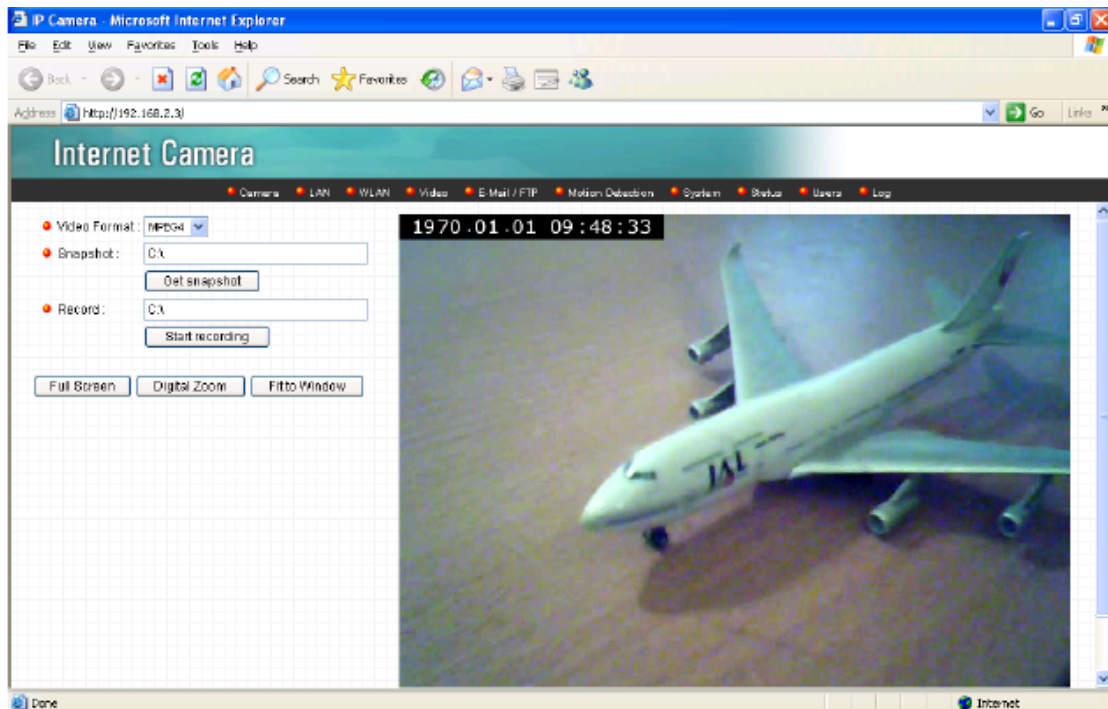


Figure 2.1.1-13

2.1.2 IP Camera connects with Router/Wireless Router

You can also connect the camera through your current router/wireless router.

1. Simply plug your camera onto the current working router/wireless router like **figure 2.1.2-1**.

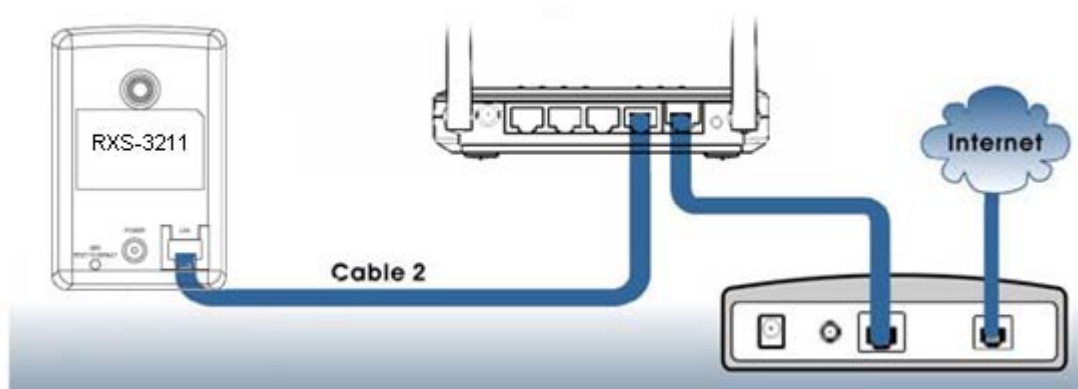


Figure 2.1.2-1

2. After connect, please run the “**Administrator Utility**” program to search the camera’s IP address. Once the program startup, you should see the Camera has being assign an IP address other than the default IP

“192.168.2.3” as figure 2.1.2-2.

If not, please click “**1. Search Camera**”, and you should be able to see the IP address of Camera.

- Once your camera has the IP address, you can continue to view the camera by click on the info bar at “**2.**”.

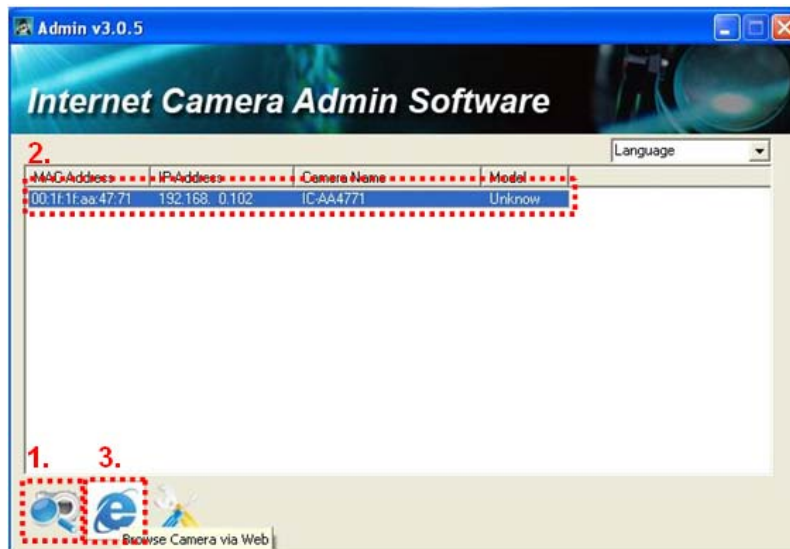


Figure 2.1.2-2

- Then click “**3. Browse Camera via Web**” to view it through your IE browser. You will see a warning window asking if you want to change the setting of the IP. Please click “**cancel**” to continue.

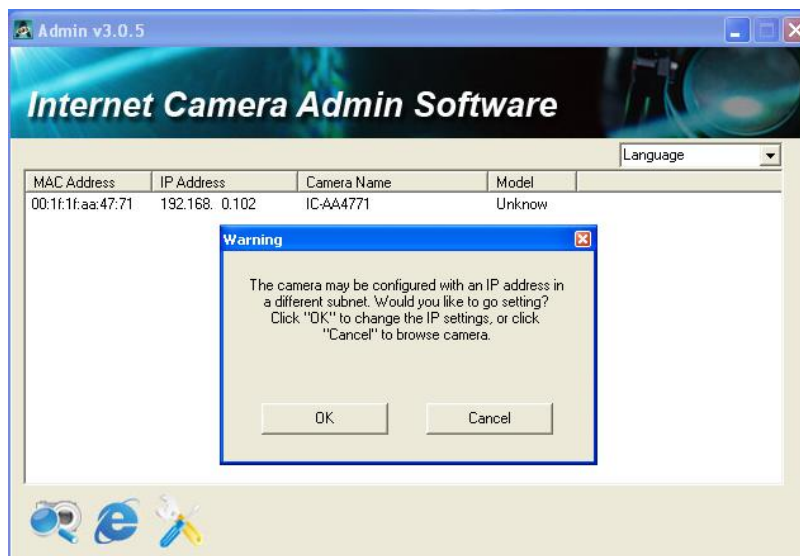


Figure 2.1.2-3

- After selecting “**Cancel**”, your computer will open up IE browser or your default Internet browser. We recommend you to use Internet Explorer to

operate and manage your camera.

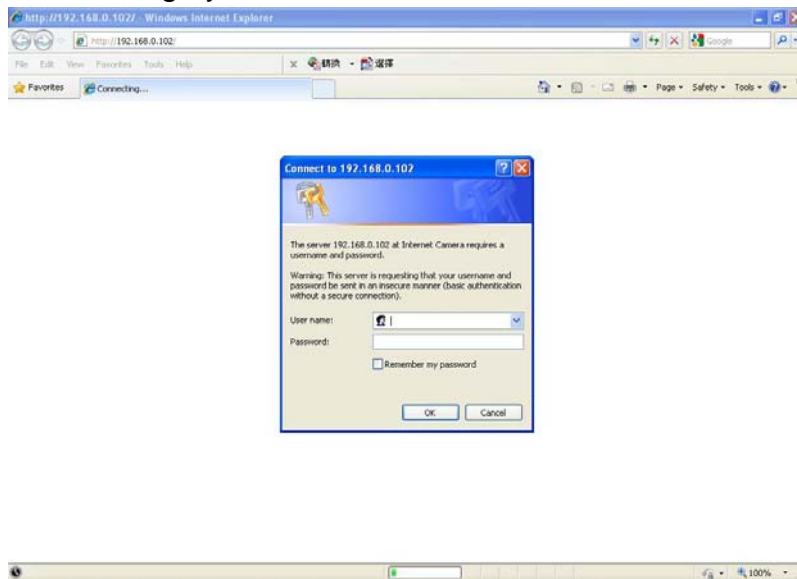


Figure 2.1.2-4

Please enter the User name and Password. (Default User name and Password is **Admin** and **1234**)

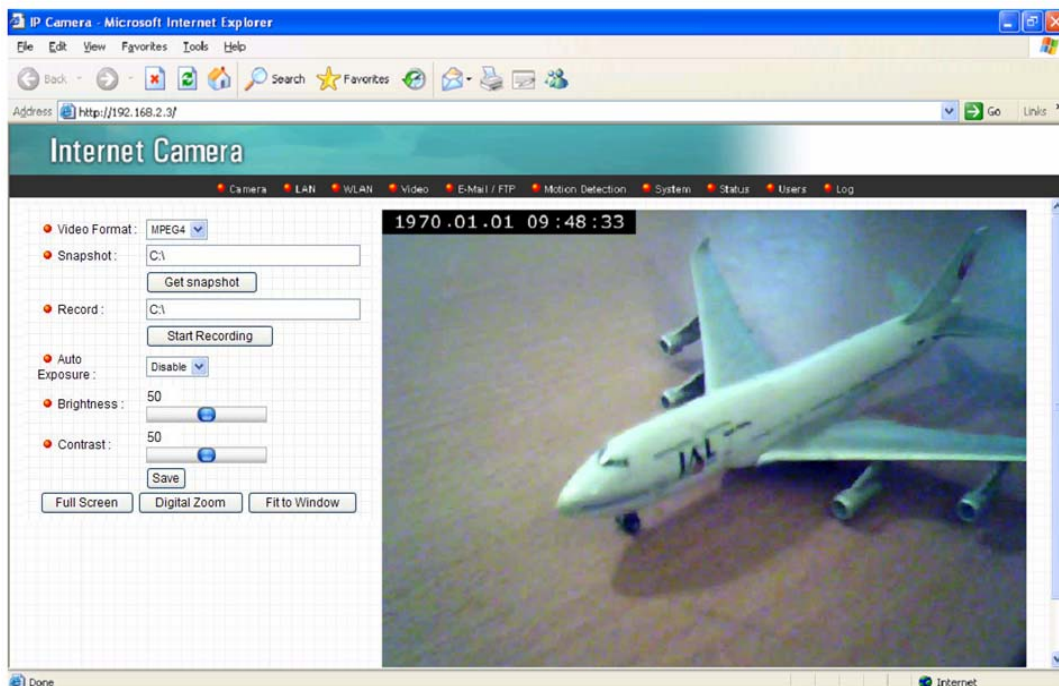


Figure 2.1.2-5

You should see the image from camera now. You have entered the Camera's management page!

Chapter 3 Camera's Management Interface

3.1 Camera Settings

The default page after you logged onto web management interface is “**Camera**”, and this is the page where you can see the real-time image from camera.

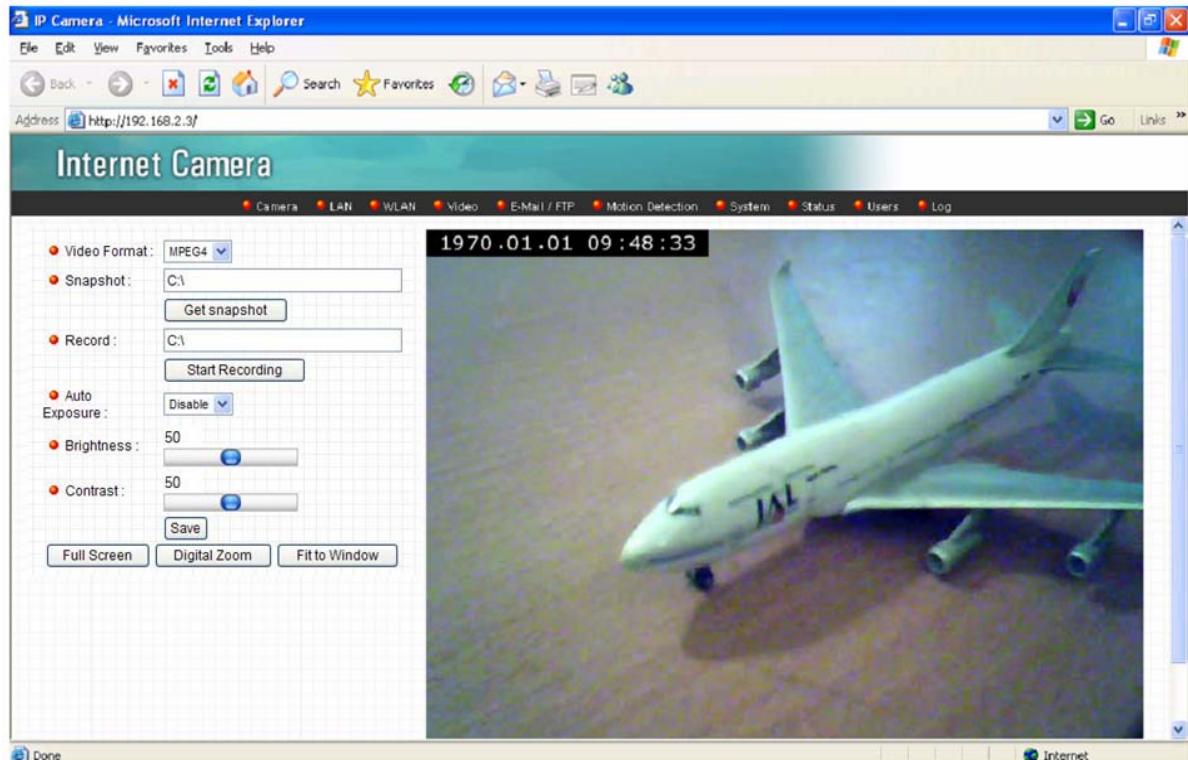


Figure 3.1-1

You can always come back to this menu by clicking “**Camera**” on the top of web management interface.





Figure 3.1-2

The descriptions of every setting in this menu will be given below:

The screenshot shows a web-based configuration interface for the camera. It includes the following controls:

- Video Format:** A dropdown menu currently set to "MPEG4".
- Snapshot:** A text input field containing "C:\", a "Get snapshot" button, and a "Start Recording" button.
- Record:** A text input field containing "C:\".
- Auto Exposure:** A dropdown menu currently set to "Disable".
- Brightness:** A slider control with a value of 50.
- Contrast:** A slider control with a value of 50.
- Buttons:** A "Save" button and three view controls: "Full Screen", "Digital Zoom", and "Fit to Window".

Item	Description
Video Format	Specifies video encoding format. You can choose MPEG4 or MJPEG (Motion-JPEG) . MPEG4 mode also supports motion detection (see chapter OOX).
Snapshot	Take a snapshot picture and save the picture to your computer's hard drive. Click on directory display and you'll be prompted to select a folder to save snapshot file.
Record	Start video recording and save recorded video clip to your computer's hard drive. Click on directory display and you'll be prompted to select a folder to save snapshot file
Auto Exposure	Camera will adjust the brightness of the video. You have the options of " Disable ", " Dark ", and " Bright "
Brightness	By sliding the bar, you can adjust the brightness of the video
Contrast	By sliding the bar, you can adjust the contrast of the video
Full Screen	Click this button and the image captured by camera will be displayed in full-screen mode. To resume, double-click the image.
Digital Zoom	Click this button to enable digital zoom (video magnification) function:

	 <p>Check 'Enable' box to enable digital zoom, and you can set the percentage of zoom from 100% (no magnification) to 400%. You can also drag the green square by mouse and put it on the area you wish captured image to be magnified.</p> <p>To exit digital zoom setting, press  button.</p>
Fit to Window	Click this button and captured image will fit to window size.

3.2 LAN Settings

All network-related settings can be found in this **LAN** section, and you have to specify TCP/IP parameters in this menu if you want to change IP address, use PPPoE, Dynamic DNS, and activate UPnP function.

You can access this menu by clicking "**LAN**" on the top of web management interface.



LAN Setting has the options of managing LAN, RTSP, Dynamic DNS, UPnP, and LoginFree. The later section will explain the detail of each option.

LAN		[Apply]
• Network Type :	<input checked="" type="radio"/> DHCP <input type="radio"/> Static IP Address	
• IP Address :	<input type="text" value="192.168.2.3"/>	
• Subnet Mask :	<input type="text" value="255.255.255.0"/>	
• Gateway :	<input type="text" value="192.168.2.254"/>	
• Primary DNS :	<input type="text" value="168.95.1.1"/>	
• Secondary DNS :	<input type="text"/>	
• AV Control Port :	<input type="text" value="4321"/>	
• Web Port :	<input type="text" value="80"/>	

RTSP		[Apply]
• Enable RTSP :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
• RTSP Port :	<input type="text" value="554"/>	
• RTSP Path :	<input type="text" value="ipcam"/> .sdp	
• RTP Port Range :	<input type="text" value="50000"/> - <input type="text" value="60000"/>	

Dynamic DNS		[Apply]
• Enable DDNS :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
• Provider :	<input type="text" value="dyndns.org"/>	
• Host Name :	<input type="text" value="ddns-host"/>	
• User Name :	<input type="text" value="ddns-account"/>	
• Password :	<input type="password" value="*****"/>	

UPnP		[Apply]
• Enable UPnP :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	

LoginFree		[Apply]
• Filename :	<input type="text"/> .jpg	

3.2.1 LAN

You can define IP address and select the port number you wish to use here.

LAN Apply

☒ Network Type : ☐ DHCP ☒ Static IP Address

☒ IP Address : 192.168.2.3

☒ Subnet Mask : 255.255.255.0

☒ Gateway : 192.168.2.254

☒ Primary DNS : 168.95.1.1

☒ Secondary DNS :

☒ AV Control Port : 4321

☒ Web Port : 80

Item	Description
Network Type	<p>This camera can obtain the IP address from DHCP server automatically (if you have one), or set a fixed IP address. Select “DHCP” to obtain IP address automatically or “Static IP Address” to assign this IP camera with a fixed IP address. When “DHCP” is selected, IP address parameters below will be grayed out.</p> <p>DHCP can apply to most of the cases like connecting with your computer or router/wireless router.</p>
IP Address	Specify the IP address for this IP camera here.
Subnet Mask	Specify the subnet mask for this IP camera here.
Gateway	Specify the gateway address of the local network here.
Primary DNS	Specify the IP address of DNS server here. Please input IP address only. If you don't know the address of DNS server, ask network administrator or your ISP for help.
Secondary DNS	<p>Specify the IP address of backup DNS server here. When primary DNS is unreachable, IP camera will use the IP address specified here as DNS server.</p> <p>This field is optional.</p>
AV Control Port	Specify the port number of video transfer here. If you have firewall on your network, you need to allow computers on Internet to access this port number of the IP address of IP camera, or you'll not be able to view video from Internet.

HTTP Port	<p>Specify the port number of web management interface here. If it's not 80, you'll have to add: "port" after the IP address / hostname of this IP camera.</p> <p>For example, if the HTTP port number you specified here is 90 and the IP address of IP camera is 10.20.20.30, then you have to input "http://10.20.20.30:90" in the address bar of Internet explorer.</p>
Click " Apply " to save settings and make the new settings take effect.	

3.2.2 RTSP

The **Real Time Streaming Protocol (RTSP)** is a network control protocol designed for use in entertainment and communications systems to control streaming media servers. The protocol is used to establish and control media sessions between end points. **RTSP (Real-Time Streaming Protocol)** allows you to view live video captured by IP camera. You can set RTSP related settings here.

Item	Description
Enable RTSP	<p>Select "Enable" to activate RTSP function of this IP camera, select "Disable" to disable it.</p> <p>The Default setting here is "Enable"</p>
RTSP Port	Input the port number which RTSP will use. Default setting is 554.
RTSP Path	Input the path of RTSP stream.
RTP Port Range	Input the port range of RTP. Default setting is 50000 to 60000.
Click " Apply " to save settings and make the new settings take effect.	

3.2.3 Dynamic DNS

If your ISP does not give you a fixed Internet IP address (i.e. the Internet address you're using when you access the Internet is not always the same – ask your ISP for detailed information), you can use this function to help you locate the IP address of this IP camera when you're away from home or office.


Before you can use this function, you'll need to apply for an account at dyndns.org (<http://www.dyndns.org>). Detailed instructions of how to apply a new account can be found on dyndns.org's website.

Item	Description
Enable DDNS	Select “ Enable ” to activate Dynamic DNS function of this IP camera, select “ Disable ” to disable it.
Provider	Select dynamic DNS service provider here. Only dyndns.org is available currently.
Host Name	Input dynamic DNS host name here.
User Name	Input dynamic DNS user name here, must be the same as the one you applied on dyndns.org.
Password	Input dynamic DNS password here, must be the same as the one you applied on dyndns.org.
Click “ Apply ” to save settings and make the new settings take effect.	

3.2.4 UPnP


When UPnP function is activated, all UPnP-compatible computers / network devices will be able to discover this IP camera automatically (only those in the same local network).

This function is useful and you don't have to remember the IP address of this IP camera. Simply open "**Network neighbor**"!

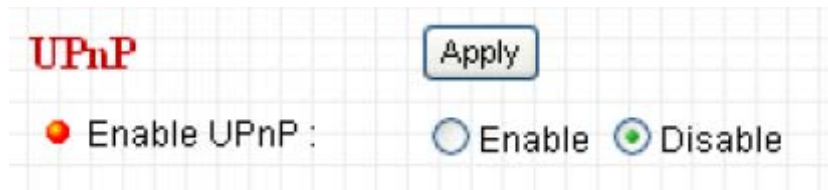


Item	Description
Enable UPNP	Select " Enable " to activate UPNP function of this IP camera, select " Disable " to disable it.
Click " Apply " to save settings and make the new settings take effect.	

After UPNP function is activated, a popup message will appear:

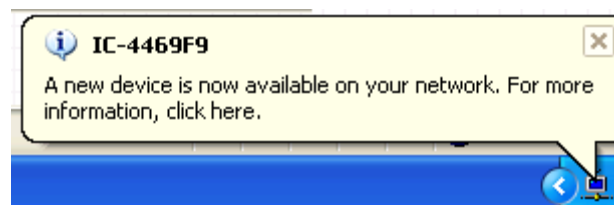

Click the message to open "**My Network Places**", and you'll see the IP camera:

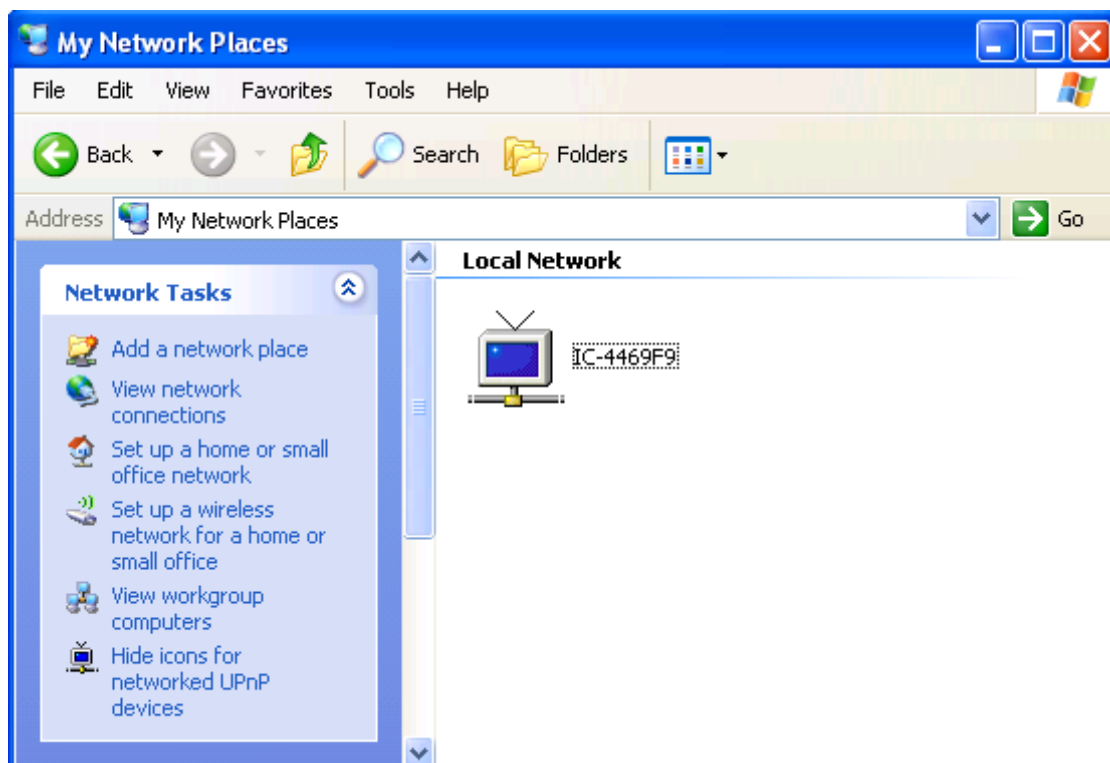

You can double-click the icon to launch Internet Explorer and log onto IP camera's web management interface directly.

3.2.5 LoginFree

This function is for user to specify a filename here so everyone who knows this filename can gain access to the picture captured by the IP camera with this name with .jpg file extension.

For example, if the filename you specified here is “**temp**” and your IP camera’s IP address is “**192.168.2.3**”, then everyone within the network can access to the picture taken by the IP camera at “**http://192.168.2.3/temp.jpg**”.

This function is for convenience only, and anyone who knows this filename will be able to see the picture taken by your IP camera. Please think again before you use this function.

LoginFree

● Filename : .jpg

Item	Description
LoginFree	Specify the file name of the picture here. If you want to disable this function, leave it blank.
Click “ Apply ” to save settings and make the new settings take effect.	

3.3 Video Settings

Video allows you control and specify the video and audio parameters of this IP camera here.



The screenshot shows a web interface for configuring video settings. It is divided into three sections: **Dual Mode**, **MPEG4**, and **MJPEG**. Each section has an 'Apply' button. In the **Dual Mode** section, the 'Default Video Format' is set to 'MPEG4'. The **MPEG4** section shows 'Video Resolution' as 'VGA (640 x 480)', 'Video Quality' with radio buttons for 'CBR' (2 Mbps) and 'VBR' (High), and 'Video Frame Rate' as '30'. The **MJPEG** section shows 'Video Resolution' as 'VGA (640 x 480)', 'Video Quality' as 'Highest', and 'Video Frame Rate' as '30'.

3.3.1 Dual Mode

IP camera supports two video encoding formats: MPEG4 and MJPEG. You can select the encoding format from one of them.

This partial screenshot shows the **Dual Mode** section with the 'Default Video Format' dropdown menu set to 'MPEG4'.

Item	Description
Default Video Format	Specify default video encoding format of this IP camera here. Available options are MPEG4 and MJPEG .
Click " Apply " to save settings and make the new settings take effect.	

3.3.2 MPEG4

If you selected "**MPEG4**" as the video encoding format of this IP camera, you can specify the parameters of MPEG4 video encoder here.

The screenshot shows the **MPEG4** section of the settings interface. It includes an 'Apply' button and three configuration items: 'Video Resolution' set to 'VGA (640 x 480)', 'Video Quality' with 'VBR' selected and 'Highest' chosen from the dropdown, and 'Video Frame Rate' set to '30'.

Item	Description
Video Resolution	Specify video resolution of MPEG4 video encoder. Available options are VGA and QVGA resolution. VGA resolution provides more details than QVGA, but requires more network bandwidth.
Video Quality	<p>Specify video quality. There are two video quality types: CBR (Constant Bit Rate), and VBR (Variable Bit Rate);</p> <p>CBR: The video bit rate is fixed, you can select a bit rate from dropdown menu. Higher bit rate means better video quality. But if your network bandwidth is limited, select a lower bit rate will help.</p> <p>VBR: Video bit rate is variable based on the video content being transferred. There're 5 levels of setting from "Lowest" to "Highest". Select "Lowest" will lower video quality and save network bandwidth; if a better video quality is required, select "High" or "Highest".</p>
Video Frame Rate	<p>Specify video refresh rate of MPEG4 video encoder. Higher video refresh rate provides more details about motion, but requires more network bandwidth.</p> <p>CAUTION: Choosing a low frame rate will save bandwidth, but may not be able to capture every motion if the object that IP camera points to is moving too fast.</p>
Click " Apply " to save settings and make the new settings take effect.	

3.3.3 MJPEG

If you selected "**MJPEG**" as the video encoding format of this IP camera, you can specify the parameters of **MJPEG** video encoder here.

The screenshot shows a web interface for configuring MJPEG video settings. At the top left, the word "MJPEG" is displayed in red. To the right is an "Apply" button. Below these are three settings, each with a red circular icon and a label, followed by a dropdown menu:

- Video Resolution :** The dropdown menu shows "VGA (640 x 480)".
- Video Quality :** The dropdown menu shows "Highest".
- Video Frame Rate :** The dropdown menu shows "30".

Item	Description
Video Resolution	Specify video resolution of MJPEG video encoder. Available options are VGA, QVGA, and QQVGA resolution. VGA resolution provides more details than QVGA and QQVGA, but requires more network bandwidth.
Video Quality	Specify video encoding quality of MJPEG video encoder. There are five levels of video quality from highest to lowest. Higher video quality provides better video quality, but requires more network bandwidth.
Video Frame Rate	Specify video refresh rate of MJPEG video encoder. Higher video refresh rate provides more details about motion, but requires more network bandwidth. CAUTION: Choosing a low frame rate will save bandwidth, but may not be able to capture every motion if the object that IP camera points to is moving too fast.
Click "Apply" to save settings and make the new settings take effect.	

3.4 E-mail/FTP Settings



This IP camera is capable to send an Email or perform FTP upload with captured image, when a motion is detected. You can access this menu by clicking **"E-Mail & FTP"** on the top of web management interface.

E-Mail

Apply

Send a test email

Recipient E-Mail Address :

max 127 characters, support 'user1@server1.com; user2@server2.com' multi-user format

SMTP Server :

SMTP Port :

25

Sender E-Mail Address :

SSL :

☐ Enable
 ☒ Disable

SMTP Authentication (If needed) :

☐ Enable
 ☒ Disable

User Name :

Password :

FTP Configuration

Apply

Upload a test file

FTP Server :

FTP Port :

21

User Name :

Password :

Remote Folder :

Passive Mode :

☒ Enable
 ☐ Disable

3.4.1 E-Mail (with Gmail and hotmail setup examples)

These settings are used to send the captured picture via Email:

E-Mail

Apply

Send a test email

Recipient E-Mail Address :

max 127 characters, support 'user1@server1.com; user2@server2.com' multi-user format

SMTP Server :

SMTP Port :

25

Sender E-Mail Address :

SSL :

☐ Enable
 ☒ Disable

SMTP Authentication (If needed) :

☐ Enable
 ☒ Disable

User Name :

Password :

Item	Description
Recipient E-Mail Address	<p>Input the email recipient's Email address here. If you have more than one Email recipient, please use a “;” (semicolon) mark between every Email address. All characters shouldn't exceed 127 characters.</p> <p>Example of Gmail setup: xxxxx@gmail.com</p>

	Example of hotmail setup: xxxxx@hotmail.com
SMTP Server	<p>Input the IP address or host name of the SMTP server (the server that delivers the Email for you) here.</p> <p>If you don't know, please refer to the SMTP server you're using in your Email software (like Outlook, Outlook Express etc.), or ask your network administrator or ISP.</p> <p>Example of Gmail setup: smtp.gmail.com</p> <p>Example of hotmail setup: smtp.live.com</p>
SMTP Port	<p>Input mail server's SMTP port here. Most of mail servers use port number 25.</p> <p>Example of Gmail setup: 465</p> <p>Example of hotmail setup: 25</p>
Sender E-Mail Address	<p>Input the Email address of mail sender, this will help you to identify the Email sent by this IP camera by sender's Email address.</p> <p><u>NOTE: Some mail server would reject to deliver the Email from unknown sender, it's recommended to input your own Email address here, or any other actual one.</u></p> <p>Example of Gmail setup: xxxxx@gmail.com</p> <p>Example of hotmail setup: xxxxx@hotmail.com</p>
SSL	<p>Some SMTP server requires mail senders to be authenticated before they can send Email. If your SMTP server requires you to do so, please select 'Enable', or select 'Disable' to disable it. If you don't know, please refer to the SMTP server you're using in your Email software (like Outlook, Outlook Express etc.), or ask your network administrator or ISP.</p> <p>Example of Gmail setup: Enable</p> <p>Example of hotmail setup: Enable</p>
SMTP Authentication	<p>Some SMTP server requires mail senders to be authenticated before they can send Email. If your SMTP server requires you to do so, please select 'Enable', or select</p>

	<p>'Disable' to disable it. If you don't know, please refer to the SMTP server you're using in your Email software (like Outlook, Outlook Express etc.), or ask your network administrator or ISP.</p> <p>Example of Gmail setup: Enable Example of hotmail setup: Enable</p>
User Name	<p>Please input the user name of SMTP server here, if your SMTP server requires the use of authentication.</p> <p>Example of Gmail setup: xxxxx@gmail.com (your login name) Example of hotmail setup: xxxxx@hotmail.com (your login name)</p>
Password	<p>Please input the password of SMTP server here, if your SMTP server requires the use of authentication.</p> <p>Example of Gmail setup: xxxxx@gmail.com's password Example of hotmail setup: xxxxx@hotmail.com's password</p>
Click " Apply " to save settings and make the new settings take effect.	

After complete the setting, you can click 'Send a test email' to send a testing Email to the address you set here, so you can make sure the setting you specified here is correct and working.

For more Email Example setup please check with your Email service providers.

3.4.2 FTP Configuration

FTP Configuration

● FTP Server :

● FTP Port :

● User Name :

● Password :

● Remote Folder :

● Passive Mode : ☒ Enable ☐ Disable

Item	Description
FTP Server	Input the IP address or host name of the FTP server you wish to use here.
FTP Port	Input the port number of the FTP server you wish to use here.
User Name	Input the user name of the FTP server you wish to use here.
Password	Input the password of the FTP server you wish to use here.
Remote Folder	<p>Input the remote folder name on the FTP server here. If nothing is specified here, all uploaded image files will be placed in FTP server's root directory.</p> <p><u>Note: Please ask FTP server's administrator to know which folder you should use. Certain user name may have restrictions and therefore can not place the file in the directory not owned by the user.</u></p>
Passive Mode	<p>Select "Enable" to use passive mode to send file, or select "Disable" to not to use passive mode to send file. Some FTP servers require passive mode, if you don't know, please ask FTP server's administrator; most of FTP servers will work fine with both modes, but if you found that non-passive mode is not working, you can try to use passive mode.</p>
Click "Apply" to save settings and make the new settings take effect.	

After setup that, you can click **"Upload a test file"** to send a file to the FTP server you set here, so you can make sure the setting you specified here is correct and working.

3.5 Motion Detection Settings



There are two sections of the Motion Detection: Basic Setting and Region Setting.

3.5.1 Motion Detection Basic Setting

Motion detection function makes this IP camera become your non-stop guard. You don't have to waste all the time monitoring the images from the camera, and camera will detect all motions for you. Once motion is detected, a captured snapshot file will be sent to you by Email or via FTP.

Motion Detection

☒ Motion Detection Enable : ☒ Enable ☐ Disable

☒ Next Event Detected Interval : 5 seconds

☒ Send Snapshot File to E-Mail : ☐ Yes ☒ No

☒ E-Mail Subject : Motion Detection Notification

☒ Send Snapshot File to FTP : ☐ Yes ☒ No

Apply


Item	Description
Motion Detection Enable	Select "Enable" to start motion detection, and select "Disable" to disabled it.
Next Event Detected Interval	Specify the time interval between two motion detections in seconds. If a motion is detected after last detection time, and before next detection time, nothing will be send by Email or via FTP. Please specify a time interval that suites your need. If the time interval is too long, you may not be able to know what is happened between time intervals; if the time interval is too short, you may receive too much unnecessary images, and consumes too much disk storage spaces on Email and / or FTP server.
Send snapshot file to Email	Select "Yes" to send a picture to the Email address you specified in "E-Mail & FTP" menu when a motion is detection, and select "No" to disable this function.

E-Mail Subject	Set the subject of Email being sent here. This will help you to distinguish the Email sent by this IP camera from others.
Send snapshot file to FTP	Select “ Yes ” to send a picture to the FTP server you specified in “ E-Mail & FTP ” menu when a motion is detection, and select “ No ” to disable this function.
Click “ Apply ” to save settings and make the new settings take effect.	

3.5.2 Motion Detection Region Setting

If you only want to be notified when motion is detected in certain area of captured image, you can use this function and motions outside of motion detection region will be ignored, so you won't receive too many 'useless' notifications.

This IP camera supports up to 3 motion detection regions. To setup detection region, please use your mouse to drag and resize motion detection regions marked as “**Region1**”, “**Region2**”, and “**Region3**” (appear as yellow, green, and red squares on image):

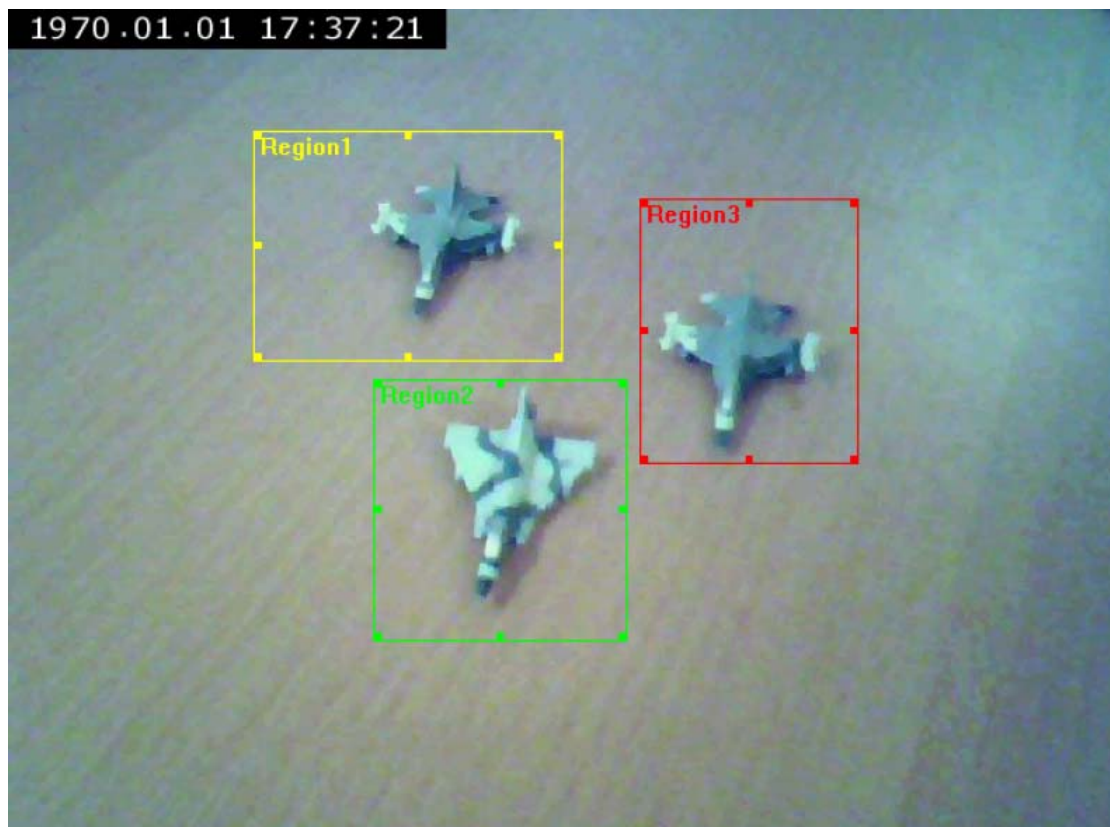

Motion detection region settings can be found at the bottom of this page:

The interface shows three motion detection regions. Each region has a checkbox (all are checked) and a slider. Below each slider, the word 'Sensitivity' is followed by the value '90'. To the right of the sliders are two buttons: 'Refresh' and 'Save'.

Item	Description
Region1 / Region2 / Region3	Check the box to enable / disable a certain motion detection area.
Sensitivity	Control the detection sensitivity of motion detection of respective motion detection region. When sensitivity is higher, small changes in image will cause IP camera to send a Email / FTP notification; if you received too much unwanted notification, try to set sensitivity to a lower value.
Refresh	Click this button to take and display a new picture so you can make real-time adjustments to motion detection region.
Save	Save current motion detection settings.

3.6 Schedule Settings



Schedule allows you to send images to either FTP site or through Email.

The 'Schedule' settings page has a title 'Schedule' and an 'Apply' button. It contains two main sections: 'FTP Schedule' and 'E-Mail Schedule'.
 - **FTP Schedule:** Includes a checkbox 'Enable FTP Schedule' (checked), radio buttons for 'Enable' and 'Disable' (selected), and a 'Time Interval' section with three options: 'Upload one image to FTP server every 1 minute(s) /Frame' (selected), 'Upload one image to FTP server every 2 Frames/Second', and 'Upload files with filename composed of date / time'. There is also an 'Overwrite file with the same filename' option with a text input 'snapshot.jpg'.
 - **E-Mail Schedule:** Includes a checkbox 'Enable E-Mail Schedule' (checked), radio buttons for 'Enable' and 'Disable' (selected), and a 'Time Interval' section with a text input '1' and a dropdown 'minute(s)'.

Item	Description
Enable FTP Schedule	You can select whether to “ Enable ” or “ Disable ” sending files to FTP server
Time Interval	Once you enable the FTP schedule, you can select how often to upload the image file to the server by per frame time or per second frame.
File Control	You can select to upload by different files with filename composed by date/time or upload the file with same filename to preserve storage space.
Enable E-Mail Schedule	You can select whether to “ Enable ” or “ Disable ” sending files to your email account
Time Interval	Once you enable the E-mail schedule, you can select how often to send the image file by second, minute, hour, or day.
Click “ Apply ” to save settings and make the new settings take effect.	

3.7 System Settings

The system menu allows you to set some system-specific parameters, like password and time setting. You can also upgrade the firmware of this IP camera, to make new functions available on this IP camera. You may also clear all settings or reboot the IP camera here.

You can access this menu by clicking ‘System’ on the top of web management interface.



Once entered, you can rename your camera, reset your password, change the Date and time settings, and upgrade your firmware. You can also select to turn off the LED light when power on.

Camera Information	
● Camera Name :	IC-AA4771
● Password :	••••
● Confirm Password :	••••
<input type="button" value="Apply"/>	
Date / Time Setting	
<input checked="" type="radio"/> Set Date/Time manually	<input type="text"/> / <input type="text"/> / <input type="text"/> : <input type="text"/> : <input type="text"/>
<input type="radio"/> NTP Server	<input type="button" value="Synchronize to PC time"/>
● Time Zone :	(GMT+08:00) Taipei
● NTP Server :	pool.ntp.org
● Enable Daylight Saving Time :	<input type="radio"/> Yes <input checked="" type="radio"/> No
<input type="button" value="Apply"/>	
Utilities	
● Upgrade Firmware :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/>
● Reset To Factory Defaults :	<input type="button" value="Reset"/>
● Reboot Device :	<input type="button" value="Reboot"/>
● LED Setting :	<input type="button" value="Turn off LED light"/>

3.7.1 Camera Information

Camera information allows you to set the name and administrator's password of this camera.

Camera Information	
● Camera Name :	IC-4469F9
● Password :	••••
● Confirm Password :	••••
<input type="button" value="Apply"/>	

Item	Description
Camera Name	<p>Please specify the name of this IP Camera here. This can be used to identify your camera on the network when you have more than one IP camera in the same network.</p> <p>Default name begins with "IC-" with the last 6 characters of the MAC address of this IP camera. You can modify the name to the one you can remember and meaningful to you, but never give all IP cameras in the same network with same name.</p>
Password	<p>Please specify the "admin" 's password here. (The one you need when you log onto web management interface and use "admin" as user name.</p>

Confirm Password	Please input the same password again, to make sure there's no typo.
Click "Apply" to save settings and make the new settings take effect.	

3.7.2 Date / Time Setting

This setting allows you to change the date and time of the real time clock in this IP camera. You can set the time manually, or use network time protocol (NTP) to set the time automatically.

Date / Time Setting

☒ Set Date/Time manually
 ☐ NTP Server

Time Zone : (GMT+08:00) Taipei

NTP Server : pool.ntp.org

Enable Daylight Saving Time : ☐ Yes ☒ No

Apply Synchronize to PC time

[] / [] / [] [] : [] : []

Item	Description
Set Date/Time manually	<p>Please input the date and time you wish to set here. Date / time format is YYYY / MM / DD HH:MM:SS. Time is in 24-hour format.</p> <p>You can click "Synchronize to PC time" to use the time of the computer you're using.</p> <p><i>Example: 24th August 2007 = 2007/ 08 / 24, and PM 9:24:30 = 21:24:30</i></p>
Time Zone	Please select the time zone of the country / city of resident from dropdown menu here.
NTP Server	Please input the IP address or host name of NTP server here. You can use default value "pool.ntp.org" , or ask your ISP for the IP address or host name, if they have one.
Enable Daylight Saving Time	Select "Yes" if your area of residence uses daylight saving; if not, select "No" .
Synchronize to PC time	Click this button and the IP camera will use the current time setting of your computer as IP camera's

	time setting.
Click "Apply" to save settings and make the new settings take effect.	

3.7.3 Utilities

This menu allows you to upgrade firmware, clear all settings, reboot the camera, and switch LED lights on/off.

Utilities

● Upgrade Firmware :	<input type="text"/>	<input type="button" value="Browse..."/>	<input type="button" value="Upgrade"/>
● Reset To Factory Defaults :	<input type="button" value="Reset"/>		
● Reboot Device :	<input type="button" value="Reboot"/>		
● LED Setting :	<input type="button" value="Turn off LED light"/>		


Item	Description
Upgrade Firmware	<p>If you downloaded latest firmware file from our website, you can click "Browse" button to pick the firmware file you wish to use. Then click "Upgrade" button to start firmware upgrade procedure.</p> <p><i>It's recommended to use wired Ethernet connection when you use this function, and DO NOT DISCONNECT OR CLOSE WEB BROWSER DURING UPGRADE!</i></p>
Reset	<p>Clear all settings in the camera. Please think again before you do this, and then click this button to reset all settings.</p> <p><u>NOTE: IP address will be reset to default value "192.168.2.3" also. You'll need to change the IP address setting of your computer if the camera is connects directly to it, or you'll not be able to connect to this IP camera again.</u></p>
Reboot Device	<p>If you found the IP camera is responding slowly or behaves strange, you can click this button to try to reboot the IP camera, this may help.</p>
LED Setting	<p>Switch the LED light of this IP camera off, so "LAN" and "WLAN" LED on the IP camera will stop working,</p>

	<p>in case you don't want other people know the camera is transferring data.</p> <p>You can click this button again to switch LED lights on again.</p>
--	--------------------------------------------------------------------------------------------------------------------------------------------------------

3.8 Status

This menu provides all information about this IP camera, like firmware version, system uptime, date / time, and network information.

You can access this menu by clicking 'Status' on the top of web management interface.



Status

- Firmware Version : v1.4 (Jan 28 2010 13:24:59)
- Device Uptime : 10 hours 2 min 47 sec
- System Time : 1970/01/01 18:02:47

LAN

- IP Address : 192.168.2.3
- Subnet Mask : 255.255.255.0
- Gateway : 192.168.2.254
- DNS Server : 168.95.1.1
- MAC Address : 00:0E:2E:44:69:F9
- AV Control Port : 4321
- AV Data Port : 4322
- Web Port : 80

3.9 Account Settings

If you wish to allow other people to view the image captured by this camera, but don't want to allow them to modify system settings, you can give them user-level user name and password, so they can only view the image and can



not change any system setting. When they want to click menus other than “**Camera**”, they will see the following message informing that they don’t have permission to do that:



This IP camera supports setting up to maximum up to total of 16 operators and guests.

Note: only one user (including administrator) will be able to view the image of IP camera at the same time.

Item	Description
Login	Specify the user name here. Please use alphanumerical characters (0 to 9, A to Z, and a to z). Not using symbols and space.
Password	Specify the password for this user here.
Confirm password	Specify the password for this user here again.
Authority	<p>You can select the authority of your users by selecting “Operator” or “Guest”.</p> <p>Login as Operator allows users to adjust the Video Format, take snapshot, and record video.</p>

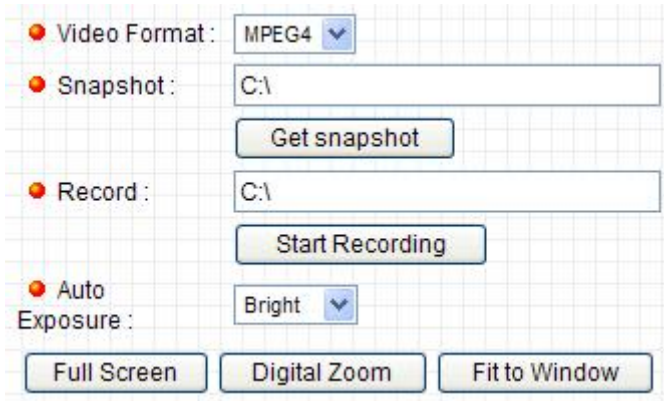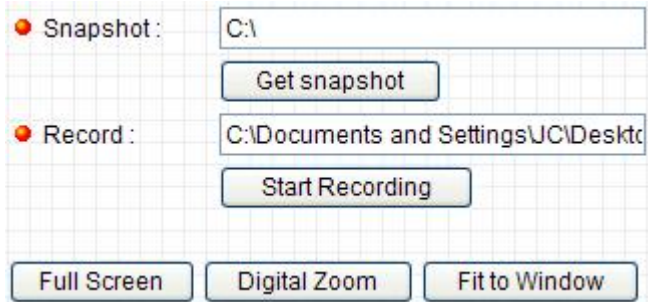	 <p>Login as Guest: You can select to save the snapshot and record video.</p> 
Add/Modify/Remove	<p>Add: After enter the above info, you can click “Add” to create new account.</p> <p>Modify: You can click your current account to change the Login account name, password, and authority, and then click “Modify” to save.</p> <p>Remove: You can click on your current account, then “Remove” to delete the account.</p>

3.10 Log

All activities of this IP camera will be logged, and you can enter “**Log**” menu to view these logs. You can access this menu by clicking ‘Log’ on the top of web management interface.



System Log

```
1970/01/01 00:00:19 System startup [ vl.4 (Jan 28 2010 13:24:59) ]
1970/01/01 08:00:19 Starting mpeg4 pipe server for Spook
1970/01/01 08:00:19 embedded av stream controller started 63
1970/01/01 08:00:19 Opened /dev/pl_grab successfully
1970/01/01 08:00:20 Opened /dev/pl_enc successfully (MPEG4)
1970/01/01 08:00:20 Opened /dev/pl_enc successfully (MJPEG)
1970/01/01 08:00:20 Opened /dev/pl_enc successfully (MD)
1970/01/01 08:00:23 Accepted a new connection from spook... (video)
1970/01/01 08:00:24 Accepted a new connection from spook... (video)
1970/01/01 08:00:26 Network initial status: LAN
1970/01/01 09:45:40 192.168.2.5:11019 joined AV stream
1970/01/01 10:13:12 192.168.2.5:15115 joined AV stream
1970/01/01 10:13:44 192.168.2.5:19211 joined AV stream
1970/01/01 10:16:32 192.168.2.5:24075 joined AV stream
1970/01/01 10:41:00 192.168.2.5:41483 joined AV stream
```


Click **“Refresh”** to get latest update.

Chapter 4 Using Surveillance Software


4.1 Installing Surveillance Software

The IP camera surveillance software provides various functions like video recording, after this software is installed, you can use your IP camera to safeguard your property. Please follow the following instructions to install the surveillance software.


1. Double click the setup file located in “xxx” folder in supplied CD-ROM, when the following window appears, click “**Next**”.

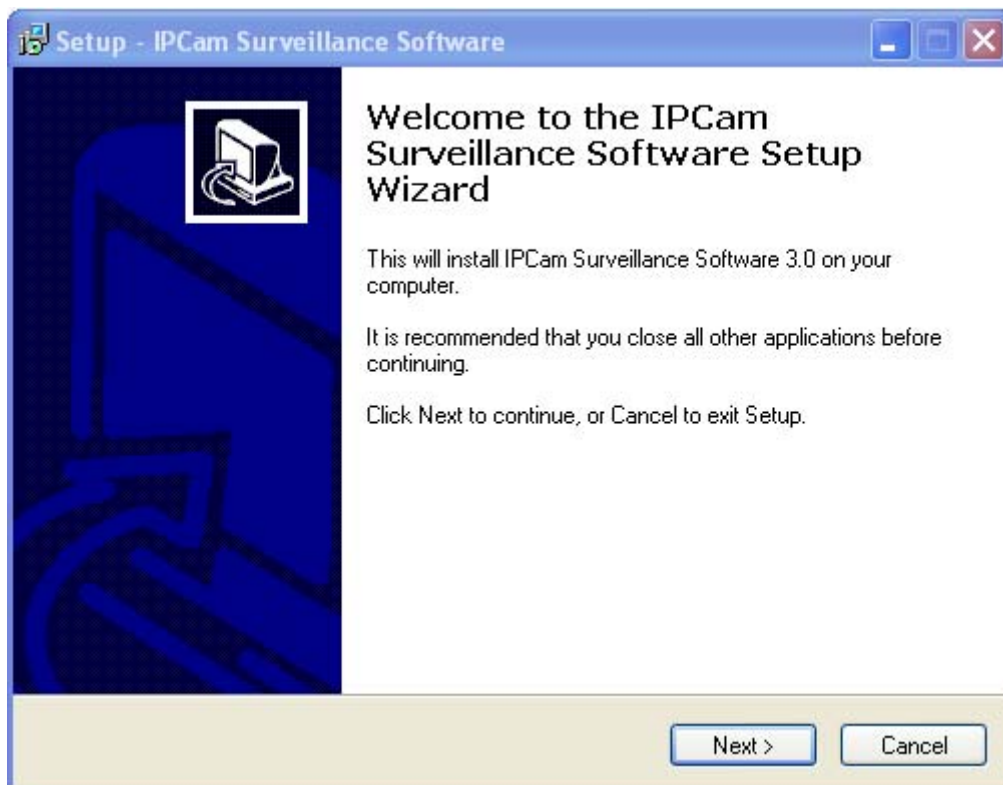


2. You can specify the destination folder of software installation; you can just use the default folder, and click 'Next' to continue.

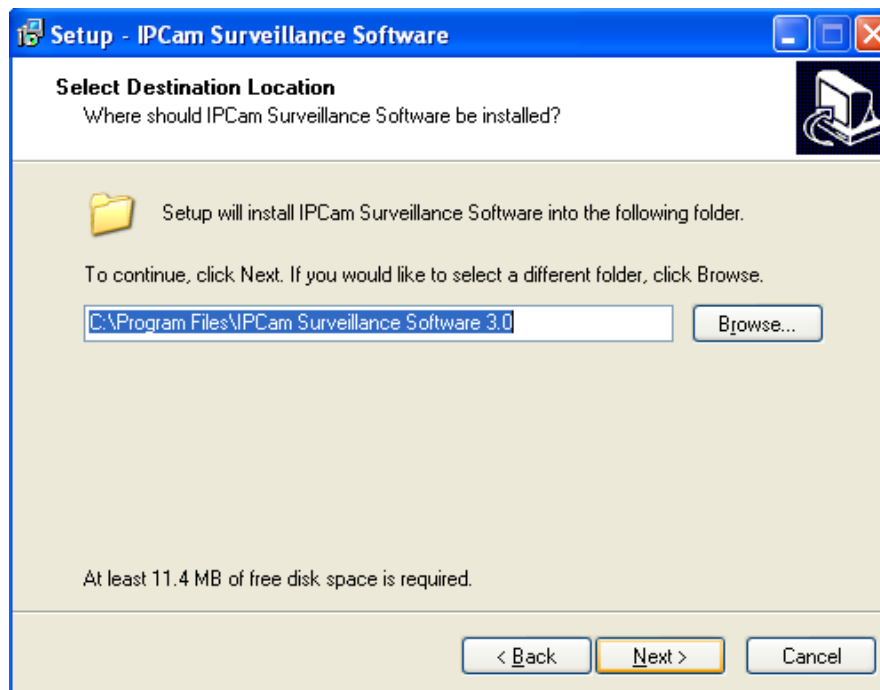


3. If you need installation program to create a desktop icon or a quick launch icon for you, click all items you need here, then click "**Next**" to continue.

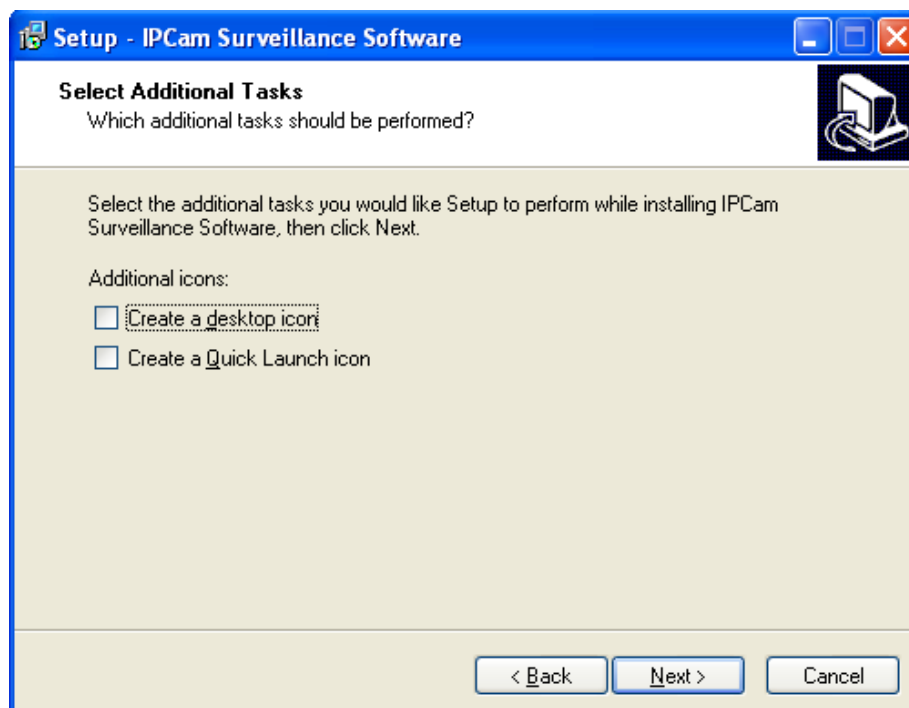

4. Here lists all options you chose in previous steps, if everything's correct, click "**Install**" to start installing procedure, or click "**Back**" to go back to previous step to modify installing settings.

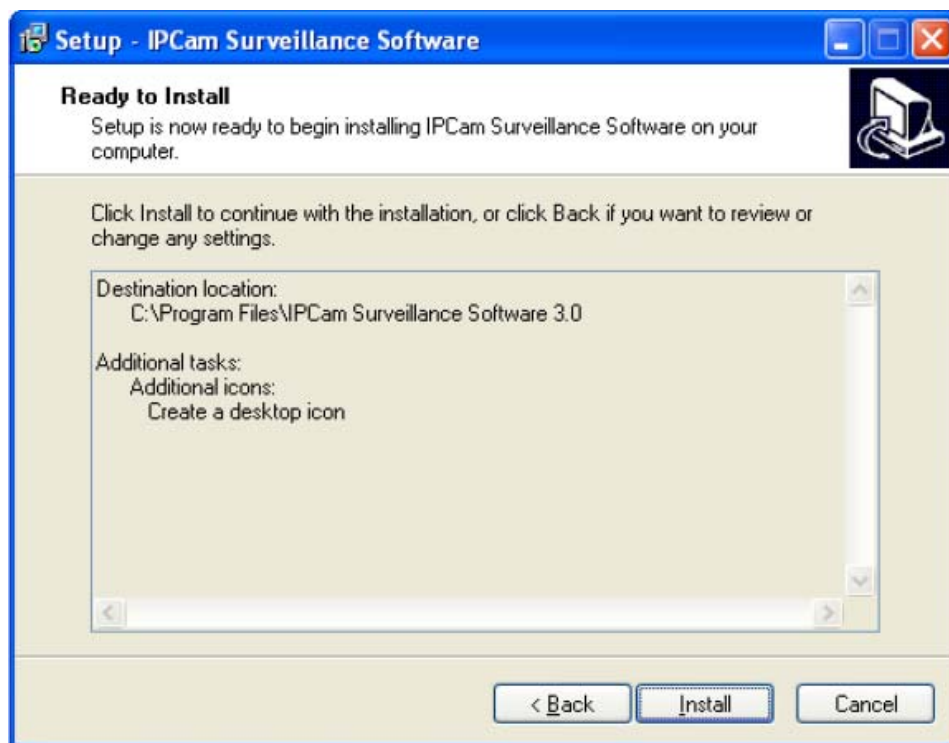

5. The installing procedure will take some time, please be patient.

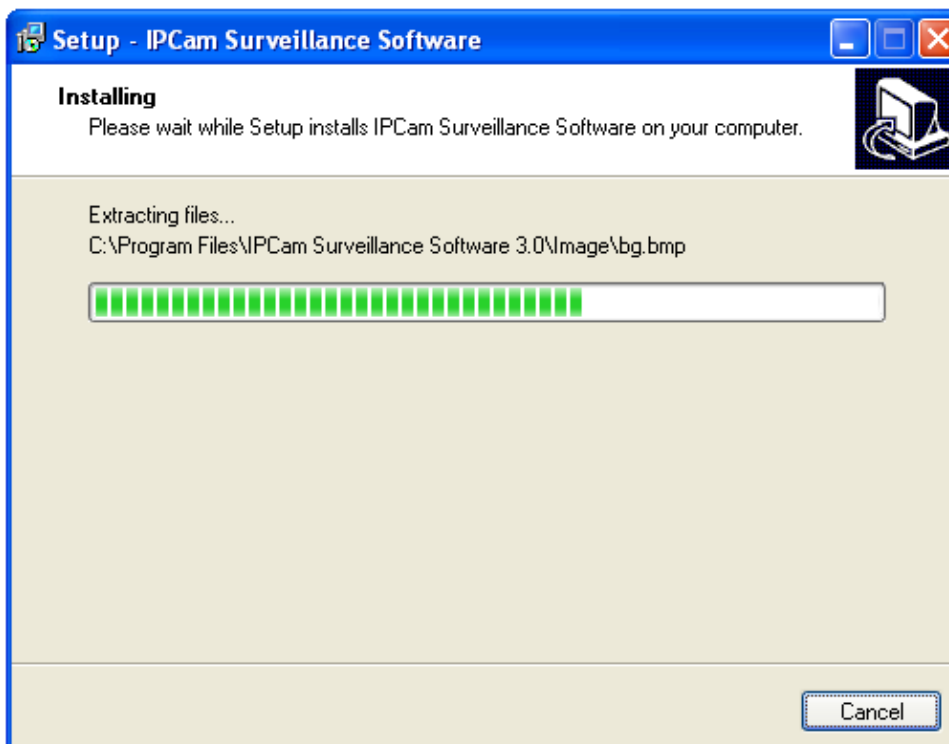

6. When you see this window, it means the software installing procedure is complete. Please click “**Finish**” to finish the procedure (IP camera surveillance software will start after you click “**Finish**” button, if you want to start it later, uncheck “**Launch IPCam Surveillance Software**” box).




4.2 Using Surveillance Software

You can click 'IPCam Surveillance Software' icon from desktop, quick launch bar, or start menu to start the IP camera surveillance software.




Before you start:



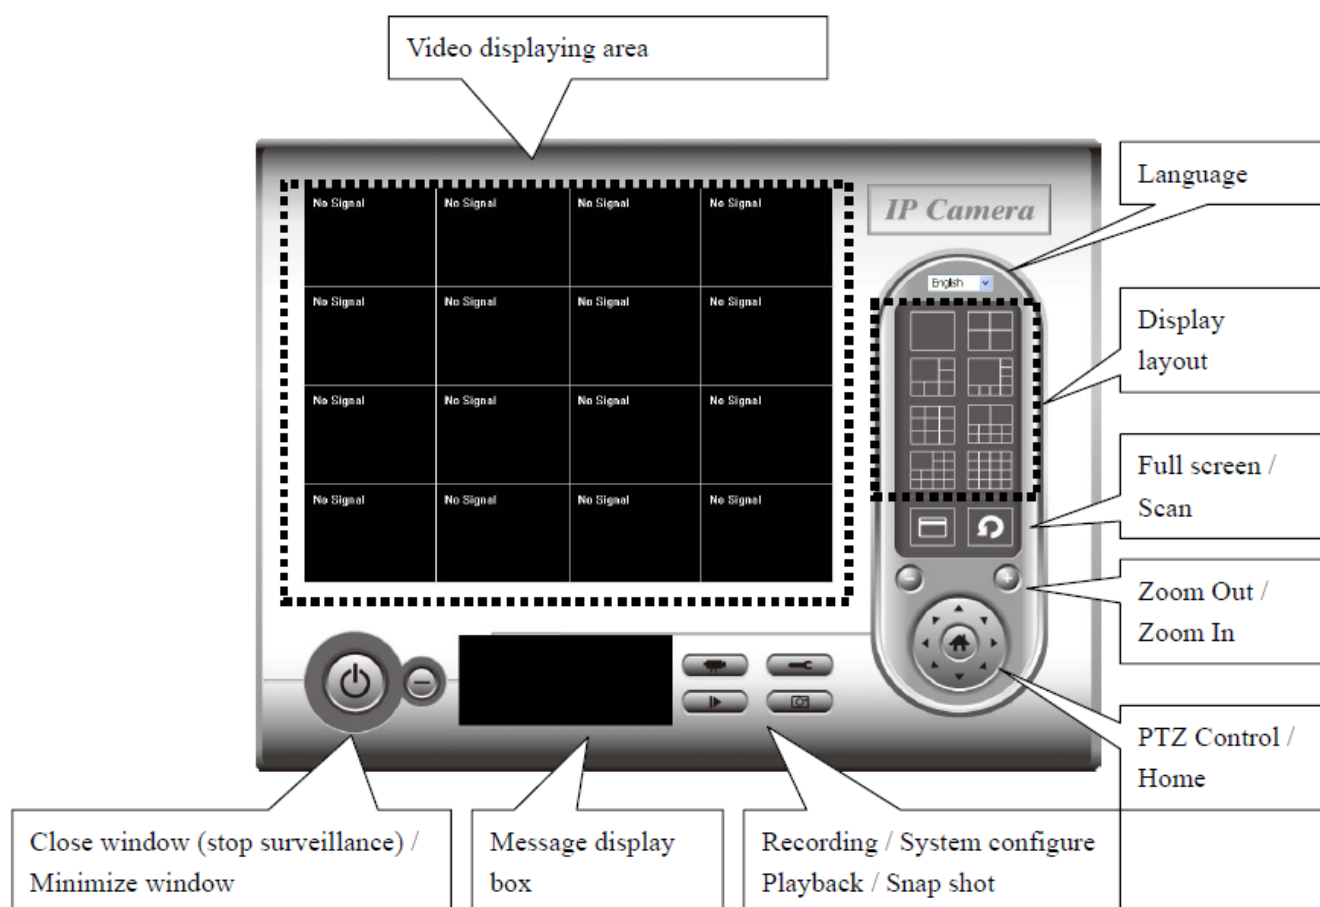



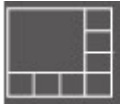



IP camera surveillance software will only work when your monitor's resolution is '1024 x 768'. Please change the resolution before you use IP camera surveillance software, or it won't start.



Here are descriptions for all components of IP camera surveillance software:



You can put the mouse cursor on a certain component and see its button name, and here're detailed descriptions of all buttons:

Item	Description
Video displaying area	The image of all connected cameras will be displayed here.
Language	Select a language from this drop-down menu to change display language.
Display layout 	Change camera image display layout (Click a layout icon to change camera display layout). There are 8 kinds of available display layouts.
Full screen 	Click this button to switch to full screen mode (only display all camera's image), press ' ESC ' key to quit full screen mode.
Scan 	Click this button and the IP camera surveillance software will switch displaying the image of all connected camera automatically. Click this button

	once to activate scan function (scan icon will become blue ) , click again to stop scanning (scan icon will become white ) .
Zoom out 	Zoom-out (To see more objects). This function is only available for supported cameras.
Zoom In 	Zoom-in (Too see more details). This function is only available for supported cameras.
PTZ control 	There are 8 directions in PTZ control ring. If the camera you connect support PTZ, you can use PTZ control ring to change the direction that camera points to. This function is only available for supported cameras.
Home 	Click this button to return the camera to 'Home' (default) position. This function is only available for supported cameras.
Recording 	Start video recording.
Configure 	Software / camera configuration.
Playback 	Playback a recorded video file.
Snapshot 	Take a snapshot of current camera.
Message display	Displays all system messages like camera is disconnected etc.
Close window (stop surveillance)	Terminates IP camera surveillance software.

	
Minimize window 	Minimizes IP camera surveillance software window.
Video displaying area	Displays the image of all cameras by the display layout you selected.

4.3 Configure Surveillance Software

4.3.1 Configure cameras

Before you use this IP camera surveillance software, you must configure the camera(s) you wish to connect. Please click “**System configure**” button



and a popup menu will appear:




Please select “Configure Cameras” to configure cameras:

Note: If you're prompted by a windows security alert which asks you if you want to block “IPCamViewer” program, please click “Unblock” button, of IP camera surveillance software will not be able to function correctly.



4.3.1.1 “Camera” tab

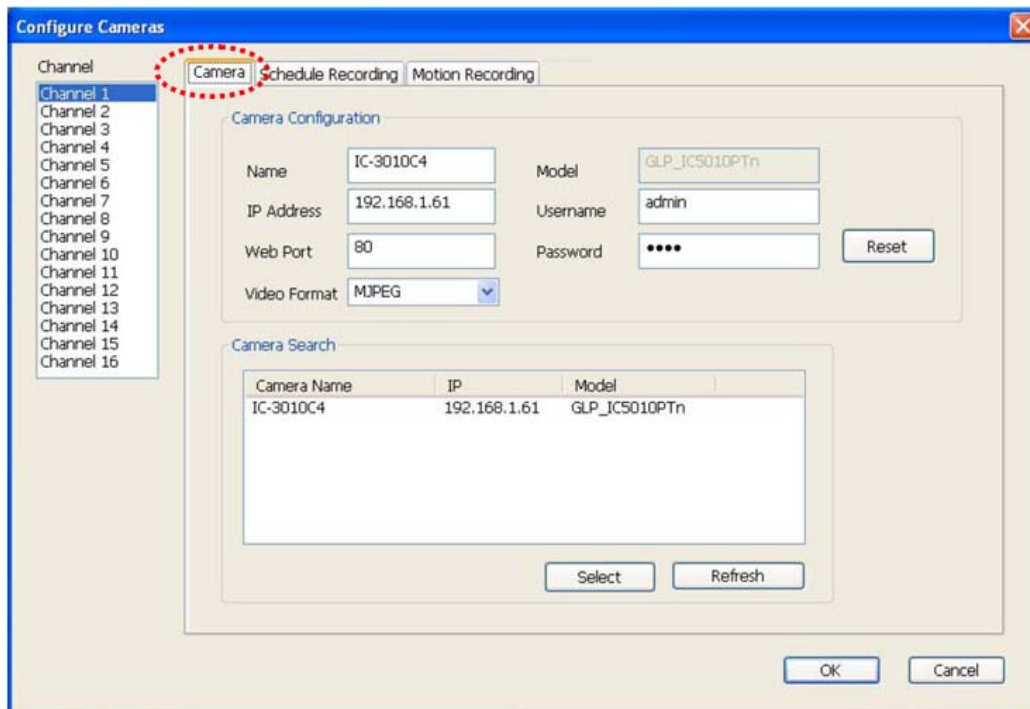

In this tab you can configure all cameras you wish to connect. Up to 16 cameras can be connected simultaneously:


Item	Description
Channel	Select the channel number you wish to set.
Camera Search	All cameras found on your local network will be displayed in “ Camera Search ” box.
Select	Select a camera listed in “ Camera Search ” box, and click “ Select ” button to fill all parameters of selected camera in every camera configuration fields.
Refresh	Rescan all cameras on your local network. If you didn’t see the camera you expected in “ Camera Search ” box, or new cameras has been joined to your local network after last scan.
Name	Input the name of camera here. Default value is the first 6 bytes of camera’s MAC address, you can change the name of camera so you can remember the camera’s location of purpose easily.
Model	Displays the model of selected camera, this field can not be changed.

IP	Input the IP address of camera.
Username	Input the user name of camera.
Web Port	Input the web port of the camera. By default it's "80".
Password	Input the password of camera. Default value is "1234". You should change the password if you changed the password of selected camera.
Video Format	Select the video encoding format of this camera (MJPEG or MPEG4).
Reset	Clear all fields in "Camera Configuration" section.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.

After you've set all channels you wish to set, click "OK" to save settings, and if everything's correct, you'll see the camera's image in IP camera surveillance software's main menu:





4.3.1.2 "Schedule Recording" tab

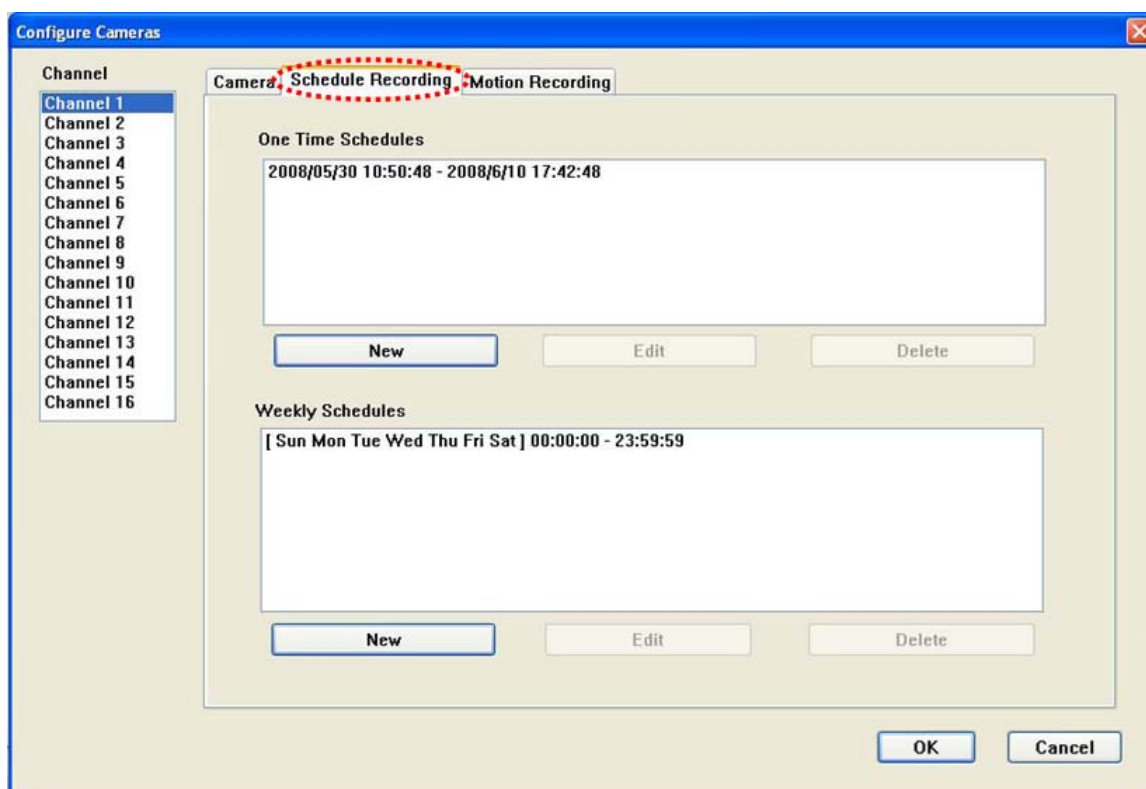

In “**Schedule Recording**” tab, provides you options with setup scheduled video recording, you can record the video captured by all cameras at a pre-defined schedule.


Item	Description
Channel	Select the channel number you wish to set.
One Time Schedules	You can specify the one-time schedule for selected camera; this schedule will be executed once only.
New (One Time Schedules)	Click this button and a new window will appear:

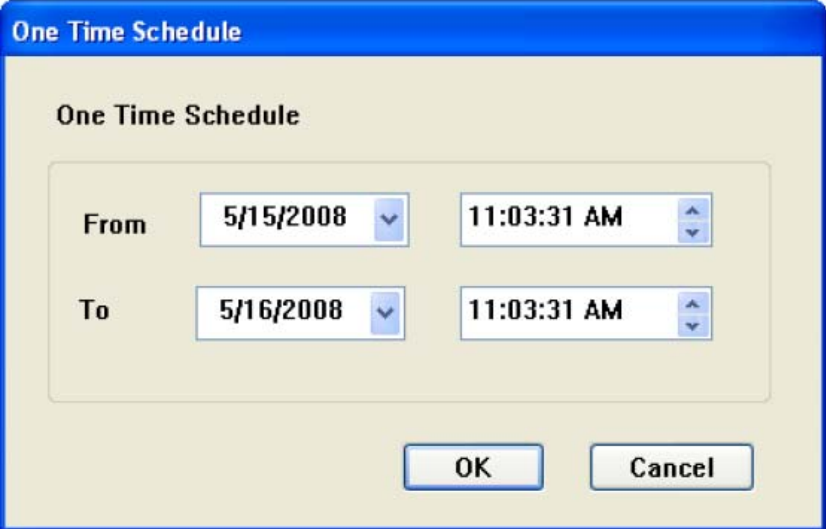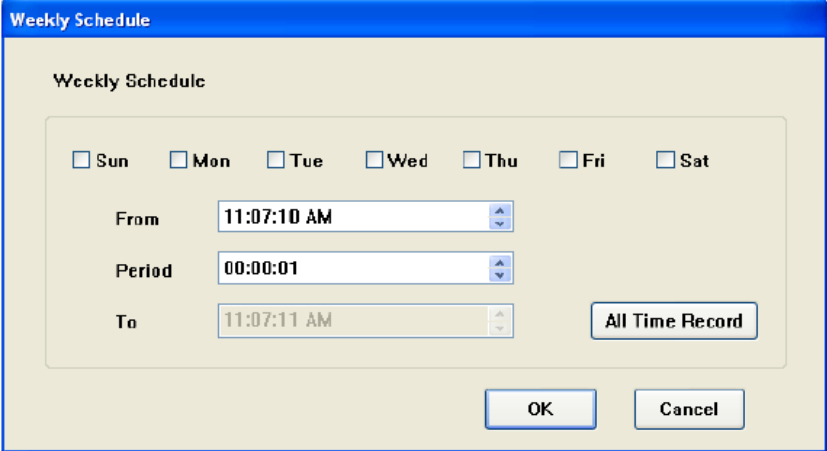	 <p>The 'One Time Schedule' dialog box has a blue title bar. Inside, it has a label 'One Time Schedule'. Below this, there are two rows of controls. The first row is labeled 'From' and contains a date dropdown set to '5/15/2008' and a time dropdown set to '11:03:31 AM'. The second row is labeled 'To' and contains a date dropdown set to '5/16/2008' and a time dropdown set to '11:03:31 AM'. At the bottom right, there are 'OK' and 'Cancel' buttons.</p> <p>Please specify the time duration of this one-time schedule (the date and time of “From” and “To”), then click “OK” to save settings.</p> <p>Please note you must set a schedule that will be happened in the future, you can not set a schedule in the past.</p>
Edit	<p>You can modify a scheduled recording item. Select a schedule in “One Time Schedules” list, and click “Edit” button to edit the start and end time of this schedule.</p>
Delete	<p>Delete a selected schedule item.</p>
New (Weekly Schedules)	 <p>The 'Weekly Schedule' dialog box has a blue title bar. Inside, it has a label 'Weekly Schedule'. Below this, there are seven checkboxes for days of the week: Sun, Mon, Tue, Wed, Thu, Fri, and Sat. Below the checkboxes, there are three time controls: 'From' (set to '11:07:10 AM'), 'Period' (set to '00:00:01'), and 'To' (set to '11:07:11 AM'). To the right of these controls is an 'All Time Record' button. At the bottom right, there are 'OK' and 'Cancel' buttons.</p> <p>Click this button and a new window will appear:</p> <p>You can define recording schedule that will be executed at the specified time of certain weekday(s) in a week.</p> <p>Please check all weekdays that applies, and set the start time</p>

	<p>in “From” field. You can set the duration of video recording in “Period” field (format is HH:MM:SS), and the end time will be calculated automatically and displayed in “To” field. You can also click “All Time Record” button to define a recording schedule that will be executed every weekday, from 12:00:00AM to 11:59:59PM.</p> <p>Click “OK” to save changes.</p>
Edit	You can modify a scheduled recording item. Select a schedule in “ One Time Schedules ” list, and click “ Edit ” button to edit the start and end time of this schedule.
Delete	Delete a selected schedule item.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.


4.3.1.3 “Motion Recording” tab


With this function activated, only motions captured by the camera will be recorded, so you don’t have to waste hard disk storage space on images you don’t need to pay attention to.

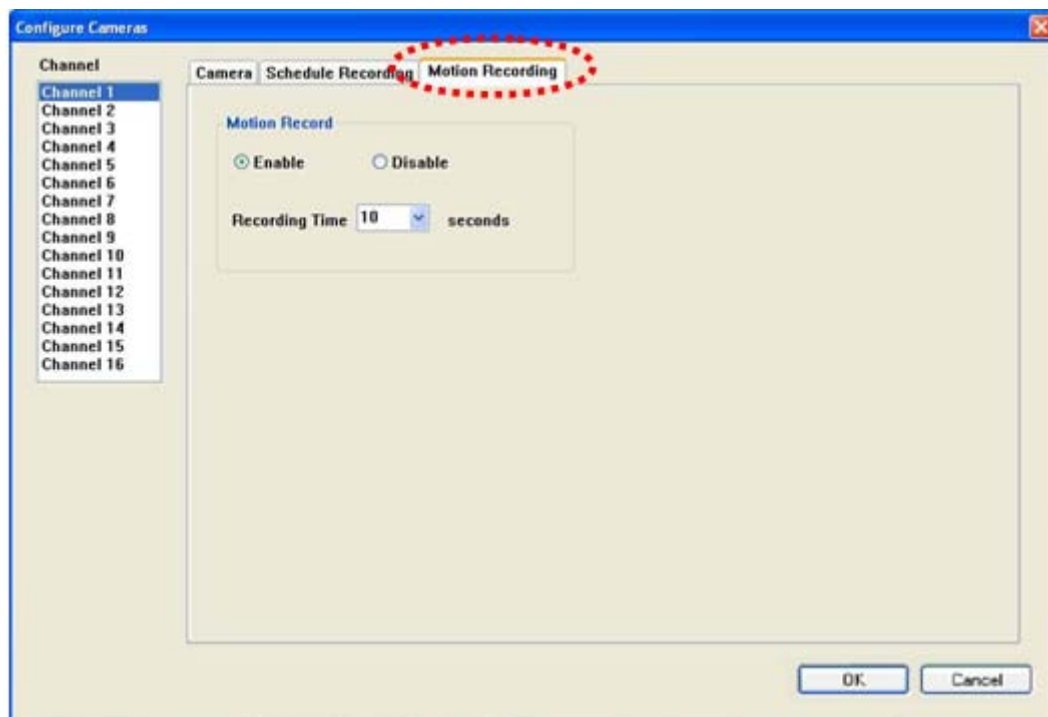

Item	Description
Channel	Select the channel number you wish to set.
Enable	Enable motion record function.
Disable	Disable motion record function.
Recording Time	Select the time duration that camera will record when a motion has been detected from dropdown menu in seconds.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.


4.3.2 General Options

“**System configure**” button  also has another option which you can set for system-wide configuration:

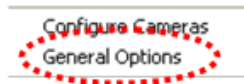

4.3.2.1 “General” Tab

General settings like file storage directory and recording spaces can be set here.

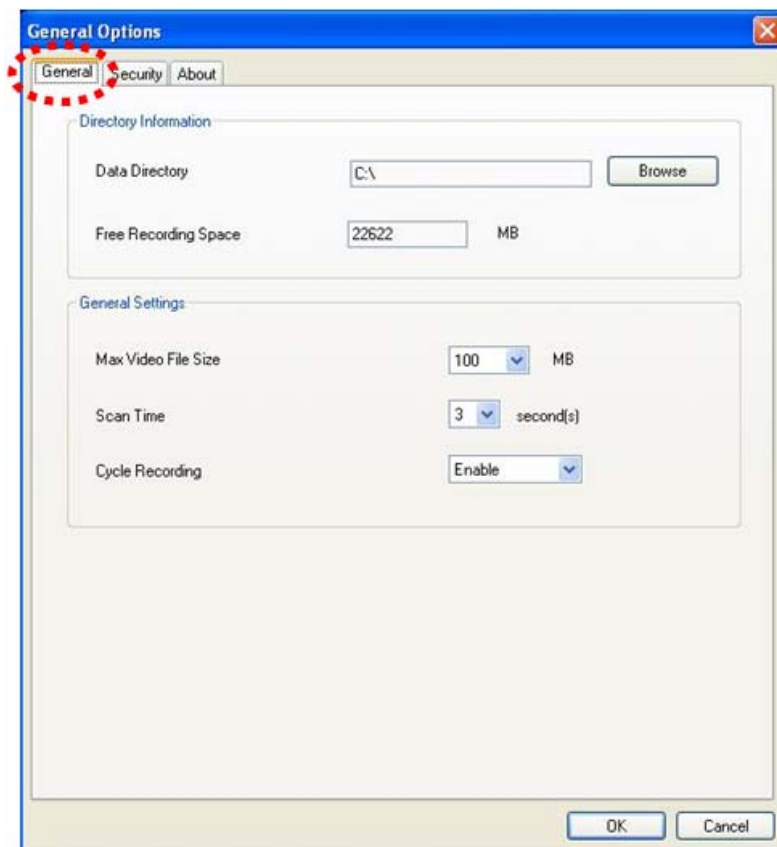


Item	Description
Data Directory	Set the directory (folder) you wish to store the recorded video and captured image. You can click “ Browse ” button to pick a directory in your hard disk.
Free Recording Space	Displays remaining storage space.
Max Video File Size	Defines the maximum file size of every video file. When the size of file exceeds this value, IP camera surveillance software will open another file to record the video.
Scan Time	Define the time period to pause between every camera switch when you activate “ Scan ” function.
Cycle Recording	You can decide the behavior when hard disk space is full: Disable: Do not overwrite recorded video files. Recording Stop when space is full. Enable: Overwrite recorded video files.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.

4.3.2.2 “Security” Tab

If you don’t want other people to access this IP camera surveillance software, you can set a password to protect it.

You’ll need to input the password every time you wish to use this IP camera surveillance software:

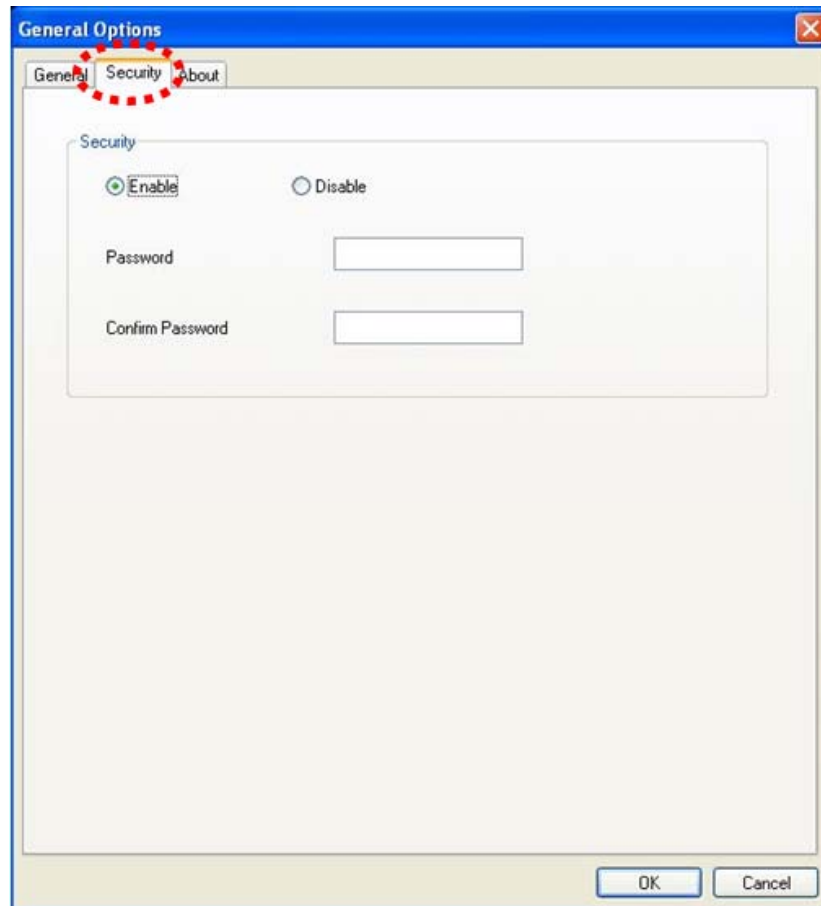

Item	Description
Enable	Requires password authentication when this software starts.
Disable	Password authentication is not required when this software starts.
Password	Input the password you wish to use here.
Confirm Password	Input the password you wish to use here again.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.


After complete setting the password, you will need to enter password every

time you use this software:




4.3.2.3 "About" Tab

This tab shows the version number of the IP camera surveillance software you are using.

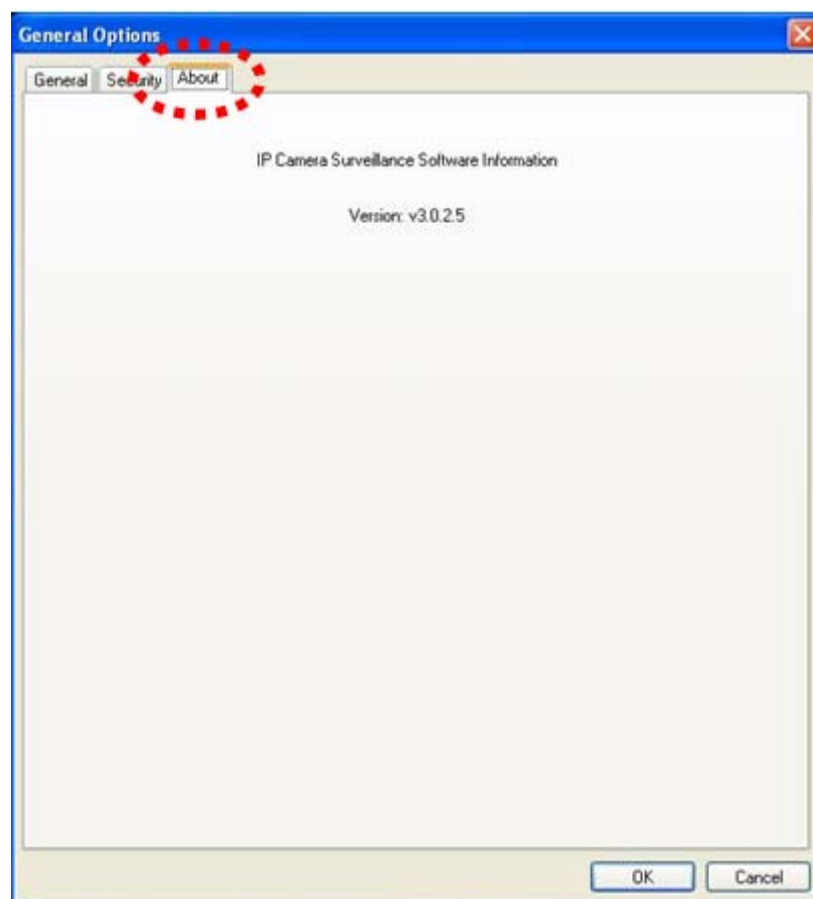
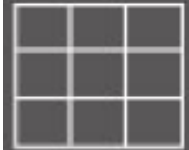
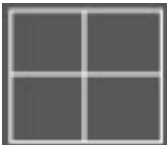

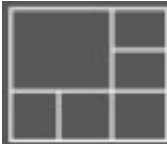
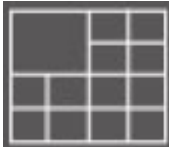

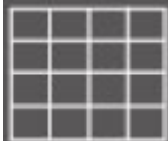


4.4 Change Display Layout

This IP camera surveillance software provides 8 kinds of display layout:

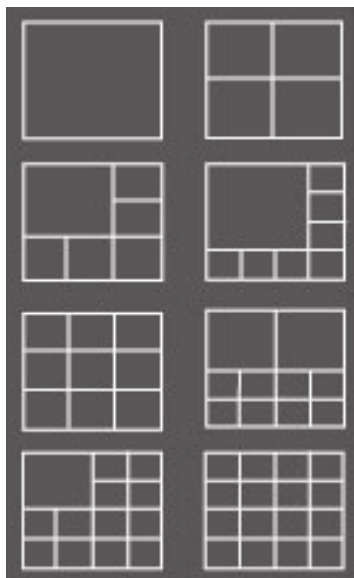


Every layout displays different number of camera and camera arrangement, you can click the icon that presents a specific kind of layout, and the video displaying area will change accordingly.

Layout style 1: 1 Camera only 	Layout style 5: 9 Cameras 
Layout style 2: 4 Cameras 	Layout style 6: 10 Cameras 
Layout style 3: 6 Cameras 	Layout style 7: 13 Cameras 
Layout style 4: 8 Cameras 	Layout style 8: 16 Cameras 

4.5 Full-Screen Mode

If you want to use all available spaces on your monitor to display surveillance image, you can click “**Full Screen**” button to switch display mode to full-screen mode.

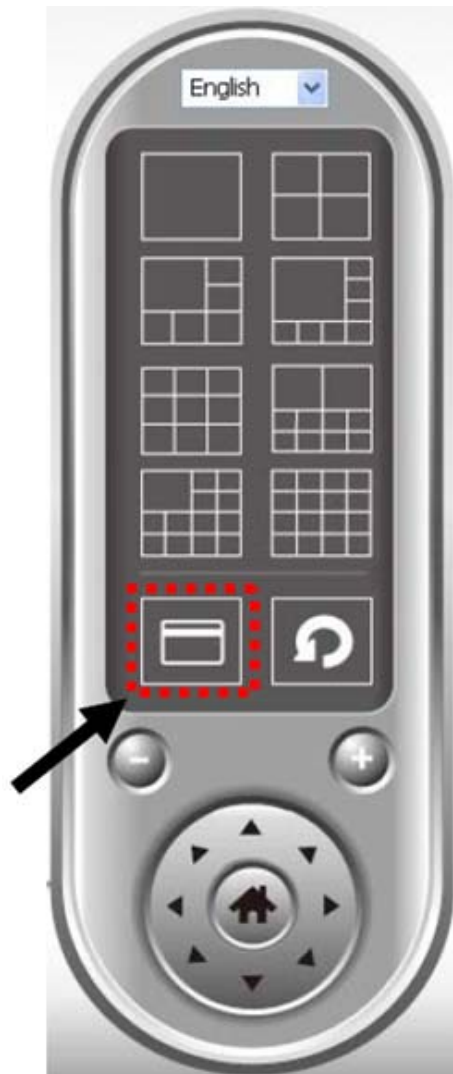


To exit full-screen mode, press “**ESC**” key.



4.6 Scan

If you have more than one camera configured, and you wish to switch the displaying image between cameras, you can click “**Scan**” button to switch between all configured cameras.

NOTE: If a camera is configured but disconnected, it will still be


displayed in a scan sequence (you'll see nothing and you'll see "Disconnected" text displayed at the upper-left corner of display image).

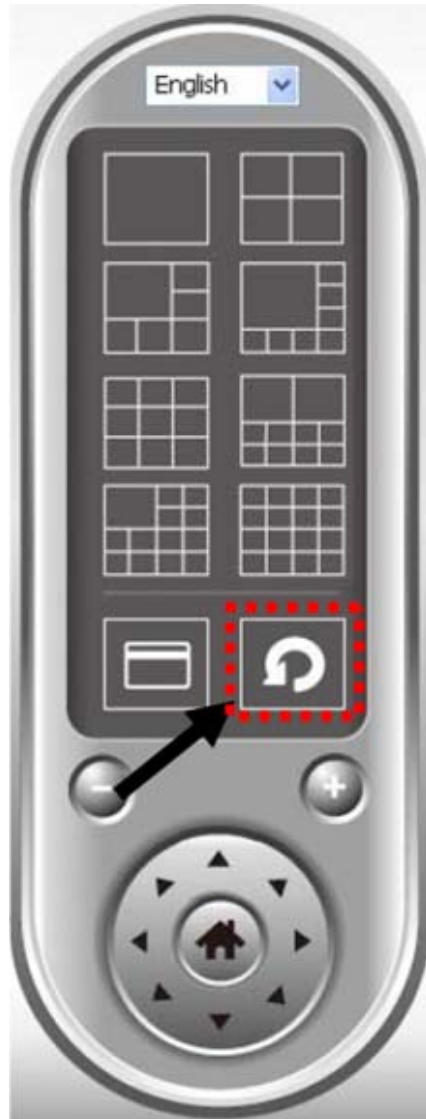



Click 'Scan' button once to activate scan function (scan icon will become blue ) , click again to stop scanning (scan icon will become white ) .

4.7 Zoom-in / Zoom-Out

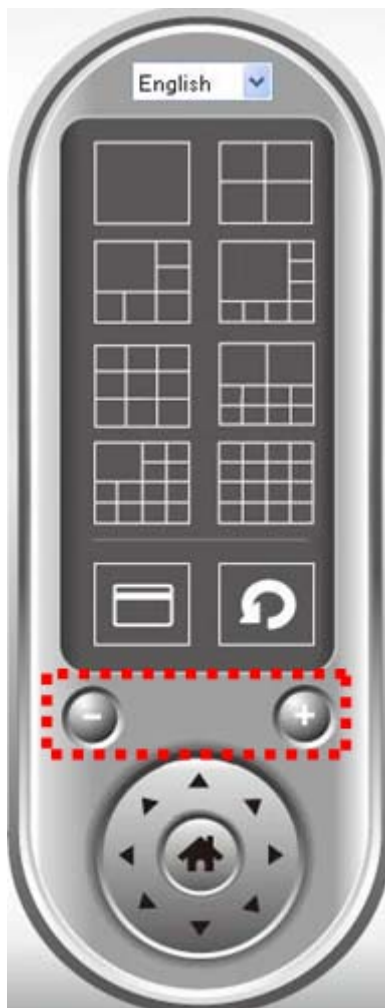For cameras that support zoom-in / zoom-out function, you can use this function to see more objects that fall in the scope of camera's view, or enlarge the image size of a certain object to see its detail.



Please select a camera in video displaying area by clicking on its image, then click  button to see more objects that fall in the scope of camera's view, or click  to enlarge the image size of a certain object to see its detail.

4.8 Snapshot

You can take a snapshot of selected camera and save it to 'Snapshot' sub-folder of pre-defined data directory.



Click snapshot button once to take a snapshot; you can take as much snapshot as you want before hard disk is full.

4.9 Recording

You can start video recording of selected camera manually by clicking “**Start Recording**” button:



When recording starts, you'll see a message displayed in message displaying box like “**1/1 10:00:00, Camera 1 Start Manual**”, which means camera 1 starts recording manually on 1/1 at 10:00:00.


To stop recording, click “**Start Recording**” button again, and you'll see a message displayed in **System Event Log** box like “**1/1 10:00:00, Camera 1 Stop Manual**”.

4.10 Video Playback

You can playback all recorded video by clicking this button.



A new window will appear:

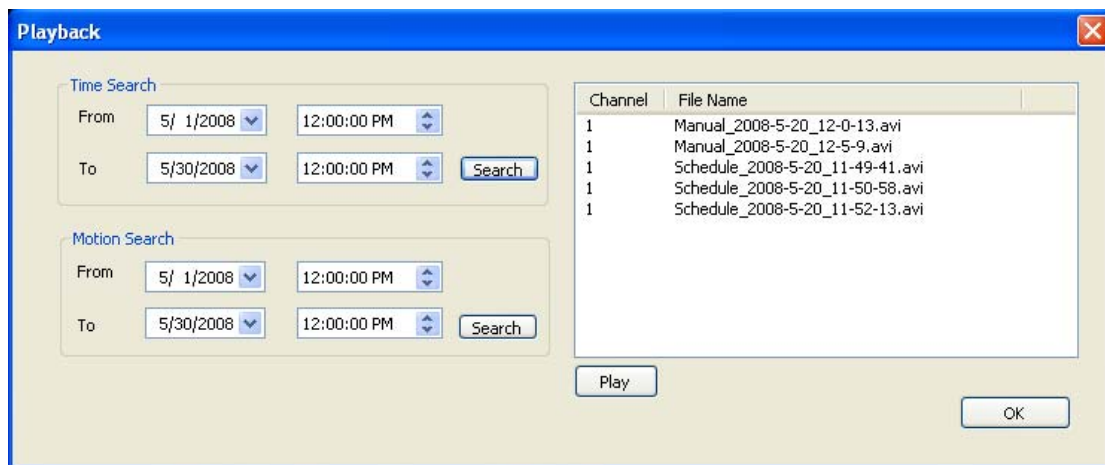

You have to search the video file before you can play it. There are two kinds of video search: **Time Search** (search all videos file that falls in a specific period of time) and **Motion Search** (search all videos recorded by motion detection function and falls in a specific period of time).

Please define the start and end date / time of the time period you wish to search, and then click "**Search**" button (for "**Time Search**" or "**Motion Search**"). All found videos will be displayed, select the video you wish to play and click "**Play**" button to playback.

Chapter 5 Appendix

5.1 Product Specification

Product	Dual Mode Internet Camera
Image Sensor	
Sensor	0.3Mega pixel CMOS Sensor
Resolution	640 x 480 Pixel
Fixed Lens	Fixed Focus, F=2.8
Viewing Angle	55 Degree
Minimum Illumination	1.3 Lux
Video/Image Setting	
Video Format	MJPEG/MPEG4
Image Frame Rate	30fps @VGA, QVGA, QQVGA
Frame Rate Setting	3, 5, 10, 15, 30fps
Zoom	4 x Digital Zoom
Resolution	MPEG4: 640 x 480, 320 x 240, 160 x 120 MJPEG: 640 x 480, 320 x 240, 160 x 120
Video Quality Setting	MPEG4: CBR 9 Levels and VBR 5 Levels MJPEG: 5 Levels
Motion Detected	Capable to support 3 specific detecting areas
Communication	
LAN	10/100Mbps Auto MDIX
Protocol	HTTP, FTP, TCP/IP, UDP, DHCP, NTP, DNS, DDNS, SMTP, UPnP
Hardware Specification	
SoC	Prolific PL-1029
Flash	4MB Flash
RAM	32MB SDRAM
Image Sensor	OV-7670 0.3Mega pixel CMOS Sensor
Lens	Fixed Focus, F/NO. 2.8
Power	5V DC, 1A Switching Power Adaptor

Consumption	2 Watt (maximum)
Dimension	92mm x 60mm x 23mm
Operating Temperature	Operation: 0°C ~45°C (32°F ~ 113°F) Storage : -15°C ~ 60°C (14°F ~ 140°F)
Humidity	10~90% (Non-Condensing)
Certification	FCC Class B, CE Mark

5.2 FAQ / Troubleshooting

If the IP camera is not working properly, before you contact the customer service for help, please check the troubleshooting list here, this may help you to solve the problem by yourself and saves your valuable time.


5.2.1 I can not connect to IP camera

- Please confirm the IP address setting of the computer you're using. If they're not in the same subnet, they will not be able to communicate with each other.
- Please make the IP address you used to connect to the IP camera is correct.
- If you forget the IP address of the IP camera, you will have to reset it to factory default value (which is 192.168.2.3) by pressing "**reset**" button at the back of the IP camera. You'll need a pen or pin to press the reset button. Press and hold reset button for 5 seconds, then try to connect to the IP camera with IP address "**192.168.2.3**" again.
- Please make sure IP camera is correctly powered (the "**Power**" LED should be on).
- If you're trying to connect to the IP camera from Internet, please make sure the port that IP camera uses (Video and HTTP port, see [section 3.2.1](#)) is not blocked by firewall or other software / hardware.


- f. Contact Rosewill's customer service for help, if above solutions does not work.

5.2.2 Image refreshes very slow

- a. Try a higher frame rate setting, if it's not set to 30.

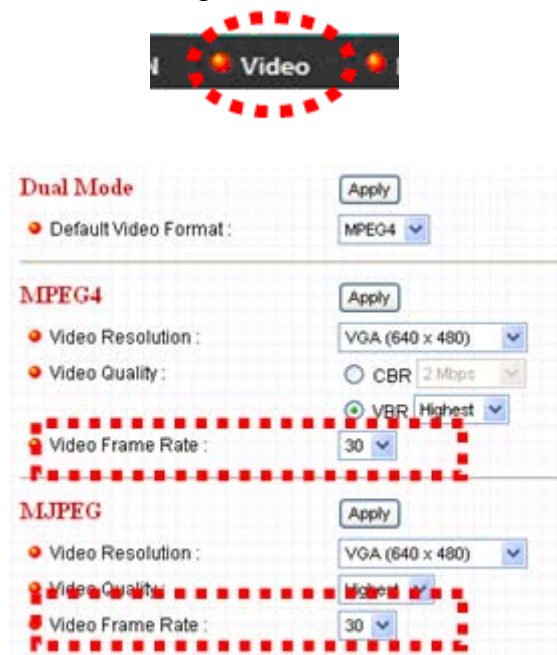

- b. Try a lower resolution.

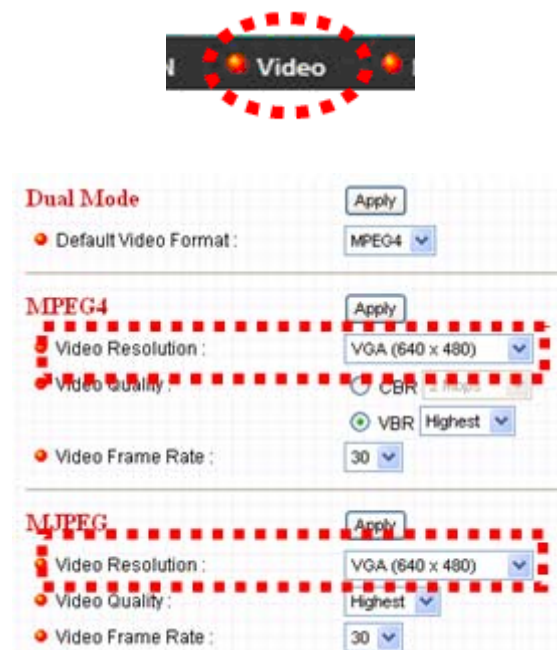

- c. If you're connecting this camera from Internet, it may caused by a slow

Internet connection. However, when the network connection is slow, a lower frame rate / resolution setting will help resolve this issue.

- d. Adjust the antenna if you're using wireless connection. The antenna should be perpendicular to the ground to get best reception, and the distance between IP camera and computer / wireless access point should not be too far.
- e. Try to adjust "**MTU**" setting if you're using PPPoE to connect to Internet. Ask your ISP or network administrator for detailed instruction.


5.2.3 IP camera is not responding

- a. Is the network cable or wireless connection disconnected? Please check it.
- b. Unplug the power adapter from wall socket and plug it in again after 10 seconds, then try to connect to the IP camera again.
- c. If IP camera is correctly powered ("**Power**" LED is on), but you still can not connect to the camera when you're sure that IP address is correct, please contact Rosewill's customer service for help).

5.2.4 Image is fuzzy

- a. Use a soft cloth to clean the lens on the camera. (You can use cloth with water, but DO NOT use alcohol or other chemical solution to apply on the lens.)
- b. Try to adjust brightness setting.



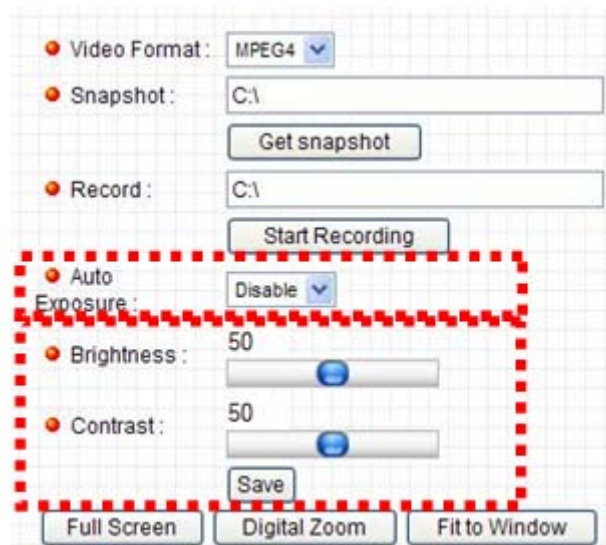

- c. If there's any light at the place where IP camera is located, switch it on and see if image looks better.

5.2.5 I set the IP camera to send image by Email or FTP, but nothing is received

- a. If the image is send by Email, please make sure it's not blocked by any anti-spam mechanism.
- b. Please make sure you have enough permission for FTP uploading (You can try this by clicking "**Upload a test file**" button).
- c. Make sure the user name and / or password of SMTP server is correct, if your SMTP server requires authentication (You can try this by click "**Send a test Email**" button).
- d. Please check log, if FTP upload or Email sending is failed, it will be logged, and this may give you some clue on how to solve the problem.

5.3 Additional Setup guides


5.3.1 Obtain a free Dyndns account to view while away

If your ISP is issuing dynamic (non-static) IP address to you and you can't connect to your IP camera when you're away from it, you can follow the following steps to obtain a free Dyndns account, which will provide you free IP address to host name mapping service:


1. Launch your web browser and navigate to <http://www.dyndns.org>



2. Click "**Sign In**" button (located at upper-right corner of dyndns.org's webpage)

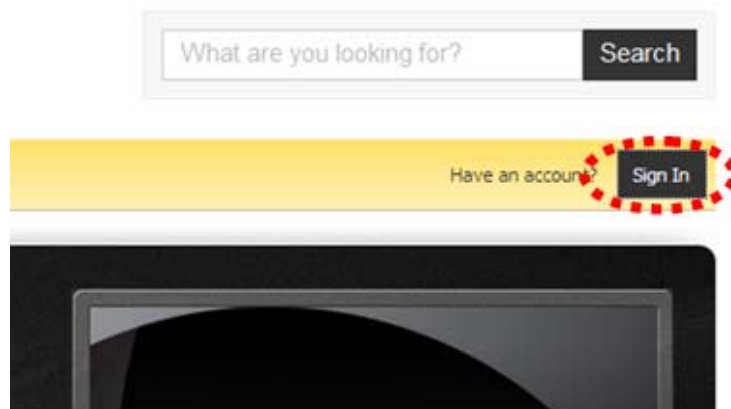

3. Click "**Create an Account**" in pop-up menu.

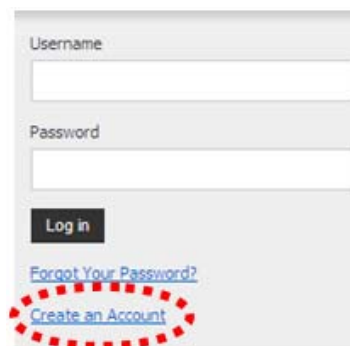

4. Fill all fields appear in this menu, and click "**Create Account**" button to create a new account. You'll be prompted if the account you selected is not available.

Create an account or log in to continue

Username:

Password:

Confirm password:

Email:

Confirm email:

Subscribe to: ☐ DynDNS.com newsletter (1 or 2 per month)
☐ Dyn Inc. press releases
☐ Remove HTML formatting from email


Security Image:

Enter the numbers from the above image:

☒ I agree with the [acceptable use policy \(AUP\)](#) and [privacy policy](#).

Create Account

5. When you see this image, you'll receive an e-mail confirmation at the e-mail box you registered with dyndns.org.

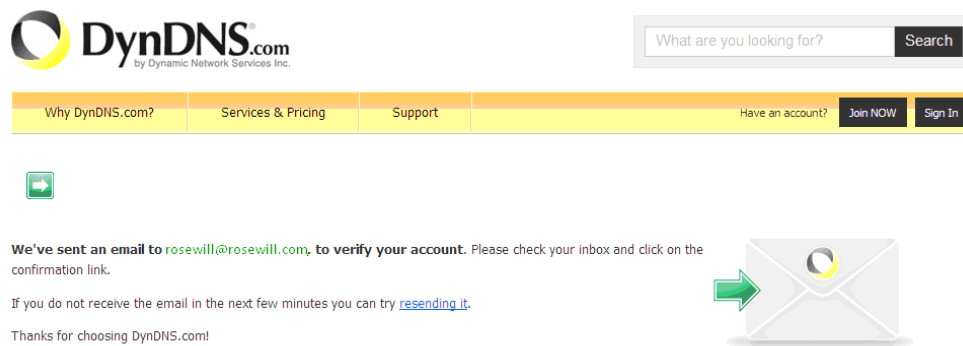

6. Check your e-mail box and you should be able to get confirmation e-mail. Click the link to connect to dyndns.org website and complete registration procedure. If you didn't get the mail, please re-check the e-mail address, or click **"resending it"** link in last step.

Also, if nothing happen after you click the link, please copy the link text and paste it in web browser's address bar.

Your DynDNS.com Account has been created. You need to visit the confirmation address below within 48 hours to complete the account creation process:

<https://www.dyndns.com/account/confirm/aFW-tL6RlwbW0eRV7PhFRQ>

Our basic service offerings are free, but they are supported by our paid services. See <http://www.dyndns.com/services/> for a full listing of all of our available services.

7. When you see “**Account Confirmed**” webpage, indicates your dyndns.org account has been confirmed and activated. Now you can click “**Create a dynamic DNS host within our Free domains**” link to continue.



8. Click “**Create Hostname**” button.



9. In the “**Create Hostname**” page:

- Input the hostname of your choice in “**Hostname**” field,
- Select a domain name in dropdown menu,
- Select “**Host with IP address**” for “**Service Type**”,
- Input current IP address in “**IP Address**” field (or click the link below to use detected IP address to fill this field).

10. Click “**Add to cart**” continue.

11. Click “**Next**” to continue.

Your cart contains **free services only**. You will not be asked for credit card information.

Upgrade Options

Free accounts allow only five Dynamic DNS hosts.

- To add more and enjoy [additional benefits](#) for only \$15.00 per year, [purchase Dynamic DNS Pro](#).
- To get Dynamic DNS for **your own domain**, use [Custom DNS](#).

Dynamic DNS Hosts

rosewill.ath.cx	-	remove	\$0.00
---------------------------------	---	------------------------	--------

Please enter coupons in the box below and click "Add Coupon".

Sub-Total: \$0.00

Order Total: \$0.00

Would you like to [print an estimate/quote](#)?



12. Click "**Activate Services**" to continue.

Once you have confirmed the contents of your cart your services will be instantly activated.

Service	Period	Price
Dynamic DNS Hosts		
rosewill.ath.cx	-	\$0.00
Sub-Total:		\$0.00



13. When you see this message, indicates your free dyndns.org hostname mapping service has been activated. You can go to [chapter 3.2.3](#) to use your dyndns.org username, password, and hostname + domain name to locate your IP camera on Internet even you're using dynamic IP address!

[rosewill.ath.cx](#) successfully activated.

Hostname	Service	Details	Last Updated
rosewill.ath.cx	Host	219.70.117.176	May. 04, 2010 10:30 AM

[» Host Update Logs](#)

[» Bulk Update IP Address And Service Type](#)

[Add New Host](#)

5.3.2 Using this IP Camera with a router or firewall

If this IPCAM is not directly connected to Internet (behind router or firewall), you'll need to setup your router / firewall so you can access this IPCAM from

other computers on Internet.

The following instruction describes how to configure your router or firewall device so your IPCAM can work with them. These instructions are based on a commonly-available residential router and these setup techniques should be easy to apply on any other similar devices as well.

5.3.2.1 Setup Dyndns Dynamic IP address Mapping

1. Go to your router's setup page, and locate **"DDNS"**, **"Dynamic DNS"**, or similar setup item.

Wireless Router [Home | General Setup | Status | Tools]

- System
- ✓ WAN
 - ▶ Dynamic IP
 - ▶ Static IP
 - ▶ PPPoE
 - ▶ PPTP
 - ▶ L2TP
 - ▶ Telstra Big Pond
 - ▶ DNS
 - ▶ **DDNS**
- LAN
- Wireless
- QoS
- NAT
- Firewall

DDNS

DDNS (DynamicDNS) allows users to map the static domain name to a dynamic IP address. You must get a account, password and your static domain name from the DDNS service providers. Our products have DDNS support for www.dyndns.org and www.tzo.com now.

Dynamic DNS :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Provider :	DynDNS
Domain Name :	
Account :	
Password / Key :	

APPLY CANCEL

2. Refer to last chapter and obtain a Dyndns account, password, and domain name.
3. Enable Dynamic DNS function, select **"DynDNS"** as service provider, and fill the information you obtained from Dyndns.org into Domain name, Account, and Password field (these field's name may different on your router).

Dynamic DNS :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Provider :	DynDNS
Domain Name :	my-IPCAM.dynalias.com
Account :	myipcam
Password / Key :	••••••••

5.3.2.2 Open Ports Required by IP CAM

To access IP CAM located behind router or firewall, you must open ports on router or firewall so you can access IP CAM from Internet.

1. Go to your router's setup page, and locate **"NAT"**, **"Firewall"**, **"Port Mapping"**, **"Port Forwarding"**, or similar setup item.

Port Forwarding

Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.

☐ Enable Port Forwarding

Private IP	Computer Name	Type	Port Range	Comment
<input type="text"/>	Select	Both	<input type="text"/>	<input type="text"/>

Current Port Forwarding Table

NO.	Computer Name	Private IP	Type	Port Range	Comment	Select
<input type="button" value="Delete"/> <input type="button" value="Delete All"/> <input type="button" value="Reset"/>						

2. Enable this function, and fill IP CAM's IP address in **"Private IP"** (or similar field), select **"TCP"** or **"BOTH"** as data type, and input these port numbers for the services you wish to access from Internet:
 - IP CAM web configuration and view live image: 80
 - AV Control Port: 4321
 - RTSP: 554 and 50000 to 60000

Please note that if you changed the port number of web configuration / view or RTSP, you have to change the port forwarding setting for your router accordingly.

3. If IP CAM is the only service you wish to access from Internet, you can also use “**DMZ**” function to access IP CAM:



Simply fill the IP address of IP CAM and you can access IP CAM from the IP address of your router directly.

5.3.3 Using cell phone as IP Camera's Image Viewer

You can use your cellphone to connect to this IP CAM and view captured image. Currently this IP CAM supports iPhone (Apple) and Google Android OS.

5.3.3.1 View through Iphone

1. Launch Safari web browser
2. Input IP CAM's IP address / host name in safari's address bar in the following format:

111.222.333.444/ipcam.asp or hostname/ipcam.asp

Please note that appending “/ipcam.asp” is required.

3. Input username / password to login. (default **admin/1234**)



4. You'll see the image of connected camera displayed on upper-left corner of quad-split screen. If you have more than one IP CAM, you can add other 3 IP CAMs to the quad-split screen. Click an unused corner and a yellow square will appear to indicate it's being marked, then click "Setting".