

CLIFFORD

World-Class Auto Security™

intelliguard
900-IQ

Owner's Manual



Table of Contents

<i>Standard Features of the IntelliGuard 900-IQ</i>	3
<i>Welcome</i>	8
<i>Built-in vehicle recovery/anti-carjacking circuitry</i>	9
<i>Definitions</i>	9
<i>Your secret disarming code</i>	9
<i>IMPORTANT: What you MUST do to drive your car</i>	10
<i>What you MUST do if the system reminds you to enter your code</i>	10
<i>How to set your own secret disarming code</i>	10
<i>Enable/disable anti-carjacking</i>	11
<i>What to do in a carjacking situation</i>	11
<i>Your 4-button/12-channel remote controls</i>	11
<i>How to use your keychain remote control</i>	11
<i>What each button/channel does</i>	12
<i>How to interpret the chirps and parking light flashes</i>	14
<i>AntiScan™</i>	14
<i>Anti-CodeGrabbing™ (ACG) with Random Code Encryption</i>	14
<i>Tamper-proof ignition immobilization</i>	14
<i>Optional starter interrupt</i>	15
<i>Enhanced AutoArming™</i>	15
<i>AutoArming enable/disable</i>	15
<i>Visual acknowledgment</i>	15
<i>User-selectable entry delay</i>	15
<i>AutoArm & Lock</i>	15
<i>Instant AutoArming bypass</i>	15
<i>UltraSecure™ valet mode</i>	15
<i>To enable valet mode</i>	16
<i>To exit valet mode</i>	16
<i>Remote controlled valet mode entry and exit</i>	16
<i>Keyless entry in valet mode</i>	16
<i>FACT — False Alarm Control and Test</i>	16
<i>AutoLock and AutoUnLock™</i>	16
<i>Remote controlled sensor adjustments</i>	17

Table of Contents

Remote controlled override of optional sensor #2 17

Smart trunk release option 17

NightVision™ 18

How to interpret the LED status indicator 18

Automatic Battery-Saving Mode 18

Smart AutoTesting™ 19

Specific malfunction identification 19

Automatic malfunction bypass 19

Multiple-event TotalRecall™ 19

Smart prior intrusion attempt alert 20

High-output MultiSound Medallion™ Siren 20

Personalized Siren Sounds 20

SilentNight™ (automatic chirp muting from sunset to sunrise) 20

QuietChirps™ (muffled chirp sound level) 20

Long-term chirp silencing 20

Remote controlled chirp muting 20

Siren duration 20

SmartPowerUp™ II 20

User-selectable features 21

Step-by-step programming instructions 21

EXAMPLE 1 and 2 22

Adding new remote controls 23

How to erase the codes of lost or stolen remote controls 23

Table of user-selectable features 24-25

CLIFFORD
World-Class Auto Security™

*All IntelliGuard-IQ Series systems are covered by
one or more of the following Clifford Electronics patents:
4,158,874; 4,233,642; 4,327,444; 4,383,242; 4,430,685; 4,845,464;
4,887,064; 4,890,108; 4,922,224; 4,997,053; 5,081,667; 5,146,215;
5,157,375 and other patents pending.*



Standard Features of the IntelliGuard 900-IQ

- ✔ ***Lifetime Warranty***—For as long as you own the vehicle, Clifford will repair or replace the control unit and remote controls free of charge.
- ✔ ***FACT™—False Alarm Control and Test*** — One of many patented Clifford innovations, FACT ***absolutely, positively puts an end to recurring false alarms.***
- ✔ ***A Pair of 4-Button/12-Channel Remote Controls***—Fingertip command from a range of 100 feet. One remote has a gun-metal gray finish, the other has a gorgeous laminated burlwood case.
- ✔ ***AntiScan™*** — Some car thieves still use “*scanners*” that transmit one digital code after another until they hit the one code that disarms the alarm. AntiScan blocks scanners to prevent disarming by anyone other than you.
- ✔ ***Anti-CodeGrabbing™ (ACG) with Random Code Encryption***— A code-grabber is a new device that lets a thief record and capture off the air from a distance the digital code transmitted by your remote control whenever you arm your car. When you leave, the thief replays the code to disarm the alarm and unlock your car’s doors. ACG with Random Code Encryption makes thieves’ code-grabbers completely useless, because each time you press the button on your remote control ***a different random code*** is transmitted, yet the system will flawlessly recognize and respond to your transmitter’s new code and ignore all others.
- ✔ ***Full-Time Remote Panic with Automatic Door Locking and Unlocking***— If you feel threatened, you can, with just a fingertip touch on your remote control, sound the siren, flash the parking lights and unlock your vehicle’s power door locks for quick entry into your car without fumbling with your keys. If you press the panic button while driving, the siren will sound, the lights will flash and the doors will lock to shield you from the assailant.
- ✔ ***Built-In: the World’s Best Anti-Carjacking and Vehicle Recovery System***— The ultimate in safe and effective anti-carjacking/vehicle recovery:
 - ***No-Risk Carjack Protection*** — No buttons to push, you do nothing except get out of the car. Your IntelliGuard 900-IQ allows the criminal to drive a distance of a block or two, then flashes the parking lights, sounds the siren and *safely* shuts down the engine.
 - ***Safe & Intelligent Engine Shutdown*** — The system waits for the carjacker to slow for traffic or a turn, then *safely* shuts down the engine.
 - ***Immediate Vehicle Recovery*** — Since the vehicle will be immobilized just a block or two away, police intervention is not mandatory, as it is with other recovery systems.
 - ***PlainView™ Coded Disarming Switch*** — No “*hidden*” switch that carjackers can find in an instant. The PlainView switch accepts only *your* code.
 - ***Anti-Tampering*** — If the thief tries entering codes at random, the system locks out and will not respond to *any* code, even if the thief were to stumble onto the correct one!
 - ***Sabotage-Proof*** — If a thief removes the control unit, the engine remains immobilized!
- ✔ ***UltraSecure Coded Valet Mode™*** — Ensures that no thief can turn off your IntelliGuard 900-IQ like they can all other brands of alarms.
 - ***Remote Controlled Valet Mode Entry and Exit*** — With just a press of a button from up to 100 feet away, you can enter or exit valet mode.



Standard Features of the IntelliGuard 900-IQ (cont.)

- ☑ **NightVision™ Headlight Automation** — You'll never need to turn the headlights on or off ever again! IntelliGuard 900-IQ's built-in NightVision circuitry takes care of illumination control in every lighting and weather condition, whether driving at dusk, dawn or in the rain.
 - **Safety Above All™** — You'll never again accidentally drive in the dark with the headlights off nor forget to turn the headlights off after parking. For your safety and that of other motorists, when driving at twilight, your car's headlights automatically turn on just before dusk and switch off after dawn.
 - **Precision Activation** — Your vehicle's headlights are turned on or off only when necessary. Driving under a dark overpass in daylight or passing through a brightly lit area at night *will not* cause the headlights to switch on and off.
 - **Automatic Post-Parking Illumination** — For your safety when parking your car at night, the headlights will stay on for 30 seconds to light your way in the dark.
 - **Complete User Control** — The NightVision circuitry enhances headlight operation without interfering with normal operation. At any time, you may use your vehicle's headlight switch to override NightVision and turn on the headlights even in broad daylight.
 - **RainCheck™** — When you turn on the windshield wipers, your IntelliGuard 900-IQ automatically turns on the headlights to increase your vehicle's visibility to all other drivers on the road. What's more, you'll never have to worry about accidentally leaving your headlights on after parking.
 - **Built-In Remote Headlight Activation** — Just press of button 2 on your remote control will instantly turn on your vehicle's headlights for your choice of any duration between one second and 2.5 minutes to light your path to and from your vehicle.
- ☑ **Remotely Adjustable Dual-Zone OmniSensor™** — With just a touch on the remote, you may, at any time or place, adjust and test the sensitivity of this microprocessor-controlled bi-axial, digital sensor. The two sensor zones provide full perimeter protection: If someone bumps into your car, the system will sound a distinctive warning tone; if forced entry is detected, the full alarm will sound.
 - **Infinitely Adjustable Sensitivity** — For the utmost in fine-tuning accuracy. Select the zone you want to adjust via a press on the remote control and strike the vehicle with the amount of force you want the OmniSensor zone to pick up. *That's all there is to it!*
 - **Unprecedented Reliability** — Since there are no moving mechanical parts to wear out and the entire electronic circuitry resides in the passenger compartment, not in the engine well where it would be exposed to temperature extremes, water, vibration and dirt.
 - **Adjust and Test Unobtrusively** — No repeated arming and disarming, and no siren wailing. You set and test sensitivity without activating the alarm!
- ☑ **Remote Override of Optional Sensor #2** — Whenever you wish, a press of a button on your remote control will override optional sensor #2 (such as the optional Proximity Sensor passenger compartment motion detector sensor) for those times when you must leave a passenger or pet in your vehicle.



Standard Features of the IntelliGuard 900-IQ (cont.)

- ☑ **Dual-Mode “Chirp” Silencing**—Whenever you remotely arm or disarm, the siren “chirps” and the parking lights flash to confirm system status. Whenever you wish, you may silence the chirps with either of these two methods:
 - **Remote Controlled Chirp Muting** —Just a press of remote control button 3 will arm and disarm the system *silently*. It’s perfect when parking at night in a quiet residential area.
 - **Long-Term Chirp Silencing** — Silence the chirps until you choose to reactivate them.
- ☑ **Remote Door Locking/Unlocking with Built-in Relays** — *No more fumbling with keys in the dark or bad weather!* A press of a button on the remote control simultaneously arms your system and locks your vehicle’s power door locks. Another press disarms and unlocks.
 - **User-Selectable AutoLock™** — Automatically locks the doors after you have begun driving. If you prefer, you can set the system to automatically lock the doors the instant you turn on the ignition to start the engine.
 - **AutoUnlock**— Automatically unlocks the doors when you turn off the engine.
 - **Deluxe Remote Keyless Entry in Valet Mode** — Use your remote control to lock and unlock the car doors even while the system is in valet mode.
- ☑ **QuietChirp™**— Whenever you desire, you may choose to lower the decibel volume of the arm and disarm chirps to a level that is clearly audible but less obtrusive than the full-volume chirps. All it takes is a few flicks of a switch.
- ☑ **Built-In Parking Light Flasher** —Visually confirms door lock and system status.
- ☑ **Remote Controlled Courtesy Lighting** —When you remotely disarm, the interior lights turn on and stay on until you start the engine or 30 seconds, whichever occurs first.
- ☑ **Patented Smart AutoTesting™**—Automatically tests all triggers and sensors every time you remotely arm and warns you if you accidentally arm the system with the hood or trunk open. If there is a genuine trigger or sensor malfunction, the system will specifically identify the problem, thereby eliminating time-consuming and costly trouble-shooting.
- ☑ **Patented Malfunction AutoBypass™ with Automatic Monitoring** —In the unlikely event of a trigger or sensor malfunction, your IntelliGuard 900-IQ will automatically bypass the malfunction and arm all other points to continue relentless protection of your vehicle. If you simply left the hood, trunk or a door open when you armed, just close it and the system will again monitor that trigger point.
- ☑ **Tamper-Proof Immobilization™**—While the IntelliGuard 900-IQ is armed, the entire ignition and fuel systems are disabled. For unmatched security, even if a thief were to cut all the alarm wires, he would *still* be unable to start the engine.
- ☑ **Dual-Port Immobilizer Capability**—With the addition of an optional relay, you can add yet another layer of protection to the Tamper-Proof Immobilization by preventing an intruder from even cranking the starter. Fault-proof design ensures that *you* can start the engine even in the unlikely event of a system malfunction.



Standard Features of the IntelliGuard 900-IQ (cont.)

- ☑ ***User-Programmable MultiSound Medallion™ Siren*** — The IntelliGuard 900-IQ's innovative MultiSound Medallion siren integrates creative form and engineering triumphs. Designed entirely by Clifford engineers, there's no other siren like it. The remarkable Clifford MultiSound Medallion Siren is far superior in its performance, features, reliability and even aesthetics to all other manufacturer's look-alike, sound-alike generic sirens.
 - ***User-Selectable SilentNight™*** — You can set the system to sound its usual arm and disarm chirps during daylight hours, but automatically silence them at night.
 - ***Personalized Siren Sounds™*** — Your choice of up to 64 distinct sound patterns for unmistakable recognition from a distance.
 - ***Ultra-Reliability*** — Since sirens are installed in the engine compartment, they're continually exposed to an unforgiving environment of extreme temperatures, vibrations, dirt, dust and water, which may cause the siren's electronics to fail. But the entire electronic circuitry of the IntelliGuard 900-IQ siren and all of its components have been designed into the underdash control unit. Consequently, the electronic circuitry is sheltered from the harsh environment and is no longer the weakest link of the alarm system. In fact, the calculated mean time between failure (MTBF) of the IntelliGuard MultiSound Medallion Siren is 10 times better than that of conventional sirens.
 - ***User-Selectable Siren Duration*** — You may set the siren wail for your choice of either 30 or 60 seconds.
 - ***Patented Automatic Noise Abatement*** — IntelliGuard 900-IQ siren electronics limit alarm sounding to five siren duration cycles even if a door is left open in the wake of an intrusion attempt. This ensures against battery drain or towing of your vehicle due to noise pollution. The system then automatically resets and re-arms all other points to *continue* to provide the utmost possible protection.
- ☑ ***Enhanced User-Selectable AutoArming™*** — Arms itself "*passively*" if you forget. May qualify you for an insurance discount that could pay for the system.
 - ***AutoArming Enable/Disable*** — You may disable or re-enable AutoArming with just a few flicks of a switch.
 - ***AutoArm & Lock™*** — You may set the system to automatically lock the doors every time the system AutoArms.
 - ***Visual Indication*** — Two parking lights flashes signal that the 30-second countdown to AutoArming has started.
 - ***15-Second Entry Delay*** — If you ever temporarily lose the use of your remote controls, an entry delay allows you to enter the vehicle and disarm the system without sounding the siren.
 - ***Instant AutoArm Bypass*** — Just a quick turn of the ignition switch bypasses AutoArming for one cycle — perfect when fueling the vehicle. AutoArming is automatically restored the next time you park the car.
- ☑ ***Extended Range Capability*** — Optional ElectroLoop Antenna™ mounts unobtrusively inside your vehicle will triple the system's remote control range!



Standard Features of the IntelliGuard 900-IQ (cont.)

- ✔ ***Eight-Event TotalRecall™***—The IntelliGuard 900-IQ's memory stores the identity of the last eight triggers and/or sensors activated. This provides an invaluable diagnostic means, since, whenever you wish, the system will visually identify the activated triggers and sensors in reverse chronological order.
- ✔ ***Patented Smart Prior Intrusion Attempt Alert*** — When you remotely disarm, a special chirp and parking light flash sequence will audibly and visually alert you from a distance if an intrusion attempt was foiled while you were away. IntelliGuard 900-IQ systems even identify the specific trigger or sensor that detected the intrusion attempt.
- ✔ ***Remote Window/Sunroof Closure Capability*** — On certain vehicles, the system's integrated timer and an optional relay can be used to automatically close the power windows and sunroof every time you remotely arm your system.
- ✔ ***Smart Remote Trunk Release Capability*** — An electronic interlock assures that the optional remote trunk release can be activated only when the system is disarmed. To further prevent any possibility of unintentional opening of the trunk, the interlock also makes sure that the trunk release cannot be remotely activated while driving.
- ✔ ***Advanced CMOS Microcomputer***—Very large scale integration (VLSI) microprocessor commands all system functions more than 1,000,000 times per second, yet it draws less power than the vehicle's clock, so it won't deplete your car battery like other alarms.
- ✔ ***Patented Remote Control Code Learning*** — Just a few flicks of a switch lets you match to the system up to 4 different 12-channel Clifford remote controls. Just as easily, a lost or stolen remote control can be deleted from the system memory.
- ✔ ***High-Luminescence LED Status Indicator with Automatic Battery-Saving Mode*** — Adds visual deterrence and identifies system status. To conserve vehicle battery power, if the system has remained continuously armed for 48 hours, the flash rate will automatically slow to half the normal rate. If left continuously armed for 96 hours, the blink rate will slow to one-quarter the normal rate.
- ✔ ***Control Unit with 5 Channels***— For remote system operation and accessories.
- ✔ ***Multiple Sensor/Trigger Inputs***— Separate inputs for two sensors as well as separate inputs for the doors, trunk and hood allow for a higher level of security and precise trigger/sensor identification.
- ✔ ***Patented SmartPowerUp™ II*** — When power to the system is disconnected, the system's non-volatile memory always remembers the last state (armed, disarmed or valet mode) and returns to that state when power is restored. So if a thief disconnects the power and then restores it in an attempt to start the car, the system will re-arm and instantly sound the siren while immobilizing the vehicle.
- ✔ ***Full-Time Programming Access***— You can easily change the status of more than 30 user-selectable features at any time, even while driving. Clear, audible signals confirm each feature selection and setting.



Welcome to the world of high-technology vehicle security and convenience

Congratulations on the purchase of your IntelliGuard 900-IQ vehicle security/convenience system. Clifford Electronics has long been recognized as the world's leading manufacturer of high-technology vehicle security systems and accessories. In fact, Clifford Electronics holds more patents than all other vehicle security manufacturers combined. Buying Clifford has always meant buying the best, and nowhere is our commitment to technological innovation, reliability and quality more evident than in the astounding IntelliGuard 900-IQ — our top-of-the-line model.

Your IntelliGuard 900-IQ is loaded with protective features and lifestyle convenience benefits that other car alarm companies don't even have on their wish lists, let alone their alarms. Features like Anti-CodeGrabbing™ that fights off the latest and most onerous threat from high-tech thieves. A thief equipped with a code-grabber can record with total impunity the codes of your car alarm's remote control from up to several hundred feet away. How? The thief simply waits for you to arm or disarm your alarm with your remote control. The thief's portable, pocket-sized code-grabber will automatically pick and record the transmitted code off the air. As soon as you walk away, he simply plays it back, instantly disarming your alarm and unlocking the doors. It's like giving the thief your car keys. Code-grabbing will instantly defeat all other brands of remote controlled car alarms, regardless of whether they are equipped with anti-scanning or trillions of digital codes.

IntelliGuard 900-IQ's built-in BlackJax anti-carjacking and vehicle recovery system enhances your personal safety and virtually assures that your vehicle can be promptly recovered intact. Clifford's unique PlainView Coded Valet Switch ensures that no thief, carjacker or joy-rider can turn off your IntelliGuard 900-IQ like they can with all other car alarm brands. NightVision™ headlight automation means you'll never need to touch the vehicle's headlight switch. For total freedom from incorrectly adjusted sensors, there's remote controlled adjustment of the system's dual-zone digital vibration/impact sensor that allows you to set the desired sensitivity level any place or time with just a touch of a button on your remote control. Plus there's remote controlled valet mode, remote controlled timed headlight activation, an electronic interlock to prevent accidental activation of the optional remote trunk release, user-programmable MultiSound Medallion™ Siren with 64 distinctly different siren sound combinations sets your alarm apart from all others, smart automatic locking/unlocking if you ever "panic" the system, full-time programming access (even while driving), and much, much more.

Yet despite all the sophistication, the IntelliGuard 900-IQ is amazingly easy to use: never more difficult than a few flicks of a switch or a press of a button on one of your miniature keychain remote controls.



Built-in vehicle recovery/anti-carjacking circuitry

IntelliGuard 900-IQ's built-in BlackJax circuitry provides a safe and effective means of recovering your vehicle after a theft or carjacking.

VERY IMPORTANT: The factory setting for the anti-carjacking feature is OFF. Once you are familiar with the following, we suggest you turn this feature ON (see pages 21-25). When anti-carjacking is on, each time you begin driving you MUST enter your disarming code via the PlainView switch on the dashboard or console (unless the system is in valet mode). You may turn this feature on or off any time.

Your secret disarming code tells the system that the car is being driven by an authorized person. Also, if you open your car door at any point (as would occur in a carjacking attempt), you must again enter your secret code. Entering your code is simple and easy.

Definitions

- ***Digit:*** A digit is defined as any number from 1 to 9, inclusive.
- ***Disarming code:*** A disarming code may be 1 to 3 digits:
 - A 1-digit code = X = any number between 1-9
 - A 2-digit code = XY = any number between 11-99 (excluding numbers with zeros)
 - A 3-digit code = XYZ = any number between 111-999 (excluding numbers with zeros)

Remember, no code can have a zero.

- ***PlainView switch:*** A rocker switch mounted on the dashboard or console. The switch has three positions: ***1.) Latched 2.) Center 3.) Spring-loaded momentary.*** When you press the latched side, the switch remains in its pressed position. When you press the momentary side, the switch bounces back to the center position. Each time you drive your car, you must enter your secret disarming code via the PlainView switch.
- ***Entering a digit:*** To enter a digit, you tap (press and release) on the momentary side of the PlainView switch the number of times corresponding to the numeral of the digit to be entered, followed by pressing to the latched side, then returning the switch to its center position.
- ***Entering a code:*** If your code has only one digit, enter the code as described in "*Entering a digit.*" If your code has more than one digit, just repeat the above for each digit of your code.

Your secret disarming code

Unless the system is in valet mode (see page 15), within 20 seconds after you switch on the ignition and press the brake (or open a door while the engine is running), you must enter your secret disarming code to let the system know it is you who is driving. Your code will be a 1-to-3-digit number of your choosing. Each digit can be any number from 1 to 9, (i.e. the code can be any number between 1 and 999, except those that contain a zero).

Your system's factory-set disarming code is the single digit "2."



IMPORTANT: What you MUST do to drive your car

If you have the anti-carjacking feature turned on, until you set your own disarming code, you will use the factory-set code: the single digit “2.” To drive your car, do the following:

1. Start the engine, then press the brake pedal, then enter the factory-set code via the rocker switch mounted on the dashboard or console (you may do this while driving):
 - a. To enter the factory-set disarming code of “2,” tap the momentary (spring-loaded) side of the PlainView switch twice.
 - b. Press the PlainView switch to its other side (latched side), then return the switch to its center position. You may continue driving.

NOTE: If you wish, you may select to use a remote control button sequence to disengage the anti-carjacking countdown. See pages 21-25 for information.

What you MUST do if you the system reminds you to enter your code

If you forget to enter the code, the system will remind you to do so 20 seconds after you begin driving by “chirping” the siren 5 times and flashing its dashboard LED. At this point, you have another 20 seconds to enter your code. When entered, the LED will stop flashing. If the proper code is *not* entered within 20 seconds after the 5-chirp signal, the engine will shut down. You may enter your disarming code even after the engine is shut down. Once the proper disarming code is entered, you will be able to resume driving.

How to set your own secret disarming code

Since all IntelliGuard IQ systems have the same factory-set code, it is highly advisable that you set your own disarming code. You may choose any 1-, 2-, or 3-digit code that does not have any zeros. You can also change your disarming code whenever and wherever you want. See *User-selectable features* on pages 21-25.

Example

Let’s say you want to set your disarming code to 31. To do so, you would do the following:

1. From the *Table of user-selectable features* on pages 24 and 25, you would note that the “set a new secret valet code” feature is in column 4, row 6.
2. Enter program mode by turning on the ignition, entering your current valet code, then pressing the PlainView switch to its momentary side for 3 seconds until you hear a chirp.
3. Select column 4 by moving the switch between latched and center 4 times, i.e.: latched, center, latched, center, latched, center, latched, center. After a brief pause, you will hear 4 chirps to confirm that you have selected feature column 4.
4. Select row 6 by pressing and releasing the momentary side of the switch 6 times. To help you count, you will hear a chirp each time you press the momentary side.
5. Immediately flip the switch to the latched position.
6. Enter your new code. To enter 31 as your new code, you would press the switch in this manner: momentary, momentary, momentary, latched (you’ll hear 3 chirps to confirm the first digit), momentary, latched (1 chirp to confirm the second digit), center.
7. Wait 3 seconds until you hear 2 chirps, indicating the new code has been accepted.
8. Turn off the ignition to exit program mode (you’ll hear a 3-chirp confirmation).
9. **VERY IMPORTANT: You must immediately test your new secret valet code:** Turn on the ignition, enter your new code, then flip the switch to its latched position. The LED will illuminate. If it does not, the new code you programmed and the one you just entered do not match. ***In such a case, the system will revert to the previous code.***



Enable/disable anti-carjacking

You may enable or disable the anti-carjacking feature (see *User-selectable features* on pages 21-25) or temporarily override it via UltraSecure Coded Valet Mode (see page 15).

What to do in a carjacking situation


In a carjacking situation, the sooner you are out of the car the better. Don't resist or take anything with you, just get out and get away. The instant the car door is opened, your IntelliGuard 900-IQ takes charge. First it lets the carjacker drive a short distance, ensuring your safety. Then it flashes the brake lights and sounds the siren to caution drivers near your vehicle. It then waits for the carjacker to slow for a turn or traffic, at which point it shuts down the engine and dynamically prevents it from being restarted. If the carjacker tries to use the PlainView switch to enter code combinations at random, the system will lock out for two minutes after three incorrect tries. Even if he stumbles onto the correct code, the carjacker is *still* locked out. Unable to restart the vehicle, and with the siren wailing and brake lights flashing, the carjacker has no choice but to abandon your car. (The same occurs to anyone who steals your parked car). You simply walk a block or two to your car, enter your code, and the system releases control of the vehicle to you.

Your 4-button/12-channel remote controls

The 4-button/12-channel remote controls (one with a gun-metal gray case, the other with a laminated burlwood finish) are ultra-sophisticated miniature radio transmitters powered by a tiny 12-volt battery. Range is up to 100 feet (up to 300 feet with the optional ElectroLoop Antenna). A weak remote control battery will reduce range. Electrical interference and even sunspots can interrupt the signal from your remote to the system. If this happens, repeatedly press the remote control button (this works better than holding the button down). The 4-button/12-channel remote control is the key to your system. It incorporates Clifford's Anti-CodeGrabbing™ (ACG) technology for the ultimate protection against "code-grabbing" devices (see page 14). You will use your remote control to arm and disarm the system, lock and unlock the doors, activate the panic feature, adjust sensor sensitivity, enable/exit valet mode, override an optional sensor, activate the headlights or command options such as a remote trunk release, power window operation, electric garage door interface and even remote starting of the engine and heater or air conditioner, among other options.

How to use your keychain remote control

Your remote control can individually command up to 12 different system functions and options. It's like having a TV with 12 channels. You change channels (functions) with your keychain remote control. But instead of putting 12 buttons on the remote control, we made it easy: First, the button you use the most — button 1 to arm, disarm, lock and unlock — is larger than the others. Buttons 2, 3 and 4 are the smaller buttons to the right, below and left of button 1. The *LevelShift* button on the side of the remote control allows you to select channels 5-12:

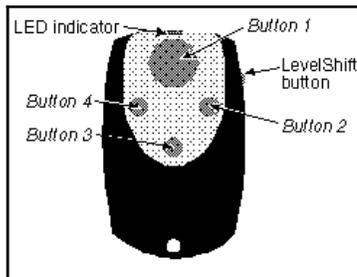

- **To transmit either channel 1, 2, 3 or 4:** Just press either button 1, 2, 3 or 4. For instance, to transmit channel 3, press button 3. While you transmit, the LED indicator will blink once every second: this indicates **level 1**.
- **To transmit either channel 5, 6, 7 or 8:** Press the LevelShift button once. This shifts buttons 1-4 to level 2 (channels 5-8). Then press the desired button *within the next 7 seconds*. For instance, to transmit channel 5, press the LevelShift button once, then press button 1. While you transmit, you'll notice that the LED indicator blinks twice, pauses, blinks twice, etc.: this indicates **level 2**.
- **To transmit channel 9, 10, 11 or 12:** Press the LevelShift button twice. This shifts buttons 1-4 to level 3 (channels 9-12). Then press the corresponding button within the next 7 seconds. For instance, to transmit channel 10, press the LevelShift button twice, then press button 2. While you transmit, you'll notice that the LED blinks three times, pauses, blinks three times, etc.: this indicates **level 3**.

NOTE: One second after you stop transmitting level 2 or level 3 (channels 5-12), the remote control automatically returns to level 1 (channels 1-4).

What each button/channel does

Your IntelliGuard 900-IQ remote controls come pre-programmed so that certain channels command certain functions. If you wish, you can actually assign any channel except 9 through 12 to any function (see pages 21-25). The following chart indicates what each remote control channel number does, and how to transmit each channel number.

<i>Factory settings of the 12 remote control channels</i>				
Transmitting channel number:	Causes the system to:	Press the LevelShift button?	How many times?	Press button number
1	arm or disarm and lock or unlock the doors	no	—	1
2	turn on the headlights (if the system is <i>armed</i>) AND optionally pop the trunk (if the system is <i>disarmed</i>)	no	—	2
3	<i>silently</i> arm or disarm	no	—	3
4	activate optional accessory function #1	no	—	4
5	activate optional accessory function #2	yes	once	1
6	activate optional accessory function #3	yes	once	2
7	activate optional accessory function #4	yes	once	3
8	activate optional accessory function #5	yes	once	4
9	remotely enter or exit valet mode (see pages 15 and 16)	yes	twice	1
10	remotely turn off optional sensor #2 (see page 17)	yes	twice	2
11	remotely adjust sensitivity of the OmniSensor's primary zone (see page 17)	yes	twice	3
12	remotely adjust sensitivity of the OmniSensor's warning zone (see page 17)	yes	twice	4



**TO ARM
THE SYSTEM** Press button 1 (channel 1) once. You will hear *two chirps* and the parking lights will flash twice. The dashboard LED will flash repeatedly and the car doors will automatically lock.

**TO DISARM
THE SYSTEM** Press button 1 (channel 1) again. *One chirp* and one parking light flash confirms disarming. In addition, the doors will automatically unlock and the interior lights will turn on and stay on for 30 seconds or until you start the engine, whichever occurs first.

**TO SILENTLY
ARM OR DISARM
THE SYSTEM** Press button 3 (channel 3). Your IntelliGuard 900-IQ system will arm or disarm with all the indications noted above *except* for the chirp acknowledgments.

**TO ACTIVATE
THE PANIC
FEATURE** Press button 1 (channel 1) for 3 seconds. The parking lights will flash repeatedly and the siren will blare for 30 or 60 seconds (user-selectable), or until you press button 1 again to turn it off. If the ignition is on (indicating you are in the car), the doors will automatically lock to prevent an assailant from entering. If the ignition is off, the doors will unlock, allowing you to enter immediately without fumbling with your keys.

**TO REMOTELY
TURN ON THE
HEADLIGHTS.** Button 2 (channel 2) controls an electronic interlock that lets you separately command *two* functions with the same channel: *one when the system is armed and another when disarmed*. Pressing button 2 while the alarm is *armed* will turn on the headlights for any duration you wish between one second and two minutes (the factory setting is 30 seconds; see *User-selectable features* on pages 21-25).

**TO REMOTELY
OPEN THE TRUNK . . .** Button 2 (channel 2) can control another function when the system is *disarmed*, such as an optional remote trunk release. Pressing button 2 while the alarm is *disarmed* will remotely open the trunk.

**TO ACTIVATE
OTHER OPTIONS
REGARDLESS OF
ALARM STATE** Button 4 (channel 4) and channels 5-8 (see *How to use your keychain remote control* on page 12) can activate accessories such as the IntelliStart remote engine starter, remote power window control, electric garage door and entry gate opener(s), IntelliGuard IQ systems on your other vehicles, etc.

**What about
channels 9 - 12? . . .** Channels 9 through 12 control remote valet mode entry/exit (see page 16), remote override of optional sensor #2 (see page 17), and remote adjustment of each of the two OmniSensor zones (see page 17).





How to interpret the chirps and parking light flashes

When you use the remote control, the system responds with chirps (unless the chirp muting feature is turned on) and parking light flashes. ***These chirp/flash acknowledgments mean:***

Chirps and flashes	Meaning
1	Your system is disarmed or you have remotely exited valet mode (see page 16)
2	Your system is armed or you have remotely engaged valet mode (see page 16)
2 and then 4	Armed but there is a door open (if there was a 5-sec. delay) or the sensor is malfunctioning (if there was a 10-sec. delay) (see <i>Smart AutoTesting</i> on page 19)
3	Disarmed but there was an intrusion attempt while you were away (see <i>Smart prior intrusion attempt</i> on page 20)
4	Armed but the hood or trunk is ajar (see <i>Smart AutoTesting</i> on page 19)
5	20-seconds to engine shutdown: enter your disarming code IMMEDIATELY

AntiScan™

Thieves can disarm some other brands of car alarms with a “scanner” that rapidly transmits one remote control code after another. Clifford’s AntiScan will detect any scanner and block the codes it generates.

Anti-CodeGrabbing™ (ACG) with Random Code Encryption

A Clifford exclusive that protects you and your automobile from the most effective and onerous car stealing device ever used by car thieves — a code-grabber. Code-grabbers are far more effective and efficient than scanning. Unlike scanners that sequentially transmit one digital code after another until they hit the correct code to disarm the alarm (a process that may take minutes to years depending on the system’s total number of codes), code-grabbers literally record, from hundreds of feet away, the code sent by your car alarm remote control. Then the thief simply plays back the code when you’re gone, instantly disarming the alarm and unlocking the doors. It’s like giving the thief your car keys. Non-Clifford alarms can be defeated that easily. In contrast, IntelliGuard IQ Series systems use complex digital signal processing and unbreachable encryption to randomly change the digital code every time you use the remote control. Your remote will **never** transmit the same code twice, and the control unit will **never** accept the same code twice. Thus the code recorded and played back by the thief’s code-grabber will never be accepted by your IntelliGuard 900-IQ. ***Only ACG can make a car alarm impervious to code-grabbing, and only Clifford systems have ACG with Random Code Encryption.***

Tamper-proof ignition immobilization

While armed, the system assures that your vehicle is completely immobilized by automatically locking out the ignition system. That means that a thief won’t be able to start the engine even if he had a duplicate of your car key. Even if he were to find the system control unit and tear it out of your vehicle, he still would not be able to start your car’s engine!





Optional starter interrupt

With the addition of an optional relay, while the system is armed, the vehicle's starter circuit is electronically disconnected. Our Fault-Proof design ensures that you'll be able to start the engine even in the unlikely event of a system malfunction.

Enhanced AutoArming™

If this feature is enabled and you forget to remotely arm, the system will automatically arm itself 30 seconds after the vehicle doors are closed. For your convenience, if you re-open any door(s) within the 30-second countdown, AutoArming will restart from the beginning once all doors are closed. IntelliGuard 900-IQ has these additional AutoArming features:

- ***AutoArming enable/disable:*** If you prefer, you may deactivate or reactivate the AutoArming feature. See *User-selectable features* on pages 21-25.
- ***Visual acknowledgment:*** Five seconds after you exit the vehicle and close all the doors, the parking lights will flash twice to confirm that the AutoArming countdown is progressing. Then, 25 seconds later, the system will AutoArm.
- ***AutoArm & Lock:*** To ensure you can't accidentally lock your keys inside the car, the system is factory-set *not* to lock the doors upon AutoArming. To change this setting, see *User-selectable features* on pages 21-25.
- ***User-selectable entry delay:*** If you temporarily lose the use of your remote controls, you may turn on the 15-second entry delay feature. This allows you to enter the car and silently disarm the system by turning on the ignition within 15 seconds of opening the door. See *User-selectable features* on pages 21-25.
- ***Instant AutoArming bypass:*** Prevents AutoArming when fueling the vehicle and other times when you wish to temporarily bypass AutoArming. To activate Instant AutoArming Bypass, rapidly turn the ignition switch to "ON" then "OFF." You will hear a single siren chirp to confirm that the system will not AutoArm. The system reverts to its normal operating mode when you next start the engine.

UltraSecure™ valet mode

In seconds, thieves can disable other alarm brands by hotwiring the ignition and flicking an easy-to-find "hidden" valet switch. Your IntelliGuard 900-IQ has safeguards that absolutely ensure that a thief cannot enable the valet mode as a way of "turning off" your system. How? To enable valet mode, the driver must first enter the secret disarming code on the PlainView switch (i.e., the same code you use to turn off the BlackJax anti-carjacking circuitry; see page 9). Whenever the system is put in valet mode, it overrides the anti-carjacking features and the AutoArming feature (see above), as well as all other security features. At various times, you will need to switch the system off. For instance, when having your car serviced, washed or parked by a valet.

Remember: When your car will be driven by someone else (such as a mechanic) who will not know your disarming code, you must place the system in valet mode, otherwise your car will be immobilized.

NOTE: If you temporarily lose the use of your remote controls, you can disarm the system by enabling valet mode.





To enable valet mode

1. Turn the ignition switch to its “ON” position or start the engine.
2. Enter your secret disarming code (as noted on page 9) on the PlainView switch, then return the switch to its center position.
3. You now have 5 seconds to press *latched* position to enter valet mode. The system’s LED will glow continually for on-going visual confirmation of valet mode.

To exit valet mode

1. Turn the ignition switch to its “ON” position or start the engine (you may also perform the following while driving).
2. Flick the switch back to its center position. The LED will turn off to confirm that the system is now in its normal operating mode.

Remote controlled valet mode entry and exit

You can even enable or exit valet mode with your remote control simply by transmitting channel 9 (LevelShift twice, then button 1). In addition to the above indications, two parking light flashes will confirm that you have remotely enabled valet mode, while a single flash confirms exiting of valet mode.

Keyless entry in valet mode

Even if valet mode is enabled, you can still remotely control the convenience features. For instance, simply press button 1 (channel 1) as if you were disarming and the doors will unlock (indicated by one parking light flash) and the interior lights will turn on. Press button 1 again and the doors will lock (confirmed by two flashes). You may also use the other channels to activate options such as a remote trunk release or remote engine starting.

FACT™— False Alarm Control and Test

With FACT, you’ll never experience repeated false alarms. If the MultiSound Medallion Siren goes off, DO NOT remotely disarm the system; allow it to run for the full siren duration. Before sounding the siren a second time, the system automatically checks for another activated trigger to verify that an intrusion is in progress. Should the siren sound again, you will know for sure that someone is tampering with your vehicle. (To disable FACT, see *User-selectable features* on pages 21-25.)

AutoLock and AutoUnLock™

For your safety and that of your passengers, the doors automatically lock after you begin driving (when you first reach 15-20mph). If you prefer, you may set AutoLock to lock the doors the instant you turn on the ignition (see *User-selectable features* on pages 21-25). When you turn the ignition off, AutoUnLock automatically unlocks the doors. To suit your preferences, you may turn off *either or both* the AutoLock and/or AutoUnLock features. There are four possibilities: AutoLock “**on**” while AutoUnLock is “**off**”, or vice-versa. The other two combinations are both AutoLock and AutoUnLock “**on**” or both “**off**.”





Remote controlled sensor adjustments

Due to ever-changing conditions, all alarms require periodic fine-tuning of their sensors. With other alarms, this requires repeated trips back to the dealer. Not so with IntelliGuard 900-IQ. You can adjust sensitivity electronically without tools and without even knowing where the sensor is mounted! If the setting(s) of the OmniSensor is either too sensitive or not sensitive enough, you may individually test and adjust the settings of each zone.

To adjust the OmniSensor, just use the following procedure:

1. **Disarm** the system with the remote control.
2. If you wish to adjust the **primary zone**, transmit **channel 11** (LevelShift twice, then button 3). If you desire to adjust the **warning zone**, transmit **channel 12** (LevelShift twice, then button 4).
3. To **test** the preset sensitivity setting, first press **button 4** (you will hear 4 chirps to confirm testing mode). You may now **test** the preset sensitivity setting by “**thumping**” your fist against the window pillar and/or other parts of the vehicle at a level that you wish to trigger the alarm. If the impact is strong enough to set off the sensor zone you selected, you will hear a single siren chirp.
4. If you are not satisfied with the detection level and wish to **change** sensitivity, press **button 2** on your remote control (you will hear 2 chirps to confirm sensitivity setting mode), then **thump** your fist against the window pillar with the amount of force you want to set to trigger the sensor zone (for the primary zone, thump firmly, for the warning zone, thump less forcefully). A single chirp will acknowledge the impact.
5. Repeat steps 3 and 4 until you are satisfied with the sensitivity, then press **button 1** to record the new sensitivity setting and exit the sensor test/adjust mode (you’ll hear three chirps to confirm exit). You may now either repeat steps 1-5 for the other sensor zone, or press button 1 to arm the system.

Sound complicated? It really isn’t, there’s just a lot of explanation of what’s happening with each step. All you really have to do is the actions noted in **bold type**. Give it a try.

Remote controlled override of optional sensor #2

If you have an optional sensor, transmitting channel 10 within 10 seconds after arming the system will override the optional sensor. For instance, if you have an optional Proximity Sensor that picks up any movement inside the passenger compartment, you may use channel 10 to turn it off for those times when you must leave your pet or a passenger in the vehicle. The channel 10 sensor override is visually confirmed with 4 flashes of the parking lights.

Smart trunk release option

If the optional remote trunk release feature was installed, you may use remote control button 2 to remotely pop open the trunk. Your system has a built-in electronic interlock to prevent unintentional activation of the remote trunk release when you drive, or when the system is armed.



NightVision™

All of the following NightVision Headlight Automation features are built into your IntelliGuard 900-IQ:

- **User-selectable:** You may turn the NightVision features on or off whenever you wish (see pages 21-25).
- **When driving at dusk:** The system automatically turns on the headlights.
- **When driving at dawn:** The system automatically turns off the headlights.
- **Precision activation:** NightVision automatically and unerringly turns the headlights on or off only when necessary. For instance, if it is dark when the car's engine is started, NightVision instantly turns on the headlights, yet when the vehicle is driven under an overpass in daylight, the headlights will not turn on. Even more importantly, when passing through a very brightly lit area at night, the headlights will not switch off. However, if you drive into a dark parking structure during the day, NightVision will turn on the headlights within five seconds of entering the structure.
- **When you park your car at night:** NightVision keeps the headlights on for any duration of your choice between 1 sec. and 2.5 min. (factory preset to 30 sec.; to change the duration, see *User-selectable features* on pages 21-25) after you turn off the engine to light your path away from the vehicle.
- **RainCheck™—rainy day safety feature:** When you turn on the windshield wipers — day or night — NightVision automatically turns on the headlights and keeps them on for as long as the wipers are on. This feature delivers an extra margin of driving safety since it increases the vehicle's visibility to all other drivers on the road. This is a real battery-saving feature since you don't need to remember to turn off the headlights after driving in the rain during daylight hours.
- **Manual control of headlights:** If you wish to manually turn on the headlights, simply turn on your vehicle's headlight switch.

How to interpret the LED status indicator

The LED on your car's dashboard or console will inform you of the system status:

LED Condition	Meaning
Off	System is disarmed and in normal operating mode (i.e., valet mode is off)
On	Valet mode is on, the vehicle can be driven or serviced without having to disarm
Flashing (ignition off)	System is armed and protecting your vehicle
Flashing (ignition on)	20-second countdown to engine shutdown: Enter your disarming code IMMEDIATELY
Pause between flashes	Either a malfunction (see page 19) or an intrusion was attempted (see page 20)

Automatic Battery-Saving Mode

To conserve vehicle battery power (the LED draws more current than the entire control unit), if the system has remained continuously armed for 48 hours, the flash rate will automatically slow to half the normal rate. After 96 hours, it slows to one-quarter.

Smart AutoTesting™

Each time you remotely arm the system, it tests all triggers and sensors. If the **hood or trunk** is open when you remotely arm, the system will **immediately** alert you of the problem by sounding **4 chirps** and **4 parking light flashes** instead of the usual 2 and 2. If a **door** is ajar, you will receive the usual 2 chirps and flashes, then, **5 seconds later**, there will be **4 chirps** and **4 flashes**. (This door ajar warning will not work on vehicles that have factory-delayed courtesy lights). If a **sensor** is malfunctioning, you will receive the usual 2 chirps and 2 flashes, then, **10 seconds later**, there will be **4 chirps** and **4 flashes**.

NOTE: Since this is a warning indication, you will hear the 4 chirps even if you have the chirp muting feature turned on.

- **Specific malfunction identification:** The system can also indicate the **specific** trigger or sensor that is malfunctioning. If you get the 4-chirp/4-flash signal upon arming, perform the following to identify the malfunctioning trigger or sensor:
 1. Remotely disarm, then turn on the ignition. The LED status indicator inside your vehicle will be flashing, pause, then repeat.
 2. Count the number of blinks in one cycle between pauses (for your convenience, the blink cycle repeats a total of 5 times) and refer to the chart below:

Number of LED blinks between pauses	Trigger/sensor indication
1 blink	OmniSensor
2 blinks	Optional sensor
3 blinks*	Door trigger*
4 blinks	Trunk trigger
5 blinks	Hood trigger

* If your vehicle has a factory-installed feature that turns off or dims the interior courtesy lights several seconds after you exit the vehicle, the system cannot provide this indication.

Automatic malfunction bypass

To provide the utmost protection even if a system component malfunctions, the system will automatically bypass any faulty point and arm all **other** triggers and sensors to provide the utmost possible protection until you can have the system serviced by your local Authorized Clifford Dealer. If you accidentally armed with the hood, trunk or a door open, just close the open point and the system will again monitor that point.

Multiple-event TotalRecall™

The system's memory records the identity of the last eight activated or malfunctioning triggers and sensors, which allows your installer to instantly track down malfunctions. To identify the triggers and sensors held in the system's memory, use the following procedure:

1. With the ignition OFF, flick the PlainView valet switch to its latched side.
2. Press button 1 to "arm" the system, then again to "disarm."
3. The LED will blink 1-5 times to indicate the most recently activated point, pause, blink 1-5 times to indicate the next most recently activated point, and so on.
4. Write down the number of blinks between pauses and refer to the chart above.



Smart prior intrusion attempt alert

If you hear three chirps when you remotely disarm, it means that a trigger or sensor was activated in your absence. When you enter the vehicle and turn on the ignition (or start the engine), the LED will blink 1-5 times, pause, then repeat the blink cycle 4 more times. Count the number of blinks in one cycle and refer to the chart on page 19.

High-output MultiSound Medallion™ Siren

All the siren electronics are in the system control unit rather than the siren itself. This protects them from heat, dirt and exposure to the elements (other alarm companies' sirens are far more susceptible to failure). Your IntelliGuard 900-IQ also provides these additional features:

- ***Personalized Siren Sounds:*** Most alarm sirens have a single “warble” tone. A few offer “six-tone” sirens that cannot be adjusted or require destruction of circuit wires to change the sounds (the change is permanent and cannot be changed again). Your siren is different. As shipped from the factory, it sounds six different alarm sounds. However, you may turn any of the six sounds on or off to create a different combination of sound patterns. In all, there are 64 different combinations. You may set your own Personalized Siren Sounds so if you hear a siren at a distance, you will know for sure whether it is your car or someone else's. See *User-selectable features* on pages 21-25.
- ***SilentNight™:*** Automatically silence the arm and disarm chirps during nighttime hours. When you remotely arm and disarm when parked in the sunlight, the normal or QuietChirps (whichever you've set) will sound. See *User-selectable features* on pages 21-25.
- ***QuietChirps™:*** You can control the volume of the normal arm and disarm chirps. As shipped from the factory, your system issues full-volume chirp acknowledgments. If you prefer, you may reduce the chirp volume to a level that is clearly audible, yet less obtrusive. See the *User-selectable features* section on pages 21-25.
- ***Long-term chirp silencing:*** Whenever you wish, you may silence your IntelliGuard 900-IQ's arm and disarm chirps until you decide to restore them. The parking light flashes will continue to provide visual confirmation of remote controlled arming and disarming. See *User-selectable features* on pages 21-25.
- ***Remote controlled chirp muting:*** Remote controlled chirp muting capabilities are especially valuable when parking late at night in a quiet residential area or any other time when you want to arm or disarm silently. To arm or disarm silently, simply press button 3 (channel 3) on your remote control instead of the usual button 1 (channel 1).
- ***Siren duration:*** When the system detects an intrusion attempt, the alarm is set to sound for 30 seconds. However, if you prefer, you may change it to 60 seconds. See the *User-selectable features* section on pages 21-25.

SmartPowerUp™ II

If power to the system is ever removed, SmartPowerUp II ensures the system automatically restores itself to its previous state when power is restored. So if a thief disconnects the power and then restores it in an attempt to start the car, the system will re-arm and instantly sound the siren while immobilizing the vehicle. If your vehicle is to be serviced by a mechanic, just put the system in valet mode via the remote control (see page 20). If the mechanic needs to interrupt power, your system will automatically return to its valet mode state when power is restored; there will be no alarm activation and no need to provide your mechanic with your remote control and instructions on how to use it.





User-selectable features

Your IntelliGuard 900-IQ allows you to set many of its features to your own personal preferences. Although the system's programming capabilities are very extensive, we have made the programming procedures very simple: to make a change, you just flick the PlainView switch a few times. Once you've changed a few settings, you'll find that programming IntelliGuard 900-IQ is so easy that you can even do it while driving! The system comes with all of its features pre-programmed as noted by the bold type in the *Table of user-selectable features* on pages 24-25. To change any of the settings, use the steps noted below. To restore the feature to its factory setting, just repeat the procedure:

How to change a user-selectable feature:

Briefly, here's how it will work:

- You will pick a feature from the Table on pages 24-25, noting the feature's column and row numbers.
- First you'll need to get into program mode by entering your disarming code (see page 9). After you have entered your code, press the momentary side of the PlainView switch until you hear a chirp. You're now in the "Feature Select" position.
- Next you'll press the latched side of the switch a number of times identical to the column number. Lastly, you will press the momentary side of the switch a number of times corresponding to the row number.

That's all there is to it! After you enter the feature's column and row numbers, you'll hear either **one chirp** to indicate that the feature has been **turned off**, or **two chirps** if **turned on**. It's easy once you've done it. Try the examples on page 22 to get the hang of it.

Step-by-step programming instructions

1. Refer to the *Table of user-selectable features* and make note of the column (across) number and the row (down) number of the feature(s) you wish to program.
2. Turn on the ignition, or start the engine (skip this step if the engine is running).
3. Enter your **disarming code** (see page 9), then press the PlainView switch to its **momentary** side for about 3 seconds until you hear a siren chirp (the system LED will also turn on to indicate program mode.) You are now in the "*Feature Select*" position.
4. *Select the feature column:* **Toggle** the switch in and out of the **latched** position the same number of times as the column number of the selected feature (NOTE: each latched-to-center motion is counted as one). **Pause**. You will hear the same number of chirps as the column number you have selected, audibly confirming your selection.
5. *Select the feature row:* **Press and release** the **momentary** side the same number of times as the feature's row number. You'll will hear a chirp each time you press.
6. If there is a **NOTE** for the selected feature, perform the actions noted.
7. Pause. You will hear either one or two chirps: Two chirps = ON, one chirp = OFF.
8. You may select another feature, or you may exit program mode:
 - a. To select another feature in that column, repeat step 5 within the next 10 seconds (after 10 seconds, 3 chirps mean you are now back in the "*Feature Select*" position).
 - b. To select a different feature column, go to step 4.
 - c. To exit program mode, turn the ignition off (you'll hear 3 chirps and the LED will turn off to indicate exit of program mode). If driving, just wait 60 seconds and the system will automatically exit program mode.





EXAMPLE 1: Turn off siren sound number 2:

You can turn each of the siren's six different sound patterns on and off as you wish to create your own custom sound (see the *Personalized Siren Sounds* section on page 20 for more information). To turn off "Sound 2" you'll note that "Sound 2" is in column 1, row 2 of the Table (on pages 24-25). The "on" in bold type indicates the factory setting. The following example will turn that one sound off:

1. To enter program mode, turn on the ignition, enter your disarming code (as noted on page 9), then **hold** the switch in its **momentary** position until you hear a chirp.
2. Select column 1 by pressing **latched** and then back to **center** (wait for the one chirp to confirm column 1). To select row 2, press **momentary twice** (you'll hear a chirp each time you press the momentary side).
3. After a brief pause, you'll hear **one** chirp to confirm that sound #2 is now **off**.
4. Turn the ignition off. You'll hear 3 chirps, confirming automatic exit from the program mode, and you're done!

If you make an error, just turn off the ignition and start again. To turn siren sound 2 back on, just repeat steps 1-4. In step 3, you'll hear *two* chirps to confirm that siren sound 2 has been turned back *on*. Remember, one chirp = off, two chirps = on.

NOTE: You have 10 seconds to enter the row number after selecting the column number. If you wait too long, the system jumps back to the "Feature Select" position (this is indicated with 3 chirps). If you wait another 60 seconds, the system will exit program mode.

In **Example 2** below, you'll learn how easy it is to change the settings of several different features in just one session, without having to repeatedly turn the ignition on and off:

EXAMPLE 2: Turn off siren sound numbers 4 and 6, then turn on QuietChirps:

This time, we will change the settings of three different features in just one programming session: We will turn off sounds 4 and 6 and turn on the QuietChirps feature (see page 20). Here's all you have to do:

1. **Enter program mode** as previously noted (ignition on, enter your disarming code, press the momentary side until you hear a chirp).
2. Since sound 4 is in column 1, row 4 of the Table, you will have to enter the latched side once and the momentary side four times. Therefore, move the switch to the latched position and back to center. Wait for a single chirp to confirm the selection of column 1. Within 10 seconds, press and release the momentary side of the switch 4 successive times. You will hear a chirp after each single press. These chirps will help you count the number of presses. After a brief pause, you'll hear 1 chirp to confirm that sound 4 is now off.
3. Since sound 6 is in column 1, row 6 and is in the same column as you just entered for sound 4, there is no need in this case to again select column 1. Therefore, you can go right away to the row selection (momentary side of the switch). Now, within 10 seconds, press the **momentary side six times** to jump to **row 6**. After a brief pause, you'll hear 1 chirp to confirm that sound 6 is now off.
4. Now look up the location on the table of QuietChirps. Note that it's in **column 4, row 1** (latched, center, latched, center, latched, center, latched, center, wait for the 4-chirp/column 4 confirmation, then 1 momentary press). After a brief pause, you'll hear two chirps to confirm that the QuietChirps feature is now on.

continued . . .





5. To exit the program mode, turn the **ignition off**. You'll hear 3 chirps to confirm program mode exit.

You just made three programming changes in only five steps. Easy, isn't it? Notice again that in step 3 on the previous page you did not have to re-select column 1. If you don't touch the switch, the system *stays* in the column for 10 seconds to allow you to select any other feature(s) in the same column without having to re-enter the column number. Of course, you can select a new column at any time.

If you wait more than 10 seconds, the system automatically jumps back to the "Feature Select" position. This is the "stand-by" position: ready for entry of a new programming selection. If no action is taken for the next 60 seconds, the system automatically exits program mode, perfect if you program while driving or if you forget to turn off the ignition.

Adding new remote controls

For other drivers in your family, or if you wish to control IntelliGuard IQ systems on your other cars with the same remote control, you can buy additional remote controls from *any* Clifford Dealer (or call our Customer Service Department at 800-824-3208) and program them into the system yourself. Each IntelliGuard 900-IQ will respond to as many as four 12-channel remote controls. To add a new remote control to the system, use the procedures noted in the *User-selectable features* section on pages 21-25.

How to erase the codes of lost or stolen remote controls

If one of your remote controls is ever lost or stolen, you can erase its digital codes from the system memory to make sure that the missing remote control can never be used to disarm your system. To do so, use the "Erase all channels" feature (feature column 2, row 6 on the *Table of user-selectable features* on pages 24-25). This will clear all remote control codes from the system memory. Then simply program each remaining and/or replacement remote control as noted in the *Adding new remote controls* section above.



Table of user-selectable features: 1 chirp = OFF, two chirps = ON.

Feature Select	Column 1 1st latched	Column 2 2nd latched	Column 3 3rd latched	Column 4 4th latched	Column 5 5th latched
Row 1 1st momentary	Sound 1: on/off info on page 20	Add new remote to channel 1 info on page 12 NOTE 1	AutoLock on/off info on page 16	Enhanced AutoArming: on/off info on page 15	NightVision on/off info on page 18
Row 2 2nd momentary	Sound 2: on/off info on page 20	Add new remote to channel 2 info on page 12 NOTE 2	RPM-activated AutoLock on/off info on page 16	AutoArm & Lock: on/off info on page 15	Post-parking headlight duration 1sec -2min (30sec) info on page 12 and 18 NOTE 8
Row 3 3rd momentary	Sound 3: on/off info on page 20	Add new remote to channel 3 info on page 12 NOTE 3	AutoUnLock on/off info on page 16	15-second entry delay: on/off info on page 15	FACT: on/off info on page 16
Row 4 4th momentary	Sound 4: on/off info on page 20	Add new remote to channel 4 info on page 12 NOTE 4	QuietChirps: on/off info on page 20	AutoActivate timed accessory upon remote arming: on/off this feature is for installers only	★ Set channel 4 and 5 timer 1sec -2min (30sec) info on page 12 NOTE 9
Row 5 5th momentary	Sound 5: on/off info on page 20	Add new remote to channel 5 info on page 12 NOTE 5	SilentNight: on/off info on page 20	Siren duration: 60/30 seconds (1/2 chirps) info on page 20	Anti-carjacking: on/off info on pages 9-10
Row 6 6th momentary	Sound 6: on/off info on page 20	Erase all channels info on page 23 NOTE 6	Long-term chirp silencing: on/off info on page 20	Set a new secret disarming/valet code info on page 10 NOTE 7	Remote control button sequence to override anti-carjacking info on page 10 NOTE 10

★ **WARNING:** If you have remote window and sunroof closure, **DO NOT CHANGE THIS SETTING:** it requires installer-only adjustment. Changing the duration may cause damage. Please Note: There is a column 6 that contains installer-only features; do not change any of these settings. If you accidentally select column 6, turn off the ignition.

- **NOTE 1:** Transmit channel 1 (or other channel of your choosing) of the new remote control. You will hear one chirp to confirm programming of channel 1.
- **NOTE 2:** Transmit channel 2 (or other channel of your choosing) of the new remote control. You will hear two chirps to confirm programming of channel 2.
- **NOTE 3:** Transmit channel 3 (or other channel of your choosing) of the new remote control. You will hear three chirps to confirm programming of channel 3.
- **NOTE 4:** Transmit channel 4 (or other channel of your choosing) of the new remote control. You will hear four chirps to confirm programming of channel 4.
- **NOTE 5:** Transmit channel 5 (or other channel of your choosing) of the new remote control. You will hear five chirps to confirm programming of channel 5.
- **NOTE 6:** When you hear one chirp, all remotes will have been erased from the system memory. You must now add the new and/or existing remote controls to the system (i.e., program channels 1–5 of each remote that will be used with your IntelliGuard 900IQ).
- **NOTE 7:** *Immediately flip the switch to its latched position*, then:

- a. Enter the new code that you wish to use. The system will sound the same number of chirps as the digit you choose when you move the switch to the latched side (e.g., if the first digit is 4, you'll hear four chirps when you press the latched side).
 - b. Make sure to return the switch to its center position when complete.
 - c. **Wait 3 seconds until you hear 2 chirps**, indicating the new code has been accepted.
 - d. Turn the ignition off. You'll hear 3 chirps to confirm program mode exit and the LED will turn off.
 - e. **VERY IMPORTANT: You must immediately test your new secret disarming/valet code:** Turn the ignition on, enter your new code, then flip the switch to its latched position. The LED will illuminate. If it does not, the new code you programmed and the one you just entered do not match. **The system has reverted to the previous code.**
- **NOTE 8:** The headlight duration timer starts as soon as you select this feature. When the duration you wish has been reached, press button 1 on the remote control. You will hear two chirps to confirm the new duration.