

# EQUIN X

## BOUNCE

order code: EQLED41



**user manual**

**WARNING**

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**

**CAUTION!**

**Keep this equipment away from rain,  
moisture and liquids.**


**SAFETY INSTRUCTIONS**

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



**CAUTION! TAKE CARE USING THIS EQUIPMENT!  
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**

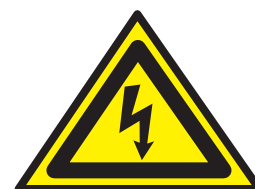

Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

**IMPORTANT:**

**The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.**

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. **THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.**
- **WARRANTY;** One year from date of purchase.

**OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and property.

You should find inside the Equinox carton the following items:

1, Equinox Bounce      2, Power cable      3, Instruction manual

### Technical Specifications:

DMX channels: 4

Voltage: AC 110-240V ~ 50Hz/60Hz

84 Ultra bright LED's (R: 24, G: 24, B:18, W:12, Y: 8)

Fuse: 1 Amp

Power Consumption: 15W

Dimensions: 330 x 300 x 120mm

Weight: 3.2Kg

### Operations:

There are 3 operating modes to choose from:

**1, DMX Mode      2, Auto Run      3, Sound Active mode**

#### DMX Mode

When the unit is connected with a universal DMX controller, press the **"MODE"** button to show **"Addr"** in the LED display window, you can now set the DMX address from 001-512 using the **"UP"** and **"DOWN"** buttons, once you have set your desired DMX address press the **"SET UP"** button to confirm the setting. For DMX functions, see the DMX Function Chart on the next page.

#### Auto Run Function Mode

When the unit is not being used via a DMX controller, press the **"MODE"** button to show **"Func"** in the LED display window. Now press the **"SET UP"** button and select one of the three following operation modes using the **"UP"** and **"DOWN"** buttons:

1) **"Soun"** = Sound Active mode

2) **"Slav"** = Slave mode

3) **"Auto"** = Auto Run mode

Once you have selected your desired operation mode press the **"SET UP"** button to confirm the setting.

#### Sound Active Mode

To activate the Sound Active mode, first please make sure that you selected **"Soun"** in the LED Display window from the above Auto Run Function Mode. Now press the **"SET UP"** button and select one of the 15 different flower effects using the **"UP"** and **"DOWN"** buttons.

**"P-00"** = Runs all 15 flower effects one after another

**"P-01">> "P-15"** = Runs selected individual flower effects

Once you have set your desired flower effect press the **"SET UP"** button to confirm the setting. To adjust the sound sensitivity in Sound Active mode press the **"MODE"** button to show **"Sens"** in the LED display window, then press the **"SET UP"** button and adjust the sensitivity using the **"UP"** and **"DOWN"** buttons. Once you have selected your desired sensitivity level, press the **"SET UP"** button to confirm your setting. (**"S-00"** = Low, **"S-15"** = High)

**Other functions****Slave Mode**

To set the unit in the Slave mode, press the **“MODE”** button to show **“Func”** in the LED display window. Now press the **“SET UP”** button and use the **“UP”** and **“DOWN”** buttons to show **“Slav”** in the LED display window and press the **“SET UP”** button to confirm the setting.

The unit will now run in conjunction with the Master unit when linked together with multiple units.

**LED Display On/Off**

Press the **“MODE”** button to show **“LED”** in the LED display window and press the **“SET UP”** button to choose one of the two following options using the **“UP”** and **“DOWN”** buttons.

- 1) **“ON”** = The LED display will stay ON all of the time
- 2) **“OFF”** = The LED display will turn OFF after the setting has been confirmed

Once you have selected your desired option, press the **“SET UP”** button to confirm your setting

**Blackout Mode**

Press the **“MODE”** button to show **“Blnd”** in the LED display window and press the **“SET UP”** button to choose one of the two following options using the **“UP”** and **“DOWN”** buttons.

- 1) **“NO”** = Auto run mode when the unit is not in Sound Active
- 2) **“YES”** = Blackout mode when the unit is not in Sound Active

Once you have selected your desired option, press the **“SET UP”** button to confirm your setting

**DMX Function Chart**

Channel 1	Channel 2	Channel 3	Channel 4	Function
000-009	000-009	N/A	N/A	Blackout Mode
000-009	010-255	Strobe Speed	Master Dimmer	Static colour mode (Use CH2 to select any of the 24 static patterns/colours)
010-255	000-255	Strobe Speed	Master Dimmer	Sound Active Mode (Use CH2 to select any of the 30 built-in dynamic patterns triggered via the internal microphone)

**DMX-512:**

- DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

**DATA Cable (DMX cable) requirements (for DMX operation):**

- The Equinox Bounce can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit and your DMX controller require a standard 3-pin XLR connector for data input/output (figure 1).

**Figure 1**

Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight dealers.

Please quote:

CABL10 – 2M

CABL11 – 5M

CABL12 – 10M

**Also remember that DMX cable must be daisy chained and cannot be split.**

**Notice:**

- Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

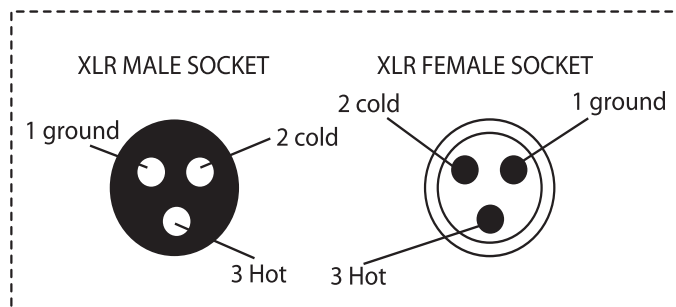
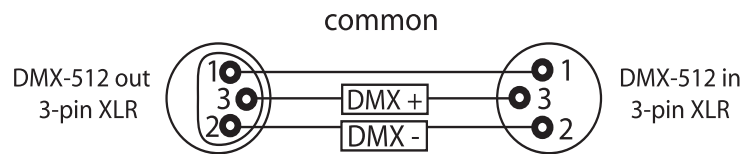



FIGURE 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Negative
Pin 3 = Postive

FIGURE 2

**Special Note: Line termination:**

- When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

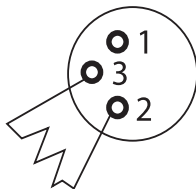

Termination reduces signal transmission problems and interference. it is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

**Using a cable terminator (part number CABL90) will decrease the possibilities of erratic behaviour.**

**5-Pin XLR DMX Connectors:**

- Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.

3- Pin XLR to 5-PIN XLR Conversion		
Conductor	3-Pin XLR out	5-Pin XLR in
Ground shield	Pin 1	Pin 1
Negative (-)	Pin 2	Pin 2
Positive (+)	Pin 3	Pin 3

EQUIN  X  
[www.prolight.co.uk](http://www.prolight.co.uk)