# IEEE 802.11a/n Wireless Outdoor CPE

# **User's Manual**



## Copyright

Copyright © 2011 all rights reserved. No part of this publication may be reproduced, adapted, stored in a retrieval system, translated into any language, or transmitted in any form or by any means without the written permission of the supplier.

## **About This Manual**

This user manual is intended to guide professional installer to install the IEEE 802.11a/n Wireless CPE and how to build the infrastructure centered on it. It includes procedures to assist you in avoiding unforeseen problems.

## Conventions

For your attention on important parts, special characters and patterns are used in this manual:

Note:

• This indicates an important note that you must pay attention to.



• This indicates a warning or caution that you have to abide.

Bold: Indicates the function, important words, and so on.

#### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To avoid the possibility of exceeding radio frequency exposure limits, you shall beep a distance of at least 100cm between you and the antenna of the installed equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

#### Warranty

Hardware warranty is for one (1) year from date of shipment from Distributor warrants that hardware will conform to the current relevant published specifications and will be free from material defects in material and workmanship under normal use and service.

IN NO EVENT SHALL DISTRIBUTOR BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGE RISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION OR ANY OTHER PECUNIARY LOSS, OR FROM ANY BREACH OF WARRANTY, EVEN IF DISTRIBUTOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT.

Chapter 1 Introduction	1
Introduction	1
Appearance	1
Key Features	2
Typical Application	2
Chapter 2 Hardware Installation	
Preparation before Installation	3
Professional Installation Required	
Safety Precautions	
Installation Precautions	
Product Package	4
Hardware Installation	6
Connect up	6
Using the External Antenna	
Pole Mounting	10
Chapter 3 Basic Settings	12
Factory Default Settings	12
System Requirements	
How to Login the Web-based Interface	
Basic System Settings	
Time Settings	
RADIUS Settings	
Firewall Settings	20
Basic Wireless Settings	25
Site Survey	
VAP Profile Settings	
VLAN Tab	

## Content

Chapter 4 Advanced Settings	32
Advanced Wireless Settings	32
Wireless Security Settings	35
Data Encryption and Authentication Settings	35
Access Control	37
WDS Settings	38
Chapter 5 Management	40
Remote Management	40
SNMP Management	40
Configure SNMPv3 User Profile	42
Coovachilli Settings	43
Upgrade Firmware	44
Backup/ Retrieve Settings	45
Restore Factory Default Settings	46
Reboot	46
Password	47
Certificate Settings	48
Chapter 6 Monitoring Tools	49
System Log	49
Site Survey	49
Ping Watch Dog	50
Date Rate Test	51
Antenna Alignment	51
Speed Test	52
Chapter 7 Status	53
View Basic Information	53
View Association List	53
View Network Flow Statistics	54

View ARP Table	55
View Bridge Table	56
View Active DHCP Client Table	56
View Network Activities	57
Chapter 8 Troubleshooting	58
Appendix A. ASCII	60
Appendix B. SSH Settings	61
Appendix C. GPL Declamation	69
Appendix D. Country Channel List	74

Figure 1 IEEE 802.11a/n Wireless Outdoor CPE	1
Figure 2 Typical Application	2
Figure 3 Move the Cover	6
Figure 4 Cable Connection	6
Figure 5 Connect to POE Injector	7
Figure 6 Plug the Ethernet cable to the RJ-45 jack of the injector	8
Figure 7 Pole Mounting – Step 1	10
Figure 8 Pole Mounting – Step 2	10
Figure 9 Login Page	13
Figure 10 Main Page	14
Figure 11 Basic System Settings	15
Figure 12 TCP/IP Settings (Bridge)	16
Figure 13 TCP/IP Settings (Router)	17
Figure 14 Time Settings	19
Figure 15 RADIUS Settings	20
Figure 16 Source IP Filtering	21
Figure 17 Destination IP Filtering	21
Figure 18 Source Port Filtering	22
Figure 19 Destination Port Filtering	23
Figure 20 Port Forwarding	24
Figure 21 DMZ Settings	24
Figure 22 Basic Wireless Settings	25
Figure 23 Site Survey	28
Figure 24 VAP Profile Settings	29
Figure 25 VAP Profile Settings	29
Figure 26 Management VLAN ID	31
Figure 27 Advanced Wireless Settings	32
Figure 28 Security Settings	35
Figure 29 Access Control	37
Figure 30 WDS Settings	38

Figure 31 Remote Management	40
Figure 32 SNMP Configuration	41
Figure 33 Configure SNMPv3 User Profile	42
Figure 34 Coovachilli Settings	43
Figure 35 Upgrade Firmware	45
Figure 36 Backup/Retrieve Settings	45
Figure 37 Restore Settings	46
Figure 38 Reboot	47
Figure 39 Password	47
Figure 40 Certificate Settings	48
Figure 41 System Log	49
Figure 42 Site Survey Tool	50
Figure 43 Ping Watchdog	50
Figure 44 Data Rate Test	51
Figure 45 Antenna Alignment	52
Figure 46 Speed Test	52
Figure 47 Basic Information	53
Figure 48 Connection	54
Figure 49 Network Flow Statistics	55
Figure 50 ARP Table	56
Figure 51 Bridge Table	56
Figure 52 DHCP Client Table	56
Figure 53 Network Activities	57
Figure 54 MAC Address	58

## TABLE

Table 1 Factory Default Settings	12
Table 2 ACSII	60
Table 3 Public Software Name and Description	70
Table 4 FCC Countries	74
Table 5 CE Countries	74
Table 6 Other Countries	75

# **Chapter 1 Introduction**

# Introduction

Designed for outdoor environment application, the IEEE 802.11a/n Wireless Outdoor CPE is a high-performance 802.11 a/n 2x2 MIMO broadband solution that provides fast and reliable wireless network coverage. Designed with IEEE 802.11n draft 2.0 standard, high output power and built-in 16dBi dual-polarity antenna makes it possible to deliver several times faster data rate than normal wireless device and higher bandwidth with longer range for outdoor applications.

The IEEE 802.11a/n Wireless Outdoor CPE supports four wireless communication connectivity (AP, Wireless Client, Bridge and AP Repeater), allowing for various application requirements thus helping to find the key to the "last mile" with least effort.

With high output power and reliable performance, the IEEE 802.11a/n Wireless Outdoor CPE is an ideal wireless broadband solution for wireless Internet service providers and system integrators!



## Appearance


Figure 1 IEEE 802.11a/n Wireless Outdoor CPE

# **Key Features**

- Compliant with IEEE 802.11a and IEEE 802.11n as well
- Support passive PoE which is supplied with 15V.
- High reliable watertight housing endures almost any harsh environments
- Four operating modes including AP, Wireless Client, Bridge and AP Repeater
- Support 64/128/152-bit WEP and 802.1X, WPA, WPA2, WPA&WPA2, WPA-PSK, WPA2-PSK, and WPA-PSK&WPA2-PSK etc
- User-friendly Web and SNMP-based management interface

# **Typical Application**

This section describes the typical applications of the IEEE 802.11a/n Wireless Outdoor CPE. By default, it is set to AP mode which allows it to establish a wireless coverage; besides, it is also able to join any available wireless network under wireless client mode. the IEEE 802.11a/n Wireless Outdoor CPE is able to deliver stable and efficient broadband connectivity for various applications.

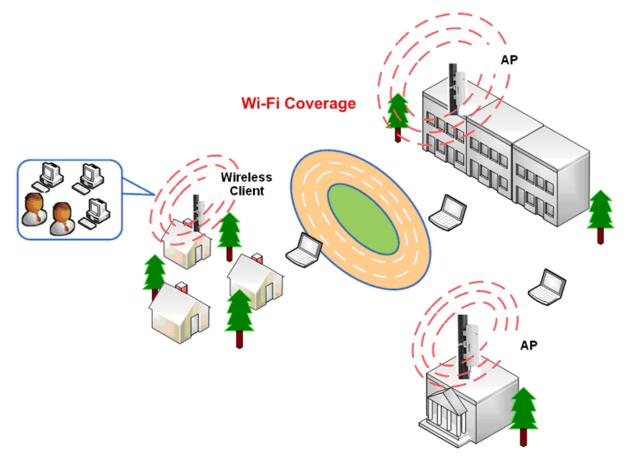

**Figure 2 Typical Application** 

# **Chapter 2 Hardware Installation**

This chapter describes safety precautions and product information you have to know and check before installing the IEEE 802.11a/n Wireless Outdoor CPE.

# **Preparation before Installation**

## **Professional Installation Required**

Please seek assistance from a professional installer who is well trained in the RF installation and knowledgeable in the local regulations.

## **Safety Precautions**

- 1. To keep you safe and install the hardware properly, please read and follow these safety precautions.
- If you are installing the IEEE 802.11a/n Wireless Outdoor CPE for the first time, for your safety as well as others', please seek assistance from a professional installer who has received safety training on the hazards involved.
- 3. Keep safety as well as performance in mind when selecting your installation site, especially where there are electric power and phone lines.
- 4. When installing the CPE, please note the following things:
  - Do not use a metal ladder;
  - Do not work on a wet or windy day;
  - Wear shoes with rubber soles and heels, rubber gloves, long sleeved shirt or jacket.
- 5. When the system is operational, avoid standing directly in front of it. Strong RF fields are present when the transmitter is on.

## **Installation Precautions**

To keep the IEEE 802.11a/n Wireless Outdoor CPE well while you are installing it, please read and follow these installation precautions.

- Users MUST use a proper and well-installed grounding and surge arrestor with the CPE; otherwise, a random lightening could easily cause fatal damage to the unit. EMD (Lightning)
   DAMAGE IS NOT COVERED UNDER WARRNTY.
- Users MUST use the "Power cord & POE Injector" shipped in the box with the CPE. Use of other options will likely cause damage to the unit.
- 3. Users MUST power off the IEEE 802.11a/n Wireless Outdoor CPE first before connecting the external antenna to it. Do not switch from built-in antenna to the external antenna from WEB management without physically attaching the external antenna onto the CPE; otherwise, damage might be caused to the device itself.

## **Product Package**

The product package you have received should contain the following items. If any of them are not included or damaged, please contact your local vendor for support.

٠	IEEE 802.11a/n Wireless Outdoor CPE	×1	
٠	Pole Mounting Ring	×2	
٠	Power Cord & POE Injector	imes1	
٠	Product CD		×1
0			

Note:

Product CD contains Quick Installation Guide and User Manual!

## **Pole Mounting Ring**



### **Power Cord & POE Injector**



## A Warning:

 Users MUST use the "Power cord & POE Injector" shipped in the box with the IEEE 802.11a/n Wireless Outdoor CPE. Use of other options will likely cause damage to the unit.

# **Hardware Installation**

## Connect up

 The bottom of IEEE 802.11a/n wireless outdoor CPE is a movable cover. Loosen the screw with a Philips screwdriver. Grab the cover and pull it back harder to take it out as the figure shown below.

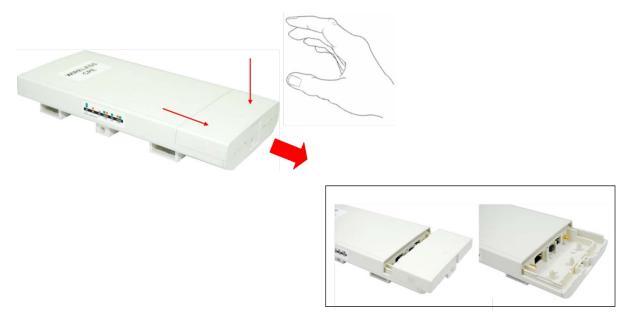


Figure 3 Move the Cover

 Plug a standard Ethernet cable into the RJ45 port labeled "LAN 1". Do not plug the cable into the RJ45 port labeled "LAN 2".



Figure 4 Cable Connection

The secondary Ethernet port (labeled LAN 2) is for IP video integration. To use it you need to enable the secondary port in advance before connecting with the IP camera from the CPE's Web Management as shown below.

	Global Connectivity		Logout
Status	System	Wireless Management	Tools
Basic Settings » TCP/IP Settings Time Settings RADIUS Settings Firewall Settings	Basic Setting Use this page to configure th Device Settings Device Name: Network Mode: Ethernet 1 DataRate: Ethernet 2 DataRate: Country/Region: Secondary RJ45 Power: Spanning Tree: STP Forward Delay: GPS Coordinate Settin Latitude: Longitude:	e basic parameters of device. ap00fbc5 (max. 15 characters and no spaces) Bridge  Auto Vulted States Characters and no spaces) Durited States Characters and no spaces) Characters and no spaces) Bridge Characters and no spaces) Disabled Characters and no spaces)	

3. Take out the power cord and POE injector from the gift box, and plug the power cord into the DC port of the POE injector as the below picture shows.



#### Figure 5 Connect to POE Injector

4. Put what in the Step.2 and Step.3 together by plugging the other side of the Ethernet cable in the Step.2 into the POE port of the POE injector in the Step.3. When you finish the Step.4, the set will be like the following picture:



#### Figure 6 Plug the Ethernet cable to the RJ-45 jack of the injector

5. Press the black PWR button beside the LAN 1 Ethernet port.



6. Attach and fasten the removable cover to the bottom of the unit with the screw.



 Power on the IEEE 802.11a/n Wireless Outdoor CPE by plugging the power adapter to the power socket.

## **Using the External Antenna**

The IEEE 802.11a/n Wireless Outdoor CPE provides two reverse SMA antenna connectors if you prefer to use the external antenna for your application instead of the built-in directional antenna, please follow the steps below.

1. Remove the two plugs as circled below:



2. Connect your external antenna to the SMA-type connectors at the bottom of the CPE.



## **A**Warning:


Users MUST power off the CPE first before connecting the external antenna to it. Do
not switch from built-in antenna to the external antenna from WEB management
without physically attaching the external antenna onto the CPE; otherwise, damage
might be caused to the unit itself.

Follow the steps described in **Connect Up** to finish the installation.

## **Pole Mounting**

1. Turn the CPE over. Put the pole mounting rings through the middle hole of it. Note that you should unlock the pole mounting ring with a screw driver before putting it through the CPE as the following right picture shows.



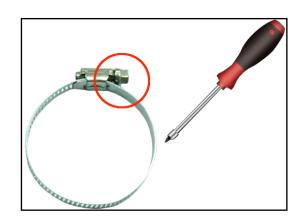

#### Figure 7 Pole Mounting – Step 1

2. Mount the IEEE 802.11a/n Wireless Outdoor CPE steadily to the pole by locking the pole mounting ring tightly. The mounting ring supports pole diameter 32mm to 70mm.



Figure 8 Pole Mounting – Step 2

3. Now you have completed the hardware installation of the IEEE 802.11a/n Wireless Outdoor

CPE.

# **Chapter 3 Basic Settings**

# **Factory Default Settings**

We'll elaborate the Wireless Outdoor CPE factory default settings. You can re-acquire these parameters by default. If necessary, please refer to the "<u>Restore Factory Default Settings</u>".

Table 1 Factory Default Settings

Features		Factory Default Settings		
Usernam	Username admin			
Passwor	Password password			
Wireless	Wireless Device Name apXXXXXX (X represents the la digits of Ethernet MAC address			
Operating	g Mode	AP		
Data Rat	е	Auto		
	IP Address	192.168.1.1		
	Subnet Mask	255.255.255.0		
LAN	Gateway	0.0.0.0		
	Primary DNS Server	0.0.0.0		
	Secondary DNS Server	0.0.0.0		
Spanning	g Tree	Enable		
802.11 M	lode	802.11a/n		
Country/I	Region	United States		
Channel	Number	149		
SSID		Wireless		
Broadcast SSID		Enable		
HT Protect Disable		Disable		
Data Rate Auto		Auto		
Output P	ower	Full		
Channel	Mode	20MHz		
WMM		Enabled		
RTS Thre	eshold (byte)	2346		
Fragmentation Length (byte)		2346		
Beacon Interval		100		
DTIM Interval		1		
Space in Meter		0		
Flow Control by AP Disal		Disable		
Security Open Syst		Open System		

Encryptic	ิท	None
Wireless Separation		Disable
Access C	Control	Disable
	Enable/Disable	Enable
SNMP -	Read Community Name	Public
	Write Community Name	Private
	IP Address	0.0.0.0

# **System Requirements**

Before configuration, please make sure your system meets the following requirements:

- A computer coupled with 10/ 100 Base-TX adapter;
- Configure the computer with a static IP address of 192.168.1.x, as the default IP address of the CPE is 192.168.1.1. (X cannot be 0, 1, nor 255);
- A Web browser on PC for configuration such as Microsoft Internet Explorer 6.0 or above, Netscape, Firefox, or Google Chrome.

## How to Login the Web-based Interface

The IEEE 802.11a/n Wireless Outdoor CPE provides you with user-friendly Web-based management tool.

• Open Web browser and enter the IP address (Default: **192.168.1.1**) of the CPE into the address field. You will see the login page as below.

Global Connect www.L-com.com	ivity
Name	admin
Password	
	Login Reset

Figure 9 Login Page

Enter the username (Default: admin) and password (Default: password) respectively and click "Login" to login the main page of the CPE. As you can see, this management interface provides 5 main options in the black bar above, which are Status, System, Wireless, Management and Tools.

www.L-com.co				Logout
Status	System	Wireless	Management	Tools
Information »	Information			
	This page shows the currer	nt status and some basic setting	as of the device.	
Statistics	System Information			
ARP Table	Device Name	ap00fc60		
Bridge Table	MAC Address Country/Region Firmware Version	00:19:70:00:fc:60 United States		
DHCP Clients		3.0.4(LC)1		
Network Activities	LAN Settings IP Address Subnet Mask Gateway IP Address MAC Address	192.168.1.1 255.255.255.0 0.0.0.0 00:19:70:00:fc:60		
	Wireless Settings			
	Operation Mode Wireless Mode Encryption	Bridge 802.11A/N Open System		
	ACK Timeout WMM Enable Noise Floor	27 us On -95 dBm		

Figure 10 Main Page

# Note:

• The username and password are case-sensitive, and the password should be no

more than 19 characters!

# **Basic System Settings**

For users who use the IEEE 802.11a/n Wireless Outdoor CPE for the first time, it is recommended that

you begin configuration from "Basic Settings" in "System" shown below:

L-COFO www.L-com.c	Global Connectivity	Logout
Status	System	ireless Management Tools
Basic Settings » TCP/IP Settings Time Settings	Basic Settings Use this page to configure the l Device Settings	
RADIUS Settings Firewall Settings	Device Name: Network Mode: Ethernet 1 DataRate:	ap00fc60 (max. 15 characters and no spaces) Bridge Auto
	Ethernet 2 DataRate: Country/Region: Secondary RJ45 Power: Spanning Tree: STP Forward Delay:	Auto  United States Enabled Disabled I (1~30 seconds)
	GPS Coordinate Settings Latitude: Longitude:	S N ▼ 0 ° 0 ° 0 " E ▼ 0 ° 0 ° 0 " Apply Cancel

Figure 11 Basic System Settings

#### Basic Settings

**Device Name**: Specify the device name, which is composed of no more than 15 characters with (0-9), (A-Z), (a-z) or (-).

<u>Network Mode</u>: Specify the network mode, including Bridge and Router. It is easy to configure parameters in Bridge Mode; however, users must pay extra attention to the way they configure the device when it is set to Router Mode.

Ethernet 1 Data Rate: Specify the transmission rate of data of LAN1. Default is Auto.

Ethernet 2 Data Rate: Specify the transmission rate of data of LAN2. Default is Auto.

<u>Country Region</u>: The availability of some specific channels and/or operational frequency bands are country dependent.

Secondary RJ45 Power: The secondary Ethernet port (labeled LAN 2) is for IP video integration.

To use it you need to enable the secondary port via WEB UI in advance before connecting with the IP camera.

**Spanning Tree**: Spanning Tree Protocol (STP) is a link management protocol for AP which provides path redundancy while preventing loops in a network. STP allows only one active path at a time between the access points but establish the redundant link as a backup if the initial link fails.

**<u>STP Forward Delay</u>**: STP Forward Delay is the time spent in detecting and learning network tree topology state before entering the forward state. Default time value is 1 sec.

#### **GPS Coordinate Settings**:

The GPS Coordinate Setting helps you mark the latitude and longitude of the Power R2 Extender. Just enter the coordinates and click the **Apply** button.

#### TCP/IP Settings

Open "**TCP/IP Settings**" in "**System**" as below to configure the parameters for LAN which connects to the LAN port of the CPE. In this page, users may change the settings for IP Address, Subnet Mask, and DHCP Server.

	lobal onnectivity			Logout
Status	System	Wireless	Management	Tools
Basic Settings TCP/IP Settings >> Time Settings RADIUS Settings Firewall Settings	TCP/IP Setti	ngs the parameters for local ar ou may change the setting f ent a Automatically ess 192.168.1.1 255.255.255.0 0.0.0.0 0.0.0.0 0.0.0.0	ea network which connects to the or IP address, subnet mask, DHC	LAN port of

#### Figure 12 TCP/IP Settings (Bridge)

**Obtain IP Address Automatically**: If a DHCP server exists in your network, you can check this option, thus the IEEE 802.11a/n Wireless Outdoor CPE is able to obtain IP settings automatically from that DHCP server.



• When the IP address of the CPE is changed, the clients on the network often need to wait for a while or even reboot before they can access the new IP address. For an immediate access to the bridge, please flush the netbios cache on the client computer by running the "nbtstat –r" command before using the device name of the CPE to access its Web Management page.

• In case the IEEE 802.11a/n Wireless Outdoor CPE is unable to obtain an IP address from a valid DHCP server, it will fall back to default static IP address.

<u>Use Fixed IP Address</u>: Check this option. You have to specify a static IP address, subnet mask, default gateway and DNS server for the CPE manually. Make sure the specified IP address is unique on your network in order to prevent IP conflict.

If the IEEE 802.11a/n Wireless Outdoor CPE is configured as Router mode, you need to configure some additional TCP/IP parameters for accessing the Internet.

	Global Connectivity		Logout
Status	System	Wireless Management	Tools
Basic Settings	TCP/IP Settir	gs	
TCP/IP Settings **	your Access Point. Here you	e parameters for local area network which connects to the LAN por may change the setting for IP address, subnet mask, DHCP, etc	rt of
RADIUS Settings	WAN Settings : WAN Access Type :	Static IP 🔻	
Firewall Settings	IP Address :	192.168.1.1	
	Subnet Mask : Default Gateway :	255.255.255.0	
	DNS 1:	0.0.0.0	
	DNS 2 :	0.0.0.0	
	LAN Settings :		
	IP Address :	192.168.0.99	
	Subnet Mask :	255.255.255.0	
	DHCP Server :	Disabled 🔻	
	DHCP IP Address Range		
	Lease Time :	0 (15-44640 Minutes)	

#### Figure 13 TCP/IP Settings (Router)

<u>WAN Settings</u>: Specify the Internet access method to Static IP, DHCP or PPPOE. Users must enter WAN IP Address, Subnet Mask, Gateway settings provided by your ISPs.

LAN Settings: When DHCP Server is disabled, users can specify IP address and subnet mask

for the CPE manually. Make sure the specified IP address is unique on your network in order to prevent IP conflict. When DHCP Server is enabled, users may specify DHCP IP Address Range, DHCP Subnet Mask, DHCP Gateway and Lease Time (15-44640 minutes). A DHCP relay agents is used to forward DHCP requests and replies between clients and servers when they are not on the same physical subnet. To enable the DHCP relay agent, check the "Enable DHCP Relay" checkbox and enter the IP address of the DHCP server.

### **Warning**:

- In AP mode, the IEEE 802.11a/n Wireless Outdoor CPE must establish connection with another wireless device before it is set to Router mode. To access the unit in Router mode via wired port, please type the WAN IP address to enter the web page for WAN is on wired port and LAN is on wireless port. Or, you can access device through the wireless device connected with the CPE.
- In wireless client mode, users can access the CPE via its wired port, for WAN is on wireless port and LAN is on wired port when device is set to Router mode.
- Bridge mode and AP Repeater mode are similar to AP mode when device is set to Router mode; WAN is on wired port and LAN is on wireless port. Thus users must also connect the CPE with another wireless device before it is set to Router mode and access the CPE via the connected wireless device.

# **Time Settings**

Compliant with NTP, the IEEE 802.11a/n Wireless Outdoor CPE is capable of keeping its time in complete accord with the Internet time. Make configuration in "**Time Settings**" from "**System**". To use this feature, check "**Enable NTP Client Update**" in advance.

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Basic Settings TCP/IP Settings Time Settings **	Time Settin You can synchronize Sys	stem Log's time stamp with	n a public time server over the Inter Day 18 Hr 10 Mn 5 Sec	met.
RADIUS Settings	Time Zone Select:	(GMT)Greenwich Mear	n Time: Dublin, Edinburgh, Lisbon, Lo	
Firewall Settings	<ul> <li>Enable NTP clie</li> <li>NTP server:</li> <li>Manual IP:</li> </ul>	I 192.5.41.41 - North A	merica 💌	

**Figure 14 Time Settings** 

#### Current Time

Display the present time in Yr, Mon, Day, Hr, Min and Sec.

#### • Time Zone Select

Select the time zone from the dropdown list.

#### • NTP Server

Select the time server from the "**NTP Server**" dropdown list or manually input the IP address of available time server into "**Manual IP**".

Hit "Apply" to save settings.

# **RADIUS Settings**

RADIUS (Remote Authentication Dial-In User Service) is a server for remote user authentication and accounting; playing a central role in the network in providing the capabilities of authenticating, authorizing, accounting, auditing, alarming and etc. It allows an organization to maintain user profiles in a central database that all remote servers can share.

Open "RADIUS Settings" in "System" to make RADIUS configuration.

	Global Connectivity			Logout
www.L-com.co	om			
Status	System	Wireless	Management	Tools
Basic Settings	RADIUS S	ettings		
TCP/IP Settings		the radius server settings.		
Time Settings	Authentication R	ADIUS Server		
RADIUS Settings »	IP Address:	0.0.0.0		
Firewall Settings	Port: Shared Secret:	1812		
	Global-Key every 3600 Se	Update conds Apply	Cancel	

#### Figure 15 RADIUS Settings

#### Authentication RADIUS Server

This is for RADIUS authentication. It can communicate with RADIUS through IP Address, Port and Shared Secret.

IP Address: Enter the IP address of the Radius Server;

Port: Enter the port number of the Radius Server;

<u>Shared Secret</u>: This secret, which is composed of no more than 31 characters, is shared by the AP and RADIUS during authentication.

<u>Global-Key Update</u>: Check this option and specify the time interval between two global-key updates.

## **Firewall Settings**

The firewall is a system or group of systems that enforce an access control policy between two networks. It may also be defined as a mechanism used to protect a trusted network from an un-trusted network. The IEEE 802.11a/n Wireless Outdoor CPE has capabilities of Source IP Filtering, Destination IP Filtering, Source Port Filtering, Destination Port Filtering, Port Forwarding as well as DMZ. This is available only under Router Mode.

**Source IP Filtering**: The source IP filtering gives users the ability to restrict certain types of data packets from your local network to Internet through the IEEE 802.11a/n Wireless Outdoor CPE. Use of such filters can be helpful in securing or restricting your local network.


Chapter 3 Basic Settings

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Basic Settings	Source II	P Filtering		
TCP/IP Settings		-	pes of data packets from your loca	al patwork to
Time Settings			can be helpful in securing or restr	
RADIUS Settings	Enable S	ource IP Filtering		
Firewall Settings	Local IP Addres Comment:	s:		
Src IP Filtering **				
Dst IP Filtering		Apply	Cancel	
Src Port Filtering		Local IP Address \$ Con	mment 🗢 Select Ed	Jit
Dst Port Filtering				
Port Forwarding		Delete Selected	Delete All Refresh	
DMZ Setting				

Figure 16 Source IP Filtering

**Destination IP Filtering**: The destination IP filtering gives you the ability to restrict the computers in LAN from accessing certain websites in WAN according to specified IP addresses. Check the "**Enable Destination IP Filtering**" checkbox and enter the IP address of the clients to be restricted. Hit **Apply** to make the setting take effect.

	Global Connectivity			Logout
www.L-com.c	om			
Status	System	Wireless	Management	Tools
Basic Settings	Destinatio	on IP Filtering		
TCP/IP Settings		-		
Time Settings	according to IP addr		ers in LAN from accessing certain we	
RADIUS Settings	Destination IP Ac	estination IP Filtering ddress:		
Firewall Settings	Comment :			
Src IP Filtering		Apply	Cancel	
Dst IP Filtering »				a
Src Port Filtering	De	stination IP Addres <b>e</b> Com	ament \$ Select Edit	
Dst Port Filtering		Delete Selected	Delete All Refresh	
Port Forwarding				
DMZ Setting				

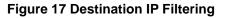

**Source Port Filtering**: The source port filtering enable you to restrict certain ports of data packets from your local network to Internet through the IEEE 802.11a/n Wireless Outdoor CPE. Use of such filters can be helpful in securing or restricting your local network.

	Global Connectivity			Logout
www.L-com.co	om			
Status	System	Wireless	Management	Tools
Basic Settings	0			
TCP/IP Settings	Source Po	ort Filtering		
			rts of data packets from your loca can be helpful in securing or restr	
Time Settings	network.	catchayr osc or such filters	can be holpful in securing of fest	ialing your loop
RADIUS Settings	Enable So	urce Port Filtering		
Firewall Settings	Port Range:	-		
	Protocol:	Both 🔻		
Src IP Filtering	Comment:			
Dst IP Filtering		Apply	Cancel	
Src Port Filtering »				
Dst Port Filtering	Source P	ort Range ♦ Protoco⊯	Comment 🗢 Select	Edit
Port Forwarding		Delete Selected	Delete All Refresh	
DMZ Setting				

Figure 18 Source Port Filtering

**Destination Port Filtering**: The destination port filtering enables you to restrict certain ports of data packets from your local network to Internet through the IEEE 802.11a/n Wireless Outdoor CPE. Use of such filters can be helpful in securing or restricting your local network.

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Basic Settings				
TCP/IP Settings		on Port Filteri	<b>ng</b> rts of data packets from your	local network to
Time Settings			can be helpful in securing or i	
RADIUS Settings	Enable Des	tination Port Filtering		
Firewall Settings	Port Range: Protocol:	Both 💌		
Src IP Filtering	Comment:			
Dst IP Filtering		Apply	Cancel	
Src Port Filtering				
Dst Port Filtering »	Dest Por	t Range ♦ Protoco⊭	Comment 🗢 Se	elect Edit
Port Forwarding		Delete Selected	Delete All Refresh	
DMZ Setting				

**Figure 19 Destination Port Filtering** 

**Port Forwarding**: The port forwarding allows you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings ne are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind the router's NAT firewall.

WWW.L-com.c	Global Connectivity °m			Logout
Status	System	Wireless	Management	Tools
Basic Settings	Dort For	wording		
TCP/IP Settings	Port Forv	-	lirect common network services to	a specific machine
Time Settings	behind the NAT fire	wall. These settings are only r	ecessary if you wish to host some network behind your Gateway's NA	sort of server like
RADIUS Settings	Enable P	ort Forwarding		
Firewall Settings	IP Address: Protocol:	Both 💌		
Src IP Filtering	Port Range:			
Dst IP Filtering	Comment:			
Src Port Filtering		Apply	Cancel	
Dst Port Filtering	Local IP /	Address Protocel Port Ra	nge‡ Comment ‡ Select	Edit
Port Forwarding »				
DMZ Setting		Delete Selected	Delete All Refresh	

**Figure 20 Port Forwarding** 

**DMZ**: A Demilitarized Zone is used to provide Internet services without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to the Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP (e-mail) servers and DNS servers.

WWW.L-com.c	Global Connectivity om	y		Logout
Status	System	Wireless	Management	Tools
Basic Settings	DMZ			
TCP/IP Settings		one is used to provide Internet s	ervices without sacrificing unauth	orized access to its
Time Settings	local private netw		tains devices accessible to Intern	
RADIUS Settings	Enable D			
Firewall Settings	DMZ Host IP A	ddress: 0.0.0.0		
Src IP Filtering		Apply	Cancel	

Figure 21 DMZ Settings

# **Basic Wireless Settings**

Open "Basic Settings" in "Wireless" as below to make basic wireless configuration.

WWW.L-com.com	Global Connectivity			Logout
Status	System Wir	eless	Management	Tools
Basic Settings »	Wireless Basic	Sottings		
Profile Settings		-	ss LAN clients which may connect to y	our
Advanced Settings			as well as wireless network parameters	
Access Control	Disable Wireless LAN	Interface		
WDS Settings	Wireless Mode: Wireless Network	AP 🔻	Site Survey	
	Name(SSID):	Wireless	(more)	
	Broadcast SSID:		Disabled	
	802.11 Mode:	802.11A/N 👻		
	HT protect:	🔘 Enabled 🛛 🍳 I	Disabled	
	Frequency/Channel:	5745MHz (149)	•	
	Extension Channel:	None 🔻		
	Channel Mode:	20 MHz 🔻		
	Antenna:	Internal (16 dBi	i) 🔘 SMA Connector	
	Maximum Output Power (per chain):	12	21 21 dBm	
	Data Rate:	Auto	•	
	Extension Channel Protection:	None 🔻		

#### **Figure 22 Basic Wireless Settings**

#### • Disable Wireless LAN Interface

Check this option to disable WLAN interface, then the wireless module of the CPE will stop working and no wireless device can connect to it.

#### Wireless Mode

Four operating modes are available on the IEEE 802.11a/n Wireless Outdoor CPE.

<u>AP</u>: The IEEE 802.11a/n Wireless Outdoor CPE establishes a wireless coverage and receives connectivity from other wireless devices.

<u>Wireless Client</u>: The IEEE 802.11a/n Wireless Outdoor CPE is able to connect to the AP and thus join the wireless network around it.

**Bridge**: The IEEE 802.11a/n Wireless Outdoor CPE establishes wireless connectivity with other IEEE 802.11a/n Wireless Outdoor CPEs by keying in remote MAC address. Please refer to the

"WDS Setting" for detailed configuration.

<u>AP Repeater</u>: The IEEE 802.11a/n Wireless Outdoor CPE servers as AP and Bridge concurrently. In other words, it can provide connectivity services for CPEs under Bridge mode.

#### • Wireless Network Name (SSID)

This wireless network name is shared among all associated devices in your wireless network. Keep it identical on all those devices. Note that the SSID is case-sensitive and cannot exceed 32 characters.

#### • 802.11 Mode

The IEEE 802.11a/n Wireless Outdoor CPE can communicate with wireless devices of 802.11n or 802.11a/n.

#### HT Protect

Enable HT (High Throughput) protect to ensure HT transmission with MAC mechanism. Under 802.11n mode, wireless client can be divided into HT STA and Non-HT STA, among which the one with HT protect enabled gets higher throughput.

#### • Frequency/Channel

Channel varies much as the available band differs from country to country. Select a proper operating channel in the drop-down list according to your situation

#### • Extension Channel

Only applicable to AP, AP Repeater, and 40MHz channel width) indicates the use of channel bonding that allows the IEEE 802.11a/n Wireless CPE to use two channels at once. Two options are available: Upper Channel and Lower Channel..

#### Channel Mode

4 levels are available: 40MHz, 20MHz, 10MHz and 5MHz. 40MHz can enhance data throughput, but it takes more bandwidth, thus it might cause potential interference.

#### Antenna

By default, the IEEE 802.11a/n Wireless Outdoor CPE uses its built-in antenna for directional transmission; however, if you prefer to use an external antenna for your case-dependent applications, you can switch from "Internal (16 dBi)" to "SMA Connector".

When **SMA Connector** is selected, an Antenna Gain bar will appear to allow you specify the gain of the external antenna. The antenna gain calculates the TX power back off needed to remain in compliance with regulations.

### Warning:

• You are able to choose "SMA Connector" only from the WEB UI after you have

physically installed the external antenna; otherwise, it might damage the unit itself.

#### • Maximum Output Power (per chain):

Specify the signal transmission power. The higher the output power is, the wider the signal can cover, but the power consumption will be greater accordingly.

#### Note:

- The output power here is counted from the RF single chain only not including the 16dBi internal antenna.
- The maximum output power will vary depending on the country selected in order to comply with the local regulation.
- You are able to choose "SMA Connector" only when you have well done installing the external antenna; otherwise, it might damage IEEE 802.11a/n Wireless CPE itself.

#### Data Rate

Usually "**Auto**" is preferred. Under this rate, the Wireless Outdoor CPE will automatically select the highest available rate to transmit. In some cases, however, like where there is no great demand for speed, you can have a relatively-low transmit rate for compromise of a long distance.

#### Extension Channel Protection Mode

This is to avoid conflict with other wireless network and boost the ability of your device to catch all legacy devices transmissions. However, it may decrease wireless network performance. Compared to CTS-Self; the transmission amount of CTS-RTS is much lower.

#### • Enable MAC Clone

Available in wireless client mode, it hides the MAC address of the CPE while displays the one of associated wireless client or the MAC address designated manually.

# **Site Survey**

Under wireless client mode, the IEEE 802.11a/n Wireless Outdoor CPE is able to perform site survey,

through which, information on the available access points will be detected.

Open "**Basic Settings**" in "**Wireless**", by clicking the "**Site Survey**" button beside "**Wireless Mode**" option, the wireless site survey window will pop up with a list of available wireless networks around. Select the AP you would like to connect and click "**Selected**" to establish connection.

ge provides t ient mode is		eless no	etwork. If any Access	Point or IBSS is found	l, you could	choose to co	onnect it n
Select	SSID	\$	Frequency/Chann <del>¢</del> I	MAC Address 🗢	Wireless Mode	Signal Strength	Securit
0	Wireless		5745MHz(149)	00:19:70:00:fb:c5	802.11A/N	-23	NONE



# **VAP Profile Settings**

Available in AP mode, the IEEE 802.11a/n Wireless Outdoor CPE allows up to 16 virtual SSIDs on a single BSSID and to configure different profile settings such as security and VLAN ID to each SSID. To create a virtual AP, you may check the **Enable** box of the profile and click on the profile (eg. Profile 2) to configure wireless and security settings. Hit **Apply** to active the profile.

		l ectivity				Lo	go
Status	Systen	1	Wireless	Managen	ient	Tools	-
Basic Settings Profile Settings »		P Profile	-				
Advanced Settings	#	Profile Name \$	SSID	\$ Security \$	Vlan ID	Enable	
Access Control	1	Profile1	Wireless	Open System	0	Always Enabled	
WDS Settings	2	Profile2	Wireless	Open System	0		
	3	Profile3	Wireless	Open System	0		
	4	Profile4	Wireless	Open System	0		
	5	Profile5	Wireless	Open System	0		
	6	Profile6	Wireless	Open System	0		
	7	Profile7	Wireless	Open System	0		
	8	Profile8	Wireless	Open System	0		
	9	Profile9	Wireless	Open System	0		
	10	Profile10	Wireless	Open System	0		
	11	Profile11	Wireless	Open System	0		
	12	Profile12	Wireless	Open System	0		

Figure 24 VAP Profile Settings

	Global Connectivity		Logout
Status	System V	Vireless Management	Tools
Basic Settings	VAP Profile1	Settings	
Profile Settings >>		-	
Advanced Settings	Basic Settings		
Access Control	Profile Name: Wireless Network Name	Profile1 Wireless	
WDS Settings	(SSID): Broadcast SSID:	Enabled  Disabled	
	Wireless Separation:	C Enabled Oisabled	
	WMM Support:	Enabled Disabled	
	Max. Station Num:	32 (0-32)	
	Security Settings		
	Network Authentication:	Open System 🔻	
	Data Encryption:	None 🔻	
	Key Type:	Hex 🔻	
	Default Tx Key:	Key 1 🔻	
	WEP Passphrase:	Generate Keys	
	Encryption Key 1:		

#### Figure 25 VAP Profile Settings

• Basic Setting

Profile Name: Name of the VAP profile

#### Wireless Network Name: Enter the virtual SSID for the VAP

**Broadcast SSID**: In AP mode, hiding network name is necessary when you are in a wireless environment that may have potential risk. By disabling broadcast SSID, the STA cannot scan and find the IEEE 802.11a/n Wireless Outdoor CPE, so that malicious attack by some illegal STA could be avoided.

<u>Wireless Separation</u>: Wireless separation is an ideal way to enhance the security of network transmission. Under the mode except wireless client mode, enable "Wireless Separation" can prevent the communication among associated wireless clients.

<u>WMM Support</u>: WMM (Wi-Fi Multimedia) is a subset of 802.11e. It allows wireless communication to define a priority limit on the basis of data type under AP mode only, thus those time-sensitive data, like video/audio data, may own a higher priority than common one. To enable WMM, the wireless client should also support it

<u>Max. Station Number:</u> By checking the "Max. Station Num" the CPE will only allow up to 32 wireless clients to associate with. By disabling the checkbox the CPE will allow up to 128 clients to connect, but it is likely to cause network congestion or poor performance.

#### • Security Setting:

To prevent unauthorized radios from accessing data transmitting over the connectivity, the IEEE 802.11a/n Wireless Outdoor CPE provides you with rock solid security settings. For detailed information please go to **Chapter 4 Wireless Security Setting**.

### **VLAN** Tab

If your network uses VLANs, you can assign one SSID to a VLAN, and client devices using the SSID are grouped in that VLAN.

To allow users on the VLAN to access the WEB page of the IEEE 802.11a/n Wireless Outdoor CPE, you need to enable **"Enable 802.1Q VLAN**" and assign a management VLAN ID for your device. Make sure the assigned management VLAN ID is identical to your network VLAN ID to avoid failures of accessing the Web page of the IEEE 802.11 a/n Wireless CPE.

www.L-com.c	om					Log
Status	System		Wireless	Manage	ment	Tools
	6	Profile6	Wireless	Open System	0	
Basic Settings	7	Profile7	Wireless	Open System	0	
Profile Settings »	8	Profile8	Wireless	Open System	0	
Advanced Settings	9	Profile9	Wireless	Open System	0	
Access Control	10	Profile10	Wireless	Open System	0	
WDS Settings	11	Profile11	Wireless	Open System	0	
wbs settings	12	Profile12	Wireless	Open System	0	
	13	Profile13	Wireless	Open System	0	
	14	Profile14	Wireless	Open System	0	
	15	Profile15	Wireless	Open System	0	
	16	Profile16	Wireless	Open System	0	

Figure 26 Management VLAN ID

# **Chapter 4 Advanced Settings**

## **Advanced Wireless Settings**

Open "Advanced Settings" in "Wireless" to make advanced wireless settings.

L-COFO www.L-com.c	Global Connectivity		Logout
Status	System Wir	eless	Management Tools
Basic Settings Profile Settings Advanced Settings »		technically ad	ettings vanced users who have a sufficient knowledge about nged unless you know what effect the changes will
Access Control WDS Settings	A-MPDU aggregation: A-MSDU aggregation: Short GI: RTS Threshold: Fragment Threshold: Beacon Interval: DTIM Interval: IGMP Snooping: RIFS: Link Integration: TDM Coordination: Space In Meter: Enable Traffic Shaping	<ul> <li>Enabled</li> <li>Enabled</li> <li>Enabled</li> <li>2347</li> <li>2346</li> <li>100</li> <li>1</li> <li>Enabled</li> <li>Enabled</li> <li>Enabled</li> <li>Enabled</li> <li>Enabled</li> <li>O</li> </ul>	<ul> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>(1-2347)</li> <li>(256-2346)</li> <li>(20-1024 ms)</li> <li>(1-255)</li> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>Disabled</li> <li>O Disabled</li> <li>(0-15000 m)</li> </ul>

#### Figure 27 Advanced Wireless Settings

#### A-MPDU/A-MSDU Aggregation

The data rate of your CPE except wireless client mode could be enhanced greatly with this option enabled; however, if your wireless clients don't support A-MPDU/A-MSDU aggregation, it is not recommended to enable it.

#### Short GI

Under 802.11n mode, enable it to obtain better data rate if there is no negative compatibility issue.

#### RTS Threshold

The IEEE 802.11a/n Wireless Outdoor CPE sends RTS (Request to Send) frames to certain receiving station and negotiates the sending of a data frame. After receiving an RTS, that STA responds with a CTS (Clear to Send) frame to acknowledge the right to start transmission. The

setting range is 0 to 2346 in byte. Setting it too low may result in poor network performance. Chapter 4 Advanced Settings Page 32 Leave it at its default of 2346 is recommended.

#### Fragmentation Length

Specify the maximum size in byte for a packet before data is fragmented into multiple packets. Setting it too low may result in poor network performance. Leave it at its default of 2346 is recommended.

#### Beacon Interval

Specify the frequency interval to broadcast packets. Enter a value between 20 and 1024.

#### DTIM Interval

DTIM, which stands for Delivery Traffic Indication Message, is contained in the data packets. It is for enhancing the wireless transmission efficiency. The default is set to 1. Enter a value between 1 and 255.

#### IGMP Snooping

Available in AP/Router mode, IGMP snooping is the process of listening to IGMP network traffic. By enabling IGMP snooping, the AP will listen to IGMP membership reports, queries and leave messages to identify the ports that are members of multicast groups. Multicast traffic will only be forwarded to ports identified as members of the specific multicast group or groups.

RIFS

RIFS (Reduced Interframe Spacing) is a means of reducing overhead and thereby increasing network efficiency.

#### Link Integration

Available under AP/Bridge/AP repeater mode, it monitors the connection on the Ethernet port by checking "**Enabled**". It can inform the associating wireless clients as soon as the disconnection occurs.

#### TDM Coordination

Stands for "Time-Division Multiplexing Technique", this resource reservation control mechanisms can avoid packet collisions and send the packets much more efficiently allowing for higher effective throughput rates. This function is only available in AP/CPE mode. It is highly recommended to enable TDM coordination when there are multiple CPEs needed to connect to the AP in your application.

#### LAN2LAN CPE

LAN2LAN CPE mode enables packet forwarding at layer 2 level. It is fully transparent for all the Chapter 4 Advanced Settings Page 33 Layer2 protocols.

#### • Space in Meter

To decrease the chances of data retransmission at long distance, the IEEE 802.11a/n Wireless Outdoor CPE can automatically adjust proper ACK timeout value by specifying distance of the two nodes.

#### Flow Control

It allows the administrator to specify the incoming and outgoing traffic limit by checking "**Enable Traffic Shaping**". This is only available in Router mode.

# Note:

 We strongly recommend you leave most advanced settings at their defaults except "Distance in Meters" adjusted the parameter for real distance; any modification on them may negatively impact the performance of your wireless network.

# **Wireless Security Settings**

To prevent unauthorized radios from accessing data transmitting over the connectivity, the IEEE 802.11a/n Wireless Outdoor CPE provides you with rock solid security settings.

### **Data Encryption and Authentication Settings**

Open "Profile Setting" in "Wireless" and enter "VAP Profile 1 Settings" as below.

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Basic Settings	VAP Profile1	Settinas		
Profile Settings »				
Advanced Settings	Basic Settings			
Access Control	Profile Name: Wireless Network Name	Profile1		
WDS Settings	(SSID):	Wireless		
	Broadcast SSID:		Disabled	
	Wireless Separation:		Disabled	
	WMM Support:		Disabled	
	Max. Station Num:	32 (0-3)	2)	
	Security Settings			
	Network Authentication:	Open System		
	Data Encryption:	Open System Shared Key		
	Key Type:	Legacy 802.1x WPA with Radius		
	Default Tx Key:	WPA2 with Radius WPA & WPA2 with		
	WEP Passphrase:	WPA-PSK	n Radius ate Keys	
	Encryption Key 1:	WPA2-PSK WPA-PSK&WPA2-P	PSK	

**Figure 28 Security Settings** 

#### Network Authentication

Open System: It allows any device to join the network without performing any security check.

**<u>Shared Key</u>**: Data encryption and key are required for wireless authentication. (not available in Bridge/AP Repeater mode)

**Legacy 802.1x**: Available in AP/Wireless Client mode, it provides the rights to access the wireless network and wired Ethernet. With User and PC identity, centralized authentication as well as dynamic key management, it controls the security risk of wireless network to the lowest. To serve the 802.1x, at least one EAP type should be supported by the RADIUS Server, AP and wireless client.

### Note:

 For first time users, if EAP type "TLS" is selected, you need to import valid user certificate given by CA in prior. To import user certificates, please refer to Chapter 5 Management/Certificate Settings for more details.

**WPA with RADIUS**: Available in AP/Wireless Client mode, with warrant (username, password and etc.) offered by user, this kind of authentication can be realized with specific RADIUS server. This is the common way to be adopted in large enterprise network.

<u>WPA2 with RADIUS</u>: Available in AP/Wireless Client mode, as a new version of WPA, only all the clients support WPA2, can it be available. If it is selected, AES encryption and RADIUS server is required.

<u>WPA&WPA2 with RADIUS</u>: Available in AP mode, it provides options of WPA (TKIP) or WPA2 (AES) for the client. If it is selected, the data encryption type must be TKIP + AES and the RADIUS server must be set.

**WPA-PSK**: It is a simplified WPA mode with no need for specific authentication server. In this so-called WPA Pre-Shared Key, all you have to do is just pre-enter a key in each WLAN node and this is the common way to be adopted in large and middle enterprise as well as residential network.

**WPA2-PSK**: As a new version of WPA, only all the clients support WPA2, can it be available. If it is selected, the data encryption can only be AES and the passphrase is required.

**WPA-PSK&WPA2-PSK**: Available in AP mode, it provides options of WPA (TKIP) or WPA2 (AES) encryption for the client. If it is selected, the data encryption can only be TKIP + AES and the passphrase is required.

#### Data Encryption

If data encryption is enabled, the key is required and only sharing the same key with other wireless devices can the communication be established.

None: Available only when the authentication type is open system.

64 bits WEP: It is made up of 10 hexadecimal numbers.

128 bits WEP: It is made up of 26 hexadecimal numbers.

152 bits WEP: It is made up of 32 hexadecimal numbers.

TKIP: Temporal Key Integrity Protocol, which is a kind of dynamic encryption, is co-used with

WPA-PSK, etc.

**AES**: Advanced Encryption Standard, it is usually co-used with WPA2-PSK, WPA, WPA2, etc.

TKIP + AES: It allows for backwards compatibility with devices using TKIP.

Note:

- We strongly recommend you enable wireless security on your network!
- Only setting the same Authentication, Data Encryption and Key in the CPE and other associated wireless devices, can the communication be established!

#### **Access Control**

The Access Control appoints the authority to wireless client on accessing the IEEE 802.11a/n Wireless Outdoor CPE, thus a further security mechanism is provided. This function is available only under AP mode.

Open "Access Control" in "Wireless" as below.

WWW.L-com.c	Global Connectivity om				Logout
Status	System	Wireless	Manag	ement	Tools
Basic Settings		<b>.</b>			
Profile Settings		Access Contr			
Advanced Settings	control list will be abl	d Listed', only those clients e to connect to your Access not be able to connect the A	Point, When 'Den		
Access Control »	Access Control M	Allow Listed	•		
WDS Settings	MAC Address:				
		Apply	Cancel		
			0-1	5.4%	
		MAC Address = 00:19:70:00:fb:c5	Select	Edit	
		Delete Selected	Delete All	Refresh	

Figure 29 Access Control

#### Access Control Mode

If you select "**Allow Listed**", only those clients whose wireless MAC addresses are in the access control list will be able to connect to your AP. While when "**Deny Listed**" is selected, those wireless clients on the list will not be able to connect the AP.

#### • MAC Address

Enter the MAC address of the wireless client that you would like to list into the access control list, click "**Apply**" then it will be added into the table at the bottom.

Delete Selected/All

Check the box before one or more MAC addresses of wireless client(s) that you would like to cancel, and click "**Delete Selected**" or "**Delete All**" to cancel that access control rule.

# **WDS Settings**

Extend the range of your network without having to use cables to link the bridges by using the Wireless Distribution System (WDS): Simply put, you can link the bridges wirelessly. Open "**WDS Settings**" in "**Wireless**" as below:

	Global Connectivity			Logout
Status	System Wire	eless	Management	Tools
Basic Settings	WDS Settings			
Profile Settings	Wireless Distribution System uses	s wireless media to (	communicate with other APs, like	e the Ethernet
Advanced Settings	does. To do this, you must set the which you want to communicate v in Bridge and AP Repeater mode.	ese APs in the same with in the table and	channel and set MAC addresses	s of other APs
Access Control	WDS Separation:	Enabled	Disabled	
WDS Settings »	Local MAC Address: Remote AP MAC Address 1: Remote AP MAC Address 2: Remote AP MAC Address 3: Remote AP MAC Address 4:	00:19:70:00:fb:c	i0	
		Apply	Cancel	

Figure 30 WDS Settings

Enter the MAC address of another CPE you wirelessly want to connect to into the appropriate field and click "**Apply**" to save settings.

Note:

- WDS Settings is available only under Bridge and AP Repeater Mode.
- Bridge uses the WDS protocol that is not defined as the standard thus compatibility issues between equipment from different vendors may arise. Moreover, Tree or

Star shape network topology should be used in all WDS use-cases (i.e. if AP2 and

AP3 are specified as the WDS peers of AP1, AP2 should not be specified as the WDS peer of AP3 and AP3 should not be specified as the WDS peer of AP2 in any case). Mesh and Ring network topologies are not supported by WDS and should be avoided in all the use cases.

# **Chapter 5 Management**

### **Remote Management**

The IEEE 802.11a/n Wireless Outdoor CPE provides a variety of remotes managements including Telnet, SNMP, FTP, SSH, HTTPS and exclusive WISE tool, making configuration more convenient and secure.

With **Normal** selected, Telnet, SNMP and FTP are activated as default remote management options. To use secure management tools such as SSH, HTTPS and WISE, please select "**Secure**". You may also choose "**Customized**" to enable any methods as desired.

	Global Connectivity	/		Logout
Status	System	Wireless	Management	Tools
Remote Settings » CoovaChilli Settings	Remote S	Settings witch services of remote console		
Firmware Upload	Management F		-	
Configuration File	Normal	Secure Customized		
Password Settings	Telnet	SNMP FTF		
Certificate Settings				

Figure 31 Remote Management

# **SNMP** Management

The IEEE 802.11a/n Wireless Outdoor CPE supports SNMP for convenient remote management. Open "**Remote Settings**" in "**Management**" shown below. Set the SNMP parameters and obtain MIB file before remote management.

	Global Connectivity			Logout		
Status	System	Wireless	Management	Tools		
Remote Settings »	Remote Se	ettings				
CoovaChilli Settings	Use this page to switc	h services of remote console.				
Firmware Upload	Management Priv	-				
Configuration File	Normal      Secure      Customized     Teinet      SNMP      FTP					
Password Settings	SSH Force HTTPS WISE					
Certificate Settings	SNMP Settings					
	Protocol Version: Server Port: Get Community: Set Community: Trap Destination: Trap Community: Configure SNMPv		Cancel			

Figure 32 SNMP Configuration

#### Protocol Version

Select the SNMP version, and keep it identical on the CPE and the SNMP manager. The IEEE 802.11a/n Wireless CPE supports SNMP v2/v3.

#### • Server Port

Change the server port for a service if needed; however you have to use the same port to use that service for remote management.

#### Get Community

Specify the password for the incoming Get and GetNext requests from the management station.

By default, it is set to public and allows all requests.

#### • Set Community

Specify the password for the incoming Set requests from the management station. By default, it is set to private.

#### Trap Destination

Specify the IP address of the station to send the SNMP traps to.

#### Trap Community

Specify the password sent with each trap to the manager. By default, it is set to public and allows

all requests.

### Configure SNMPv3 User Profile

For SNMP protocol version 3, you can click "**Configure SNMPv3 User Profile**" in blue to set the details of SNMPv3 user. Check "**Enable SNMPv3 Admin/User**" in advance and make further configuration.

	Global Connectivity om		Logout
Status	System Wi	reless Management	Tools
Remote Settings »	Configure SNMPv3 User F		
Firmware Upload	User Name:	SNMPv3Admin	
Configuration File	Password: Confirm Password:	••••••	
Password Settings	Access Type: Authentication Protocol:	Read/Write  MD5	
Certificate Settings	Privacy Protocol:	None 💌	
	Enable SNMPv3Use	-	
	User Name: Password:	SNMPv3User	
	Confirm Password:	•••••	
	Access Type:	Read Only 🔻	
	Authentication Protocol: Privacy Protocol :	MD5 V None V	
		Apply Cancel	

Figure 33 Configure SNMPv3 User Profile

#### • User Name

Specify a user name for the SNMPv3 administrator or user. Only the SNMP commands carrying this user name are allowed to access the CPE.

#### Password

Specify a password for the SNMPv3 administrator or user. Only the SNMP commands carrying this password are allowed to access the CPE.

#### Confirm Password

Input that password again to make sure it is your desired one.

#### • Access Type

Select "Read Only" or "Read and Write" accordingly.

#### Authentication Protocol

Select an authentication algorithm. SHA authentication is stronger than MD5 but is slower.

#### Privacy Protocol

Specify the encryption method for SNMP communication. None and DES are available.

None: No encryption is applied.

DES: Data Encryption Standard, it applies a 58-bit key to each 64-bit block of data.

## **Coovachilli Settings**

Coovachilli is a captive portal management which allows WLAN users to easily and securely access the Internet. Under Router mode, when Coovachilli is enabled, the IEEE 802.11b/g/n Wireless Access Point will force an HTTP client on a network to see a special web page (usually for authentication purposes) before using the Internet normally. At that time the browser is redirected to a web page which may require authentication. Captive portals are used at most Wi-Fi hotspots. Therefore, to use Coovachilli, you need to find Coovachilli service providers that have the additional services needed to make Coovahcilli work.

	Global Connectivity		Logout
Status	System Wi	reless Management	Tools
Remote Settings	CoovaChilli Se	ttings	
CoovaChilli Settings »	Use this page to set basic Coov	aChilli settings.	
Firmware Upload	Coovachilli Enable		
Configuration File	RADIUS Settings Primary RADIUS Server:	radius1.coova.net	
Password Settings	Secondary RADIUS Server:	radius2.coova.net	
Certificate Settings	RADIUS Auth Port:	1812	
	RADIUS Acct Port:	1813	
	RADIUS Shared Secret: RADIUS NASID:	your-radius-nasid	
	RADIUS Administrative-U	ser	
	RADIUS Admin Username:	your-admin-username	
	RADIUS Admin Password:	•••••	
	Captive Portal		
	UAM Portal URL:	https://www.coova.n	
	UAM Secret:	•••••	

Figure 34 Coovachilli Settings

#### **Radius Settings**

#### • Primary Radius Server

Enter the name or IP address of the primary radius server

#### • Secondary Radius Server

Enter the name or IP address of the primary radius server if any.

• Radius Auth Port:

Enter the port number for authentication

• Radius Acct Port:

Enter the port number for billing

• Radius Shared Secret:

Enter the secret key of the radius server

• Radius NAS ID:

Enter the name of the radius server if any

#### **Radius Administrative-User**

• Radius Admin Username:

Enter the username of the Radius Administrator

• Radius Admin Password:

Enter the password of the Radius Administrator

#### **Captive Portal**

• UAM Portal URL:

Enter the address of the UAM portal server

• UAM Secret:

Enter the secret password between the redirect URL and the Hotspot.

### **Upgrade Firmware**

Open "Firmware Upload" in "Management" and follow the steps below to upgrade firmware locally or remotely through the CPE's Web:

WWW.L-com.c	Global <u>Connectivit</u> y °m			Logout
Status	System	Wireless	Management	Tools
Remote Settings	Upgrade	Firmware		
CoovaChilli Settings	. •		to a new version. Please do no	t power off the
Firmware Upload »	device during the up	load because it may crash the		
Configuration File	Select File:			瀏覽…
Password Settings		Upload	Cancel	

#### Figure 35 Upgrade Firmware

- Click "Browse" to select the firmware file you would like to load;
- Click "Upload" to start the upload process;
- Wait a moment, the system will reboot after successful upgrade.

### Note:

• Do NOT cut the power off during upgrade, otherwise the system may crash!

# **Backup/ Retrieve Settings**

It is strongly recommended you back up configuration information in case of something unexpected. If tragedy hits your device, you may have an access to restore the important files by the backup. All these can be done by the local or remote computer.

Open "Configuration File" in "Management" as below:

L-COFN www.L-com.c	Global Connectivity om			Logout
Status	System	Wireless	Management	Tools
Remote Settings	Configura	tion File		
CoovaChilli Settings	-		file or load the settings from th	e file which was
Firmware Upload			rrent configuration to factory de	
Configuration File » Password Settings	Save Settings to F Load Settings fron		》 證 [] [] [] [] [] [] [] [] [] [] [] [] []	load
Certificate Settings	Reset Settings to Reboot The Devic			

#### Figure 36 Backup/Retrieve Settings

• Save Settings to File Chapter 5 Management By clicking "**Save**", a dialog box will pop up. Save it, then the configuration file **ap.cfg** will be generated and saved to your local computer.

• Load Setting from File

By clicking "**Browse**", a file selection menu will appear, select the file you want to load, like **ap.cfg**; Click "**Upload**" to load the file. After automatically rebooting, new settings are applied.

## **Restore Factory Default Settings**

The IEEE 802.11a/n Wireless Outdoor CPE provides two ways to restore the factory default settings:

#### • Restore factory default settings via Web

From "**Configuration File**", clicking "**Reset Settings to Default**" will eliminate all current settings and reboot your device, then default settings are applied.

WWW.L-com.c	Global Connectivity om			Logout
Status	System	Wireless	Management	Tools
Remote Settings CoovaChilli Settings	Configurat		file or load the settings from the	file which was
Firmware Upload			rent configuration to factory def	
Configuration File ** Password Settings Certificate Settings	Save Settings to File Load Settings from Reset Settings to D Reboot The Device:	File:	》覽····) Upic	ad

#### **Figure 37 Restore Settings**

#### Restore factory default settings via Reset Button

If software in the CPE is unexpectedly crashed and no longer reset the unit via Web, you may do hardware reset via the reset button. Press and hold the button for at least 5 seconds and then release it until the PWR LED gives a blink.

### Reboot

You can reboot your CPE from "Configuration File" in "Management" as below:

Click "**Reboot**" and hit "**Yes**" upon the appeared prompt to start reboot process. This takes a few

minutes.

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Remote Settings	Configura	tion File		
CoovaChilli Settings	-		file or load the settings from the	file which was
Firmware Upload			rent configuration to factory def	
Configuration File ** Password Settings	Save Settings to Fi	n File:	》覽···· Upic	ad
Certificate Settings	Reset Settings to I Reboot The Device			

Figure 38 Reboot

### Password

From "Password Settings" in "Management", you can change the password to manage your CPE.

Enter the new password respectively in "New Password" and "Confirm Password" fields; click

"Α	pp	oly"	to	save	settings.	
----	----	------	----	------	-----------	--

L-COP	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Remote Settings	Password	Settings		
CoovaChilli Settings		e password of this Access	Point.	
Firmware Upload	New Password:			
Configuration File	Confirm Password:			
Password Settings »		Apply	Cancel	

#### Figure 39 Password



• The password is case-sensitive and its length cannot exceed 19 characters!

# **Certificate Settings**

Under Client mode, when EAP-TLS is used, the RADIUS server must know which user certificates to

trust. The Server can trust all certificates issued by a given CA.

To import a user certificate, from Import User Certificates, click "**Browse**" and specify the location where the user certificate is placed. Click "**Import**".

WWW.L-com.c	Global Connectivity			Logo
Status	System	Wireless	Management	Tools
Remote Settings CoovaChilli Settings	Certificate S	ettings		
Firmware Upload	Use this page to upload/d		▼ Delete	
Configuration File	Import User Certificate	s:	瀏覽… Import	
Password Settings Certificate Settings				

**Figure 40 Certificate Settings** 

# **Chapter 6 Monitoring Tools**

# **System Log**

System log is used for recording events occurred on the CPE, including station connection, disconnection, system reboot and etc.

Open "System Log" in "Tools" as below.

	Global Connectivity	y			Logou
Status	System	Wire	ess	Management	Tools
System Log »	System	-			
Site Survey	Use this page to s	et remote log ser	ver and show the syst	em log.	
Ping Watchdog	Enable Re	emote Syslog	Server		
Data Rate Test	IP Address: Port:		0.0.0.0 514		
Antenna Alignment	1012	L			
Speed Test			Apply Cancel		
	#≑	Time 🗘	Source 🗢	Message	<b>\$</b>
	1 201	1-8-18 09:59:05	00:19:70:00:FC:60	WLAN service stopped.	
	2 201	1-8-18 09:59:06	00:19:70:00:FC:60	WLAN service started.	
	3 201	1-8-18 09:59:06	00:19:70:00:FC:60	WLAN service stopped.	
	4 201	1-8-18 09:59:06	00:19:70:00:FC:60	WLAN service started.	

Figure 41 System Log

Remote Syslog Server

Enable Remote Syslog: Enable System log to alert remote server.

IP Address: Specify the IP address of the remote server.

Port: Specify the port number of the remote server.

### **Site Survey**

Only available under Wireless Client mode, site survey allows you to scan all the APs within coverage so that you may select a clean channel for your device based on the scan result. Open "**Site Survey**" in "**Tools**" as below.

www.L-com.c	<u>Connectivity</u>				4
Status	System	Wireless	Management		Tools
System Log					
, ,	Wirologe	Sita Survay			
Site Survey »		Site Survey	twork. If any Access Point o	r IBSS is fou	nd, vou could
	This page provides t	-	twork. If any Access Point o e is enabled.	r IBSS is fou	nd, you could
Site Survey »	This page provides t	tool to scan the wireless ne	e is enabled. Wireles	s Signal	nd, you could Security
Site Survey » Ping Watchdog	This page provides t choose to connect it	cool to scan the wireless ne manually when client mod Frequency/Channel	e is enabled. MAC Address Wireles	Signal Strength	

Figure 42 Site Survey Tool

# **Ping Watch Dog**

If the link is somehow broken and cut off your ability the log in to the unit, the ping watchdog has a

chance to reboot due to loss of connectivity.

	Global Connectivity			Logout
www.L-com.co				
Status	System Wi	reless	Management	Tools
System Log	Ping Watchdog			
Site Survey	-	-	Watchdog. If the failcount of the Ping re	aches to a
Ping Watchdog »	specified value, the watchdog w	vill reboot the d	evice.	
Data Rate Test	Enable Ping Watchdog IP Address to Ping:	192.168.2	73.34	
Antenna Alignment	Ping Interval:	300	seconds	
Speed Test	Startup Delay: Failure Count To Reboot:	120 300	seconds(>120)	
		Appl	Cancel	

Figure 43 Ping Watchdog

Ping Watchdog

Enable Ping Watchdog: To activate ping watchdog, check this checkbox.

**IP Address to Ping**: Specify the IP address of the remote unit to ping.

**Ping Interval**: Specify the interval time to ping the remote unit.

Startup Delay: Specify the startup delay time to prevent reboot before the CPE is fully initialized.

Failure Count To Reboot: If the ping timeout packets reached the value, the CPE will reboot automatically.

### **Date Rate Test**

The Data Rate Test allows you test the current RSSI at each data rate between your IEEE 802.11a/n

Wireless CPEs.

www.L-com.	<sup>°</sup> Global <u>Connectivi</u> <sup>com</sup>	ty						
Status	System		Wi	reless		Manage	ment	Tools
System Log Site Survey	Data Ra			ality to the r	emote WDS	S node.		
Ping Watchdog				Index \$	N	IAC Address	÷	
Data Rate Test	>		٢	1	00:	:19:70:00:fc:60		
Antenna Alignment		_						
Speed Test	_			Refr	esh St	top		
				Pack	et Size	\$		
	Rate	\$	64 Bytes	256 Bytes <sup>◆</sup>	752 Bytes <sup>‡</sup>	1472 Bytets	Local RSS#	Remote RSSI ≑
	Auto		98%	82%	100%	100%	-33	-27
	6M		99%	100%	100%	99%	-33	-24
	9M		100%	100%	100%	100%	-33	-26
	12M		100%	100%	100%	100%	-33	-24
	18M		100%	100%	100%	100%	-34	-25
	TOM		10070					-27

Figure 44 Data Rate Test

# **Antenna Alignment**

Under WDS mode, when the bridges are not easily visible from the location where the dish will be installed, the antenna alignment tool can help you evaluate the position of the unit and adjust the angle of the antenna more precisely. Keep it that in real circumstances a lot of additional factors should be taken into account when your unit is installed. These factors include various obstacles (buildings, trees), the landscape, the altitude, transponder orientation, polarization, etc.

To use the tool, select the desired remote WDS bridge and click "Start", the web page will display the measured signal strength, RSSI and transmit/receive packets. If the signal quality is not quite good, try to adjust the antenna and see if the quality improves or not.

	Blobal Connectivity m			Logout
Status	System	Wireless	Management	Tools
System Log Site Survey	Antenna Alig		<i>.</i>	
Ping Watchdog		Index \$	MAC Address 🔶	
Data Rate Test	٢	1	00:19:70:00:fb:c5	
Antenna Alignment »				
Speed Test		Refres	h Stop	
	Signal Strength: Current RSSI: Transmit Packets: Receive Packets:	-27 dBm -27 dBm 1872 9252		

Figure 45 Antenna Alignment

# **Speed Test**

The speed test is to monitor the current data transmission (TX) and data reception (RX) rate with the remote 802.11an Wireless Outdoor CPE. Enter the IP address of the remote CPE, type in the user name/password and click "**Test**". The result will display in the bottom **STATUS**. You may test single TX/RX or bi-direction.

	Global Connectivity			Logout					
www.L-com.co									
Status	System	Wireless	Management	Tools					
System Log	Speed Tes	st.							
Site Survey	-								
Ping Watchdog			een this device and another termi	nai.					
Data Rate Test	Destination IP: User Name:	192.168.1.2 admin							
Antenna Alignment	Password:	•••••							
Speed Test »	Direction:	Transmit 🔻	]						
	Speed Test :: Test STATUS: Test complete.								
	TEST RESULT RX: N/A TX: 12.0 Mbits/sec								

Figure 46 Speed Test

# **Chapter 7 Status**

### **View Basic Information**

Open "Information" in "Status" to check the basic information of the CPE, which is read only. Information includes system information, LAN settings, wireless setting and interface status. Click "Refresh" at the bottom to have the real-time information.

	Global Connectivity			Logout
Status	System	Wireless	Management	Tools
Information »	Information			
Connections		ent status and some basic s	ettings of the device	
Statistics	System Information	sint status and some basic s	ettings of the device.	
ARP Table	Device Name	ap00fc60		
Bridge Table	MAC Address Country/Region	00:19:70:00:fe United States		
DHCP Clients	Firmware Version	3.0.4(LC)1		
Network Activities	LAN Settings IP Address Subnet Mask Gateway IP Address MAC Address	192.168.1.1 255.255.255. 0.0.0.0 00:19:70:00:fc	-	
	Wireless Settings			
	Operation Mode Wireless Mode Encryption ACK Timeout	Bridge 802.11A/N Open System 27 us	1	
	WMM Enable Noise Floor	On -96 dBm		

**Figure 47 Basic Information** 

### **View Association List**

Open "**Connections**" in "**Status**" to check the information of associated wireless devices such as MAC address, signal strength, connection time, IP address, etc. All is read only. Click "**Refresh**" at the bottom to update the current association list.

www.L-com.	Global Connect	tivity					L
Status	System	W	ireless		Managemen	it 👘	Tool
Connections × Statistics	This table		ress,IP Addre		RSSI for each associate		
J			ress, IP Addres	ss and F Noise Floor	SSI for each associate	ed device(s). Last IP	Action
Statistics	This table	shows the MAC Add	ress, IP Addres	Noise			Action
Statistics ARP Table	This table VAP Index	shows the MAC Add	Signal Strength	Noise <sub>↓</sub> Floor	Connection Time 2011-8-18 10:37:29	Last IP	

#### **Figure 48 Connection**

By clicking on the MAC address of the selected device on the web you may see more details including device name, connection time, signal strength, noise floor, ACK timeout, link quality, IP information, current data rate, current TX/RX packets.

### Association Node Details

The details information of association node.

MAC Address	00:19:70:00:fb:c5	Negotiated	Last Signal
Device Name	ap00fbc5	Rate	-
Connect Time	2011-8-18 10:37:29	6M	-20 dBm
Signal Strength	-23 dBm	6.5M	-28 dBm
Noise Floor	-96 dBm	9M	-14 dBm
ACK Timeout	27	12M	-22 dBm
Link Quality	80%	13M	-24 dBm
Last IP	192,168,1,2	18M	-15 dBm
TX/RX Rate	104/104 Mbps	19.5M	-21 dBm
TX/RX Packets	15497/14625	24M	-22 dBm
Bytes Transmitted	16371769	26M	-30 dBm
Bytes Received	5597991	36M	-21 dBm
Dytes Received	3337331	39M	-12 dBm
		48M	-29 dBm
		52M	-22 dBm
		54M	-23 dBm

### **View Network Flow Statistics**

Open "Flow Statistics" in "Status" to check the data packets received on and transmitted from the

58.5M -17 dBm

Chapter 7 Status

wireless and Ethernet ports. Click "Refresh" to view current statistics.

	Connect	IVITY			Log
www.L-com.c	com				
Status	System	Wirele	55	Management	Tools
Information					
Connections	Statis	stics			
Connections			for transmission and	reception regarding to wireles	s and
Statistics >>	ethernet ne	tworks.			
ARP Table	Poll	Interval: 5	(0-65534) sec	Set Interval Stop	
	-		Received	Transmitted	
Bridge Table		Wireless	noontu		
DHCP Clients		Unicast Packets	14310	14603	
	-	Broadcast Packets	37	234	
Network Activities		Multicast Packets	306	372	
		Total Packets	14653	15209	
		Total Bytes	5599655	15962900	
		Ethernet 1			
		Total Packets	6009	7893	
		Total Bytes	688555	5790180	
		Ethernet 2			
		Total Packets	0	0	
			0	0	

#### **Figure 49 Network Flow Statistics**

#### Poll Interval

Specify the refresh time interval in the box beside "**Poll Interval**" and click "**Set Interval**" to save settings. "**Stop**" helps to stop the auto refresh of network flow statistics.

### **View ARP Table**

Open "ARP Table" in "Status" as below. Click "Refresh" to view current table.

	Global Connectivit <sup>y</sup> om	y			Logo
Status	System	Wireless	Managem	ent	Tools
Information	ARP Tab	le			
Connections	This table shows .	ARP table.			
Statistics		IP Address 🔶	MAC Address 🔶	Interface \$	
ARP Table »		192.168.1.88	20:6A:8A:2F:D5:BE	br0	
Bridge Table		192.168.1.2	00:19:70:00:FB:C5	br0	
DHCP Clients			Refresh		
			Kerresn		

# **View Bridge Table**

Open "Bridge Table" in "Status" as below. Click "Refresh" to view current connected status.

www.L-com.co	Global Connectivity					Log
Status	System	Wireless	Mai	nag	ement	Tools
Information						
Connections	Bridge Ta					
Statistics	This table shows brid	ige table.				
		MAC Address	\$ Interface	\$	Ageing Timer(s)\$	
ARP Table		00:19:70:00:fc:60	Bridge			
Bridge Table »		20:6a:8a:2f:d5:be	LAN		0.00	
bridge Table 3		00:19:70:00:fb:c5	LAN		1.17	
DHCP Clients						
Network Activities			Refresh			

Figure 51 Bridge Table

## **View Active DHCP Client Table**

Open "**DHCP Client**" in "**Status**" as below to check the assigned IP address, MAC address and time expired for each DHCP leased client. Click "**Refresh**" to view current table.

	Global Connectivit	у				Log		
Status	System	Wireless	M	anag	ement	Tools		
Information								
Connections		DHCP Clients This table shows the assigned IP address, MAC address and time expired for each DHCP leased client.						
Statistics		IP Address \$	MAC Address					
ARP Table		None	MAC Address	\$	Time Expired(s)\$			
Bridge Table								
DHCP Clients »			Refresh					
Network Activities								



# **View Network Activities**

The network activities allows you to monitor the current Wireless and Ethernet TX/RX data traffic in graphical and numerical form on the Web of the Skyport. The chart scale and throughput dimension (Bps, Kbps, Mbps) changes dynamically according to the mean throughput value. Throughput statistics can be updated manually using the "**Refresh**" button.

	Global Connectivity	Logout
Status	System Wireless Management	Tools
Information	Network Activities	
Connections	This page shows Throughput information of wireless and ethernet networks.	
Statistics	Wireless	
ARP Table	1.8 1.6 nx 229b/s 1.4 to 0b/s	
Bridge Table	12	
DHCP Clients	0.8 0.6	
Network Activities »	0.4 0.2 kb/s 0	
	Ethernet 1	

Figure 53 Network Activities


# **Chapter 8 Troubleshooting**

This chapter provides troubleshooting procedures for basic problems with the CPE. For warranty assistance, contact your service provider or distributor for the process.

#### Q 1. How to know the MAC address of the IEEE 802.11a/n Wireless Outdoor CPE?

MAC Address distinguishes itself by the unique identity among network devices. There are two ways available to know it.

• Each device has a label posted with the MAC address. Please refer below.

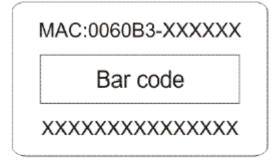

#### Figure 54 MAC Address

 On the CPE's Web-based management interface, you can view the MAC Address from "<u>View</u> <u>Basic Information</u>".

#### Q 2. What if I would like to reset the unit to default settings?

You may restore factory default settings in "Configuration File" from "Management".

#### Q 3. What if I would like to backup and retrieve my configuration settings?

You may do the backup by generating a configuration file or retrieve the settings you have backed up previously in "**Configuration File**" from "**Management**".

#### Q 4. What if I cannot access the Web-based management interface?

Please check the followings:

- Check whether the power supply is OK; Try to power on the unit again.
- Check whether the IP address of PC is correct (in the same network segment as the unit);
- Login the unit via other browsers such as Firefox.
- Hardware reset the unit.

# Q 5. In wireless client mode, what if the wireless connection is not stable after associating with an AP?

- Since the CPE comes with a built-in directional antenna, it is recommended make it face to the direction where the AP is to get the best connection quality.
- In addition, you can start "Site Survey" in "Wireless Basic Settings" to check the signal strength. If it is weak or unstable (The smaller the number is, the weaker the signal strength is.), please join other available AP for better connection.

# Appendix A. ASCII

WEP can be configured with a 64-bit, 128-bit or 152-bit Shared Key (hexadecimal number or ACSII).

As defined, hexadecimal number is represented by 0-9, A-F or a-f; ACSII is represented by 0-9, A-F,

a-f or punctuation. Each one consists of two-digit hexadecimal.

ASCII	Hex	ASCII	Hex	ASCII	Hex	ASCII	Hex
Character	Equivalent	Character	Equivalent	Character	Equivalent	Character	Equivalent
!	21	9	39	Q	51	i	69
"	22	:	ЗA	R	52	j	6A
#	23	;	3B	S	53	k	6B
\$	24	<	3C	Т	54	I	6C
%	25	=	3D	U	55	m	6D
&	26	>	3E	V	56	n	6E
6	27	?	3F	W	57	0	6F
(	28	@	40	Х	58	р	70
)	29	А	41	Y	59	q	71
*	2A	В	42	Z	5A	r	72
+	2B	С	43	[	5B	S	73
,	2C	D	44	١	5C	t	74
-	2D	E	45	]	5D	u	75
	2E	F	46	۸	5E	v	76
/	2F	G	47	_	5F	w	77
0	30	Н	48	`	60	х	78
1	31	1	49	а	61	у	79
2	32	J	4A	b	62	z	7A
3	33	К	4B	С	63	{	7B
4	34	L	4C	d	64		7C
5	35	М	4D	е	65	}	7D
6	36	Ν	4E	f	66	~	7E
7	37	0	4F	g	67		
8	38	Р	50	h	68		

#### Table 2 ACSII

# Appendix B. SSH Settings

#### **Table 3 SSH Settings**

get	set	del	Keyword				Descriptions
$\checkmark$	$\checkmark$		time				time setting
$\checkmark$				-now			current system time
$\checkmark$	$\checkmark$			-zone			time zone
$\checkmark$	$\checkmark$			-NTPUpdate			NTP Update
$\checkmark$	$\checkmark$			-servertype			server type
$\checkmark$	$\checkmark$			-IP			-IP
$\checkmark$	$\checkmark$			-Manual IP			-Manual IP
$\checkmark$	$\checkmark$		system				system setting
$\checkmark$				-swversion			system firmware version
$\checkmark$	$\checkmark$			-systemmac			system MAC address
$\checkmark$	$\checkmark$			-devname			system name
$\checkmark$	$\checkmark$			-country			country/region
	$\checkmark$			-ethernet1DataRate			ether port 1 data rate
$\checkmark$	$\checkmark$			-ethernet2DataRate			ether port 2 data rate
$\checkmark$	$\checkmark$			-macclone			mac clone enable
$\checkmark$	$\checkmark$			-clonedmac			cloned mac address
$\checkmark$	$\checkmark$			-poepower			secondary RJ45 power
$\checkmark$	$\checkmark$			-stp			Spanning Tree
$\checkmark$	$\checkmark$			-stpForwardDelay			STP forward delay
$\checkmark$	$\checkmark$			-gpslatitude			gps latitude
$\checkmark$	$\checkmark$			-gpslongitude			gps longitude
$\checkmark$	$\checkmark$		ipset				
./	$\checkmark$						network mode select
$\checkmark$	N			-networkmode			(bridge or router)
$\checkmark$	$\checkmark$			-bridge			bridge mode ip settings
$\checkmark$					-iptype		fixed/dynamical ip(dhcp
v	v				-іртуре		client)
$\checkmark$	$\checkmark$				-ipaddr		ip address
$\checkmark$	$\checkmark$				-netmask		subnet mask
$\checkmark$	$\checkmark$				-gateway		gateway ip address
$\checkmark$	$\checkmark$				-dns1		dns1
$\checkmark$	$\checkmark$				-dns2		dns2
$\checkmark$	$\checkmark$			-router			router mode ip settings
$\checkmark$	$\checkmark$				-wan		wan ip settings
$\checkmark$	$\checkmark$					-accesstyp e	router mode access type
$\checkmark$						-staticipadd r	static ip address

$\checkmark$	$\checkmark$				-staticnetm	static subnet mask
-					ask	
$\checkmark$	$\checkmark$				-staticgate way	static gateway ip address
$\checkmark$	$\checkmark$				-staticdns1	static dns1
$\checkmark$	$\checkmark$				-staticdns2	static dns2
	,				-dhcpclient	
$\checkmark$	$\checkmark$				hostname	dhcp client hostname
1					-pppoecon	
V					nectstatus	pppoe connect status
1					-pppoelocal	obtains IP from pppoe
$\checkmark$					ip	server
1	,				-pppoestati	
$\checkmark$	$\checkmark$				cipaddr	pppoe static ip address
J	1				-pppoeuser	
$\checkmark$	$\checkmark$				name	pppoe username
					-pppoepas	
$\checkmark$	$\checkmark$				sword	pppoe password
					-pppoeserv	
$\checkmark$	$\checkmark$				ername	pppoe server name
					-pppoecon	
$\checkmark$	$\checkmark$				nectmode	pppoe connect mode
$\checkmark$	$\checkmark$				-pppoeidleti	pppoe idle time
				-lan	me	lan ip settings
					-ipaddr	lan ip address
V	v √				-netmask	lan subnet mask
N	v					
$\checkmark$	$\checkmark$				-dhcpserve renable	dhcp server enable
1	,				-dhcpserve	
$\checkmark$	$\checkmark$				ripstart	dhcp server ip start
,	,				-dhcpserve	
$\checkmark$	$\checkmark$				ripend	dhcp server ip end
,	,				-dhcpserve	
$\checkmark$	$\checkmark$				rleasetime	dhcp server leasetime
					-dhcprelay	
$\checkmark$	$\checkmark$				enable	dhcp relay enable
					-dhcpserve	
$\checkmark$	$\checkmark$				rip	dhcp server ip
$\checkmark$	$\checkmark$	wlan				wlan setting
$\checkmark$	$\checkmark$		-operationmode			operation mode
$\checkmark$	$\checkmark$		-ssid			wireless network name
$\checkmark$	$\checkmark$		-ssidhided			wireless SSID broadcast
	$\checkmark$		-radio			radio switch
			-wirelessmode			wireless mode
		nendix B_SSH Se		1	1	Page 62

$\checkmark$	$\checkmark$				
$\checkmark$	$\checkmark$		-HTprotect		HT protect
					-wireless frequency/channel
$\checkmark$	$\checkmark$		-frequency/channel		(depends on country and
					wireless mode)
$\checkmark$	$\checkmark$		-power	power	
$\checkmark$	$\checkmark$		-rate		rate
$\checkmark$	$\checkmark$		-antenna		antenna type
$\checkmark$	$\checkmark$		-antennaGain		antenna gain setings
$\checkmark$	$\checkmark$		-wmm		wmm settings
	$\checkmark$		-Isolation		wireless isolate communication between clients
$\checkmark$	$\checkmark$		-maxStaNum		max sta connection number
$\checkmark$	$\checkmark$		-StaNumLmt		Whether manually limit the number o f station
$\checkmark$	$\checkmark$		-spaceInMeter		wireless bwa space in meter setting
$\checkmark$	$\checkmark$		-LinkIntegration		wireless bwa coverage class setting
$\checkmark$	$\checkmark$		-channelMode		channel mode
$\checkmark$	$\checkmark$		-channelOffset		channel offset of 40MHz
$\checkmark$	$\checkmark$		-extension		extension
$\checkmark$	$\checkmark$		-A-MPDU		A-MPDU
$\checkmark$	$\checkmark$		-A-MSDU		A-MSDU
$\checkmark$	$\checkmark$		-shortGI		short GI
$\checkmark$	$\checkmark$		-RIFS		rifs
$\checkmark$	$\checkmark$		-RTS		RTS
$\checkmark$	$\checkmark$		-fragment		fragment
$\checkmark$	$\checkmark$		-beacon		beacon
$\checkmark$	$\checkmark$		-DTIM		DTIM
$\checkmark$	$\checkmark$		-preamble		preamble
$\checkmark$	$\checkmark$		-IGMP		IGMP
$\checkmark$	$\checkmark$		-stdm		stdm setting
$\checkmark$	$\checkmark$		-среТуре		CPE Type
	$\checkmark$		-authentication		wireless authentication type
$\checkmark$	$\checkmark$		-encryption		wireless data encryption
$\checkmark$	$\checkmark$	$\checkmark$	-key		wireless wep key setting
$\checkmark$	$\checkmark$			-type	wireless wep key type
$\checkmark$	$\checkmark$			-default	wireless wep default key index
				-1	wireless wep key 1

	$\checkmark$	$\checkmark$			-2	wireless wep key 2
$\checkmark$	$\checkmark$	$\checkmark$			-3	wireless wep key 3
$\checkmark$	$\checkmark$	$\checkmark$			-4	wireless wep key 4
$\checkmark$	$\checkmark$			-wpa		wireless WPA setting
,	,	,				wireless pre-shared key
$\checkmark$	$\checkmark$	$\checkmark$			-psk	(PSK) for WPA-PSK
,	,					wireless WPA re-auth
$\checkmark$	$\checkmark$				-reauthtime	period (in seconds)
,	,					enable wireless WPA
V	$\checkmark$				-keyupdate	global key update
$\checkmark$	$\checkmark$	$\checkmark$		-eap		WPA EAP setting
$\checkmark$	$\checkmark$	$\checkmark$			-eaptype	WPA EAP Type
,	,	,			-innereapty	
N	$\checkmark$	$\checkmark$			pe	WPA inner EAP Type
$\checkmark$					-username	WPA user name
$\checkmark$	$\checkmark$				-loginname	WPA login name
$\checkmark$					-password	WPA password
$\checkmark$					-usercert	WPA cert file
,	,				-privatekey	
$\checkmark$	$\checkmark$				password	WPA private key password
$\checkmark$	$\checkmark$			-trafficshaping		traffic shaping
$\checkmark$	$\checkmark$				-enable	enable Traffic Shaping
$\checkmark$					-downlimit	Incoming Traffic Limit
$\checkmark$	$\checkmark$				-downburst	Incoming Traffic Burst
$\checkmark$	$\checkmark$				-uplimit	Outgoing Traffic Limit
$\checkmark$	$\checkmark$				-upburst	Outgoing Traffic Burst
$\checkmark$	$\checkmark$			-wdsMac		WDS Remote Mac
$\checkmark$					-local	local macAddr
$\checkmark$	$\checkmark$				-remote1	remote macAddr1
$\checkmark$	$\checkmark$				-remote2	remote macAddr2
$\checkmark$	$\checkmark$				-remote3	remote macAddr3
$\checkmark$	$\checkmark$				-remote4	remote macAddr4
$\checkmark$	$\checkmark$			-wdsSeparation		WDS Separation
,						list of associated wireless
V				-association		clients
,	,		vapprofile			
$\checkmark$	$\checkmark$		1(2, 3,etc)			VAP setting
$\checkmark$	$\checkmark$			-active		on/off this vap
$\checkmark$	$\checkmark$	1	1	-profileName		Name of profile
$\checkmark$	$\checkmark$	1	1	-ssid		ssid of this vap
1	,	1				Broadcast SSID Enable or
V	$\checkmark$			-ssidhided		Disable
$\checkmark$	$\checkmark$	1		-vlanID		vlanID of this vap
$\checkmark$	$\checkmark$			-Isolation		wireless separation

$\checkmark$	$\checkmark$		-wmm		WMM Support
$\checkmark$	$\checkmark$		-MaxStaNum		Max Station Number
1	1				Whether manually limit the
	$\checkmark$		-StaNumLmt		number o f station
I	1		- 0 C C		wireless authentication
	$\checkmark$		-authentication		type
$\checkmark$	$\checkmark$		-encryption		wireless data encryption
1	1				wireless wep default key
	$\checkmark$		-default		index
$\checkmark$	$\checkmark$		-wpa		wireless WPA setting
I					list of associated wireless
			-association		clients
	$\checkmark$	vlan			vlan setting
$\checkmark$	$\checkmark$		-active		enable 802.1Q VLAN
$\checkmark$	$\checkmark$		-manageID		Management VLAN ID
	$\checkmark$	radius			radius setting
$\checkmark$	$\checkmark$		-IPaddr		IP address
	$\checkmark$		-port		port
	$\checkmark$		-shared secret		Shared Secret
	$\checkmark$	firewall			firewall setting
	$\checkmark$		-srcipfilter		source ip filter settings
	$\checkmark$			-enable	source ip filter enable
	$\checkmark$			-addrule	add a source ip filter rule
	$\checkmark$			-delerule	delete source ip filter rule
,					show source ip filter rule
$\checkmark$				-rulelist	lists
$\checkmark$	$\checkmark$		-destipfilter		destination ip filter settings
$\checkmark$	$\checkmark$			-enable	destination ip filter enable
1	1				add a destination ip filter
$\checkmark$	$\checkmark$			-addrule	rule
	1				delete destination ip filter
	$\checkmark$			-delerule	rule
1					show destination ip filter
				-rulelist	rule lists
$\checkmark$	$\checkmark$		-srcportfilter		source port filter settings
$\checkmark$	$\checkmark$			-enable	source port filter enable
				oddrula	add a source port filter
	N			-addrule	rule
				dolorulo	delete source port filter
	$\checkmark$			-delerule	rule
				mula l'at	show source port filter rule
				-rulelist	lists
.1					destination port filter
	$\checkmark$		-destportfilter		settings
$\checkmark$	$\checkmark$			-enable	destination port filter
•		endix B. SSH Sett	ings	Gradic	Page 65

	$\checkmark$			-password	password
$\checkmark$	$\checkmark$			-name	name
				-on	Enable SNMPv3User
√			-v3User		-v3User
				-Privacy	privacy protocol
1	V			-authentica tion	Authentication Protocol
$\checkmark$	$\checkmark$			-accessTyp e	access type
	$\checkmark$			-password	password
$\checkmark$	$\checkmark$			-name	name
$\checkmark$	$\checkmark$			-on	Enable SNMPv3Admin
$\checkmark$	$\checkmark$		-v3Admin		v3Admin
$\checkmark$	$\checkmark$		-trapcommunity		Trap Community
$\checkmark$	$\checkmark$		-trapdestination		Trap Destination
$\checkmark$	$\checkmark$		-setCommunity		SNMP Write Community
$\checkmark$	$\checkmark$		-getCommunity		SNMP Read Community
$\checkmark$	$\checkmark$		-port		Server Port
$\checkmark$	$\checkmark$		-version		Protocol Version
$\checkmark$	$\checkmark$	snmp			SNMP setting
$\checkmark$	$\checkmark$		-wise		enable wise tools
$\checkmark$	$\checkmark$		-forcehttps		force https
$\checkmark$	$\checkmark$		-ssh		enable ssh
$\checkmark$	$\checkmark$		-ftp		enable ftp
$\checkmark$	$\checkmark$		-snmp		enable snmp
$\checkmark$	$\checkmark$		-telnet		enable telnet
$\checkmark$	$\checkmark$		-privacy		radius IP address
$\checkmark$	$\checkmark$	remote			remote management setting
$\checkmark$	$\checkmark$		-dmzipaddr		dmz ip address
			-dmzenable		dmz enable
√				-rulelist	lists
	N I				show port forward rule
V	N √			-addrule -delerule	add a port forward rule delete port forward rule
v √	N √				
v √			-portiorward	-enable	port forward enable
, √			-portforward		rule listsport forward settings
$\checkmark$				-rulelist	show destination port filter
	$\checkmark$			-delerule	delete destination port filter rule
$\checkmark$	$\checkmark$			-addrule	add a destination port filter rule

0 Appendix B. SSH Settings

$\checkmark$	$\checkmark$				-accessTyp e		access type	
$\checkmark$	$\checkmark$				-authentica tion		Authentication Protocol	
					-Privacy		privacy protocol	
			coovachilli				CoovaChilli setting	
	√			-coovaChilliEnable			Coovachilli Enable	
•	•			-primaryRadiusServ				
	$\checkmark$			er			Primary RADIUS Server	
.1	./			-secondaryRadiusSe			Secondary RADIUS	
	$\checkmark$			rver			Server	
,	,						RADIUS Authentication	
$\checkmark$	$\checkmark$			-radiusAuthPort			Port	
				-radiusAcctPort			RADIUS Accounting Port	
				-radiusSharedSecret			RADIUS Shared Secret	
				-radiusNasid			RADIUS Nasid	
•				-radiusAdminUserna				
$\checkmark$	$\checkmark$			me			RADIUS Admin Username	
				-radiusAdminPassw				
$\checkmark$	$\checkmark$			ord			RADIUS Admin Password	
				-uamPortalUrl			UAM Portal URL	
v √	v √			-uamSecret			UAM Secret	
v √	v √		avalag	-uamoeciet			syslog	
	v √		syslog	-client				
							enable syslog client	
1	V		-	-ipaddr			syslog server IP address	
				-port			syslog server port number	
	V			-clear			syslog clear	
	V		pingwdg				ping watchdog	
$\checkmark$	$\checkmark$			-enable			enable	
$\checkmark$	$\checkmark$			-interval			interval	
$\checkmark$	$\checkmark$			-startdelay			startup delay	
$\checkmark$	$\checkmark$			-failcount			failure count	
$\checkmark$	$\checkmark$			-ip			ip address	
$\checkmark$	$\checkmark$	$\checkmark$	acl				access control	
	$\checkmark$			-mode			enable wireless access	
•							control (ACL)	
		$\checkmark$		-delete			delete a local ACL	
	_						address	
$\checkmark$		$\checkmark$		-list			delete or display all local ACL address	
	1						add mac address to	
	$\checkmark$			-MacAddr			Current Access Control List	
$\checkmark$			statistics				statistics	
$\checkmark$				-Wireless			Wireless LAN	
			x B. SSH Settin	1	I	l	Page 67	

$\checkmark$				-Ethernet		Ethernet LAN
$\checkmark$		$\checkmark$	log list			syslog list
	$\checkmark$		password			system password
	$\checkmark$		reset			restore factory
	$\checkmark$		reboot			reboot system
	$\checkmark$		exit			logout from CLI

## **Appendix C. GPL Declamation**

#### PUBLIC SOFTWARE DECLAMATION

In the software we delivered, there may contains some public software, if it is, please read below carefully:

#### 1. Definition

"**Public Software**", when applicable, shall mean that portion of the Licensed Software, in source code form, set forth in the below Table, and provided under the terms set forth in <u>the Section 5</u>, the indicated <u>website</u>, the complete license terms can be found.

"Public Software" shall mean each of:

(a) any computer code that contains, or is derived in any manner (in whole or in part) from, any computer code that is distributed as open source software (e.g. Linux) or similar licensing or distribution models; and

(b) any software that requires as a condition of use, modification and/or distribution of such software that such software or other software incorporated into, derived from or distributed with such software (i) be disclosed or distributed in source code form, (ii) be licensed for the purpose of making derivative works, or (iii) be redistributable at no charge.

Public Software includes, without limitation, software licensed or distributed under any of the following licenses or distribution models, or licenses or distribution models similar to any of the following: (1) GNU's General Public License (GPL) or Lesser/Library GPL (LGPL); (2) the Artistic License (e.g., PERL); (3) the Mozilla Public License; (4) the Netscape Public License; (5) the Sun Community Source License (SCSL); (6) the Sun Industry Source License (SISL); and (7) the Apache Software license.

#### 2.

#### Limited Use

Any Public Software provided under the agreement shall be subject to the licenses, terms and

0 Appendix C. GPL Declamation 69

conditions of its model. Licensee hereby agrees to comply with the terms and conditions applicable to any such Public Software, as set forth in <u>its presentation on website</u>.

#### 3. Limited Liability

The supplier hereby express that the supplier shall have no liability for any costs, loss or damages resulting from Licensee's breach of the terms and conditions applicable to use, conversion or combination of the licensed software with or into Public Software.

#### 4. NO WARRANTY

This program or licensed software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY. THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH LICENSEE.

#### 5. Public Software Name and Description

Program	Copy Right	Origin Sour	Licenses or	License Terms
Name	Description	Code	Distribution Models or	Website
			its special license	Reference
			terms	
U-boot	Wolfgang Denk,	ftp://ftp.denx.de/	GNU GENERAL	GNU GENERAL
	DENX Software	pub/u-boot/	PUBLIC LICENSE	PUBLIC
	Engineering,		Version 2	LICENSE Version
	wd@denx.de			2
Busybox		http://www.busy	GNU GENERAL	http://www.gnu.or
		box.net/downloa	PUBLIC LICENSE	g/licenses/old-lice
		ds/busybox-1.01	Version 2	nses/gpl-2.0.html
		.tar.bz2		

#### Table 3 Public Software Name and Description

<sup>0</sup> Appendix C. GPL Declamation

Goahead	Copyright (c)	http://data.goahe			
	GoAhead	ad.com/Software			
	Software Inc.,	/Webserver/2.1.			
	1992-2000.	8/webs218.tar.g			
		Z			
hostapd	Copyright (c)	http://hostap.epit	GNU	GENERAL	http://www.gnu.or
	2002-2006, Jouni	est.fi/releases/h	PUBLIC	LICENSE	g/licenses/old-lice
	Malinen	ostapd-0.4.8.tar.	Version 2		nses/gpl-2.0.html
	<jkmaline@cc.hut< th=""><th>gz</th><th></th><th></th><th></th></jkmaline@cc.hut<>	gz			
	.fi> and				
	contributors				
wpa_suppl	Copyright (c)	http://hostap.epit	GNU	GENERAL	http://www.gnu.or
icant	2003-2005, Jouni	est.fi/releases/w	PUBLIC	LICENSE	g/licenses/old-lice
	Malinen	pa_supplicant-0.	Version 2		nses/gpl-2.0.html
	<jkmaline@cc.hut< th=""><th>4.7.tar.gz</th><th></th><th></th><th></th></jkmaline@cc.hut<>	4.7.tar.gz			
	.fi> and				
	contributors				
ntpclient	Copyright 1997,	http://doolittle.ica	GNU	GENERAL	http://www.gnu.or
	1999, 2000, 2003	rus.com/ntpclien	PUBLIC	LICENSE	g/licenses/old-lice
	Larry Doolittle	t/ntpclient_2003	Version 2		nses/gpl-2.0.html
		_194.tar.gz			
net-snmp	Copyright(c)	http://prdownloa	GNU	GENERAL	http://www.gnu.or
	2001-2003,	ds.sourceforge.n	PUBLIC	LICENSE	g/licenses/old-lice
	Networks	et/net-snmp/net-	Version 2		nses/gpl-2.0.html
	Associates	snmp-5.4.1.tar.g			
	Technology, Inc	Z			
	All rights				
	reserved.				
<u> </u>					

vsftpd	Author: Chris	ftp://vsftpd.beast	GNU	GENERAL	http://www.gnu.or
vonpu	Evans	s.org/users/ceva	PUBLIC	LICENSE	g/licenses/old-lice
	Evans	-		LICENSE	-
		ns/vsftpd-1.1.2.t	Version 2		nses/gpl-2.0.html
		ar.gz			
linux		ftp://ftp.kernel.or	GNU	GENERAL	http://www.gnu.or
		g/pub/linux/kern	PUBLIC	LICENSE	g/licenses/old-lice
		el/v2.6/linux-2.6.	Version 2		nses/gpl-2.0.html
		15.tar.bz2			
iptables	Copyright	ftp://ftp.netfilter.o	GNU	GENERAL	http://www.gnu.or
	2000-2004	rg/pub/iptables/i	PUBLIC	LICENSE	g/licenses/old-lice
	netfilter project	ptables-1.3.6.tar.	Version 2		nses/gpl-2.0.html
	http://www.netfilter	bz2			
	.org/				
openssl	Copyright (c)	http://www.open	GNU	GENERAL	http://www.gnu.or
	1998-2008 The	ssl.org/source/o	PUBLIC	LICENSE	g/licenses/old-lice
	OpenSSL Project.	penssl-0.9.8k.tar	Version 2		nses/gpl-2.0.html
	All rights	.gz			
	reserved.				
Igmpproxy	Copyright (C)	http://sourceforg	GNU	GENERAL	http://www.gnu.or
	2005 Johnny	e.net/projects/ig	PUBLIC	LICENSE	g/licenses/old-lice
	Egeland	mpproxy/files/ig	Version 2		nses/gpl-2.0.html
	<johnny@rlo.org></johnny@rlo.org>	mpproxy/0.1/igm			
		pproxy-0.1.tar.gz			
		/download			
Dnrd	Copyright (C)	http://sourceforg	GNU	GENERAL	http://www.gnu.or
	1998 Brad M.	e.net/projects/dn	PUBLIC	LICENSE	g/licenses/old-lice
	Garcia	rd/files/dnrd/2.12	Version 2		nses/gpl-2.0.html
	<garsh@home.co< th=""><th>/dnrd-2.12.tar.gz</th><th></th><th></th><th></th></garsh@home.co<>	/dnrd-2.12.tar.gz			
	m>	/download			

0 Appendix C. GPL Declamation

iproute	Stephen	http://developer.	GNU	GENERAL	http://www.gnu.or
	Hemminger	osdl.org/dev/ipro	PUBLIC	LICENSE	g/licenses/old-lice
	shemminger@osd	ute2	Version 2		nses/gpl-2.0.html
	l.org				
	Alexey Kuznetsov				
	kuznet@ms2.inr.a				
	c.ru				
Pppd	Paul Mackerras	ftp://ftp.samba.or			
	<paulus@linuxcar< th=""><th>g/pub/ppp/</th><th></th><th></th><th></th></paulus@linuxcar<>	g/pub/ppp/			
	e.com>				

# **Appendix D. Country Channel List**

The IEEE802.11a/n Wireless Outdoor CPE supports country selection. Channels may vary upon each country's regulation. The following tables list the channel with country code in each bandwidth.

### **Table 4 FCC Countries**

Country	Mode		C	hannel list	
		40MHz	20MHz	10MHz	5MHz
United States Chile China Columbia Mexico Panama Pilippines Taiwan Uruguay Venezuela	(5725~5850)	149/153/157/ 161	149/153/157/161/ 165	149/151/153/155/ 157/159/161/163/1 65	149/150/151/152/ 153/154/155/156/ 157/158/159/160/ 161/162/163/164/ 165

## Table 5 CE Countries

Country	Mode	Channel list				
		40MHz	20MHz	10MHz	5MHz	
Albania					100/101/102/103/	
Algeria	11a (5470~5725) Excluded	100/104/108/	100/104/108/112	100/102/104/106/ 108/110/112/114/		
Australia					104/105/106107/	
Austria					108/109/110/111/	
Belgium	CH120~CH131		116/132/136/140	116/118/132/134/1	112/113/114/115/	
Bulgaria		112/132/136		26/128/140	116/117/118/119/	
Cyprus	Meteorology			36/138/140		
Czech	Radars				131/132/133/134/	
Republic					135/136/137/138/	
Denmark						

0 Appendix D. Country Channel List

Estonia
Finland
France
Germany
Greece
Hungary
Iceland
Ireland
Italy
Latvia
Liechtenstein
Lithuania
Luxembourg
Macedonia
Malta
Netherlands
Norway
Poland
Portugal
Romania
Slovakia
Slovenia
Spain
Sweden
United
Kingdom

## Table 6 Other Countries

Country	Mode	Channel list				
		40MHz	20MHz	10MHz	5MHz	
India	11a 5725-5875MHz			149/151/153/155/ 157/159/161/163/1 65/167/169/171/17 3	149/150/151/152/ 153/154/155/156/ 157/158/159/160/ 161/162/163/164/ 165/166/167/168/ 169/170/171/172/ 173	

0 Appendix D. Country Channel List Page 75

Korea Russia	11a 5470-5650MHz 5725-5825MHz	100/104/108/ 112/149/153/ 157/161 *Russia: Does not support HT40.	100/104/108/112/ 116/149/153/157/ 161	100/102/104/106/ 108/110/112/114/ 116/149/151/153/1 55/157/159/161/	100/101/102/103/ 104/105/106107/ 108/109/110/111/ 112/113/114/115/ 116/149/150/151/ 152/153/154/155/ 156/157/158/159/ 160/161/
South Africa	11a 5470-5725MHz 5725-5875MHz	112/116/132/ 136/140/149/	116/132/136/140/ 149/153/157/161/	100/102/104/106/ 108/110/112/114/ 116/118//132/134/1 36/138/140//151/15 3/155/157/159/161/ 165	135/136/137/138/