

OWNER'S MANUAL

## **TABLE OF CONTENTS**

| I.    | BEFORE YOU BEGIN              | 3       |
|-------|-------------------------------|---------|
| II.   | IMPORTANT SAFETY INSTRUCTIONS | 4       |
| III.  | FEATURES                      | 5       |
| IV.   | DIMENSIONS                    | 6       |
| V.    | ASSEMBLY INSTRUCTIONS         | 7 – 19  |
| VI.   | SETTING UP YOUR BFUB1         | 20 – 21 |
| VII.  | CONSOLE FEATURES              | 22      |
| VIII. | CONSOLE DISPLAY FEATURES      | 23      |
| IX.   | CONSOLE OPERATION             | 24 – 29 |
| X.    | EXERCISE TIPS AND GUIDELINES  | 30 – 31 |
| XI.   | TROUBLESHOOTING               | 32      |
| XII.  | SERVICING THE BFUB1           | 33      |
| XIII. | HARDWARE                      | 34 – 36 |
| XIV.  | HARDWARE LIST                 | 37 – 39 |
| XV.   | EXPLODED VIEW DIAGRAM         | 40 – 41 |
| XVI.  | NOTES                         | 42 – 43 |



## **BEFORE YOU BEGIN**

Thank you for purchasing the Best Fitness Upright Bike BFUB1.

To maximize your use of the equipment please study this Owner's Manual thoroughly.

#### **Unpacking the Equipment**

The BFUB1 is carefully tested and inspected before shipment. We have shipped the unit in several pieces that require assembly. Ask for assistance during the assembly process.

Best Fitness Equipment continually seeks ways to improve the performance, specifications and product manuals in order to ensure that only superior products are released from our factories. Please take the time to carefully read through this manual thoroughly. Instructions contained in this document are not intended to cover all details or variations possible with Best Fitness Equipment, or to cover every contingency that may be met in conjunction with installation, operation, maintenance or troubleshooting of the equipment. Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omission from, the information given. Should additional information be required, or should situations arise that are not covered by this manual, the matter should be directed to your local Best Fitness Equipment representative, or the Service Department at Best Fitness Equipment in Forest Park, Illinois.

Any Questions? Call (800) 556-3113

### IMPORTANT SAFETY INSTRUCTIONS

## Before beginning any fitness program, you should obtain a complete physical examination from your physician.

Il est conseille de subir un examen medical complet avant d'entreprendre tout programme d'exercise. Si vous avez des etourdissements ou des faiblesses, arretez les exercices immediatement.

Antes de comenzar cualquier programma de ejercicios, deberias tener un examen fisico con su doctor.

## WHEN USING EXERCISE EQUIPMENT, YOU SHOULD ALWAYS TAKE BASIC PRECAUTIONS, INCLUDING THE FOLLOWING:

- Read all instructions before using the BFUB1. These instructions are written to ensure your safety and to protect the unit.
- Do not allow children on or near the equipment.
- Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer. Such attachments might cause injuries.
- Wear proper exercise clothing and shoes for your workout, no loose clothing.
- Use care when getting on or off the unit.
- Do not overexert yourself or work to exhaustion.
- If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- Never operate the unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.
- Never drop or insert objects into any opening in the equipment.
- Always check the unit before each use. Make sure that all fasteners are secure and in good working condition.
- Do not use the equipment outdoors or near water.


#### PERSONAL SAFETY DURING ASSEMBLY

- It is strongly recommended that a qualified dealer assemble the equipment. Assistance is required.
- Before beginning assembly, please take the time to read the instructions thoroughly.
- Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the BFUB1 on a solid, level surface. Locate the unit a few feet from the walls or furniture to provide easy access.

The BFUB1 is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Best Fitness BFUB1.

After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call the dealer from whom you purchased the machine or call 1-800-556-3113 for the dealer nearest you.

## **FEATURES**

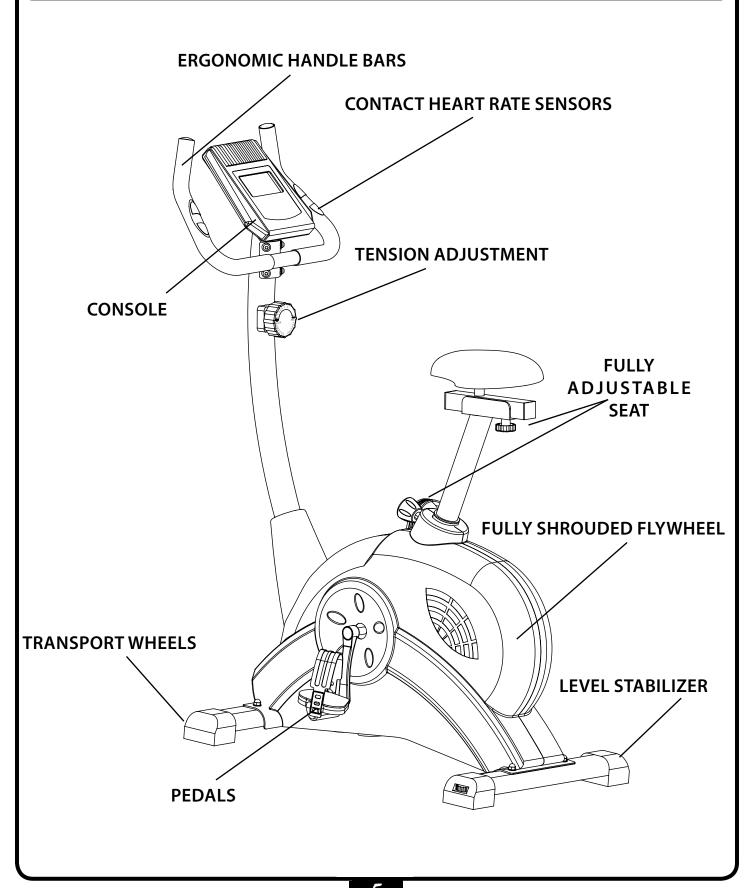

## **DIMENSIONS**


The room layout diagram below will help you decide the best placement for your BFUB1. The dimensions of the BFUB1 are: Width 1'7" X Length 3'7".


The usage space is: Width 3' X Length 6' (The usage space is the overall space needed for operation).

The usage space needed for the BFUB1 could be more, depending on the user.

#### Suggested Usage Space

#### Minimum Usage Space

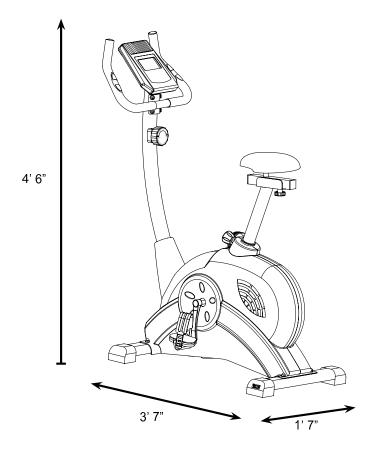

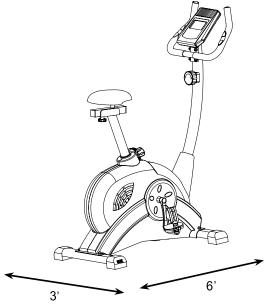

## **AWARNING**

MAX LOAD 250LB (113KG)

### **ASSEMBLY INSTRUCTIONS**

Assembly of the BFUB1 takes professional installers about 1/2 hour to complete. If this is the first time you have assembled this type of equipment, plan on significantly more time.

Professional installers are highly recommended!

However, if you acquire the appropriate tools, obtain assistance, and follow the assembly steps sequentially, the process will take time, but is fairly easy.

#### **ASSEMBLY TIPS**

Read all "Notes" on each page before beginning each step.

While you may be able to assemble the BFUB1 using the illustrations only, important safety notes and other tips are included in the text.


Some pieces may have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.

NOTE: To find out the length of a particular bolt, measure its shank (the long, narrow part beneath the head).

Refer to the following diagram:

NOTE: After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly.

If you are unable to correct the problem, call the dealer from whom you purchased the machine or call 1-800-556-3113 for the dealer nearest you.

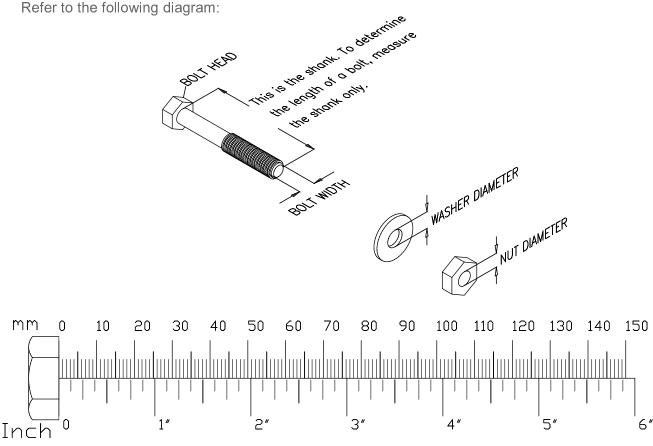


## Be careful to assemble all components in the sequence they are presented.

A. Connect Rear Leg (C) to Main Frame (A) using:


Two 15 (M8 acorn nut) Two 14 (M8 washer)


B. Connect Front Leg (B) to Main Frame (A) using:

Two 15 (M8 acorn nut) Two 14 (M8 washer)

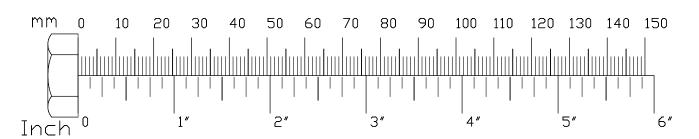



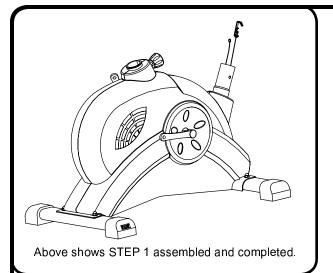


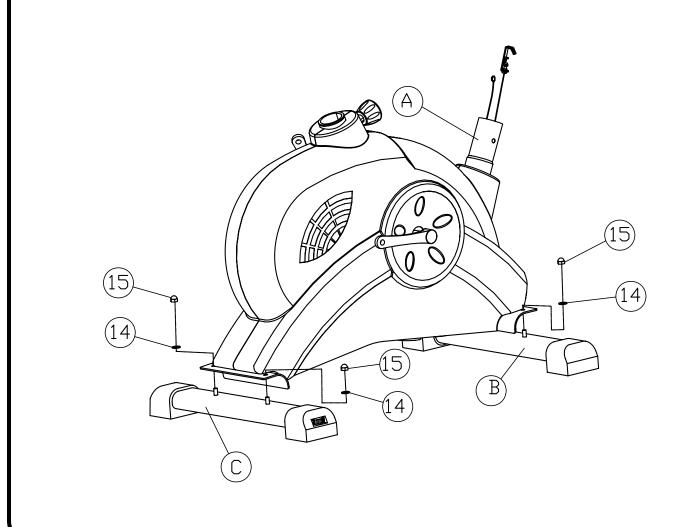


2


## Be careful to assemble all components in the sequence they are presented.

- A. Connect Right Foot Pad (J) to Right Crank (8) by threading Right Foot Pad (J) clockwise as shown.
- B. Connect Left Foot Pad (I) to Left Crank (7) by threading Left Foot Pad (I) counter-clockwise as shown.

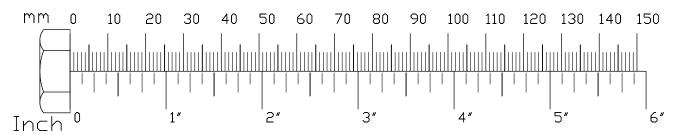



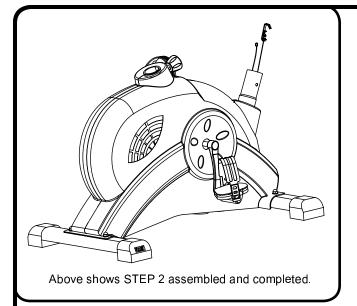


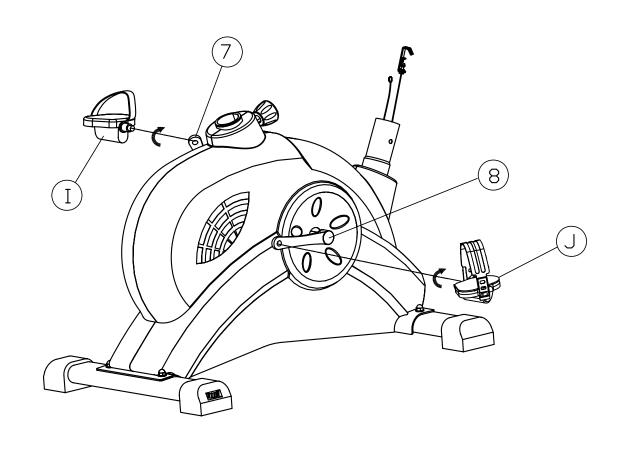


## Be careful to assemble all components in the sequence they are presented.


NOTE: The Sliding bolt needs to be 'pinched' loose against Seat Post (F) to install Washer (12) and Knob (13).


- A. Slide Seat Post (F) into Mainframe (A) while releasing Pop Pin (16).
- Slide Horizontal Seat Post (G) onto Seat Post (F) and secure using:
   One 12 (M10 washer)
   One 13 (M10 knob nut)
- C. Set Seat (10) onto Horizontal Seat Post (G) and tighten using:Two 80 (Nut)

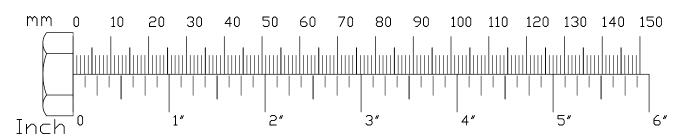



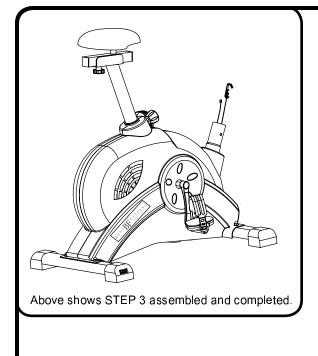

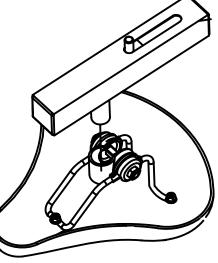


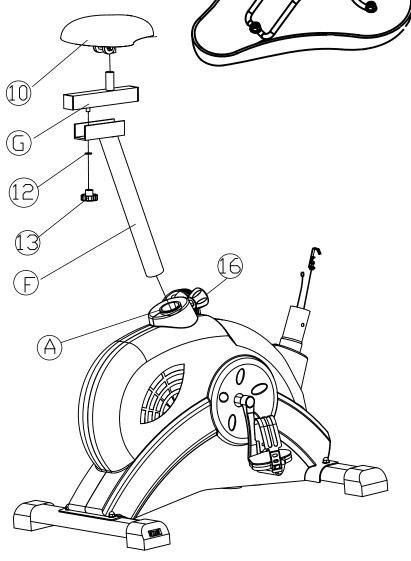


4

## Be careful to assemble all components in the sequence they are presented.

- A. Slide Shroud (H) onto Upright (E) as shown.
- B. Attach Lower Harness (17) to HR Sensor Harness (31).
- C. Insert Lower Tension Cable (18) through Upright (E) and out from the opening on Upright (E).
- D. Secure Upright (E) to Mainframe (A) using:
  Four 29 (M8x5 allen head bolt)
  Four 30 (M8 arc washer)
- E. Let Shroud (H) slide to the bottom of Upright (E).

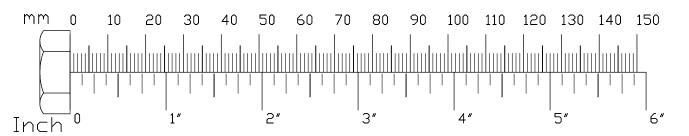

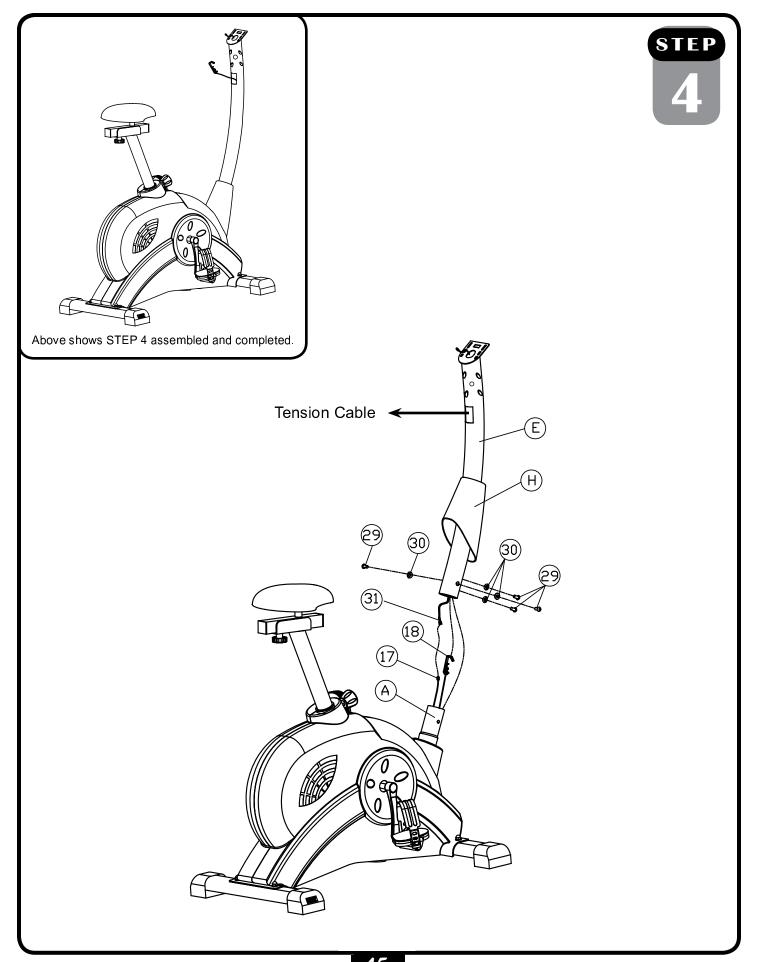

## 5

## Be careful to assemble all components in the sequence they are presented.

- A. Route HR Cable Harnesses (32) through the hole in Upright (E) then up as shown. Let HR Cable Harnesses (32) hang from the top of Upright (E).
- B. Connect Handle Bar (D) to Upright (E) using:

Four 29 (M8x5 allen head bolt)

Four 22 (M8 spring washer)


Four 30 (M8 arc washer)

NOTE: Need to loosen lock nut on cable so cable can be placed on tension knob, then retightened knob to lock.

- C. Attach Tension Knob (20) to Lower Tension Cable (18) as shown in Diagram A. Push Tension Knob (20) towards Lower Tension Cable (18) as shown in Diagram B. Pull the cable up as shown in Diagram C then seat it in the slot as in Diagram D.
- D. Secure Tension Knob (20) to Upright (E) using:
  One 27 (M5 phillips pan head bolt)
  One 28 (M5 arc washer)



DO NOT FORCE TENSION CABLE DURING INSTALLATION.

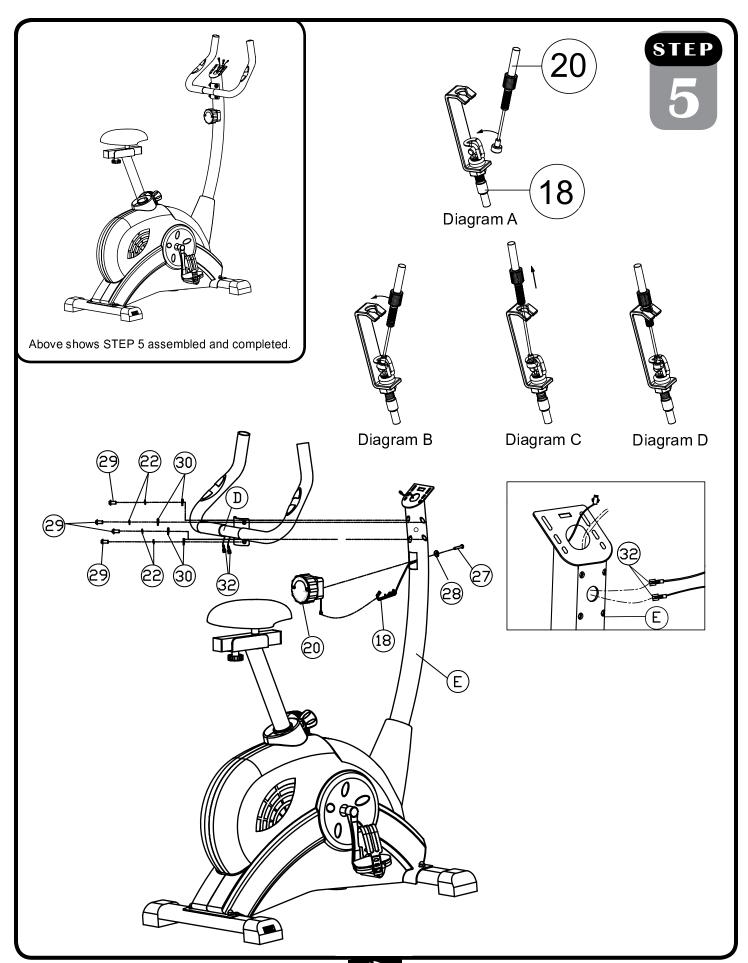



## Be careful to assemble all components in the sequence they are presented.

- A. Connect Heart Rate Cables (32) to the Heart Rate Cables on Console (9).
- B. Connect Heart Rate Sensor Harness (31) to the Heart Rate Sensor Harness on Console (9).

NOTE: Carefully fit the wires back into the hole in Upright (E) before securing the console.

- C. Slide Console (9) onto Upright (E).
- D. Secure Console (9) to Upright (E) using:
   Two 26 (M4x10 philips pan head bolt)
   Two 25 (M5 washer)

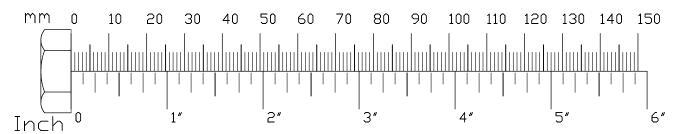

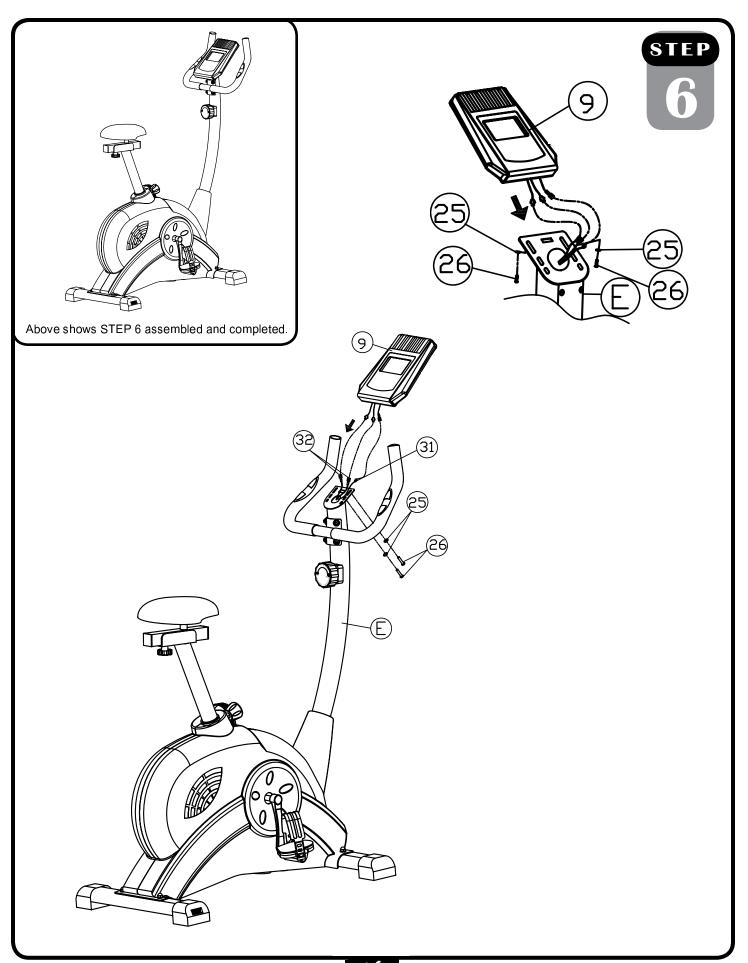

### **SETTING UP YOUR BFUB1**

#### **PLACEMENT IN YOUR HOME**


To make exercise a desirable daily activity for you, the BFUB1 should be placed in a comfortable and attractive setting. This bike is designed to use minimal floor space and to fit nicely in your home.


- Do not place or operate the BFUB1 outdoors.
- Do not place the BFUB1 near water or in high moisture content environment.
- It is highly recommended to place a dedicated equipment mat beneath your BFUB1.
   A dedicated mat provides superior stability and firmness for a proper workout.

#### **MOVING THE BFUB1**

This bike is easy to move around safely. To move the BFUB1:

- 1. Grasp the Handles.
- 2. Carefully pull the handles towards you while pushing the front of the bike downward.
- 3. Simply roll the BFUB1 on its two wheels to the desired location.

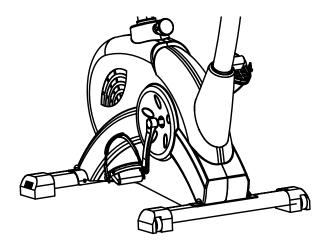

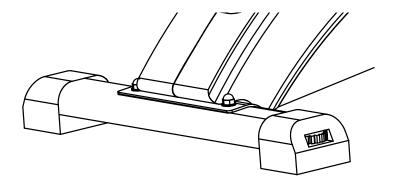


#### **LEVELING THE BFUB1**

The Rear Leg End Caps can be adjusted to level the BFUB1:


 Rotate the Rear Leg End Cap knob clockwise or counter-clockwise to adjust the level of the bike.


## **SETTING UP YOUR BFUB1**

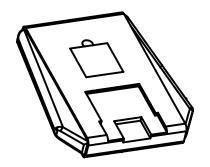

To install the Console batteries (1), remove Battery Cover (32).

Insert two AA batteries into the console. Observe polarity.

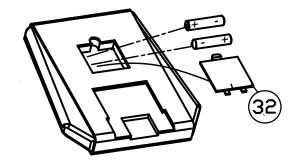

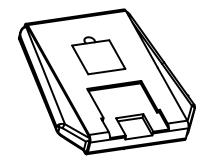


After battery installation, reinstall the console's Battery Cover (32).

Adjust TENSION CONTROL by rotating the TENSION CONTROL knob.


Rotate clockwise to increase tension.

Rotate counter-clockwise to decrease tension.

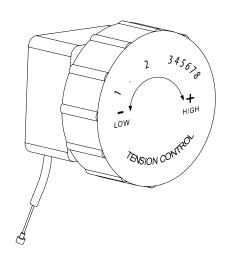

## **CONSOLE FEATURES**

The console informs the user with valuable information about the workout and allows the user to control workout resistance levels. Please become familiar with the console before your first exercise session.

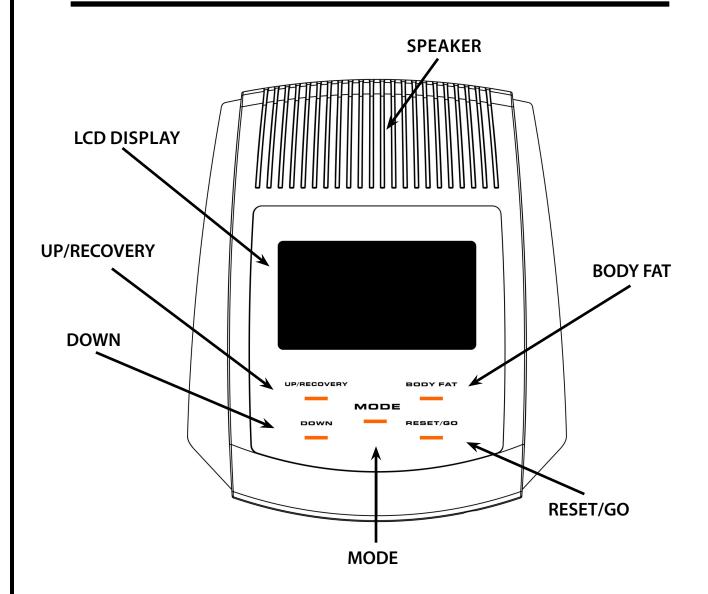

| Feature     | Description                                       |  |
|-------------|---|--|
| LCD Display | Console screen                                    |  |
| MODE        | Cycle through console programming                 |  |
| BODYFAT     | Calculate Body Fat percentage, BMI and BMR        |  |
| RESET/GO    | Reset the display/value                           |  |
| UP/RECOVERY | Increases a value (Time, Age, Distance, Calories) |  |
| DOWN        | Decreases a value (Time, Age, Distance, Calories) |  |

## **CONSOLE DISPLAY FEATURES**



| Feature    | Range                | Specification   |
|------------|----------------------|-----------------|
| Speed      | 0.0 ~ 99.9 mph       | 0.1 Mile/Hour   |
| Time       | 0.00 ~ 99.59 s       | 1 Second        |
| Calories   | 0 ~ 999 Calories     | 0.1 ~ 1 Calorie |
| Hand Pulse | 40 ~ 240 bpm         | 1 Beat/Minute   |
| Distance   | 0 ~ 9.99mi ~ 99.9 mi | 0.01 ~ 0.1 Mile |

#### PROGRAMMING THE DISPLAY


The display is able to be programmed to establish customized workout goals. The BFUB1 gives users the power to control their workout time, distance travelled and total calorie loss.

Press Once to program the console.

If the console is in STAND BY mode, the display will initially reset.

After leaving STAND BY mode, the display was reset. •



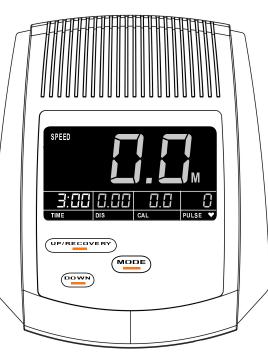

As the TIME window flashes, enter the pre-set TIME by pressing OP/RECOVERY or OPWN to increase/decrease the set value to reach your desired time.


Again press the **MDDE** button to advance to the next function.


The display is set for a 3:00 minute workout.

As the DISTANCE window flashes, enter the pre-set DISTANCE by pressing UP/RECOVERY or DOWN to increase/decrease the set value to reach your desired distance.

Again press the **MDDE** button to advance to the next function.

The display is set for a distance of 2.5 mi.

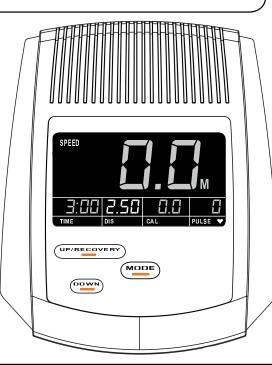

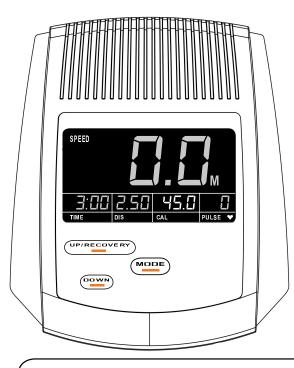

As the CALORIE window flashes, enter the pre-set CALORIES by pressing OP/RECOVERY or OPWN to increase/decrease the set value to reach your desired calorie setting.

Again press the MODE button to advance to the next function.

This workout will burn 45 calories.

The TEMPERATURE mode can be set according to specific needs. Maintaining the correct ambient temperature during a workout will increase the effectiveness of the exercise.

Enter the desired TEMPERATURE readout (Celsius or Fahrenheit) by pressing UP/RECOVERY or DOWN to change between Celsius or Fahrenheit. Press the DDE button to complete programming the display.

The display is set for Fahrenheit. -

#### Start your workout!

The programmed sections of the display will start counting down as the exercise progresses. When one of the target goals has been achieved, the programmed window will flash and the console will beep advising the user of their accomplishment. After the achievement, the display will count up and record further workout progress.





#### **BODYFAT, BMI & BMR**

The BFUB1 console has the ability to measure a person's BODYFAT, BMI and BMR. BMI (Body Mass Index) is a statistical measurement of body weight based on a person's weight and height. Though it does not actually measure the percentage of body fat, it is used to estimate a healthy body weight and used as a diagnostic tool to identify weight problems. BMR (Basal Metabolic Rate) determines your daily calorie needs.

While *not* exercising, press BODY FAT to enter the Body Fat parameters settings.

The calculation is performed while not exercising. Speed is 0 mph.

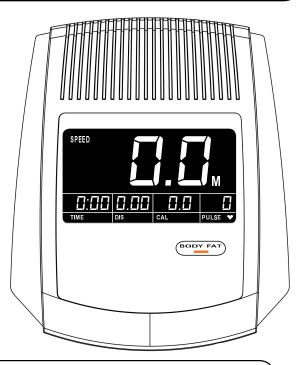

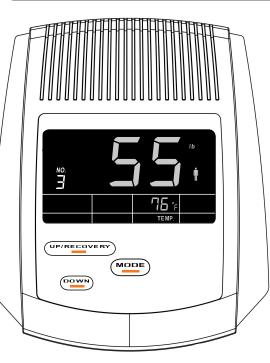



Multiple users can examine their BODYFAT. Enter the USER ID number from 1 to 8 by pressing OP/RECOVERY or ODWN to increase/decrease the USER ID. Press MODE to advance to next parameter setting.

The display will calculate BODYFAT for user number 3.

Enter your WEIGHT (LB) by pressing **UP/RECOVERY** or to increase/decrease your set weight. Press **MODE** to advance to the next parameter setting.

Weight is set at 95 lb.

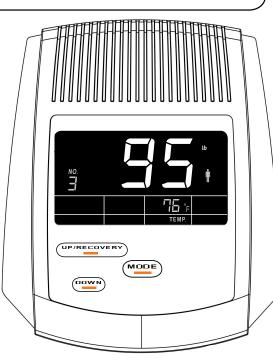

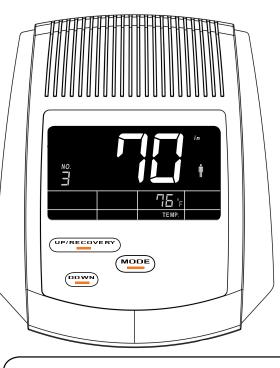



Enter your HEIGHT (inch) by pressing PRECOVERY or to increase/decrease your set height. Press DE to advance to the next parameter setting.

**←** The height of USER 3 is set at 70".

Enter your AGE (YEAR) by pressing **OP/RECOVERY** or to increase/decrease your age setting. Press **MODE** to proceed to next parameter setting.

USER 3 is 29 years old.

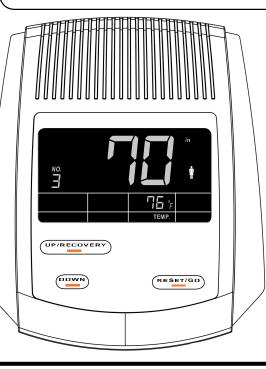

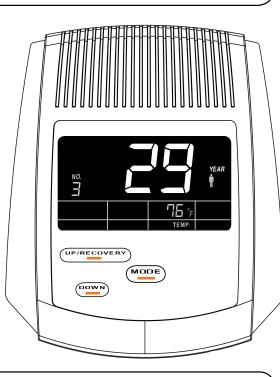

Enter your SEX by pressing UP/RECOVERY or DOWN to select between male and female.

After having entered the parameters, press the (button then hold onto the Heart Rate Contacts.

RESET/GO

**←** USER 3 is female.

After 6 seconds, the console will display the executed calculation on the display. The display will show BODYFAT, BMI and BMR. To exit the application, press the BODY FAT button.

USER 3 has 21.8% BODYFAT, a BMI of 22 and a BMR of 1640 calories.

NOTE: The display will exit the BODYFAT test automatically if no console operation has been detected for a period of 10 seconds and will display the Er.1 error code.



#### **BODYFAT PARAMETERS**

The chart below is used to reference your BODYFAT results. Results are for therapeutic purposes only.

| Gender/Age        | Underweight | Healthy   | Slightly Overweight | Overweight  | 0 b e s e |
|-------------------|-------------|-----------|---------------------|-------------|-----------|
| Male ≤ 30 years   | <14%        | 14% ~ 20% | 20.1% ~ 25%         | 25.1% ~ 35% | > 35%     |
| Male > 30 years   | <17%        | 17% ~ 23% | 23.1% ~ 28%         | 28.1% ~ 38% | > 38%     |
| Female ≤ 30 years | <17%        | 17% ~ 24% | 24.1% ~ 30%         | 30.1% ~ 40% | > 40%     |
| Female > 30 years | <20%        | 20% ~ 27% | 27.1% ~ 33%         | 33.1% ~ 43% | > 43%     |

#### **BMI INDEX**

The chart below is used to reference your BMI (Body Mass Index) results. Results are for therapeutic purposes only.

| Underweight | Healthy     | Slightly Overweight | 0 v e r w e i g h t | 0 b e s e |
|-------------|-------------|---------------------|---------------------|-----------|
| ≤ 18        | 18.5 ~ 24.9 | 25 ~ 26.9           | 27 ~ 29.9           | ≥ 30      |

#### **SLEEP MODE**


The BFUB1 will enter SLEEP MODE mode when left un-operational for eight minutes after a workout. While SLEEP MODE mode is active, the console will display the current ambient temperature. Press once to reset the display and start your workout. All memory is cleared during SLEEP MODE except for BODYFAT parameters and Temperature.

#### **PULSE RATE**

Your BFUB1 comes equipped with Heart Rate Contacts. The Heart Rate Contacts send your heart rate information to the console for processing. To measure Heart Rate, your hands need to firmly grasp the entire area of the Heart Rate Contact Sensors on both sides of the handlebar. There is no need to hold onto the contacts very tightly although holding onto the contacts loosely may produce a false readout.

Before measuring your pulse rate, make sure the PULSE window shows 'P' instead of '0'. The readout may show '0' after a brief period of pulse reading inactivity. Press any button to change '0' into "P" to activate the pulse readout. Place both of your palms on the Heart Rate Contact Pads and the monitor will show your current heart rate in beats per minute (BPM) after a 3~4 second calculation time.

During the Heart Rate reading, because of the contact jamming phenomenon, the measured Heart Rate value may be higher than your actual pulse rate during the first  $2\sim3$  seconds, then will stabilize to a normal level.

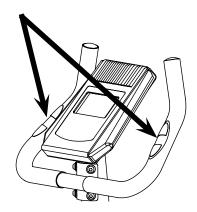

#### **PULSE RECOVERY**

PULSE RECOVERY is an excellent guide for many types of training regimes that use recovery heart rate as a progress guide and to spot problems such as overheating or dehydration.


First, test your pulse as mentioned in the PULSE RATE section. Then, while not exercising (SPEED is 0 mph), press

UP/RECOVERY to enter the PULSE RECOVERY function.

The display will show a 1 minute count-down as well as your current pulse rate. Hold on to the Heart Rate Contacts until the display counts down to zero. The console will now display your pulse recovery level from F1 to F6. Press

UP/RECOVERY again to exit the PULSE RECOVERY function.

The Pulse Recovery is at the F2 level. —

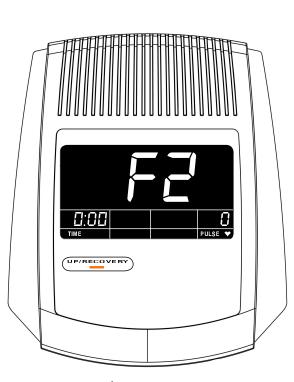

The chart below is used to reference your PULSE RECOVERY level. Results are for therapeutic purposes only.

| I | Fastest | Fast | Quick | Moderate | Slow | Slowest |
|---|---------|------|-------|----------|------|---------|
| ١ | F1      | F2   | F3    | F4       | F5   | F6      |

## **EXERCISE TIPS AND GUIDELINES**

Always consult your physician before beginning any exercise program. For your health and safety, do not over exert yourself. Remember to stretch and warm up before each exercise program.

#### **STRETCH**

Stretching prior to exercising will improve flexibility and reduce chances of exercise related injury. Ease into each of these stretches with a slow gentle motion. Hold your stretched position for a count of ten. Do not bounce. Repeating the stretching exercises again, after the cool down, will help to loosen and relax your muscles to prevent soreness after your workout.

#### **WARM UP**

A few minutes of a work out should be devoted to warming up. This warm up time will limber your muscles and prepare them for a more strenuous exercise. Warm up on the BFUB1 by exercising at slow speeds.

#### **COOL DOWN**

Never stop exercising suddenly. It is a good idea to end a workout slowly since this will allow your heart to readjust to the decreased demand.

#### **HOW OFTEN?**

It is most often recommended that you exercise a few times a week to maintain cardiovascular fitness. If you have other goals such as weight or fat loss, you will achieve your goal faster with more frequent exercise. Remember that your ultimate goal should be to make exercise a lifetime habit. Many people are successful staying with a fitness program if they set aside a specific time of the day to exercise. Regular exercise is a key to a healthy life style

#### **HOW LONG?**

For a useful workout, always start slowly, especially if you have been sedentary during the past year. Your body will need time to adjust to the new activity. As your body adjusts, gradually increase your workout time per session.

## **EXERCISE TIPS AND GUIDELINES**

If you experience chest pains, nausea, dizziness or shortness of breath, stop exercising immediately and consult your physician before continuing any workouts!

#### **HOW HARD?**

How hard you work out is determined by your goal. Regardless of your fitness goals, always begin an exercise program at low intensity. Aerobic exercise does not have to be painful to be beneficial!

There are two ways to measure your exercise intensity. The first is by evaluating your perceived exertion level and the second is by monitoring your heart rate.

During exercise, if you cannot maintain a conversation without gasping, you are working too hard. A good rule of thumb is to work to the point of exhilaration, not exhaustion. If you cannot catch your breath, it is time to slow down. Always be aware of other warning signs to overexertion.

To monitor your heart rate you can use a pulse monitor or take your pulse with your fingers. Pulse monitors are convenient tools for monitoring your heart rate. However, these values are for reference only. You should always listen to your body first.

You can measure your pulse with your fingers by placing your first two fingers lightly over the blood vessel (carotid artery) on your neck located next to your Adam's apple. Count your pulse for ten seconds and multiply by six. This figure is your heart rate in beats per minute (bpm). Compare this number to the Target Heart rate zone for your age group.

#### **TARGET HEART RATE**

The most common method for calculating your target heart rate is to find your maximum heart rate.

The standard formula for this is:

220 - your age = Maximum Heart Rate.

You DO NOT want to workout at your maximum heart rate. You want to workout in your target heart rate zone. Your target heart rate zone is a percentage of your maximum heart rate. The American Heart Association recommends working out at a target heart rate zone of between 60% - 75% of your maximum heart rate. If you are just beginning an exercise program, exercise near or below the lower limit of your target zone.

LOWER TARGET ZONE LIMIT = MAXIMUM HEART RATE x 0.60 UPPER TARGET ZONE LIMIT = MAXIMUM HEART RATE x 0.75

| Age | Target Zone |
|-----|-------------|
| 20  | 120 ~ 150   |
| 25  | 117 ~ 146   |
| 30  | 114 ~ 142   |
| 35  | 111 ~ 138   |
| 40  | 108 ~ 135   |
| 45  | 105 ~ 131   |
| 50  | 102 ~ 127   |
| 55  | 99 ~ 123    |
| 60  | 96 ~ 120    |
| 65  | 93 ~ 116    |
| 70  | 90 ~ 113    |

**TARGET HEART RATE** 

## **TROUBLESHOOTING**

| PROBLEM  | TROUBLESHOOTING TIP         | SOLUTION  |
|--|-----------------------------|---|
| Console will not turn on                                     | Console needs a HARD reset  | Remove then reinstall batteries into the console.   |
|  | Batteries are low or dead   | Replace with fresh batteries.   |
|  | Reverse polarity            | Insert batteries using correct polarity.  |
|  | Damaged console             | Replace console.  |
| Crank Arms or Handles are loose                              | Loose hardware              | Using the provided assembly tools, go over the BFUB1 to make sure all assembly hardware is tight.   |
| No resistance  | Tension Knob malfunction    | Call for service.   |
|  | Magnetic brake is loose     | Call for service.   |
| The resistance levels seem to be either too hard or too easy | Magnetic brake has shifted  | Call for service.   |
| Console button(s) do not respond to touch                    | Console Overlay             | Button(s) may have been damaged from liquids penetrating console overlay or excessive amount of cleaning solution was used.  Too much force was used operating the console buttons. |
|  |                             | Replace console.  |
| No Heart Rate readout on console                             | Heart Rate harness          | Remove the console and verify that the Heart Rate harness is secure.  |
| Heart Rate readout is erratic                                | Heart Rate contact pressure | Gripping the Heart Rate contacts too tight may cause calculation readout errors.  Try to maintain moderate pressure when holding onto the Heart Rate contacts.                      |
|  | Contact obstruction         | Remove all jewelry when using the BFUB1.<br>Make sure hands are not completely dry.   |
|  | Environmental interference  | An exercise environment with large motors, computers, fluorescent lighting and high power lines may cause erratic Heart Rate readout.   |
| Unit is unstable or rocks while in use                       | Levelers                    | Make sure the unit is on a solid and level surface.   |
|  |                             | Adjust the Rear Leg End Caps to level the unit.   |
| Speed is not calculated on the console                       | Console Harness             | Remove the console and verify that all connections are secure and not damaged or pinched.   |
|  | Speed Sensor                | The Speed Sensor may have become dislodged or damaged.<br>Call for service.   |
|  | Magnet                      | The Magnet may have become dislodged or damaged.<br>Call for service.   |
| The BFUB1 squeaks or makes a chirping sound                  | Levelers                    | Make sure the unit is on a solid and level surface.   |
|  | Assembly hardware           | Loosen all assembly hardware, grease the bolt threads then tighten hardware.  |

### **SERVICING THE BFUB1**

#### **OBTAINING SERVICE**

Please use this Owner's Manual to make sure that all parts have been included in your shipment. When ordering parts, you must use the part number and description from this Owner's Manual. Use only Best Fitness replacement parts when servicing this machine. Failure to do so will void your warranty and could result in personal injury.

For information about product operation or service, go to www.bestfitness.com or contact an authorized Best Fitness dealer or a Best Fitness factory-authorized service company or contact Best Fitness customer service at one of the following:

Toll Free: 1-800-556-3113
Phone: 1-708-427-3555
Fax: 1-708-427-3556
Hours: M-F 8:30-5:00 CST

E-Mail: service@bodysolid.com

Or write to:


BEST FITNESS
Service Department
1900 S. Des Plaines Ave.
Forest Park, IL 60130 USA

Retain this Owner's Manual for future reference.




### **HARDWARE**

(Actual Size Shown)

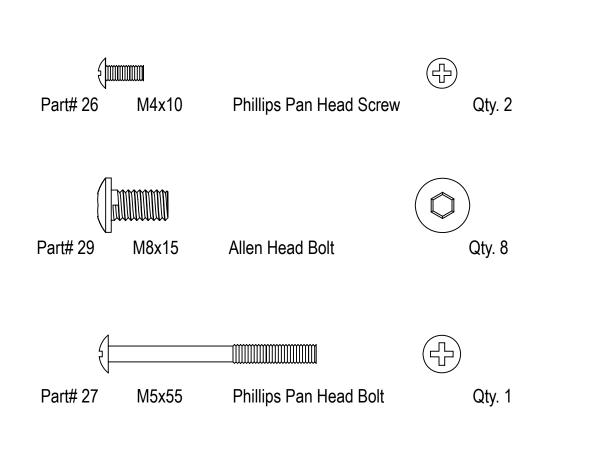




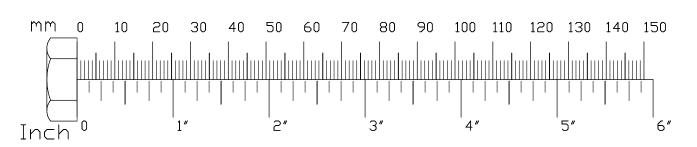


### **HARDWARE**

(Actual Size Shown)

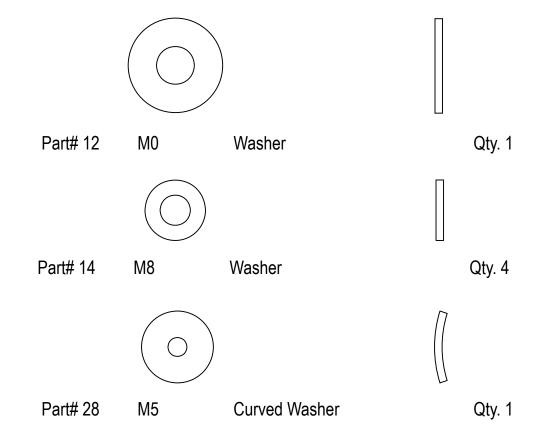




Part# 30

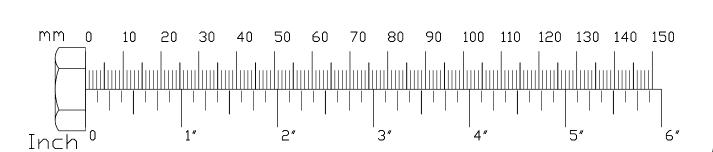

### **HARDWARE**

(Actual Size Shown)



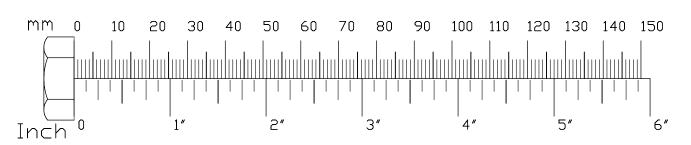

## **HARDWARE LIST**

| PART# | QTY | DESCRIPTION          |
|-------|-----|----------------------|
| Α     | 1   | Main Frame           |
| В     | 1   | Front Leg            |
| С     | 1   | Rear Leg             |
| D     | 1   | Handle Bar           |
| E     | 1   | Upright              |
| F     | 1   | Seat Post            |
| G     | 1   | Horizontal Seat Post |
| Н     | 1   | Shroud               |
| 1     | 1   | Left Foot Pad        |
| J     | 1   | Right Foot Pad       |
| K     | 1   | Console Logo         |
| L     | 1   | BFUB1 Rear Badge     |
| M     | 1   | BF Rear Shroud Badge |
| Ν     | 1   | BF Side Shroud Badge |

Part numbers are required when ordering parts.

## **HARDWARE LIST**


| PART#       | QTY         | DESCRIPTION                  |                   |
|-------------|-------------|------------------------------|-------------------|
| 1           | 2           | Starter Batteries (Type AA)  | Non-Warranty Item |
| 6           | 1           | Left Shroud                  |                   |
| 7           | 1           | Left Crank                   |                   |
| 8           | 1           | Right Crank                  |                   |
| 9           | 1           | Console                      |                   |
| 10          | 1           | Saddle                       |                   |
| 12          | 1           | Washer                       | M10x25x2t         |
| 13          | 1           | Knob Nut                     | M10               |
| 14          | 4           | Washer                       | M8x16x2t          |
| 15          | 4           | Acorn Nut                    | M8                |
| 16          | 1           | Pop Pin                      | M16x1.5t          |
| 17          | 1           | Lower Harness                |                   |
| 18          | 1           | Lower Tension Cable          |                   |
| 20          | 1           | Tension Knob                 |                   |
| 21          | 1           | Inner Bushing                |                   |
| 22          | 4           | Spring Washer                | M8                |
| 23          | 1           | U Shaped Holder              |                   |
| 24          | 2           | Square End Cap               |                   |
| 25          | 2           | Washer                       | M5x8x1t           |
| 26          | 2           | Phillips Pan Head Bolt       | M4x10             |
| 27          | 1           | Phillips Pan Head Bolt       | M5x55             |
| 28          | 1           | Arc Washer                   | D5                |
| 29          | 8           | Allen Head Bolt              | M8x5              |
| 30          | 8           | Arc Washer                   | M8x20x30.5Rx2t    |
| 31          | 1           | HR Sensor Harness            |                   |
| 32          | 1           | HR Cable Harness with Sensor |                   |
| 33          | 2           | Flange Nut                   | M12x1.25          |
| 34          | 2           | Cover                        |                   |
| 35          | 2           | Foam Grip                    |                   |
| 36          | 2           | End Cap                      |                   |
| 37          | 4           | Phillips Head Screw          | ST4x15            |
| 38          | 10          | Washer                       | M5x10x1t          |
| 39          | 2           | Front Leg End Cap            |                   |
| 40          | 2           | Rear Leg End Cap             |                   |
| 41          | 2           | Phillips Head Screw          | ST4.2x18          |
| 42          | 2           | Phillips Head Screw          | ST2.9x10          |
| 43          | 1           | Bushing                      |                   |
| 44          | 3           | Hex Head Bolt                | M8x16             |
| 45          | 1           | Round Magnet                 |                   |
| 46          | 1           | Belt Wheel                   |                   |
| Part number | s are requi | red when ordering parts.     |                   |

## **HARDWARE LIST**

| PART# | QTY | DESCRIPTION             |                     |
|-------|-----|-------------------------|---------------------|
| 47    | 1   | Middle Axle Assembly    |                     |
| 48    | 3   | Hex Head Bolt           | M8                  |
| 49    | 1   | Belt                    |                     |
| 50    | 1   | Right Shroud            |                     |
| 51    | 15  | Phillips Head Screw     | ST5x20              |
| 52    | 2   | Flange Nut              | M10x1               |
| 53    | 2   | Chain Adjuster Bolt     | M6x30               |
| 54    | 2   | Chain Adjuster U Washer |                     |
| 55    | 2   | Hex Head Bolt           | M6                  |
| 56    | 1   | Tension Spring          | L54 x φ15 x φ1.5    |
| 57    | 1   | Hex Head Bolt           | M5x50               |
| 58    | 2   | Spring Ring             | D12                 |
| 59    | 6   | Brake Magnet            |                     |
| 60    | 1   | Brake Magnet Frame      |                     |
| 61    | 1   | Magnetic Board Axle     |                     |
| 62    | 2   | Hex Head Bolt           | M6x16               |
| 63    | 2   | Spring Washer           | M6                  |
| 64    | 2   | Washer                  | M6x12x1t            |
| 65    | 2   | Nylon Nut               | M8                  |
| 66    | 1   | Cock Wheel              |                     |
| 67    | 1   | Washer                  | M8x14x1             |
| 68    | 1   | Tension Spring          | L104 x φ18 x φ2     |
| 69    | 1   | Cock Wheel Rod          |                     |
| 70    | 1   | Allen Head Screw        |                     |
| 71    | 2   | Nut                     | M10x1               |
| 72    | 1   | Little Belt Wheel       |                     |
| 73    | 1   | Flywheel Axle           |                     |
| 74    | 1   | Flywheel                |                     |
| 75    | 1   | Tapered Bushing         |                     |
| 76    | 2   | Hex Head Bolt           | M5                  |
| 77    | 1   | Spring Washer           | M20                 |
| 78    | 2   | Bearing                 | 6004RS              |
| 79    | 1   | Magnet Sensor           |                     |
| 80    | 2   | Nut                     | (Seat Pad Hardware) |

Part numbers are required when ordering parts.

## **EXPLODED VIEW DIAGRAM**

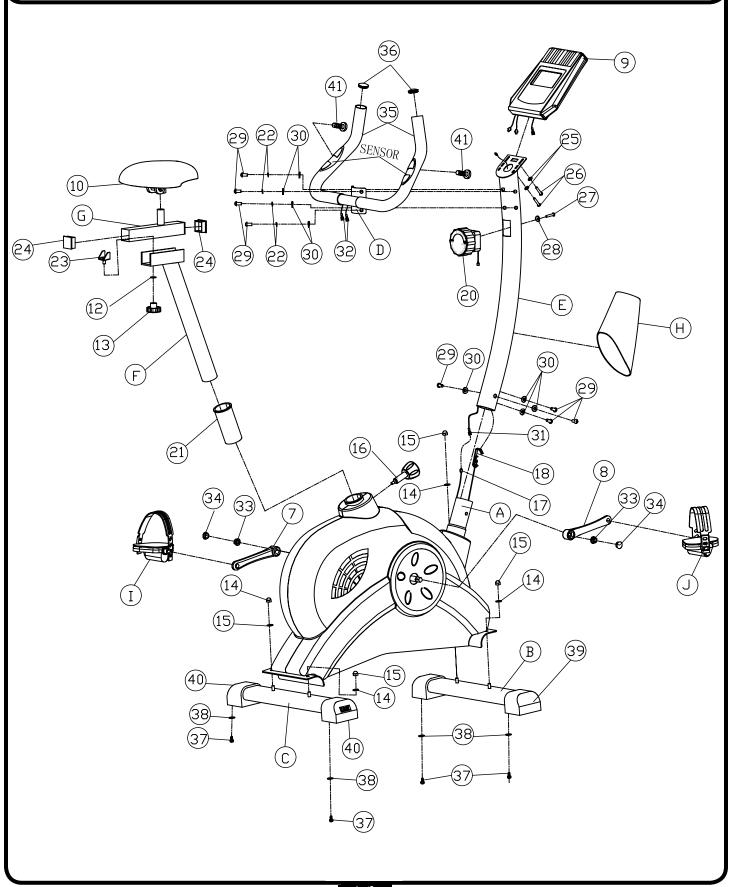

# **EXPLODED VIEW DIAGRAM** (<u>5</u>) (2)**(4)** (3) (E) (2) (2)<u>(5)</u> (<u>5</u>) 000 (<del>5</del>0)

