

MEC-COM-M114

Mini PCI-e 4-port RS-232 serial board with power input

User's Manual

Third Edition, February 2014



© 2014 Cervoz Co., Ltd. All rights reserved.

Reproduction without permission is prohibited

Mini PCI-e Serial Card

User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2014 Cervoz Co., Ltd. All rights reserved. Reproduction without permission is prohibited.

Trademarks

Cervoz is a registered trademark of Cervoz Co., Ltd. All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Cervoz.

Cervoz provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Cervoz reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Cervoz assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

<http://www.cervoz.com/support/technical.php>

Cervoz Co., Ltd.

Tel: +886-2-2911-9599

Fax: +886-2-2911-9566

Table of Contents

Chapter 1	Introduction	4
	Overviews	4
	Features	4
	Installation Flowchart	5
	Package Checklist	5
Chapter 2	Hardware Installation	6
Chapter 3	Software Installation	10
Appendix	Pin Assignments	15
	Board Side Pin Assignments	15
	Device Side Pin Assignments	17
	Technical Reference	18
	MEC-COM-M114 Specifications	18
	MEC-COM-M114 Dimensions	19
	Product Warranty Statement	20

1

Introduction

Overview

MEC-COM-M114 is a serial communication card for embedded PC. The card follows the Mini PCI-e standard which is compliant with PCI Express x 1 classification and small form factor (30.00 x 50.95 mm). This board fits in any host computer that has Mini PCI-e card slots.

Features


The PCI Express boards have the following outstanding features:

- Single-Lane (x1) PCI-Express with throughput up to 2.5Gbps
- Fully compliant with PCI-Express Base Specification Rev 1.1
- Top serial transmission performance up to 921.6 Kbps baud rate
- FIFO 128 Bytes, 15 KV ESD protections on board
- H/W, S/W automate flow control supported
- Each port supports 5V or 12V power output by jumper setting

Installation Flowchart

Installation Flowchart of MEC-COM-M114

The following flowchart provides a brief summary of the procedure you should follow to install the Mini PCI-e card:

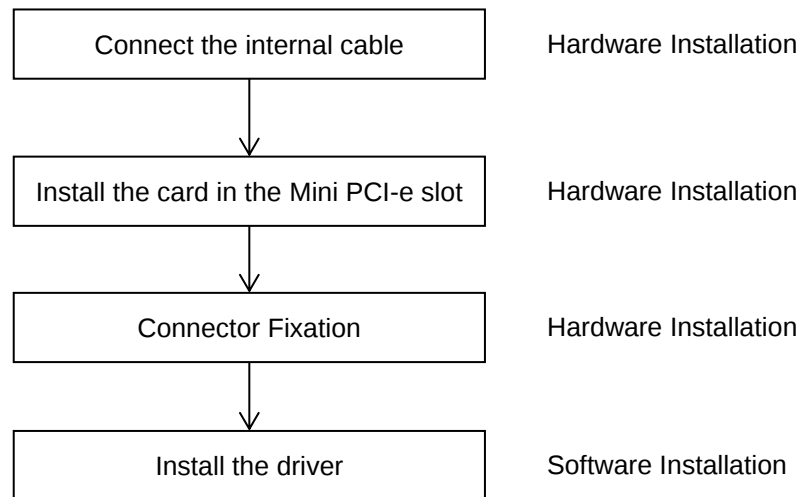

Package Checklist

The following items are included in the Mini PCI Express board Package:

- Mini PCI-e Card x 1
- Bracket x 2
- 20Pin Internal Cable w/ two DB9 Male Connectors (30cm) x 2
- 4Pin Power Input Cable (30cm) x 1
- Quick Installation Guide (Printed) x 1
- Driver CD x 1

Note: Notify your sales representative if any of the above items are missing or damaged.


2

Hardware Installation

This chapter describes the PCI Express Series hardware installation procedure. Since the BIOS automatically assign the PCI Express board's IRQ number and I/O addresses, you must plug in the board before installing the driver.

Step 1 **Connect the internal cable to the card**

1. Connect the internal cable to the card
2. Connect the power cable to the card

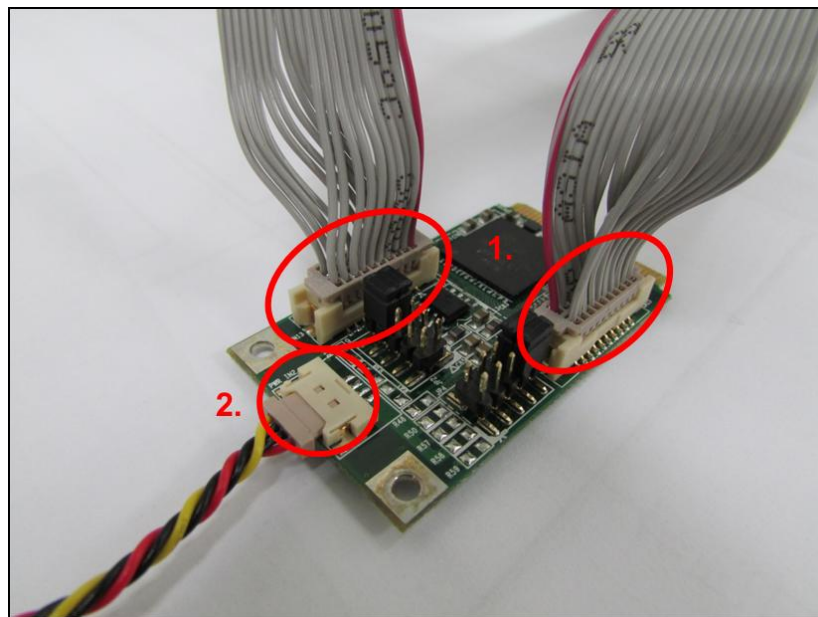


Note

The power cable will be needed if you wish to have the COM ports powered.
(Please refer to the user manual appendix for the power select jumper setting)

Step 2

Install the card to the Mini PCI-e slot

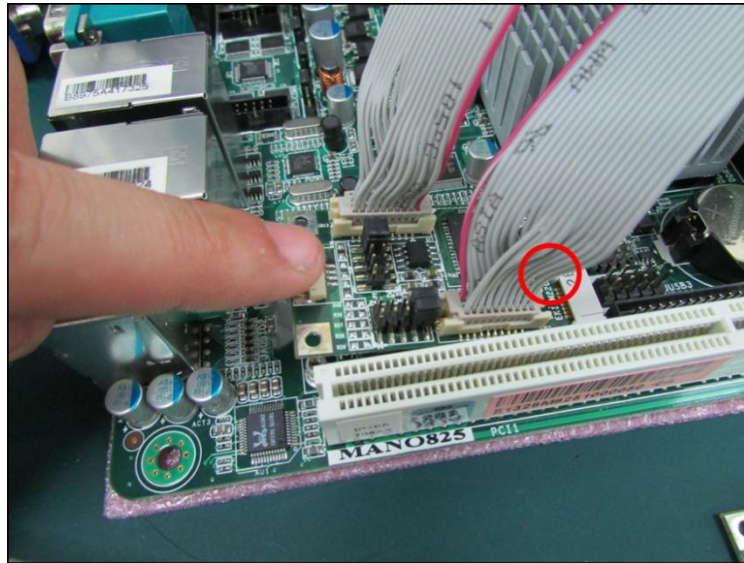

Make sure you install the card in the right position (fool-proof design)


Step 3

Fix the card on the motherboard (clip type or screw type)


There are 2 options to fix the card. It depends on the design of the motherboard (clip or screw).

1. Clip type: make sure you press down the card and let the clips fix the card
2. Screw type: make sure you tighten up the screws to fix the card

Clip type

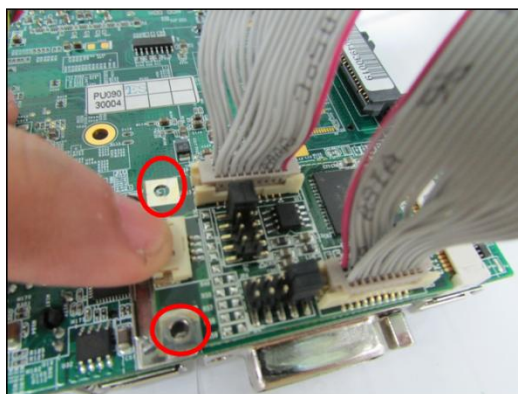


Screw type

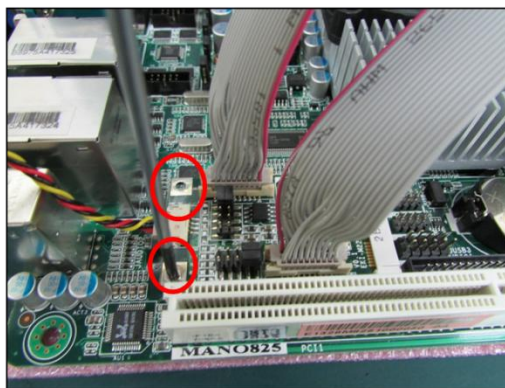


Step 4 Card installation completed

Clip type


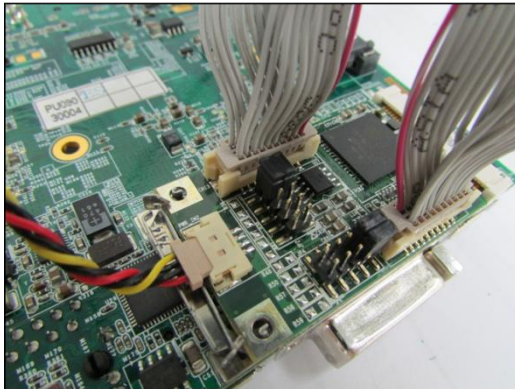


Screw type

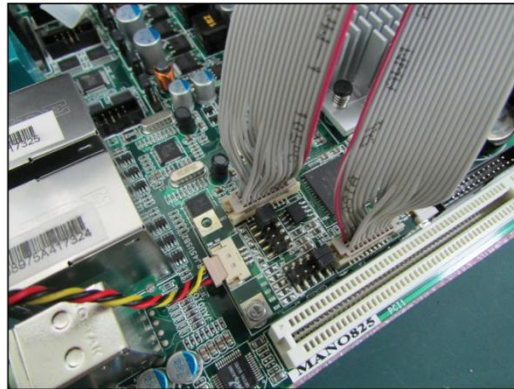

Step 5 Connect the power cable to the 4PIN power connector


Connect the power cable to the big 4PIN power connector from the power supply

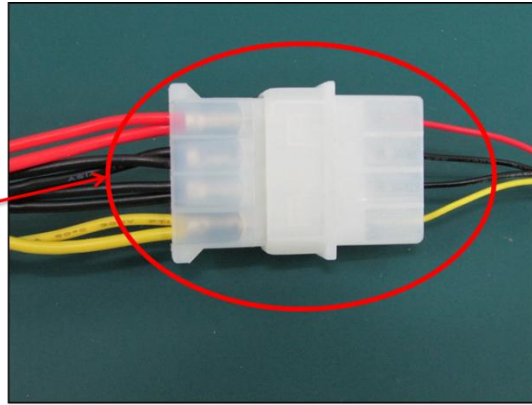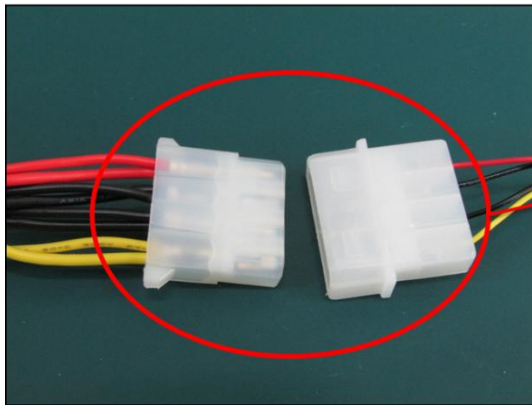

Connector Fixation


1. Standard PCI/PCIe Bracket

PCI / PCIe IO Bracket

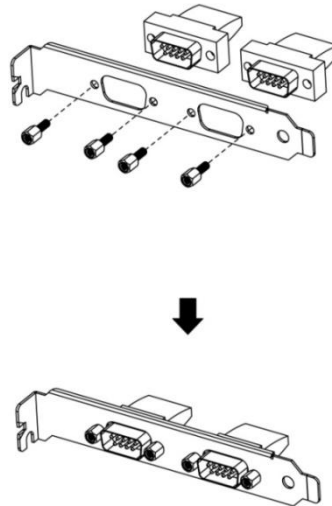


2. Customized Front / Rear Plate

Front / Rear I/O Plate

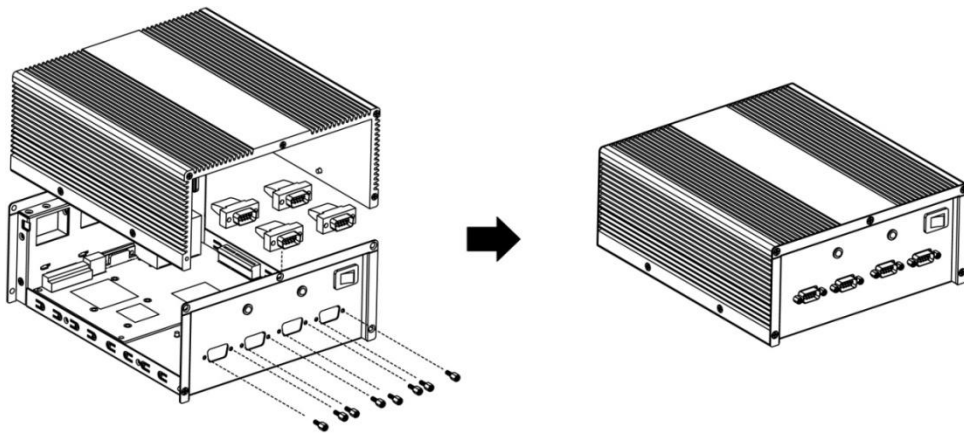

Universal Bracket

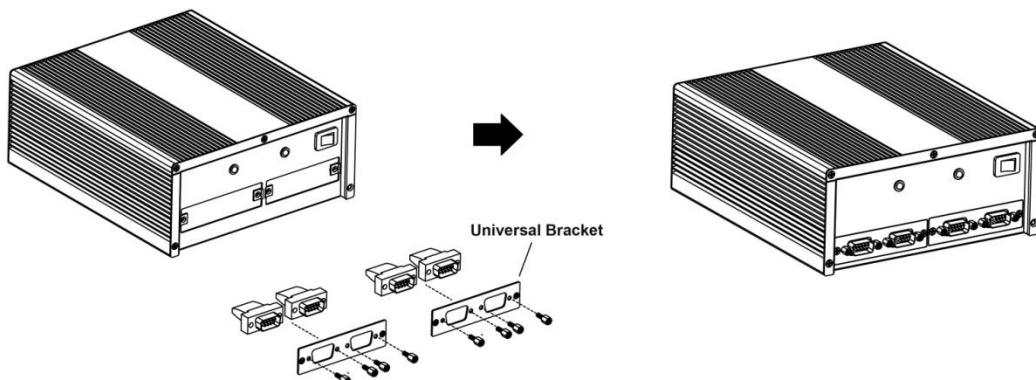

3

Software Installation

This chapter gives installation, configuration, and update/removal procedures for the driver for Win 2003, Win XP, Win Vista, and Win 7.


Step 1 Turn on PC and start Windows



Note	XP OS as example
-------------	------------------


Step 2 Windows automatically detects the new device

1. If the card is installed properly, system would detect the new device and the hardware wizard would start automatically.
2. Select "No, not this time"
3. Click "Next"

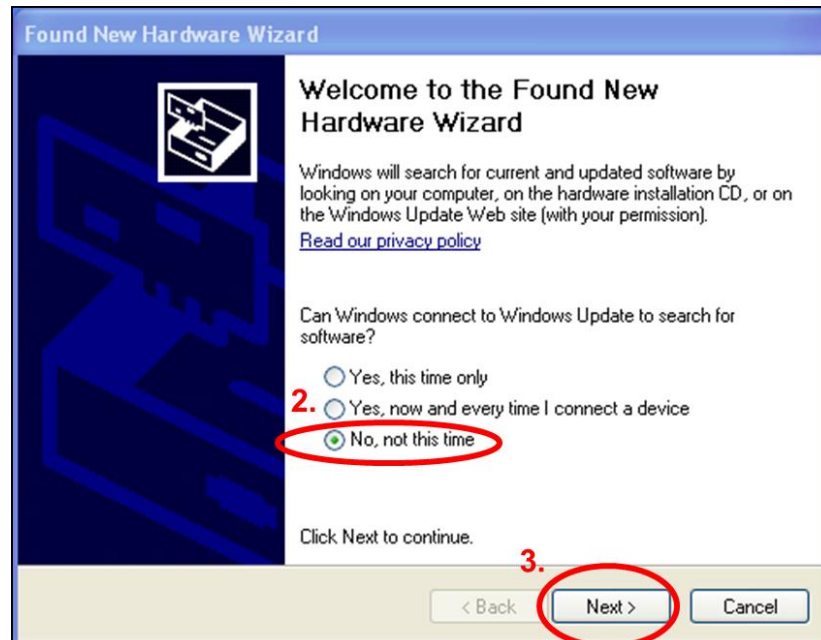


Step 3 Insert CD

1. Select "Install from a list or specific location (Advanced)"
2. Click "Next"

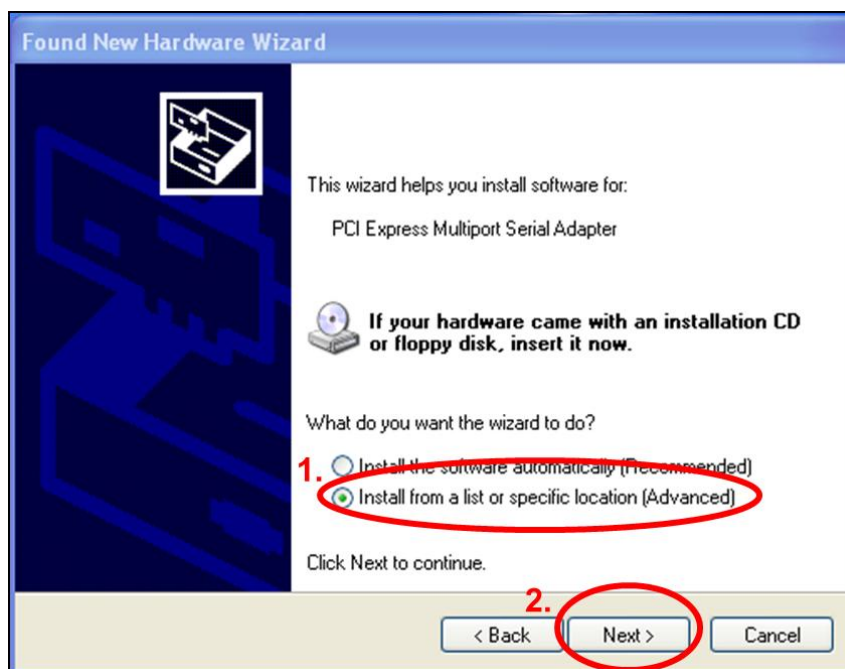


Step 4 Choose installation options

1. Select "Search for the best driver in these locations."
2. Select "Include this location in the search:"
3. Click "Browse"

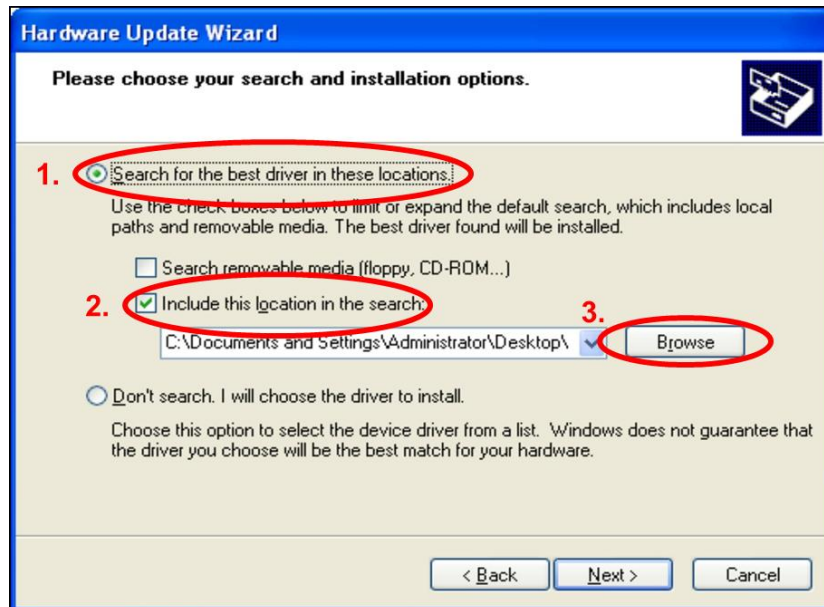


Step 5 Browse for folder (Ex.: XP 32bit)

1. Select the driver by route: *My Computer -> CD or DVD drive -> MEC-COM-M114 -> Driver -> Win_XP -> Win_XP 32bit*
2. Click "OK"

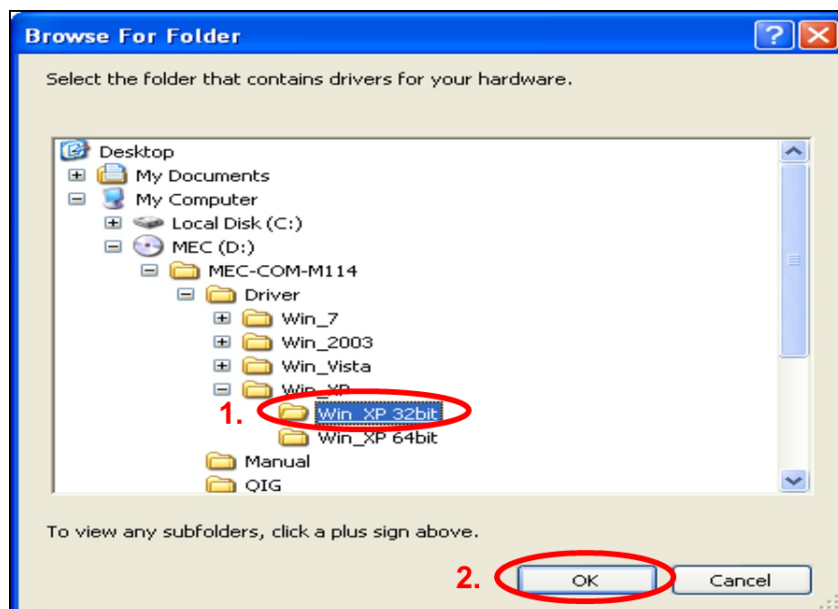


Step 6 Confirm driver folder

Click "Next"

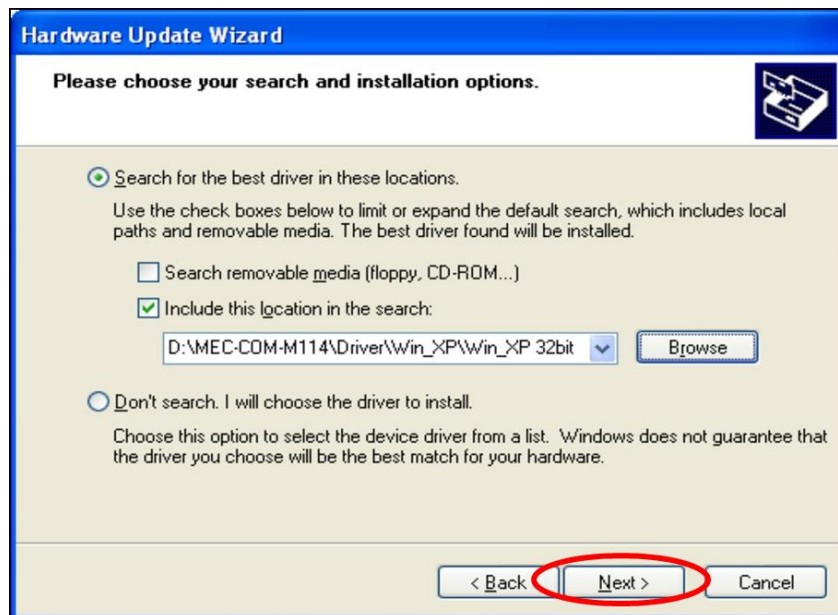


Make sure you select the correct driver.

Step 7 Installation in progress

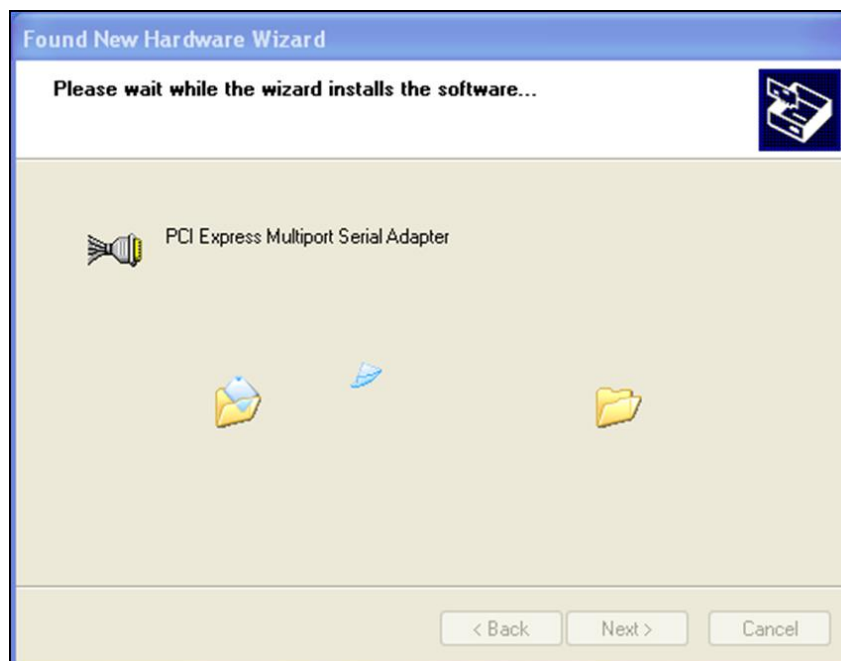


Step 8 Driver installation completed

Driver installation is completed, click "Finish"

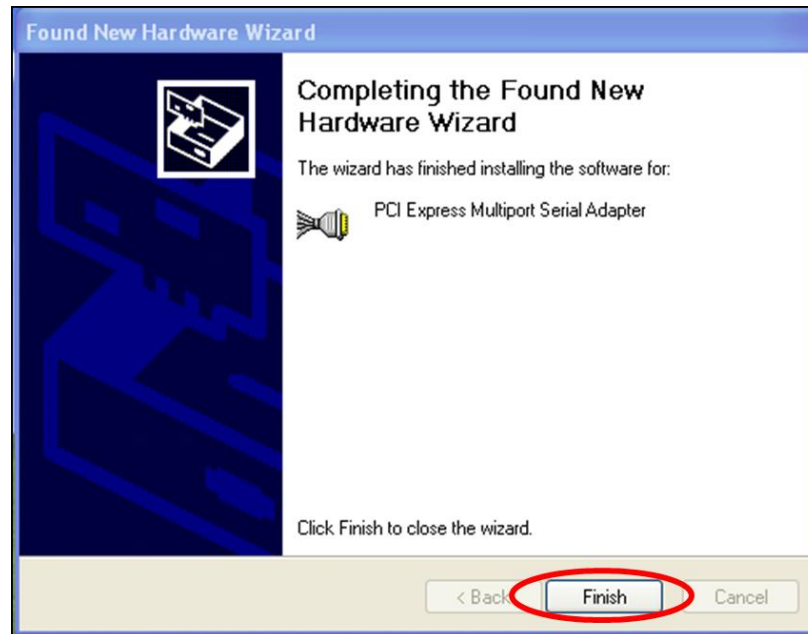


Step 9 Confirm if driver is installed

1. Start "Computer Management" program
2. Go to the route:
My Computer → *Manage* → *Device Manager* → *Multi-port serial adapters*
3. You would find driver name: PCI Express Multiport Serial Adapter
4. Device is ready to be used

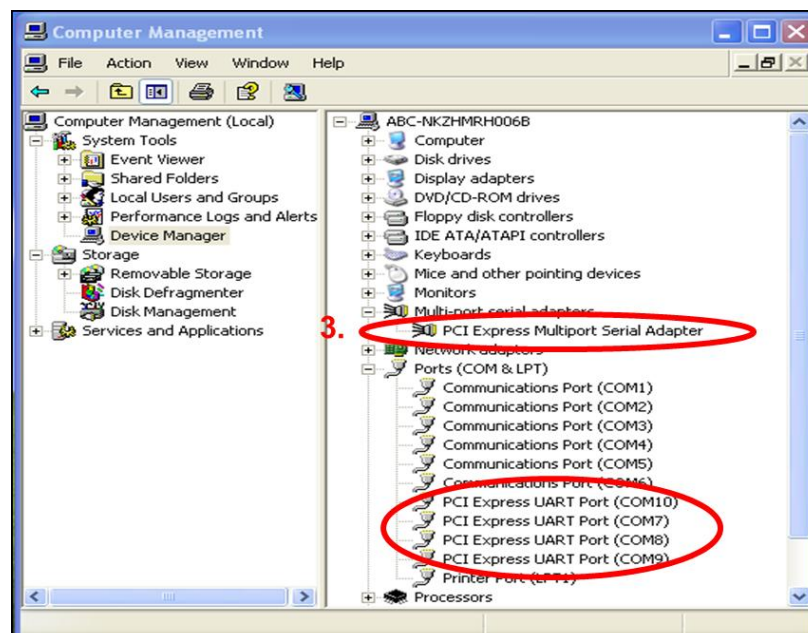

Appendix

□ Pin Assignments

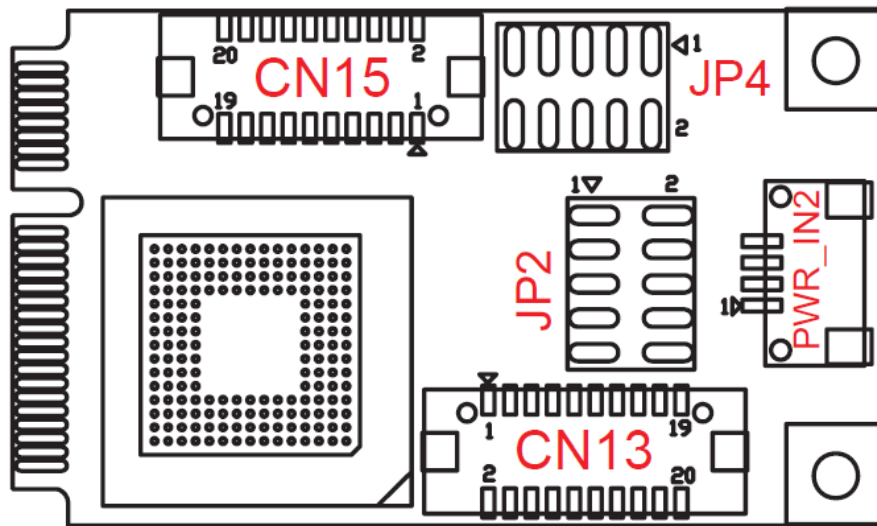

Board Side Pin Assignments

Wire to Board Connector (CN15)

Pin	Description	Pin	Description
1	DCD_1	2	DCD_2
3	DSR_1	4	DSR_2
5	RXD_1	6	RXD_2
7	RTS_1	8	RTS_2
9	TXD_1	10	TXD_2
11	CTS_1	12	CTS_2
13	DTR_1	14	DTR_2
15	RI_1	16	RI_2
17	N/C	18	N/C
19	GND	20	GND

Wire to Board Connector (CN13)

Pin	Description	Pin	Description
1	DCD_3	2	DCD_4
3	DSR_3	4	DSR_4
5	RXD_3	6	RXD_4
7	RTS_3	8	RTS_4
9	TXD_3	10	TXD_4
11	CTS_3	12	CTS_4
13	DTR_3	14	DTR_4
15	RI_3	16	RI_4
17	N/C	18	N/C
19	GND	20	GND

DB9 Male Connector-1/2 With Power Select (JP4)

DB9 Male Connector-1	JP4	DB9 Male Connector-2	JP4
Pin 9 = +5V	Short 1-3	Pin 9 = +5V	Short 2-4
Pin 9 = +12V	Short 3-5 or 5-7	Pin 9 = +12V	Short 4-6 or 6-8
Pin 9 = RI	Short 7-9 (Default)	Pin 9 = RI	Short 8-10 (Default)

DB9 Male Connector-3/4 With Power Select (JP2)


DB9 Male Connector-3	JP2	DB9 Male Connector-4	JP2
Pin 9 = +5V	Short 1-3	Pin 9 = +5V	Short 2-4
Pin 9 = +12V	Short 3-5 or 5-7	Pin 9 = +12V	Short 4-6 or 6-8
Pin 9 = RI	Short 7-9 (Default)	Pin 9 = RI	Short 8-10 (Default)

Power Input Connector (PWR_IN2)

Pin	Description
1	+5V
2	GND
3	GND
4	+12V

Device Side Pin Assignments

RS232 Port DB9 Male Connector-1/2/3/4

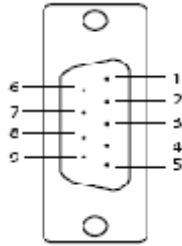

DB9 Male Connector-1		DB9 Male Connector-2		DB9 Male Connector-3		DB9 Male Connector-4	
Pin	Description	Pin	Description	Pin	Description	Pin	Description
1	DCD_1	1	DCD_2	1	DCD_3	1	DCD_4
2	RxD_1	2	RxD_2	2	RxD_3	2	RxD_4
3	TxD_1	3	TxD_2	3	TxD_3	3	TxD_4
4	DTR_1	4	DTR_2	4	DTR_3	4	DTR_4
5	GND	5	GND	5	GND	5	GND
6	DSR_1	6	DSR_2	6	DSR_3	6	DSR_4
7	RTS_1	7	RTS_2	7	RTS_3	7	RTS_4
8	CTS_1	8	CTS_2	8	CTS_3	8	CTS_4
9	RI_1	9	RI_2	9	RI_3	9	RI_4

Technical Reference

MEC-COM-M114 Specifications

General

PCI-Express Revision	PCI-Express Base Specification Rev 1.1
PCI-Express Electromechanical Revision	PCI-Express Mini Card Electromechanical Rev. 1.1

Hardware

Controllers	OXPCIe954 (16C550C compatible)
Bus	Single-Lane (x1) PCI-Express with throughput up to 2.5Gbps

Hardware

Controllers	OXPCIe954 (16C550C compatible)
Bus	PCI Express X1

Interface (Connector)

RS-232	4 (DB9 male)
--------	--------------

Serial Line Protection

ESD Protection	15 KV on board
----------------	----------------

Serial Port Power

Voltage Select	5V or 12V
----------------	-----------

Performance

Baud Rate	Asynchronous baud rates up to 921.6 Kbps
-----------	--

Serial Communication Parameters

Data Bits	5, 6, 7, 8
Stop Bits	1, 1.5, 2
Parity	No Parity bit Odd Parity bit Even Parity bit Parity bit forced to 1 Parity bit forced to 0
Flow Control	RTS/CTS, XON/XOFF

Serial Signals

RS-232	TXD, RXD, RTS, CTS, DTR, DSR, DCD, GND
--------	--

Parallel Signals

SPP / EPP / ECP	STROBE, DATA0~DATA7, ACK, BUSY, PE, SEL, AUTOFL, ERROR, INIT, SELIN, GND
-----------------	--

Driver Support

Operating Systems	Win 2003, Win XP, Win Vista, Win 7
-------------------	------------------------------------

Power Requirement

Power Consumption	180mA@3.3V
-------------------	------------

Dimensions

Width x Length (mm)	30.00 x 50.95
---------------------	---------------

Environmental Limits

Operating Temperature	-20°C ~ 70°C
Storage Temperature	-20°C ~ 85°C
Humidity	5% ~ 95%


Regulatory Approvals

EMC	CE, FCC
EMI	EN 55022, EN61000-3-2, EN61000-3-3, FCC Part 15 Subpart B Class B
EMS	En 55024, IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-6, IEC 61000-4-8, IEC 61000-4-11

Reliability

MTBF	2,321,370 hr
Warranty	3 years

MEC-COM-M114 Dimensions

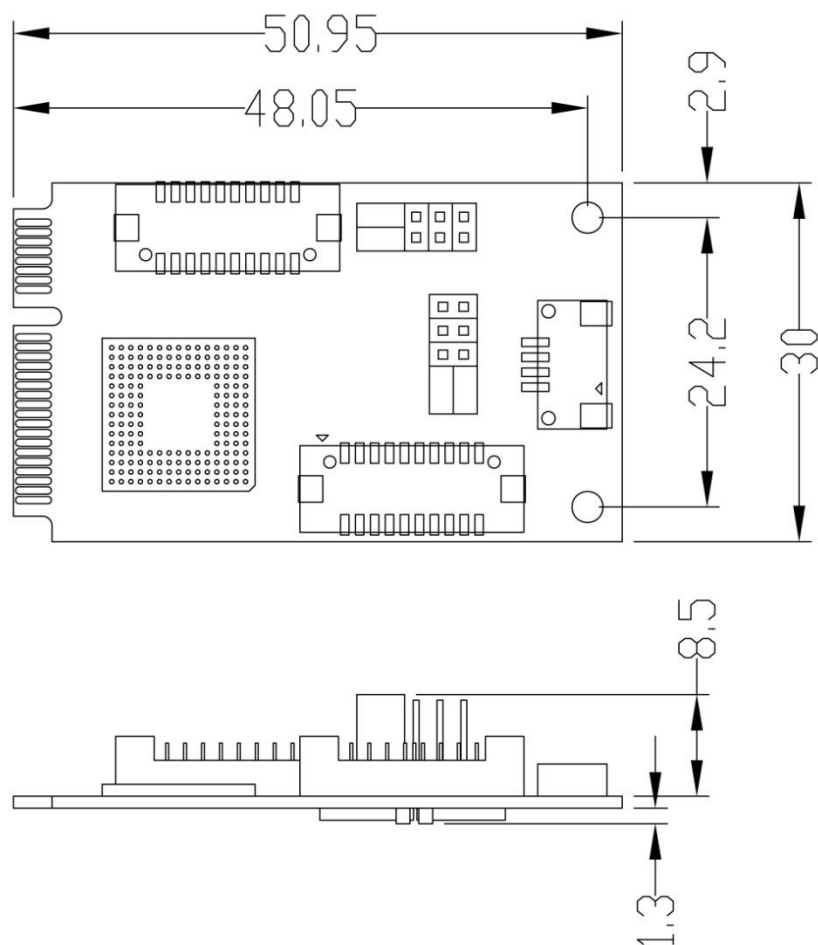

❑ Product Warranty Statement

Cervoz products are warranted to be free from manufacturing defects in materials and workmanship starting from the date of delivery. The actual warranty period of Cervoz products vary with product categories. Complete details can be found here:

<http://www.cervoz.com/support/warranty.php>

During the warranty period, we shall, at our option, either repair or replace any product that proves to be defective under normal operation.

Defects, malfunctions, or failures of the warranted product caused by damage resulting from natural disasters (such as by lightening, flood, earthquake, etc.), environmental and atmospheric disturbances, other external forces such as power line disturbances, plugging the board in under power, or incorrect cabling, and damage caused by misuse, abuse, and unauthorized alteration or repair, and the product in question is either software, or an expendable item (such as a fuse, battery, etc.), are not warranted.

RMA Instruction

- Customers must fill in Cervoz Return Merchandise Authorization (RMA) Request Form and obtain a RMA number prior to returning a defective product to Cervoz for service.
- Customers must collect all the information about the problems encountered and note anything abnormal and describe the problems on the "Cervoz Service Form" for the RMA number application process.
- Charges may be incurred for certain repairs. Cervoz will charge for repairs to products whose warranty period has expired. Cervoz will also charge for repairs to products if the damage resulted from acts of God, environmental or atmospheric disturbances, or other external forces through misuse, abuse, or unauthorized alteration or repair. If charges will be incurred for a repair, Cervoz lists all charges, and will wait for customer's approval before performing the repair.
- Customers agree to insure the product or assume the risk of loss or damage during transit, to prepay shipping charges, and to use the original shipping container or equivalent.
- Customers can send back faulty products with or without accessories (manuals, cable, etc.) and any components from the card. If the components were suspected as part of the problems, please note clearly. Otherwise, Cervoz is not responsible for the devices/parts.
- Repaired items will be shipped along with a "Repair Report" detailing the findings and actions taken.

Limitation of Liability

Cervoz' liability arising out of the manufacture, sale, or supplying of the product and its use, whether based on warranty, contract, negligence, product liability, or otherwise, shall not exceed the original selling price of the product. The remedies provided herein are the customer's sole and exclusive remedies. In no event shall Cervoz be liable for direct, indirect, special or consequential damages whether based on contract of any other legal theory.