

1000E Series

FIBER OPTIC SERIAL DIGITAL VIDEO TRANSPORT SYSTEM



BCI reserves the right to make changes to the products described herein without prior notice or consent. No liability is assumed as a result of their use or application. All rights reserved.

©2005 Broaddata Communications, Inc.



SAFETY INSTRUCTIONS AND COMPLIANCE DECLARATIONS

PLEASE OBSERVE THE FOLLOWING SAFETY
PRECAUTIONS AS OUR PRODUCTS CONTAIN

CLASS I LASER PRODUCTS

WARNING

Do not disconnect the fiber optic connector while the unit is powered up. Exposure to laser radiation is possible when the laser fiber optic connector is disconnected while the unit is powered up.

Although the fiber optic connectors in this product emit only Class 1 energy that is below the levels considered to be hazardous, one should never stare directly into a fiber optic connector or an unconnected fiber end unless one can be certain that no exposure to laser energy could occur.



CAUTION

This manual is intended for use by trained service personnel. The use of controls, making adjustments, or performing operations other than those specified may result in hazardous radiation exposure.

The following label or equivalent is located on the surface of laser products. This label indicates that the product is classified as a CLASS 1 LASER PRODUCT.



SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

TABLE OF CONTENTS

1.0	PRODUCT DESCRIPTION	5
2.0	SETUP	7
2.1	MOUNTING	8
2.2	CABLING AND CONNECTORS	8
2.2.1	ELECTRICAL CABLE CONNECTION	8
2.2.2	DIGITAL VIDEO CONNECTION	8
2.2.3	OPTICAL FIBER CONNECTION	10
2.4	AC POWER CONNECTION	12
3.0	OPERATION	12
4.0	MAINTENANCE AND TROUBLESHOOTING	13
4.1	MAINTENANCE	13
4.2	TROUBLESHOOTING	14
5.0	SPECIFICATIONS	16
6.0	SERVICE PROCEDURE	18
6.1	REPLACEMENT POLICY	18
6.2	RETURN AND REPAIR SERVICE	18
7.0	LIMITED WARRANTY	19

1.0 PRODUCT DESCRIPTION

The 1000E Series is a high performance, yet affordable, Fiber Optic Serial Digital Video Transport System that is designed to carry one (1) SMPTE-259M SDV channel, over long distances through either singlemode or multimode fiber. Many versions of optical transmitter and receiver combinations are available to address different distance requirements.

No user adjustments are required in the 1000E system due to the use of advanced digital fiber optic transmission technology. This allows for a quick and easy setup, offering trouble-free operation for many years to come. The 1000E receivers provide for two serial video distribution channels and the 1000E transmitters have a loop-through serial video port.

The 1000E is available in two packaging options: a rugged, standalone unit housed in a compact case, or a plug-in card for our card cage system. Panel connectors are provided for the digital serial video (BNC connector) and fiber connectors (FC-type for the singlemode version, or ST-type for the multimode version). The 1000E is easily monitored by front panel LED indicators for power, optical link, and channel activity. Figure 1-1 presents front panel diagrams of the 1000E units.

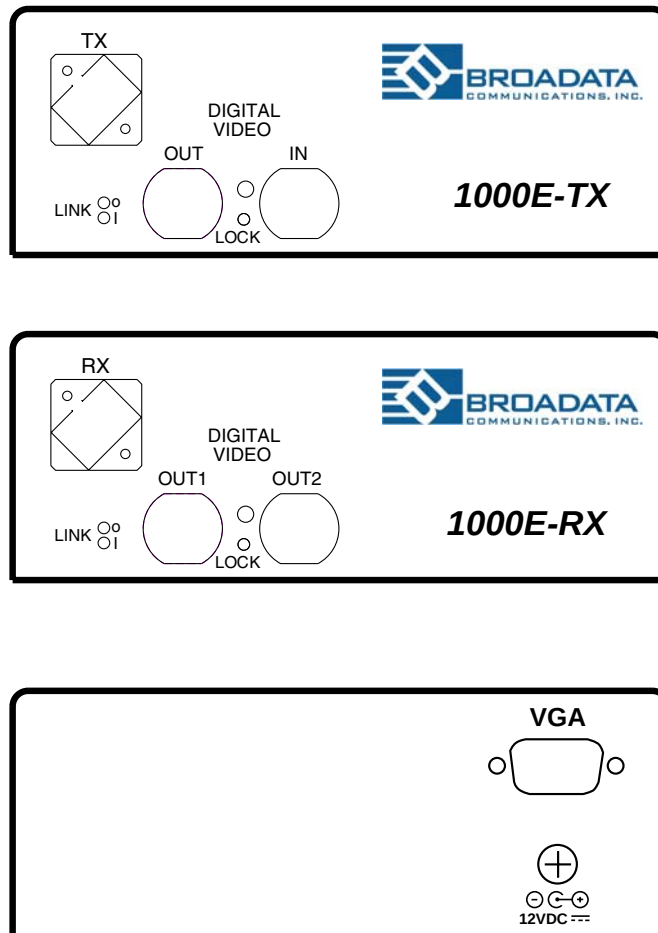


Figure 1-1
1000E Front Panels

2.0 SETUP

The BCI 1000E Series units are used in pairs. In a unidirectional application, a 1000E transmitter (1000E-T) is located at the near-end and connected through one fiber to a 1000E receiver (1000E-R) located at the far-end. In a bi-directional application, one 1000E transceiver unit is located at the near end and connected through two optical fibers to identical 1000E transceiver located at the far end of the link. Each unit provides a separate electrical interface connector for the Serial Digital Video data signals. Connections are one to one between both units. Figure 2-1 depicts a typical installation.

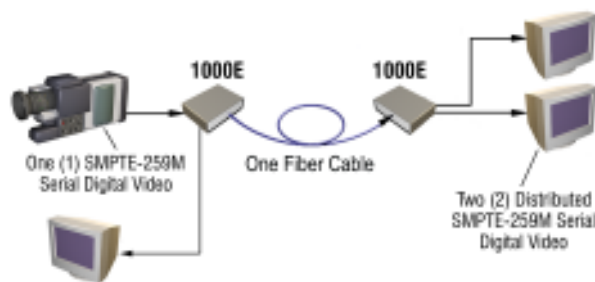


Figure 2-1
1000E Setup

2.1 Mounting

Before installing the units into your housing, make sure there is enough space to pull and connect both the electrical and optical cables without stressing them beyond the manufacturer's limitations (also known as the bend radius minimum). Rack Mount kits are available through special order.

2.2 Cabling and Connectors

In order to set up the BCI 1000E properly, make sure to observe the following instructions when installing the proper cables. The 1000E requires two parts to the cabling setup: the electrical and the optical. For the optical part, observe the following procedures, as there are various types of optical connectors as illustrated on the following page.

2.2.1 Electrical Cable Connection

The only available cable connections on the electrical side are for video sources.

Proceed with the following instructions when connecting the various electrical devices.

2.2.2 Digital Video Connection

The 1000E unit provides 75 Ohm BNC connectors for digital video input and output ports. Use the following procedure for connections.

1. On the near end, connect the user's digital video source to the 1000E-T (transmitter) unit's digital video input port, using a coaxial cable (i.e., Belden 8281 or better). The digital video output port can be connected to a video monitor, using a coaxial cable, for monitoring purposes (See Figure 2-2).
2. On the far end, connect the 1000E-R (receiver) unit's digital video output ports (1 to 2) to the user's digital video receivers, using coaxial cables. (See Figure 2-2).

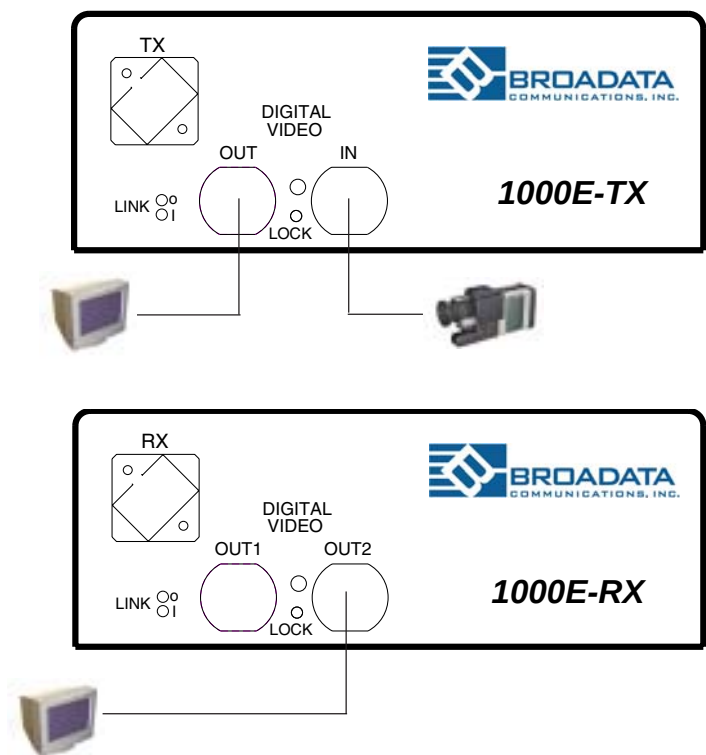


Figure 2-2
Video Connection for 1000E Receiver and Transmitter

2.2.3 Optical Fiber Connection

Most cable manufacturers identify individual fibers in the fiber cable. Select an appropriate terminated fiber. Each unit's optical ports in the system are specified for use with multimode (62.5/125 micron) fiber, or singlemode (9/125 micron) fiber. Follow these instructions for installing and connecting the fiber optic links:

1. Ensure the power is off before proceeding with the fiber optic cable installation.
2. Prior to connecting the fiber optic cables, remove and save the dust caps from the optical port of both the 1000E units and the user's device. Clean the fiber optic connector and use a lint-free cloth dampened with alcohol to thoroughly wipe the side and end of the ferrule. Table 1 shows the connection mechanisms for both ST and FC connectors.
3. Cross-connect the fibers from one unit to the other connecting the near end 1000E unit's optical TX port to the far end 1000E unit's optical RX port as illustrated in Figure 2-3. Observe the type of connector you have and connect the optical connector by following the instructions and guidelines provided in Table 1.
4. Make the following connections between the 1000 units. Connect the near-end 1000E-T (transmitter) unit's optical TX port to the far-end 1000E-R (receiver) unit's optical RX port with an optical fiber.

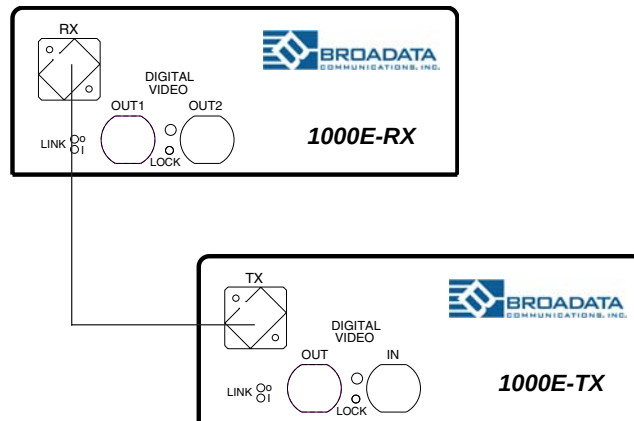


Figure 2-3
Optical Fiber Connection

Connector	Illustration	Description
ST	 ST Connector	Hold the connector by the strain-relief boot* and insert the connector ferrule into the port. Rotate the boot until the "key" engages in the slot of the coupling. Push the connector housing forward until it can be turned clockwise to latch to the port.
FC	 FC Connector	Hold the connector by the strain-relief boot* and insert the connector ferrule into the port. Rotate the boot until the "key" engages in the slot of the coupling. Push the connector housing forward and screw clockwise until it is tight.

Table 1
Fiber Optic Connector Legend

2.4 AC Power Connection

Congratulations! You are now ready to power up the BCI 1000E and set up your network connection. In order to make sure that you have a proper installation, please observe the following:

1. Your AC jack has power.
2. Your electrical system has proper grounding (this ensures that your power supply does not suffer from voltage variations).
3. **Power Surge Protection. This is optional**, but highly recommended. A UPS system provides voltage regularity as well as prevents spikes from occurring, thus protecting your 1000E from sensitive voltage conditions.

The 1000E derives power from an external 12 VDC @1A power supply. This power supply comes standard for the 1000E unless otherwise specified.

To provide power to the 1000E, simply connect the power cord, already provided with the units, and connect it to the wall jack. (You will find one power cord per unit). Once the power cord has been connected to the wall jack, connect the other end to the unit and turn the switch on (I).

If you have any problems or concerns, regarding the installation, make sure that you have taken the proper steps to ensure a proper power connection. Otherwise, feel free to contact us for any questions you may have.

3.0 OPERATION

After the installation procedure is completed, the units are ready for operation. To operate the BCI 1000E units, simply apply power as indicated in the previous step. Note that the front panel link status indicator, shown in Table 2, will be activated.

4.0 MAINTENANCE AND TROUBLESHOOTING

4.1 Maintenance

There is no operator maintenance other than keeping the units clean. However, observe the following light indicators to make sure that the unit is working properly:

TRANSMITTER	Description
LOCK	This GREEN LED indicates that the digital video signal is locked
LINK O	This GREEN LED indicates that the electrical digital video signal is detected.
LINK I	This RED LED indicates that the transmit module is properly powered. The LED will be OFF when Link O is ON.

Table 2(a)
TX Status Indicators

RECEIVER	Description
LOCK	This GREEN LED indicates that the digital video signal is locked.
LINK O	This GREEN LED indicates that the optical signal is received and detected.
LINK I	This RED LED indicates that the receiver module is properly powered. The LED will be OFF when Link O is ON.

Table 2(b)
RX Status Indicators

4.2 Troubleshooting

If the BCI 1000E units do not operate properly after installation, check for possible cable breaks, loose connections, and incorrect cable connections. If a problem exists on the fiber link, please check your fiber connectors for improperly cleaned fiber cables and connectors. If problems persist that may be fiber related, contact BCI at 1-800-214-0222 for further assistance.

For electrical problems, perform the following troubleshooting procedures:

- 1. If the POWER indicator is OFF, check for the following:**
 - a. The line cord is plugged into the unit and your outlet has power.
 - b. The 1000E unit is switched on.
 - c. Check for blown fuses (located in the rear panel-entry module).
- 2. If the POWER indicator is ON, but the Optical Link indicator is OFF, check for the following:**
 - a. Make sure the appropriate (singlemode or multimode) fibers are being used.
 - b. Fiber and fiber connectors are not broken. Ensure that the optical loss does not exceed the specified optical power attenuation .
 - c. For each unit, the transmit (TX) fiber is connected to the other unit's receiver (RX).
- 3. If the POWER indicator and Optical Link indicator are ON, but the video channels are not operating, then:**
 - a. Check to see that the attached user equipment is turned on.

- b. Both ends of the link are connected to the corresponding equipment and to the same corresponding channel port.
- c. Cable connections at both the video channels are securely fastened to each connector. Turn the power off, then back on to reset the link.
- d. Output levels of the user's video sources are not above the allowed input levels of the 1000E units.

5.0 SPECIFICATIONS

Digital Audio

Signal Format	SMPTE-259M Serial Digital Video
Signal Resolution	10 bits
Data Rate	143 Mbps to 540 Mbps
Signal Level	800mVp-p +/- 10%
Return Loss	> 15dB
Connector	75 Ohm BNC
Number of Input Video Loop-Through	1
Number of Video Output	2

1000E Edge Support*

Audio	Embedded or De-embedded Digital/Analog Audio
Video Conversion	Analog Composite/Component Video Conversion

*Please refer to 1000E-Edge data sheet for detailed technical specifications.

Physical

Dimension (H x W x D)	
Standalone 1000	1.72" x 4.36" x 6.9"
Card-cage plug-in card	5.24" x 0.94" x 11.6"
Power Level	+12 VDC @ 1A
Operating Temperature	0 to +50°C
Humidity	0 to 95% RH, non-condensing
Status Indicators	Power, Optical Link, Video Activity

Optical

Fiber Type	Multimode and Singlemode
Number of Fibers	2 or 1
Wavelength	1310 and/or 1550 nm
Fiber Optic Connector	ST (Multimode) FC (Singlemode)

6.0 SERVICE PROCEDURE

6.1 Replacement Policy

Standard products found defective on arrival (DOA) will be replaced, based on availability. Please call Customer Service at **800-214-0222** for information.

6.2 Return/Repair Service

The 1000E System contains no user serviceable components. If you have a problem with your unit, please contact the Customer Service Department. To facilitate our return/repair processing please contact Broadata Communications, Inc. to obtain a Return Material Authorization (RMA). Please include the following information:

- Product model number
- Serial Number
- Complete description of problem
- Hardware installation description

Broadata Communications, Inc.
2545 West 237th Street, Suite K
Torrance, CA 90505
1-800-214-0222
(310) 530-1416
(310) 530-5958 (Facsimile)
e-mail: CustomerService@Broadatacom.com
Website: www.broadatacom.com

7.0 LIMITED WARRANTY

Broaddata Communications, Inc. (BCI) warrants, for a period of one year from date of shipment, each product sold shall be free from defects in material and workmanship. BCI will correct, either by repair, or at BCI's election, by replacement, any said products that in our sole discretion prove to be defective and are returned to the manufacturing location within 30 days after such defect is ascertained. All warranties are limited to defects arising under normal use and do not include malfunctions or failure resulting from misuse, abuse, neglect, alterations, electrical power problems, usage not in accordance with product instructions, improper installation, or damage determined by BCI to have been caused by the Buyer or repair made by a third party. Limited warranties granted on products are to the initial customer end-user and are not transferable. OUR LIABILITY UNDER THIS WARRANTY SHALL IN ANY CASE BE LIMITED TO THE INVOICE VALUE OF THE PRODUCT SOLD AND BCI SHALL NOT BE LIABLE TO ANYONE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM THE USE OF ITS PRODUCTS OR THE SALE THEREOF. We make NO WARRANTY AS TO THE MERCHANTABILITY OF ANY GOODS, OR THAT THEY ARE FIT FOR ANY PARTICULAR PURPOSE OR END APPLICATION NOR DO WE MAKE ANY WARRANTY, EXPRESSED OR IMPLIED OTHER THAN AS STATED ABOVE.

Notes

Notes

Notes

Broadata Communications, Inc.
2545 West 237th Street, Suite K
Torrance, CA 90505
1-800-214-0222
(310) 530-1416
(310) 530-5958 (Facsimile)
e-mail: CustomerService@Broadatacom.com
Website: www.broadatacom.com



6000E-1000-C₁