



# **USER MANUAL**

Longo programmable controller LPC-2.ID3 special module





Written by SMARTEH d.o.o. Copyright © 2012, SMARTEH d.o.o.

User Manual

Document Version: 008

July 1, 2012





STANDARDS AND PROVISIONS: Standards, recommendations, regulations and provisions of the country in which the devices will operate, must be considered while planning and setting up electrical devices. Work on 230 VAC network is allowed for authorized personnel only.

DANGER WARNINGS: Devices or modules must be protected from moisture, dirt and damage during transport, storing and operation.

WARRANTY CONDITIONS: For all modules LONGO LPC-2 - if no modifications are performed upon and are correctly connected by authorized personnel - in consideration of maximum allowed connecting power, we offer warranty for 24 months from date of sale to end buyer. In case of claims within warranty time, which are based on material malfunctions the producer offers free replacement. The method of return of malfunctioned module, together with description, can be arranged with our authorized representative. Warranty does not include damage due to transport or because of unconsidered corresponding regulations of the country, where the module is installed.

This device must be connected properly by the provided connection scheme in this manual. Misconnections may result in device damage, fire or personal injury.

Hazardous voltage in the device can cause electric shock and may result in personal injury or death.

NEVER SERVICE THIS PRODUCT YOURSELF!

This device must not be installed in the systems critical for life (e.g. medical devices, aircrafts, etc.).

If the device is used in a manner not specified by the manufacturer, the degree of protection provided by the equipment may be impaired.

Waste electrical and electronic equipment (WEEE) must be collected separately!

LONGO LPC-2 complies to the following standards:

- EMC:EN 61000-6-2 (EN 50082), EN 61000-6-4 (EN 50081)
- LVD: IEC 61131-2
- Vibrations and climatic-mechanical: EN 60068-2-6, EN 60068-2-27, EN 60068-2-29

Smarteh d.o.o. operates a policy of continuous development. Therefore we reserve the right to make changes and improvements to any of the products described in this manual without any prior notice.

MANUFACTURER: SMARTEH d.o.o. Trg tigrovcev 1 5220 Tolmin Slovenia











# Index

# Longo programmable controller LPC-2.ID3 special module

1 DESCRIPTION	1
2 FEATURES	2
3 INSTALLATION	3
3.1 Connection scheme	5
4 TECHNICAL SPECIFICATIONS	
5 PROGRAMMERS GUIDE	9
6 CHANGES	11
7 NOTES	12





#### 1 DESCRIPTION

LPC-2.ID3 card reader (RFID identification) special module is used for a room door unlock.

On room entrance the identification card (ID card) must be approached to the identification module. In case that ID card is read correctly (correct RFID key standard) the green LED switches on and a short whistle appears. If ID card for correspondent room is valid (valid ID card number), green LED switches on again and a short whistle appears. After few moments the electric lock will open (use LPC Manager for function logics). If the ID card number is wrong, the red LED switches on and a longer whistle appears (refer to the Table 5).

LPC-2.ID3 is connected to the main control unit RS485 port using interconnection cable (e.g. SIC4-7) which must be ordered together with LPC-2.ID3 reader. When more special modules (e.g. 4xLPC-2.ID3) are connected to main control unit, splitter (e.g. SPL-2) is also required (refer to the Figure 2).

LPC-2.ID3 module RS485 address (0..3) is selected through two switches on the back side of the module (refer to the Table 6).

NOTE: For proper system configuration and data allocation please refer to LPC Composer software help menu.

LPC-2.ID3 module can be modified on customer request (front label changed, push buttons added, LEDs added). Please contact manufacturer for more information.







# **2 FEATURES**



Figure 1: LPC-2.ID3 special module

Table 1: Technical data
RFID identification
OK " $f$ " LED
FAULT " X " LED
Power LED
Internal fault LED
Digital input
Relay output





## **3 INSTALLATION**

### 3.1 Connection scheme

## Figure 2: Connection scheme

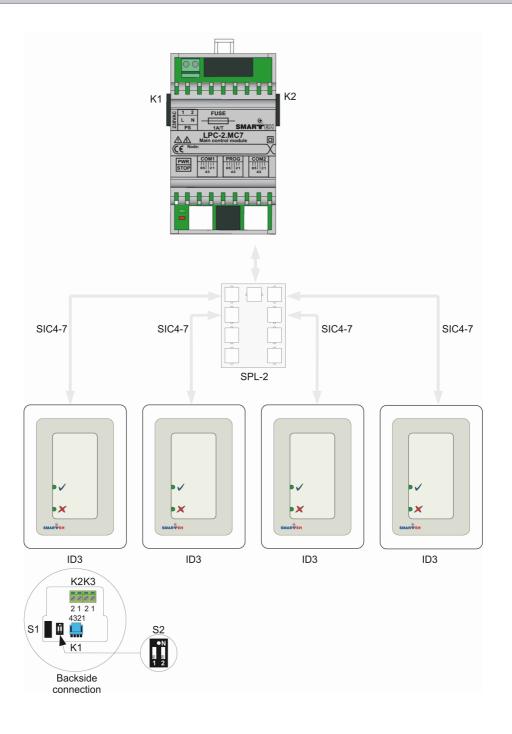






Table 2: K1		
K1.1	GND	Ground
K1.2	9 VDC	Power supply input
K1.3	Standard RS485 A	Data receive/send line A
K1.4	Standard RS485 B	Data receive/send line B

Table 3: K2			
K2.1	Voltage free contact	Make contact (NO)	
K2.2	Voltage free contact	Make contact (NO)	

Table 4: K3		
K3.1	9 VDC	Power supply output
K3.2	Digital input, 0 9 VDC	9 VDC digital input

Table 5: LEDs & Buttons		
Power LED (on the upper side of the module)	Green LED: indicates power supply status	On: power supply OK Off: power supply missing or power off
Internal fault LED (on the upper side of the module)	Red LED: indicates LPC-2.ID1 communication state	On: RS485 communication fault Off: RS485 communication OK
OK " $\digamma$ " LED	Green LED: indicates RFID key standard and number	On: RFID key standard OK and ID card number valid
FAULT " X " LED	Red LED: indicates RFID key standard and number	On: RFID key standard NOK and ID card number wrong

Table 6: S2		
RS485 ADDRESS	Switch 1	Switch 2
0	OFF	OFF
1	OFF	ON
2	ON	OFF
3	ON	ON






#### 3.2 Mounting instructions

Figure 3: Housing dimensions



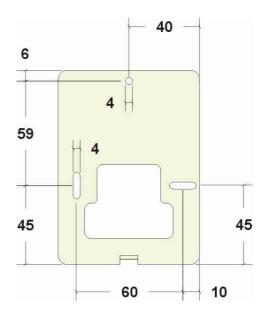

Dimensions in millimeters.



All connections, module attachments and assembling must be done while module is not connected to the main power supply.



The LPC-2.ID3 module should be positioned on the wall inside or outside the room. It is advised to avoid direct sunlight or position near heating/cooling source object. Round flush-mounting box (e.g. Gewiss GW 24232),  $\Phi$ 60 mm is recommended for installation. A box must be installed with screw holes in the horizontal position!

#### Mounting instructions:

- 1. Mount LPC-2.ID3 module back plate to the provided leveled place on the wall.
- 2. Fasten 2 screws (DIN 7981 or similar, Φ3 mm, max. head height 3 mm) to fix LPC-2.ID3 module to its place.
- 3. Connect interconnection cable to the interconnection connector K1. Max. allowed tractive force is 30 N.
- 4. Set the correct RS485 address (S2 switch) for LPC-2.ID3 (refer to the Table 6).
- 5. Power (PWR) green LED should switch on according to the Table 5.
- 6. Mount LPC-2.ID3 module front plate to the back plate.
  - IMPORTANT: Front plate must be placed in order that switch S1 (according to the Figure 2) is pressed (normally is released).
- 7. Fasten the screw in the bottom carefully (not too strong), to fix the front plate to the back plate.

NOTE:







LPC-2.MC3 main control module should be powered separately from other electrical appliance connected to LPC-2 system. Signal wires must be installed separately from power and high voltage wires in accordance with general industry electrical installation standard.

Several RFID panels should not be mounted close to each other. Minimum distance to next panel is at least 30 cm. This restrict also applies in cases of mounting panels on both sides of the wall. Adequate shielding material and provisions should be used to avoid interference between panels.

**NOTE**: Signal wires must be installed separately from power and high voltage wires in accordance with general industry electrical installation standard.





### 3.3 Module labeling

#### Figure 5: Labels on housing

Label 1 (MC3 sample):

LPC-2.MC3
P/N:225MC304001001
D/C:16/05

Label 2 (MC3 sample):

S/N:MC3-S9-0500000190

#### Label 1 description:

- 1. LPC-2.MC3 is the full product name.
- 2. P/N:225MC3040001001 is the part number.
  - 225 general code for product family,
  - MC3 short product name,
  - **04001** sequence code,
    - 04 year of code opening
    - 001 derivation code
  - 001 version code (reserved for future HW and/or SW firmware upgrades).
- 3. **D/C:16/05** is the date code.
  - 16 week and
  - **05** year of production.

#### Label 2 description:

- 1. S/N:MC3-S9-0500000190 is the serial number.
  - MC3 short product name,
  - **S9** user code (test procedure, e.g. Smarteh person xxx),
  - 0500000190 year and current stack code,
    - 05 year (last two cyphers)
    - 00000190 current stack number; previous module would have the stack number 00000189 and the next one 00000191.





# **4 TECHNICAL SPECIFICATIONS**

Table 5:	Technical specifications	
Power sup	ply	from main control unit (LPC-2.MC7)
Interconne	ection connector type	Berg M
Power con	sumption	0.5 W
RFID type		Manchester 64, read only
Max. readi	ng distance	8 cm
	Number of outputs	1 SPST - NO relay output
	Nominal switching capacity	2 A 30V DC
	Max. switching power	60 W
K2 output:	Max. switching voltage	220 V DC
очерие.	Max. switching current	2 A
	Min. switching capacity	10 uA, 10 mV DC
	Insulation	Basic, do not connect mains voltage
Dimension	s (L x W x H)	80 x 110 x 26 mm
Weight		80 g
Ambient to	emperature	0 to 50 °C
Ambient h	umidity	max. 95 %, no condensation
Maximum	altitude	2000 m
Mounting p	position	vertical
Transport	and storage temperature	-20 to 60 °C
Pollution o	legree	2
Protection	class	IP 30





### **5 PROGRAMMERS GUIDE**

#### **Variables**

There are 22 bytes available for reading and writing from/to ID3 module. While whole frame of 26 bytes is transferred at a time, LPC Manager variables described in the table below are accessed separately.

VBOOL8 (#N)		
variable	range	
Comm. status		
New ID received	-	
BIT2		
BIT3	0.4	
BIT4	01	
BIT5		
Remove switch status	-	
Door switch status	-	

VBOOL8 (#N+1)*	
variable	range
BITO	
BIT1	
BIT2	
BIT3	0.4
BIT4	01
BIT5	
BIT6	
BIT7	

<sup>\*</sup> Pushbuttons and LEDs can be added on the customer request.





VBOOL8 (#N+2)		
variable	range	
Relay output command		
BIT1		
BIT2		
BIT3	0.1	
Received ID OK command	01	
Received ID Fault command		
BIT6		
BIT7		

VBOOL8 (#N+3)*		
variable	range	
BIT0		
BIT1		
BIT2		
BIT3	0.4	
BIT4	01	
BIT5		
Reserved		
Reserved		

<sup>\*</sup> Pushbuttons and LEDs can be added on the customer request.

VWORD16 (#N+4)		
variable	range	
Received ID WORD1		
Received ID WORD2	-	
Received ID WORD3	-	
WORD4		
WORD5	0.4	
WORD6	01	
WORD7		
WORD8		
WORD9		
WORD10		





## **6 CHANGES**

The following table describes all the changes to the document.

Date	٧.	Description
1.7.2012	800	CGP General update .
7.5.2010	007	Updated warranty permanence.
2.8.2007	006	<ul> <li>updated K2 output specs</li> <li>updated description about connecting to main control unit</li> </ul>
26.4.2007	005	<ul><li>updated connection scheme</li><li>updated power supply source</li></ul>
15.3.2006	004	- Added: relay contacts rating - Added: pollution degree class
27.3.2005	003	The initial version, issued as LPC-2.ID3 module UserManual.







# **7 NOTES**

