

***TECHNICAL MANUAL***  
***Of***  
***Intel Pine Trail D & ICH9R Chipset***  
***Based***  
***Mini-ITX M/B for ATOM Processor***

**NO. G03-NF99-F**

**Revision: 1.0**

**Release date: March, 2011**

**Trademark:**

- \* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

---

## Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.



---

---

# **TABLE OF CONTENT**

ENVIRONMENTAL SAFETY INSTRUCTION .....	iii
USER'S NOTICE .....	iv
MANUAL REVISION INFORMATION .....	iv
ITEM CHECKLIST .....	iv
CHAPTER 1 INTRODUCTION OF THE MOTHERBOARD	
1-1 FEATURE OF MOTHERBOARD .....	1
1-2 SPECIFICATION .....	2
1-3 LAYOUT DIAGRAM .....	3
CHAPTER 2 HARDWARE INSTALLATION	
2-1 JUMPER SETTING .....	7
2-2 CONNECTORS AND HEADERS .....	11
2-2-1 CONNECTORS .....	11
2-2-2 HEADERS .....	12
CHAPTER 3 INTRODUCING BIOS	
3-1 ENTERNING SETUP .....	19
3-2 GETTING HELP .....	19
3-3 THE MAIN MENU .....	19
3-4 STANDARD BIOS FEATURES .....	21
3-5 ADVANCED BIOS FEATURES .....	23
3-5-1 CPU FEATURE .....	24
3-6 ADVANCED CHIPSET FEATURES .....	25
3-7 INTEGRATED PHERIPHRALS .....	26
3-7-1 ONBOARD SATA FUNCTION .....	27
3-7-2 ONBOARD DEVICE FUNCTION .....	28
3-7-3 ONBOARD SUPER IO FUNCTION .....	29
3-8 POWER MANAGEMENT SETUP .....	30
3-9 PNP/PCI CONFIGURATIONS .....	32
3-10 PC HEALTH STATUS .....	32
3-11 MISCELLANEOUS CONTROL .....	34
3-12 PASSWORD SETTING .....	35
3-13 LOAD OPTIMIZED /STANDARDDEFAULTS .....	36
3-14 SAVE AND EXIT SETUP/EXIT WITHOUT SAVING .....	36



## Environmental Safety Instruction

---

- Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- 0 to 60 centigrade is the suitable temperature. (The figure comes from the request of the main chipset)
- Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.
- Attention to the heat sink when you over-clocking. The higher temperature may decrease the life of the device and burned the capacitor.

---

---

## USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

## Manual Revision Information

Reversion	Revision History	Date
1.0	First Edition	March, 2011

## Item Checklist

- ☒ Motherboard
- ☒ User's Manual
- ☒ DVD for motherboard utilities
- ☒ Cable(s)
- ☒ I/O Back panel shield

---

# Chapter 1

## Introduction of the Motherboard

### 1-1 Feature of motherboard


- Intel Pine Trail D and ICH9R chipset
- Onboard Intel Atom CPU, with low power consumption never denies high performance
- Support DDRIII SODIMM 800 MHz up to 4GB
- Onboard dual Intel 82574L PCI-E Gigabit Ethernet LAN
- Integrated VIA VT1705 6-channel HD audio CODEC
- Support USB 3.0 data transport demands
- Support RS232/422/485
- Support PCI slot and Mini-PCIE slot
- Support CPU Smart FAN
- Supports ACPI S3 Function
- Support watchdog function

## 1-2 Specification

Spec	Description
<b>Design</b>	● Mini-ITX form factor; PCB size: 17.0x17.0cm
<b>Chipset</b>	● Intel Pine Trail D+ICH9R
<b>Embedded CPU</b>	● Intel Atom CPU
<b>Memory Socket</b>	● DDRIII SODIMM slot x2 ● Support 800 MHz DDRIII SODIMM ● Expandable to 4 GB
<b>Expansion Slot</b>	● 32-bit PCI slot x 1 ● Mini-PCIE slot x1
<b>Integrate SATAII</b>	● Support six internal serial ATAII 3 Gb/s connectors ● Support RAID 0,1,5,10
<b>Dual LAN</b>	● Integrated dual Intel WG82574L PCI-E Gigabit LAN chip ● Support Fast Ethernet LAN function of providing 10Mb/100Mb/1000Mb Ethernet data transfer rate
<b>Audio</b>	● VIA VT 1705 6-channel Audio Codec integrated ● Audio driver and utility included
<b>BIOS</b>	● AMI 8MB Flash ROM
<b>Multi I/O</b>	● PS/2 keyboard connector x1 ● USB 3.0 port x2 ● Serial port connector x1 ● VGA port connector x1 ● USB 2.0 port x 3 and USB 2.0 header x3 ● RJ-45 LAN connector x2 ● Audio connector x3 (Line-in, Line-out, MIC) ● Parallel port header x1 ● Serial port header x1 and RS232/422/RS485 header x1 ● LVDS header x1 and LVDS inverter x1 ● GPIO header x1 ● Front panel audio header x1 ● CDIN header x1

- |  |  |
|--|--|
|  | <ul style="list-style-type: none"><li>● Speaker header x1</li><li>● PWRLED header x1</li><li>● Front panel header x1</li></ul> |
|--|--|

## 1-3 Layout Diagram

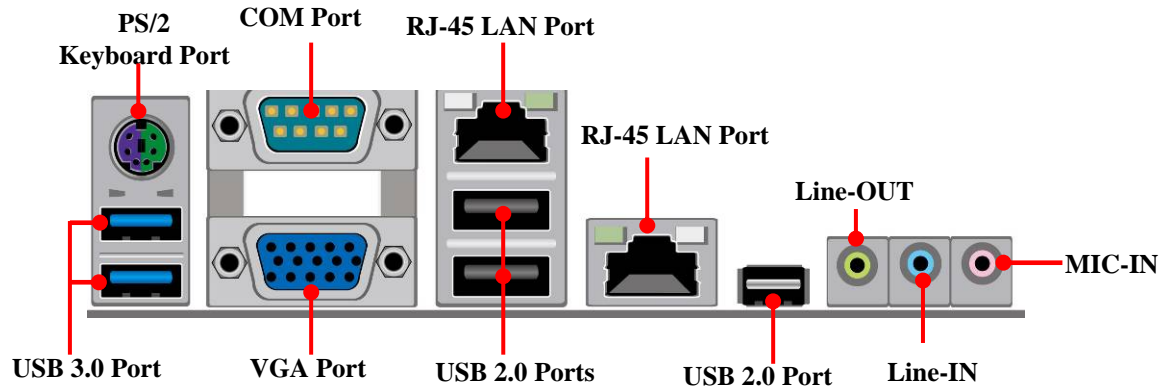





---

## ***Jumper***

<b>Jumper</b>	<b>Name</b>	<b>Description</b>
JP1	K/B, USB Power On Function Setting	3-pin Block
JP2	LVDS PVCC 5V/3.3V Select	3-pin Block
JP3	Inverter 12V/5V Select	3-pin Block
JP4	UL1, USB1 Power On Function Setting	3-pin Block
JP5	USB 3 Power On Function Setting	3-pin Block
JP6	Mini PCI-E Power VCC3.3V /Dual 3.3V	3-pin Block
JP9	Power RS232 Function Select	6-pin Block
JP10	COM2 RS232/485/422 Function Select	6-pin Block
JP11	USB 4/5 Power On Function Setting	3-pin Block
JBAT	CMOS RAM Clear Function Setting	3-pin Block

## ***Connectors***

<b>Connector</b>	<b>Name</b>	<b>Description</b>
KB(from UK1)	PS2 Keyboard Connector	6-pin Female
USB (from UK1)	USB 3.0 Ports	4-pin Connector
COM1	Serial Port COM Connector	9-pin Connector
VGA	Video Graphic Attach Connector	15-pin Female
USB (from UL1)	USB 2.0 Port	4-pin Connector
LAN (from UL1)	RJ-45 LAN Connector	8-pin Connector
LAN1	RJ-45 LAN Connector	8-pin Connector
USB1	USB 2.0 Port	4-pin Connector
AUDIO	Line Out /Line In /MIC Audio Connector	3-phone Jack
ATXPWR	ATX Power Connector	24-pin Block
SATA1~SATA6	Serial ATAII Connectors	7-pin Connector

---

---

## Headers

Header	Name	Description
FP_AUDIO	Front panel audio Header	9-pin Block
CDIN	CD Audio-In Header	4-pin Block
GPIO1	GPIO Header	10-pin Block
USB3/USB4/ USB5	USB Headers	9-pin Block
SPEAK	Speaker Header	4-pin Block
PWRLED	Power LED	3-pin Block
JW_FP (PWR LED/ HD LED/ /Power Button /Reset)	Front Panel Header (PWR LED/ HD LED/ Button /Reset)	9-pin Block
CPUFAN1,SYSFAN1/2	FAN Speed Headers	3-pin Block
PARALLEL1	Parallel Port Header	25-pin Block
COM2	Serial Port Header	9-pin Block
TX-RXCOM	RS 232/422/485 port headers	4-pin Block
LVDS	LVDS Header	32-pin Block
INVERTER	LVDS Inverter Connector	7-pin Block
CN1; CN2	Jetway Daughter Card Connector	50-pin *2 Block


---

# Chapter 2

## Hardware Installation

### 2-1 Jumper Setting

#### (1) JP1 (3-pin): K/B, USB Power on Function Setting

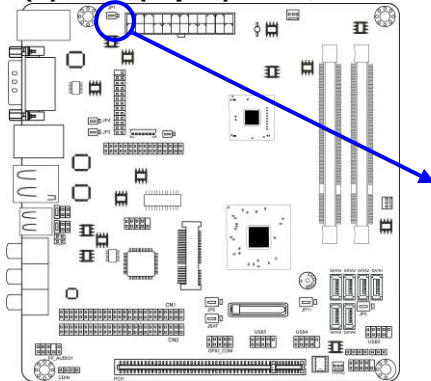


1-2 Closed: K/B,USB Power-On Disabled (default)



2-3 closed: K/B,USB Power-On Enabled

#### (2) JP2 (3-pin): LVDS PVCC 5V / 3.3V Function setting

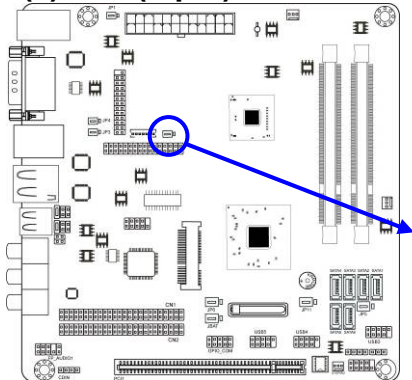



1-2 closed: LVDS PVCC 5V




2-3 closed : LVDS PVCC 3.3V


### (3) JP3 (3-pin): Inverter power 5V/12V Select

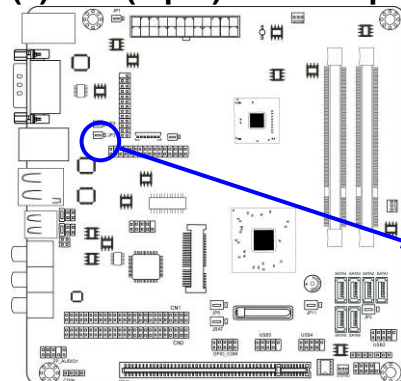



JP3  1-2 closed  
Inverter 12V selected

JP3  2-3 closed  
Inverter 5V select


### (4) JP4 (3-pin): UL1/USB1 Power on Function Setting

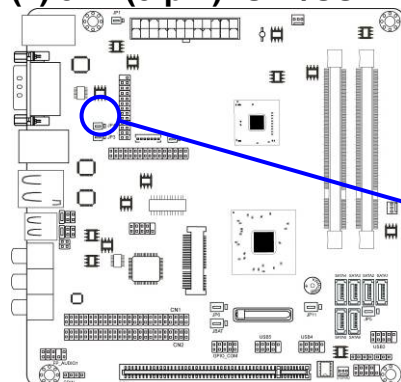



JP4  1-2 closed : UL1/USB1 Power-On Disabled(default)

JP4  2-3 closed: UL1/USB1 Power-On Enabled

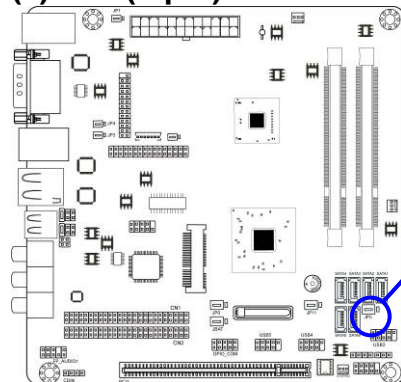
### (5) JP5 (3-pin): USB3 Power on Function Setting



JP5  1-2 closed : USB 3 Header Power-On Disabled(default)

JP5  2-3 closed: USB3 Header Power-On Enabled

## (6) JP6 (3-pin) : Mini PCI-E Power VCC 3.3V/ Dual 3.3 V Function Select

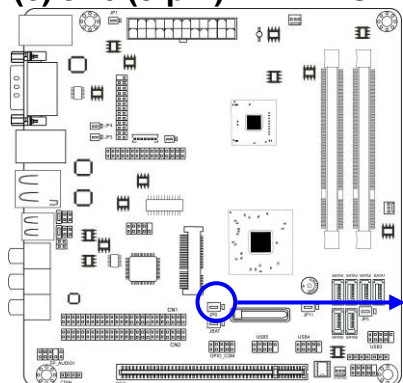

JP6




1-2 closed : MINI PCI-E VCC= 3.3V

JP6



2-3 closed : MINI PCI-E VCC= Dual 3.3V

## (7) JP9 (6-pin): COM2 Header Pin9 function select

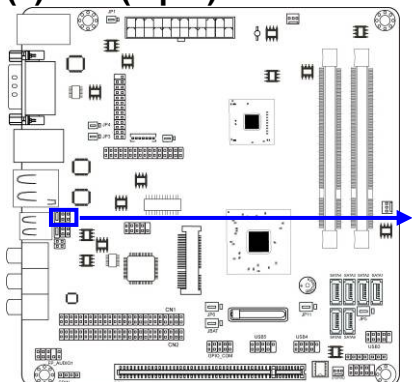

JP9



1-2 closed: RS232




3-4 closed : +12V




5-6 closed : +5V


## (8) JP10(6-pin): COM2 Header RS232/485/422 Function Select:

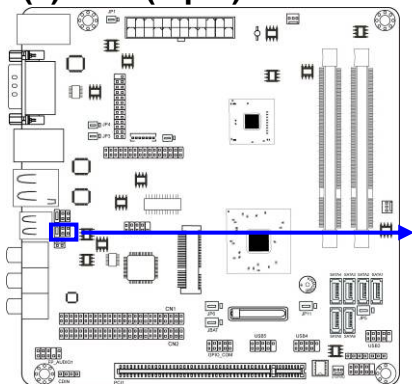

JP10



1-2 closed: RS232




3-4 closed : RS485



5-6 closed : RS422

---

### (9) JP11 (3-pin): USB 4/5 Power on Function Setting

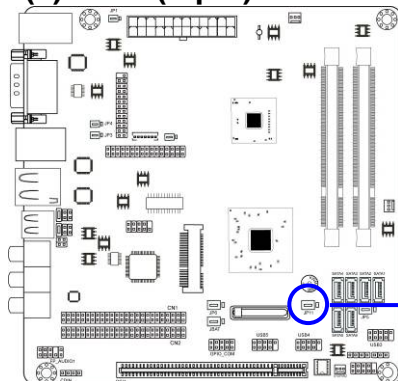

JP11




1-2 closed : USB 4/5 Header Power-On Disabled(default)

JP11



2-3 closed: USB 4/5 Header Power-On Enabled

### (10) JBAT (3-pin): Clear CMOS

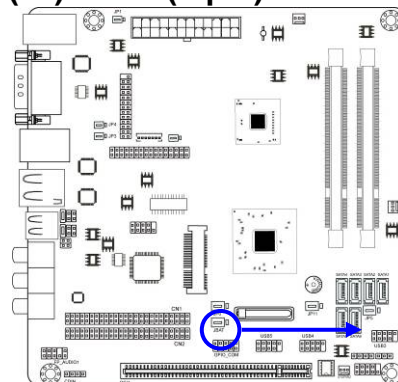

JBAT



1-2 Short: Normal



2-3 Short: Clear CMOS


CMOS Clear Setting

---


## 2-2 Connectors and Headers

### 2-2-1 Connectors

(1) I/O Panel Connector:

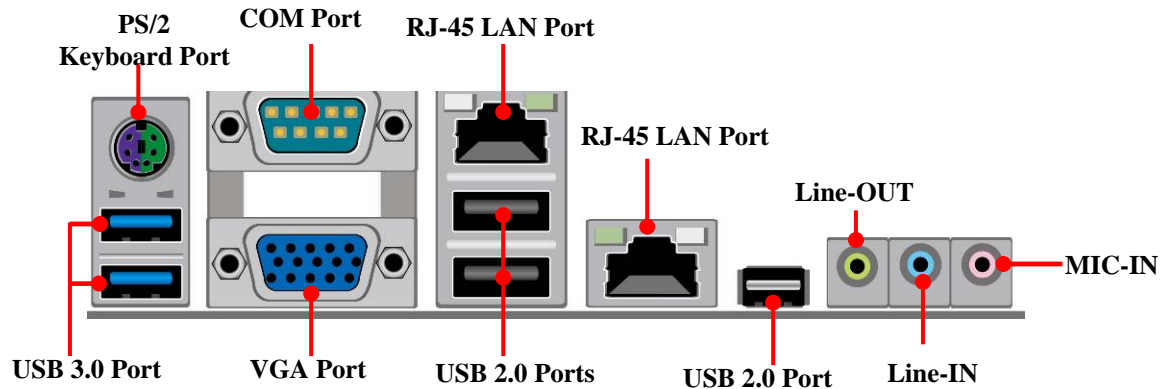

(2) Serial-ATA II PortS: SATA1/SATA2/SATA3/SATA4/SATA5/SATA/SATA6

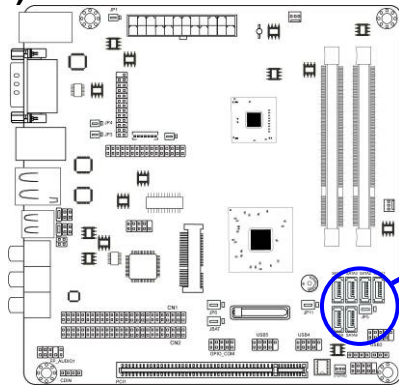

Serial-ATAII Connector





---

## 2-2-2 Headers

### (1) Front Panel Audio Line-Out, MIC-In Header (9-pin): FP\_AUDIO1



This header connects to front panel Line-out, MIC-In connector with cable.

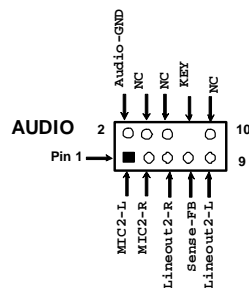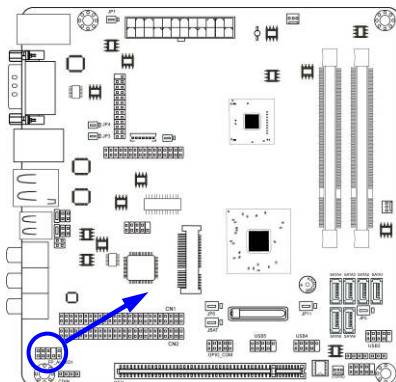

Line-Out, MIC Headers

### (2) CD AUDIO-In Header (4-pin): CDIN1



CDIN header is for CD-Audio Input signal. Please connect it to CD-ROM CD-Audio output connector.

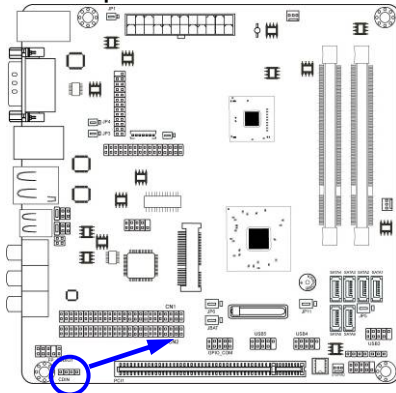

CD Audio-In Headers

---

### (3) USB Port Headers (9-pin): USB3/USB4/ USB5

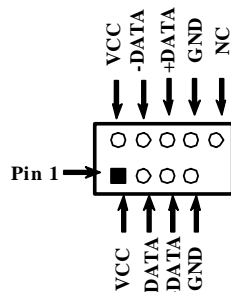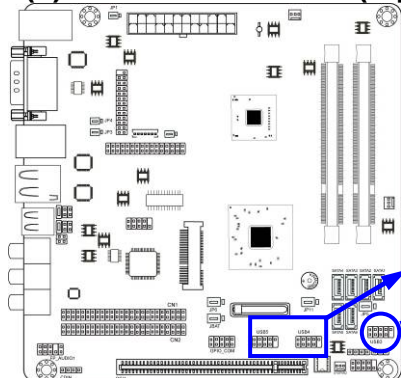




USB 3/4/5 Header

### (4) Speaker connector: SPEAK


This 4-pin header is to connect the case-mounted speaker. See the figure below.

### (5) Power LED: PWRLED

The Power LED is light on while the system power is on. Connect the Power LED from the system case to this pin.

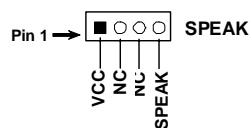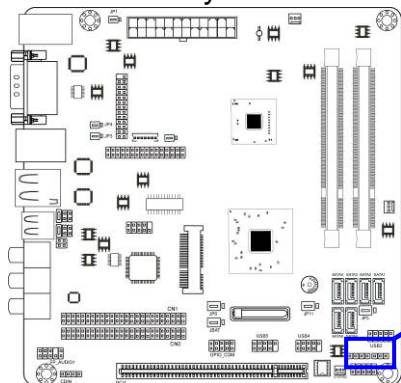

## (6) Front Panel Header: JW-FP

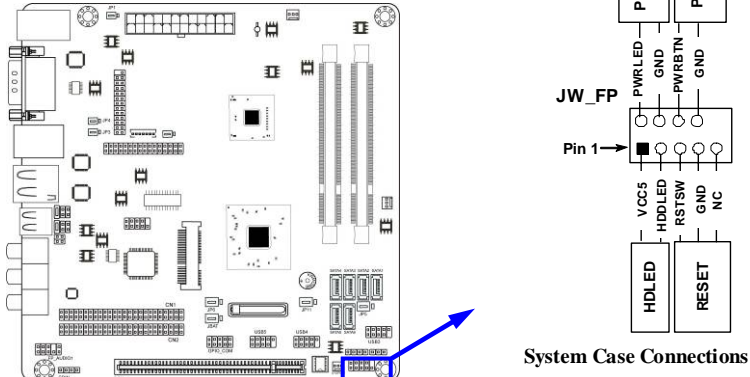


## (7) FAN Speed Headers (3-pin): CPUFAN1, SYSFAN1, SYSFAN2

Pin1: GND

Pin2: +12V fan power



Pin3: Fan Speed

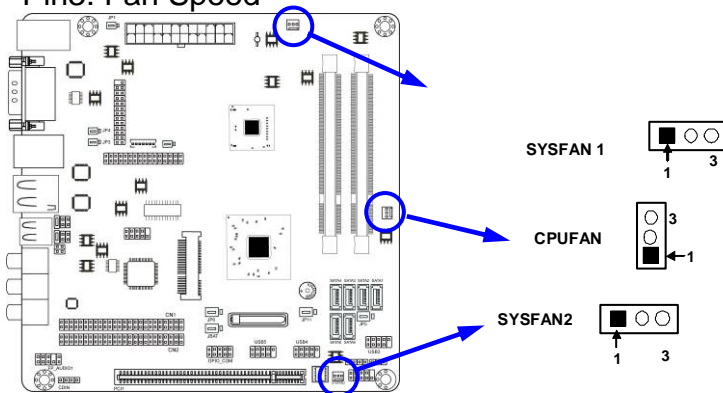

---


---

### (8) Serial Port Connectors (9-Pin female): COM2

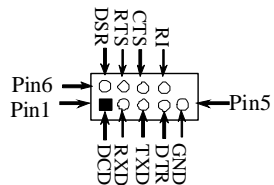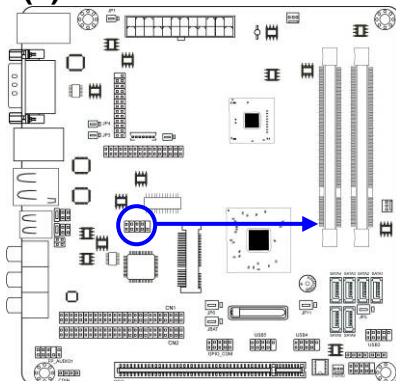


Serial COM Port 9-pin Block

### (9) RS232/422/485 Header: TX-RXCOM

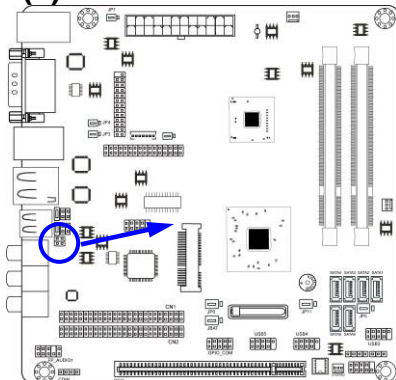

TX-RXCOM

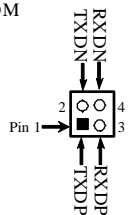

TX-RX COM Header



---



---

### (10) LVDS Headers (32 Pin) : LVDS

Pin NO.	Pin Define	Pin NO.	Pin Define
Pin 1	SMBDATA	Pin 2	SMBCLK
Pin 3	SPDIF_O	Pin 4	NC
Pin 5	ADB_ID1	Pin 6	ADB_ID2
Pin 7	L_VDDEN	Pin 8	BKLTEN
Pin 9	NC	Pin 10	NC
Pin 11	LVDS_DDC_DATA	Pin 12	LVDS_DDC_CLK
Pin 13	GND	Pin 14	GND
Pin 15	GND	Pin 16	GND
Pin 17	NC	Pin 18	NC
Pin 19	LVDS_CLKAP	Pin 20	LVDS_CLKAN
Pin 21	LVDSA_DATAP2	Pin 22	LVDSA_DATAN2
Pin 23	LVDSA_DATAP1	Pin 24	LVDSA_DATAN1
Pin 25	LVDSA_DATAP0	Pin 26	LVDSA_DATAN0
Pin 27	PVDD	Pin 28	PVDD
Pin 29	PVDD	Pin 30	PVDD
Pin 31	GND	Pin 32	GND

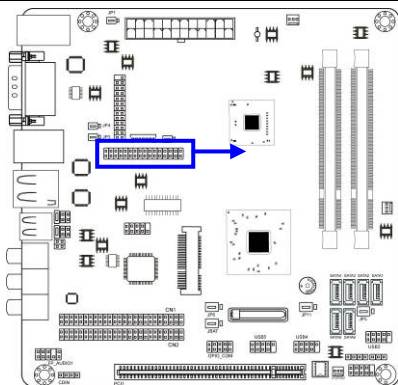

**LVDS Header**

---



### (11) LVDS Inverter headers: INVERTER

Pin 1 and pin2: VCC of inverter



Pin3, pin4 and pin6: GND

Pin5: Backlight

Pin7: Brightness

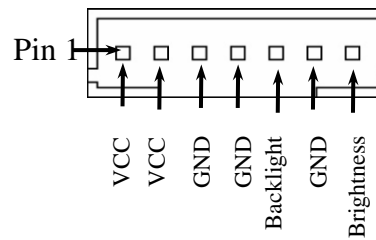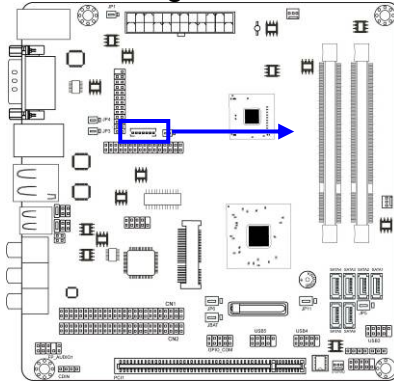

### (12) GPIO Header (10-pin): GPIO\_CON

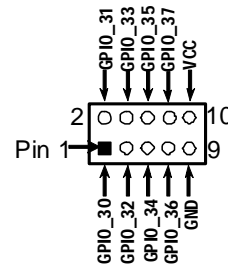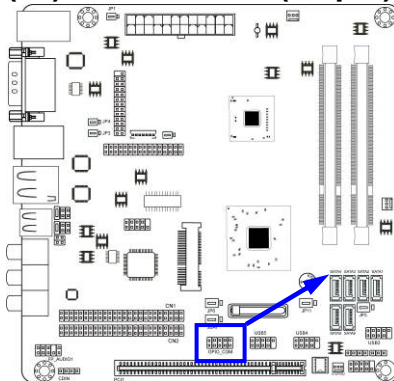

GPIO\_CON Header

---

## Chapter 3

### Introducing BIOS

**Notice!** The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version from our official website.

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

In the BIOS Setup main menu of Figure 3-1, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press <Esc> to quit the BIOS Setup.
- Press ↑↓←→ (up, down, left, right) to choose, in the main menu, the option you want to confirm or to modify.
- Press <F10> when you have completed the setup of BIOS parameters to save these parameters and to exit the BIOS Setup menu.
- Press Page Up/Page Down or +/- keys when you want to modify the BIOS parameters for the active option.

---

## 3-1 Entering Setup

Power on the computer and by pressing <Del> immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

**Press <Del> to enter Setup**

## 3-2 Getting Help

### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

### Status Page Setup Menu/Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

## 3-3 The Main Menu

Once you enter AMI ® BIOS CMOS Setup Utility, the Main Menu (Figure 3-1) will appear on the screen. The Main Menu allows you to select from fourteen setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.



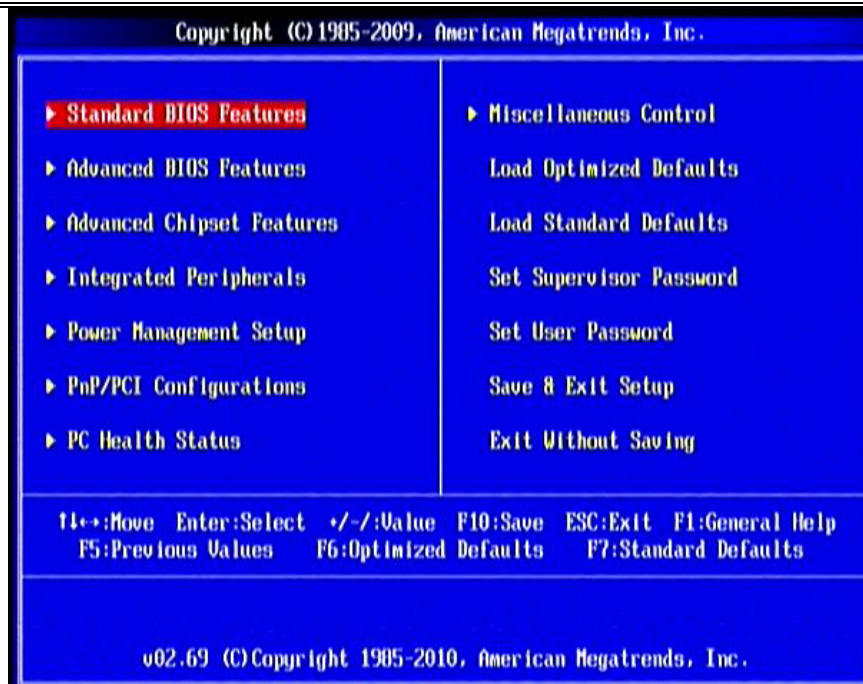


Figure 3-1

### **Standard BIOS Features**

Use this Menu for basic system configurations.

### **Advanced BIOS Features**

Use this menu to set the Advanced Features available on your system.

### **Advanced Chipset Features**

Use this menu to change the values in the chipset registers and optimize your system's performance.

### **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals.

### **Power Management Setup**

Use this menu to specify your settings for power management.

### **PnP/PCI Configurations**

Use this menu to specify your settings for PnP and PCI configurations.

### **PC Health Status**

---

---

This entry shows your PC health status.

**Miscellaneous Control**

Use this menu to specify your settings for Miscellaneous Control.

**Load Optimized Defaults**

Use this menu to load the BIOS default values these are setting for optimal performances system operations for performance use.

**Load Standard Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance system operation

**Set Supervisor Password**

Use this menu to set supervisor password.

**Set User Password**

Use this menu to set user password.

**Save & Exit Setup**

Save CMOS value changes to CMOS and exit setup.

**Exit Without Saving**

Abandon all CMOS value changes and exit setup.

## **3-4 Standard BIOS Features**

The items in Standard CMOS Setup Menu are divided into several categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Copyright (C) 1985-2009, American Megatrends, Inc. Standard BIOS Features		
System Date	Tue 03/15/2011	Help Item
System Time	00:15:15	
▶ SATA Channel 1	Not Detected	Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.  Use [+] or [-] to configure system Date.
▶ SATA Channel 2	Not Detected	
▶ SATA Channel 3	Not Detected	
▶ SATA Channel 4	Not Detected	
▶ SATA Channel 5	Not Detected	
▶ SATA Channel 6	Not Detected	
System Memory Size : 1024MB		
F11:Move Enter:Select +/-:Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

## System Date

The date format is <day><month><date><year>.

<b>Day</b>	Day of the week is from Sun to Sat, determined by BIOS. Read-only.
<b>Month</b>	The month is from Jan. through Dec.
<b>Date</b>	The date from 1 to 31 can be keyed by numeric function keys.
<b>Year</b>	The year depends on the year of the BIOS.

## System Time

The time format is <hour><minute><second>.

## SATA 1/SATA 2/ SATA3/ SATA4/ SATA 5/SATA6

While entering setup, BIOS auto detects the presence of harddisk devices. This displays the status of auto detection of harddisk devices.

**Type:** The optional settings are: Not Installed; Auto; CD/DVD and ARMD.

**LBA/Large Mode:** The optional settings are Auto; Disabled.

Disabled: disables LBA mode.

---

---

Auto: enables LBA Mode if the devices support it and the device is not already formatted with LBA Mode disabled.


**Block (Multi-Sector Transfer):** The optional settings are: Disabled and Auto.

Disabled: The Data transfer from and to the device occurs one sector at a time.

Auto: The Data transfer from and to the device occurs multiple sectors at a time if the device supports it.

**32 Bit Data Transfer:** the optional settings are: Disabled and Enabled.

### 3-5 Advanced BIOS Features

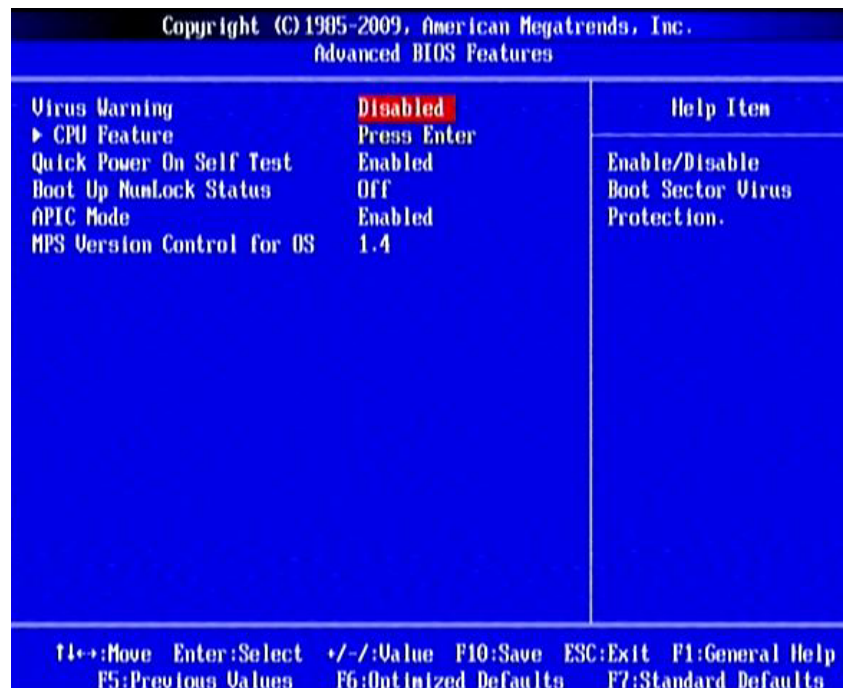

#### Virus Warning

The selection Allow you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

**Disabled** (default) No warning message to appear when anything attempts to access the boot sector or hard disk partition table.

---



---

<b>Enabled</b>	Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector of hard disk partition table.
----------------	---

### Quick Power On Self Test

This item allows BIOS to skip certain tests while booting. This will decrease the time needed to boot the system. The optional settings: Disabled; Enabled.

### Boot Up NumLock Status

The default value is On.

**On** (default) Keypad is numeric keys.

**Off** Keypad is arrow keys.


### APIC Mode

Use this item to include ACPI APIC table pointer to ESDT pointer list. The optional settings are: Disabled; Enabled.

### MPS Version Control for OS

This option is only valid for multiprocessor motherboards as it specifies the version of The Multiprocessor Specification (MPS) that the motherboard will use.

## 3-5-1 CPU Feature

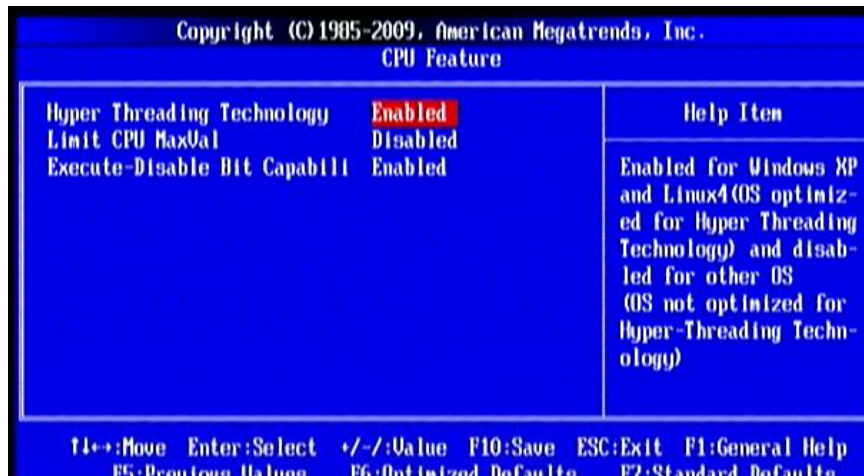

### Hyper Threading Technology

Enabled for Windows XP and Linux4(OS optimized for Hyper Threading Technology) and disabled for other OS (OS not optimized for Hyper –Threading Technology)

---

### Limit CPU MaxUai


The optional settings are: Disabled; Enabled.

### Execute Disable Bit Capabil

The optional settings are: Disabled; Enabled. When disabled, force the XD feature Flag to always return 0.

## 3-6 Advanced Chipset Features

The Advanced Chipset Features Setup option is used to change the values of the chipset registers. These registers control most of the system options in the computer.

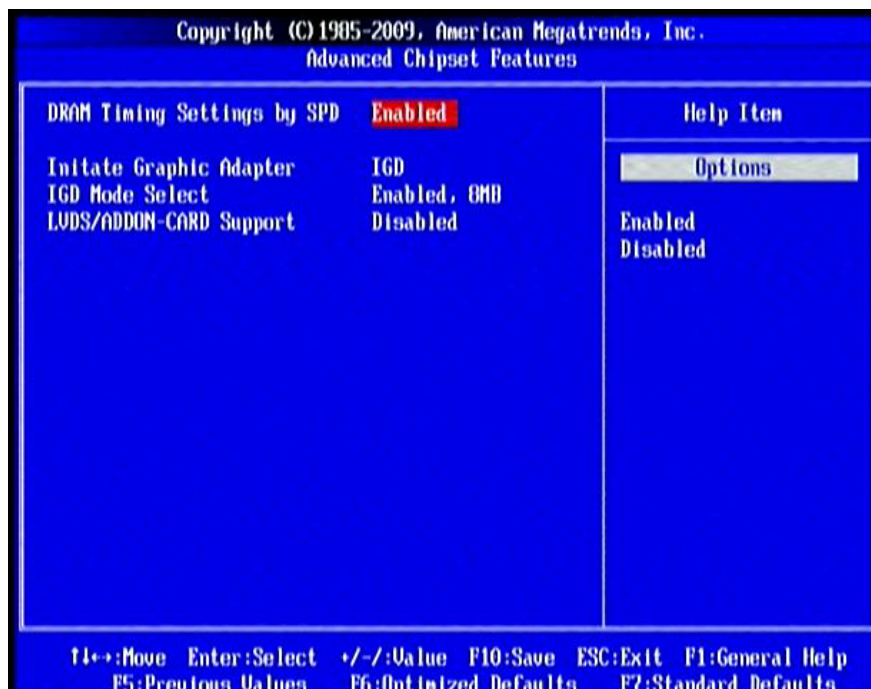

### DRAM Timing Settings by SPD

The optional settings are: Disabled; Enabled.

### Initate Graphic Adapter

The optional settings are: 1GD; PCIE/IGD. Select which graphic controller to use as the primary boot device.

---

## IGD Mode Select

Use this item to select the amount of system memory used by the internal graphics device. The optional settings: Disabled; Enabled, 8MB.

## LVDS/ADDON CARD Support

The optional settings are: Disabled; Enabled.

## 3-7 Integrated Peripherals




## PWR Status after PWR Failure

The optional settings are: Always off; Always on; Former Status.

---


## 3-7-1 Onboard SATA Function

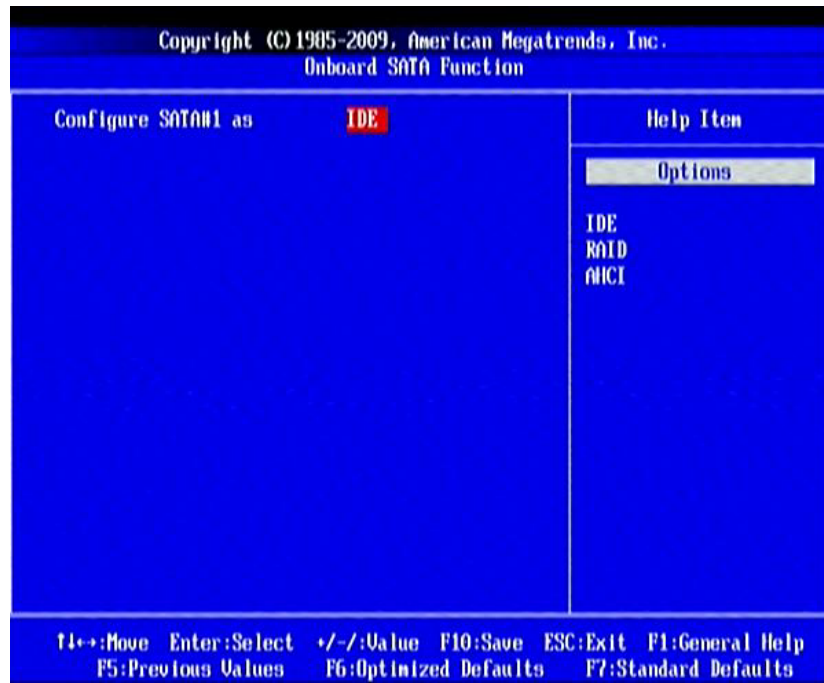



---

## 3-7-2 Onboard Device Function

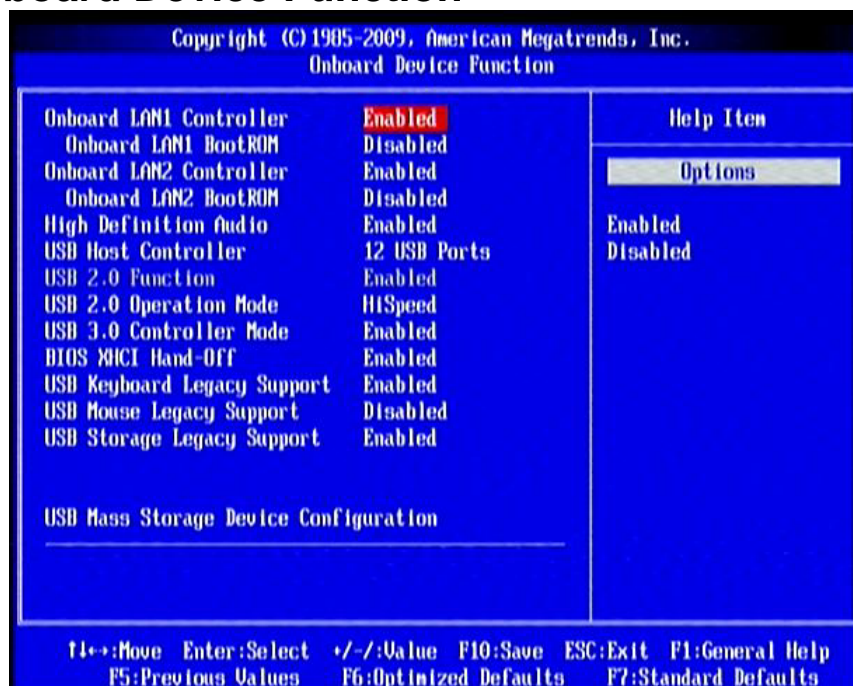

### Onboard LAN1/2 Controller

The optional settings are: Enabled; Disabled.

### Onboard LAN1/2 BootROM

The optional settings are: Enabled; Disabled.

### High Definition Audio

This item allows you to decide to auto /disable the chipset family to support HD Audio.

The settings are: Auto, Disabled.

### USB 2.0 Operation Mode

The settings are: FullSpeed; HiSpeed.

### USB Host Controller

The optional settings: Disabled; 2 USB ports; 4 USB ports; 6 USB ports; 8 USB ports; 10 USB ports; 12 USB ports.

---

## USB 2.0 Function

The optional settings are: Enabled; Disabled.

## USB 2.0 Operation Mode

Use this item to configure the USB 2.0 controller in HiSpeed(480Mbps) or FullSpeed(12Mbps).

## USB 3.0 Controller Mode

Use this item to enable USB 3.0 legacy support.


## BIOS XHCI Hand Off

The optional settings are: Enabled; Disabled.

## USB Keyboard Legacy/Mouse Legacy /Storage Legacy Support

Select enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB mouse /keyboard/USB storage device. The settings are: Enabled, Disabled.

## 3-7-3 Onboard Super IO Function

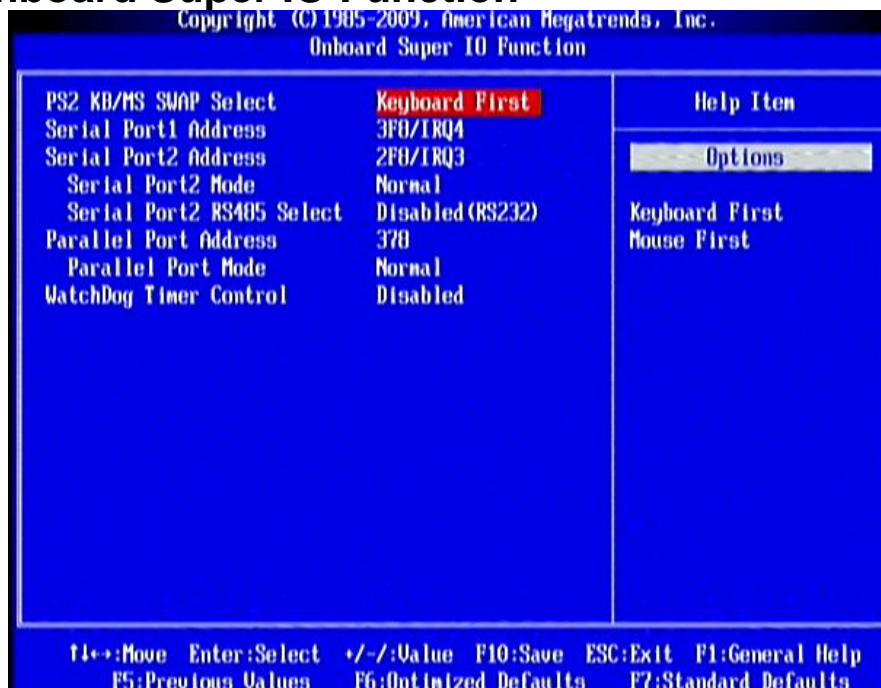

---

---

### **PS2 KB/MS SWAP Select**

The optional settings are: Keyboard First; Mouse First.

### **Serial Port 1/2 Address**

This item allows BIOS to select base addresses for serial port 1/2.

### **Serial Port 2 Mode**

The optional settings are: Normal; IrDA(1.6us); IrDA(3/16 bit).

### **Serial Port 2 RS485 Select**

The optional settings are: Disabled(RS232); Enabled(RS485)

### **Parallel Port Address**

Use this item to allow BIOS to select parallel port base addresses.

### **Parallel Port Mode**

The optional settings are: Normal; Bi-Directional; ECP; EPP; ECP & EPP.

### **Watchdog Timer Select**

This item is used to activate the watchdog function. The optional settings are: Enabled; Disabled.


When set as Enabled, The following sub-items shall appear:

WatchDog Timer Val: User can type a number in the range of 4 to 255.

WatchDog Timer Unit: The optional settings are: Sec.; Min..

## **3-8 Power Management Setup**

The Power Management Setup allows you to configure your system to most effectively save energy saving while operating in a manner consistent with your own style of computer use.

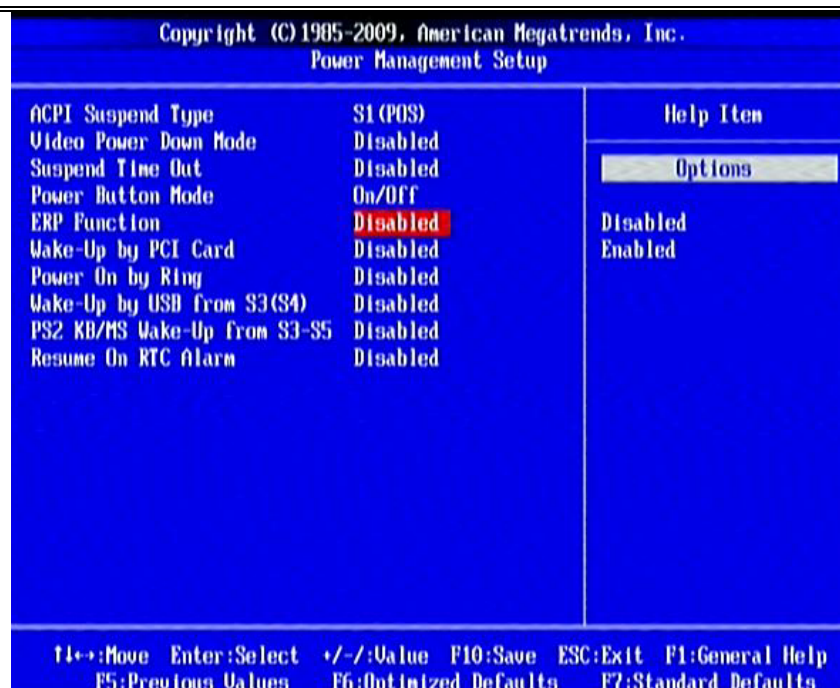

### ACPI Suspend Type

Users can select the ACPI state used for system suspend. The optional settings are: S1(POS); S3(STR).

### Video Power Down Mode

The optional settings: Disabled; Standby; Suspend.

### Suspend Time out

Use this item to select the specified time for system to go into suspend.

### Power Button Mode

Use this item to go into On/Off or Suspend when power button is pressed.

### ERP (EUP) Function

The optional settings are: Enabled; Disabled. When set as [Disabled], the following sub-items shall appear:

**Wake-Up by PCI Card; Power On by Ring; Wake Up by USB from S3(S4); PS2 KB/MS Wake-Up from S3-S5; Resume On RTC Alarm.**

User can set them as Enabled or Disable for to enable or disable respective functions.

---

## 3-9 PnP/PCI Configurations



### IRQ Resources

Press [Enter] to view IRQ availability.

Available: Specified IRQ is available to be used by PCI/PnP devices.

Reserved: Specified IRQ is reserved for use by legacy ISA devices.

### PCI/VGA Palette Snoop

The optional settings are: Enabled; Disabled.

Enabled: to inform the PCI devices that an ISA graphics device is installed in the system so the card will function correctly.

## 3-10 PC Health Status

This section shows the Status of you CPU, Fan, and Warning for overall system status.

This is only available if there is Hardware Monitor onboard.

Copyright (C) 1985-2009, American Megatrends, Inc.		
PC Health Status		
Shutdown Temperature	Disabled	Help Item
CPU Thermal-Throttling	Disabled	
▶ Smart FAN Configurations	Press Enter	Options
+5V OVP	Disabled	Disabled
+12V OVP	Disabled	60°C/140°F
Vcc3V OVP	Disabled	65°C/149°F
CPU Temperature	43°C/109°F	70°C/158°F
System Temperature	39°C/102°F	75°C/167°F
CPUFAN Speed	N/A	
SYSFAN1 Speed	N/A	
SYSFAN2 Speed	N/A	
Vcore	1.152 V	
NB 1.05V	1.048 V	
5VSB	4.913 V	
VDIMM	1.517 V	
+ 5V	4.943 V	
+ 12V	11.800 V	
↑↓←→:Move Enter:Select +/-:Value F10:Save ESC:Exit F1:General Help		
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		
+ 5V	4.943 V	
+ 12V	11.800 V	
Vcc3V	3.216 V	
3VSB	3.216 V	
VBat	3.344 V	
↑↓←→:Move Enter:Select +/-:Value F10:Save ESC:Exit F1:General Help		
F5:Previous Values F6:Optimized Defaults F7:Standard Defaults		

## Shutdown Temperature

This item can let users setting the Shutdown temperature, when CPU temperature over this setting the system will auto shutdown to protect CPU.

## CPU Thermal Throttling

The optional settings are: Disabled; Enabled. When it is set as [Enabled] user could set value for CPU Thermal-Throttling Temp.; CPU Thermal-Throttling Duty and CPU Thermal-Throttling Beep.

## Smart Fan Configuration

Press [Enter] to set certain values for the following three items: CPUFAN Smart Mode ,

SYSFAN1 Smart Mode and SYSFAN2 Smart Mode to set respectively for value in Full-Speed Temp.; Idle Temp. and Idle-Speed Duty .


### **+5V OVP/+12V OVP/Vcc3V OVP**

Use this item to select a value for +5V OVP/+12V OVP/Vcc3V OVP from the optional setting range.

### **CPU Temperature/ System Temperature/ /CPUFAN/ SYSFAN1/SYSFAN2 Speed/ Vcore/ /NB1.05V/5VSB/VDIMM/ +5V/+12V/5 /Vcc3V/3VSB/VBat /**

This will show the CPU/FAN/System voltage chart and FAN Speed, etc.

## **3-11 Miscellaneous Control**

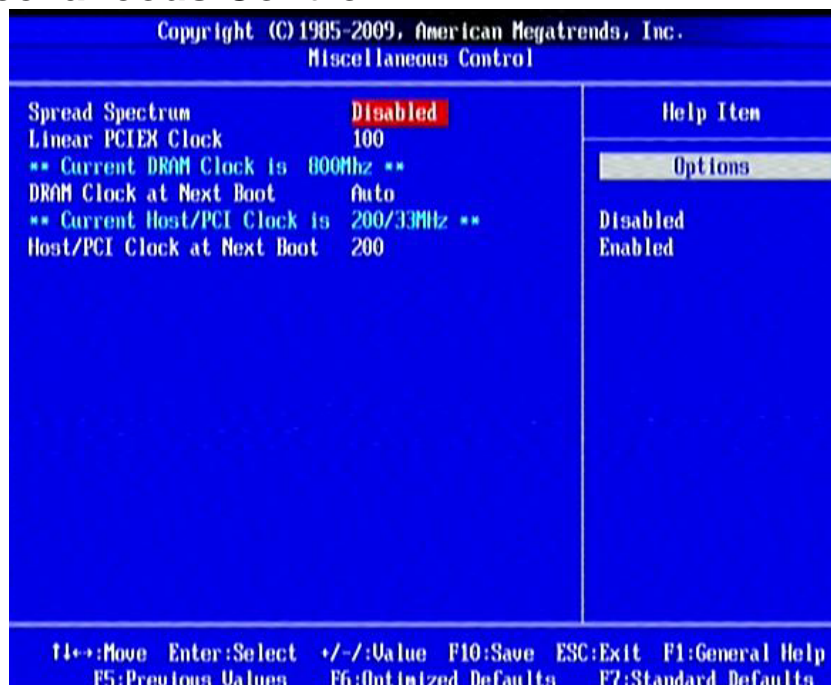

### **Spread Spectrum**

The optional settings are: Enabled; Disabled.

### **Linear PCIEX Clock**

The optional settings are from 100 to 200.

### **DRAM Clock at Next Boot**



---

---

This item allows you to set DRAM clock. The optional settings are: Auto; 667MHz; 800MHz.

### **Host/PCI Clock at Next Boot**

The optional settings are from 200 to 600.

## **3-12 Password Setting**

You can set either supervisor or user password, or both of them. The differences are:

**Supervisor password:** Can enter and change the options of the setup menus.

**User password:** Can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

### **ENTER PASSWORD:**

Type the password, up to eight characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password. To disable a password, just press <Enter> when you are prompted to enter the password. A message will confirm that the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

### **PASSWORD DISABLED.**

When a password has been enabled, you will be prompted to enter it every time you try to enter Setup. This prevents an unauthorized person from changing any part of your system configuration.

Additionally, when a password is enabled, you can also require the BIOS to request a password every time your system is rebooted. This would prevent unauthorized use of your computer.

You determine when the password is required within the BIOS Features Setup Menu and its Security option. If the Security option is set to "System", the password will be required both at boot and at entry to Setup. If set to "Setup", prompting only occurs



---

when trying to enter Setup.

### **3-13 Load Optimized /Standard Defaults**

#### **Load Optimized Defaults**

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:



Pressing <OK> loads the default values that are factory settings for optimal performance system operations.

#### **Load Standard Defaults**

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:




Pressing <OK> loads the default values that are factory settings for stable performance system operations.

### **3-14 Save & Exit Setup/ Exit Without Saving**

#### **Save and Exit Setup**

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

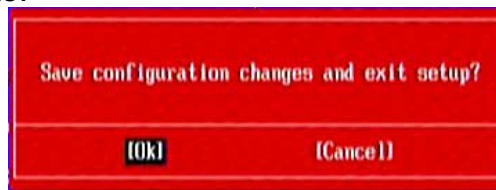


---

---

Pressing <OK> save the values you made previously and exit BIOS setup.

### **Exit Without Saving**

When you press <Enter> on this item, you get a confirmation dialog box with a message similar to:

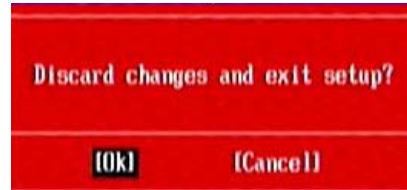

Pressing <OK> to leave BIOS setting without saving previously set values.