

Water quality and aquatic ecology modelling suite

D-WATER QUALITY

Deltares systems



DIDO

User Manual

D-Waq DIDO

Interactive grid editor for coupling FLOW with WAQ models

User Manual

D-Water Quality

Version: 4.00.34158

28 May 2014

D-Waq DIDO, User Manual

Published and printed by:

Deltares
Boussinesqweg 1
2629 HV Delft
P.O. Box 177
2600 MH Delft
The Netherlands

telephone: +31 88 335 82 73
fax: +31 88 335 85 82
e-mail: info@deltares.nl
www: <http://www.deltares.nl>

For sales contact:

telephone: +31 88 335 81 88
fax: +31 88 335 81 11
e-mail: sales@deltaressystems.nl
www: <http://www.deltaressystems.nl>

For support contact:

telephone: +31 88 335 81 00
fax: +31 88 335 81 11
e-mail: support@deltaressystems.nl
www: <http://www.deltaressystems.nl>

Copyright © 2014 Deltares

All rights reserved. No part of this document may be reproduced in any form by print, photo print, photo copy, microfilm or any other means, without written permission from the publisher: Deltares.

Contents

1	Guide to this manual	1
1.1	Introduction	1
1.2	Manual version and revisions	1
1.3	Typographical conventions	1
1.4	Changes with respect to previous versions	2
2	Introduction to D-Waq DIDO	3
2.1	Introduction	3
2.2	Functional description	3
2.3	Implementation specific aspects	3
3	Getting started	5
3.1	Overview of Delft3D	5
3.2	Starting Delft3D	5
3.3	Getting into D-Waq DIDO	6
3.4	Exiting D-Waq DIDO	8
4	General operation	11
4.1	General program operation instruction	11
4.2	Key stroke functions	11
5	Menu options	13
5.1	File menu	13
5.1.1	New project	14
5.1.2	Open project	14
5.1.3	Save project	14
5.1.4	Save project as	14
5.1.5	Attribute Files	14
5.1.6	Import	16
5.1.7	Export	17
5.1.8	Flow attributes	18
5.1.9	Open Colour map	20
5.1.10	Open Settings	20
5.1.11	Save Settings	20
5.1.12	Exit	21
5.2	Edit menu	21
5.2.1	Regular	21
5.2.2	Irregular	21
5.2.3	Break up	22
5.2.4	Selection polygon	22
5.2.5	Cut out area	23
5.2.6	Observation area	25
5.3	Operations menu	26
5.3.1	Select domain	27
5.3.2	Delete domain	27
5.3.3	Change centre of projection	27
5.3.4	Delete land boundary	27
5.3.5	Default aggregation	27
5.4	View menu	27
5.4.1	Spherical co-ordinates	28

5.4.2	Legend	29
5.4.3	Grid information	29
5.4.4	Find grid cell	30
5.4.5	Check partition	30
5.4.6	Land boundary	31
5.4.7	Observation areas	31
5.4.8	Water Quality grid	31
5.4.9	Hydrodynamic grid	31
5.4.10	Boundary	31
5.4.11	Depth	31
5.4.12	Dry points	31
5.4.13	Thin dams	32
5.5	Settings menu	32
5.5.1	General	32
5.5.2	Change colour map	33
5.5.3	Legend	33
5.5.4	Colours	34
5.5.5	Sizes	34
5.5.6	Order caches	35
5.6	Help menu	36
5.6.1	User manual	36
5.6.2	About	36
5.7	Toolbar	37
6	Tutorial	39
6.1	Introduction	39
6.2	Loading the model	39
6.3	Zoom out and zoom in	40
6.4	Two by two aggregation	41
6.5	Default aggregation in inlet	41
6.5.1	Break up the aggregated cells	42
6.5.2	Define area of influence	42
6.6	Saving the result	42
6.7	TELEMAC grid files	44
	References	47
A	Files of D-Waq DIDO	49
A.1	Delft3D project file	49
A.2	Aggregation file	51
A.3	Land boundary file	52
A.4	Polygon file	53
A.5	Orthogonal curvilinear grid file	55
A.6	Computational grid enclosure	56
A.7	Bathymetry file	57
A.8	Open boundaries file	58
A.9	Observation area information file	60
A.10	Data monitoring file	61
A.11	DD Boundary file	63
A.12	Dry points file	63
A.13	Thin dams file	64

A.14 Colour scheme file	65
A.15 Settings file	66

List of Figures

3.1	Title window of Delft3D	5
3.2	Main window Delft3D-MENU	6
3.3	Selection window for Grid and Bathymetry	6
3.4	Select working directory window	7
3.5	Select working directory window to set the working directory to <dido/friesian_tidal_inlet>	7
3.6	A part of the current working directory is shown in the title bar due to its length	8
3.7	Main window of the DIDO Graphical User Interface	8
3.8	Operational information displayed in the statusbar	8
5.1	D-Waq DIDO menu options	13
5.2	Options on the <i>File</i> menu	13
5.3	<i>File</i> → <i>Attribute Files</i> options	14
5.4	<i>File</i> → <i>Import</i> options	16
5.5	<i>File</i> → <i>Export</i> options	17
5.6	<i>File</i> → <i>Flow Attributes</i> options	19
5.7	Options on the <i>Edit</i> menu	21
5.8	Options on the <i>Edit</i> → <i>Selection Polygon</i> menu	22
5.9	Options on the <i>Edit</i> → <i>Cut Out Area</i> menu	23
5.10	Options on the <i>Edit</i> → <i>Observation Area</i> menu	25
5.11	Window Observation Area to change the observation area name	26
5.12	Options on the <i>Edit</i> menu	27
5.13	Options on the <i>Edit</i> menu	28
5.14	Options on the <i>View</i> → <i>Spherical Co-ordinates</i> menu	28
5.15	Grid information	29
5.16	Grid information	30
5.17	Give cell number menu	30
5.18	Check partition	31
5.19	Options on <i>Settings</i> menu	32
5.20	Options on <i>Settings</i> → <i>General</i> menu	32
5.21	Options on <i>Settings</i> → <i>Colours</i> menu	33
5.22	Options on <i>Settings</i> → <i>Legend</i> menu	33
5.23	Options on <i>Settings</i> → <i>Colours</i> menu	34
5.24	Options on <i>Settings</i> → <i>Sizes</i> menu	35
5.25	Options on Order Caches window	36
5.26	Options on <i>Help</i> menu	36
6.1	Starting and final situation of the clarified D-Waq DIDO session	39
6.2	Hydrodynamic grid	40
6.3	Selected corner for the two by two aggregation	41
6.4	Result of a two by two aggregation	41
6.5	Area of influence defined by the polygon	42
6.6	Save Aggregation window	43
6.7	Save Project window, saving Friesian Tidal Inlet project	43
6.8	Save Aggregation window, saving the Friesian Tidal Inlet aggregation	43
6.9	TELEMAC hydrodynamic triangular grid	44
6.10	Finite Volume grid, based on a triangular collocated hydrodynamic grid	44
6.11	Aggregated Finite Volume grid	45
A.1	Example of computational grid enclosures	57

A.2	Dry points in model area	64
A.3	Example of thin dams in a model area	65

1 Guide to this manual

1.1 Introduction

This User Manual concerns the aggregation module, D-Waq DIDO, of the Delft3D software suite. To make this manual more accessible we will briefly describe the contents of each chapter and appendix.

If this is your first time working with D-Waq DIDO module we suggest you to read and practice the getting started of Chapter 3 and the tutorial of Chapter 6. These chapters explain the user interface options and guide you through the definition of your first aggregation.

Chapter 2: Introduction to D-Waq DIDO, provides specifications of D-Waq DIDO and the areas of applications.

Chapter 3: Getting started, explains the use of the overall menu program, which gives access to the Delft3D modules and to the pre- and post-processing tools. Last but not least you will get a first introduction into the D-Waq DIDO Graphical User Interface, used to define an aggregation of grid cells which can be used in a water quality simulation.

Chapter 4: General operation, provides practical information on the general operation of the D-Waq DIDO module.

Chapter 5: Menu options, provides a description of all menu and toolbar options.

Chapter 6: Tutorial, emphasis at giving you some first hands-on experience in using the D-Waq DIDO module to define the input of a simple problem and in executing a water quality simulation.

References, provides a list of publications and related material on the D-Waq DIDO module.


Appendix A: Files of D-Waq DIDO, gives a description of the files that can be used in D-Waq DIDO as input or output. Generally, these files are generated by D-Waq DIDO or other modules of the Delft3D suite and you need not to be concerned about their internal details. However, in certain cases it can be useful to know these details, for instance to generate them by means of other utility programs.

1.2 Manual version and revisions

A manual applies to a certain release of the related numerical program. This manual applies to D-Waq DIDO version 3.39.00.

1.3 Typographical conventions

Throughout this manual, the following conventions help you to distinguish between different elements of text to help you learn about D-Waq DIDO.



Example	Description
Waves Boundaries	Title of a window or sub-window. Sub-windows are displayed in the Module window and cannot be moved. Windows can be moved independently from the Module window, such as the Visualisation Area window.
<i>Save</i>	Item from a menu, title of a push button or the name of a user interface input field. Upon selecting this item (click or in some cases double click with the left mouse button on it) a related action will be executed; in most cases it will result in displaying some other (sub-)window. In case of an input field you are supposed to enter input data of the required format and in the required domain.
<\tutorial\wave\swan-curvi> <siu.mdw>	Directory names, filenames, and path names are expressed between angle brackets, <>. For the Linux and UNIX environment a forward slash (/) is used instead of the backward slash (\) for PCs.
"27 08 1999"	Data to be typed by you into the input fields are displayed between double quotes. Selections of menu items, option boxes etc. are described as such: for instance 'select <i>Save</i> and go to the next window'.
delft3d-menu	Commands to be typed by you are given in the font Courier New, 10 points.
	User actions are indicated with this arrow.
[m/s] [-]	Units are given between square brackets when used next to the formulae. Leaving them out might result in misinterpretation.

1.4 Changes with respect to previous versions

Version	Description
3.39	Complete new version of D-Waq DIDO

2 Introduction to D-Waq DIDO

2.1 Introduction

Vergilius once wrote: "The Tyrian princess Dido succeeded the father and became queen of Tyrus. Her brother Sichaeus had killed her husband, after which she fled via Cyprus to Africa. There she asked a local king the favour to give her as much land as she could span with the hide of a bull. When the king granted the request, she cut the hide into long, thin strips enabling to span a much larger area. On this area Carthage was founded."

Feel yourself in the position of DIDO with the mouse and your computer screen, to fit the real world to your needs.

2.2 Functional description

D-Waq DIDO is an interactive grid editor for coupling hydrodynamic models with the DELWAQ model, [D-WAQ UM \(2013\)](#). It uses a rectilinear, curvilinear or Finite Element hydrodynamic grid layout as input. It produces the administration file needed by the Delft3D Water quality model DELWAQ to condense the fine hydrodynamic grid to a coarser water quality grid. Each water quality grid cell consists of an integer multiple of the hydrodynamic grid cells. Using D-Waq DIDO without aggregation will produce a DELWAQ aggregation input on the original hydrodynamic grid spacing, although DELWAQ grid cells will be renumbered.

This means that D-Waq DIDO does NOT make grids, but modifies existing hydrodynamic grids for use in water quality- and ecological modelling. D-Waq DIDO does so by defining a pointer from each of the hydrodynamic grid cells to a water quality grid cell. This means that after operation of D-Waq DIDO each hydrodynamic grid cell has a DELWAQ water quality/ecology grid cell numbering.

2.3 Implementation specific aspects

Although D-Waq DIDO can support a variety of hydrodynamic grid structures, your version will generally be limited to operate in concert with the hydrodynamic models available at your site. At the point where you are able to import a hydrodynamic grid, you will generally only be confronted with a selection screen showing the hydrodynamic grid files supported by your installation. Since this manual is general, certain sections will refer to options that are masked (e. g. a regular aggregation of every $m \times n$ grid cells is meaningless for irregularly linked grids and most finite element grids).

The output of the supported hydrodynamic models is as such insufficient for DELWAQ simulations. It is input to a coupling program between the supported hydrodynamic model and DELWAQ. The coupling programs between the hydrodynamic program, or the hydrodynamic program itself (e. g. Delft3D-FLOW) accept the aggregation output file of D-Waq DIDO and produce the administration and hydrodynamic input files for D-Water Quality.



3 Getting started

3.1 Overview of Delft3D

The Delft3D program suite is composed of a set of modules (components) each of which covers a certain range of aspects of a research or engineering problem. Each module can be executed independently or in combination with one or more other modules.

Delft3D is provided with a menu shell through which you can access the various modules. In this chapter we will guide you through some of the input screens to get the look-and-feel of the program. In the Tutorial, [chapter 6](#), you will learn to define a simple scenario.

3.2 Starting Delft3D

To start Delft3D:

- ◇ On an MS Windows platform: select *Delft3D* in the *Programs* menu.
- ◇ On Linux machines: type `delft3d-menu` on the command line.

Next the title window of Delft3D is displayed, [Figure 3.1](#).

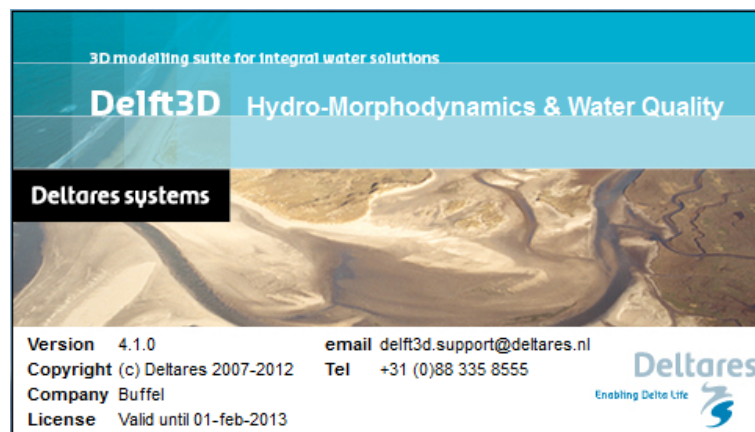


Figure 3.1: Title window of Delft3D

After a short while the main window of the Delft3D-MENU appears, [Figure 3.2](#).

Several menu options are shown. For now, only concentrate on exiting Delft3D-MENU, hence:

- ◇ Click on the *Exit* push button.

The window will be closed and you are back in the Windows Desktop screen for PCs or on the command line for Linux and UNIX workstations.

Remark:

- ◇ In this and the following chapters several windows are shown to illustrate the presentation of Delft3D-MENU and D-Waq DIDO. These windows are grabbed from the PC-platform. For Linux workstation the content of the windows is the same, but the colours may be different.



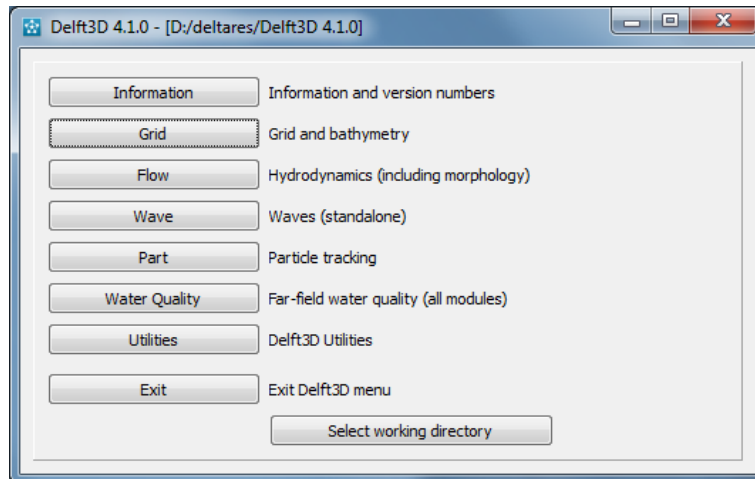


Figure 3.2: Main window Delft3D-MENU

3.3 Getting into D-Waq DIDO

To continue start the menu program again as indicated above.

- ◇ Click the *Grid* button.

Next the selection window for **Grid and bathymetry** is displayed for preparing a curvilinear grid, interpolate data on that grid and aggregate the hydrodynamic cells, see [Figure 3.3](#).

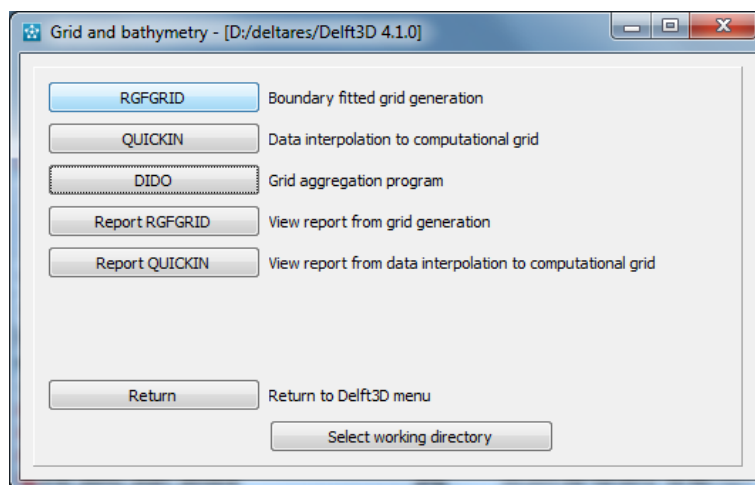


Figure 3.3: Selection window for **Grid and Bathymetry**

Before continuing with any of the selections of this **Grid and bathymetry** window, you select the directory in which you are going to prepare scenarios and execute computations.

- ◇ Click the *Select working directory* button.

Next the **Select working directory** window is displayed, see [Figure 3.4](#) (your current directory may differ, depending on the location of your Delft3D installation).

- ◇ Browse to and open the <tutorial> sub-directory of your Delft3D Home-directory.
- ◇ Open the <waq/dido> directory.
- ◇ Enter the <friesian_tidal_inlet> sub-directory and close the **Select working directory**

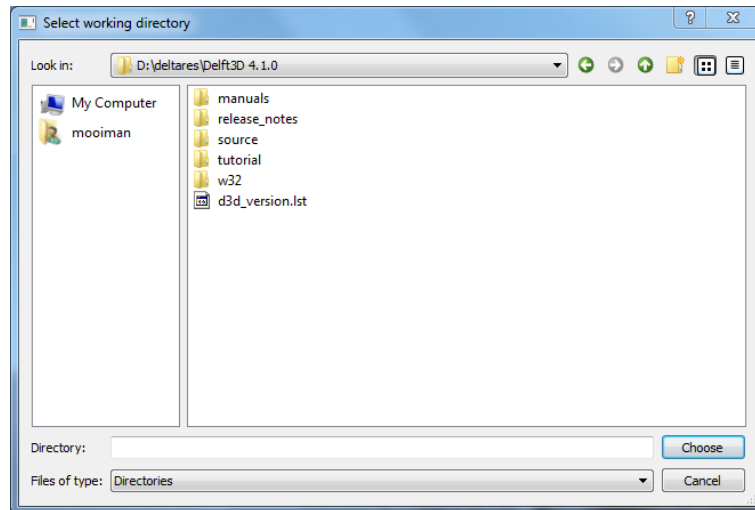


Figure 3.4: Select working directory window

window by clicking button **OK**, see [Figure 3.5](#).

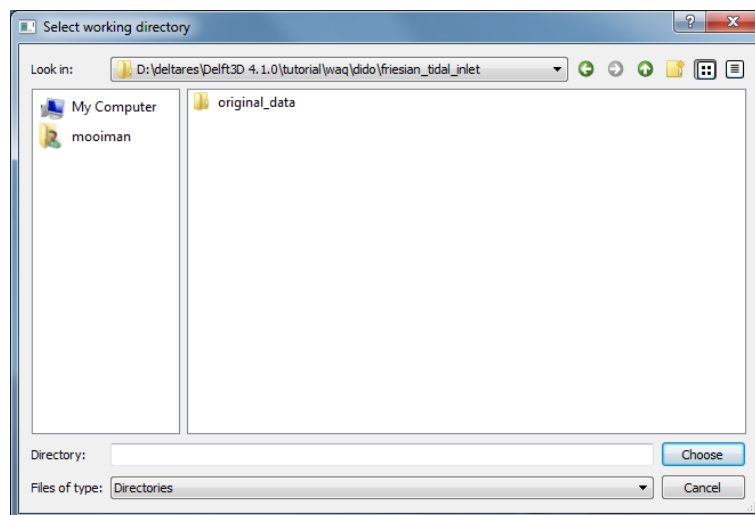


Figure 3.5: Select working directory window to set the working directory to <dido/friesian_tidal_inlet>

Next the **Grid and bathymetry** window is re-displayed, but now the changed current working directory is displayed in the title bar, see [Figure 3.6](#).

Remark:

- ◇ In case you want to start a new project for which no directory exists yet, you can select



in the **Select working directory** window to create a new folder.

- ◇ Click on *DIDO*

D-Waq DIDO is loaded and the primary input screen is opened, [Figure 3.7](#).

In the lower-left corner of the status bar D-Waq DIDO gives additional operational information, see [Figure 3.8](#), such as:

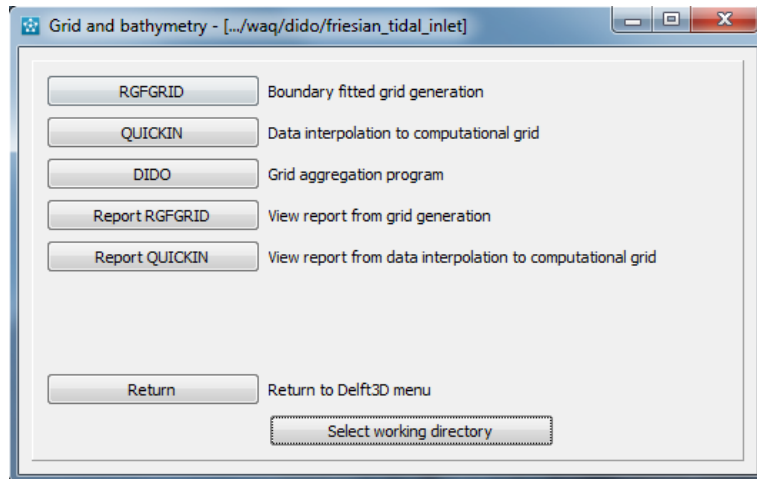


Figure 3.6: A part of the current working directory is shown in the title bar due to its length

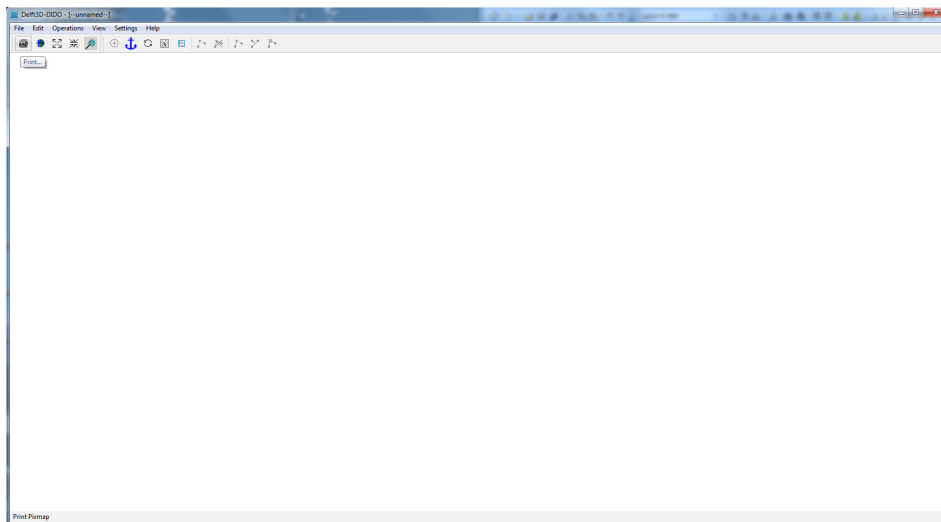


Figure 3.7: Main window of the DIDO Graphical User Interface

- ◇ User selections.
- ◇ Operational instructions.
- ◇ x and y co-ordinates of the current cursor position.
- ◇ Co-ordinate system: Cartesian or Spherical.

Choose menu option | | X,Y: 170910.414, 598230.850 | | Cartesian |

Figure 3.8: Operational information displayed in the statusbar

The purpose of D-Waq DIDO is to create an aggregation file which can be used in the coupling programs between a hydrodynamic simulation and D-Water Quality (i.e. Delft3D-FLOW, SIMONA and TELEMAT).

3.4 Exiting D-Waq DIDO

To exit the D-Waq DIDO

- ◇ Click *Exit* on the *File* menu.

You will be back in the **Grid and bathymetry** window, see [Figure 3.3](#)

- ◇ Click *Return* to return to the main window of Delft3D-MENU, see [Figure 3.2](#)
- ◇ Click *Exit*.

The window is closed and the control is returned to the desk top or the command line.

We encourage new users next to run the tutorial described in [Chapter 6](#).

4 General operation

4.1 General program operation instruction

The main menu bar is positioned at the top of the screen.

Help

Upon selecting *Help* → *User Manual*, the D-Waq DIDO User Manual in PDF-format will be opened. Use the bookmarks in the contents to locate the subject you are interested in.

Print screen

Press **Ctrl-P** or click  on the toolbar to obtain the print window for a hardcopy of the current screen.

File menu

The file-menu is the standard **Open** and **Save As** window. The file mask depends on the type of data that you want to open or save. You can change the directory by navigating through the folders.

It is possible to specify whether to Stay on the Start-up Directory or not, in the **Settings General** form.

General cursor and keyboard functions

The left mouse activates or confirms desired actions. The right mouse may also confirm actions, or may put the program back into its original mode.

4.2 Key stroke functions

D = Delete

In the *Edit* → *Polygon* and *Edit* → *Observation Areas* options, pressing **D** allows you to delete individual points.

E = Erase polygon

In *Edit* → *Polygon*, keeping **E** pressed allows you to delete the indicated polygon.

I = Insert

In *Edit* → *Polygon* or *Edit* → *Observation Area*, pressing **I** when the cursor is not on a polygon point allows you to start a new polygon.

Ctrl-P = Print screen

Pressing **Ctrl-P** will open the print window. The current screen will be printed to your printer or to a file.

R = Replace

In *Edit* → *Polygon* or *Edit* → *Observation Area*, pressing **R** allows you to replace (move) individual points.

Mouse wheel

Use the mouse wheel to zoom in and zoom out. Other ways are:

Click  on the toolbar to zoom in.

Click  on the toolbar to zoom out.

To define a zoom box, click  on the toolbar and drag a box.

Ctrl + = Zoom in

Keep the Ctrl-key pressed and use the + key to zoom in more.

Ctrl - = Zoom out

Keep the Ctrl-key pressed and use the - key to zoom in more.

Ctrl move cursor = move focus of screen

Keep the Ctrl-key pressed and move the cursor around. The current screen will move accordingly.

Ctrl arrow keys = move focus of screen left, right, up or down

Keep the Ctrl-key pressed and use the arrow keys to move the focus of the screen accordingly.

5 Menu options

The menu bar contains the following items, see [Figure 5.1](#), each item is discussed in a separate section




Figure 5.1: D-Waq DIDO menu options

5.1 File menu

Before opening an object (land boundary or polygon) be sure you choose the same co-ordinate system as the grid file you want to edit.

Remark:

- ◇ When opening files, D-Waq DIDO will not check the co-ordinate system in the files.

On the *File* menu, see [Figure 5.2](#), options are available to import land boundaries, observation areas, polygons, depth and grid files. The results at each stage of the aggregation process can be saved.

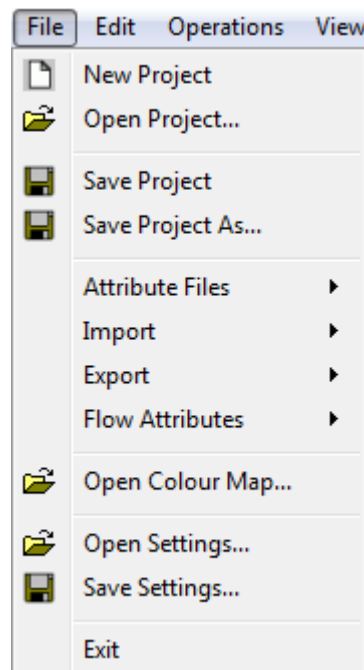


Figure 5.2: Options on the File menu

The start-up directory to open and save files can be configured in the **General Parameters** form on the menu *Settings* → *General*. As default the file menu starts at the last directory selected.

For the formats of the files you are referred to [Appendix A](#).

5.1.1 New project

Upon selecting *File* → *New Project*, all objects (land boundaries, polygons, grids, depths etc.) will be deleted; i.e. you start from scratch.

5.1.2 Open project

Upon selecting *File* → *Open Project*, the **Open Project** window appears in which you can browse to an existing project (<*.d3d> file).



Remark:

- ◇ A project saved by RGFGGRID or QUICKIN can be read by D-Waq DIDO

5.1.3 Save project

Upon selecting *File* → *Save Project*, the current project (filenames for hydrodynamic grid and waterquality segments) will be saved under an overall project name. If the project name is not known yet, the **Save As Project** window appears.

5.1.4 Save project as

Upon selecting *File* → *Save Project As*, the current project can be saved under a different name.

5.1.5 Attribute Files

On the *Attribute Files* sub-menu, see [Figure 5.3](#), options are available to open and save objects that are indirectly related to the grids.

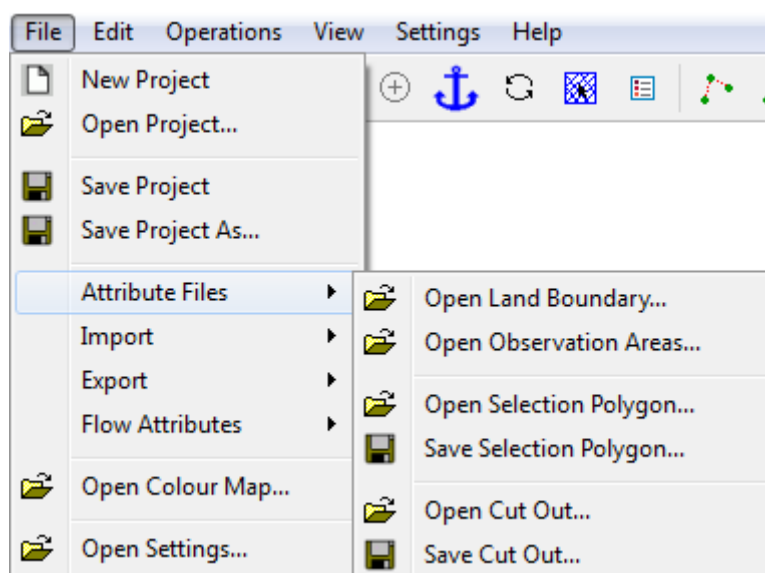


Figure 5.3: File → Attribute Files options

Open land boundary

Upon selecting *File* → *Attribute Files* → *Open Land Boundary* . . . , you can open a collection of land boundaries. Land boundaries (or land-water marking) are in files with default mask <*.ldb>. It is in D-Waq DIDO only for display purposes.

Remark:

- ◇ If you open another land boundary, it will be visualised together with an existing land boundary.

**Open observation areas**

Upon selecting *File* → *Attribute Files* → *Open Observation Areas* . . . , you can open a collection of observation areas with a file with default mask <*.oai> (Observation Area Information file). The polygons referenced in this file are per definition closed. If the polygon is not closed in the file it will still be shown as closed.

Remark:

- ◇ If you open another oai-file, then the previous one will be deleted

**Open selection area**

Upon selecting *File* → *Attribute Files* → *Open Selection Polygon* . . . , you can open a collection of area of interest polygons from a file with mask (<*.pol>). Polygons are per definition closed. If the polygon is not closed in the file it will still be shown as closed.

Remark:

- ◇ If you open another polygons file, it will be visualised together with existing polygons.

**Save selection polygon**

When saving selection polygons, each polygon will be saved as a closed polyline. A polygon file has as default mask <*.pol>.

Open Cut out

Upon selecting *File* → *Attribute Files* → *Cut out* . . . , you can open a collection of cut out polygons from a file with mask (<*.pol>). Cut out polygons are per definition closed. If the cut out polygon is not closed in the file it will still be shown as closed.

Remark:

- ◇ If you open another cut out file, it will be visualised together with existing cut out areas.

**Save Cut out**

When saving cut out polygons, each cut out polygon will be saved as a closed polyline. A cut out polygon file has as default mask <*.pol>.

5.1.6 Import

On the *Import* sub-menu, see [Figure 5.4](#), options are available to import objects that are directly related to the grids.

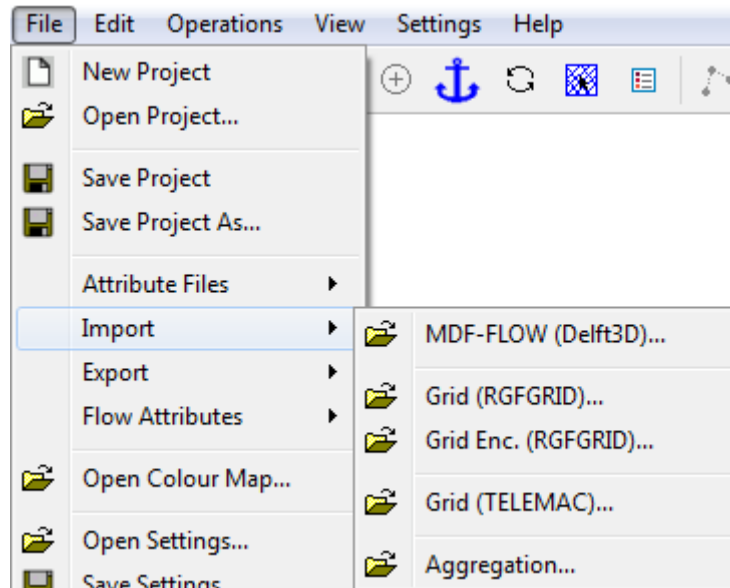


Figure 5.4: File → Import options

MDF-Flow (Delft3D)

When choosing the option *File* → *Import* → *MDF-FLOW (Delft3D)* . . . , you can open a collection of MDF-files from a Delft3D-FLOW hydrodynamic simulation. And all relevant information for grid aggregation is loaded from the attributes files of these MDF-files. The following attributes files will be read:

- ◇ <*.grd>, the grid file
- ◇ <*.enc>, the enclosure file,
- ◇ <*.bnd>, the open-boundary definition file,
- ◇ <*.dry>, the dry points definition file,
- ◇ <*.thd>, the thin dams definition file.
- ◇ <*.dep>, the depth definition file.

It is also possible to load these files separately. For a description of the Open-boundary, dry points, thin dams and depth definition files, see [section 5.1.8](#).

Grid (RGFGRID)

Upon selecting *File* → *Import* → *Grid (RGFGRID)* . . . , you can open a collection of grids. The grid file has a default mask <*.grd>, see [section A.5](#).



Remarks:

- ◇ The co-ordinate system in D-Waq DIDO is set accordingly to the system specified in the grid file.
- ◇ If the co-ordinate system is spherical then the co-ordinates are shown in stereographic

projection.

- ◇ If no co-ordinate system is specified, Cartesian is presumed.

Grid Enc. (RGFGRID)

Upon selecting *File → Import → Grid (RGFGRID) ...*, you can open the grid enclosure file suitable for the active grid. The grid enclosure file is strongly related to the active grid due to the grid indices definition in the file, see [section A.6](#).

Grid (TELEMAC)

Upon selecting *File → Import → Grid (TELEMAC) ...*, you can open a collection of grids suitable for TELEMAC (triangle grid). The grid is in a file with default mask `<*.geo>` or `<*.slf>`. The open boundary files with required mask `<*.cli>`, are together read with the grid if the basename of the file is the same.

Remark:

- ◇ The open boundary file can not be read separately after the grid is read.



Aggregation

Upon selecting *File → Import → Aggregation ...*, you can open one aggregation file suitable for the active grid. The aggregation is in a file with default mask `<*.dwq>`, see [Appendix A.2](#).

5.1.7 Export

On the *Attribute Files* sub-menu, see [Figure 5.5](#), options are available to export objects that are directly related to the grids.

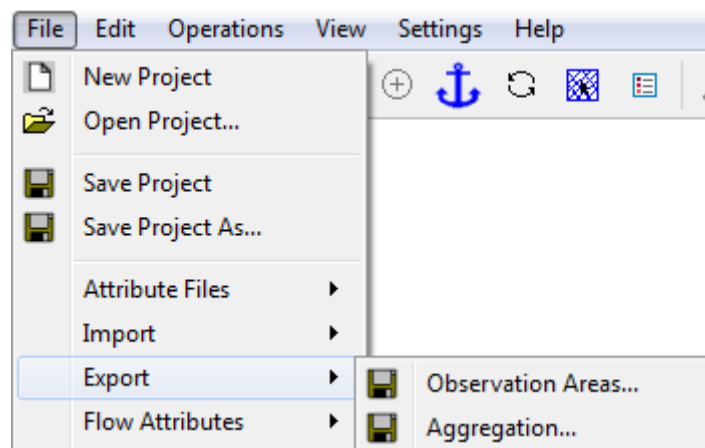


Figure 5.5: File → Export options

Observation areas

Upon selecting *File* → *Export* → *Observation Areas* . . . , you can save the observation areas.

The data is stored in three separate files,

- 1 Observation Area Information file, containing general information about the observation areas. The file has default mask <*.aoi>, see appendix [A.9](#). Such as the names of the areas and the reference to the polygon file with the actual polygons.
- 2 Polygons, these polygons indicate the observation area in world co-ordinates and is therefore independent of the numerical model. The file has default mask <*.pol>, see appendix [A.4](#).
- 3 DMO, these file contains the segment numbers for each observations area and can be used in the input file of D-Water Quality. The file has default mask <*.dmo>, see appendix [A.10](#).

When asked to save the polygon file, click Yes.

Aggregation

Upon selecting *File* → *Export* → *Aggregation* . . . , you can save the aggregation of the active grid. The aggregation is stored in a file with default mask <*.dwq>.

5.1.8 Flow attributes

Open-boundaries, DD-Boundaries, Dry points and Thin Dams definitions for the hydrodynamic module Delft3D-FLOW or SIMONA need to be incorporated before generating the aggregation, see [Figure 5.6](#). The dry points are needed when generating the aggregation because the dry points are not involved in the hydrodynamic computation and do not have a cell/segment number. The Open and DD-boundaries are needed because the cells at the boundary has their own numbering. See the SIMONA user manual ([Rijkswaterstaat/RIKZ, 2007](#)) how to define dry points for the hydrodynamic module SIMONA.

Open Open-Boundaries (Delft3D)

Upon selecting *File* → *Flow Attributes* → *Open Open-Boundaries (Delft3D)* . . . , you can open the open boundary file. Visualising the open boundaries can help you with the aggregation of hydrodynamic cells. The open boundary is in a file with mask <*.bnd>, see Appendix [A.8](#).

Open DD-Boundaries (Delft3D)

Upon selecting *File* → *Flow Attributes* → *Open DD-Boundaries (Delft3D)* . . . , you can open the domain decomposition boundary file. Visualising the DD-boundaries can help you with the aggregation of hydrodynamic cells. The domain decomposition boundary is in a file with mask <*.ddb>, see Appendix [A.11](#).

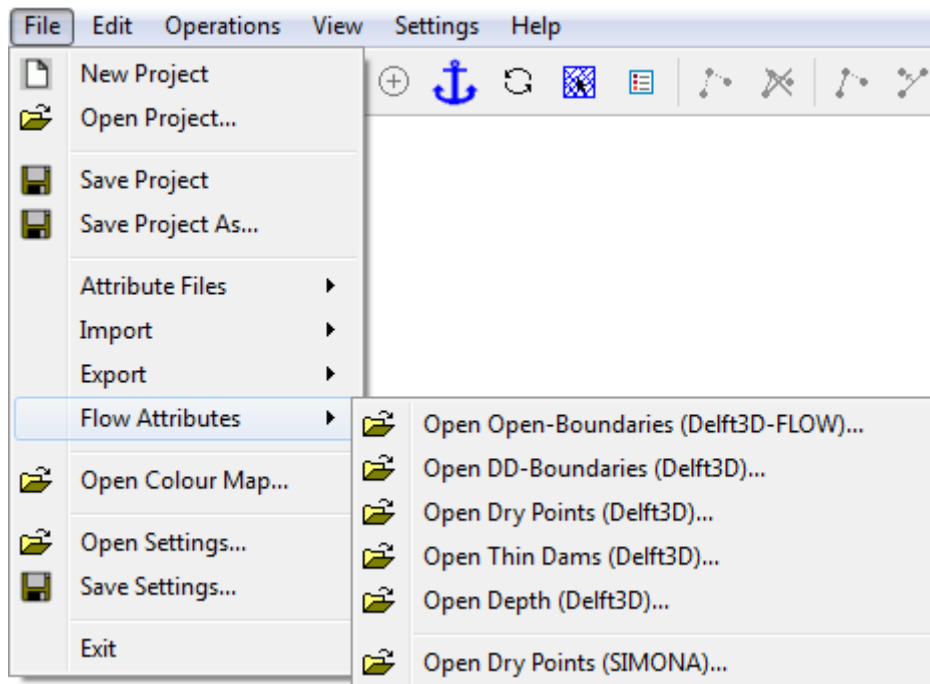


Figure 5.6: File → Flow Attributes options

Open Dry Points (Delft3D)

Upon selecting *File → Flow Attributes → Open Dry Points (Delft3D) ...*, you can open one dry points file suitable for the active grid. The dry points are not counted in the segment numbering, so loading dry points DIDO generates the 'Active Points Only' segment numbers.

When opening a file with dry points and dry points are already defined, then the latter will be removed, see Appendix [A.12](#) for the file format.

Open Thin Dams (Delft3D)

Upon selecting *File → Flow Attributes → Open Thin Dams (Delft3D) ...*, you can open one thin dams file suitable for the active grid. When a regular aggregation is applied, the aggregated segments which would contain a thin dam are not aggregated. This option maintains the geographical structure in the aggregated grid. Aggregations around thin dams have to be performed with the option of area of influence (*Edit → Polygon*) and regular aggregation or manually (option *Edit → Irregular*)

When opening a file with thin dams and thin dams are already defined, then the latter will be removed, see Appendix [A.13](#) for the file format.

Open Depth (Delft3D)

Upon selecting *File* → *Flow Attributes* → *Depth (Delft3D-FLOW)* . . . , you can open one depth file suitable for the active grid. The bathymetry can be used to influence the aggregation policy, see [section 5.5.1](#) item *Aggregation below Z-level*.

The bathymetry data is in the Delft3D-FLOW depth-file format with default mask <*.dep>, see Appendix [A.7](#).

Open Dry Points (SIMONA)

Upon selecting *File* → *Flow Attributes* → *Open Dry Points (SIMONA)* . . . , you can open one dry points file suitable for the active grid. The dry points are not counted in the segment numbering, so loading dry points DIDO generates the 'Active points Only' segment numbers.

When opening a file with dry points and dry points are already defined, then the latter will be removed. The dry points data is in SIMONA format with default mask <dampoints*>, see the SIMONA User Manual [Rijkswaterstaat/RIKZ \(2007\)](#) for the file format..

5.1.9 Open Colour map

You can choose from a number of pre-defined colour schemes (in file with masks <*.clr> or <*.clrmap>). These colour schemes have the same format as used for Delft3D-QUICKPLOT, see Appendix [A.14](#) for the file format.

**Restriction:**

- ◇ Only the colour space RGB is supported

**Remark:**

- ◇ If the file <dido.clrmap> exists on the start-up directory then this file will be read, if the file does not exist on the start-up directory it will try to read the file on the installation directory <\$D3D_HOME/\$ARCH/plugins/default>.

5.1.10 Open Settings

If you have saved your D-Waq DIDO settings in a previous session, you can open these settings again, see Appendix [A.15](#) for the file format.

**Remark:**

- ◇ If the file <dido.ini> exists on the start-up directory then this file will be read, if the file does not exist on the start-up directory it will try to read the file on the installation directory <\$D3D_HOME/\$ARCH/plugins/default>.

5.1.11 Save Settings

If you have made changes in one of the forms on the *Settings* menu, you can save these settings to be used later on again.

5.1.12 Exit

Exit from the D-Waq DIDO program

5.2 Edit menu

On the *Edit* menu, see [Figure 5.7](#), several edit modes can be selected

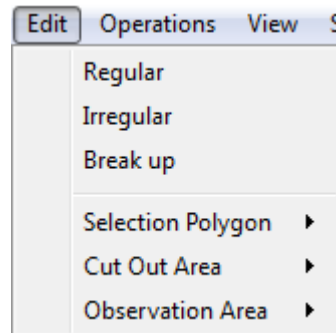


Figure 5.7: Options on the Edit menu

5.2.1 Regular

Upon selecting *Edit* → *Regular*, you can make a regular aggregation of the hydrodynamic grid cells.

Click with the left mouse button in a grid cell of the hydrodynamic grid, then move the mouse to an other grid cell. The grid cells which will be aggregated are indicated with a thick line. Pressing the right mouse button will give a regular aggregation for the whole model.

Remark:

- ◇ The operation can be limited by a polygon, this polygon defines an area of influence. So the aggregation will only be performed for those cells whose cell centre are inside the polygon. Cell centres are indicated by a dot.



5.2.2 Irregular

Upon selecting *Edit* → *Irregular*, you can make a irregular aggregation of the hydrodynamic volumes.

Click with the left mouse button in a grid cell of the hydrodynamic grid, then all the cells with the same aggregation number are surrounded with a thicker line. To add a grid cell, to the grid cells already indicated, click into another grid cell. Do this as much as needed. Finish the operation by pressing the right mouse button.

5.2.3 Break up

Upon selecting *Edit* → *Irregular*, you can break up an aggregation.

Click into an area which is already aggregated to break up this aggregation, i.e. the default aggregation is reset for this aggregated cell.

5.2.4 Selection polygon

The polygon is used to limit the area of influence of operations and/or edit actions, see [Figure 5.8](#).

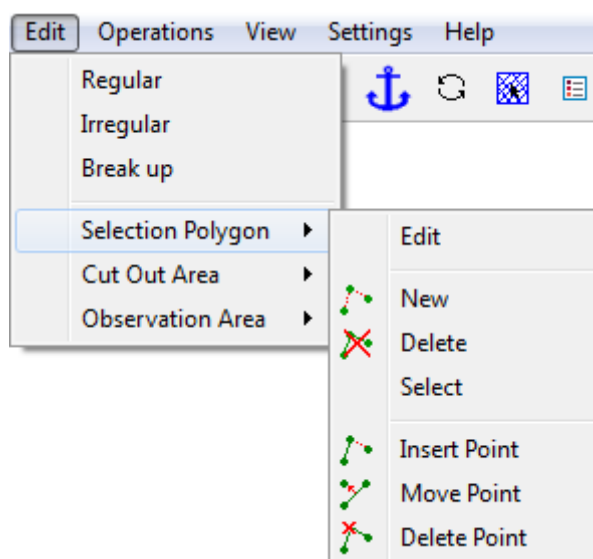


Figure 5.8: Options on the *Edit* → *Selection Polygon* menu

Edit

Upon selecting *Edit* → *Selection Polygon* → *Edit*, you can start editing a polygon that defines a selection area. When there is no polygon the edit mode is set to *New*, otherwise you have to select first a polygon (from the menu *Edit* → *Selection Polygon* → *Select* or press the key *s*). After you have selected the polygon you can use key-strokes, icons in the toolbar or menu items to switch the edit mode.

New

Upon selecting *Edit* → *Selection Polygon* → *New*, you can start to define a new polygon, click on , or use the key-stroke *n* to start a new polygon.

Delete

Upon selecting *Edit* → *Selection Polygon* → *Delete*, click on , or use the key-stroke *e*, to delete (erase) the selected polygon.

Select

Upon selecting *Edit* → *Selection Polygon* → *Select*, or use the key-stroke *s*, you can select a polygon by clicking on one of its edges or vertices. After that the polygon will be highlighted

Insert point

Upon selecting *Edit* → *Selection Polygon* → *Insert Point*, click on , or use the key-stroke *i*, you can insert a point into the selected polygon. The point will be inserted at the nearest linear piece of the polygon.

Move point

Upon selecting *Edit* → *Selection Polygon* → *Move Point*, click on , or use the key-stroke *r*, you can move (replace) a point on the selected polygon.

Delete point

Upon selecting *Edit* → *Selection Polygon* → *Delete Point*, click on , or use the key-stroke *d*, you can delete a point on the selected polygon by indicating it.

5.2.5 Cut out area

The polygon is used to limit the hydrodynamic area for the Water Quality simulation, see [Figure 5.9](#).

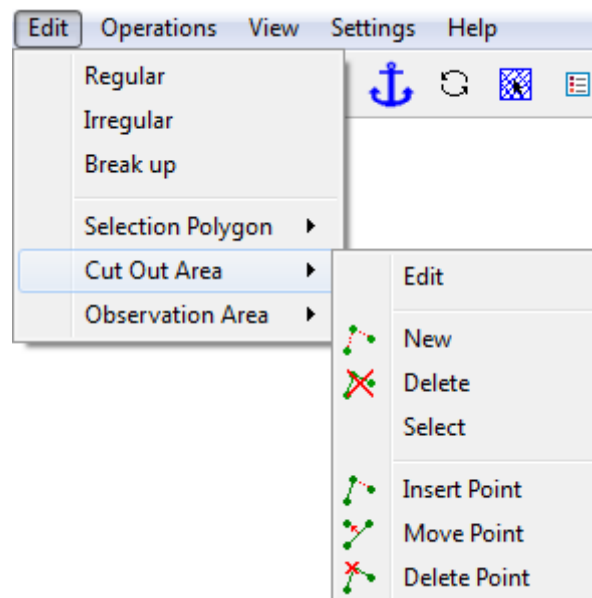


Figure 5.9: Options on the *Edit* → *Cut Out Area* menu

Edit

Upon selecting *Edit* → *Cut Out Area* → *Edit*, you can start editing a polygon that defines an Cut Out Area. When there is no polygon the edit mode is set to *New*, otherwise you have to

select first a polygon (from the menu *Edit* → *Cut Out Area* → *Select* or press the key *s*). After you have selected the polygon you can use key-strokes, icons in the toolbar or menu items to switch the edit mode.

New

Upon selecting *Edit* → *Cut Out Area* → *New*, you can start to define a new polygon, click on , or use the key-stroke *n* to start a new polygon.

Delete

Upon selecting *Edit* → *Cut Out Area* → *Delete*, click on , or use the key-stroke *e* to delete (erase) the polygon.

Select

Upon selecting *Edit* → *Cut Out Area* → *Select*, or use the key-stroke *s*, you can select a polygon by clicking on one of its edges or vertices. After that the polygon will be highlighted

Insert point

Upon selecting *Edit* → *Cut Out Area* → *Insert Point*, click on , or use the key-stroke *i*, you can insert a point into the polygon. The point will be inserted at the closest linear piece of the polygon.

Move point

Upon selecting *Edit* → *Cut Out Area* → *Move Point*, click on , or use the key-stroke *r*, you can move (replace) a point on the polygon.

Delete point

Upon selecting *Edit* → *Cut Out Area* → *Delete Point*, click on , or use the key-stroke *d*, you can delete a point on the polygon by indicating it.

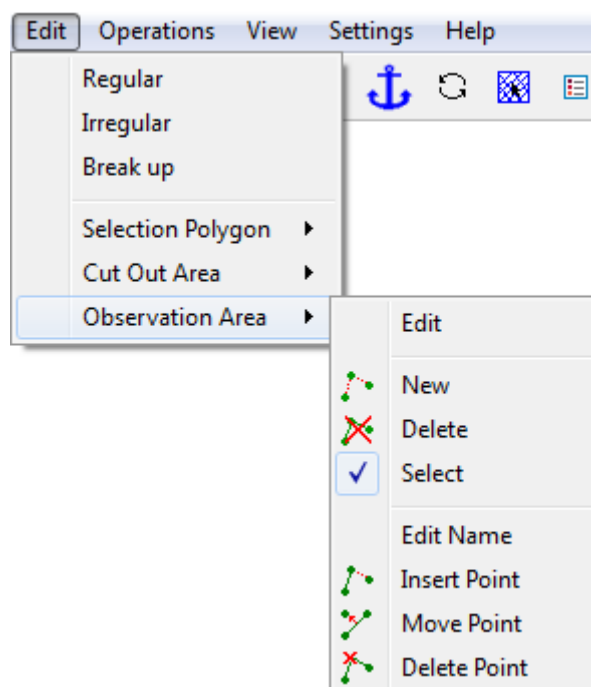


Figure 5.10: Options on the Edit → Observation Area menu

5.2.6 Observation area

Observation areas are collections of individual computational segments. The concentration, computed by D-Water Quality, in each segment is averaged and the mass balances, if any, are computed for the segments as a whole.

First you have to define the locations of observation areas by editing polygons, see [Figure 5.10](#).

For each area a polygon is required. When editing the polygon the default observation area name is immediately given ('ObsArea ???') and the segments which belong to this observation area are indicated by a thick line. When saving the observation areas the polygons and segment numbers are saved in a separate file, see [Section 5.1.7](#).

Edit

Upon selecting *Edit* → *Observation Area* → *Edit*, you can start editing a polygon that defines an Observation Area. When there is no polygon the edit mode is set to *New*, otherwise you have to select first a polygon (from the menu *Edit* → *Observation Area* → *Select* or press the key **s**). After you have selected the polygon you can use key-strokes, icons in the toolbar or menu items to switch the edit mode.

New

Upon selecting *Edit* → *Observation Area* → *New*, click on , or use the key-stroke **n**, you can start to define a new observation area. Right mouse click to finish defining this polygon, next click with left mouse button will start a new observation area.

Delete

Upon selecting *Edit* → *Observation Area* → *Delete*, click on , or use the key-stroke *e*, you can delete (erase) a observation area by indicating it with the left mouse button.

Select

Upon selecting *Edit* → *Observation Area* → *Select*, or use the key-stroke *s*, you can select a polygon by clicking on one of its edges or vertices. After that the polygon will be highlighted

Edit name

Upon selecting *Edit* → *Observation Area* → *Edit Name*, you can change the observation area name by indicating the area with the left mouse button. After this a form opens and you can change the observation area name, see [Figure 5.11](#).

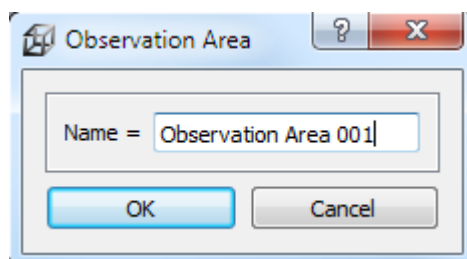


Figure 5.11: Window **Observation Area** to change the observation area name

Insert point

Upon selecting *Edit* → *Observation Area* → *Insert Point*, click on , or use the key-stroke *i*, you can insert a point into the polygon. The point will be inserted at the closest linear piece of the polygon.

Move point

Upon selecting *Edit* → *Observation Area* → *Move Point*, click on , or use the key-stroke *r*, you can move (replace) a point on the polygon.

Delete point

Upon selecting *Edit* → *Observation Area* → *Delete Point*, click on , or use the key-stroke *d*, you can delete a point on the polygon by indicating it.

5.3 Operations menu

On the *Operations* menu, see [Figure 5.12](#), you may choose to change the centre of the stereographic projection, remove the land boundary or generate a default aggregation.

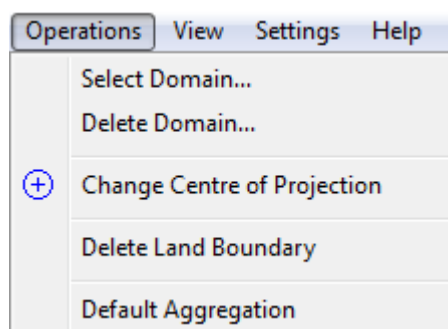


Figure 5.12: Options on the Edit menu

5.3.1 Select domain

If your project consists of multiple grids (so-called domain decomposition application) you can switch between the grids by clicking *Edit* → *Select Domain*, or click  on the toolbar. Next, click on the grid you want to become the active grid.

5.3.2 Delete domain

To delete a domain or grid, select *Edit* → *Delete Domain*. Next, click on an active or inactive grid. When deleting a domain, also objects defined on that grid will be deleted.

5.3.3 Change centre of projection

For spherical co-ordinates D-Waq DIDO can use two different projections, no projection and stereographic projection. For stereographic projection a special function is implemented to centring the computer screen to the centre of projection and the sphere. This function can be invoked by clicking the menu item *Operations* → *Change Centre of Projection* see [Figure 5.12](#). When using this command the centre of the projection is set to the centre of the screen. This action requires recalculation of the projection and a new screen refresh. The centre of the projection does not change when using zoom in, zoom out or pan, so there is no performance drawback and a smooth screen-refresh is obtained.

5.3.4 Delete land boundary

All the points of the land boundary are removed.

5.3.5 Default aggregation

The default aggregation is no aggregation, so all water quality cells are equal to the hydrodynamic cells. If a polygon is defined, the default aggregation is restricted to the inner area of the polygon, i.e. the default aggregation is performed on those cells which have their centres within the polygon.

5.4 View menu

On the *View* menu, you may choose to display several data sets; see [Figure 5.13](#)

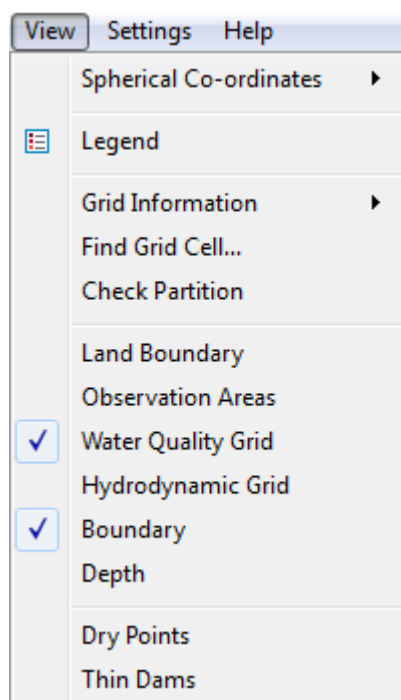


Figure 5.13: Options on the Edit menu

5.4.1 Spherical co-ordinates

Here you can select how to project the spherical co-ordinates onto the screen, see [Figure 5.14](#).

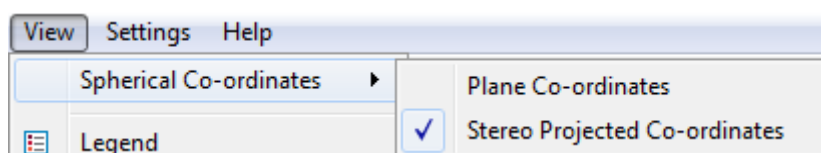


Figure 5.14: Options on the View → Spherical Co-ordinates menu



Remarks:

- ◇ Only applicable for a spherical co-ordinate system.
- ◇ Default: A spherical grid is shown in stereographic projected co-ordinates

Plane co-ordinates

Upon selecting *View → Spherical Co-ordinates → Plane Co-ordinates*, you can choose to the display the co-ordinates as they are.

Stereo projected co-ordinates

Upon selecting *View → Spherical Co-ordinates → Stereo Projected Co-ordinates*, the co-ordinates are displayed using a stereographic projection onto the screen.

5.4.2 Legend

Upon selecting *View* → *Legend*, you can show or hide the colour band on the left side of the screen.

5.4.3 Grid information

Upon selecting *View* → *Grid Information*, you can point and click onto the grid to get some characteristics cell numbers of the indicated cell, see [Figure 5.16](#). The cell is also indicated by a polygon.

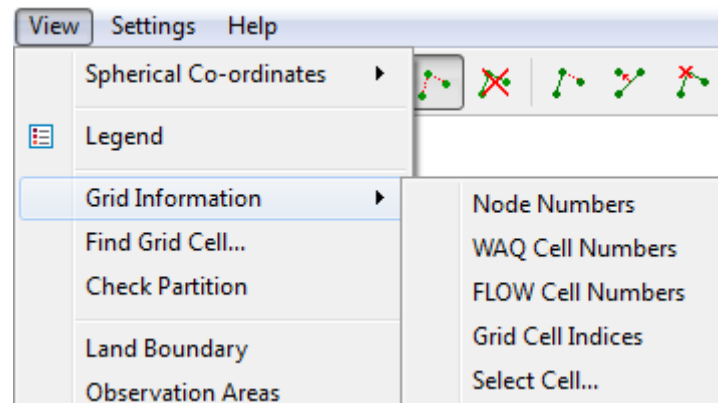


Figure 5.15: Grid information

Node numbers

Upon selecting *View* → *Grid Information* → *Node Numbers*, you can show or hide the node numbers of the hydrodynamic grid. If it is a regular (structured) grid, two indices will displayed (m, n), if it is an irregular (unstructured) grid then just the number of the grid node will be displayed.

WAQ cell numbers

Upon selecting *View* → *Grid Information* → *WAQ Cell Numbers*, you can show or hide the cell numbers of the water quality grid. For a regular (structured) as well as a irregular (unstructured) grid the cell number will be displayed.

FLOW cell numbers

Upon selecting *View* → *Grid Information* → *FLOW Cell Numbers*, you can show or hide the cell numbers of the hydrodynamic grid. For a regular (structured) as well as a irregular (unstructured) grid the cell number will be displayed.

Grid cell indices

Upon selecting *View* → *Grid Information* → *Grid Cell Indices*, you can show or hide the index numbers of the regular (structured) hydrodynamic grid, two indices will displayed (m, n).

Select cell

Upon selecting *View* → *Grid Information* → *Select Cell...*, you can retrieve some cell administration. After selecting a cell these information will be showed in the **Cell Administration** window, see [Figure 5.16](#).

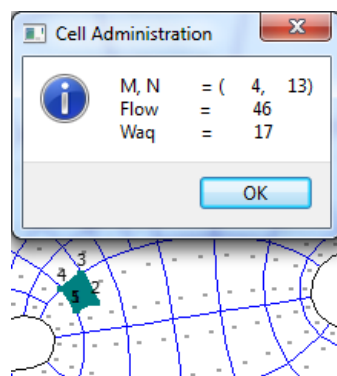


Figure 5.16: Grid information

5.4.4 Find grid cell

Upon selecting *View* → *Find Grid Cell...*, you can find the hydrodynamic or water quality grid cell. To find the hydrodynamic grid cell type in its number and set the water quality grid cell to zero. To find the water quality grid cell type a zero for the hydrodynamic grid cell and the a cell number for the water quality The last search will indicate more than one cell if the grid was aggregated.

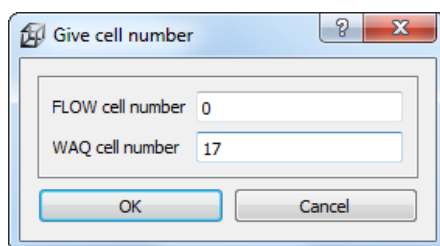


Figure 5.17: Give cell number menu

5.4.5 Check partition

Upon selecting *View* → *Check Partition*, you can check if the observation areas do partition the whole computational area. This functionality can be useful to generate some data fields which need to cover the whole area.

Cells can not be inside more than one observation area, see [Figure 5.18](#). The cells are coloured accordingly

Green: The cell centre is in just one observation area.

Red: The cell centre is in more than one observation area.

Blue: The cell centre is outside any observation area.

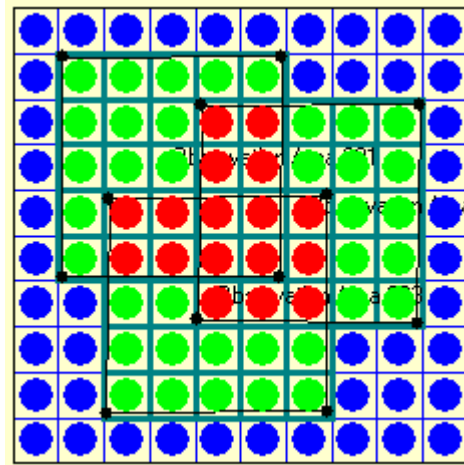


Figure 5.18: Check partition

5.4.6 Land boundary

Upon selecting *View* → *Land Boundary*, you can show or hide the land boundary. The land boundary is drawn as a polyline.

5.4.7 Observation areas

Upon selecting *View* → *Observation Areas*, you can show or hide the observation areas.

5.4.8 Water Quality grid

Upon selecting *View* → *Water Quality Grid*, you can show or hide the water quality grid. The water quality grid is drawn above the hydrodynamic grid.

5.4.9 Hydrodynamic grid

Upon selecting *View* → *Hydrodynamic Grid*, you can show or hide the hydrodynamic. The hydrodynamic grid is drawn below the water quality grid.

5.4.10 Boundary

Upon selecting *View* → *Boundary*, you can show or hide the open boundaries.

5.4.11 Depth

Upon selecting *View* → *Depth*, you can show or hide the depth values. The depth is located at the cell corners of the hydrodynamic grid.

5.4.12 Dry points

Upon selecting *View* → *Dry Points*, you can show or hide the dry points. The dry point is located at a cell of the hydrodynamic grid.

5.4.13 Thin dams

Upon selecting *View* → *Thin Dams*, you can show or hide the thin dams. The thin dam is located at the cell faces of the hydrodynamic grid.

5.5 Settings menu

The following options can be accessed through the *Settings* menu, see [Figure 5.19](#)

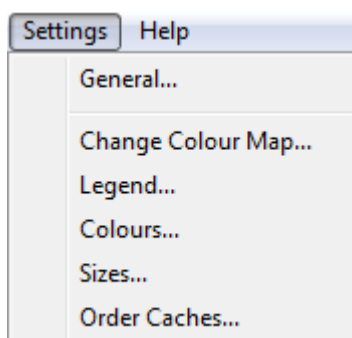


Figure 5.19: Options on Settings menu

5.5.1 General

When clicking on the *Settings* → *General* menu, a form opens in which you can select some general parameters; see [Figure 5.20](#)

- ◇ *Stay on Startup directory* default: 0 (Off)
When navigating through the directories in the file selecting window, you can specify whether to always go back to the start up directory (1), or keep the latest directory (0).
- ◇ *Cells to Aggregate* default: 3
Maximum number of volumes which can be aggregated to one water quality volume for an unstructured grid for hydrodynamics. TELEMAC allows the values 1, 2 and 3.
- ◇ *Aggregation below Z-level* default: ∞
The aggregation will be performed where the depth is deeper then the given reference level, for the shallower parts of your model no aggregation will be performed.

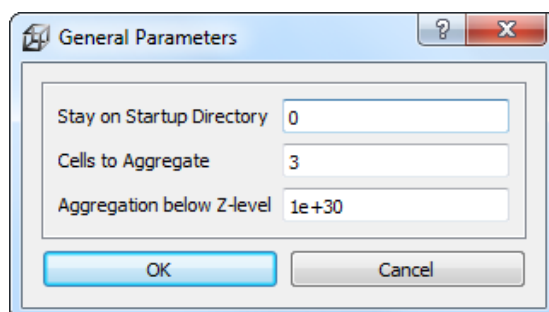


Figure 5.20: Options on Settings → General menu

5.5.2 Change colour map

When clicking on the *Settings* → *Change Colour Map* menu, a form opens in which you can select the relation between a parameter (i.e. Depth) and the loaded colour maps, see [Figure 5.21](#)

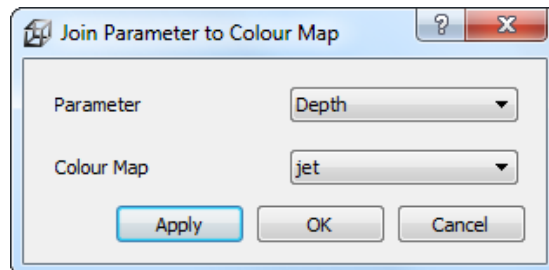


Figure 5.21: Options on *Settings* → *Colours* menu

5.5.3 Legend

When clicking on the *Settings* → *Legend* menu, a form opens in which you can define how the iso-colour figures should be displayed; see [Figure 5.22](#)

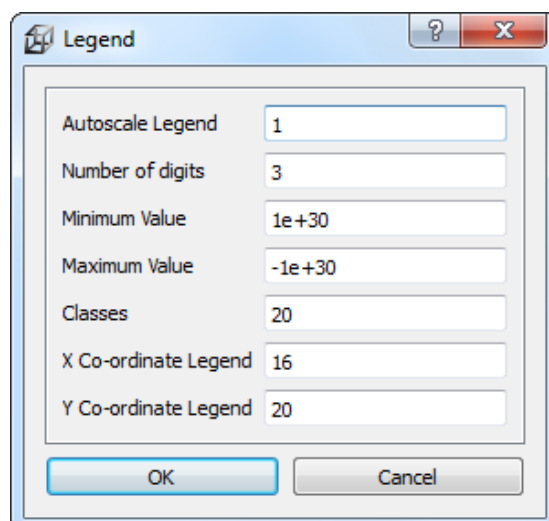


Figure 5.22: Options on *Settings* → *Legend* menu

- ◇ *Autoscale Legend* default: On
Specify whether the program should determine the isocolour values automatically, or to do it yourself. If you leave it to the program, it will determine the minimum and maximum depth value within the viewing area and display the number of iso-colours specified above. Zooming in will always result in display of the same number of iso-colours. If you want to specify the isocolour values yourself, you have to specify one of the three parameters below. When zooming in, the iso-colour values will remain fixed.
- ◇ *Minimum Value*
Specifying this value turns autoscale off.
- ◇ *Maximum Value*
Specifying this value turns autoscale off.
- ◇ *Classes* default: 20
The number of classes can be specified

- ◇ *X Co-ordinate Legend* default: 16
X Co-ordinate of lower left corner of legend in pixels
- ◇ *Y Co-ordinate Legend* default: 20
Y Co-ordinate of lower left corner of legend in pixels

5.5.4 Colours

When clicking on the *Settings* → *Colours* menu, a form opens in which you can define the colours for background, land boundary, polygons, etc.; see [Figure 5.23](#)

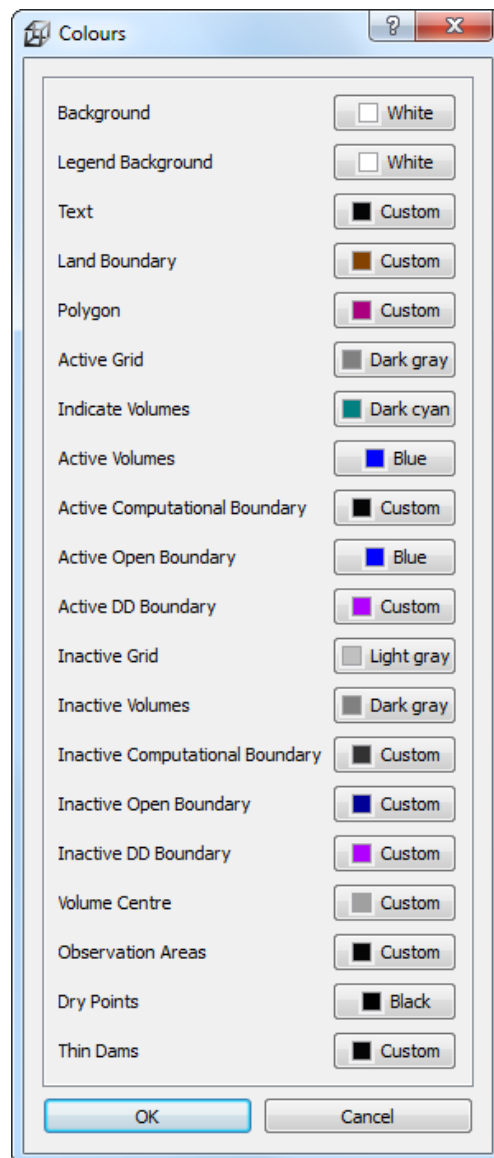


Figure 5.23: Options on *Settings* → *Colours* menu

5.5.5 Sizes

When clicking on the *Settings* → *Sizes* menu, a form opens in which you can define the linewidth and dotsize in pixels. See [Figure 5.24](#)

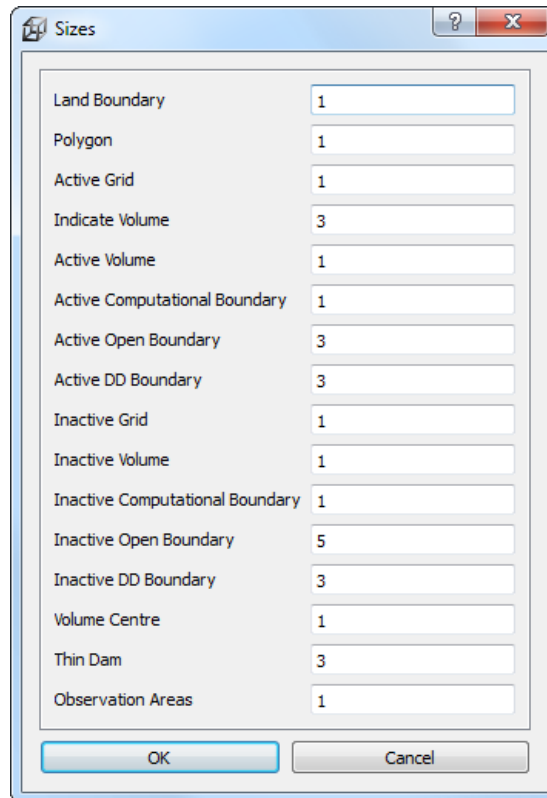


Figure 5.24: Options on Settings → Sizes menu

5.5.6 Order caches

The parameters set in the **Order caches** window, see [Figure 5.25](#), influence the drawing order of the several items. The drawing order of the caches is: 5, 4, 3, 2, 1, 0. Cache 5 is drawn first and cache 0 is drawn last. So the items which will drawn in cache 0 are drawn on top. If there is no need to draw a cache it will not be done, this improves the drawing performance by avoiding unnecessary drawings. Therefore, if an item is changed in cache 3 only caches 3, 2, 1 and 0 are drawn.

◇ Inactive Depth	default: 5
◇ Active Depth	default: 5
◇ Centres	default: 5
◇ Inactive Grid	default: 4
◇ Active Grid	default: 4
◇ Inactive Volumes	default: 3
◇ Active Volumes	default: 2
◇ Boundaries	default: 1
◇ Land Boundary	default: 1
◇ Obs. Areas	default: 2
◇ Drypoints, Thin Dams, Observation Points	default: 1
◇ Samples	default: 1

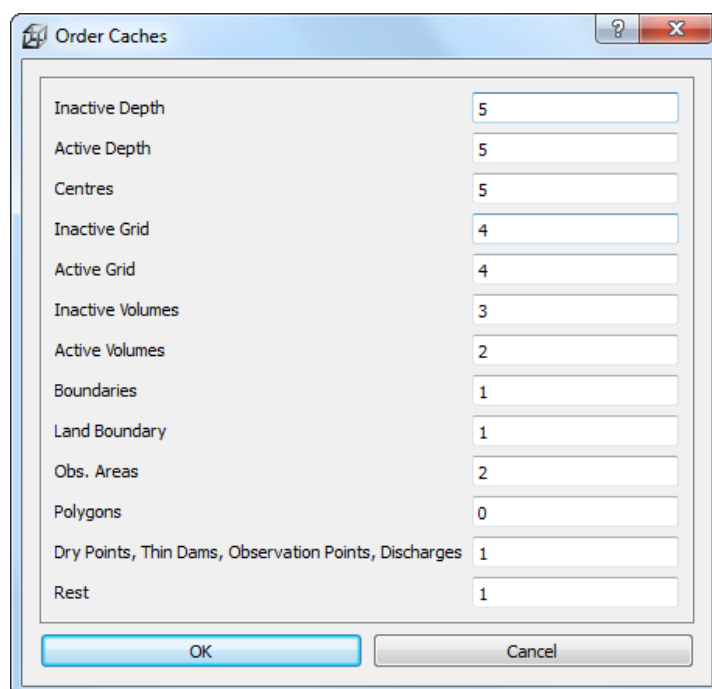


Figure 5.25: Options on **Order Caches** window

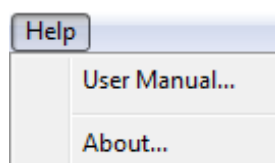


Figure 5.26: Options on **Help** menu

5.6 Help menu

On the *Help* menu, you may choose to read the user manual or the version number of D-Waq DIDO; see [Figure 5.26](#)

5.6.1 User manual

When clicking on the *Help* → *User Manual* the user manual of D-Waq DIDO will be displayed (<D-Waq DIDO _User_manual.pdf>).

5.6.2 About

When clicking on the *Help* → *About* a window will display the current version number of D-Waq DIDO.

5.7 Toolbar

A list of all toolbar icons is given below:

-  Click this icon to obtain the print window for a hardcopy of the current screen.
-  Click this icon to zoom out to full extent.
-  Click this icon to zoom in.
-  Click this icon to zoom out.
-  Click this icon and drag a box to zoom in to that area.
-  Click this icon to centre the stereographic projection at the centre of the screen
-  Click this icon, move the mouse pointer to the reference point for which you want the distance from, then press a or A to fix the anchor point
-  Click this icon to refresh the drawing.
-  If your project consists of multiple grids (so-called domain decomposition application) you can switch between the grids by clicking  on the toolbar. Next, click on the grid you want to become the active grid.
-  Show or hide the legend.
-  Click this icon to start a new polygon (Area of influence or Cut out area as indicated in the statusbar).
-  Click this icon to delete a polygon (Area of influence or Cut out area as indicated in the statusbar).
-  Click this icon to insert a point into the polygon (Area of influence or Cut out area as indicated in the statusbar). The point will be inserted at the closest linear piece of the polygon.
-  Click this icon to move a point on the polygon (Area of influence or Cut out area as indicated in the statusbar).
-  Click this icon to delete a point on the polygon (Area of influence or Cut out area as indicated in the statusbar) by indicating it.

6 Tutorial

6.1 Introduction

In this tutorial some functionality of D-Waq DIDO will be demonstrated. On the basis of the "Friesian Tidal Inlet" example a D-Waq DIDO session is explained. In advance, both the starting situation and the final situation are shown below in [Figure 6.1](#).

This tutorial describes in detail how to proceed from the starting situation towards the final situation.

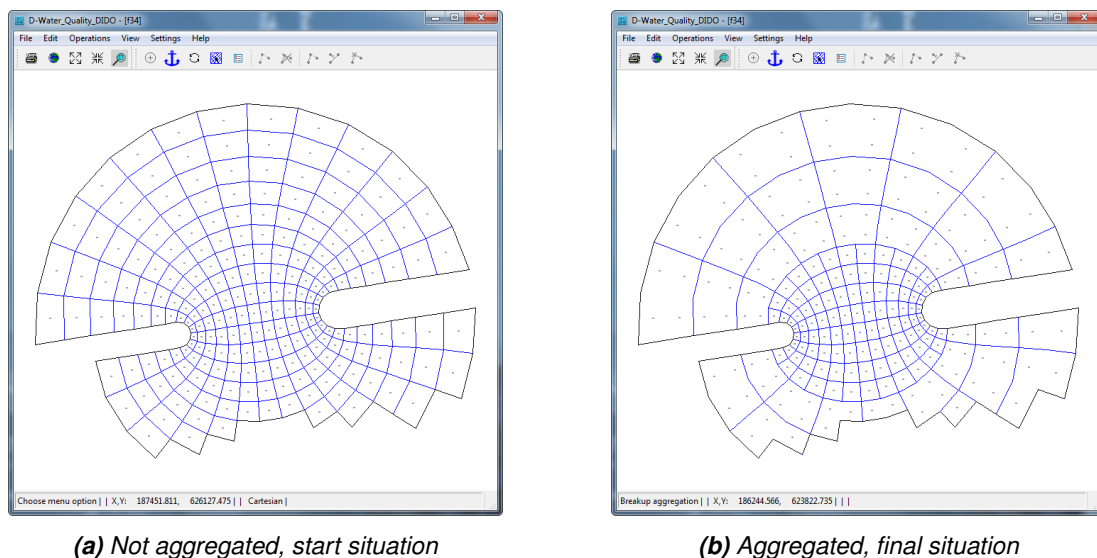


Figure 6.1: Starting and final situation of the clarified D-Waq DIDO session

Before you can start with the tutorial you have to start Delft3D and set the working directory to the tutorial model located on <%D3D_HOME%/tutorial/waq/dido/friesian_tidal_inlet>.

6.2 Loading the model

Open the grid and land boundary file. The grid file is the grid which will be used by the hydrodynamic program, [Delft3D-FLOW \(2013\)](#). The land boundary file is just for orientation purposes.

- ◇ On the *File* menu, point to *Import* and click on *Grid (RGFGRID)*
- ◇ Select and *Open* the <friesian_tidal_inlet.grd>
- ◇ On the *File* menu, point to *Attributes Files* and click on *Open Land Boundary*
- ◇ Select and *Open* the <netherlands.ldb>

Now the grid and land boundary are visualised in the **D-Waq DIDO** window, see [Figure 6.2](#). Although the land boundary has a greater extent the extent of the window is unchanged. The first opened file determines the extent of the main window.

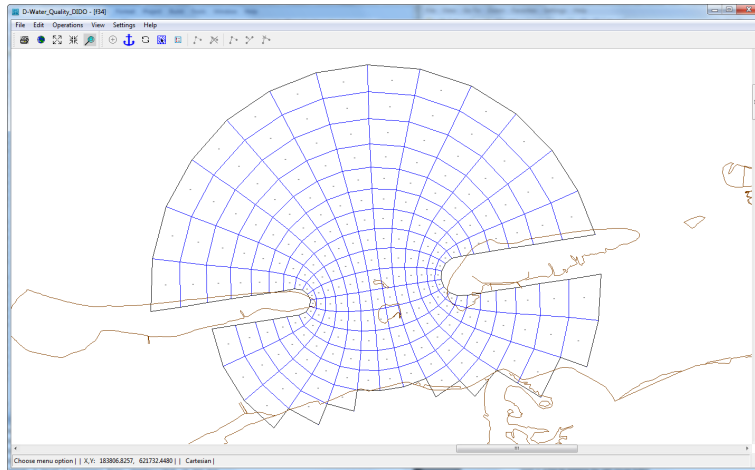


Figure 6.2: Hydrodynamic grid

6.3 Zoom out and zoom in

Zooming out the model in discrete steps

- ◇ Click on .

To zoom out to the full extent of all loaded files

- ◇ Click on .

Now you have a picture where you can see the whole Dutch coast, and as you can see Friesian Tidal Inlet model is in the north of The Netherlands.

To zoom in on the grid there are several possibilities

- ◇ Use the mouse scroll wheel. The cursor is the fix point when scrolling the mouse wheel.
- ◇ Click on  and drag a rectangle. Do it several times after each other and terminate the zoom in action by pressing the right mouse button.
- ◇ Click on .

To pane the grid: keep the CTRL-key down and move around with the cursor.

6.4 Two by two aggregation

The grid and land boundary are loaded and the next step will be the hydrodynamic grid to two by two cells aggregation which will be used by the water quality grids.

Choose the menu-option *Edit* → *Regular*, you can click the two corner cells which form the outline of the new aggregated cell.

- ◇ Click on the first cell (see [Figure 6.3](#))
- ◇ Move the mouse to the opposite corner
- ◇ Click on the right mouse button to obtain the aggregation for the whole area, [Figure 6.4](#)

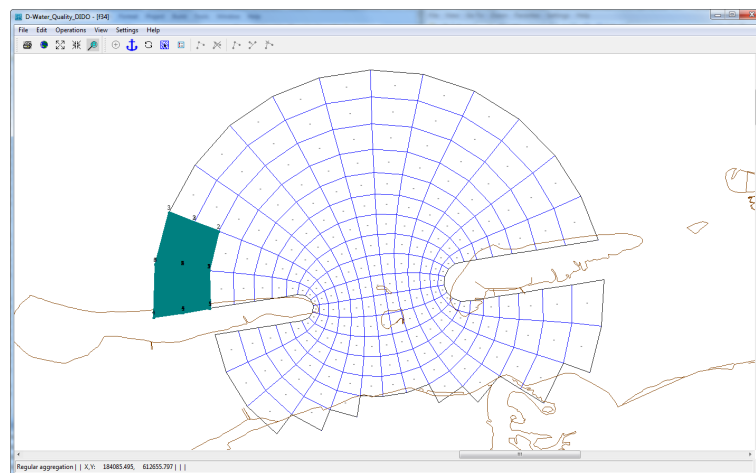


Figure 6.3: Selected corner for the two by two aggregation

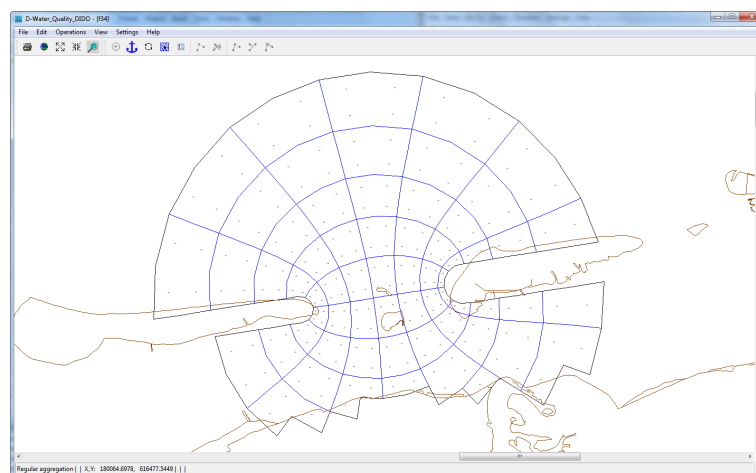


Figure 6.4: Result of a two by two aggregation

6.5 Default aggregation in inlet

The whole model has now a aggregation of two by two grid cells. But in the entrance of the tidal inlet we do not need an aggregation of the hydrodynamic grid. There are several options to reach this situation.

- 1 use the break up option
- 2 define an area of influence and define a new aggregation with that area

6.5.1 Break up the aggregated cells

Choose the menu-option *Edit* → *Break Up*, you can click into an aggregated cell to obtain the default aggregation for that cell. Continue with clicking into the several aggregated grid cells to get the result aggregation as shown in [Figure 6.1](#). In this way you have fully control to break up the aggregation for each cell.

6.5.2 Define area of influence

An other way to obtain the final aggregation as shown in [Figure 6.1](#) is to define an area of influence. An area of influence is that area to which the operation is restricted and is defined by a polygon. So we start with defining a polygon.

Choose the menu-option *Edit* → *Polygon* → *New* or click on the toolbar icon  and next clicking the left mouse button to define the polygon to get [Figure 6.5](#)

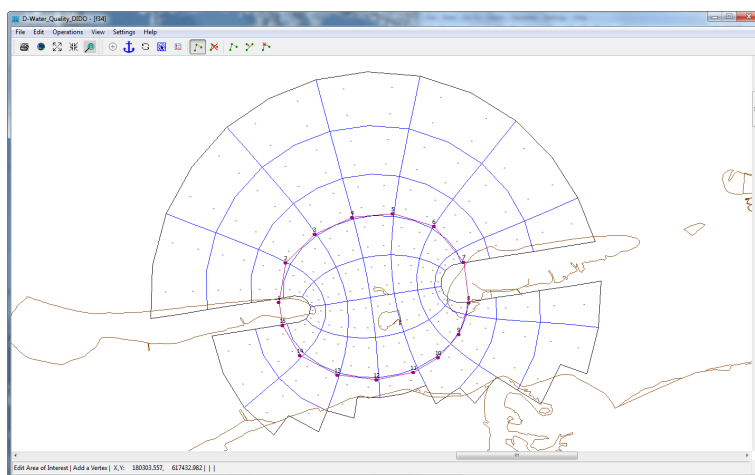


Figure 6.5: Area of influence defined by the polygon

Choose now the menu-option *Operation* → *Default Aggregation* and within the polygon all aggregated cells have the default aggregation, i.e. the water quality cells are equal to the hydrodynamic cells.

6.6 Saving the result

Before you end your D-Waq DIDO session you have to save the results from the aggregation. The aggregation can be saved to file.

Choose the menu option *File* → *Export* → *Aggregation*. and the **Save Aggregation** window will be opened ([Figure 6.6](#))

Or choose the menu option *File* → *Save Project As* and the **Save Project** window will be opened ([Figure 6.7](#)). After saving the project file (<*.d3d>) the window **Save Aggregation** to save the aggregation file <*.dwq> will appear ([Figure 6.8](#)).

The advantage to save the aggregation in a <*.d3d> file is that the reference to all the grids and their aggregation are saved, especially for multi domain models this is an advantage.

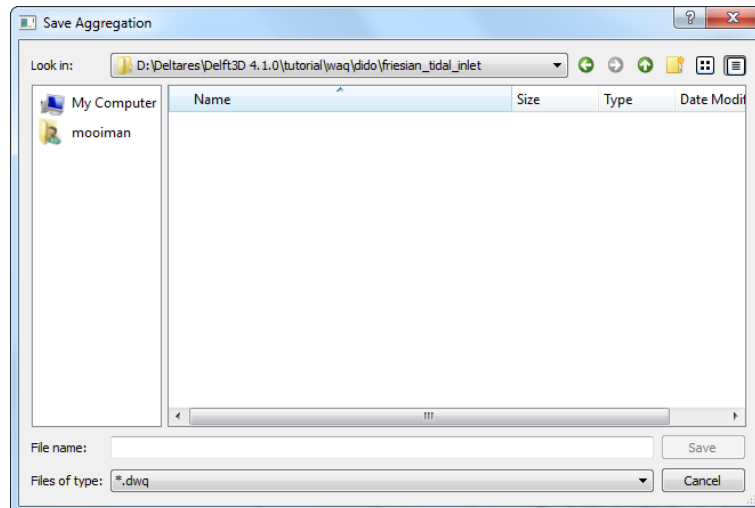


Figure 6.6: Save Aggregation window

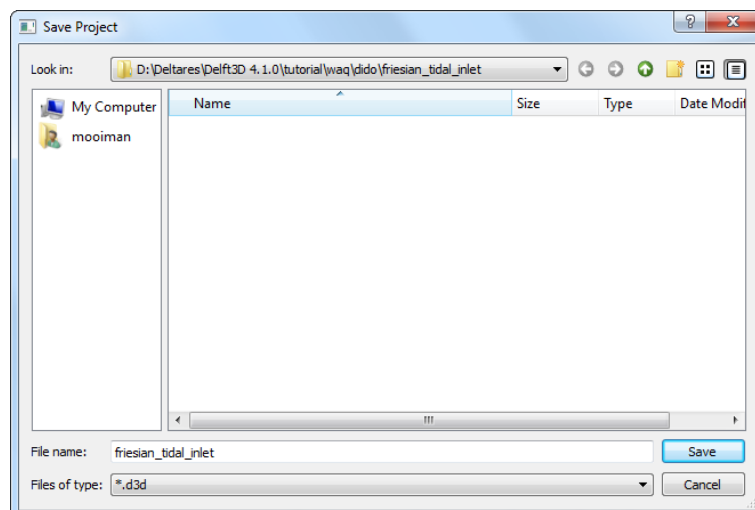


Figure 6.7: Save Project window, saving Friesian Tidal Inlet project

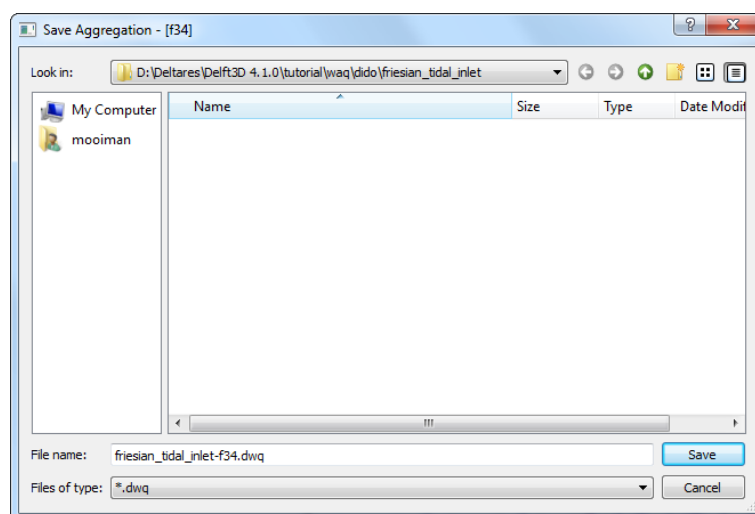


Figure 6.8: Save Aggregation window, saving the Friesian Tidal Inlet aggregation

6.7 TELEMAC grid files

TELEMAC users can also use D-Waq DIDO to aggregate the water quality grid cells. TELEMAC is an hydrodynamic program which uses unstructured collocated triangular grids (see [Figure 6.9](#)).

Before you can start with this tutorial you have to start Delft3D and set the working directory to the tutorial model located on <%D3D_HOME%/tutorial/waq/dido/bridge_in_river> and load the file <bridge_2_pillars.geo>, *File* → *Import* → *Grid (Telemac)*

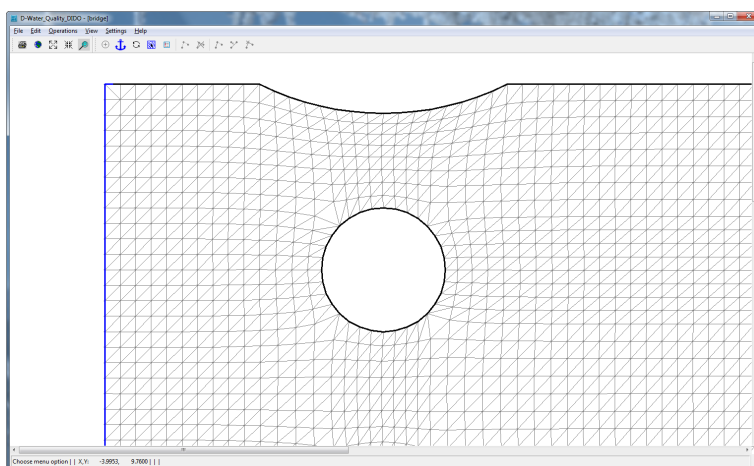


Figure 6.9: TELEMAC hydrodynamic triangular grid

Due to the collocation of the variables in TELEMAC and the need of finite volumes in the water quality program D-Water Quality, see [D-WAQ UM \(2013\)](#), the hydrodynamic grid and the water quality grid are different, as seen by comparison of the [Figures 6.9](#) and [6.10](#)

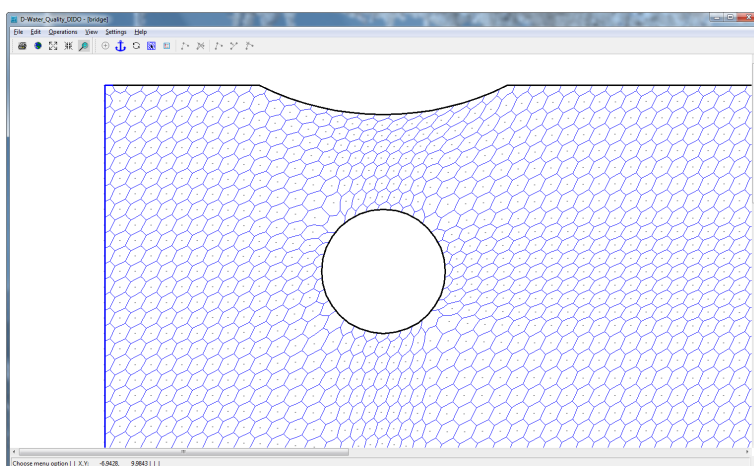


Figure 6.10: Finite Volume grid, based on a triangular collocated hydrodynamic grid

The aggregation of water quality cells is not as straightforward as for structured grids with staggered variables used in Delft3D-FLOW. For Delft3D-FLOW and D-Water Quality the hydrodynamic grid and the default water quality grid is the same. For unstructured grids we allow two different options of aggregation

- 1 Default aggregation
- 2 Aggregate at most three cells together

The default aggregation means that all finite volumes around the hydrodynamic grid nodes (indicated by a dot in the figures) are disjunct.

For a three cell aggregation choose the menu-option *Edit* → *Regular*, you can click the intersection point of three different volumes to aggregate these cells. These three cells will be the starting point of the algorithm to aggregate as much as possible three hydrodynamic cells to one water quality cell. Due to the irregularity of the grid you will see that some water quality cells are not aggregated and others are just aggregated to their neighbour.

- ◇ Click on intersection point
- ◇ Click on the right mouse button to obtain the aggregation for the whole area, [Figure 6.11](#)

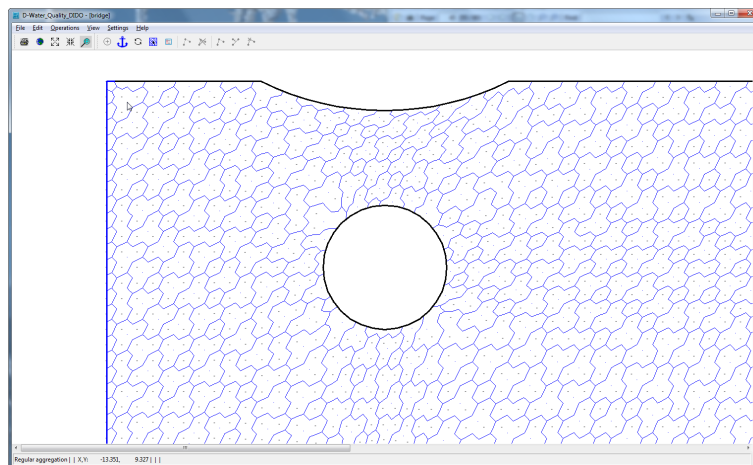


Figure 6.11: Aggregated Finite Volume grid

All other options of D-Waq DIDO can also be used in combination with a TELEMAC grid.


References

D-WAQ UM, 2013. *D-Water Quality User Manual*. Deltares, 4.02 ed. [3](#), [44](#)

Delft3D-FLOW, 2013. *Delft3D-FLOW User Manual*. Deltares, 3.14 ed. [39](#)

RGFGRID, 2013. *Delft3D-RGFGRID User Manual*. Deltares, 4.00 ed. [56](#)

Rijkswaterstaat/RIKZ, 2007. *SIMONA User Manual*. Ministry of Transport, Public Works and Water Management. [18](#), [20](#)



A Files of D-Waq DIDO

In the following sections we describe the attribute files used in D-Waq DIDO.

For each file which can handled by D-Waq DIDO we give the following information:

- ◇ File contents.
- ◇ Filetype (free formatted, fix formatted or unformatted).
- ◇ Filename and extension.
- ◇ Generated by (i.e. how to generate the file).
- ◇ Restrictions on the file contents.
- ◇ Example(s).

Remarks:

- ◇ The access mode of all attribute files is sequential.
- ◇ In the examples the file content is printed in font Courier and comment (not included in the file) between curly brackets font, unless explicitly stated differently.



A.1 Delft3D project file

File contents	Domain input for a model.
Filetype	ASCII
File format	Free formatted.
Filename	<name.d3d>
Generated	RGFGRID, QUICKIN, D-Waq DIDO, or manually offline

Record description:

A header block containing general information and then for each domain a detailed description.



Keyword	Description
FileInformation	
FileCreatedBy	Version string of the program who generated this file the first time
FileCreationDate	Creation date and time
FileVersion	Version number of <*.d3d> file
Geometry	
LandBoundaryName	Name of the file with the land boundaries
LandBoundaryFormat	Format of the land boundary file, possible values are: TEKAL, NETCDF or SHAPEFILE. The NetCDF file is according the 'World Vector Shoreline' format
DDBound	
FileDDBound	Name of the file with the domain decomposition boundaries

For each grid

Keyword	Description
Grid	
Type	Format of the grid file, possible values are: RGF, RGF_NETCDF, DFLOW_FM, TELEMAC
FileName	Name of grid file with the geographical co-ordinates
FlowDepth	Name of the file containing the depth values at the cell corners of the grid
Aggregation	Name of the aggregation file



Restriction:

- ◇ The maximum record length in the file is 132.

Example:

The model `friesian_tidal_inlet` contains three different subdomains (f01, f02, f03) and the project file has the name `<friesian_tidal_inlet.d3d.>`

```
[FileInformation]
FileGeneratedBy = Deltares, Delft3D-DIDO Version 4.04.00.11836M, Jun 21 2010, 12:09:34
FileCreationDate = 2010-06-21, 13:35:22
FileVersion      = 0.03
[DDBound]
FileDDBound = f34-123.ddb
```

```

[Grid]
  Type           = RGF
  FileName       = f01.grd
  Aggregation    = f34_dd-f01.dwq
  Monitoring Areas = f34_dd-f01.dmo
[Grid]
  Type           = RGF
  FileName       = f02.grd
  Aggregation    = f34_dd-f02.dwq
  Monitoring Areas = f34_dd-f02.dmo
[Grid]
  Type           = RGF
  FileName       = f03.grd
  Aggregation    = f34_dd-f03.dwq
  Monitoring Areas = f34_dd-f03.dmo

```

A.2 Aggregation file

File contents The aggregation table of hydrodynamic volumes
 Filetype ASCII
 File format Free formatted
 Filename <name.dwq>
 Generated D-Waq DIDO

Record description:

Record	Record description
1	five integer numbers separated by a blank. nmax number of computational volumes in η -direction mmax number of computational volumes in ξ -direction mmax*nmax total number of computational volumes xxx xxx
2–end	one integer containing the aggregation volume index number

Restriction:

- ◇ The input items are separated by one or more blanks



Example:

Model area with 8 * 6 volumes (free formatted file).

```

      6      8      48      1      0
0
0
0
0
0
0
0
0
0
1
1
4

```

4
0
0
1
1
4
4
0
0
2
2
5
5
0
0
2
2
5
5
0
.
.
.

**Remark:**

◇ Number of records is equal to $mmax * nmax + 1$

A.3 Land boundary file

File contents	The co-ordinates of one or more polylines. Each polyline (piecewise linear) is written in a single block of data.
Filetype	ASCII
File format	Free formatted
Filename	<name.ldb>
Generated	RGFGRID, QUICKIN, etc

Record description:

Record	Record description
	Preceding description records, starting with an asterisk (*), and will be ignored.
1	A non blank character string, starting in column one
2	Two integers representing the numbers of rows and number of columns for this block of data
	Two reals representing the x, y or λ, ϕ -co-ordinate

Example:

*
* Polyline L007

```

*
L007
6 2
      132400.0    549045.0
      132345.0    549030.0
      132165.0    549285.0
      131940.0    549550.0
      131820.0    549670.0
      131585.0    549520.0

*
* Polyline L008
*
L008
4 2
      131595.0    549685.0
      131750.0    549865.0
      131595.0    550025.0
      131415.0    550175.0

*
* Polyline L009
*
L009
6 2
      131595.0    549655.0
      148975.0    564595.0
      150000.0    564935.0
      152105.0    565500.0
      153150.0    566375.0
      154565.0    567735.0

```

Remark:

- ◇ In case this file is read as a polygon file then the polylines are closed by D-Waq DIDO to get a polygon.

**A.4 Polygon file**

File contents	The co-ordinates of one or more polygons. Each polygon is written in a single block of data
Filetype	ASCII
File format	Free formatted
Filename	<name.pol>
Generated	RGFGRID, QUICKIN, D-Waq DIDO, etc

Record description:

The file may contain one or more polygons. For every polygon the file should contain a line indicating the name of the polygon, followed by a line indicating the number of points making up the polygon and the number of coordinates, i.e. 2, finally followed by the coordinate data.

Record	Record description
	Preceding description records, starting with an asterisk (*), and will be ignored.
1	A non blank character string, starting in column one
2	Two integers representing the numbers of rows and number of columns for this block of data
	Two reals representing the x, y or λ, ϕ -coordinate

**Restriction:**

- ◇ The first record and the last record in the block should be the same

Example:

```

*
* Deltares, Delft3D-DIDO Version 3.39.01.4423:4459, Sep 25 2008, 20:10:54
* 2008-09-25, 22:11:08
*
Observation Area 001
  5  2
  1.8768018E+05  6.1708738E+05
  1.8996981E+05  6.1001035E+05
  1.9746314E+05  6.1266423E+05
  1.9480925E+05  6.1838830E+05
  1.8768018E+05  6.1708738E+05
Observation Area 002
  5  2
  2.0011703E+05  6.1818015E+05
  1.9819166E+05  6.1063479E+05
  2.0568498E+05  6.0870942E+05
  2.0797461E+05  6.1599460E+05
  2.0011703E+05  6.1818015E+05
Observation Area 003
  5  2
  1.9340425E+05  6.1396516E+05
  2.0183425E+05  6.1365294E+05
  1.9944054E+05  6.0558720E+05
  1.9522555E+05  6.0595146E+05
  1.9340425E+05  6.1396516E+05

```

A.5 Orthogonal curvilinear grid file

File contents	The co-ordinates of the orthogonal curvilinear grid at the depth points.
Filetype	ASCII
File format	Free formatted
Filename	<name.grd>
Generated	RGFGRID

Record description:

Record	Record description
	Preceding description records, starting with an asterisk (*), will be ignored.
1	Record with Co-ordinate System = Cartesian or value Spherical
2	The number of grid <i>points</i> in m- and n-direction (2 integers).
3	Three real values (not used).
4 to K+3	A label and record number, the <i>x</i> -component of the world co-ordinates of all points in m-direction, starting with row 1 to row <i>nmax</i> , with as many continuation records as required by <i>nmax</i> and the number of co-ordinates per record. The label and record number are suppressed on the continuation lines. This set of records is repeated for each row until <i>n</i> = <i>nmax</i> .
K+4 to 2K+3	A similar set of records for the <i>y</i> -component of the world co-ordinates.

K is the number of records to specify for all grid points a set of *x*- or *y*-co-ordinates.

Restrictions:

- ◇ The grid must be orthogonal.
- ◇ Input items in a record are separated by one or more blanks.

**Example:**

```

*
* Deltares, Delft3D-RGFGRID Version 4.16.01.4531, Sep 30 2008, 23:32:27
* File creation date: 2008-10-01, 23:19:22
*
Coordinate System = Cartesian
      9      7
0 0 0
Eta=   1  0.0000000000000000E+00  1.0000000000000000E+02  2.000000...
      5.0000000000000000E+02  6.0000000000000000E+02  7.000000...
Eta=   2  0.0000000000000000E+00  1.0000000000000000E+02  2.000000...
      5.0000000000000000E+02  6.0000000000000000E+02  7.000000...
Eta=   3  0.0000000000000000E+00  1.0000000000000000E+02  2.000000...
      5.0000000000000000E+02  6.0000000000000000E+02  7.000000...
Eta=   4  0.0000000000000000E+00  1.0000000000000000E+02  2.000000...

```

		5.0000000000000000E+02	6.0000000000000000E+02	7.000000...
Eta=	5	0.0000000000000000E+00	1.0000000000000000E+02	2.000000...
		5.0000000000000000E+02	6.0000000000000000E+02	7.000000...
Eta=	6	0.0000000000000000E+00	1.0000000000000000E+02	2.000000...
		5.0000000000000000E+02	6.0000000000000000E+02	7.000000...
Eta=	7	0.0000000000000000E+00	1.0000000000000000E+02	2.000000...
		5.0000000000000000E+02	6.0000000000000000E+02	7.000000...
Eta=	1	1.0000000000000000E+02	1.0000000000000000E+02	1.000000...
		1.0000000000000000E+02	1.0000000000000000E+02	1.000000...
Eta=	2	2.0000000000000000E+02	2.0000000000000000E+02	2.000000...
		2.0000000000000000E+02	2.0000000000000000E+02	2.000000...
Eta=	3	3.0000000000000000E+02	3.0000000000000000E+02	3.000000...
		3.0000000000000000E+02	3.0000000000000000E+02	3.000000...
Eta=	4	4.0000000000000000E+02	4.0000000000000000E+02	4.000000...
		4.0000000000000000E+02	4.0000000000000000E+02	4.000000...
Eta=	5	5.0000000000000000E+02	5.0000000000000000E+02	5.000000...
		5.0000000000000000E+02	5.0000000000000000E+02	5.000000...
Eta=	6	6.0000000000000000E+02	6.0000000000000000E+02	6.000000...
		6.0000000000000000E+02	6.0000000000000000E+02	6.000000...
Eta=	7	7.0000000000000000E+02	7.0000000000000000E+02	7.000000...
		7.0000000000000000E+02	7.0000000000000000E+02	7.000000...

A.6 Computational grid enclosure

The computational grid enclosure file need to be specified, the file is generated by RGFGGRID, see [RGFGGRID \(2013\)](#).

File contents	The indices of the external computational grid enclosure(s) and optionally one or more internal computational grid enclosures that outlines the active computational points in a Delft3D-FLOW computation. The file is strongly related to the curvilinear grid file.
Filetype	ASCII
File format	Free formatted
Filename	<name.enc>
Generated	RGFGGRID

Record description:

Record	Record description
All	One pair of M and N indices representing the grid co-ordinates where a line segment of the computational grid enclosure (polygon) changes direction.



Restrictions:

- ◇ A polygon must be closed. The first point of the polygon is repeated as last point.
- ◇ A line segment may not intersect or touch any other line segment.
- ◇ The angle formed by consecutive line segments (measured counter clock-wise) can have a value of: 45, 90, 135, 225, 270 or 315 degrees, but not 0, 180 and 360 degrees.
- ◇ In a row or column there should be at least two active computational grid cells.
- ◇ Input items in a record are separated by one or more blanks.

Example:

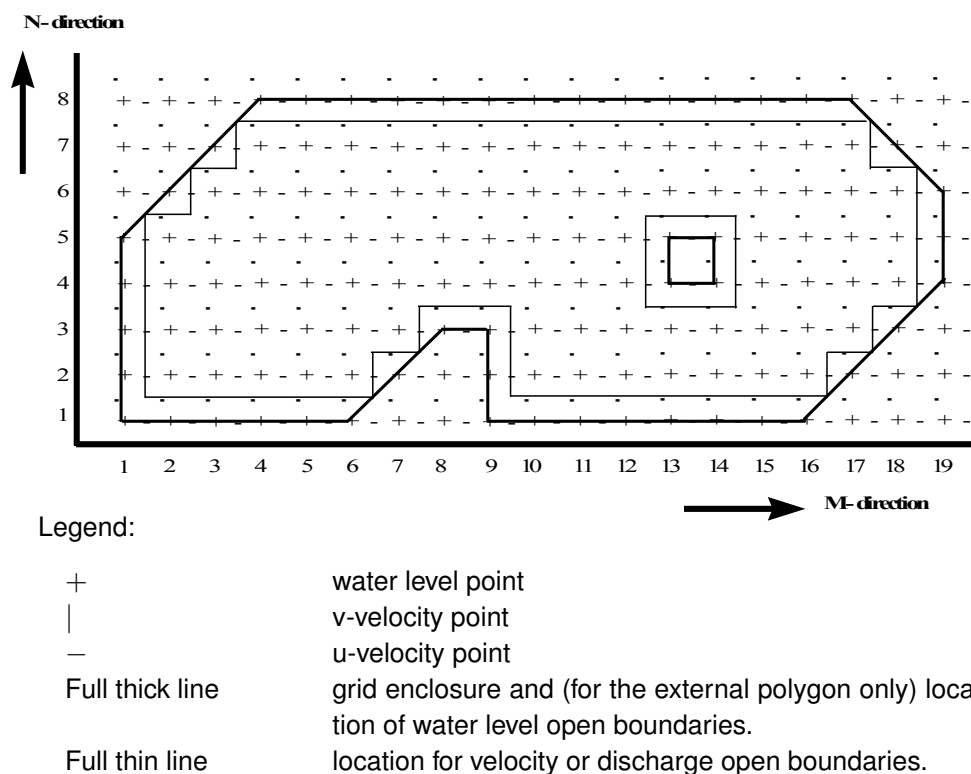


Figure A.1: Example of computational grid enclosures

Model area with (one) external and one internal polygon, see [Figure A.1](#).

```

1 1  begin external polygon
6 1
8 3
9 3
9 1
16 1
19 4
19 6
17 8
4 8
1 5
1 1  end external polygon
13 4  begin internal polygon
14 4
14 5
13 5
13 4  end internal polygon

```

A.7 Bathymetry file

File contents	The bathymetry in the model area, represented by depth values (in metres) for all grid points.
Filetype	ASCII
File format	Free formatted or unformatted
Filename	<name.dep>
Generated	FLOW-GUI (only for uniform depth values). Offline with QUICKIN and data from digitised charts or GIS-database.

Record description:

Filetype	Record description
Free formatted	Depth values per row, starting at N = 1 to N = Nmax, separated by one or more blanks. The number of continuation lines is determined by the number of grid points per row (Mmax) and the maximum record size of 132.
Unformatted	Mmax depth values per row for N = 1 to N = Nmax.

**Restrictions:**

- ◇ The file contains one M and N line more than the grid dimension.
- ◇ The maximum record length in the free formatted file is 132.
- ◇ Depth values from the file will not be checked against their domain.
- ◇ The input items are separated by one or more blanks (free formatted file only).
- ◇ The default missing value is: -999.0

Example:

File containing 16 * 8 data values for a model area with 15 * 7 grid points (free formatted file).

```

1.0   2.0   3.0   4.0  -5.0  -5.0  -5.0   8.0   9.0  10.0  11.0
12.0  13.0  14.0  -5.0 -999.0
3.0   4.0   5.0   6.0   7.0  -6.0  -6.0  10.0  11.0  12.0  13.0
14.0  15.0  16.0  17.0 -999.0
5.0   6.0   7.0   8.0   9.0  10.0  -7.0  12.0  13.0  14.0  15.0
16.0  17.0  18.0  19.0 -999.0
7.0   8.0   9.0  10.0  11.0  12.0  13.0  14.0  15.0  16.0  17.0
18.0  19.0  -7.0  19.0 -999.0
9.0  10.0  11.0  12.0  13.0  14.0  15.0  16.0  17.0  18.0  19.0
20.0  19.0  18.0  17.0 -999.0
-7.0  12.0  13.0  14.0  15.0  16.0  17.0  18.0  19.0  20.0  19.0
18.0  17.0  16.0  15.0 -999.0
-8.0  -8.0  15.0  16.0  17.0  18.0  19.0  20.0  19.0  18.0  17.0
16.0  15.0  14.0  13.0 -999.0
-999.0 -999.0 -999.0 -999.0 -999.0 -999.0 -999.0 -999.0 -999.0 -999.0
-999.0 -999.0 -999.0 -999.0 -999.0

```

A.8 Open boundaries file

File contents	The location and description of open boundaries.
Filetype	ASCII
File format	Fix formatted for text variables; free formatted for real and integer values.
Filename	<name.bnd>
Generated	FLOW-GUI

Record description:

Record	Record description
each record	Name of the open boundary section (20 characters). Type of boundary (1 character). Z water level C current N Neumann Q discharge per grid cell T total discharge for boundary section R Riemann Type of data (1 character). A astronomic H harmonic Q QH tables (only for water level boundaries) T time-series Grid indices of the begin and end point of the boundary section (4 integers). Reflection coefficient (1 real), not for Neumann or Riemann. Vertical profile (three strings); <i>only for 3D simulations and velocity type boundaries (C, Q, T and R).</i> Uniform Logarithmic 3D profile Two labels (each 12 characters, no blanks in the label name) referencing to the blocks in the amplitude and phase file <*.bca>; <i>only if the type of data is A.</i>

Restrictions:

- ◇ Maximum record length in the free formatted file is 132.
- ◇ The boundary section name must start at position one in a record.
- ◇ The value of the reflection coefficient will not be checked on its domain.
- ◇ All input items in a record must be separated by one or more blanks.
- ◇ Astronomic and harmonic forced boundaries must be specified before QH-relation forced boundaries, which in turn should be specified before time-series forced boundaries.
- ◇ Astronomic and harmonic forced boundaries cannot be combined.

Example:

Two boundary sections with data type A(stronomic) and one with type T(ime series).

```

Paradise Bay 1      Q A   1   1   1   5 0.0 Uniform      Paradise_1A  Paradisee_1B
Paradise Bay 2      C A  16   3  16   6 0.0 Logarithmic  Paradise_2A  Paradisee_2B
Sea Entrance       Z T   4   8  14   8 0.0

```

Remarks:

- ◇ A label may not contain blanks between non-blank characters.
- ◇ For the labels 12 characters are read. Be sure the second label starts at least 13 positions after the start of the first.

A.9 Observation area information file

File contents	Name of the polygon with observation areas.
Filetype	ASCII
File format	Fix formatted for text variables, free formatted for real and integer values.
Filename	<name.oai>
Generated	D-Waq DIDO, or manually offline

Record description:

A header block containing information about versions, and the name of the polygon file.

For each observation area the details.

Keyword	Description
FileInformation	
FileCreatedBy	D-Waq DIDO version number
FileCreationDate	creation date and time
FileVersion	version number of <*.aoi> file
General	
Subject	observation areas
PolygonFile	name of polygon file with polylines defining observation areas
ObservationArea	
Name	name of the observation area (blockname in polygon file)



Restriction:

- ◇ The maximum record length in the file is 132.

Example:

The number of observation areas is 3. They are called 'ObsArea 001', 'ObsArea 002' and 'ObsArea 003'.

```
[FileInformation]
FileGeneratedBy = Deltares, Delft3D-DIDO Version 3.39.01.4423:4459, Sep 25 2008, 20:10:54
FileCreationDate = 2008-09-25, 22:11:08
FileVersion      = 0.01
[General]
```

```

Subject          = Observation areas
PolygonFile      = friesche_zeegat.pol
[ObservationArea]
  Name           = ObsArea 001
[ObservationArea]
  Name           = ObsArea 002
[ObservationArea]
  Name           = ObsArea 003

```

Example polygon file:

```

*
* WL | Delft Hydraulics, Delft3D-DIDO
* 22:57:01, 30-07-2008
*
ObsArea 001
  5  2
  1.8768018E+05  6.1708738E+05
  1.8996981E+05  6.1001035E+05
  1.9746314E+05  6.1266423E+05
  1.9480925E+05  6.1838830E+05
  1.8768018E+05  6.1708738E+05
ObsArea 002
  5  2
  2.0011703E+05  6.1818015E+05
  1.9819166E+05  6.1063479E+05
  2.0568498E+05  6.0870942E+05
  2.0797461E+05  6.1599460E+05
  2.0011703E+05  6.1818015E+05
ObsArea 003
  5  2
  1.9340425E+05  6.1396516E+05
  2.0183425E+05  6.1365294E+05
  1.9944054E+05  6.0558720E+05
  1.9522555E+05  6.0595146E+05
  1.9340425E+05  6.1396516E+05

```

A.10 Data monitoring file

File contents	Volume numbers for each observation area.
Filetype	ASCII
File format	Free formatted.
Filename	<name.dmo>
Generated	D-Waq DIDO, or manually offline

Record description:

A header block containing information about versions, and the name of the polygon file.

For each observation area the details.

Record	Record Description
1	Number of observation areas
2	Observation area name and number of segments belonging to this observation area
	NVOL integers indicating the volumes belonging to the observation area

**Restriction:**

- ◇ The maximum record length in the file is 132.

Example:

The number of observation areas is 3. They are called 'Observation Area 001', 'Observation Area 002' and 'Observation Area 003'.

```

3
'Monitoring Area 001'      22
  80      102      124      146      59
  81      103      125      147      60
  82      104      126      148      61
  83      105      127      149      84
 106      128
'Monitoring Area 002'      37
 275      297      210      232      254
 276      298      189      211      233
 255      277      299      212      234
 256      278      300      213      235
 257      279      301      214      236
 258      280      302      215      237
 259      281      303      260      282
 304      283
'Monitoring Area 003'      33
 163      98      120      142      164
 186      99      121      143      165
 187      209      100      122      144
 166      188      210      232      101
 123      145      167      189      211
 233      102      124      146      168
 190      212      234

```

A.11 DD Boundary file

File contents	Domain decomposition boundaries connecting two grids for the prescribed indices.
Filetype	ASCII
File format	Fix formatted.
Filename	<name.ddb>
Generated	RGFGRID, or manually offline

Record description:

Record	Record Description
N	Name of the first grid, followed by four integers indicating the gridline on which the boundary lies, followed by the name of the second grid and four integers indicating the gridline on which the boundary lies.

Restrictions:

- ◇ No space allowed in grid filename.
- ◇ The maximum record length in the file is 132.

Example:

In the following example 4 sub-domains exist. Domain d01_ns is coupled to oa1_ns, ob1_ns and oc1_ns. Furthermore oa1_ns is coupled to ob1_ns, and ob1_ns to oc1_ns.

d01_ns.grd	5	16	5	1	oa1_ns.grd	28	35	28	20
d01_ns.grd	245	1	5	1	ob1_ns.grd	17	21	1	21
d01_ns.grd	245	52	245	1	oc1_ns.grd	1	44	1	27
ob1_ns.grd	1	4	1	21	oa1_ns.grd	28	3	28	20
ob1_ns.grd	17	4	17	21	oc1_ns.grd	1	10	1	27

A.12 Dry points file

File contents	Index location of (permanently) dry points.
Filetype	ASCII
File format	Free formatted
Filename	<name.dry>
Generated	QUICKIN or FLOW-GUI

Record description:

Record	Record description
each record	The grid indices of the begin and end point of a dry section (4 integers).

Restrictions:

- ◇ The angle of a line of dry points and the horizontal numerical grid axis can be an integer multiple of 45 degrees.
- ◇ Dry points may not be defined along the model boundaries (which by default lie along

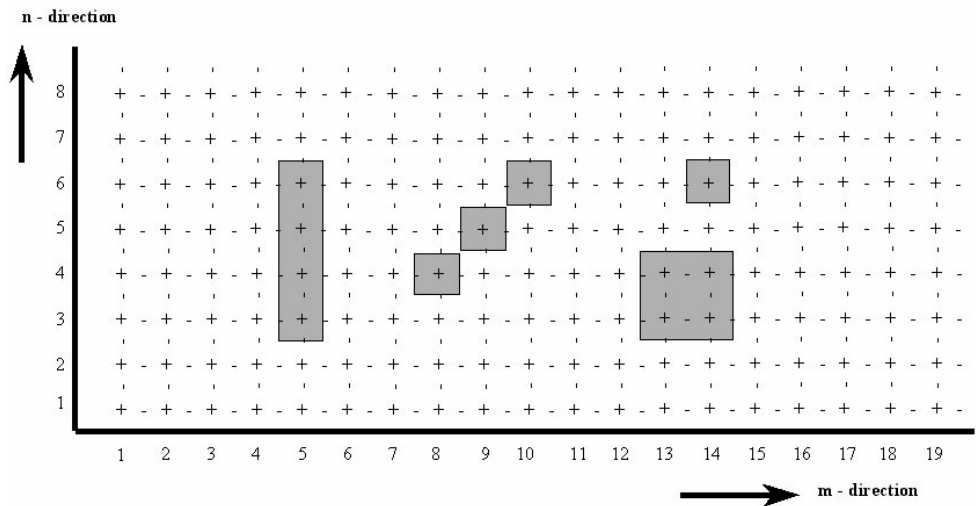


Figure A.2: Dry points in model area

the lines $M = 1$, $N = 1$, $M = M_{\max}$ or $N = N_{\max}$). Therefore, the indices of these points must lie between $M = 2$ and $M_{\max}-1$ and $N = 2$ and $N_{\max}-1$, respectively.

- ◇ The input items are separated by one or more blanks.
- ◇ The most lower-left dry point has indices (2, 2).

Example:

Five sets of dry points in a model area of 19×8 grid points, see [Figure A.2](#).

```
5  3  5  6
8  4 10  6
13 3 14  3
13 4 14  4
14 6 14  6
```

A.13 Thin dams file

File contents	Location and type of thin dams.
Filetype	ASCII
File format	Free formatted
Filename	<name.thd>
Generated	QUICKIN or FLOW-GUI

Record description:

Record	Record description
each record	The grid indices of the begin and end point of a line of thin dams (4 integers). A character indicating the type of thin dams (U or V).



Restrictions:

- ◇ The angle of the line segment and the horizontal numerical grid axis may be an integer multiple of 45 degrees.

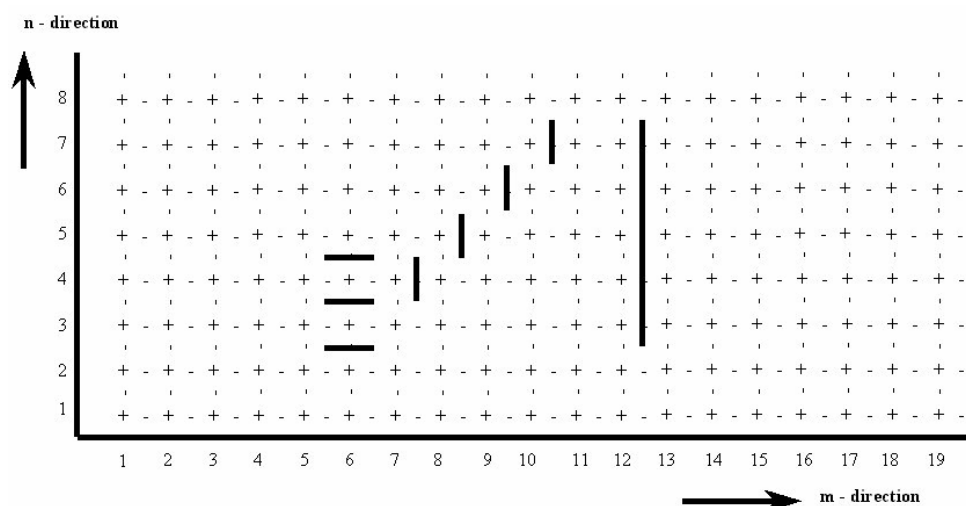


Figure A.3: Example of thin dams in a model area

- ◇ Thin dams can not be defined along the model boundaries (which by default lie along the lines $M = 1$, $N = 1$, $M = M_{\max}$ or $N = N_{\max}$). Therefore, the indices of thin dams must lie between $M = 2$ and $M_{\max}-1$ and $N = 2$ and $N_{\max}-1$ respectively.
- ◇ Input items are separated by one or more blanks.
- ◇ The direction of the dam is perpendicular to the velocity direction over which the dams are superimposed!

Example:

Three (sets of) thin dams in model area of 19×8 grid points, see [Figure A.3](#).

```

6   2   6   4 V
7   4  10   7 U
12  3  12   7 U

```

A.14 Colour scheme file

File contents	The colour scheme
Filetype	ASCII
File format	Free formatted
Filename	<name.clr> or <name.clrmap>
Generated	manually

Record description:

Record	Record description
1	COLORMAP
2	NAME=name
3	SPACE=RGB, RGB is the only allowed space for this program
4 – N	one real and three integers.

The first column represent the relative distribution of the defined colours in column 2–4 (representing the RGB values).

Example:

```
COLORMAP
NAME=copper
SPACE=RGB
0.0000  0  0  0
0.8000 255 159 101
1.0000 255 199 127
```

A.15 Settings file

File contents	Settings of the program
Filetype	ASCII
File format	Fix formatted
Filename	<name.ini>
Generated	By the program

Record description:

Record	Record description
FileInformation	
FileCreatedBy	D-Waq DIDO version number
FileCreationDate	creation date and time
FileVersion	version number of <*.ini> file
DIDOParameter	
name	integer value
Colours	
name	RGB value (3 integers) line width
	dots sizes

Example:

```

[FileInformation]
  FileGeneratedBy = Deltares, Delft3D-DIDO Version 4.04.00.11845:11904M, Jun 27 2010, 18:36:38
  FileCreationDate = 2010-06-28, 09:30:32
  FileVersion      = 0.02
[DIDOPParameter]
  AutoscaleLegend      = 1
  XCoorLegend          = 16
  YCoorLegend          = 20
  StayOnStartupDirectory = 0
  CellsToAggregate     = 3
  DeeperAggregation    = 1.00000000000000002E+30
[Colours]
  ColourBackground      = 255 255 210
  LegendColourBackground = 255 255 255
  lineColourLandBoundary = 132 066 000
  lineColourPolygon      = 170 000 127
  lineColourActiveGrid   = 128 128 128
  lineColourMarkVolume   = 000 128 128
  lineColourActiveVolume = 000 000 255
  lineColourActiveCmpBnd = 005 005 005
  lineColourActiveOpenBnd = 000 000 255
  lineColourActiveDDBnd  = 176 000 255
  lineColourGrid         = 192 192 192
  lineColourVolume       = 128 128 128
  lineColourCmpBnd       = 050 050 050
  lineColourOpenBnd      = 000 000 150
  lineColourDDBnd        = 176 000 255
  pointColourVolumeCentre = 160 160 160
  lineColourObsPolygon   = 005 005 005
  DryPoints              = 000 000 000
  ThinDams                = 005 005 005
[Width]
  lineWidthLandBoundary = 1
  lineWidthPolygon      = 1
  lineWidthActiveGrid   = 1
  lineWidthMarkVolume   = 3
  lineWidthActiveVolume = 1
  lineWidthActiveCmpBnd = 1
  lineWidthActiveOpenBnd = 3
  lineWidthActiveDDBnd  = 3
  lineWidthGrid         = 1
  lineWidthVolume       = 1
  lineWidthCmpBnd       = 1
  lineWidthOpenBnd      = 5
  lineWidthDDBnd        = 3
  pointSizeVolumeCentre = 1
  lineWidthThinDams     = 3
  lineWidthObsPolygon   = 1
[Caches]
  inactdepth            = 5
  actdepth              = 5
  centre                = 5
  inactgrid             = 4
  actgrid               = 4
  inactvolumes          = 3
  actvolumes            = 2
  boundary              = 1
  landboundary          = 1
  obs_areas             = 2
  polygons              = 0

```

<code>drythdobs</code>	<code>=</code>	<code>1</code>
<code>rest</code>	<code>=</code>	<code>1</code>



Photo by: Mathilde Matthijsse, www.zeelandonderwater.nl

Deltares **systems**

PO Box 177
2600 MH Delft
Rotterdamseweg 185
2629 HD Delft
The Netherlands

+31 (0)88 335 81 88
sales@deltaressystem.nl
www.deltaressystem.nl