


Lantech

IES-2208F

8 10/100TX + 2 100FX w/ Pro-Ring

Managed Industrial Switch

User Manual

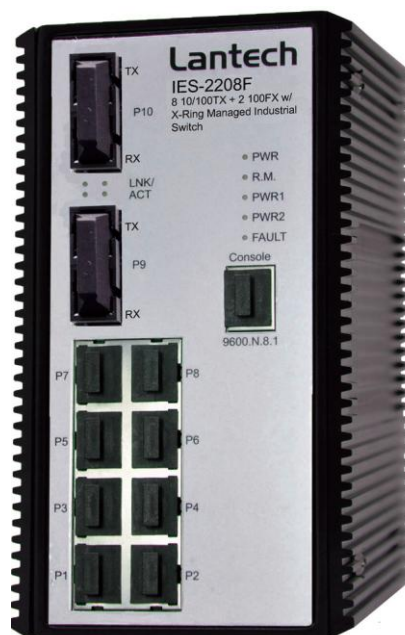

Revision History

Document Release	Date	Revision	Initials
1.00	Jun 10, 2010	<ol style="list-style-type: none">1. N-Key Transaction section added2. LED definition for P-Fail revised3. Fault changed to P-Fail (spec.)4. Revise the section name P-Fail Relay Alarm to Fault Relay Alarm (should be the same with the screenshot)5. "Maritime: GL & DNV" added6. EN61000-11/EN61000-12 removed7. "...for use in a Pollution Degree 2 environments..." description added for UL508	A.H.

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Content

Introduction	1
Hardware Features	1
Software Feature	4
Package Contents.....	7
Hardware Description	8
Physical Dimensions	8
Front Panel	9
Top View	10
LED Indicators	10
Ports.....	12
Cabling.....	14
Wiring the Power Inputs.....	15
Wiring the P-Fail Alarm Contacts.....	16
Hardware Installation	17
Installation Steps.....	17
DIN-Rail Mounting.....	18
Wall-Mount Plate Mounting.....	20
Network Application	21
X-Ring Application	22
Coupling Ring Application.....	23
Dual Homing Application.....	24
Web-Based Management	25
About Web-based Management	25
Preparing for Web Management.....	25

System Login	26
System Information	27
IP Configuration	27
DHCP Server – System configuration.....	28
DHCP Client – System Configuration	29
DHCP Server - Port and IP Bindings	29
TFTP - Update Firmware	30
TFTP – Restore Configuration	31
TFTP - Backup Configuration	31
System Event Log – Syslog Configuration.....	32
System Event Log - SMTP Configuration	33
System Event Log - Event Configuration	34
Fault Relay Alarm	36
SNTP Configuration	36
IP Security.....	37
User Authentication.....	38
N-Key Transaction	39
Port Statistics	40
Port Control.....	41
Port Trunk	42
Aggregator setting	42
Aggregator Information	43
State Activity	44
Port Mirroring	45
Rate Limiting	45

VLAN configuration	47
VLAN configuration - Port-based VLAN	47
802.1Q VLAN.....	50
Rapid Spanning Tree	53
RSTP System Configuration	53
RSTP Per Port Configuration	54
SNMP Configuration	55
System Configuration.....	56
Trap Configuration	57
SNMPV3 Configuration.....	58
QoS Configuration	61
QoS Policy and Priority Type	61
Port Base Priority	62
COS Configuration.....	63
TOS Configuration	63
IGMP Configuration	63
X-Ring	65
LLDP Configuration.....	67
Security	68
802.1X/Radius Configuration	68
MAC Address Table.....	71
Factory Default.....	75
Save Configuration	75
System Reboot	75
Troubleshooting	77
Appendix A- Console Management	78
Connecting to the Console Port	78

Login in the Console Interface	78
CLI Management	79
Commands Level.....	80
Commands Set List.....	81
System Commands Set	82
Port Commands Set.....	84
Trunk Commands Set	87
VLAN Commands Set.....	88
Spanning Tree Commands Set.....	90
QOS Commands Set	93
IGMP Commands Set	93
Mac / Filter Table Commands Set.....	94
SNMP Commands Set.....	95
Port Mirroring Commands Set.....	97
802.1x Commands Set	98
TFTP Commands Set	100
SystemLog, SMTP and Event Commands Set.....	101
SNTP Commands Set.....	103
Ring Commands Set.....	104
LLDP Command Set.....	105

Introduction

The 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications. The 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch can be easily managed through the Web GUI. By using fiber port can extend the connection distance that increases the network elasticity and performance. It also provides the X-Ring function that can prevent the network connection failure.

Hardware Features

Standard	IEEE 802.3 10Base-T Ethernet IEEE 802.3u 100Base-TX IEEE 802.3x Flow Control and Back Pressure IEEE 802.3ad Port trunk with LACP IEEE 802.1d Spanning Tree/ IEEE 802.1w Rapid Spanning Tree IEEE 802.1p Class of Service IEEE 802.1Q VLAN Tag IEEE 802.1x User Authentication (Radius) IEEE802.1ab LLDP
Protocol	CSMA/CD
Transfer Rate	14,880 pps for 10Base-T Ethernet port 148,800 pps for 100Base-TX/FX Fast Ethernet port
MAC address	8K MAC address table
Packet Buffer	1Mbits
LED	Per unit: Power (Green), Power 1 (Green), Power 2

	(Green), P-Fail (Red), Master (Green) 8 10/100TX: Link/Activity (Green), Full duplex/Collision (Amber) Fiber: Link/Activity (Green)
Connector	10/100TX: 8 x RJ-45 100Fiber: 2 x Fiber (SC/ ST) RS-232 connector: RJ-45 type
Network Cable	10Base-T: 2-pair UTP/STP Cat. 3, 4, 5 cable EIA/TIA-568 100-ohm (100m) 100Base-TX: 2-pair UTP/STP Cat. 5 cable EIA/TIA-568 100-ohm (100m)
Optical cable	<ul style="list-style-type: none"> ■ Fiber (Multi-mode): 50/125um or 62.5/125um ■ Fiber (Single-mode): 9/125um
Back-plane	2Gbps
Power Supply	12 ~ 48 V _{DC} Redundant power with polarity protection and removable terminal block
Power Consumption	8.0 Watts (Max.)
Install	DIN-rail and Wall-mount design
Operating Temp.	-40°C to 75°C (wide operating temperature model)
Operation Humidity	5% to 95% (Non-condensing)
Storage Temperature	-40°C to 85°C
Case Dimensions	IP-30, 72 mm (W) x 152mm (H) x 106.2 mm (D)

EMI	FCC Class A CE EN61000-4-2 (ESD) CE EN61000-4-3 (RS) CE EN61000-4-4 (EFT) CE EN61000-4-5 (Surge) CE EN61000-4-6 (CS) CE EN61000-4-8 CE EN61000-6-2 CE EN61000-6-4
Safety	UL508 Class I/Division 2
Stability testing	IEC60068-2-32 (Free fall) IEC60068-2-27 (Shock) IEC60068-2-6 (Vibration)
Maritime	GL & DNV

Software Feature

Management	SNMP v1/v2c/v3, Web, Telnet, CLI
SNMP MIB	<p>RFC 1215 Trap</p> <p>RFC1213 MIBII</p> <p>RFC 1157 SNMP MIB</p> <p>RFC 1493 Bridge MIB</p> <p>RFC 2674 VLAN MIB</p> <p>RFC 1643</p> <p>RFC 1757</p> <p>RSTP MIB</p> <p>Private MIB</p>
VLAN	<p>Port based VLAN</p> <p>IEEE802.1Q Tag VLAN (256 entries)/VLAN ID (up to 4k in number which can be assigned from 1 to 4094)</p> <p>GVRP (256 groups)</p>
Port Trunking with LACP	LACP Port Trunking: 4 Trunking groups/Maximum 4 trunking members
Spanning tree	<p>IEEE802.1d spanning tree</p> <p>IEEE802.1w rapid spanning tree.</p>
X-Ring	X-Ring, Dual Homing and Couple Ring
LLDP	Allow switch to advise its identification and capability on the LAN
Quality of service	The quality of service determined by port, Tag and IPv4 Type of Service, IPv4 Different Service
Class of service	IEEE 802.1p class of service, per port provides 4 priority queues
Port Security	100 entries of MAC address for static MAC and another 100 for MAC filter
Port Mirroring	<p>TX packet only</p> <p>RX packet only,</p>

	Both of TX and RX packets
IGMP	Support IGMP snooping v1,v2 256 multicast groups and IGMP query
IP Security	Supports 10 IP addresses that have permission to access the switch management and to prevent unauthorized intruder
Login Security	Supports IEEE-802.1X Authentication/RADIUS
Bandwidth control	Support ingress packet filter and egress packet limit The egress rate control supports all of packet type and the limit rates are 100K~102400Kbps Ingress filter packet type combination rules are Broadcast/Multicast/Flooded Unicast packet, Broadcast/Multicast packet, Broadcast packet only and all of packet. The packet filter rate can be set from 100k to 102400Kbps
Flow Control	Supports Flow Control for Full-duplex and Back Pressure for Half-duplex
System Log	Supports System log record and remote system log server
SMTP	Supports SMTP Server and 6 e-mail accounts for receiving event alert
Relay Alarm	Provides one relay output for port breakdown & power fail Alarm Relay current carrying ability: 1A @ DC24V
SNMP Trap	Up to 3 Trap stations Cold start, Port link up, Port link down, Authentication Failure, Port Alarm configuration, P-Fail alarm, X-Ring topology change
DHCP	Provides DHCP Client/DHCP Server function
DNS	Provides DNS client feature Supports Primary and Secondary DNS Server
SNTP	Supports SNTP to synchronize system clock with an

	Internet time server
Firmware update	TFTP firmware update, configuration backup/restore
ifAlias	Each port allows an alphabetic string of 128-byte assigned as its own unique name via the CLI or SNMP interface
Configuration Upload and Download	Supports binary configuration file for system quick installation

Package Contents

Please refer to the package content list below to verify them against the checklist.

- 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch
- User manual
- RS-232/RJ-45 cable
- Terminal Block
- Two wall-mount plates and six screws


Compare the contents of the industrial switch with the standard checklist above. If any item is damaged or missing, please contact the local dealer for service.

Hardware Description

In this paragraph, it will describe the Industrial switch's hardware spec, port, cabling information, and wiring installation.


Physical Dimensions

8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch dimensions (W x H x D) are **72mm x 152mm x 106.2mm**

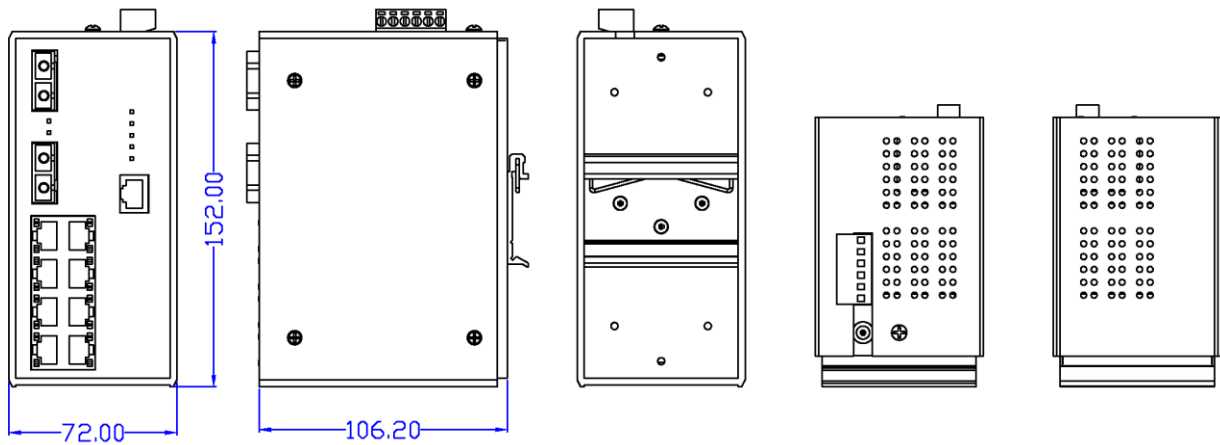

Front Panel


The Front Panel of the 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch is shown below:

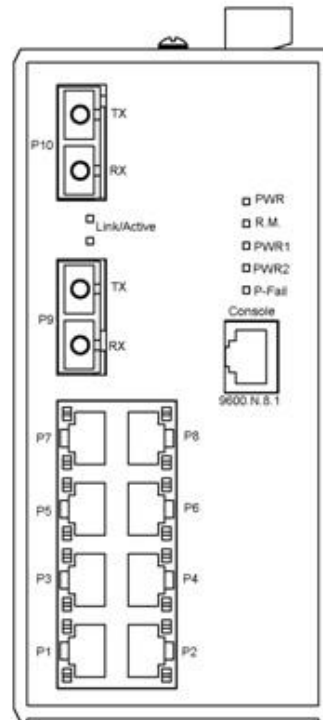

Front Panel of the industrial switch

Top View

The bottom panel of the 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch has one terminal block connector with six contacts.

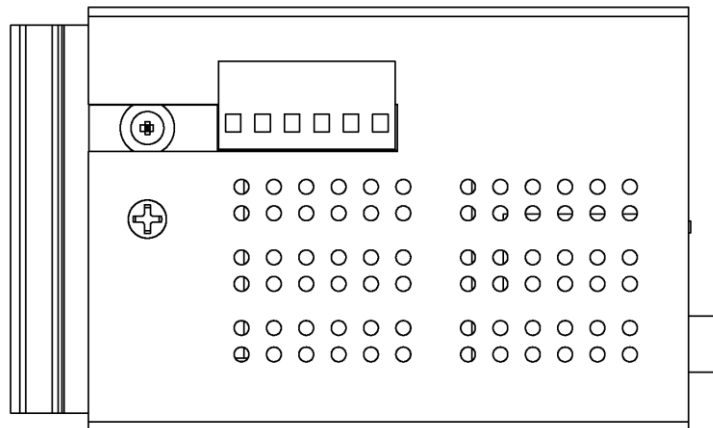

Top Panel of the industrial switch

LED Indicators

The diagnostic LEDs located on the front panel of the industrial switch provide real-time information of system and optional status. The following table provides description of the LED status and their meanings for the switch.

LED	Color	Status	Meaning
PWR	Green	ON	System power on
		OFF	No power inputs
R.M.	Green	ON	The industrial switch is the master device of the X-Ring group
		OFF	The industrial switch is not the master device of the X-Ring group

PWR1	Green	ON	Power 1 is active
		OFF	Power 1 is inactive
PWR2	Green	ON	Power 2 is active
		OFF	Power 2 is inactive
P-Fail	Red	ON	Power or port linking failure occurs
		OFF	No failure occurs
P1 ~ P8	Green	ON	Connected to network
		BLK	Networking is active
		OFF	Not connected to network
	Amber	ON	Ethernet port full duplex
		BLK	Collision of packets occurs
		OFF	Ethernet port half duplex or not connected to network
P9 ~ P10 Link/Active (100 Fiber)	Green	ON	Fiber port is connected to network
		BLK	Networking is active
		OFF	Not connected to network

Ports

■ RJ-45 ports

There are 8x 10/100Mbps auto-sensing ports for 10Base-T or 100Base-TX devices connection. The UTP ports will auto-sense for 10Base-T or 100Base-TX connections. Auto MDI/MDIX means that the switch can connect to another switch or workstation without changing straight through or crossover cabling. See the below figures for straight through and crossover cable schematic.



■ RJ-45 Pin Assignments

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-


[NOTE] “+” and “-” signs represent the polarity of the wires that make up each wire pair.

All ports on this industrial switch support automatic MDI/MDI-X operation, user can use straight-through cables (See figure below) for all network connections to PCs or servers, or to other switches or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. The table below shows the 10BASE-T/100BASE-TX MDI and MDI-X port pin outs.

Pin MDI-X	Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

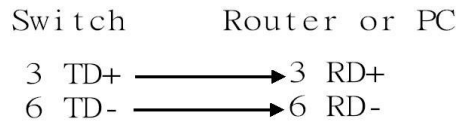

Straight Through Cable Schematic

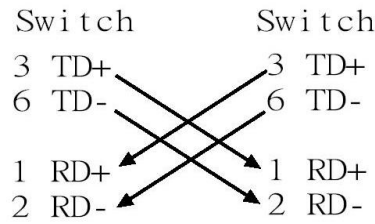


Cross Over Cable Schematic

■ **Fiber Port**

There are two 100Base-FX ports. The fiber port is SC type connector in multi mode (2Km) or single mode (30Km).

When a user connects the fiber port to another fiber port, please follow the below figure to connect it. Wrong connection will not allow the port to work normally.

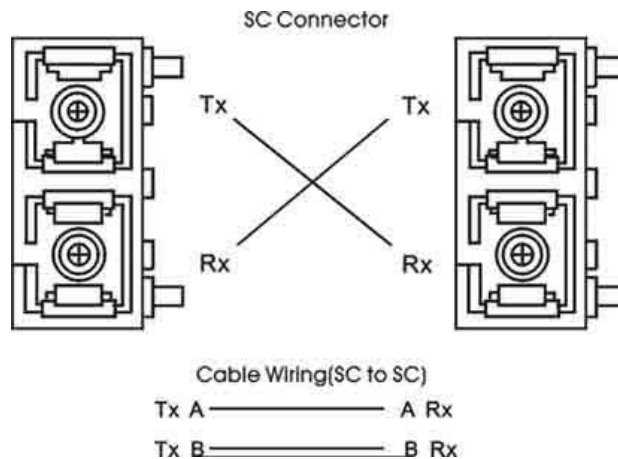

ATTENTION



This is a Class 1 Laser/LED product. Don't stare into the Laser/LED Beam.


Cabling

- Using four twisted-pair, Category 5 cabling for RJ-45 port connection. The cable between the converter and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.
- Fiber segment using **single-mode** connector type must use 9/125 um single-mode fiber cable. User can connect two devices in the distance up to **30 Kilometers**.
- Fiber segment using **multi-mode** connector type must use 50 or 62.5/125 um multi-mode fiber cable. User can connect two devices up to **2Km** distances.

Wiring the Power Inputs


Please follow the steps below to wire power lines connecting to the compliant external DC power source.

1. Insert the positive and negative wires into the **PWR1 (V1+, V1-)** and **PWR2 (V2+, V2-)** contacts on the terminal block connector as the figure shown below.

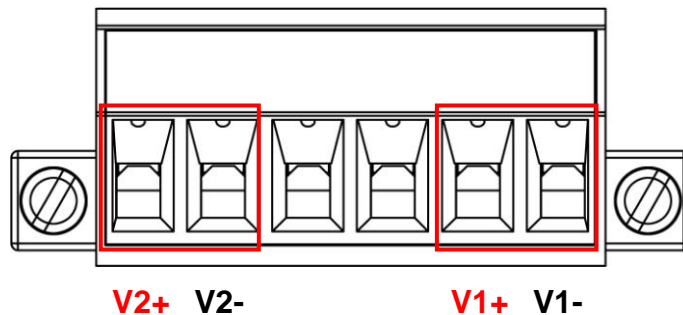

Terminal Block Front View for Power1 & Power2 Contacts

2. Tighten the wire-clamp screws shown below to prevent the wires from loosening.

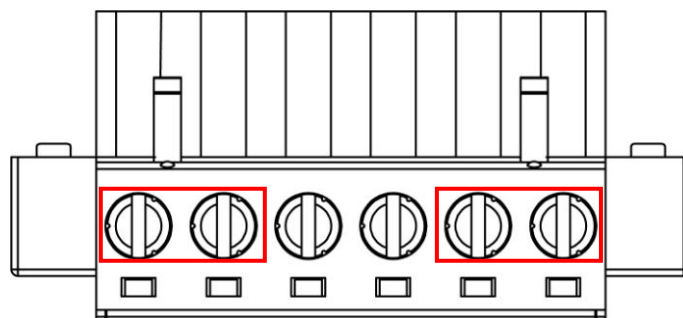


Terminal Block Top View

- Note**
- Use Copper Conductors Only, **60/75°C**, Tighten to **5 lb-in**
 - The wire gauge for the terminal block should be in the range between **12~ 20 AWG**.

Wiring the P-Fail Alarm Contacts

The P-Fail alarm contacts are in the middle of the terminal block connector as the picture shows below. By inserting the wires to form a **Normally Close** circuit, system will detect the fault status including *port linking failure (managed industrial switch only)* or power failure. Please refer to the diagrams below for the P-Fail alarm connection, and the application example for the fault alarm operation.

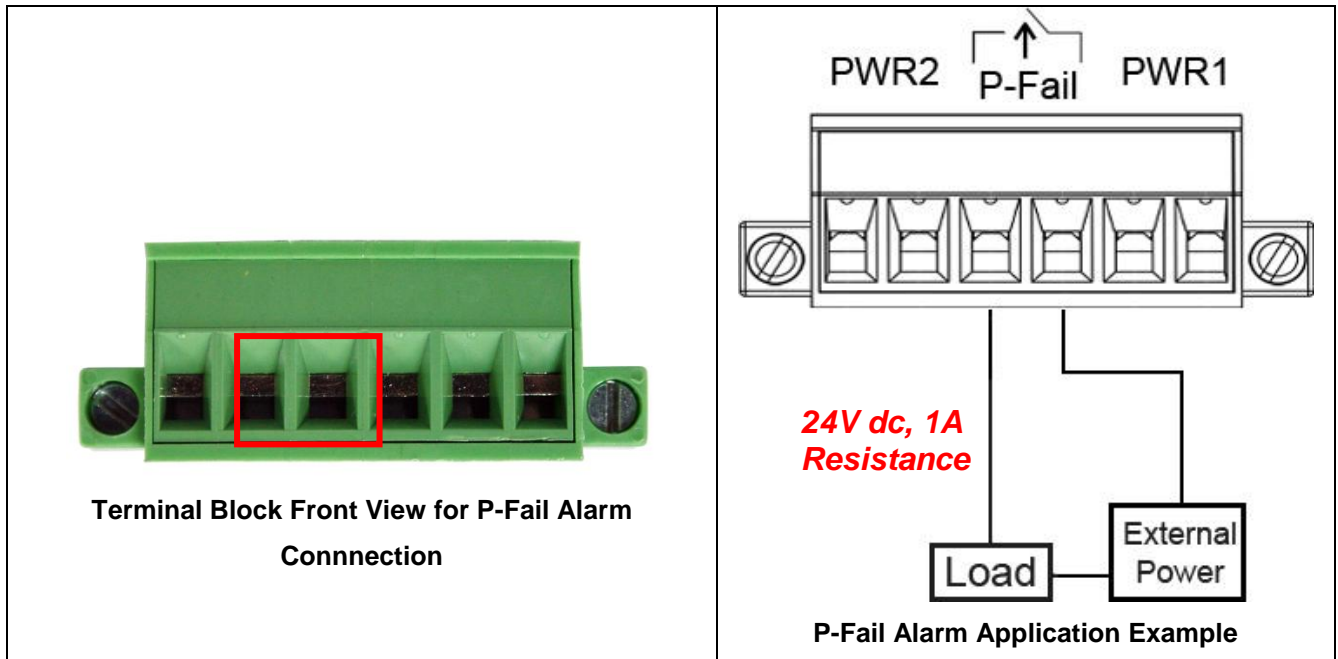

- Note**
- Use Copper Conductors Only, **60/75°C**, Tighten to **5 lb-in**
 - The wire gauge for the terminal block should be in the range between **12~ 24 AWG**.

Hardware Installation

In this paragraph, we will describe how to install the 8 10/100TX + 2 100FX w/ Pro-Ring Managed Industrial Switch and the installation points to be attended to it.

Installation Steps

1. Unpack the Industrial switch
2. Check if the DIN-rail clip is screwed on the Industrial switch or not. If the DIN-rail clip is not screwed on the Industrial switch, please refer to the **DIN-Rail Mounting** section for DIN-rail installation. If users want to wall-mount the Industrial switch, then please refer to **Wall-Mount Plate Mounting** section for wall-mount plate installation.
3. To hang the Industrial switch on the DIN-rail or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.
5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of RJ-45 cable (category 5) into the Industrial switch Ethernet port (RJ-45 port) and another side of RJ-45 cable (category 5) to the network device's Ethernet port (RJ-45 port), ex: Switch PC or Server. The UTP port (RJ-45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.
7. When all connections are set and LED lights all show in normal, the installation is complete.


Note *This equipment is intended for use in a Pollution Degree 2 industrial environment.*

DIN-Rail Mounting

Assembling the DIN-Rail Clip

The DIN-rail clip is screwed on the industrial switch when out of factory. If not, please refer to the following steps and figure to secure the DIN-rail clip on the switch.


1. Use the screws to screw on the DIN-rail clip on the industrial switch.
2. To remove the DIN-rail clip, reverse step 1.

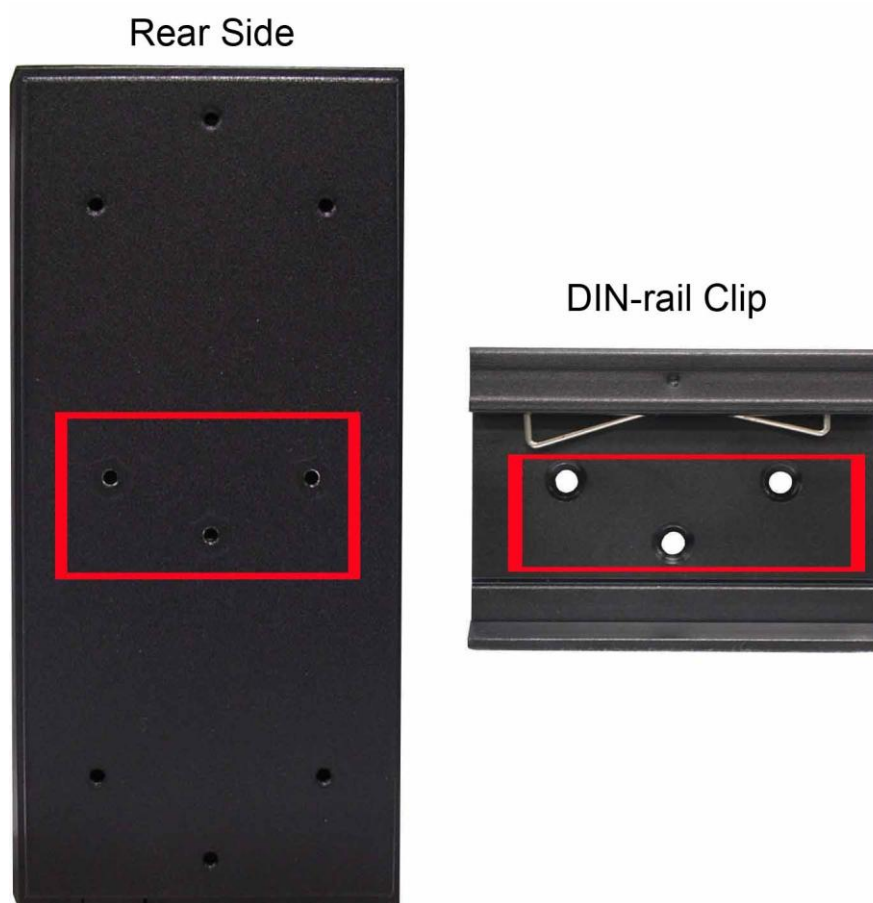


Hanging the Industrial Switch

Follow the steps below to hang the industrial switch on the DIN rail.

1. First, position the rear side of the switch directly in front of the DIN rail. Make sure the top of the clip hooks over the top of the DIN rail.

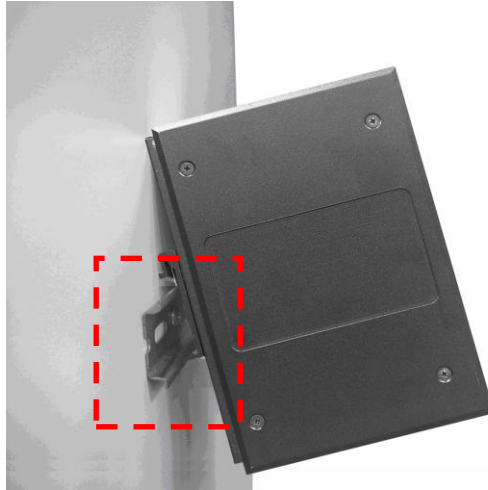

- 2, Push the unit downward.

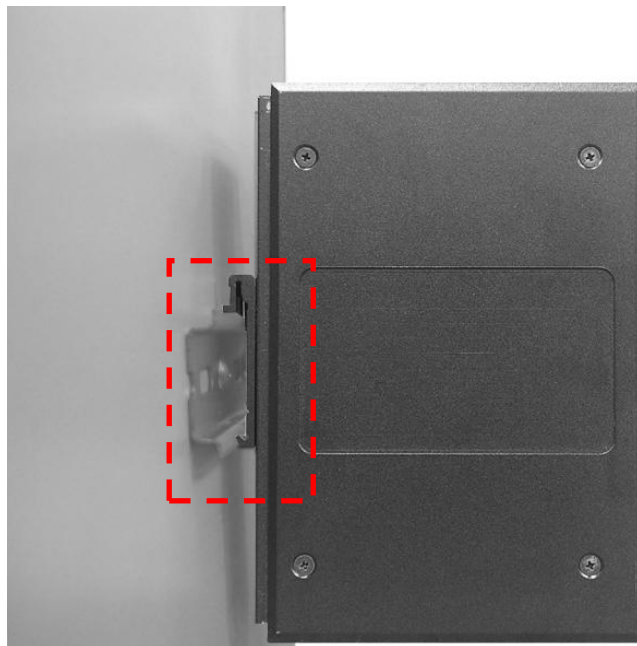


- 3, Check the DIN-Rail clip is tightly fixed on the DIN rail.
- 4, To remove the industrial switch from the track, reverse the steps above.

Wall-Mount Plate Mounting


Follow the below steps to mount the industrial switch with wall mount plate.

1. To remove the DIN-Rail clip from the industrial switch, unscrew the screws to remove the DIN-Rail clip.
2. Place the wall-mount plates on the rear panel of the industrial switch.
3. Use the screws to secure the wall-mount plates on the industrial switch.
4. Use the hook holes at the corners of the wall-mount plates to hang the industrial switch on the wall.
5. To remove the wall-mount plates, reverse the steps above.

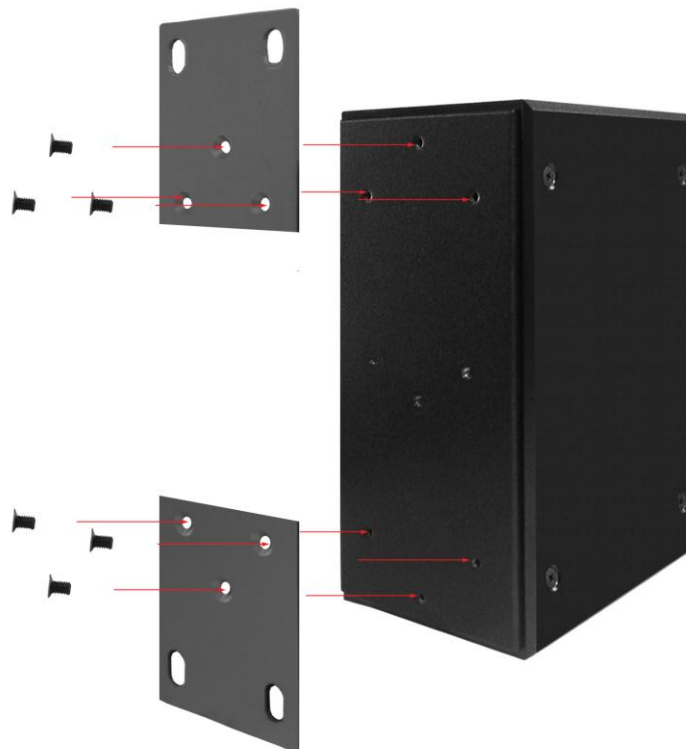


Network Application

This chapter provides some sample applications to help user to have more actual idea of industrial switch function application. A sample application of the industrial switch is shown below:

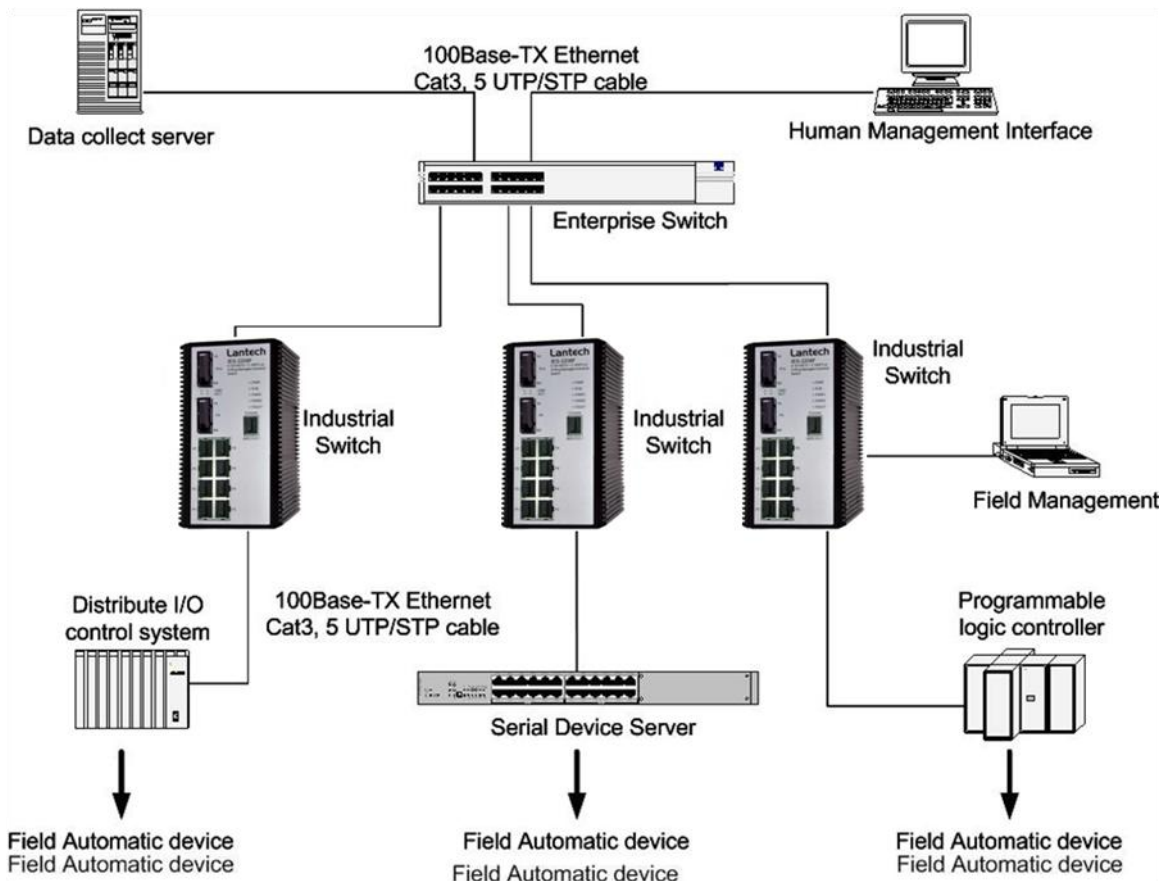


X-Ring Application

The industrial switch supports the X-Ring protocol that can help the network system to recovery from network connection failure within 300ms or less, and make the network system more reliable. The X-Ring algorithm is similar to spanning tree protocol (STP) algorithm but its recovery time is faster than STP. The following figure is a sample X-Ring application.

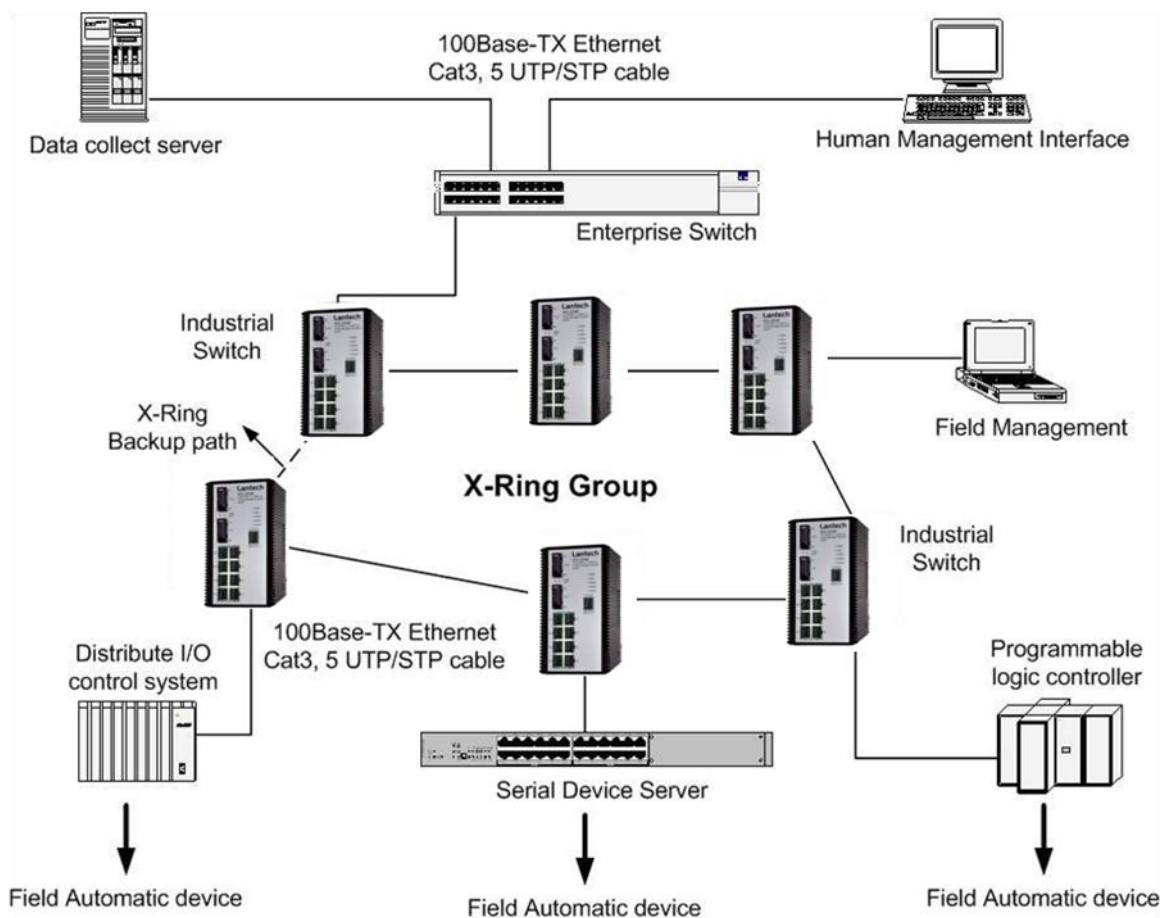

Coupling Ring Application


In the network, it may have more than one X-Ring group. By using the coupling ring function, it can connect each X-Ring for the redundant backup. It can ensure the transmissions between two ring groups not to fail. The following figure is a sample of coupling ring application.

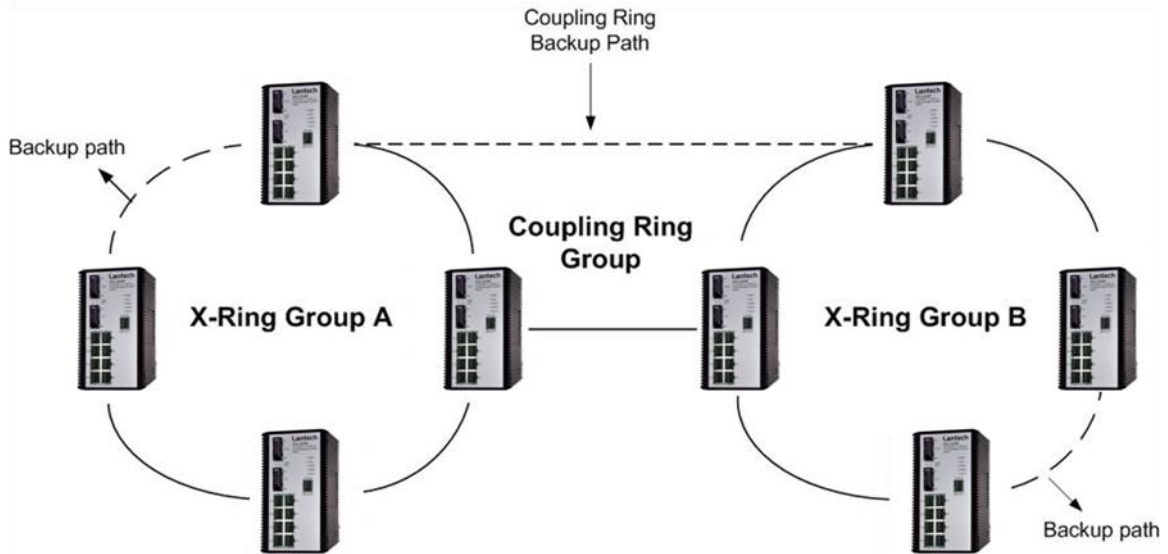

Dual Homing Application

Dual Homing function is to prevent the connection loss from between X-Ring group and upper level/core switch. Assign two ports to be the Dual Homing port that is backup port in the X-Ring group. The Dual Homing function only works when the X-Ring function is active. Each X-Ring group only has one Dual Homing port.

[NOTE] In Dual Homing application architecture, the upper level switches need to enable the Rapid Spanning Tree Protocol.

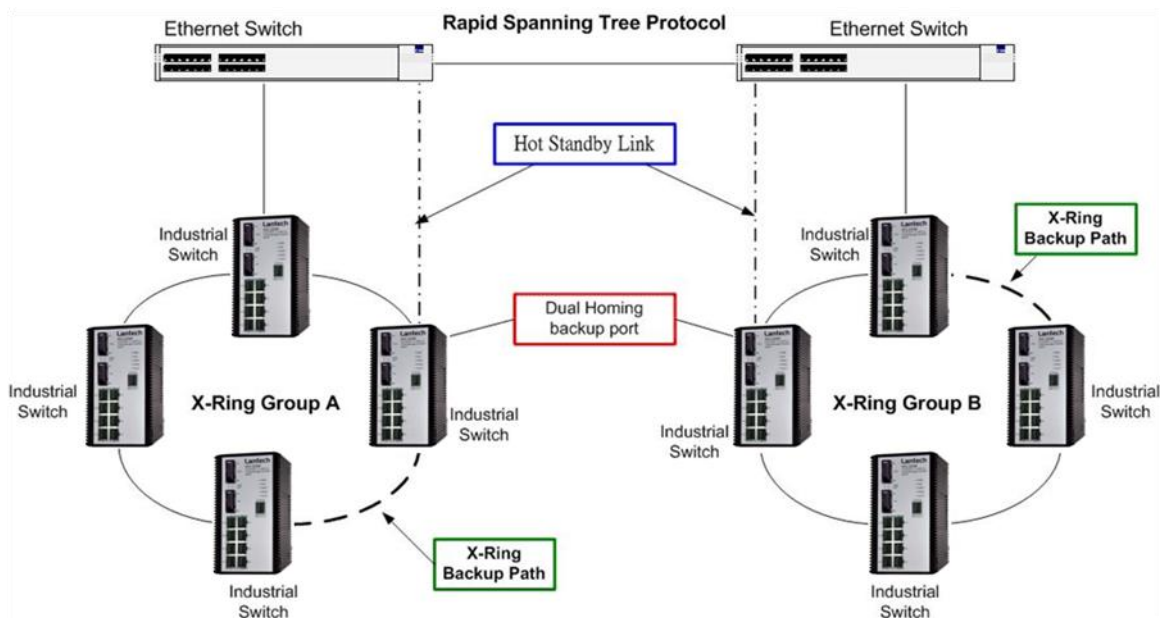

Web-Based Management

This section introduces the configuration and functions of the Web-Based management.

About Web-based Management

On CPU board of the switch there is an embedded HTML web site residing in flash memory, which offers advanced management features and allow users to manage the switch from anywhere on the network through a standard browser such as Microsoft Internet Explorer.

The Web-Based Management supports Internet Explorer 6.0. And, it is applied for Java Applets for reducing network bandwidth consumption, enhance access speed and present an easy viewing screen.

Preparing for Web Management

Before to use web management, install the industrial switch on the network and make sure that any one of PC on the network can connect with the industrial switch through the web browser. The industrial switch Default value of IP, subnet mask, username and password is as below:

- IP Address: **192.168.16.1**
- Subnet Mask: **255.255.255.0**
- Default Gateway: **192.168.16.254**
- User Name: **root**
- Password: **root**

System Login

1. Launch the Internet Explorer on the PC
2. Key in “http:// +” the IP address of the switch”, and then Press “**Enter**”.



3. The login screen will appear right after
4. Key in the user name and password. The Default user name and password are the same as “**root**”
5. Press “**Enter**” or “**OK**”, and then the home screen of the Web-based management appears as below:



Login screen

System Information

Assign the system name, location and view the system information.

- **System Name:** Assign the name of switch. The maximum length is 64 bytes.
- **System Description:** Displays the description of switch.
- **System Location:** Assign the switch physical location. The maximum length is 64 bytes.
- **System Contact:** Enter the name of contact person or organization.
- **Firmware Version:** Displays the switch's firmware version.
- **Kernel Version:** Displays the kernel software version.
- **MAC Address:** Displays the unique hardware address assigned by manufacturer (Default).

IP Configuration

User can configure the IP Settings and DHCP client function

- **DHCP Client:** To enable or disable the DHCP client function. When DHCP client function is enabling, the industrial switch will be assigned the IP address from the network DHCP server. The Default IP address will be replace by the DHCP server assigned IP address. After user click "Apply" button, a popup dialog show up. It is to inform the user that when the DHCP client is enabling, the current IP will lose and user should find the new IP on the DHCP server. To cancel the enabling DHCP client function, click "cancel"
- **IP Address:** Assign the IP address that the network is using. If DHCP client function is enabling, and then user don't need to assign the IP address. And, the network DHCP server will assign the IP address for the industrial switch and display it in this column. The Default IP is 192.168.16.1
- **Subnet Mask:** Assign the subnet mask of the IP address. If DHCP client function is enabling, and then user do not need to assign the subnet mask
- **Gateway:** Assign the network gateway for the industrial switch. The Default gateway is 192.168.16.254
- **DNS1:** Assign the primary DNS IP address
- **DNS2:** Assign the secondary DNS IP address

- And then, click  button

IP Configuration


DHCP Client :

IP Address	192.168.16.1
Subnet Mask	255.255.255.0
Gateway	192.168.16.254
DNS1	0.0.0.0
DNS2	0.0.0.0

IP configuration interface

DHCP Server – System configuration

The system provides the DHCP server function. Enable the DHCP server function, the switch system will be a DHCP server.

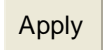- **DHCP Server:** Enable or Disable the DHCP Server function. Enable – the switch will be the DHCP server on your local network.
- **Low IP Address:** the dynamic IP assign range. Low IP address is the beginning of the dynamic IP assigns range. For example: dynamic IP assign range is from 192.168.16.100 ~ 192.168.16.200. 192.168.16.100 will be the Low IP address.
- **High IP Address:** the dynamic IP assign range. High IP address is the end of the dynamic IP assigns range. For example: dynamic IP assign range is from 192.168.16.100 ~ 192.168.16.200. 192.168.16.200 will be the High IP address.
- **Subnet Mask:** the dynamic IP assign range subnet mask.
- **Gateway:** the gateway in your network.
- **DNS:** Domain Name Server IP Address in your network.
- **Lease Time (sec):** It is the time period that system will reset the dynamic IP assignment to ensure the dynamic IP will not been occupied for a long time or the server doesn't know that the dynamic IP is idle.
- And then, click 

DHCP Server - System Configuration

System Configuration Client Entries Port and IP Binding

DHCP Server :

Low IP Address	192.168.16.100
High IP Address	192.168.16.200
Subnet Mask	255.255.255.0
Gateway	192.168.16.254
DNS	0.0.0.0
Lease Time (sec)	86400

DHCP Server Configuration interface

DHCP Client – System Configuration

When the DHCP server function is active, the system will collect the DHCP client information and display it here.

DHCP Server - Client Entries

System Configuration Client Entries Port and IP Binding

IP addr	Client ID	Type	Status	Lease
---------	-----------	------	--------	-------

DHCP Client Entries interface

DHCP Server - Port and IP Bindings

You can assign the specific IP address that is the IP in dynamic IP assign range to the specific port. When the device is connecting to the port and asks for dynamic IP assigning, the system will assign the IP address that has been assigned before to the connected device.

DHCP Server - Port and IP Binding

Port	IP
Port.01	0.0.0.0
Port.02	0.0.0.0
Port.03	0.0.0.0
Port.04	0.0.0.0
Port.05	0.0.0.0
Port.06	0.0.0.0
Port.07	0.0.0.0
Port.08	0.0.0.0
Port.09	0.0.0.0
Port.10	0.0.0.0

Port and IP Bindings interface

TFTP - Update Firmware

It provides the functions to allow a user to update the switch firmware. Before updating, make sure you have your TFTP server ready and the firmware image is on the TFTP server.

1. **TFTP Server IP Address:** fill in your TFTP server IP.
2. **Firmware File Name:** the name of firmware image.
3. Click .

TFTP - Update Firmware

Update Firmware	Restore Configuration	Backup Configuration
TFTP Server IP Address	192.168.16.2	
Firmware File Name	image.bin	

Update Firmware interface

TFTP – Restore Configuration

You can restore EEPROM value from TFTP server, but you must put back image in TFTP server, switch will download back flash image.

1. **TFTP Server IP Address:** fill in the TFTP server IP.
2. **Restore File Name:** fill in the correct restore file name.
3. Click .

TFTP - Restore Configuration

Update Firmware	Restore Configuration	Backup Configuration
TFTP Server IP Address	<input type="text" value="192.168.16.2"/>	
Restore File Name	<input type="text" value="data.bin"/>	
<input type="button" value="Apply"/> <input type="button" value="Help"/>		

Restore Configuration interface

TFTP - Backup Configuration

You can save current EEPROM value from the switch to TFTP server, then go to the TFTP restore configuration page to restore the EEPROM value.

1. **TFTP Server IP Address:** fill in the TFTP server IP
2. **Backup File Name:** fill the file name
3. Click .

TFTP - Backup Configuration

Update Firmware	Restore Configuration	Backup Configuration
TFTP Server IP Address	<input type="text" value="192.168.16.2"/>	
Backup File Name	<input type="text" value="data.bin"/>	
<input type="button" value="Apply"/> <input type="button" value="Help"/>		

Backup Configuration interface

System Event Log – Syslog Configuration

Configuring the system event mode that want to be collected and system log server IP.

1. **Syslog Client Mode:** select the system log mode – client only, server only, or both S/C.
2. **System Log Server IP Address:** assigned the system log server IP.
3. Click **Reload** to refresh the events log.
4. Click **Clear** to clear all current events log.
5. After configuring, Click **Apply**.


System Event Log - Syslog Configuration

Syslog Configuration	SMTP Configuration	Event Configuration
Syslog Client Mode Both <input type="button" value="v"/>		<input type="button" value="Apply"/>
Syslog Server IP Address 0.0.0.0		
<div style="border: 1px solid black; padding: 5px; min-height: 150px;">1: Jan 1 03:23:50 : System Log Enable! 2: Jan 1 03:23:50 : System Log Server IP: 0.0.0.0</div>		
<input type="button" value="Page.1"/> <input type="button" value="v"/>		
<input type="button" value="Reload"/> <input type="button" value="Clear"/>		

Syslog Configuration interface

System Event Log - SMTP Configuration

You can set up the mail server IP, mail account, account password, and forwarded email account for receiving the event alert.

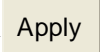1. **Email Alert:** enable or disable the email alert function.
2. **SMTP Server IP:** set up the mail server IP address (when **Email Alert** enabled, this function will then be available).
3. **Sender:** specify the name of sender.
4. **Authentication:** mark the check box to enable and configure the email account and password for authentication (when **Email Alert** enabled, this function will then be available)..
5. **Mail Account:** set up the email account, e.g. johnadmin@123.com, to receive the alert. It must be an existing email account on the mail server, which you had set up in **SMTP Server IP Address** column.
6. **Password:** The email account password.
7. **Confirm Password:** reconfirm the password.
8. **Rcpt e-mail Address 1 ~ 6:** you can assign up to 6 e-mail accounts also to receive the alert.
9. Click  .

System Event Log - SMTP Configuration

Syslog Configuration **SMTP Configuration** Event Configuration

E-mail Alert: ▾

SMTP Server IP Address :	<input type="text" value="0.0.0.0"/>
Sender :	<input type="text"/>
<input type="checkbox"/> Authentication	
Rcpt e-mail Address 1 :	<input type="text"/>
Rcpt e-mail Address 2 :	<input type="text"/>
Rcpt e-mail Address 3 :	<input type="text"/>
Rcpt e-mail Address 4 :	<input type="text"/>
Rcpt e-mail Address 5 :	<input type="text"/>
Rcpt e-mail Address 6 :	<input type="text"/>

SMTP Configuration interface

System Event Log - Event Configuration

You can select the system log events and SMTP events. When selected events occur, the system will send out the log information. Also, per port log and SMTP events can be selected. After configure, Click .

- **System event selection:** 4 selections – Device cold start, Device warm start, SNMP Authentication Failure, and X-ring topology change. Mark the checkbox to select the event. When selected events occur, the system will issue the logs.
 - **Device cold start:** when the device executes cold start action, the system will issue a log event.
 - **Authentication Failure:** when the SNMP authentication fails, the system will issue a log event.
 - **X-ring topology change:** when the X-ring topology has changed, the system will issue a log event.

System Event Log - Event Configuration

System event selection

Event Type	Syslog	SMTP
Device cold start	<input type="checkbox"/>	<input type="checkbox"/>
Authentication Failure	<input type="checkbox"/>	<input type="checkbox"/>
X-Ring topology change	<input type="checkbox"/>	<input type="checkbox"/>

- **Port event selection:** select the per port events and per port SMTP events. It has 3 selections – Link UP, Link Down, and Link UP & Link Down. Disable means no event is selected.
 - **Link UP:** the system will issue a log message when port connection is up only.
 - **Link Down:** the system will issue a log message when port connection is down only.
 - **Link UP & Link Down:** the system will issue a log message when port connection is up and down.

Port event selection

Port	Syslog	SMTP
Port.01	Disable	Disable
Port.02	<div style="border: 1px solid black; padding: 2px;"> Disable Link Up Link Down Link Up & Link Down Disable </div>	Disable
Port.03	Disable	Disable
Port.04	Disable	Disable
Port.05	Disable	Disable
Port.06	Disable	Disable
Port.07	Disable	Disable
Port.08	Disable	Disable
Port.09	Disable	Disable
Port.10	Disable	Disable

Apply

Event Configuration interface

Fault Relay Alarm

- **Power Failure:** Mark the check box to enable the function of lighting up the **P-FAIL** LED indicator on the front panel when power fails.
- **Port Link Down/Broken:** Mark the check box to enable the function of lighting up the **P-FAIL** LED indicator when Port link down or broken event occurs.

Fault Relay Alarm

Power Failure

Power 1 Power 2

Port Link Down/Broken

Port 1 Port 2

Port 3 Port 4

Port 5 Port 6

Port 7 Port 8

Port 9 Port 10

Apply

Fault Relay Alarm interface

SNTP Configuration

You can configure the SNTP (Simple Network Time Protocol) settings. The SNTP allows you to synchronize switch clocks in the Internet.

1. **SNTP Client:** enable or disable SNTP function to get the time from the SNTP server.
2. **Daylight Saving Time:** enable or disable daylight saving time function. When daylight saving time is enabling, you need to configure the daylight saving time period..
3. **UTC Timezone:** set the switch location time zone.
4. **SNTP Sever URL:** set the SNTP server IP address.
5. **Daylight Saving Period:** set up the Daylight Saving beginning time and Daylight Saving ending time. Both will be different in every year.

6. **Daylight Saving Offset (mins):** set up the offset time.
7. **Switch Timer:** Displays the switch current time.
8. Click .

SNTP Configuration

SNTP Client : ▾

Daylight Saving Time : ▾

UTC Timezone	<input type="button" value="(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London"/> ▾	
SNTP Server URL	<input type="text" value="192.168.16.66"/>	
Switch Timer	<input type="text"/>	
Daylight Saving Period	<input type="text" value="20040101 00:00"/>	<input type="text" value="20040101 00:00"/>
Daylight Saving Offset(mins)	<input type="text" value="0"/>	

SNTP Configuration interface

IP Security

IP security function allows user to assign 10 specific IP addresses that have permission to access the switch through the web browser for the securing switch management.

- **IP Security Mode:** when this option is in **Enable** mode, the **Enable HTTP Server** and **Enable Telnet Server** check boxes will then be available.
- **Enable HTTP Server:** when this check box is checked, the IP addresses among Security IP1 ~ IP10 will be allowed to access via HTTP service.
- **Enable Telnet Server:** when checked, the IP addresses among Security IP1 ~ IP10 will be allowed to access via telnet service.
- **Security IP 1 ~ 10:** Assign up to 10 specific IP address. Only these 10 IP address can access and manage the switch through the Web browser
- And then, click button to apply the configuration

[NOTE] Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

IP Security

IP Security Mode: ▼

- Enable HTTP Server
 Enable Telnet Server

Security IP1	<input type="text" value="0.0.0.0"/>
Security IP2	<input type="text" value="0.0.0.0"/>
Security IP3	<input type="text" value="0.0.0.0"/>
Security IP4	<input type="text" value="0.0.0.0"/>
Security IP5	<input type="text" value="0.0.0.0"/>
Security IP6	<input type="text" value="0.0.0.0"/>
Security IP7	<input type="text" value="0.0.0.0"/>
Security IP8	<input type="text" value="0.0.0.0"/>
Security IP9	<input type="text" value="0.0.0.0"/>
Security IP10	<input type="text" value="0.0.0.0"/>

IP Security interface

User Authentication

Change web management login user name and password for the management security issue

1. **User name:** Key in the new user name (The Default is “root”)
2. **Password:** Key in the new password (The Default is “root”)
3. **Confirm password:** Re-type the new password
4. And then, click

User Authentication

User Name :	root
New Password :	••••
Confirm Password :	••••

Apply Help

User Authentication interface

N-Key Transaction

Users can back up or restore configuration from/to switch via this interface.

1. **Auto mode:** Tick this check box and click Apply to enable the function that the switch will automatically load the system configuration from N-Key connected with the RS-232 console port when switch boots up.
2. **Backup:** Make sure N-Key is connected with the RS-232 console port and then click this button to back up the current configuration from switch.
3. **Restore:** Make sure N-Key is connected and then click this button to load the system configuration from N-Key.

Note: After clicking the Backup/Restore button, for the purpose of confirmation, a dialog box shows up to display the current N-Key information including model name, firmware version, kernel version, and the last backup time.

N-Key Transaction

<input type="checkbox"/> Auto load system configurations when system boots up	Apply
Backup the current configurations to N-Key	Backup
Restore N-Key's configurations to switch	Restore

Help

N-Key Transaction interface

Port Statistics

The following information provides the current port statistic information.

- **Port:** The port number.
- **Type:** Displays the current speed of connection to the port.
- **Link:** The status of linking—‘Up’ or ‘Down’.
- **State:** It’s set by Port Control. When the state is disabled, the port will not transmit or receive any packet.
- **Tx Good Packet:** The counts of transmitting good packets via this port.
- **Tx Bad Packet:** The counts of transmitting bad packets (including undersize [less than 64 octets], oversize, CRC Align errors, fragments and jabbers packets) via this port.
- **Rx Good Packet:** The counts of receiving good packets via this port.
- **Rx Bad Packet:** The counts of receiving good packets (including undersize [less than 64 octets], oversize, CRC error, fragments and jabbers) via this port.
- **Tx Abort Packet:** The aborted packet while transmitting.
- **Packet Collision:** The counts of collision packet.
- **Packet Dropped:** The counts of dropped packet.
- **Rx Bcast Packet:** The counts of broadcast packet.
- **Rx Mcast Packet:** The counts of multicast packet.
- Click button to clean all counts.

Port Statistics

Port	Type	Link	State	Tx Good Packet	Tx Bad Packet	Rx Good Packet	Rx Bad Packet	Tx Abort Packet	Packet Collision	Packet Dropped	RX Bcast Packet	RX Mcast Packet
Port.01	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.02	100TX	Up	Enable	2168	0	3000	0	0	0	0	69	0
Port.03	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.04	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.05	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.06	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.07	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.08	100TX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.09	1000SX	Down	Enable	0	0	0	0	0	0	0	0	0
Port.10	1000SX	Down	Enable	0	0	0	0	0	0	0	0	0

Port Statistics interface

Port Control

In Port control, you can view every port status that depended on user setting and the negotiation result.

1. **Port:** select the port that you want to configure.
2. **State:** Current port status. The port can be set to disable or enable mode. If the port setting is disable then will not receive or transmit any packet.
3. **Negotiation:** set auto negotiation status of port.
4. **Speed:** set the port link speed.
5. **Duplex:** set full-duplex or half-duplex mode of the port.
6. **Flow Control:** set flow control function is **Symmetric** or **Asymmetric** in Full Duplex mode. The Default value is **Disable**.
7. **Security:** When its state is “**On**”, means this port accepts only one MAC address.
8. Click Apply.

Port Control

Port	State	Negotiation	Speed	Duplex	Flow Control	Security
Port.01						
Port.02	Enable	Auto	100	Full	Disable	Off
Port.03						
Port.04						

Apply
Help

Port	Group ID	Type	Link	State	Negotiation	Speed		Duplex		Flow Control		Security
						Config	Actual	Config	Actual	Config	Actual	
Port.01	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.02	N/A	100TX	Up	Enable	Auto	100	Full	100	Full	Disable	OFF	
Port.03	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.04	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.05	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.06	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.07	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.08	N/A	100TX	Down	Enable	Auto	100	Full	N/A	Disable	N/A	OFF	
Port.09	N/A	1000SX	Down	Enable	Force	1G	Full	N/A	Disable	N/A	OFF	
Port.10	N/A	1000SX	Down	Enable	Force	1G	Full	N/A	Disable	N/A	OFF	

Port Control interface

Port Trunk

The Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group to which the link belongs, move the link to that Link Aggregation Group, and enable its transmission and reception functions in an orderly manner. Link aggregation lets you group up to seven consecutive ports into two dedicated connections. This feature can expand bandwidth to a device on the network. **LACP operation requires full-duplex mode**, more detail information refers to IEEE 802.3ad.

Aggregator setting

1. **System Priority:** a value used to identify the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP.
2. **Group ID:** There are three trunk groups to provide configure. Choose the "**Group ID**" and click **Select**.
3. **LACP:** If enable, the group is LACP static trunk group. If disable, the group is local static trunk group. All ports support LACP dynamic trunk group. If connecting to the device that also supports LACP, the LACP dynamic trunk group will be created automatically.
4. **Work ports:** allow max four ports can be aggregated at the same time. With LACP static trunk group, the exceed ports are standby and can be aggregated if work ports fail. If it is local static trunk group, the number of ports must be the same as the group member ports.
5. Select the ports to join the trunk group. Allow max four ports can be aggregated at the same time. Click **Add** button to add the port. To remove unwanted ports, select the port and click **Remove** button.
6. If LACP enable, you can configure LACP Active/Passive status in each ports on State Activity page.

7. Click **Apply** .
8. Use **Delete** button to delete Trunk Group. Select the Group ID and click **Delete** button.

Port Trunk - Aggregator Setting

Aggregator Setting	Aggregator Information	State Activity																														
<table border="1" style="margin: auto;"> <tr><th colspan="2" style="text-align: center;">System Priority</th></tr> <tr><td style="text-align: center;">1</td></tr> </table>			System Priority		1																											
System Priority																																
1																																
<table border="1" style="width: 100%;"> <tr> <td style="width: 30%;">Group ID</td> <td style="width: 40%;">Trunk.1 ▾</td> <td style="width: 30%; text-align: center;">Select</td> </tr> <tr> <td>Lacp</td> <td>Disable ▾</td> <td></td> </tr> <tr> <td>Work Ports</td> <td>0</td> <td></td> </tr> <tr> <td style="height: 100px;"></td> <td style="text-align: center;"> <<Add Remove>> </td> <td style="vertical-align: top;"> <table border="1" style="width: 100%;"> <tr><td>Port.01</td><td style="text-align: right;">▲</td></tr> <tr><td>Port.02</td><td></td></tr> <tr><td>Port.03</td><td></td></tr> <tr><td>Port.04</td><td></td></tr> <tr><td>Port.05</td><td></td></tr> <tr><td>Port.06</td><td></td></tr> <tr><td>Port.07</td><td></td></tr> <tr><td>Port.08</td><td></td></tr> <tr><td>Port.09</td><td style="text-align: right;">▼</td></tr> </table> </td> </tr> </table>	Group ID	Trunk.1 ▾	Select	Lacp	Disable ▾		Work Ports	0			<<Add Remove>>	<table border="1" style="width: 100%;"> <tr><td>Port.01</td><td style="text-align: right;">▲</td></tr> <tr><td>Port.02</td><td></td></tr> <tr><td>Port.03</td><td></td></tr> <tr><td>Port.04</td><td></td></tr> <tr><td>Port.05</td><td></td></tr> <tr><td>Port.06</td><td></td></tr> <tr><td>Port.07</td><td></td></tr> <tr><td>Port.08</td><td></td></tr> <tr><td>Port.09</td><td style="text-align: right;">▼</td></tr> </table>	Port.01	▲	Port.02		Port.03		Port.04		Port.05		Port.06		Port.07		Port.08		Port.09	▼		
Group ID	Trunk.1 ▾	Select																														
Lacp	Disable ▾																															
Work Ports	0																															
	<<Add Remove>>	<table border="1" style="width: 100%;"> <tr><td>Port.01</td><td style="text-align: right;">▲</td></tr> <tr><td>Port.02</td><td></td></tr> <tr><td>Port.03</td><td></td></tr> <tr><td>Port.04</td><td></td></tr> <tr><td>Port.05</td><td></td></tr> <tr><td>Port.06</td><td></td></tr> <tr><td>Port.07</td><td></td></tr> <tr><td>Port.08</td><td></td></tr> <tr><td>Port.09</td><td style="text-align: right;">▼</td></tr> </table>	Port.01	▲	Port.02		Port.03		Port.04		Port.05		Port.06		Port.07		Port.08		Port.09	▼												
Port.01	▲																															
Port.02																																
Port.03																																
Port.04																																
Port.05																																
Port.06																																
Port.07																																
Port.08																																
Port.09	▼																															
<table style="margin: auto;"> <tr> <td style="border: 1px solid #ccc; padding: 2px 10px;">Apply</td> <td style="border: 1px solid #ccc; padding: 2px 10px;">Delete</td> <td style="border: 1px solid #ccc; padding: 2px 10px;">Help</td> </tr> </table>			Apply	Delete	Help																											
Apply	Delete	Help																														

Port Trunk—Aggregator Setting interface

Aggregator Information

When you had setup the LACP aggregator, you will see relation information in here.

Port Trunk - Aggregator Information

Aggregator Setting	Aggregator Information	State Activity
--------------------	------------------------	----------------

Static Trunking Group	
Group Key	2
Port Member	2

Port Trunk – Aggregator Information interface

State Activity

When you had setup the LACP aggregator, you can configure port state activity. You can mark or un-mark the port. When you mark the port and click button the port state activity will change to **Active**. Opposite is **Passive**.

- **Active:** The port automatically sends LACP protocol packets.
- **Passive:** The port does not automatically send LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

[NOTE]

1. A link having either two active LACP ports or one active port can perform dynamic LACP trunk.
 2. A link has two passive LACP ports will not perform dynamic LACP trunk because both ports are waiting for an LACP protocol packet from the opposite device.
 3. If you are active LACP's actor, after you have selected trunk port, the active status will be created automatically.
-

Port Trunk - State Activity



Port	LACP State Activity	Port	LACP State Activity
1	N/A	2	N/A
3	N/A	4	N/A
5	N/A	6	N/A
7	N/A	8	N/A
9	N/A	10	N/A



Port Trunk – State Activity interface

Port Mirroring

The Port mirroring is a method for monitor traffic in switched networks. Traffic through ports can be monitored by one specific port. That means traffic goes in or out monitored (source) ports will be duplicated into mirror (destination) port.

- **Destination Port:** There is only one port can be selected to be destination (mirror) port for monitoring both RX and TX traffic which come from source port. Or, use one of two ports for monitoring RX traffic only and the other one for TX traffic only. User can connect mirror port to LAN analyzer or Netxray
- **Source Port:** The ports that user wants to monitor. All monitored port traffic will be copied to mirror (destination) port. User can select multiple source ports by checking the **RX** or **TX** check boxes to be monitored.
- And then, click button.

Port Mirroring

	Destination Port		Source Port	
	RX	TX	RX	TX
Port.01	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.02	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.03	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.04	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.05	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.06	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.07	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.08	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.09	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port.10	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	<input type="checkbox"/>

Port Trunk – Port Mirroring interface

Rate Limiting

You can set up every port's bandwidth rate and frame limitation type.

- **Ingress Limit Frame type:** select the frame type that wants to filter. The frame

types have 4 options for selecting: **All, broadcast/multicast/flooded unicast, broadcast/multicast, and broadcast only**. These 4 types are only for ingress packet. The egress rate only supports all type packets.

Rate Limiting

	Ingress Limit Frame Type	Ingress	Egress
Port.01	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.02	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.03	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.04	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.05	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.06	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.07	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.08	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.09	All <input type="button" value="v"/>	0 kbps	0 kbps
Port.10	All <input type="button" value="v"/>	0 kbps	0 kbps

Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.

Rate Limiting interface


- All the ports support port ingress and egress rate control. For example, assume port 1 is 10Mbps, users can set it's effective egress rate is 1Mbps, ingress rate is 500Kbps. The switch performs the ingress rate by packet counter to meet the specified rate
 - **Ingress:** Enter the port effective ingress rate (The Default value is "0")
 - **Egress:** Enter the port effective egress rate (The Default value is "0")
4. And then, click to apply the settings

VLAN configuration

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain, which would, allow you to isolate network traffic so only the members of the VLAN will receive traffic from the same members of VLAN. Basically, creating a VLAN from a switch is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

The industrial switch supports port-based and 802.1Q (tagged-based) VLAN. In the Default configuration, VLAN operation mode Default is “**Disable**”.

VLAN Configuration

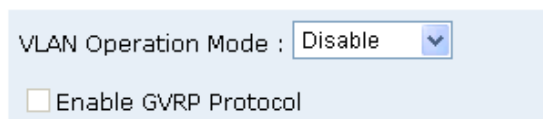

VLAN Operation Mode :

Enable GVRP Protocol

VLAN NOT ENABLE

VLAN Configuration interface


VLAN configuration - Port-based VLAN

Packets can go among only members of the same VLAN group. Note all unselected ports are treated as belonging to another single VLAN. If the port-based VLAN enabled, the VLAN-tagging is ignored.

In order for an end station to send packets to different VLAN groups, it itself has to be either capable of tagging packets it sends with VLAN tags or attached to a VLAN-aware bridge that is capable of classifying and tagging the packet with different VLAN ID based on not only Default PVID but also other information about the packet, such as the

protocol.

VLAN Configuration

VLAN Operation Mode : 


Enable GVRP Protocol



VLAN – Port Based interface

- Click to add a new VLAN group(The maximum VLAN group is up to 64 VLAN groups)
- Entering the VLAN name, group ID and grouping the members of VLAN group
- And then, click

VLAN Configuration

VLAN Operation Mode : 

Enable GVRP Protocol

Group Name

VLAN ID

VLAN—Port Based Add interface

- You will see the VLAN displays.
- Use button to delete unwanted VLAN.
- Use button to modify existing VLAN group.

[NOTE] Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.

802.1Q VLAN

Tagged-based VLAN is an IEEE 802.1Q specification standard. Therefore, it is possible to create a VLAN across devices from different switch vendors. IEEE 802.1Q VLAN uses a technique to insert a “tag” into the Ethernet frames. Tag contains a VLAN Identifier (VID) that indicates the VLAN numbers.

You can create Tag-based VLAN, and enable or disable GVRP protocol. There are 256 VLAN groups to provide configure. Enable 802.1Q VLAN, the all ports on the switch belong to Default VLAN, VID is 1. The Default VLAN can't be deleting.

GVRP allows automatic VLAN configuration between the switch and nodes. If the switch is connected to a device with GVRP enabled, you can send a GVRP request using the VID of a VLAN defined on the switch; the switch will automatically add that device to the existing VLAN.

VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

802.1Q Configuration

Group Configuration


Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	1	

Apply Help

Port	Link Type	Untagged Vid	Tagged Vid
Port.01	Access Link	1	
Port.06	Access Link	1	
Port.07	Access Link	1	
Port.08	Access Link	1	
Port.09	Access Link	1	
Trunk.1	Access Link	1	
Trunk.2	Access Link	1	


802.1q VLAN interface

802.1Q Configuration

1. **Enable GVRP Protocol:** check the check box to enable GVRP protocol.
2. Select the port that wants to configure.
3. **Link Type:** there are 3 types of link type.
 - **Access Link:** single switch only, allow user to group ports by setting the same VID.
 - **Trunk Link:** extended application of **Access Link**, allow user to group ports by setting the same VID with 2 or more switches.
 - **Hybrid Link:** Both **Access Link** and **Trunk Link** are available.
4. **Untagged VID:** assign the untagged frame VID.
5. **Tagged VID:** assign the tagged frame VID.
6. Click 
7. You can see each port setting in the below table on the screen.

Group Configuration

Edit the existing VLAN Group.

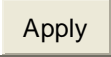1. Select the VLAN group in the table list.
2. Click 

VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

802.1Q Configuration

Group Configuration

Default__1

Edit Delete

Group Configuration interface

3. You can Change the VLAN group name and VLAN ID.
4. Click **Apply**.

VLAN Configuration

VLAN Operation Mode : 802.1Q

Enable GVRP Protocol

802.1Q Configuration

Group Configuration

Group Name VLAN_2

VLAN ID 2


Apply

Group Configuration interface

Rapid Spanning Tree

The Rapid Spanning Tree Protocol (RSTP) is an evolution of the Spanning Tree Protocol and provides for faster spanning tree convergence after a topology change. The system also supports STP and the system will auto detect the connected device that is running STP or RSTP protocol.

RSTP System Configuration

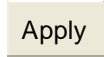- User can view spanning tree information about the Root Bridge
- User can modify RSTP state. After modification, click  button
 - **RSTP mode:** user must enable or disable RSTP function before configure the related parameters
 - **Priority (0-61440):** a value used to identify the root bridge. The bridge with the lowest value has the highest priority and is selected as the root. If the value changes, user must reboot the switch. The value must be multiple of 4096 according to the protocol standard rule
 - **Max Age (6-40):** the number of seconds a bridge waits without receiving Spanning-tree Protocol configuration messages before attempting a reconfiguration. Enter a value between 6 through 40
 - **Hello Time (1-10):** the time that controls switch sends out the BPDU packet to check RSTP current status. Enter a value between 1 through 10
 - **Forward Delay Time (4-30):** the number of seconds a port waits before changing from its Rapid Spanning-Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30

[NOTE]

1. Must follow the rule to configure the MAX Age, Hello Time, and Forward Delay Time
 $2 \times (\text{Forward Delay Time value} - 1) \geq \text{Max Age value} \geq 2 \times (\text{Hello Time value} + 1)$
 2. Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off
-

Rapid Spanning Tree

System Configuration

Per Port Configuration

RSTP Mode	Disable ▾
Priority (0-61440)	32768
Max Age (6-40)	20
Hello Time (1-10)	2
Forward Delay Time (4-30)	15

Priority must be a multiple of 4096
 $2 \times (\text{Forward Delay Time} - 1)$ should be greater than or equal to the Max Age.
 The Max Age should be greater than or equal to $2 \times (\text{Hello Time} + 1)$.

Apply

Root Bridge Information

Bridge ID	N/A
Root Priority	N/A
Root Port	N/A
Root Path Cost	N/A
Max Age	N/A
Hello Time	N/A
Forward Delay	N/A

RSTP System Configuration interface

RSTP Per Port Configuration

You can configure path cost and priority of every port.

- Select the port in Port column.
- Path Cost:** The cost of the path to the other bridge from this transmitting bridge at the specified port. Enter a number 1 through 200000000.
- Priority:** Decide which port should be blocked by priority in LAN. Enter a number 0 through 240. The value of priority must be the multiple of 16.
- Admin P2P:** Some of the rapid state transactions that are possible within RSTP are dependent upon whether the port concerned can only be connected to exactly one other bridge (i.e. it is served by a point-to-point LAN segment), or can be connected to two or more bridges (i.e. it is served by a shared medium LAN segment). This function allows the P2P status of the link to be manipulated administratively. True is P2P enabling. False is P2P disabling.

4. **Admin Edge:** The port directly connected to end stations cannot create bridging loop in the network. To configure the port as an edge port, set the port to “**True**” status.
5. **Non Stp:** The port includes the STP mathematic calculation. **True** is not including STP mathematic calculation. **False** is including the STP mathematic calculation.
6. Click .

RSTP - Port Configuration

	System Configuration	Port Configuration			
Port	Path Cost (1-200000000)	Priority (0-240)	Admin P2P	Admin Edge	Admin Non Stp
	200000	128	Auto ▼	True ▼	False ▼

priority must be a multiple of 16

RSTP Port Status

Port	Path Cost	Port Priority	Admin P2P	Admin Edge	Stp Neighbor	State	Role
------	-----------	---------------	-----------	------------	--------------	-------	------

RSTP Per Port Configuration interface

SNMP Configuration

Simple Network Management Protocol (SNMP) is the protocol developed to manage nodes (servers, workstations, routers, switches and hubs etc.) on an IP network. SNMP enables network administrators to manage network performance, find and solve network problems, and plan for network growth. Network management systems learn of problems by receiving traps or change notices from network devices implementing SNMP.

System Configuration

■ Community Strings


You can define new community string set and remove unwanted community string.

1. **String:** fill the name of string.
2. **RO:** Read only. Enables requests accompanied by this string to display MIB-object information.
3. **RW:** Read write. Enables requests accompanied by this string to display MIB-object information and to set MIB objects.

1. Click **Add**.
2. To remove the community string, select the community string that you have defined and click **Remove**. You cannot remove the Default community string set.

- **Agent Mode:** Select the SNMP version that you want to use it. And then click **Change** to switch to the selected SNMP version mode.

SNMP Management

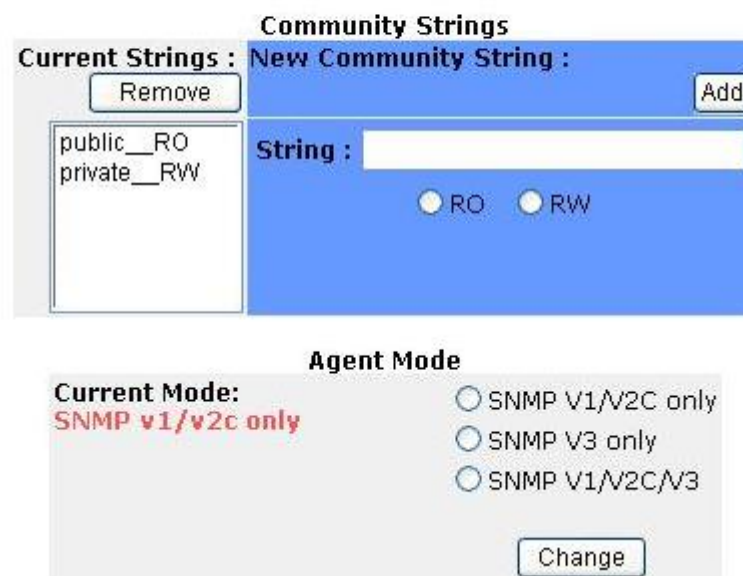

The image shows a web-based configuration interface for SNMP. It is divided into two main sections: "Community Strings" and "Agent Mode".

Community Strings: This section has a "Current Strings" list on the left containing "public__RO" and "private__RW", with a "Remove" button above it. On the right, there is a "New Community String" form with an "Add" button. The form includes a "String:" input field and two radio buttons labeled "RO" and "RW".

Agent Mode: This section shows the "Current Mode" as "SNMP v1/v2c only" in red text. Below this are three radio buttons for selecting the SNMP version: "SNMP V1/V2C only", "SNMP V3 only", and "SNMP V1/V2C/V3". A "Change" button is located at the bottom right of this section.


SNMP System Configuration interface

Trap Configuration

A trap manager is a management station that receives traps, the system alerts generated by the switch. If no trap manager is defined, no traps will issue. Create a trap manager by entering the IP address of the station and a community string. To define management stations as trap manager and enter SNMP community strings and selects the SNMP version.

1. **IP Address:** enter the IP address of trap manager.
2. **Community:** enter the community string.
3. **Trap Version:** select the SNMP trap version type – v1 or v2.
4. Click **Add**.
5. To remove the community string, select the community string that you have defined and click **Remove**. You cannot remove the Default community string set.

SNMP Management

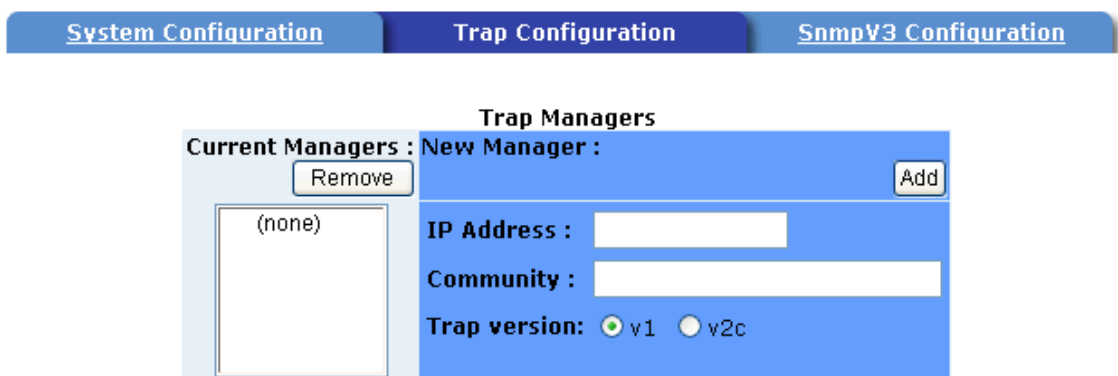


The screenshot displays the 'SNMP Management' interface with three tabs: 'System Configuration', 'Trap Configuration', and 'SnmPV3 Configuration'. The 'Trap Configuration' tab is active. The main content area is titled 'Trap Managers' and is divided into two sections: 'Current Managers' and 'New Manager'. The 'Current Managers' section shows a list with '(none)' and a 'Remove' button. The 'New Manager' section contains a form with the following fields: 'IP Address' (text input), 'Community' (text input), and 'Trap version' (radio buttons for 'v1' and 'v2c', with 'v1' selected). An 'Add' button is located at the top right of the 'New Manager' section.

Trap Managers interface

SNMPV3 Configuration


Configure the SNMP V3 function.


Context Table

Configure SNMP v3 context table. Assign the context name of context table. Click  to add context name.

User Profile

Configure SNMP v3 user table..

- **User ID:** set up the user name.
- **Authentication Password:** set up the authentication password.
- **Privacy Password:** set up the private password.
- Click  to add context name.

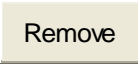Click  to remove unwanted context name.

SNMP Management

System Configuration	Trap Configuration	SnmpV3 Configuration
Context Table		
Context Name : <input type="text"/>		<input type="button" value="Apply"/>
User Profile		
Current User Profiles : <input type="button" value="Remove"/>	New User Profile : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	User ID:	<input type="text"/>
	Authentication Password:	<input type="text"/>
	Privacy Password:	<input type="text"/>
Group Table		
Current Group content : <input type="button" value="Remove"/>	New Group Table: <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	Security Name (User ID):	<input type="text"/>
	Group Name:	<input type="text"/>
Access Table		
Current Access Tables : <input type="button" value="Remove"/>	New Access Table : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	Context Prefix:	<input type="text"/>
	Group Name:	<input type="text"/>
	Security Level:	<input type="radio"/> NoAuthNoPriv. <input type="radio"/> AuthNoPriv. <input type="radio"/> AuthPriv.
	Context Match Rule	<input type="radio"/> Exact <input type="radio"/> Prefix
	Read View Name:	<input type="text"/>
	Write View Name:	<input type="text"/>
	Notify View Name:	<input type="text"/>
MIBView Table		
Current MIBTables : <input type="button" value="Remove"/>	New MIBView Table : <input type="button" value="Add"/>	
<div style="border: 1px solid black; padding: 5px;">(none)</div>	View Name:	<input type="text"/>
	SubOid-Tree:	<input type="text"/>
	Type:	<input type="radio"/> Excluded <input type="radio"/> Included


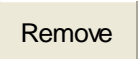
Note:
Any modification of SNMPv3 tables might cause MIB accessing rejection. Please take notice of the causality between the tables before you modify these tables.

SNMP V3 configuration interface

Group Table


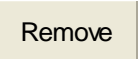
Configure SNMP v3 group table.

- **Security Name (User ID):** assign the user name that you have set up in user table.
- **Group Name:** set up the group name.

- Click  to add context name.
- Click  to remove unwanted context name.


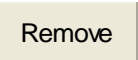
Access Table

Configure SNMP v3 access table.

- **Context Prefix:** set up the context name.
- **Group Name:** set up the group.
- **Security Level:** select the access level.
- **Context Match Rule:** select the context match rule.
- **Read View Name:** set up the read view.
- **Write View Name:** set up the write view.
- **Notify View Name:** set up the notify view.
- Click  to add context name.
- Click  to remove unwanted context name.

MIBview Table


Configure MIB view table.

- **ViewName:** set up the name.
- **Sub-Oid Tree:** fill the Sub OID.
- **Type:** select the type – exclude or included.
- Click  to add context name.
- Click  to remove unwanted context name.

QoS Configuration

You can configure Qos policy and priority setting, per port priority setting, COS and TOS setting.

QoS Policy and Priority Type

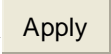- **Qos Policy:** select the Qos policy rule.
 - **Using the 8,4,2,1 weight fair queue scheme:** The switch will follow 8:4:2:1 rate to process priority queue from Hi to lowest queue. For example: the system will process 80 % high queue traffic, 40 % middle queue traffic, 20 % low queue traffic, and 10 % lowest queue traffic at the same time. And the traffic in the Low Priority queue are not transmitted until all High, Medium, and Normal traffic are serviced.
 - **Use the strict priority scheme:** Always higher queue will be process first, except higher queue is empty.
- **Priority Type:** there are 5 priority type selections available. Disable means no priority type is selected.
 - **Port-based:** the port priority will follow the **Port-based** that you have assigned – High, middle, low, or lowest.
 - **COS only:** the port priority will only follow the **COS priority** that you have assigned.
 - **TOS only:** the port priority will only follow the **TOS priority** that you have assigned.
 - **COS first:** the port priority will follow the COS priority first, and then other priority rule.
 - **TOS first:** the port priority will follow the TOS priority first, and the other priority rule.
- Click  .

QoS

Qos Policy:

Use an 8,4,2,1 weighted fair queuing scheme

Use a strict priority scheme

Priority Type:

Port-based Priority:

Port.01	Port.02	Port.03	Port.04	Port.05	Port.06	Port.07	Port.08	Port.09
<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>

COS:

Priority	0	1	2	3	4	5	6	7
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>

TOS:

Priority	0	1	2	3	4	5	6	7
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	8	9	10	11	12	13	14	15
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	16	17	18	19	20	21	22	23
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	24	25	26	27	28	29	30	31
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	32	33	34	35	36	37	38	39
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	40	41	42	43	44	45	46	47
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	48	49	50	51	52	53	54	55
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>
Priority	56	57	58	59	60	61	62	63
	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>	<input type="text" value="Lowest"/>

QoS Configuration interface

Port Base Priority

Configure per port priority level.

- **Port 1 ~ Port 10:** each port has 4 priority levels – High, Middle, Low, and Lowest.
- Click .

COS Configuration

Set up the COS priority level.

- **COS priority:** Set up the COS priority level 0~7 –High, Middle, Low, Lowest.
- Click .

TOS Configuration

Set up the TOS priority.


- **TOS priority:** the system provides 0~63 TOS priority level. Each level has 4 types of priority – high, middle, low, and lowest. The Default value is “Lowest” priority for each level. When the IP packet is received, the system will check the TOS level value in the IP packet that has received. For example: user set the TOS level 25 is high. The port 1 is following the TOS priority policy only. When the port 1 packet received, the system will check the TOS value of the received IP packet. If the TOS value of received IP packet is 25(priority = high), and then the packet priority will have highest priority.
- Click .

IGMP Configuration

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using switches, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries and report packets and manage IP multicast traffic through the switch. IGMP have three fundamental types of message as follows:

Message	Description
Query	A message sent from the querier (IGMP router or switch) asking for a response from each host belonging to the multicast group.
Report	A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message.
Leave Group	A message sent by a host to the querier to indicate that the host has quit being a member of a specific multicast group.

The switch support IP multicast, you can enable IGMP protocol on web management's switch setting advanced page, then the IGMP snooping information displays. IP multicast addresses range are from 224.0.0.0 through 239.255.255.255.

- **IGMP Protocol:** Enable or disable the IGMP protocol.
- **IGMP Query:** Enable or disable the IGMP query function. The IGMP query information will be displayed in IGMP status section.
- Click  .

IGMP

IP Address	VLAN ID	Member Port
239.255.255.250	1	1*****
224.000.000.009	1	1*****
224.000.000.002	1	1*****

IGMP Protocol: ▾

IGMP Query : ▾

IGMP Configuration interface

X-Ring

X-Ring provides a faster redundant recovery than Spanning Tree topology. The action is similar to STP or RSTP, but the algorithms not the same.

In the X-Ring topology, every switch should enable X-Ring function and assign two member ports in the ring. Only one switch in the X-Ring group would be set as a backup switch that would be blocked, called backup port, and another port is called working port. Other switches are called working switches and their two member ports are called working ports. When the failure of network connection occurs, the backup port will automatically become a working port to recovery the failure.

The ring master can negotiate and place command to other switches in the X-Ring group. If there are 2 or more switches in master mode, then software will select the switch with lowest MAC address number as the ring master. The X-Ring master ring mode will be enabled by the X-Ring configuration interface. Also, user can identify the switch as the ring master from the R.M. LED panel of the LED panel on the switch.

The system also supports the coupling ring that can connect 2 or more X-Ring group for the redundant backup function and dual homing function that prevent connection lose between X-Ring group and upper level/core switch.

- **Enable X-Ring:** To enable the X-Ring function. Marking the check box to enable the X-Ring function.
- **Enable Ring Master:** Mark the check box for enabling this machine to be a ring master.
- **1st & 2nd Ring Ports:** Pull down the selection menu to assign two ports as the member ports. **1st Ring Port** is the working port and **2nd Ring Port** is the backup port. When **1st Ring Port** fails, the system will automatically upgrade the **2nd Ring Port** to be the working port.
- **Enable Coupling Ring:** To enable the coupling ring function. Marking the check box to enable the coupling ring function.
- **Coupling port:** Assign the member port.
- **Control port:** Set the switch as the master switch in the coupling ring.
- **Enable Dual Homing:** Set up one of port on the switch to be the Dual Homing port. In an X-Ring group, maximum Dual Homing port is one. Dual Homing only work when the X-Ring function enable.
- And then, click to apply the configuration.

X-Ring Configuration

<input type="checkbox"/> Enable Ring	
<input type="checkbox"/> Enable Ring Master	
1st Ring Port	<input type="text" value="Port.01"/>
2nd Ring Port	<input type="text" value="Port.02"/>
<input type="checkbox"/> Enable Couple Ring	
Coupling Port	<input type="text" value="Port.03"/>
Control Port	<input type="text" value="Port.04"/>
<input type="checkbox"/> Enable Dual Homing	<input type="text" value="Port.05"/>


X ring Interface

[NOTE]


1. When the X-Ring function enable, user must disable the RSTP. The X-Ring function and RSTP function cannot exist at the same time.
 2. Remember to execute the “Save Configuration” action, otherwise the new configuration will lose when switch power off.
-

LLDP Configuration

Link Layer Discovery Protocol (LLDP) is defined in the IEEE 802.1AB, it is an emerging standard which provides a solution for the configuration issues caused by expanding LANs. LLDP specifically defines a standard method for Ethernet network devices such as switches, routers and wireless LAN access points to advertise information about themselves to other nodes on the network and store the information they discover. LLDP runs on all 802 media. The protocol runs over the data-link layer only, allowing two systems running different network layer protocols to learn about each other.

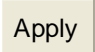- **LLDP Protocol:** Pull down the selection menu to disable or enable LLDP function.
- **LLDP Interval:** Set the interval of advertising the switch’s information to other nodes.
- Click  .

LLDP Configuration

LLDP Protocol: 
LLDP Interval: **sec**

LLDP Interface

Security


In this section, you can configure 802.1x and MAC address table.

802.1X/RADIUS Configuration

802.1x is an IEEE authentication specification that allows a client to connect to a wireless access point or wired switch but prevents the client from gaining access to the Internet until it provides authority, like a user name and password that are verified by a separate server.

System Configuration

After enabling the IEEE 802.1X function, you can configure the parameters of this function.

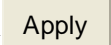1. **IEEE 802.1x Protocol:** .enable or disable 802.1x protocol.
2. **Radius Server IP:** set the Radius Server IP address.
3. **Server Port:** set the UDP destination port for authentication requests to the specified Radius Server.
4. **Accounting Port:** set the UDP destination port for accounting requests to the specified Radius Server.
5. **Shared Key:** set an encryption key for using during authentication sessions with the specified radius server. This key must match the encryption key used on the Radius Server.
6. **NAS, Identifier:** set the identifier for the radius client.
7. Click  .

802.1x/RADIUS - System Configuration

System Configuration	Port Configuration	Misc Configuration
802.1x Protocol	Disable ▾	
Radius Server IP	192.168.16.3	
Server Port	1812	
Accounting Port	1813	
Shared Key	12345678	
NAS, Identifier	NAS_L2_SWITCH	

802.1x System Configuration interface

802.1x Per Port Configuration

You can configure 802.1x authentication state for each port. The State provides Disable, Accept, Reject and Authorize. Use “**Space**” key change the state value.

- **Reject:** the specified port is required to be held in the unauthorized state.
- **Accept:** the specified port is required to be held in the Authorized state.
- **Authorized:** the specified port is set to the Authorized or Unauthorized state in accordance with the outcome of an authentication exchange between the Supplicant and the authentication server.
- **Disable:** The specified port is required to be held in the Authorized state
- Click .

802.1x/RADIUS - Port Configuration

System Configuration | **Port Configuration** | Misc Configuration

Port	State
Port.01	Authorize ▼
Port.02	
Port.03	
Port.04	
Port.05	

Apply Help

Port Authorization

Port	State
Port.01	Disable
Port.02	Disable
Port.03	Disable
Port.04	Disable
Port.05	Disable
Port.06	Disable
Port.07	Disable
Port.08	Disable
Port.09	Disable
Port.10	Disable

802.1x Per Port Setting interface

Misc Configuration

1. **Quiet Period:** set the period during which the port doesn't try to acquire a supplicant.
2. **TX Period:** set the period the port wait for retransmit next EAPOL PDU during an authentication session.
3. **Supplicant Timeout:** set the period of time the switch waits for a supplicant response to an EAP request.
4. **Server Timeout:** set the period of time the switch waits for a server response to an authentication request.
5. **Max Requests:** set the number of authentication that must time-out before authentication fails and the authentication session ends.
6. **Reauth period:** set the period of time after which clients connected must be re-authenticated.
7. Click .

802.1x/RADIUS - Misc Configuration



Quiet Period	<input type="text" value="60"/>
Tx Period	<input type="text" value="30"/>
Supplicant Timeout	<input type="text" value="30"/>
Server Timeout	<input type="text" value="30"/>
Max Requests	<input type="text" value="2"/>
Reauth Period	<input type="text" value="3600"/>



802.1x Misc Configuration interface

MAC Address Table



Use the MAC address table to ensure the port security.

Static MAC Address

You can add a static MAC address; it remains in the switch's address table, regardless of whether the device is physically connected to the switch. This saves the switch from having to re-learn a device's MAC address when the disconnected or powered-off device is active on the network again. You can add / modify / delete a static MAC address.

■ Add the Static MAC Address

You can add static MAC address in switch MAC table.

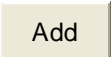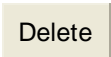1. **MAC Address:** Enter the MAC address of the port that should permanently forward traffic, regardless of the device network activity.
2. **Port No.:** pull down the selection menu to select the port number.
3. Click .
4. If you want to delete the MAC address from filtering table, select the MAC address and click .

MAC Address Table - Static MAC Addresses

Static MAC Addresses	MAC Filtering	All MAC Addresses	Multicast Filtering
----------------------	---------------	-------------------	---------------------

--

MAC Address	<input type="text"/>
Port No.	Port.01 ▾

Static MAC Addresses interface

MAC Filtering

By filtering MAC address, the switch can easily filter pre-configure MAC address and reduce the un-safety. You can add and delete filtering MAC address.

MAC Address Table - MAC Filtering

Static MAC Addresses	MAC Filtering	All MAC Addresses	Multicast Filtering
----------------------	---------------	-------------------	---------------------

--

MAC Address	<input type="text"/>
-------------	----------------------

MAC Filtering interface

1. **MAC Address:** Enter the MAC address that you want to filter.
2. Click **Add**.
3. If you want to delete the MAC address from filtering table, select the MAC address and click **Delete**.

All MAC Addresses

You can view the port that connected device's MAC address and related devices' MAC address.

1. Select the port.
2. The selected port of static MAC address information will be displayed.
3. Click **Clear MAC Table** to clear the current port static MAC address information on screen.

MAC Address Table - All MAC Addresses

Static MAC Addresses MAC Filtering **All MAC Addresses** Multicast Filtering

Port No: Port.03 ▾

0016D33BEB3F	_____	DYNAMIC
--------------	-------	---------

Dynamic Address Count:1
Static Address Count:0

Clear MAC Table

All MAC Address interface

Multicast Filtering

Multicasts are similar to broadcasts, they are sent to all end stations on a LAN or VLAN. Multicast filtering is the function, which end stations can receive the multicast traffic if the

connected ports had been included in the specific multicast groups. With multicast filtering, network devices only forward multicast traffic to the ports that are connected to the registered end stations.

- **IP Address:** Assign a multicast group IP address in the range of 224.0.0.0 ~ 239.255.255.255.
- **Member Ports:** Tick the check box beside the port number to include them as the member ports in the specific multicast group IP address.
- Click **Add** to append a new filter of multicast to the field, or select the filter in the field and click **Delete** to remove it.

MAC Address Table - Multicast Filtering

Static MAC Addresses	MAC Filtering	All MAC Addresses	Multicast Filtering				
<table border="1"><thead><tr><th>IP Address</th><th>Member Port</th></tr></thead><tbody><tr><td> </td><td> </td></tr></tbody></table>				IP Address	Member Port		
IP Address	Member Port						
<table border="1"><tr><td>IP Address</td><td><input type="text"/></td></tr><tr><td>Member Ports</td><td><input type="checkbox"/> Port.01 <input type="checkbox"/> Port.02 <input type="checkbox"/> Port.03 <input type="checkbox"/> Port.04 <input type="checkbox"/> Port.05 <input type="checkbox"/> Port.06</td></tr></table>				IP Address	<input type="text"/>	Member Ports	<input type="checkbox"/> Port.01 <input type="checkbox"/> Port.02 <input type="checkbox"/> Port.03 <input type="checkbox"/> Port.04 <input type="checkbox"/> Port.05 <input type="checkbox"/> Port.06
IP Address	<input type="text"/>						
Member Ports	<input type="checkbox"/> Port.01 <input type="checkbox"/> Port.02 <input type="checkbox"/> Port.03 <input type="checkbox"/> Port.04 <input type="checkbox"/> Port.05 <input type="checkbox"/> Port.06						
<input type="button" value="Add"/> <input type="button" value="Delete"/> <input type="button" value="Help"/>							

Multicast Filtering interface



Factory Default

Reset switch to Default configuration. Click  to reset all configurations to the Default value.

Factory Default


Please click **[Default]** button to restore factory default setting.

Keep current IP address setting
 Keep current username & password

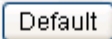

 

Factory Default interface

Save Configuration


Save all configurations that you have made in the system. To ensure the all configuration will be saved. Click  to save the all configuration to the flash memory.

Save Configuration

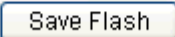Save Configuration interface

System Reboot

Reboot the switch in software reset. Click  to reboot the system.

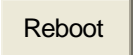System Reboot

Please click **[Reboot]** button to restart switch device.

Reboot

System Reboot interface

Troubleshooting

- Verify that is using the right power cord/adaptor (DC 24-48V), please don't use the power adapter with DC output higher than 48V, or it will burn this converter down.
- Select the proper UTP cable to construct user network. Please check that is using the right cable. use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100 Ω Category 3, 4 or 5 cable for 10Mbps connections or 100 Ω Category 5 cable for 100Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** the Switch can be easily monitored through panel indicators, which describes common problems users may encounter and where users can find possible solutions, to assist in identifying problems.
- If the power indicator does not light up when the power cord is plugged in, users may have a problem with power cord. Then check for loose power connections, power losses or surges at power outlet. If user still cannot resolve the problem, contact user local dealer for assistance.
- If the Industrial switch LED indicators are normal and the connected cables are correct but the packets still cannot transmit, please check user system's Ethernet devices' configuration or status.

Appendix A- Console Management

Connecting to the Console Port

The supplied cable which one end is RS-232 connector and the other end is RJ-45 connector. Attach the end of RS-232 connector to PC or terminal and the end of RJ-45 connector to the console port of the switch. The connected terminal or PC must support the terminal emulation program.

Login in the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following Default characteristics of the console port:


Baud Rate: 9600 bps

Data Bits: 8

Parity: none


Stop Bit: 1

Flow control: None

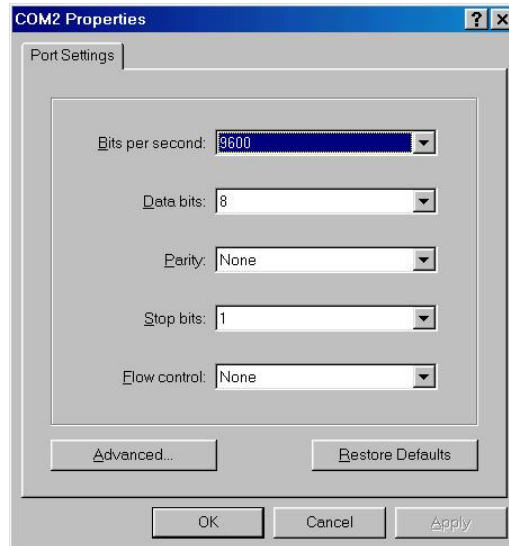

The settings of communication parameters

After finished the parameter settings, click “**OK**”. When the blank screen shows up, press Enter key to bring out the login prompt. Key in the “**root**”(Default value) for the both User name and Password (use **Enter** key to switch), then press Enter key and the Main Menu of console management appears. Please see below figure for login screen.

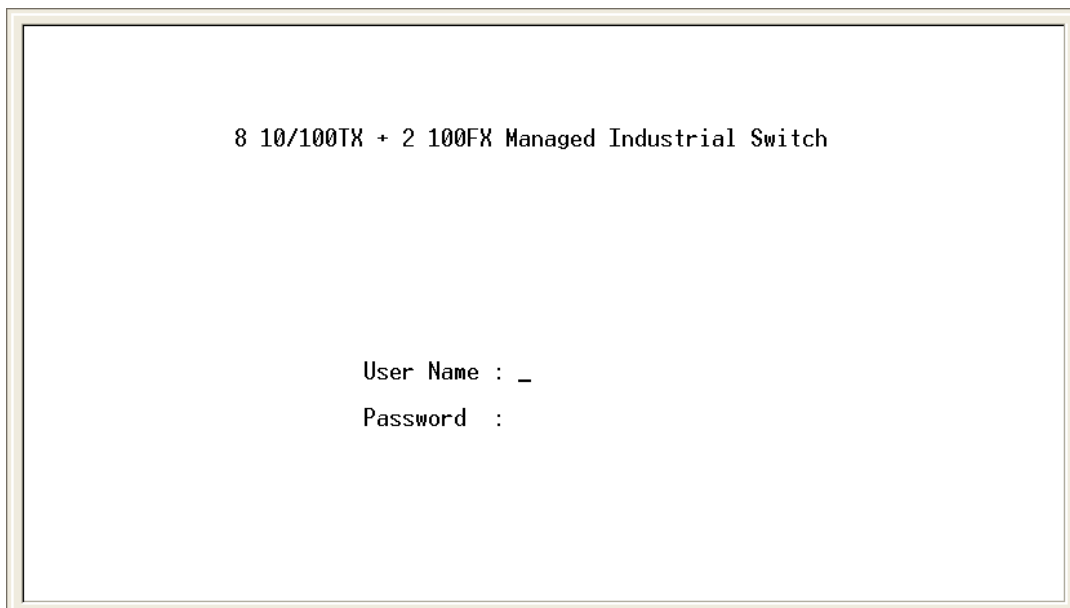

Console login interface

CLI Management

The system supports console management—CLI command. After you login to the system, you will see a command prompt. To enter CLI management interface, enter

“enable” command.

```
switch>enable
switch#_
```

CLI command interface

The following table lists the CLI commands and description.

Commands Level

Modes	Access Method	Prompt	Exit Method	About This Mode ¹
User EXEC	Begin a session with your switch.	switch>	Enter logout or quit.	The user commands available at the user level are a subset of those available at the privileged level. Use this mode to <ul style="list-style-type: none">• Perform basic tests.• Displays system information.
Privileged EXEC	Enter the enable command	switch#	Enter disable to exit.	The privileged command is advance mode

	while in user EXEC mode.			Privileged this mode to •Displays advance function status • Save configures
Global Configuration	Enter the configure command while in privileged EXEC mode.	switch (config)#	To exit to privileged EXEC mode, enter exit or end	Use this mode to configure parameters that apply to your switch as a whole.
VLAN database	Enter the vlan database command while in privileged EXEC mode.	switch (vlan)#	To exit to user EXEC mode, enter exit.	Use this mode to configure VLAN-specific parameters.
Interface configuration	Enter the interface command (with a specific interface) while in global configuration mode	switch (config-if)#	To exit to global configuration mode, enter exit. To exist to privileged EXEC mode, or end.	Use this mode to configure parameters for the switch and Ethernet ports.

Commands Set List

User EXEC **E**
Privileged EXEC **P**
Global configuration **G**
VLAN database **V**

System Commands Set

Commands	Level	Description	Example
show config	E	Show switch configuration	switch> show config
show terminal	P	Show console information	switch# show terminal
write memory	P	Save user configuration into permanent memory (flash rom)	switch# write memory
system name [System Name]	G	Configure system name	switch(config)# system name xxx
system location [System Location]	G	Set switch system location string	switch(config)# system location xxx
system description [System Description]	G	Set switch system description string	switch(config)# system description xxx
system contact [System Contact]	G	Set switch system contact window string	switch(config)# system contact xxx
show system-info	E	Show system information	switch> show system-info
ip address [Ip-address] [Subnet-mask] [Gateway]	G	Configure the IP address of switch	switch(config)# ip address 192.168.1.1 255.255.255.0 192.168.1.254
ip dhcp	G	Enable DHCP client function of switch	switch(config)# ip dhcp
show ip	P	Show IP information of switch	switch# show ip
no ip dhcp	G	Disable DHCP client function of switch	switch(config)# no ip dhcp
reload	G	Halt and perform a cold restart	switch(config)# reload

Default	G	Restore to Default	switch(config)# Default
admin username [Username]	G	Changes a login username. (maximum 10 words)	switch(config)# admin username xxxxxx
admin password [Password]	G	Specifies a password (maximum 10 words)	switch(config)# admin password xxxxxx
show admin	P	Show administrator information	switch# show admin
dhcpserver enable	G	Enable DHCP Server	switch(config)# dhcpserver enable
Dhcpserver disable	G	Disable DHCP Server	switch(config)# no dhcpserver
dhcpserver lowip [Low IP]	G	Configure low IP address for IP pool	switch(config)# dhcpserver lowip 192.168.1.100
dhcpserver highip [High IP]	G	Configure high IP address for IP pool	switch(config)# dhcpserver highip 192.168.1.200
dhcpserver subnetmask [Subnet mask]	G	Configure subnet mask for DHCP clients	switch(config)# dhcpserver subnetmask 255.255.255.0
dhcpserver gateway [Gateway]	G	Configure gateway for DHCP clients	switch(config)# dhcpserver gateway 192.168.1.254
dhcpserver dnsip [DNS IP]	G	Configure DNS IP for DHCP clients	switch(config)# dhcpserver dnsip 192.168.1.1
dhcpserver leasetime [Hours]	G	Configure lease time (in hour)	switch(config)# dhcpserver leasetime 1
dhcpserver ipbinding [IP address]	I	Set static IP for DHCP clients by port	switch(config)# interface fastEthernet 2 switch(config)# dhcpserver ipbinding 192.168.1.1
show dhcpserver configuration	P	Show configuration of DHCP server	switch# show dhcpserver configuration
show dhcpserver clients	P	Show client entries of DHCP server	switch# show dhcpserver clients
show dhcpserver ip-binding	P	Show IP-Binding information of DHCP server	switch# show dhcpserver ip- binding

no dhcpserver	G	Disable DHCP server function	switch(config)# no dhcpserver
security enable	G	Enable IP security function	switch(config)# security enable
security http	G	Enable IP security of HTTP server	switch(config)# security http
security telnet	G	Enable IP security of telnet server	switch(config)# security telnet
security ip [Index(1..10)] [IP Address]	G	Set the IP security list	switch(config)# security ip 1 192.168.1.55
show security	P	Show the information of IP security	switch# show security
no security	G	Disable IP security function	switch(config)# no security
no security http	G	Disable IP security of HTTP server	switch(config)# no security http
no security telnet	G	Disable IP security of telnet server	switch(config)# no security telnet

Port Commands Set

Commands	Level	Description	Example
interface fastEthernet [Portid]	G	Choose the port for modification.	switch(config)# interface fastEthernet 2
duplex [full half]	I	Use the duplex configuration command to specify the duplex mode of operation for Fast Ethernet.	switch(config)# interface fastEthernet 2 switch(config-if)# duplex full
speed [10 100 1000 auto]	I	Use the speed configuration	switch(config)# interface fastEthernet 2

		command to specify the speed mode of operation for Fast Ethernet., the speed can't be set to 1000 if the port isn't a giga port..	switch(config-if)# speed 100
no flowcontrol	I	Disable flow control of interface	switch(config-if)# no flowcontrol
security enable	I	Enable security of interface	switch(config)# interface fastEthernet 2 switch(config-if)# security enable
no security	I	Disable security of interface	switch(config)# interface fastEthernet 2 switch(config-if)# no security
bandwidth type all	I	Set interface ingress limit frame type to "accept all frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type all
bandwidth type broadcast-multicast-flooded-unicast	I	Set interface ingress limit frame type to "accept broadcast, multicast, and flooded unicast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-multicast-flooded-unicast
bandwidth type broadcast-multicast	I	Set interface ingress limit frame type to "accept broadcast and multicast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-multicast
bandwidth type broadcast-only	I	Set interface ingress limit frame type to "only accept broadcast frame"	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth type broadcast-only

bandwidth in [Value]	I	Set interface input bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth in 100
bandwidth out [Value]		Set interface output bandwidth. Rate Range is from 100 kbps to 102400 kbps or to 256000 kbps for giga ports, and zero means no limit.	switch(config)# interface fastEthernet 2 switch(config-if)# bandwidth out 100
show bandwidth	I	Show interfaces bandwidth control	switch(config)# interface fastEthernet 2 switch(config-if)# show bandwidth
state [Enable Disable]	I	Use the state interface configuration command to specify the state mode of operation for Ethernet ports. Use the disable form of this command to disable the port.	switch(config)# interface fastEthernet 2 (config-if)# state Disable
show interface configuration	I	show interface configuration status	switch(config)# interface fastEthernet 2 switch(config-if)# show interface configuration
show interface status	I	show interface actual status	switch(config)# interface fastEthernet 2

			(config-if)# show interface status
show interface accounting	I	show interface statistic counter	switch(config)# interface fastEthernet 2 (config-if)# show interface accounting
no accounting	I	Clear interface accounting information	switch(config)# interface fastEthernet 2 switch(config-if)# no accounting

Trunk Commands Set

Commands	Level	Description	Example
aggregator priority [1~65535]	G	Set port group system priority	switch(config)# aggregator priority 22
aggregator activityport [Group ID] [Port Numbers]	G	Set activity port	switch(config)# aggregator activityport 2
aggregator group [GroupID] [Port-list] lACP workp [Workport]	G	Assign a trunk group with LACP active. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6) [Workport]: The amount of work ports, this value could not be less than zero or be large than the amount of member ports.	switch(config)# aggregator group 1 1-4 lACP workp 2 or switch(config)# aggregator group 2 1,4,3 lACP workp 3

aggregator group [GroupID] [Port-list] nolacp	G	Assign a static trunk group. [GroupID] :1~3 [Port-list]:Member port list, This parameter could be a port range(ex.1-4) or a port list separate by a comma(ex.2, 3, 6)	switch(config)# aggregator group 1 2-4 nolacp or switch(config)# aggregator group 1 3,1,2 nolacp
show aggregator	P	Show the information of trunk group	switch# show aggregator 1 or switch# show aggregator 2 or switch# show aggregator 3
no aggregator lacp [GroupID]	G	Disable the LACP function of trunk group	switch(config)# no aggregator lacp 1
no aggregator group [GroupID]	G	Remove a trunk group	switch(config)# no aggregator group 2

VLAN Commands Set

Commands	Level	Description	Example
vlan database	P	Enter VLAN configure mode	switch# vlan database
Vlanmode [portbase 802.1q gvrp]	V	To set switch VLAN mode.	switch(vlan)# vlanmode portbase or switch(vlan)# vlanmode 802.1q or switch(vlan)# vlanmode gvrp
no vlan	V	No VLAN	Switch(vlan)# no vlan
Ported based VLAN configuration			
vlan port-based grpname	V	Add new port based VALN	switch(vlan)# vlan port-based grpname test grp id 2 port 2-4

[Group Name] grp [GroupID] id [PortNumbers]			or switch(vlan)# vlan port-based grpname test grp id 2 port 2,3,4
show vlan [GroupID] or show vlan	V	Show VLAN information	switch(vlan)# show vlan 23
no vlan group [GroupID]	V	Delete port base group ID	switch(vlan)# no vlan group 2
IEEE 802.1Q VLAN			
vlan 8021q name [GroupName] vid [VID]	V	Change the name of VLAN group, if the group didn't exist, this command can't be applied.	switch(vlan)# vlan 8021q name test vid 22
vlan 8021q port [PortNumber] access-link untag [UntaggedVID]	V	Assign a access link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 access-link untag 33
vlan 8021q port [PortNumber] trunk-link tag [TaggedVID List]	V	Assign a trunk link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 trunk-link tag 2,3,6,99 or switch(vlan)# vlan 8021q port 3 trunk-link tag 3-20
vlan 8021q port [PortNumber] hybrid-link untag [UntaggedVID] tag [TaggedVID List]	V	Assign a hybrid link for VLAN by port, if the port belong to a trunk group, this command can't be applied.	switch(vlan)# vlan 8021q port 3 hybrid-link untag 4 tag 3,6,8 or switch(vlan)# vlan 8021q port 3 hybrid-link untag 5 tag 6-8
vlan 8021q trunk [PortNumber] access-link untag [UntaggedVID]	V	Assign a access link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 access-link untag 33

vlan 8021q trunk [PortNumber] trunk-link tag [TaggedVID List]	V	Assign a trunk link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 trunk-link tag 2,3,6,99 or switch(vlan)# vlan 8021q trunk 3 trunk-link tag 3-20
vlan 8021q trunk [PortNumber] hybrid-link untag tag [UntaggedVID] [TaggedVID List]	V	Assign a hybrid link for VLAN by trunk group	switch(vlan)# vlan 8021q trunk 3 hybrid-link untag 4 tag 3,6,8 or switch(vlan)# vlan 8021q trunk 3 hybrid-link untag 5 tag 6-8
show vlan [GroupID] or show vlan	V	Show VLAN information	switch(vlan)# show vlan 23
no vlan group [GroupID]	V	Delete port base group ID	switch(vlan)# no vlan group 2

Spanning Tree Commands Set

Commands	Level	Description	Example
spanning-tree enable	G	Enable spanning tree	switch(config)# spanning-tree enable
spanning-tree priority [0~61440]	G	Configure spanning tree priority parameter	switch(config)# spanning-tree priority 32767
spanning-tree max-age [seconds]	G	Use the spanning-tree max-age global configuration command to change the interval between messages the spanning tree receives from the root switch. If a switch does not receive a bridge protocol data unit (BPDU) message from	switch(config)# spanning-tree max-age 15

		the root switch within this interval, it recomputed the Spanning Tree Protocol (STP) topology.	
spanning-tree hello-time [seconds]	G	Use the spanning-tree hello-time global configuration command to specify the interval between hello bridge protocol data units (BPDUs).	switch(config)# spanning-tree hello-time 3
spanning-tree forward-time [seconds]	G	Use the spanning-tree forward-time global configuration command to set the forwarding-time for the specified spanning-tree instances. The forwarding time determines how long each of the listening and learning states last before the port begins forwarding.	switch(config)# spanning-tree forward-time 20
stp-path-cost [1~200000000]	I	Use the spanning-tree cost interface configuration command to set the path cost for Spanning Tree Protocol (STP)	switch(config)# interface fastEthernet 2 switch(config-if)# stp-path-cost 20

		calculations. In the event of a loop, spanning tree considers the path cost when selecting an interface to place into the forwarding state.	
stp-path-priority [Port Priority]	I	Use the spanning-tree port-priority interface configuration command to configure a port priority that is used when two switches tie for position as the root switch.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-path-priority 128
stp-admin-p2p [Auto True False]	I	Admin P2P of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-p2p Auto
stp-admin-edge [True False]	I	Admin Edge of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-edge True
stp-admin-non-stp [True False]	I	Admin NonSTP of STP priority on this interface.	switch(config)# interface fastEthernet 2 switch(config-if)# stp-admin-non-stp False
show spanning-tree	E	Displays a summary of the spanning-tree states.	switch> show spanning-tree
no spanning-tree	G	Disable spanning-tree.	switch(config)# no spanning-tree

QOS Commands Set

Commands	Level	Description	Example
qos policy [weighted-fair strict]	G	Select QOS policy scheduling	switch(config)# qos policy weighted-fair
qos prioritytype [port-based cos-only tos-only cos-first tos-first]	G	Setting of QOS priority type	switch(config)# qos prioritytype
qos priority portbased [Port] [lowest low middle high]	G	Configure Port-based Priority	switch(config)# qos priority portbased 1 low
qos priority cos [Priority][lowest low middle high]	G	Configure COS Priority	switch(config)# qos priority cos 0 middle
qos priority tos [Priority][lowest low middle high]	G	Configure TOS Priority	switch(config)# qos priority tos 3 high
show qos	P	Displays the information of QoS configuration	Switch# show qos
no qos	G	Disable QoS function	switch(config)# no qos

IGMP Commands Set

Commands	Level	Description	Example
igmp enable	G	Enable IGMP snooping function	switch(config)# igmp enable
igmp query auto	G	Set IGMP query to auto mode	switch(config)# igmp query auto
igmp query enable	G	Set IGMP query to enable mode	switch(config)# igmp query enable
show igmp configuration	P	Displays the details of an IGMP configuration.	switch# show igmp configuration

show igmp multi	P	Displays the details of an IGMP snooping entries.	switch# show igmp multi
no igmp	G	Disable IGMP snooping function	switch(config)# no igmp
no igmp query	G	Disable IGMP query	switch# no igmp query

Mac / Filter Table Commands Set

Commands	Level	Description	Example
mac-address-table static hwaddr [MAC]	I	Configure MAC address table of interface (static).	switch(config)# interface fastEthernet 2 switch(config-if)# mac-address-table static hwaddr 000012345678
mac-address-table filter hwaddr [MAC]	G	Configure MAC address table(filter)	switch(config)# mac-address-table filter hwaddr 000012348678
show mac-address-table	P	Show all MAC address table	switch# show mac-address-table
show mac-address-table static	P	Show static MAC address table	switch# show mac-address-table static
show mac-address-table filter	P	Show filter MAC address table.	switch# show mac-address-table filter
no mac-address-table static hwaddr [MAC]	I	Remove an entry of MAC address table of interface (static)	switch(config)# interface fastEthernet 2 switch(config-if)# no mac-address-table static hwaddr 000012345678
no mac-address-table filter hwaddr [MAC]	G	Remove an entry of MAC address table (filter)	switch(config)# no mac-address-table filter hwaddr 000012348678
no mac-address-table	G	Remove dynamic entry of MAC address	switch(config)# no mac-address-table

		table	
multicast-filtering [IP-Addr]	I	Configure multicast filtering entry of interface	switch(config)# interface fastEthernet 2 switch(config-if)# multicast-filtering 228.1.1.1
no multicast-filtering [IP-Addr]	I	Remove multicast filtering entry of interface	switch(config)# interface fastEthernet 2 switch(config-if)# no multicast-filtering 228.1.1.1
show multicast-filtering	P	Show multicast filtering table.	switch# show multicast-filtering

SNMP Commands Set

Commands	Level	Description	Example
snmp system-name [System Name]	G	Set SNMP agent system name	switch(config)# snmp system-name I2switch
snmp system-location [System Location]	G	Set SNMP agent system location	switch(config)# snmp system-location lab
snmp system-contact [System Contact]	G	Set SNMP agent system contact	switch(config)# snmp system-contact where
snmp agent-mode [v1v2c v3 v1v2cv3]	G	Select the agent mode of SNMP	switch(config)# snmp agent-mode v1v2cv3
snmp community-strings [Community] right [RO/RW]	G	Add SNMP community string.	switch(config)# snmp community-strings public right rw
snmp-server host [IP address] community [Community-string] trap-version [v1 v2c]	G	Configure SNMP server host information and community string	switch(config)# snmp-server host 192.168.1.50 community public trap-version v1 (remove) Switch(config)# no snmp-server host 192.168.1.50

snmpv3 context-name [Context Name]	G	Configure the context name	switch(config)# snmpv3 context-name Test
snmpv3 user [User Name] group [Group Name] password [Authentication Password] [Privacy Password]	G	Configure the userprofile for SNMPV3 agent. Privacy password could be empty.	switch(config)# snmpv3 user test01 group G1 password AuthPW PrivPW
snmpv3 access context-name [Context Name] group [Group Name] security-level [NoAuthNoPriv AuthNoPriv AuthPriv] match-rule [Exact Prifix] views [Read View Name] [Write View Name] [Notify View Name]	G	Configure the access table of SNMPV3 agent	switch(config)# snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1
snmpv3 mibview view [View Name] type [Excluded Included] sub-oid [OID]	G	Configure the mibview table of SNMPV3 agent	switch(config)# snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1
show snmp	P	Show SNMP configuration	switch# show snmp
no snmp community-strings [Community]	G	Remove the specified community.	switch(config)# no snmp community-strings public

no snmp-server host [Host-address]	G	Remove the SNMP server host.	switch(config)# no snmp-server host 192.168.1.50
no snmpv3 user [User Name]	G	Remove specified user of SNMPv3 agent.	switch(config)# no snmpv3 user Test
no snmpv3 access context-name [Context Name] group [Group Name] security-level [NoAuthNoPriv AuthNoPriv AuthPriv] match-rule [Exact Prifix] views [Read View Name] [Write View Name] [Notify View Name]	G	Remove specified access table of SNMPv3 agent.	switch(config)# no snmpv3 access context-name Test group G1 security-level AuthPriv match-rule Exact views V1 V1 V1
no snmpv3 mibview view [View Name] type [Excluded Included] sub-oid [OID]	G	Remove specified mibview table of SNMPV3 agent.	switch(config)# no snmpv3 mibview view V1 type Excluded sub-oid 1.3.6.1

Port Mirroring Commands Set

Commands	Level	Description	Example
monitor rx	G	Set RX destination port of monitor function	switch(config)# monitor rx

monitor tx	G	Set TX destination port of monitor function	switch(config)# monitor tx
show monitor	P	Show port monitor information	switch# show monitor
monitor [RX TX Both]	I	Configure source port of monitor function	switch(config)# interface fastEthernet 2 switch(config-if)# monitor RX
show monitor	I	Show port monitor information	switch(config)# interface fastEthernet 2 switch(config-if)# show monitor
no monitor	I	Disable source port of monitor function	switch(config)# interface fastEthernet 2 switch(config-if)# no monitor

802.1x Commands Set

Commands	Level	Description	Example
8021x enable	G	Use the 802.1x global configuration command to enable 802.1x protocols.	switch(config)# 8021x enable
8021x system radiousip [IP address]	G	Use the 802.1x system radious IP global configuration command to change the radious server IP.	switch(config)# 8021x system radiousip 192.168.1.1
8021x system serverport [port ID]	G	Use the 802.1x system server port global configuration command to change the radious server port	switch(config)# 8021x system serverport 1815
8021x system accountport	G	Use the 802.1x system account port	switch(config)# 8021x system accountport 1816

[port ID]		global configuration command to change the accounting port	
8021x system sharekey [ID]	G	Use the 802.1x system share key global configuration command to change the shared key value.	switch(config)# 8021x system sharekey 123456
8021x system nasid [words]	G	Use the 802.1x system nasid global configuration command to change the NAS ID	switch(config)# 8021x system nasid test1
8021x misc quietperiod [sec.]	G	Use the 802.1x misc quiet period global configuration command to specify the quiet period value of the switch.	switch(config)# 8021x misc quietperiod 10
8021x misc txperiod [sec.]	G	Use the 802.1x misc TX period global configuration command to set the TX period.	switch(config)# 8021x misc txperiod 5
8021x misc supportimeout [sec.]	G	Use the 802.1x misc supp timeout global configuration command to set the supplicant timeout.	switch(config)# 8021x misc supportimeout 20
8021x misc servertimeout [sec.]	G	Use the 802.1x misc server timeout global configuration command to set the	switch(config)# 8021x misc servertimeout 20

		server timeout.	
8021x misc maxrequest [number]	G	Use the 802.1x misc max request global configuration command to set the MAX requests.	switch(config)# 8021x misc maxrequest 3
8021x misc reauthperiod [sec.]	G	Use the 802.1x misc reauth period global configuration command to set the reauth period.	switch(config)# 8021x misc reauthperiod 3000
8021x portstate [disable reject accept authorize]	I	Use the 802.1x port state interface configuration command to set the state of the selected port.	switch(config)# interface fastethernet 3 switch(config-if)# 8021x portstate accept
show 8021x	E	Displays a summary of the 802.1x properties and also the port sates.	switch> show 8021x
no 8021x	G	Disable 802.1x function	switch(config)# no 8021x

TFTP Commands Set

Commands	Level	Description	Defaults Example
backup flash:backup_cfg	G	Save configuration to TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# backup flash:backup_cfg
restore flash:restore_cfg	G	Get configuration from TFTP server and need to	switch(config)# restore flash:restore_cfg

		specify the IP of TFTP server and the file name of image.	
upgrade flash:upgrade_fw	G	Upgrade firmware by TFTP and need to specify the IP of TFTP server and the file name of image.	switch(config)# upgrade lash:upgrade_fw

SystemLog, SMTP and Event Commands Set

Commands	Level	Description	Example
systemlog ip [IP address]	G	Set System log server IP address.	switch(config)# systemlog ip 192.168.1.100
systemlog mode [client server both]	G	Specified the log mode	switch(config)# systemlog mode both
show systemlog	E	Displays system log.	Switch> show systemlog
show systemlog	P	Show system log client & server information	switch# show systemlog
no systemlog	G	Disable systemlog functon	switch(config)# no systemlog
smtp enable	G	Enable SMTP function	switch(config)# smtp enable
smtp serverip [IP address]	G	Configure SMTP server IP	switch(config)# smtp serverip 192.168.1.5
smtp sender [sender name]	G	Configure sender of mail	switch(config)# smtp sender aaa@bbb.ccc
smtp authentication	G	Enable SMTP authentication	switch(config)# smtp authentication
smtp account [account]	G	Configure authentication account	switch(config)# smtp account User
smtp password [password]	G	Configure authentication password	switch(config)# smtp password

smtp rcptemail [Index] [Email address]	G	Configure Rcpt e-mail Address	switch(config)# smtp rcptemail 1 Alert@test.com
show smtp	P	Show the information of SMTP	switch# show smtp
no smtp	G	Disable SMTP function	switch(config)# no smtp
event device-cold-start [Systemlog SMTP Both]	G	Set cold start event type	switch(config)# event device-cold-start both
event authentication-failure [Systemlog SMTP Both]	G	Set Authentication failure event type	switch(config)# event authentication-failure both
event ring-topology-change [Systemlog SMTP Both]	G	Set X-ring topology changed event type	switch(config)# event ring-topology-change both
event systemlog [Link-UP Link-Down Both]	I	Set port event for system log	switch(config)# interface fastethernet 3 switch(config-if)# event systemlog both
event smtp [Link-UP Link-Down Both]	I	Set port event for SMTP	switch(config)# interface fastethernet 3 switch(config-if)# event smtp both
show event	P	Show event selection	switch# show event
no event device-cold-start	G	Disable cold start event type	switch(config)# no event device-cold-start
no event authentication-failure	G	Disable Authentication failure event typ	switch(config)# no event authentication-failure
no event ring-topology-change	G	Disable X-ring topology changed event type	switch(config)# no event ring-topology-change
no event systemlog	I	Disable port event for system log	switch(config)# interface fastethernet 3 switch(config-if)# no event systemlog

no event smtp	I	Disable port event for SMTP	switch(config)# interface fastethernet 3 switch(config-if)# no event smtp
show systemlog	P	Show system log client & server information	switch# show systemlog

SNTP Commands Set

Commands	Level	Description	Example
sntp enable	G	Enable SNTP function	switch(config)# sntp enable
sntp daylight	G	Enable daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp daylight
sntp daylight-period [Start time] [End time]	G	Set period of daylight saving time, if SNTP function is inactive, this command can't be applied. Parameter format: [yyyymmdd-hh:mm]	switch(config)# sntp daylight-period 20060101-01:01 20060202-01-01
sntp daylight-offset [Minute]	G	Set offset of daylight saving time, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp daylight-offset 3
sntp ip [IP]	G	Set SNTP server IP, if SNTP function is inactive, this command can't be applied.	switch(config)# sntp ip 192.169.1.1
sntp timezone	G	Set timezone index,	switch(config)# sntp timezone 22

[Timezone]		use “show sntp timzezone” command to get more information of index number	
show sntp	P	Show SNTP information	switch# show sntp
show sntp timezone	P	Show index number of time zone list	switch# show sntp timezone
no sntp	G	Disable SNTP function	switch(config)# no sntp
no sntp daylight	G	Disable daylight saving time	switch(config)# no sntp daylight

Ring Commands Set

Commands	Level	Description	Example
ring enable	G	Enable X-ring	switch(config)# ring enable
ring master	G	Enable ring master	switch(config)# ring master
ring couplering	G	Enable couple ring	switch(config)# ring couplering
ring dualhoming	G	Enable dual homing	switch(config)# ring dualhoming
ring ringport [1st Ring Port] [2nd Ring Port]	G	Configure 1st/2nd Ring Port	switch(config)# ring ringport 7 8
ring couplingport [Coupling Port]	G	Configure Coupling Port	switch(config)# ring couplingport 1
ring controlport [Control Port]	G	Configure Control Port	switch(config)# ring controlport 2
ring homingport [Dual Homing Port]	G	Configure Dual Homing Port	switch(config)# ring homingport 3
show ring	P	Show the information of X - Ring	switch# show ring
no ring	G	Disable X-ring	switch(config)# no ring
no ring master	G	Disable ring master	switch(config)# no ring master

no ring couplering	G	Disable couple ring	switch(config)# no ring couplering
no ring dualhoming	G	Disable dual homing	switch(config)# no ring dualhoming

LLDP Command Set

Commands	Level	Description	Example
lldp enable	G	Enable LLDP function	switch(config)# lldp enable
lldp interval [TIME sec]	G	Configure LLDP interval	switch(config)# lldp interval 10
no lldp	G	Disable LLDP function	switch(config)# no lldp
show lldp	P	Show LLDP function	switch# show lldp