


VariQuest™

Cutout Maker 1800

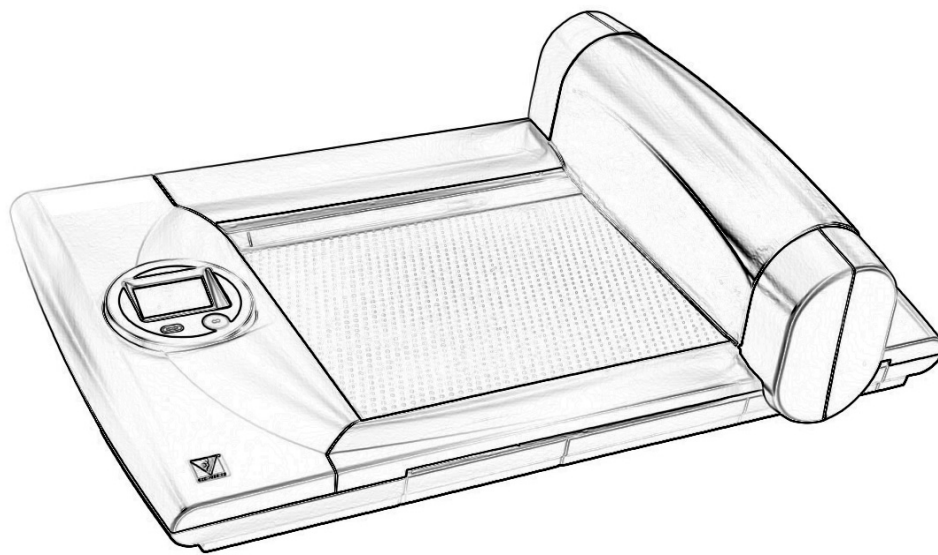

User's Guide

Copyright

This manual is copyrighted with all rights reserved. No portion of this manual may be copied or reproduced by any means without the prior consent of Brady Worldwide, Inc.

While every precaution has been taken in preparation of this document, Brady assumes no liability to any party for any loss or damage caused by errors or omissions or by statements resulting from negligence, accident or any other cause. Brady further assumes no liability for incidental or consequential damages arising from the use of this document. Brady disclaims all warranties of merchantability or fitness for a particular purpose.

Brady reserves the right to make changes without further notice to any product or system herein to improve reliability, function or design.

Reproduction of this material, in part or whole, is strictly prohibited without the written permission of Brady Worldwide, Inc. For more information contact: Varitronics® at 6835 Winnetka Circle, Brooklyn Park, Minnesota 55428 USA

Trademarks

Varitronics is a registered trademark of Brady Worldwide, Inc. VariQuest is a trademark of Brady Worldwide, Inc.

All other brand or product names referenced in this manual are trademarks or registered trademarks of their respective companies or organizations.

Standard Warranty

Brady Worldwide, Inc., through its Varitronics® business unit, warrants the equipment and accessories comprising the VariQuest™ Cutout Maker1800 will be free from defects in material and workmanship for one (1) year from the date of customer purchase. Original serial number must appear on product. Removal of serial numbers will void this warranty and any equipment and accessories that have been altered or modified in any way and are not as originally purchased will void this warranty.

Varitronics will at its option repair, replace or refund the purchase price of any accessories, supplies or equipment found to be defective under this warranty. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

In the event of breach of this expressed warranty, or any other warranty, whether expressed or implied, Varitronics liability shall be limited to the remedy provided by the preceding paragraph. IN NO EVENT WILL VARITRONICS BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, NOR WILL VARITRONICS EVER BE LIABLE FOR BREACH OF WARRANTY, WHETHER EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF THE MERCHANTABILITY OR FITNESS, IN AN AMOUNT GREATER THAN THE PURCHASE PRICE OF THE PRODUCTS DESCRIBED BY THIS EXPRESSED WARRANTY. No agent, distributor, salesperson, wholesaler or retail dealer has authority to bind Varitronics to any other affirmation, representation or warranty concerning these goods.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

EMC (Electromagnetic Compatibility Notice)

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Safety Information

The instructions in this manual have been labeled with various types of caution and warning messages. The symbols preceding these messages indicate information that must be followed to avoid damage to property or injury to users of the Cutout Maker or people in the vicinity of the Cutout Maker.

The degrees of damage or injury that may result from failing to properly follow the instructions in this manual are classified as follows:



Different types of instructions are labeled with the following symbols (other symbols are also used in this manual):



- Instructions labeled with this symbol must **ALWAYS** be followed. An explanatory illustration will accompany the symbol.



- Instructions labeled with this symbol are warnings against actions that should **NEVER** be taken. An explanatory illustration will accompany the symbol.

 **WARNING**



- **Connect The Cutout Maker to a 120V power source ONLY.**
Connecting to a power source of any other voltage may result in fire or electrical shock.
- **Do not damage, crease or fold the power cord.**
Altering the power cord, placing heavy objects on it or allowing it to become damaged, creased or folded may result in fire or electrical shock.
- **Do not connect the Cutout Maker to a two-way or multiple-way extension cord.**
Doing so may result in fire or electrical shock.
- **Never insert or remove the power plug with wet hands.**
Doing so may result in electrical shock.
- **Do not remove the gantry cover or base shroud from the Cutout Maker.**
Doing so may result in electrical shock.



- **Always hold the plug firmly when removing it from the power socket. Do not simply pull on the cord.**
Pulling on the cord to remove the plug from the power socket or applying excessive force when doing so may damage the cord, which may in turn result in fire or electrical shock.
- **If the Cutout Maker overheats, emits smoke, or gives off an unusual odor, turn off the power switch immediately and remove the plug from the power socket.**
If these problems occur, contact your Cutout Maker dealer. Continuing to use the Cutout Maker after such problems occur, may result in fire or electrical shock.
- **If metal objects, water, or other liquids get inside the unit, turn off the power switch immediately and remove the plug from the power socket.**
If this problem occurs, contact your Cutout Maker dealer. Continuing to use the Cutout Maker after this problem occurs, may result in fire or electrical shock.



- **Always be sure the Cutout Maker is properly grounded.**
Failing to do so may cause power leakages, which may in turn result in fire or electrical shock. If for some reason you are unable to ground the unit, contact your Cutout Maker dealer for instructions.



- **Never disassemble or modify the Cutout Maker.**
Doing so may result in fire or electrical shock. If the Cutout Maker breaks down, turn off the power switch, remove the plug from the power socket and contact your Cutout Maker dealer.

This page intentionally left blank

Table of Contents

Copyright	ii
Trademarks	ii
Standard Warranty	iii
Safety Information	iv
Cutout Maker Features, Accessories and Materials	1-1
Cutout Maker Features	1-2
System Accessories	1-3
Cutout Maker Materials	1-4
VariQuest™ Cutout Maker Paper Classifications	1-4
Determining Classifications for Unspecified Paper Types	1-4
Cutout Maker Components and Specifications	2-1
Cutout Maker Components	2-2
Perspective View	2-2
Side View	2-3
Control Panel	2-4
Specifications	2-5
Getting Started	3-1
Unpacking and Positioning the Cutout Maker	3-2
Unpacking the Cutout Maker	3-2
Verifying Package Contents	3-2
Positioning the Cutout Maker	3-3
Setting Up the Cutout Maker	3-4
Connecting the Power Cord	3-4
Connecting to the Variquest™ Design Center 1000 or a Personal Computer	3-5
Operating the Cutout Maker	4-1
Loading Material on the Cutout Maker	4-2
Typical Operating Sequence	4-3
Maintenance	5-1
Maintenance Summary	5-2
Replacing the Cutter Blade	5-3
Replacing the Cutting Mat	5-7
Oil Gantry Rails	5-10
Troubleshooting	6-1
Troubleshooting Process	6-2
Troubleshooting Tips	6-2
Cutout Maker Troubleshooting	6-3
Cutout Maker Error Codes	6-4
Having the Cutout Maker Serviced	6-5


This page intentionally left blank.

Cutout Maker Features, Accessories and Materials

This chapter provides an overview of the VariQuest™ Cutout Maker1800 features, accessories and materials.

The chapter contains these sections:


- “Cutout Maker Features” on page 1-2
- “System Accessories” on page 1-3
- “Cutout Maker Materials” on page 1-4
 - “Variquest™ Cutout Maker Paper Classifications” on page 1-4
 - “Determining Classifications for Unspecified Paper Types” on page 1-4

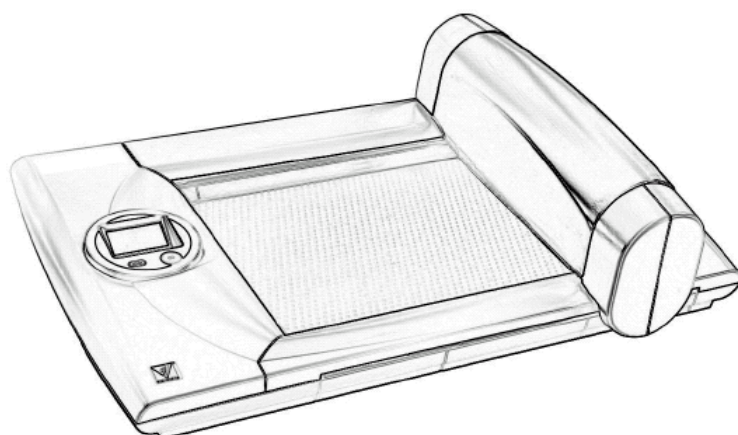

VariQuest™ Cutout Maker 1800

Cutout Maker Features

- The Cutout Maker is designed to allow even first-time users to quickly produce high quality cutout shapes from sheets of construction paper and other available materials.
- You can easily create single or multiple cutouts using VariQuest™ Design Center Software.
- A two-button control panel with an LCD display is provided for controlling the Cutout Maker and displaying status and error messages.
- Choose from a variety of types and sizes of materials. VariQuest™ Design Center Software provides automatic setup selections for fonts, shapes and collections.

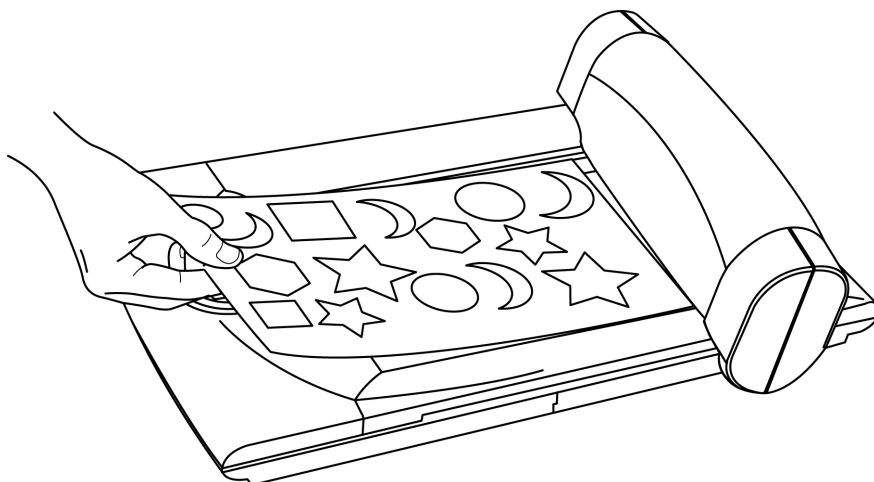


With the VariQuest™ Cutout Maker and VariQuest™ Design Center Software, you can produce cutout shapes in every imaginable design.

System Accessories

The Cutout Maker comes with a Maintenance Kit that contains:

- Blades (5-pack)
- Blade/Chad Removal Tool
- Tweezers
- Tool Storage Pouch

Upon completion of the registration form, the customer will receive a 20-credit Shape CD.

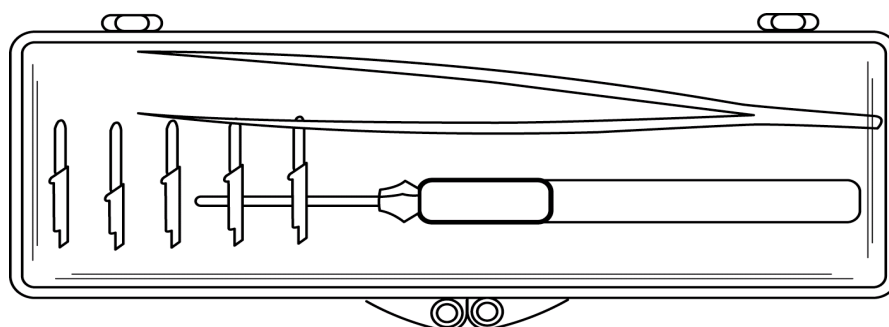

Cutout Maker Maintenance Kit

Cutout Maker Materials



CAUTION

Use of material other than that specified for use with the Cutout Maker may result in poor cut quality and damage to the blade.

There is no direct correlation between paper weight and the classification of paper as “light weight” or “heavy weight” among manufacturers of construction paper. Due to the large variation of paper classifications, Variquest™ Cutout Maker Paper is defined as listed below.

Variquest™ Cutout Maker Paper Classifications

- Light construction paper: 40-50 lbs.
- Heavy construction paper: 60-80 lbs.
- Cold laminated light construction paper: 40-50 lbs. light construction paper + the VariQuest™ Cold Laminator 1200's dual-sided laminate.
- Cold laminated heavy construction paper: 60-80 lbs. heavy construction paper + the VariQuest™ Cold Laminator 1200's dual-sided laminate.
- Cardstock: 80-100 lbs.
- Bond (copier) paper: 20 lbs.

Determining Classifications for Unspecified Paper Types

Refer to the following tables to determine the paper weight for unspecified paper types. These tables will help determine if you have light or heavy construction paper. Weight measurements are determined by a scale based on number of sheets and size of paper.

Light Weight Construction Paper				
	9"x12"	12"x18"	18"x24"	24"x36"
100 sheets	1-1.3 lbs	2-2.5 lbs	4-5 lbs	8-10 lbs
500 sheets	5-6.3 lbs	10-12.5 lbs	20-25 lbs	40-50 lbs

Heavy Weight Construction Paper				
	9"x12"	12"x18"	18"x24"	24"x36"
100 sheets	1.5-2 lbs	3-4 lbs	6-8 lbs	12-16 lbs
500 sheets	7.5-10 lbs	15-20 lbs	30-40 lbs	60-80 lbs

Cutout Maker Components and Specifications


This chapter shows the locations of the major VariQuest™ Cutout Maker 1800 components and provides detailed system specifications.

The chapter contains these sections:


- “Cutout Maker Components” on page 2-2
 - “Perspective View” on page 2-2
 - “Side View” on page 2-3
 - “Control Panel” on page 2-4
- “Specifications” on page 2-5

Cutout Maker Components

Perspective View

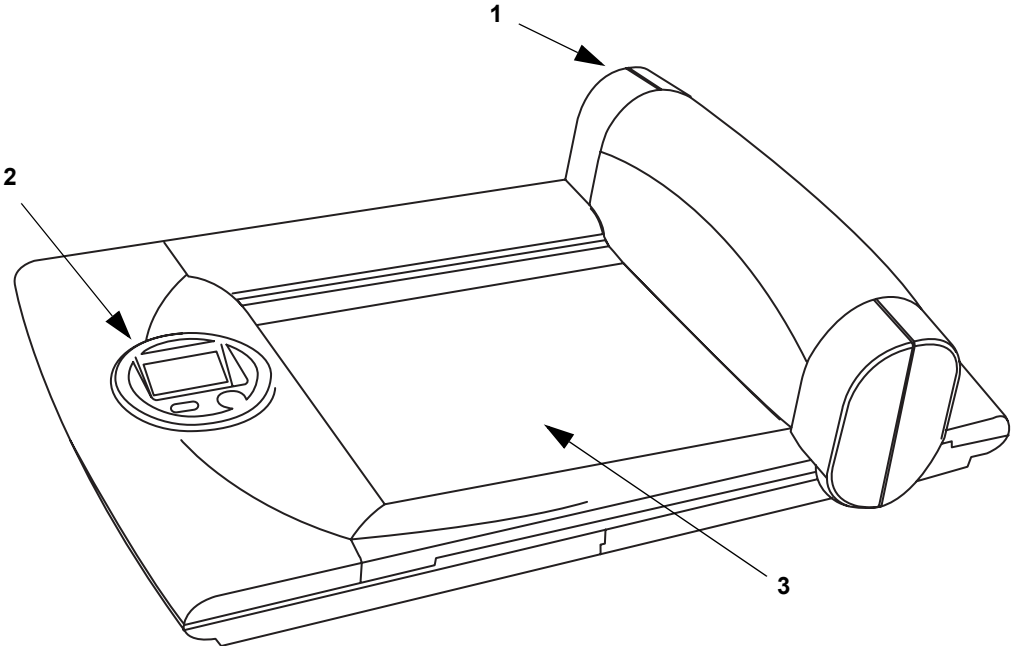


Gantry Cover Open

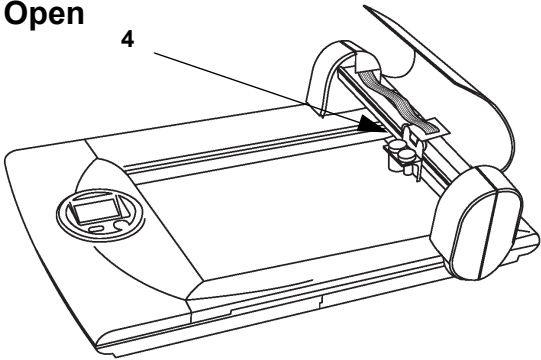

No.	Name
1	Gantry
2	Control Panel
3	Cutter Bed
4	Blade Holder Assembly

Side View

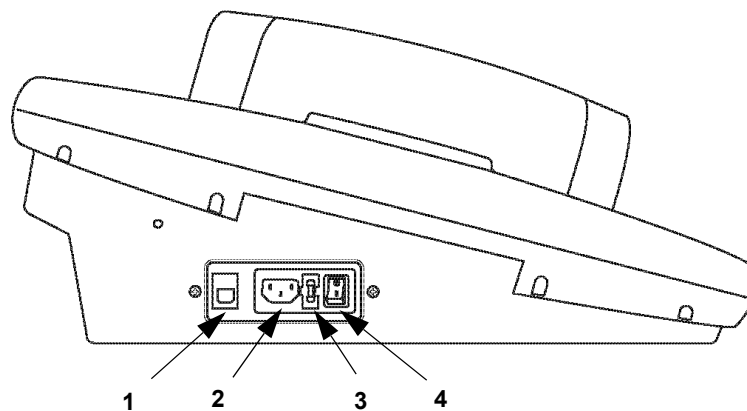


No.	Name
1	USB Cable Receptacle
2	AC Power Cord Receptacle
3	DC Power Supply Fuse (2 Amp)
4	OFF (0) ON (1) Power Switch

Control Panel

The control panel provides buttons to manually start and stop cutter operation. Pressing the GO button starts the cutter when all the software selections are completed and the LCD display indicates a "Ready" condition exists. Pressing the stop button retracts the cutter blade and pauses the cutter operation. Pressing the GO button restarts the cutter operation from the point at which it paused. Pressing the stop button a second time without pressing the GO button clears the cutter operation, retracts the cutter blade and sends the cutter blade back to the home position.

The LCD Display shows the status of the operation underway and/or shows the error that caused the operation to stop.

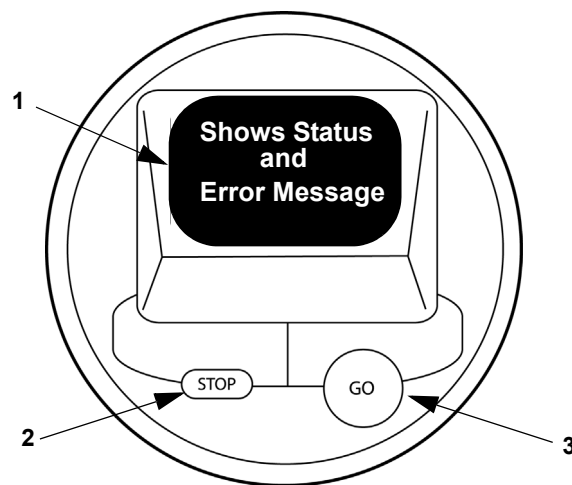

No.	Name	Description
1	Message display	Lists cut job status (cutting, pause, error, etc.). Shows the options currently selected. Displays error messages and instructions.
2	"STOP" button	Pauses the cut job currently in process. Pressing "stop" while a job is paused cancels the job.
3	"GO" button	Starts the cut job selected.

Specifications



Cutout Maker 1800

Technical Data Sheet

Output

- Maximum cutout size: 11-1/2" x 17-1/2"; up to 2' x 3' when tiling
- Minimum scrap size: 4" x 6" (101.6 mm x 152.4 mm)

Machine

- Display: 4 line, 16 characters LCD graphical display
- Cutting speed: up to 6" per second (simple shapes)
- USB port: 1
- Dimensions: 33" W x 21.5" D x 12.5" H
- Weight (machine only): 41.4 lbs
- Weight (machine in its package): 55 lbs
- Ability to cut as well as perforate construction paper

Materials

- Types of materials tested & qualified: Construction paper, cold laminated construction paper, cardstock, and bond paper
- Sizes of materials: standard construction paper 9"x12" (228.6 mm x 304.8 mm) and 12" x 18" (304.8 mm x 457.2 mm); other standard size: 8-1/2"x11" (215.9 mm x 279.4 mm)

Electrical Characteristics

- Input current: 1.7 Amps
- Input voltages: 100-240 VAC
- Input frequency: 50-60 Hz
- Max Output Power: 100 W
- Interface: USB

Environmental Characteristics

- Operational requirements: ambient temperature 32°F to 122°F (0°C to 50°C); relative humidity: 20%-80% (non-condensing)
- Storage requirements: ambient temperature 0°F to 140°F (18°C to 60°C); relative humidity: 10% - 95% (non-condensing)

Agency Approvals

- UL, CUL Listed to UL/CSA 60950-1:2003
- Meets FCC – CFR 47, part 15, Subpart B, class A emissions limit
- Meets Canadian standard ICES-003, Issue 4:2004, class A emission limits

Other

- Manufactured in the USA

The information provided in this Technical Data Sheet indicates performance under normal conditions. It is intended only as a source of information without guarantee and does not constitute a warranty. Purchasers may need to independently determine the suitability of these products for their specific purpose.

All brand or product names used on this sheet are trademarks or registered trademarks of their respective companies or organizations. As part of our continuous improvement, we reserve the right to change this Technical Data Sheet without notice.

This page intentionally left blank.

Getting Started

This chapter provides instructions for unpacking and setting up the VariQuest™ Cutout Maker 1800. Keep this guide near the Cutout Maker so it can be available for reference.


The chapter contains these sections:

- “Unpacking and Positioning the Cutout Maker” on page 3-2
 - “Unpacking the Cutout Maker” on page 3-2
 - “Verifying Package Contents” on page 3-2
 - “Positioning the Cutout Maker” on page 3-3
- “Setting up the Cutout Maker” on page 3-4
 - “Connecting the Power Cord” on page 3-4
 - “Connecting to the VariQuest™ Design Center 1000 or a Personal Computer” on page 3-5

Unpacking and Positioning the Cutout Maker

Unpacking the Cutout Maker

The Cutout Maker and accessories are packed in a cardboard carton with foam padding for protection during shipment. Carefully unpack the items and keep the packing materials. If you need to ship the Cutout Maker in the future, repack the system as shown below.

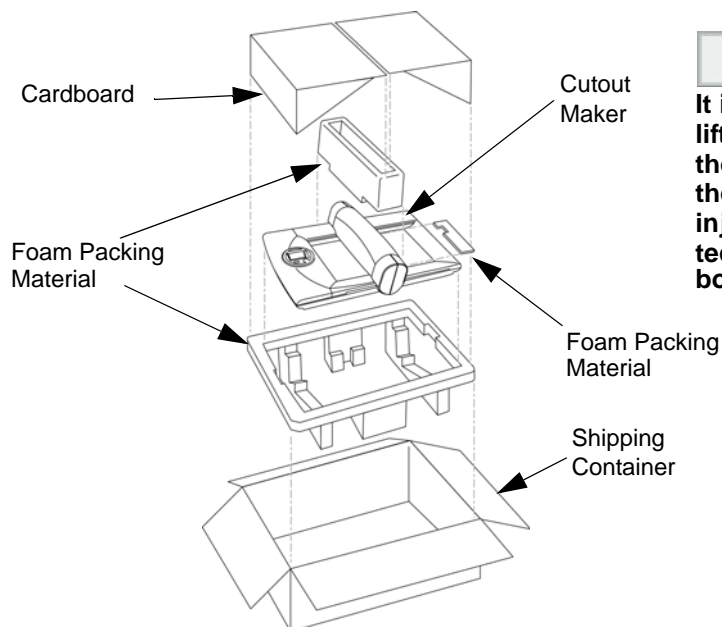


CAUTION

It is recommend that 2 people lift the Cutout Maker from the box due to the weight of the unit. To avoid personal injury, use proper lifting techniques when lifting from box.


Verifying Package Contents

After unpacking, verify that all of the following items have been included in the Cutout Maker box:

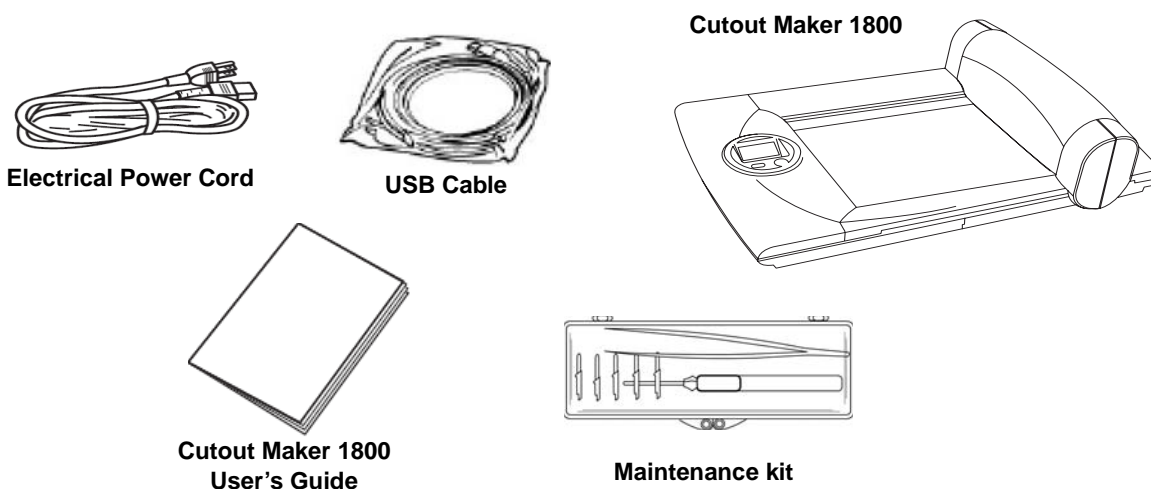

Positioning the Cutout Maker

To ensure proper functioning of the Cutout Maker on a work space, allow adequate space around the system as shown below.

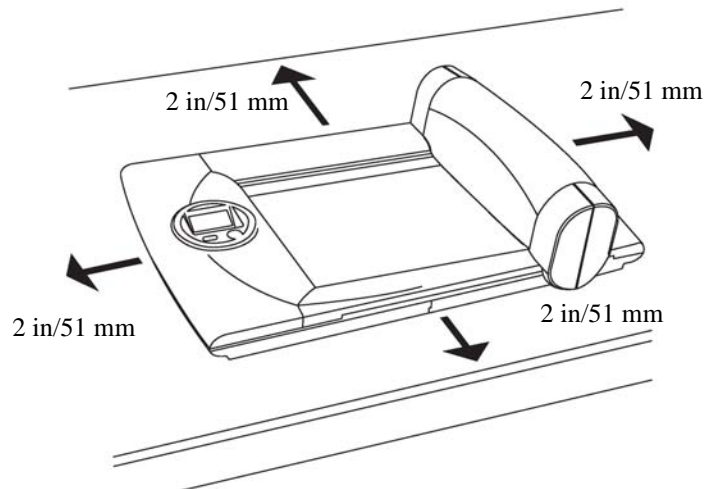

Setting up the Cutout Maker

Connecting the Power Cord



WARNING

Never operate the Cutout Maker in an area where it can get wet




CAUTION

Always connect the power cord to the Cutout Maker before inserting the plug into a wall socket

Connect the power cord to the Cutout Maker. Then insert the power plug into a grounded three-prong wall socket:

1. Set the power switch to its “0” (OFF) position.
2. The power cord has a three-prong female connector on one end that must be inserted into the male power receptacle on the left side of the Cutout Maker.
3. Plug the other end of the cord into an appropriate AC outlet.

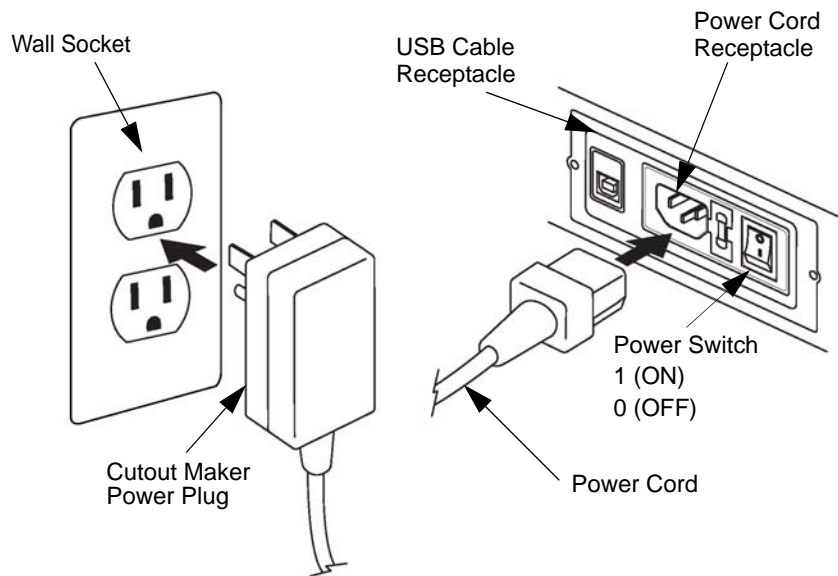


Connecting to the VariQuest™ Design Center 1000 or a Personal Computer

Important!

Use the USB cable supplied with the Cutout Maker to connect to the VariQuest™ Design Center 1000 or a PC. The USB cable complies with FCC “Rules and Regulations,” Part 15 for Class A Equipment using fully shielded six-foot data cables. Use of longer cables or unshielded cables may increase radiation emissions above the Class A limits. The power cord must be inserted into the receptacle on the side of the Cutout Maker before connecting the communication cables.


Connecting to a VariQuest™ Design Center 1000

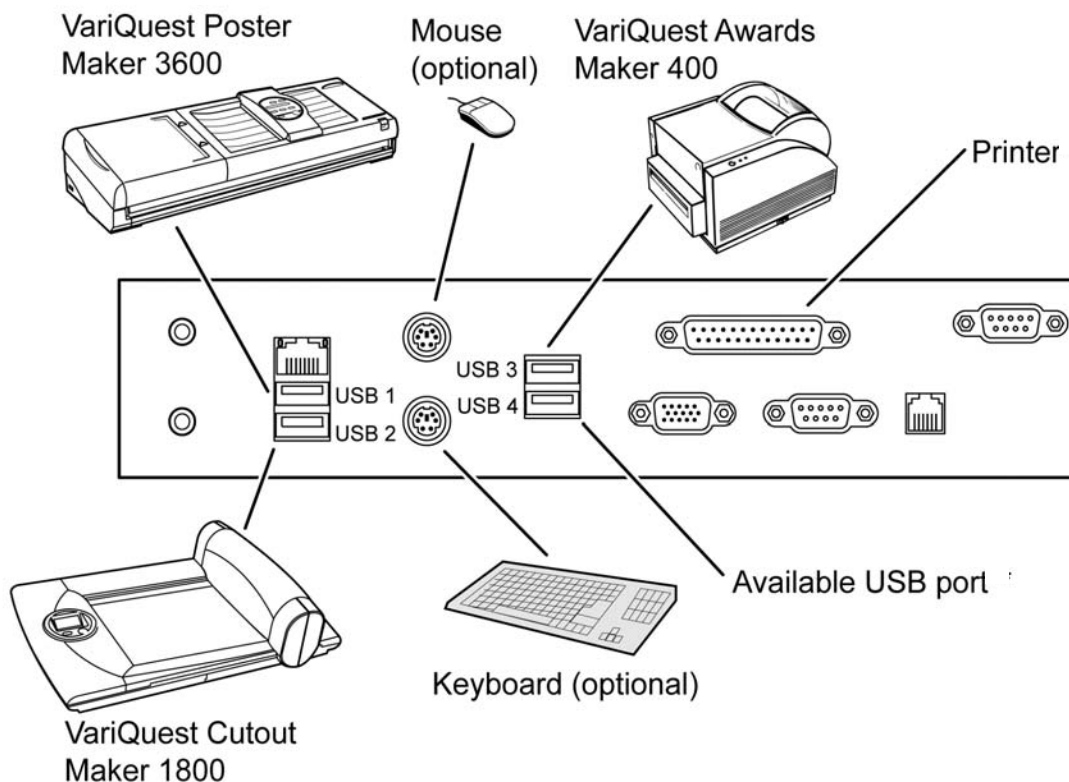

Connecting to a Personal Computer

The Cutout Maker provides a standard interface for connecting to a computer (USB connector). Connect one end of the cable provided to an available USB connector on the computer, and connect the remaining end to the USB connector on the Cutout Maker. Power up the Cutout Maker and the computer, and install the VariQuest™ Design Center Software.

Note: Refer to the separate VariQuest™ Design Center 1000 User's Guide for software Installation

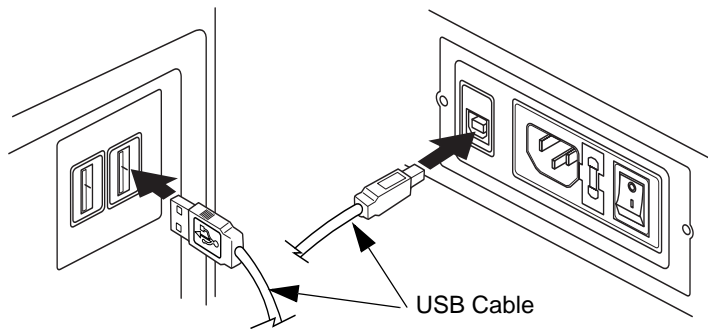

Operating the Cutout Maker

This chapter provides instructions for operating the Cutout maker.

The chapter contains these sections:

- “Loading Material on the Cutout Maker” on page 4-2
- “Typical Operating Sequence” on page 4-3


Loading Material on the Cutout Maker

Before loading material on the VariQuest™ Cutout Maker 1800, you must choose the appropriate material type in the VariQuest™ Design Center Software. This software is installed on the VariQuest™ Design Center 1000 or on your PC. When you select the material type in the software, the Cutout maker adjusts the output settings (blade depth, force and cutting speed) accordingly. After you have selected the material type and prepared your cut job, the control panel will instruct you to load the appropriate material on the Cutout Maker.

If you experience poor cut quality, you can adjust the material settings and increase or decrease the blade depth. Adjust this blade setting only if the blade does not cut completely through the material or cuts too deeply into the mat.

- See the VariQuest™ Design Center 1000 Software User's Guide for detailed instructions for software setup.
- Ensure the material is loaded as shown below for proper operation of the unit. The paper must lay flat on the bed, and the top left corner must be flush with the guides on the Cutout Maker.

Note: For laminated construction paper, smaller scrap sizes may move on the cutting mat. If this occurs, you may need to use a piece of larger scrap size, or the movement may be corrected by placing another piece of paper next to the paper you are cutting to increase vacuum.

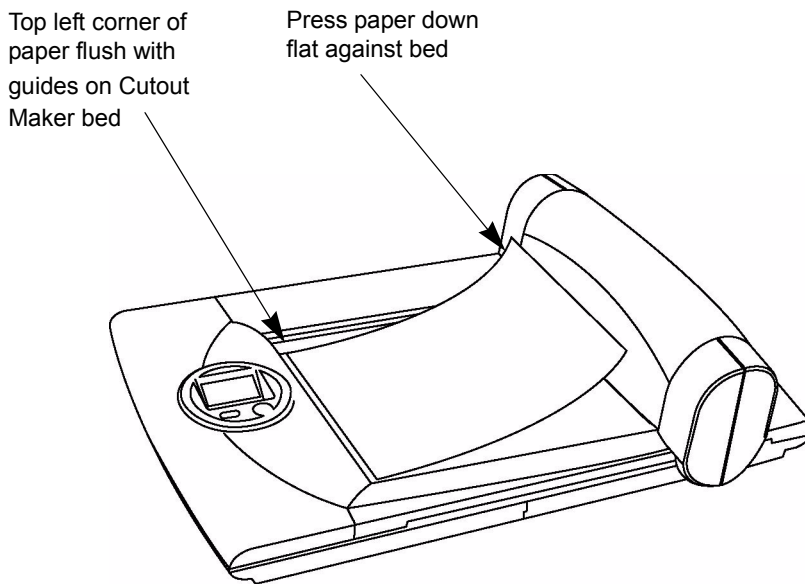

Typical Operating Sequence

Important: The VariQuest™ Cutout Maker 1800 can be used only with the VariQuest™ Design Center Software. The VariQuest™ Design Center Software is installed on your VariQuest™ Design Center 1000 PC. See the separate manual for VariQuest™ Design Center Software user information.

After you have set up the cutout materials as described in “Loading Material on the Cutout Maker” on page 4-2, the Cutout Maker control panel will display instructions similar to the following example.

Operating Example


Load Cutout Material

1. Position the material on the Cutout Maker. Make sure that the top left corner is flush with the guides on the Cutout Maker bed.
2. Press “GO”.


Smooth Paper/Start Cut Job

1. Smooth the paper on the cutting mat.
NOTE: Smoothing paper on the cutting mat ensures a clean cut.
2. Press “GO” to start the cut job. Once cutting is complete, you can remove your cutout from the cutting bed.

Load Cutout Material

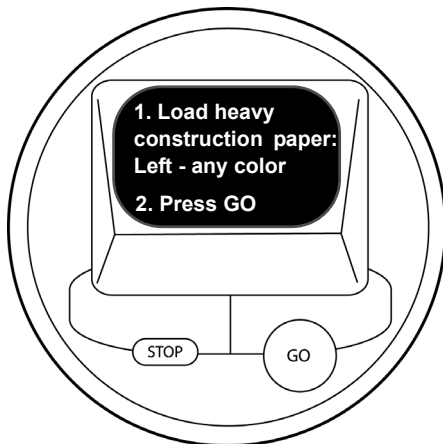

Smooth Paper/Start Cut Job

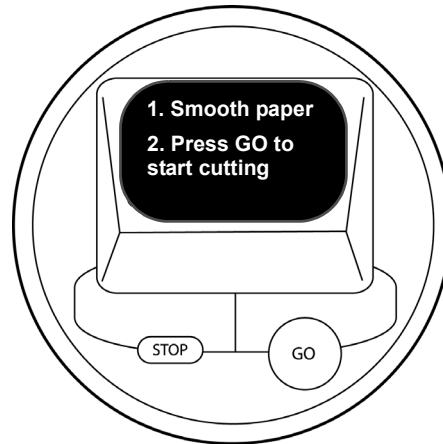

This page intentionally left blank.

Maintenance

This Chapter describes the periodic maintenance procedures required during normal operation of the Cutout maker.

The chapter contains these sections:


- “Maintenance Summary” on page 5-2
 - Clean mat
 - Change blade
 - Change mat
 - Oil gantry rails
- “Replacing the Cutting Blade” on page 5-3
- “Replacing the Cutting Mat” on page 5-7
- “Oil Gantry Rails” on page 5-10

Maintenance Summary


Maintenance	Occurrence	Reason for Maintenance	Description
Clean mat with Isopropyl Alcohol (IPA)	Weekly or as needed	Material to be cut moves while being cut.	Use IPA and a lint-free cloth. Turn power off. Apply IPA to cloth and wipe. Mat should be slightly tacky when rubbed with the bare hand.
Change blade	Monthly or as needed	Cut-outs exhibit an unacceptable amount of tears.	Turn power off, lift gantry cover, rotate cutter head, eject blade, insert new blade, turn power on. Blade should retract. Return cutter head to the upright position, close gantry cover. See "Replacing the Cutting Blade" on page 5-3.
Change mat	Yearly	Material to be cut moves while being cut.	Attempt to clean mat. Remove Mat, rotate 180 degrees. Reinsert mat. If mat has been used on both ends, replace mat. See "Replacing the Cutting Mat" on page 5-7.
Oil gantry rails	Yearly	Rails exhibit signs of wear. Slight grinding is felt when moving cutter head manually.	Use general household oil, such as 3 in 1 oil. Lift gantry cover, apply a small amount of oil to clean cloth and wipe on exposed edges of upper and lower gantry rails. Care should be taken to NOT apply too much oil. Oil should not drip or pool. If too much oil is applied, remove excess with a clean cloth. See "Oil Gantry Rails" on page 5-10.

Replacing the Cutting Blade


1. Set the power switch to 0 (OFF) to turn the machine off.

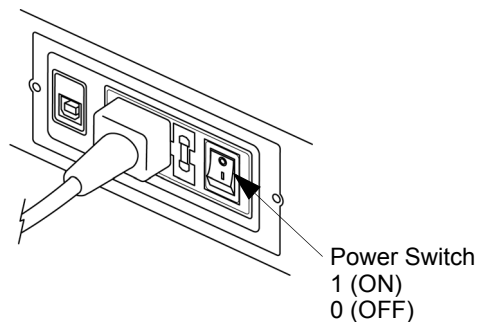

2. Open the gantry top cover, locate the blade holder/motor assembly and move it toward the middle of the gantry track.

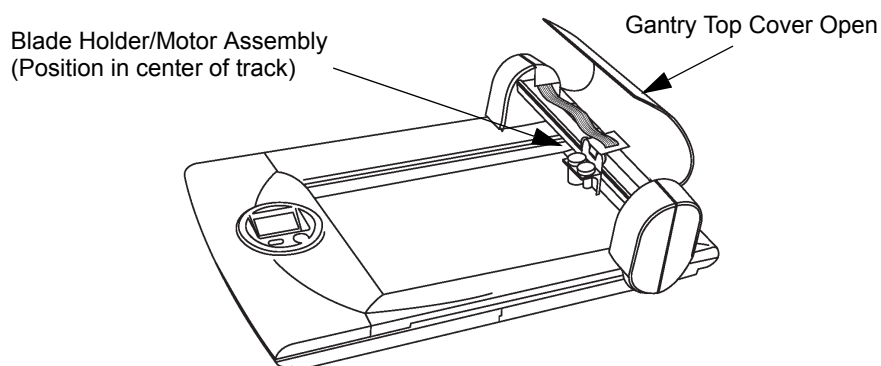


3. Rotate the blade holder 90° towards the front of the unit to gain access to the blade.

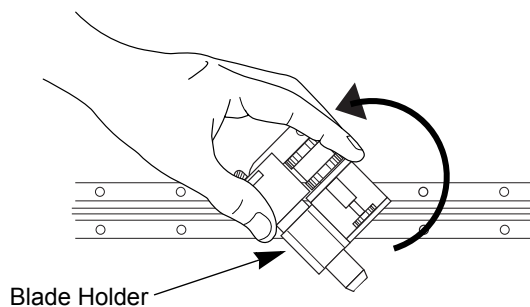


-
4. Press blade release button at the rear of the blade holder to expose the blade.

! CAUTION

The cutter blade protrudes from the blade holder slightly even when retracted. Take care to avoid contact with the blade. Personal injury or equipment damage may result if the blade is touched.

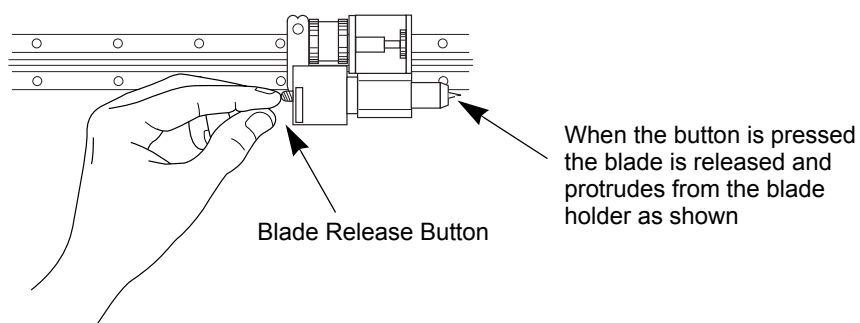


5. Press the blade removal tool (shown below) over the blade and remove the blade from the blade holder. Hold a finger over the blade release button to prevent the blade from reseating.

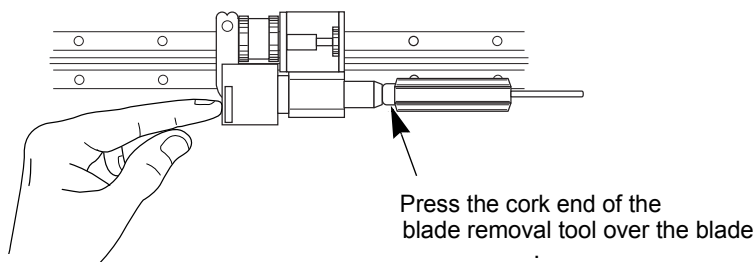


6. Carefully position the blade in the blade holder and insert it until only 1/4 inch of the blade protrudes from the holder.

⚠ CAUTION


The cutter blade protrudes from the blade holder slightly even when retracted. Take care to avoid contact with the blade. Personal injury or equipment damage may result if the blade is touched.

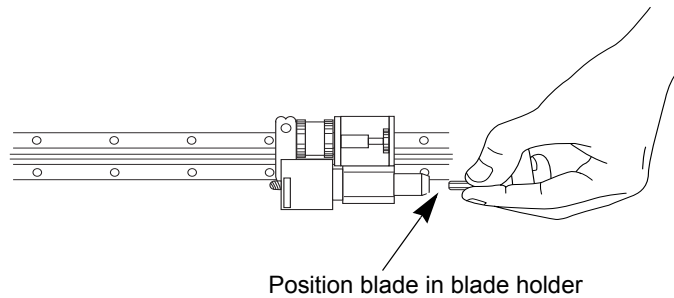


7. Set the power switch to 1 (ON) to activate the electromagnet that draws the blade into its fully seated position within the blade holder.

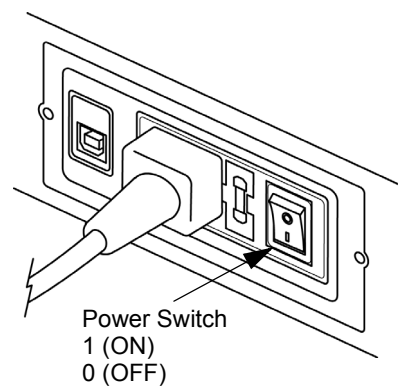


-
8. Rotate the blade holder assembly 90° back to its operating position.

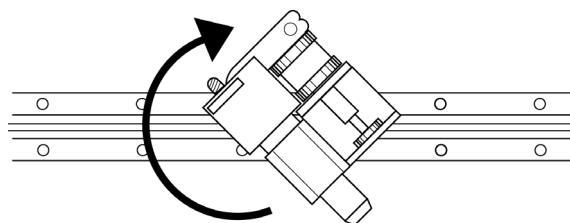

Operating Position

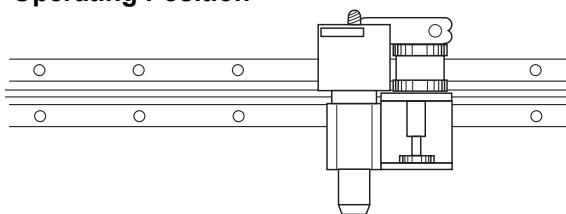


9. Close the gantry top cover on the Cutout Maker.

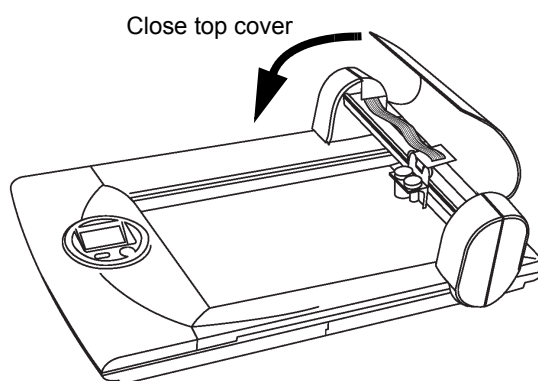


Replacing the Cutting Mat


1. Press the stop button twice to discontinue all cutting operations and send the gantry to its home position.

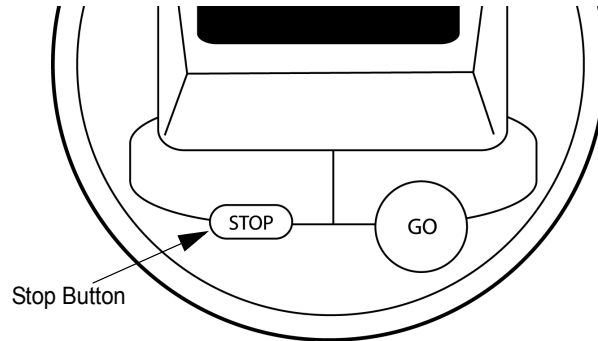


2. Remove cutting materials from cutter bed.
3. Set the power switch to 0 (OFF) to turn the machine off.

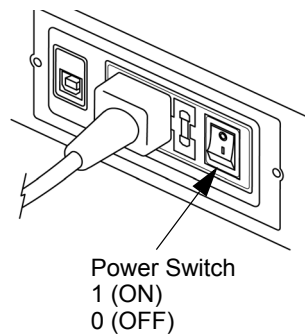


4. Slide the gantry forward and grasp the rear edge of the protective mat. Slide the mat out from between the channels on each side of the Cutout Maker's bed.

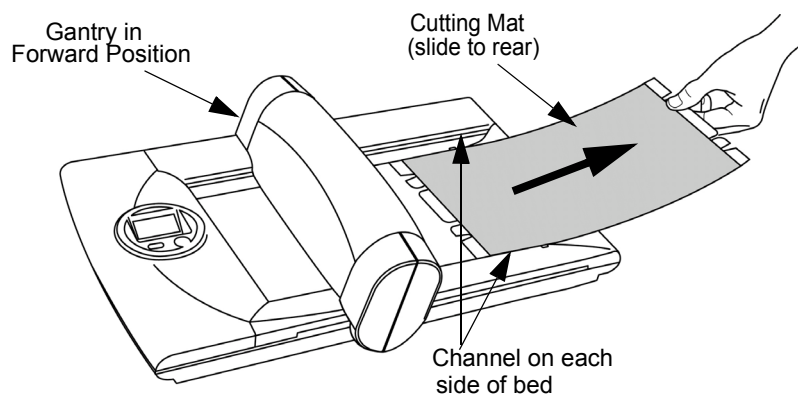


-
5. With the gantry moved forward, position the cutting mat (soft side up) so that the sides of the mat protrude into the channels on each side of the bed.

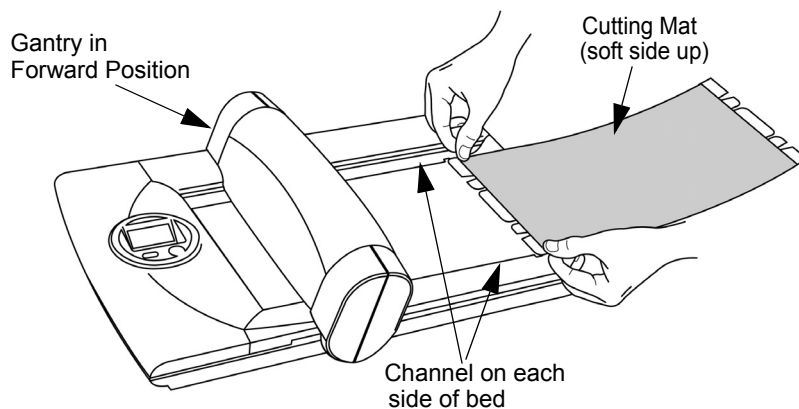


6. Guide the cutting mat forward between the channels on each side of the bed.

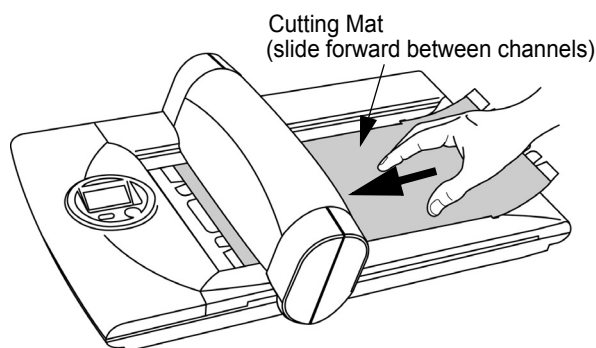


7. Continue sliding the mat forward until the guide slots on the leading edge of the mat are fully engaged with the guides on the front end of the bed.

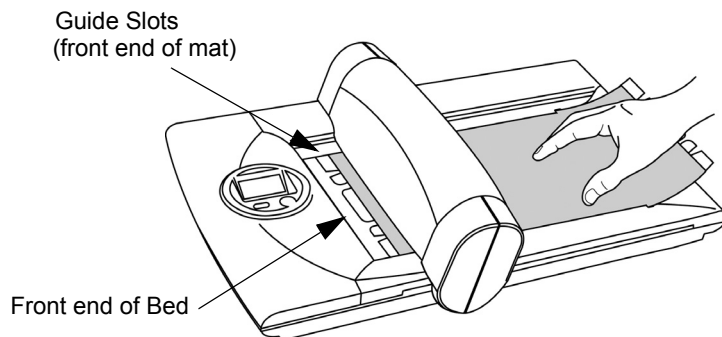

-
8. With the leading edge of the mat secured, align the notches on the rear edge of the mat with the guide posts on the bed. Press the mat down to secure it in position.

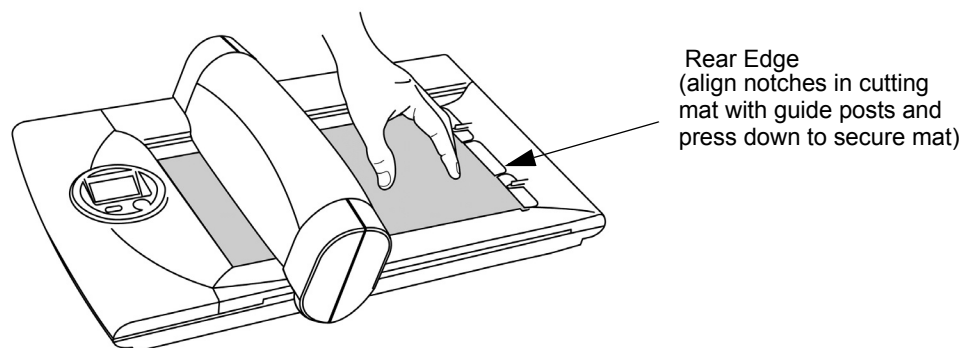


9. Turn the machine on.
10. Ensure that the gantry returns to the home position.

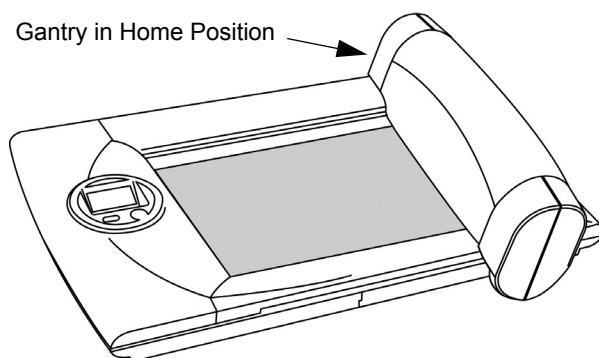

NOTE: In some cases, you may rotate the protective mat to make use of surface area that is not worn. Either end of the mat may be inserted into the Cutout Maker.


Oil Gantry Rails

1. Lift gantry top cover.

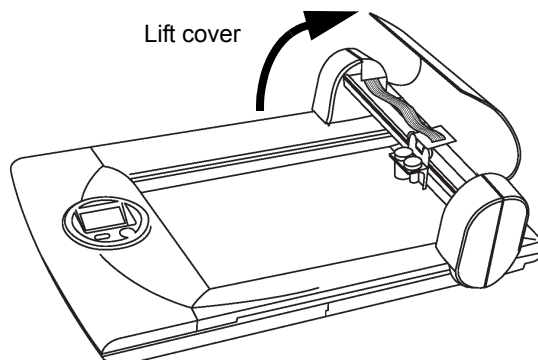

2. Apply a small amount of general household oil (such as 3-in-1 oil) to a clean cloth and wipe on exposed edge of upper and lower gantry rails.

Note: Take care not to apply too much oil. Oil should not drip or pool. Remove excess oil with a clean cloth.

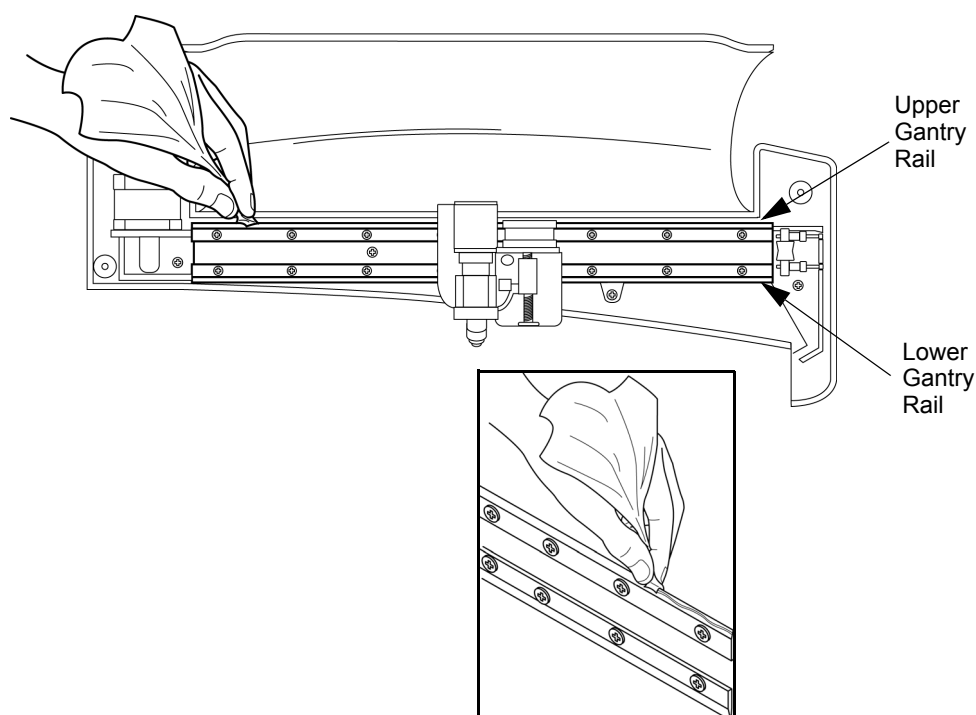

3. Close gantry top cover.

Troubleshooting

This chapter describes how to locate and solve problems that you may encounter while using the Cutout Maker.

The chapter contains these sections:

- “Troubleshooting Process” on page 6-2
 - “Troubleshooting Tips” on page 6-2
- “Cutout Maker Troubleshooting” on page 6-3
- “Cutout Maker Error Codes” on page 6-4
- “Having the Cutout Maker Serviced” on page 6-6

Troubleshooting Process

Many problems can be traced to something as simple as a loose connection. Check the following before proceeding to the problem-specific solutions on the next page.

Troubleshooting Tips

In each problem-specific section on the next page, try the steps in the order suggested. This may help you solve the problem more quickly.

Keep a record of the steps you take when troubleshooting: The information may be useful to technical support or service personnel.

- Use some other electrical device to confirm that the electrical outlet is working.
 - Ensure all connections are securely attached.
-

Cutout Maker Troubleshooting

Troubleshooting

Diagnosis	Action Required to Fix
Cutout Maker does not work even though the power switch has been turned on.	<ol style="list-style-type: none"> 1. Verify that power cord has been plugged in properly. 2. Verify that power switch is turned on.
LCD Display does not turn on.	<ol style="list-style-type: none"> 1. Verify that power cord has been plugged in properly. 2. Verify that power switch is turned on.
Excessively loud noise.	<ol style="list-style-type: none"> 1. Oil rails, see "Oil Gantry Rails" on page 5-10.
<p>Note: in each case listed below, follow the 5 steps shown in the "Action Required to Fix" column.</p> <ul style="list-style-type: none"> • Button presses don't seem to be working. • The message box in the VariQuest software contains the following message: "There was an error communicating with the cutter. You will need to recut some or all of your job. Select OK, then select the page or pages to recut." • The LCD Display on the Cutout Maker doesn't change to a screen saying "Ready" when the user enters the initial Cutout Maker screen in the VariQuest software. 	<ol style="list-style-type: none"> 1. Verify that the Design Center 1000 or PC and the Cutout Maker 1800 is turned on, and the power cord has been plugged in properly. 2. Verify that the USB cable is plugged into the Design Center 1000 or PC and the device. 3. Turn the device off/on. 4. Verify that the Design Center 1000 or PC is not prompting to install the USB driver (Found New Hardware Wizard). It's possible that the wizard is behind another window on the Design Center 1000 or PC. Run the wizard to install the USB driver. 5. Verify that the print driver for the device is installed by opening the "Printers and Faxes" control panel on the Design Center 1000 or PC, and verify that there is a printer named "VariQuest Cutout Maker 1800". Run the printer setup from the CD.
Paper tears.	<ol style="list-style-type: none"> 1. Verify correct material was selected in Variquest Software. 2. Change cutting blade, see "Replacing the Cutting Blade" on page 5-3. 3. Replace the cutting mat if significant use is visible, see "Replacing the Cutting Mat" on page 5-7. 4. Adjust material settings, see Variquest Software User's Manual. 5. Clean mat with IPA. 6. Rotate mat 180°. 7. Replace mat.
Paper moves while cutting.	<ol style="list-style-type: none"> 1. Mat is dirty, clean with Isopropyl Alcohol. 2. Scrap paper is too small, use larger scrap paper. <p>Note: For laminated construction paper, smaller scrap sizes may move on the cutting mat. If this occurs, you may need to use a piece of larger scrap size, or the movement may be corrected by placing another piece of paper next to the paper you are cutting to increase vacuum.</p> <ol style="list-style-type: none"> 3. Rotate mat 180°. 4. Replace mat.
Blade does not retract during blade change procedure.	<ol style="list-style-type: none"> 1. Remove blade. 2. Rotate head down, depress blade release button, cycle power. 3. Rotate head up, depress blade release button, cycle power. 4. Depress blade release button, insert blade, cycle power.

Cutout Maker Error Codes

The following table describes the Error Codes that may appear on the control panel and corrective action required to correct the problem.

Note: Error codes contain a 2nd digit that the user does not have to be concerned with.

Error Codes

Message Displayed	Corrective Action
Cutter stalled. Check mat for obstructions. Press stop to clear error. Error #3 or Error #4	<ol style="list-style-type: none">1. Verify that there are no obstructions on the mat.2. Insert new material.3. Verify that the correct material type is selected in the VariQuest™ software on the Design Center or the Personal Computer.4. Press STOP button to clear error.5. Try again.6. If the error persists, contact your dealer.
Sensor error. check mat for obstructions. Press stop to clear error. Error #5 or Error #6 or Error #13	<ol style="list-style-type: none">1. Verify that there are no obstructions on the mat.2. Press STOP button to clear error.3. Try again.4. If the error persists, contact your dealer.
Tip Sensor error. Check blade position. Ensure mat is not over sensor. Press stop to clear error. Error #8	<ol style="list-style-type: none">1. Ensure that the mat is not over the tip sensor.2. Open gantry cover.3. Verify that the blade holder assembly is rotated to the operating position as shown in Step 8 on page 5-6.4. Rotate the blade holder 90° towards the front of the unit as shown in Step 3 on page 5-3.5. Ensure that the blade is installed in the blade holder.6. Rotate the blade holder assembly 90° to its operating position as shown in Step 8 page 5-6.7. Close gantry cover.8. Press STOP button to clear error.9. Try again.10. If the error persists, contact your dealer.

Error Codes *(continued)*

Message Displayed	Corrective Action
Job contains invalid data and cannot be cut. Press stop to clear error. Error #9 or Error #10	<ol style="list-style-type: none">1. Select a different object size in the VariQuest™ software on the Design Center or the Personal Computer.2. Press STOP button to clear error.3. Try again.4. If the error persists, contact your dealer.
Cut speed error. Select a different object size and try again. Press stop to clear error. Error #11	<ol style="list-style-type: none">1. Select a different object size in the VariQuest™ software on the Design Center or the Personal Computer.2. Press STOP button to clear error.3. Try again.4. If the error persists, contact your dealer.
Cutter head failed to lift. Press stop to clear error. Error #14	<ol style="list-style-type: none">1. Press STOP button to clear error.2. Try again.3. If the error persists, contact your dealer.

Having the Cutout Maker Serviced

If you are unable to solve the problem, you need to have the Cutout Maker serviced. Follow these steps.

1. Write a description of the problem and a checklist of the steps you took when trying to fix the problem. The information may be useful to the service personnel.
2. Contact your VariQuest™ Dealer for further instructions.
3. If instructed to do so by your VariQuest™ Dealer, pack the Cutout Maker in the original carton. See “Unpacking the Cutout Maker” on page 3-2.

