


FEDDERS

Room Air Conditioner • Dehumidifier

Please read the operating instructions and safety precautions carefully and thoroughly before installing and operating your air conditioner.

ENGLISH	Page
Important Safety Instructions	1
Installation	
Introduction	3
Window Installation	4
Control Panel.....	6
Operation	7
Maintenance	8
Service & Warranty	9

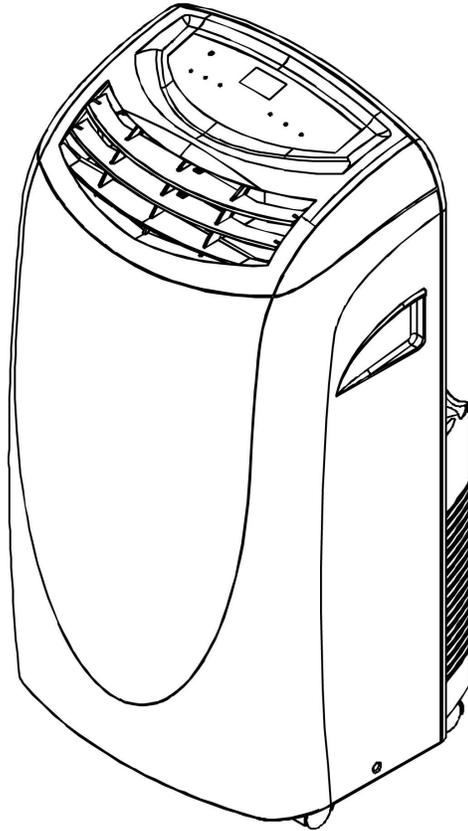

E
N
G
L
I
S
H

For Future Reference

Write down the model and serial numbers
Use these numbers in any correspondence or service calls
concerning your air conditioner.

Model Number

Serial Number

Date of Purchase

RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS

What You Need To Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating or cleaning tools and equipment.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates an potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

DANGER

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.

DANGER

Important Grounding Requirements

- Air conditioner has a three-prong grounding plug on the power supply cord, which must be plugged into a properly grounded three-prong wall receptacle for your protection against possible shock hazard. For models up to and including 7.5 amperes, use a grounding type wall receptacle to match the cord plug.
- For models above 7.5 amperes use a single outlet grounding type wall receptacle to match the cord plug.

Do not operate this air conditioner without proper time delay circuit protection (circuit breaker or fuse). Refer to serial plate for proper power supply requirements.

Recommended Wire Sizes

(As installed per building code) :

PROTECTOR SIZE WIRE GAUGE

15 AMP #14 MINIMUM

20 AMP #12 MINIMUM

30 AMP #10 MINIMUM



125V

250V

250V

250V

15A

20A

15A

30A

DANGER

Electrical Shock Hazard

- Plug unit only into a grounded electrical outlet.
- Do not use an extension cord or plug adapter with this unit. Do not alter cord or plug end. Do not remove warning label on cord.
- Do not operate unit with decorative front or filter removed.
- If the air conditioner has a serial plate rating of 115 volts and greater than 7.5 amps, it must have its own fuse or circuit breaker, and no other device or unit should be operated on that fuse or circuit breaker.
- If the air conditioner has a serial plate rating of 230 volts, it must have its own fuse or circuit breaker, and no other device or unit should be operated on that fuse or circuit breaker.
- We recommend that a qualified electrician install unit in accordance with the National Electrical Code and local codes and ordinances.
- Use copper conductors of correct wire gauge and protector size only.

Power Cord with Arc Detection Device

The power cord supplied with this air conditioner is equipped with an Arc Detection Device designed to shut off power to the unit when it senses an arc fault condition. An arc fault is an unintentional electrical discharge that occurs when electrical products or wires are damaged, aged, or improperly used. An arc fault can be potentially hazardous if left undetected.

DANGER

- **Do not** remove or modify this plug
- **Do not** use as an on/off switch
- **Do not** use outdoors
- **Do not** push furniture against or place furniture on the electrical cord. This can trip the test switch and/or damage the cord and become a potential condition for arcing
- **Do not** attempt to repair the cord. If the cord requires replacement, call an authorized servicer.
- The Arc Detection Device is not a Ground Fault Interrupter and should not be used as such
- The Arc Detection Device contains an electronic circuit board and should not be submerged or exposed to water spray

Resetting

If the Arc Detection Device has tripped, the reset button will pop up.

Follow these steps to reset the Arc Detection Device:

1. Unplug unit from electrical outlet
2. Press the reset button
3. Plug the unit back into electrical outlet
4. Check to see if power has returned to the unit

Testing

You should test the Arc Detection Device equipped power cord monthly, after every major electrical storm, or if power to your Room Air Conditioner has been interrupted.

Follow these steps to test the Arc Detection Device:

1. Unplug unit from electrical outlet
2. Press the reset button
3. Plug the unit back into electrical outlet
4. Press test button. Unit should trip and reset button will pop up.
5. Press reset button again for use

WARNING

Use two or more people to move and install air conditioner. Failure to do so can result in back or other injury.

CAUTION

- **Do not** cut, alter or remove any of the expanded polystyrene (styrofoam) inside this air conditioner.
- **Do not** introduce objects in the air discharge area. This could cause permanent damage.
- **Do not** pour liquids on the air conditioner as this could cause a malfunction. With the unit unplugged, use a damp cloth for cleaning the unit.

CAUTION


- **Do not** use strong solvents to clean the air conditioner.
- Clean the air conditioner filter every two weeks to avoid overheating caused by air obstruction. Do not operate without filter.
- **Do not** obstruct the air intake area of your air conditioner, as this could cause overheating, thus activating the unit's security switch and shutting off the unit.
- **Do not** block air circulation to outside louvers of cabinet.
- **Do not** block air flow inside with blinds, curtains, or furniture, or outside with shrubs, enclosures, or other buildings.
- **Do not** run the air conditioner with an outside protective cover in place. This could result in fire or mechanical damage within the air conditioner.
- Carefully inspect the location where the air conditioner will be installed. Be sure it will support the weight of the unit over an extended period of time.

Description of Parts on the Portable Cooling Unit

Control Panel	Use the electronic control panel to select the mode, fan speed, set the timer, or view the current and set room temperature.
Air Outlet	The air outlet discharges the air from the unit into the room. Use the adjustable louvers to direct the air.
Handles	Use the handles to help move the unit around the room
Casters	Allow you to move the unit from one room to another without lifting
Room Air Intake	Brings room air into the unit for cooling, heating, or dehumidifying
System Air Intake	Outside air is brought into the unit to cool the internal components.
Exhaust Port	Exhausts warm air from the internal components to the outside.
Serial Plate	Identifies unit model and serial number
Drain Valve	Drains the internal condensation tank
Power Cord	Uses a 3-pronged, grounding plug and must be plugged into a properly grounded outlet. Do not alter cord or plug end. Do not use an extension cord.

Before you start

- Read the instruction manual before operating the unit for the first time. It contains important information on operation, safety, maintenance, service and warranty.
- Do not start a damaged units.
- The assembly and connection of the unit must be carried out according to the instructions. If they are not followed you run the risk of voiding the warranty.
- The power cord is located in the rear of the unit. Do not use plug adapters or extension cords. Do not alter plug end. Only use a grounded electrical outlet.
- Do not allow contact between the unit and water.
- Do not cover the air outlet or air intake louvers of the unit.
- To avoid the possibility of personal injury, always disconnect the power supply to the unit before installing and /or servicing.

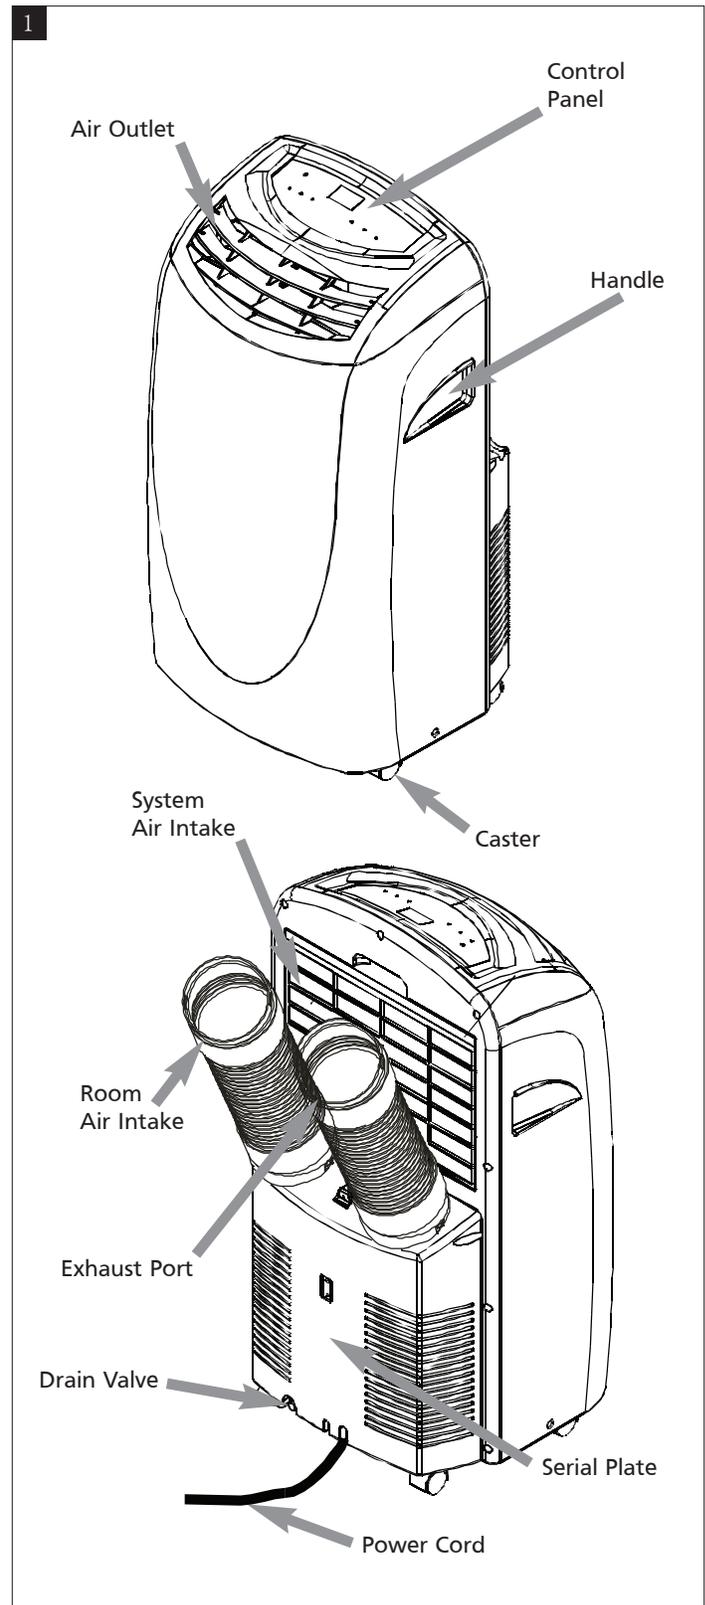

Window adapter kit

An installation parts kit is packed with your unit in a separate carton. Before you discard the packaging that your unit came in, please locate the carton that contains these parts and ensure that all parts are present.


Window panel Attaches to window opening to allow air exchange for system air transfer.

Window panel extensions Extends window panel to fit windows of various dimensions.

Tube adapters Connect Air exchange tubes to window panel.



Screws 12 screws are included for assembling the window adapter kit. Some screws may be partially assembled onto window panel.

Air exchange tubes Exchanges air between the unit and outdoors.

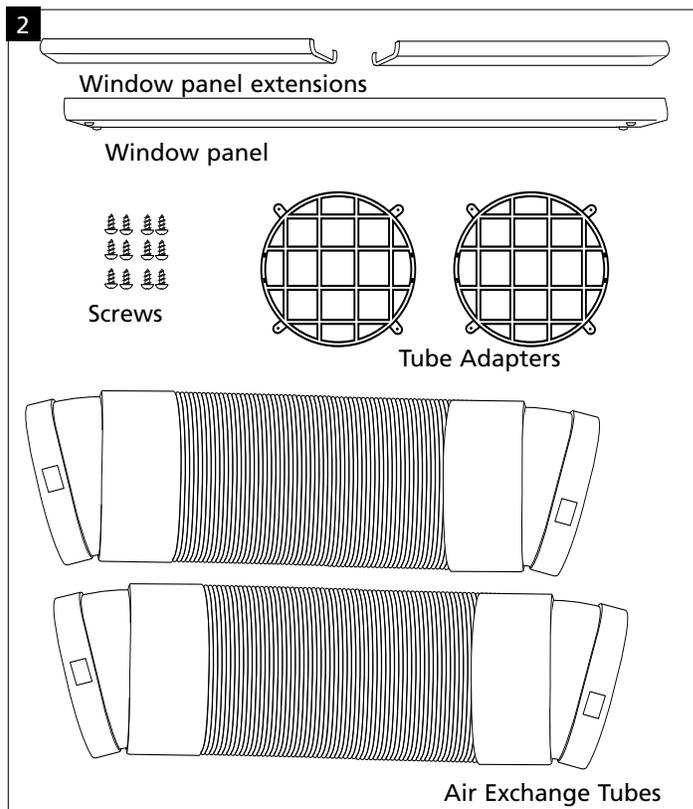

Instructions for assembling the window adapter kit

1. Insert tube adapters through the back of the window panel.
2. Secure each tube adapter with four screws through the front of the window panel.
3. Insert window panel extensions into window panel. Lightly tighten the screws in the window panel to hold the extensions in place.

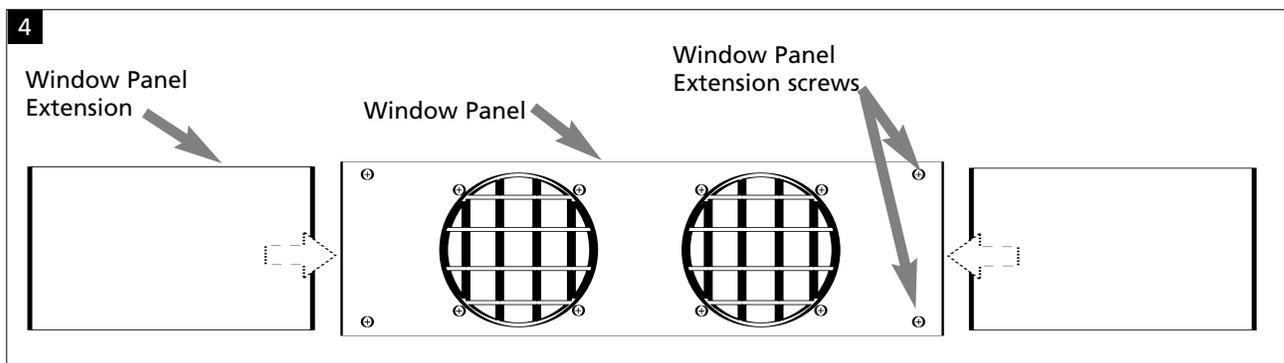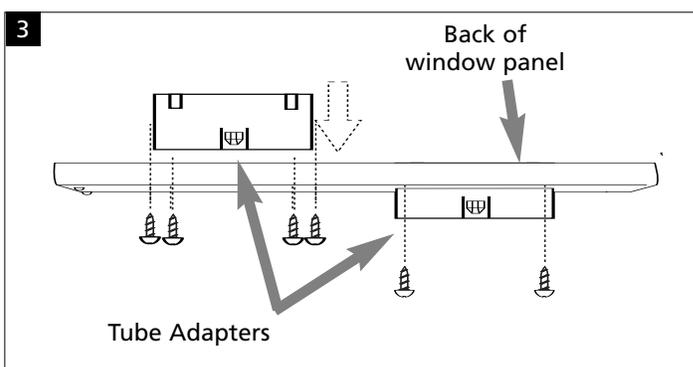


Installing the window adapter kit

Note: The window adapter kit must be installed and connected for the air conditioner to work properly in Cool and Heat mode. The window adapter kit is not required when using the unit in Dehumidify or Fan modes.

Your window adapter kit has been designed to fit most standard vertical and horizontal window applications. However, it may be necessary for you to improvise/modify some aspects of the installation procedures for certain types of windows.

1. Open window. (fig.A)
2. Place window panel with extensions into window frame and adjust to width of window. (fig.B)
Window adapter kit may be installed vertically as well as horizontally. This installation may also be used for crank style windows. (fig.E)
3. Tighten the four screws on the window panel to secure the window panel extensions. (fig.C)
4. Close window. (fig.C)
5. The window adapter kit should now fit securely within the window frame and you can now attach the air exchange tubes. If you are having trouble attaching the air exchange tubes, you may attach the tubes prior to installing the window adapter kit.

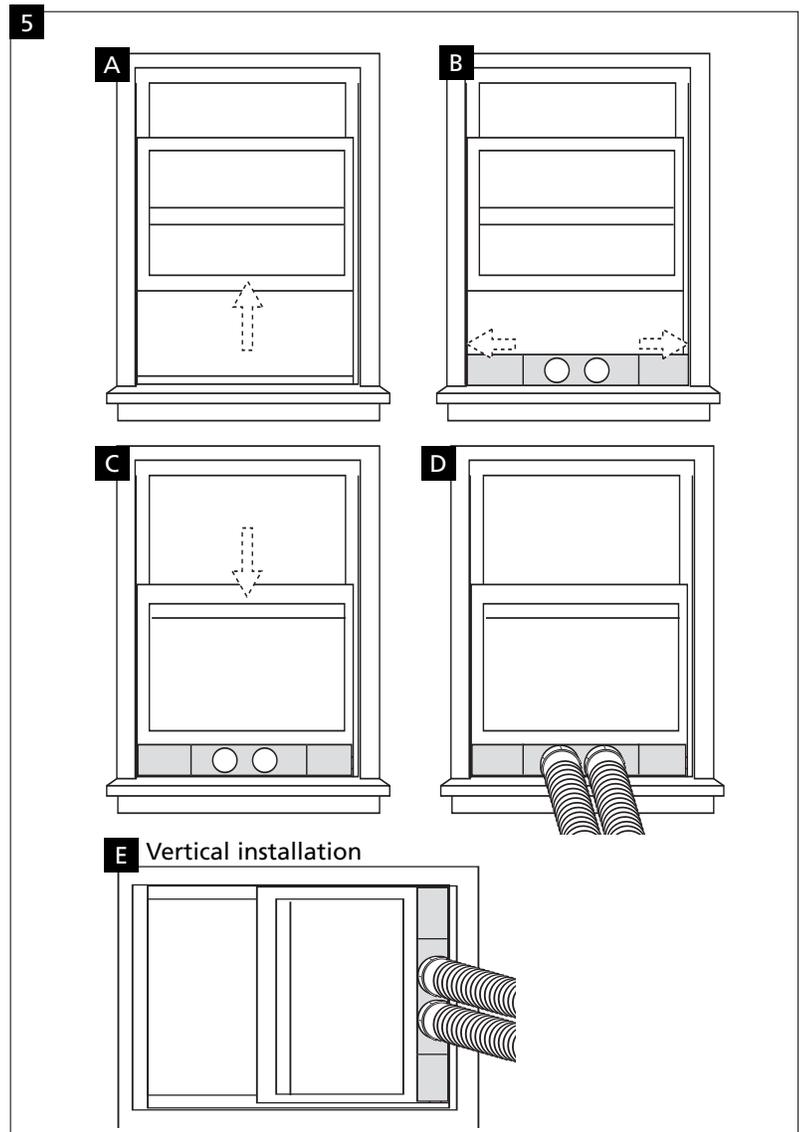

Attaching the air exchange tubes to the air conditioner


1. Attach the tubes to the window adapter kit.
2. Attach the other end to the air conditioner.


To attach air exchange tubes: push tube onto tube adapter and twist until the tab is in place in the hole on the tube.

To remove air exchange tubes: twist the end until the tab is clear of the hole in the tube and pull off.

Maintain a clear distance (from walls, furniture, etc.) of at least 10 inches around the unit to allow proper air circulation and prevent damage to the unit.

Important: Do not over-stretch the exhaust tube or make any unnecessary bends in it.

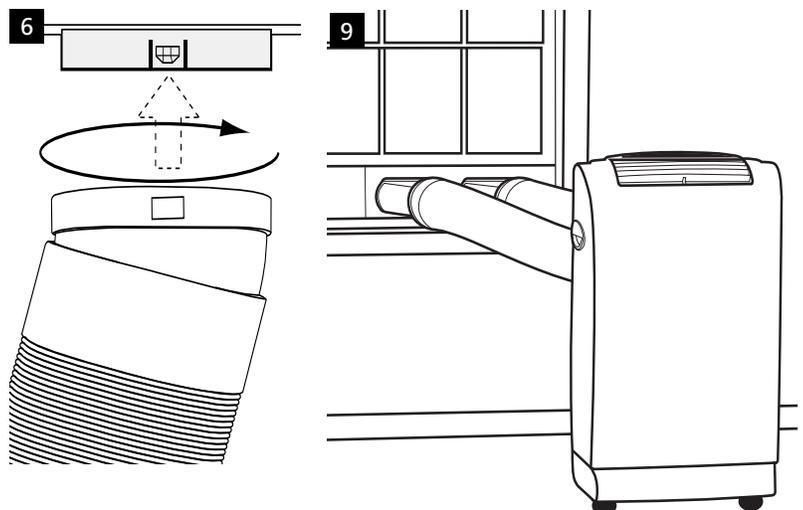

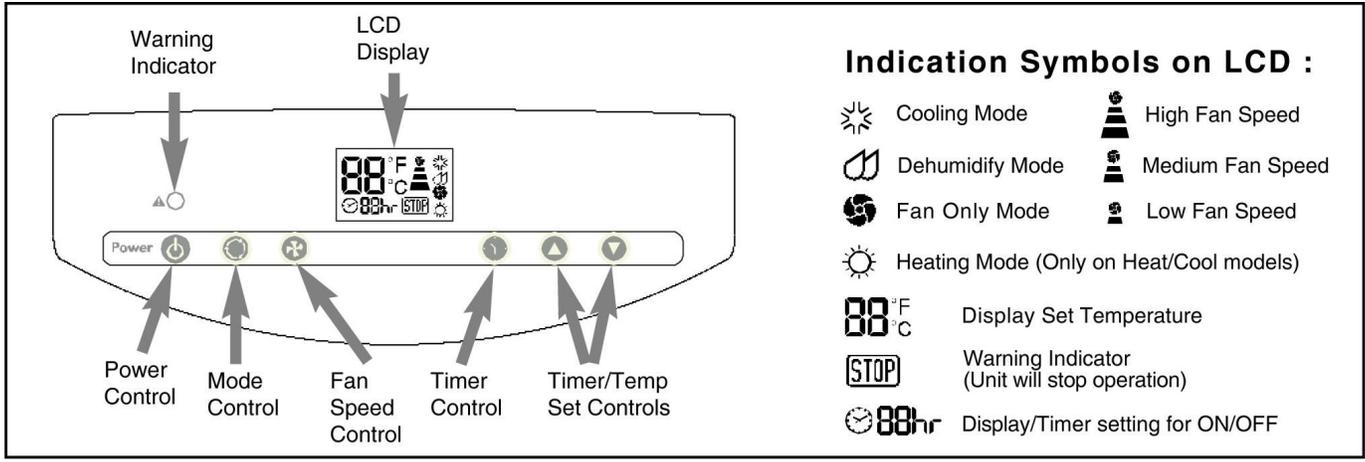

Power Control

The power control turns the unit on and off.

Warning Light

Condensed water may accumulate in the unit. If the internal tank becomes full, the Warning Light will shine and the unit **will not operate until the unit has been drained**. See Draining Excess Water section for instructions on how to drain the water.

Mode Control

The Mode Control has 4 settings: Cool, Dehumidify, Fan and Heating (only on Heat/Cool models).

The settings are adjusted with the Mode Control button. An icon will indicate which setting is currently being used.

Cool Mode

When Cool mode is selected, the cool mode icon will display on the LCD. During the cooling mode the air is cooled and hot air is exhausted to the outside air through the exhaust tube. Adjust fan speed and temperature to suit your desired comfort level. **Note: The air exchange hoses must vent outside the room when using Cool Mode.**

Heat Mode (Only on Heat/Cool models)

When the Heat mode is selected, the heat mode icon will display on the LCD. Heating is activated only when the ambient temperature is below 81°F (27°C). Adjust fan speed and temperature to suit your desired comfort level.

Note: The air exchange hoses must vent outside the room when using Heat Mode.

Caution: Heat/Cool models are designed to be used only as a supplemental heat source. They should be used in addition to regular heating systems and never as the primary source of heat.

Dehumidify Mode

When Dehumidify mode is selected, the dehumidify icon will display on the LCD. Air is dehumidified as it passes through the unit, without being in full cooling mode. The fan speed is not adjustable under the Dehumidification mode while the room temperature is below 77°F (25°C).

Fan Mode

When Fan mode is selected the fan icon will display on the LCD. Air is circulated throughout the room with no cooling. (Note: unit does not need to be vented in Fan mode.)

Fan Speed Control

The Fan Speed Control has 3 settings: High, Medium, and Low.

Timer Control

Auto turn off:

With machine powered on, press timer button to select number of hours you would like the unit to run in air conditioning mode until it automatically shuts off.

Auto turn on:

With machine powered off, press timer button to select number of hours until you would like the unit to automatically start running in air conditioning mode.

Temp/Timer Set Controls

Used for adjusting the timer and thermostat.

The default display is room temperature.

In cooling mode, when “up” or “down” button is pressed the set temperature is displayed and may be adjusted. After 15 seconds the display will revert back to room temperature. Temperature is adjustable in Cool, Heat and Dehumidify modes.

Note: By pressing both Temp/Timer Set buttons on the unit at the same time for 3 seconds, the display will toggle between Celsius and Fahrenheit.

Before starting this unit

1. Select a suitable location, making sure you have a level surface with no obstructions, and easy access to an electrical outlet.
2. Install the window adapter kit, as described in the Installation section.

Note: The window adapter kit is required only while using the Cool and Heat mode.

3. Plug the unit into a grounded electrical outlet. **Do not use an extension cord.**

Operating Instructions

Air Conditioner /Cool Mode

1. Install the window adapter kit and hoses to the unit.
2. Press the On/Off button to turn the unit on. The unit will power up and display the room temperature.
3. Press the Mode button until the Cool mode icon display on the LCD.
4. Press the Temp/Timer Set buttons to set the desired temperature. While you are adjusting the setting, the display will show the set temperature. After you have finished adjusting the temperature, the display will default back to show the room temperature after 15 seconds.
5. Press the Fan Speed button to select the desired setting (High, Med, Low). The fan speed indicator on the LCD will show the selected speed.
6. Condensed water may accumulate in the unit. If the internal tank becomes full, the warning light will shine and the unit will not operate until the unit has been drained. See Draining Excess Water section for instructions on how to drain the water.
7. Once the room reaches the set temperature, the compressor will turn off and the fan will continue to operate.

Heat Mode (Only on Heat/Cool models)

1. Press the On/Off button to turn the unit on. The unit will power up and display the room temperature.
2. Press the Mode button until the Heat mode icon appears on the LCD display.
3. Press the Temp/Timer Set buttons to set the desired temperature. While you are adjusting the setting, the display will show the set temperature. After you have finished adjusting the temperature, the display will default back to show the room temperature after 15 seconds.
4. Press the Fan Speed button to select the desired setting (High, Med, Low). The fan speed indicator on the LCD will show the selected speed.

Dehumidify Mode

1. Press the On/Off button to turn the unit on. The unit will power up and display the room temperature.
2. Press the Mode button until the Dehumidify icon appears on the LCD display.
3. The fan will operate in Low speed. The fan speed is not adjustable under the Dehumidification mode while the room temperature is below 77°F (25°C).
4. Condensed water may accumulate in the unit. If the internal tank becomes full, the warning light will shine and the unit will not operate until the unit has been drained. See Draining Excess Water section.

Fan Mode

1. Press the On/Off button to turn the unit on. The unit will power up and display the room temperature.
2. Press the Mode button until the Fan icon appears on the LCD display.
3. Press the Fan Speed button to select the desired setting (High, Med, Low). The fan speed indicator on the LCD will show the selected speed. The unit will operate continuously in Fan mode.

Timer

The timer can be set to turn the unit off or on. The timer is adjustable between 1 and 24 hours.

To turn unit off automatically:

1. With unit powered on and running in desired mode, press timer button.
2. Use Temp/Timer Set buttons to select number of hours you would like the unit to run until it automatically shuts off. After you have finished adjusting the timer, the display will default back to the room temperature. Timer indicator will blink when set. To turn timer off, press the timer button.

To turn unit on automatically:

1. With unit powered on select desired mode and fan speed, then power unit off.
2. With machine powered off, press timer button to select number of hours until you would like the unit to automatically start running in air conditioning mode. Timer indicator will blink when set. The display will show the number of hours the unit is set until it begins operation. To turn timer off press the timer button.

Cleaning and Maintenance

- The unit has an air filter that must be cleaned with water every two weeks and put back in the unit after it is completely dry.
- The air discharge grille can be cleaned with a rag or sponge, warm water and mild detergent.
- Never use hot water, bleach, gasoline, acids, cleaning fluid or a brush to clean the unit. This will damage the cabinet and the air discharge area.
- Do not wash the unit with a hose.

Cleaning the filter.

1. Turn Power OFF.
2. Remove the air filter by grasping the bottom and pulling it up and out of the unit.
3. Wash in hot soapy water, rinse and shake dry.
4. Replace the filter with the front of the filter toward you.
5. To dry the filter thoroughly, run your unit in fan mode for a few minutes. Remember, only a clean filter works properly and delivers top efficiency at every setting.

⚠ CAUTION
Make sure unit is unplugged before performing any maintenance procedure.

Draining excess water

Condensed water may accumulate in the unit. If the internal tank becomes full, the Warning Light will shine and the unit will not operate until the unit has been drained.


First, unplug electrical cord from wall outlet. Then, drain excess water from the tank by placing a pan under the drain valve, removing the drain plug, and letting the water drain into the pan.

When the water stops draining out, replace the drain plug, and remove the pan of water. Operate the air conditioner in fan mode to dry the interior of the unit.

Always drain the unit before putting it into storage.



Air Conditioner Remote Control

Batteries: Remove the cover on the back of the remote controller and insert the batteries with the (+) and (-) poles pointing in the proper direction.

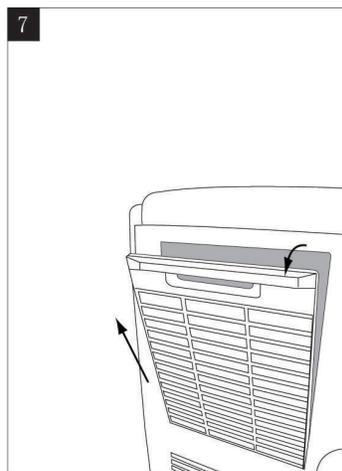

Proper use and care of your air conditioner will help ensure longer life of the unit. It is recommended to have a professional annually inspect and clean the coils and condensate water passages. Expense of annual inspection is the consumer's responsibility.

⚠ CAUTION ⚠
Failure to keep air filter clean will result in poor air circulation. DO NOT operate without filter. This can render the unit inoperative.

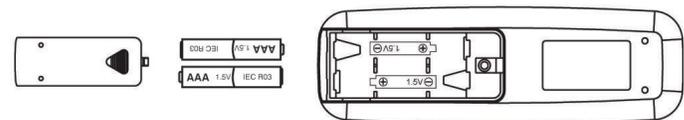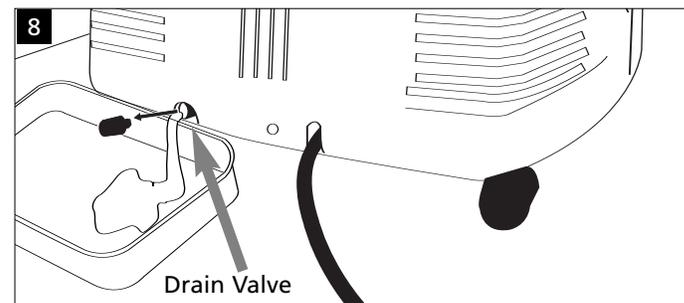

⚠ CAUTION ⚠

- Use only AAA or IEC R03 1.5V batteries.
- Do not attempt to recharge the supplied batteries
- All batteries should be replaced at the same time.
- Do not dispose of the batteries in a fire as they may explode.
- Do not mix old and new batteries.
- Do not install the batteries with the polarity (+/-) reversed.
- Do not mix alkaline, standard (carbon - zinc), or rechargeable (nickel-cadmium) batteries.
- Keep batteries and other things that could be swallowed away from young children. Contact a doctor immediately if an object is swallowed.

How to obtain Warranty Service or Parts

Service for your unit will be provided by Airwell Fedders North America, with authorized independent Airwell Fedders North America servicers nationwide.

Note: Before calling for service, carefully read the Installation and Operating instructions booklet.

Then if you need service:

1. Call a Airwell Fedders North America authorized servicer and advise them of the model number, serial number, date of purchase and nature of complaint. Service will be provided during normal working hours. Contact your dealer for the name of an authorized servicer if unknown to you.
2. If your dealer is unable to give you the name of a servicer or if you need other assistance, call the following toll-free number for the name of an authorized servicer or authorized parts distributor:

1-800-332-6658

or you may write:

**Airwell Fedders North America
2 Centre Drive, Monroe Township, NJ 08831**

Proof of Purchase Date

It is the responsibility of the consumer to establish the original purchase date for warranty purposes. We recommend that a bill of sale, cancelled check, or some other appropriate payment record be kept for that purpose.

To locate your nearest Service Center, call 800-332-6658.

For models installed in North America – If service or parts are required

First, make the recommended checks. If it appears that service or parts are still required, see your warranty “How to Obtain Warranty Service or Parts”. Please have the model number and serial number with you when calling.

For models installed outside of North America

For models purchased for use outside North America, the manufacturer does not extend any warranty either expressed or implied. Consult your local dealer for any warranty terms extended by the importer in your country.