

A	GENERAL INFORMATION	Page	7
A1	Introduction	Page	7
A2	Definitions	Page	7
A3	Typographical conventions	Page	7
A4	Machine and Manufacturer's identification data.....	Page	8
A5	Equipment identification	Page	8
A6	Copyright	Page	9
A7	Liability.....	Page	9
A8	Personal protection equipment	Page	9
A9	Keeping the manual	Page	9
A10	Constructional modifications.....	Page	9
A11	Users of the manual	Page	10
B	GENERAL DESCRIPTION OF MACHINE	Page	11
B1	General description	Page	11
B2	Description of machine modules	Page	12
B2.1	Wash zone.....	Page	12
B2.2	Rinse zone.....	Page	12
B2.3	Prewash zone	Page	12
B2.4	Energy recovery/steam suppression unit (CU).....	Page	12
B2.5	Drying zone (DT)	Page	12
B2.6	View of module composition.....	Page	13
C	TECHNICAL DATA	Page	14
C1	Main technical characteristics (electric versions)	Page	14
C2	Main technical characteristics (steam versions)	Page	16
C3	Characteristics of power supply.....	Page	17
D	TRANSPORT, HANDLING AND STORAGE	Page	18
D1	Introduction	Page	18
D1.1	Transport: Instructions for the carrier.....	Page	18
D2	Handling	Page	18
D2.1	Procedures for handling operations.....	Page	18
D2.2	Translation	Page	18
D2.3	Placing the load	Page	18
D3	Storage	Page	18
E	INSTALLATION AND ASSEMBLY	Page	19
E1	Customer responsibilities	Page	19
E2	Characteristics of the place of machine installation.....	Page	19
E3	Machine space limits	Page	19
E4	Positioning	Page	19
E5	Disposal of packing	Page	19
E6	Plumbing connections	Page	19
E6.1	Plumbing circuits	Page	19
E6.2	Installation diagrams.....	Page	25
E7	Electrical connections.....	Page	38
E8	Installation of detergent/rinse aid dispensers	Page	38
E8.1	Arrangement for water connection	Page	38
E8.1.1	Detergent concentration measurement probe.....	Page	38
E8.1.2	Liquid detergent dispensers	Page	38

	E8.1.3	Arrangement for solid detergent	Page	39
	E8.1.4	Rinse aid dispensers	Page	39
	E8.2	Arrangement for electrical connection	Page	39
E9		Fitting curtains	Page	40
E10		Installation of rack handling systems	Page	42
	E10.1	Arrangement for mechanical connection	Page	42
	E10.2	Arrangement for electrical connection	Page	42
	E10.3	Positioning of emergency switches.....	Page	43
	E10.4	Emergency stop reinstatement	Page	43
F		DESCRIPTION OF CONTROL PANEL	Page	44
	F1	Basic controls	Page	44
	F2	Accessory function selection controls.....	Page	44
	F3	Service alarms/signalling	Page	45
G		STARTING.....	Page	46
	G1	Preliminary checks, adjustments and operational tests.....	Page	46
	G1.1	Electrical and plumbing checks	Page	46
	G1.2	Check the positioning of tank components	Page	46
		G1.2.1 Check the fitting of filters and overflows	Page	46
		G1.2.2 Check the fitting of arms and curtains.....	Page	46
	G2	Starting	Page	47
H		GENERAL SAFETY RULES.....	Page	48
	H1	Introduction	Page	48
	H1.1	Protection devices installed on the machine.....	Page	48
		H1.1.1 Guards	Page	48
		H1.1.2 Safety devices	Page	48
	H1.2	Safety signs to be displayed on the machine.....	Page	48
	H2	Decommissioning	Page	48
	H3	Instructions for use and maintenance	Page	48
	H4	Improper use.....	Page	49
	H5	Residual risks	Page	50
I		NORMAL MACHINE USE.....	Page	51
	I1	Correct use	Page	51
	I2	Characteristics of personnel enabled to operate on the machine.....	Page	51
	I3	Daily activation of machine	Page	51
	I3.1	Wash phase.....	Page	51
	I3.2	Rack jamming	Page	52
	I3.3	Wash phase stop	Page	52
	I3.4	Temperature display	Page	52
	I3.5	Loading dishes on racks	Page	52
	I3.6	Tank filter cleaning	Page	53
	I3.7	Accessory functions.....	Page	53
	I3.8	Door open	Page	55
	I3.9	Emergency stop.....	Page	55
	I3.10	General alarm.....	Page	55
	I4	Machine cleaning.....	Page	56
	I4.1	Daily internal cleaning	Page	56
	I4.2	Exterior cleaning.....	Page	57
	I5	Long idle periods	Page	57
	I6	Maintenance	Page	57
	I7	Machine disposal	Page	57
	I8	Troubleshooting	Page	58

INDEX OF FIGURES

Figure 1	Reproduction of the marking/dataplate on the machine.....	Page	8
Figure 2	Position of marking (machine left)	Page	8
Figure 3	Position of marking (machine right).....	Page	8
Figure 4	Technical data identification (Machine right)	Page	8
Figure 5	Example of document and edition identification data.....	Page	9
Figure 6	View of different configurations of modular rack-type dishwashers.....	Page	11
Figure 7	Feet adjustment	Page	19
Figure 8	Water connection	Page	20
Figure 9	Hole for detergent probe	Page	38
Figure 10	Arrangement for liquid detergent.....	Page	38
Figure 11	Prearrangement for solid detergent	Page	39
Figure 12	Solid detergent pipe connection.....	Page	39
Figure 13	Rinse aid connection.....	Page	39
Figure 14	Diagram of curtain positioning on modular machines	Page	41
Figure 15	Handling mechanical connection system	Page	42
Figure 16	Handling electrical connection system.....	Page	42
Figure 17	Detail of electrical connection	Page	42
Figure 18	Examples of dishwasher and rack handling system couplings	Page	43
Figure 19	Prewash module tank filters	Page	46
Figure 20	Wash module tank filters.....	Page	46
Figure 21	Rinse module tank filters.....	Page	46
Figure 22	Prewash	Page	46
Figure 23	Wash	Page	46
Figure 24	Rinse	Page	47
Figure 25	Positioning dishes	Page	53
Figure 26	Positioning pans.....	Page	53
Figure 27	Positioning trays	Page	53
Figure 28	Tank and filter cleaning	Page	53
Figure 29	Cleaning filters and arms	Page	57

INDEX OF TABLES

Table 1	Main technical characteristics, performance and consumption (electric versions)	Page	14
Table 2	Technical data in “max. power” configuration (165 and 200 racks/h versions).....	Page	15
Table 3	Technical data in “min. power” configuration.....	Page	15
Table 5	Control panel.....	Page	44
Table 6	Residual risks.....	Page	50

Foreword

The instruction manual (hereinafter Manual) provides the operator with useful information for working correctly and safely, facilitating him in using the machine (hereinafter “machine”, “dishwasher” or “equipment”).

The following must not be considered a long and exacting list of warnings, but rather a set of instructions suitable for improving machine performance in every respect and, above all, preventing injury to persons and animals and damage to property due to improper operating procedures.

All persons involved in machine transport, installation, starting, use and maintenance, repair and dismantling must consult and carefully read this manual before performing the various operations, for the purpose of avoiding wrong and improper actions that could negatively affect the machine’s integrity or endanger persons.

The manual must always be available to operators and carefully kept in the place where the machine is used so that it is immediately at hand for consultation in case of doubts or whenever required.

If, after reading this manual, there are still doubts regarding machine use, do not hesitate to contact the Manufacturer, or the authorized assistance centre, to receive prompt and precise assistance for better operation and maximum efficiency of the machine.

During all phases of machine use, always respect the current regulations on safety, work hygiene and environmental protection. It is the user’s responsibility to make sure the machine is started and operated only in optimal safety conditions for persons, animals and property.

This appliance is not intended for use by people (including children) with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are supervised or instructed in its use by a person responsible for their safety.

A GENERAL INFORMATION

A1 Introduction

This chapter describes the symbols used (that mark and identify the type of warning) and gives the definitions of terms used in the manual, responsibilities and copyright.

A2 Definitions

Listed below are the definitions of the main terms used in the Manual. Carefully read them before using the Manual.

Operator

an operator who carries out machine installation, adjustment, use, maintenance, cleaning, repair and transport.

Manufacturer

Electrolux Professional S.p.A. or any other assistance centre authorized by Electrolux Professional S.p.A..

Operator qualified for normal machine use

an operator who has been informed, instructed and trained regarding the tasks and hazards involved in normal machine use.

Specialized technician or Technical assistance

an operator instructed/trained by the Manufacturer and who, based on his professional and specific training, experience and knowledge of the accident-prevention regulations, is able to appraise the operations to be carried out on the machine and recognize and prevent possible risks. His professionalism covers the mechanical, electrotechnical and electronics fields.

Danger

source of possible injury or harm to health.

Hazardous situation

any situation where an operator is exposed to one or more hazards.

Risk

a combination of probabilities and risks of injury or harm to health in a hazardous situation.

Guards

safety measures consisting of the use of specific technical means (guards and safety devices) for protecting operators against dangers.

Guard

an element of a machine used specifically to provide protection by means of a physical barrier.

Safety device

a device (other than a guard) that eliminates or reduces the risk; it can be used alone or in combination with a guard.

Customer

the person who purchased the machine and/or who manages and uses it (e.g. company, entrepreneur, firm).

Emergency stop device

a group of components intended for the emergency stop function; the device is activated with a single action and prevents or reduces damage to persons/machines/property/animals.

Electrocution

an accidental discharge of electric current on a human body.

A3 Typographical conventions

For best use of the manual, and therefore the machine, it is advisable to have good knowledge of the terms and typographical conventions used in the documentation.

The following symbols are used in the manual to mark and identify the various types of hazards:



WARNING!

DANGER FOR THE HEALTH AND SAFETY OF OPERATORS.



WARNING!

DANGER OF ELECTROCUTION - DANGEROUS VOLTAGE.

Machine guards and protection devices marked with this symbol must only be opened by qualified personnel, after disconnecting the power to the machine.



WARNING!

DANGER OF DAMAGE TO THE MACHINE.



INSTRUCTIONS MARKED WITH THIS SYMBOL INDICATE THE NEED TO:

- TURN THE MAIN SWITCH OF THE MACHINE TO "O" (OFF).
- LOCK THE MAIN SWITCH WITH THE SPECIAL PADLOCK, AND KEEP THE KEY.
- DISPLAY A SIGN INDICATING THAT THE MACHINE IS UNDERGOING MAINTENANCE AND NOT TO CARRY OUT MANOEUVRES.

Words and safety warnings further explaining the type of hazard are placed next to the symbols in the text. The warnings are intended to guarantee the safety of personnel and prevent damage to the machine or the product being worked.

The drawings and diagrams given in the manual are not in scale. They supplement the written information with an outline, but are not intended to be a detailed representation of the machine supplied.

The numerical values given in the machine installation diagrams refer to measurements expressed in mm (see par. E6.2 "Installation diagrams").

Conventionally, the machines are depicted with the rack feed side on the right (RH); machines with left rack feed (LH) are depicted only if necessary, in which case the side will be expressly specified.

Due to its size, the machine is sometimes shown schematically divided into its functional modules in order to provide a complete view.

A4 Machine and Manufacturer's identification data

A reproduction of the marking or dataplate on the machine is given below.

ELX		Made in EU	2011
F.Mod.	WTM165ERA	Comm.Model	
PNC	9CGX 534104 03	Ser.Nr. 54500001	
EL	AC 400V 3+N	50 Hz	40.3 kW
CE		IPX5	
Electrolux Professional spa - Viale Treviso, 15 - 33170 Pordenone (Italy)			

Figure 1 Reproduction of the marking/dataplate on the machine.

The dataplate gives the product identification and technical data; the meaning of the information given on it is listed below.

- F. Mod..... factory description of the product
 - Comm. Model..... trade description
 - PNC:..... production code number
 - Ser. No..... serial number
 - AC 400V 3+N..... power supply voltage
 - 50 Hz..... power supply frequency
 - 40.3 kW..... max. power absorbed
 - 2011..... year of construction
 - CE..... CE marking
 - IPX5..... protection rating
 - Electrolux Professional S.p.A.
 - Viale Treviso, 15
 - 33170 Pordenone
 - (Italy)..... Manufacturer
- The marking plate is located on the left (machine left) or right (machine right) side panel of the equipment.

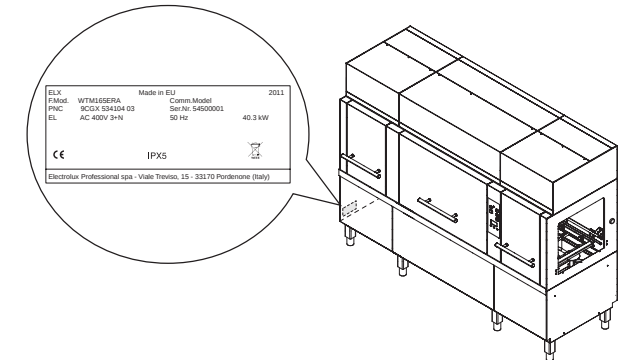


Figure 2 Position of marking (machine left)

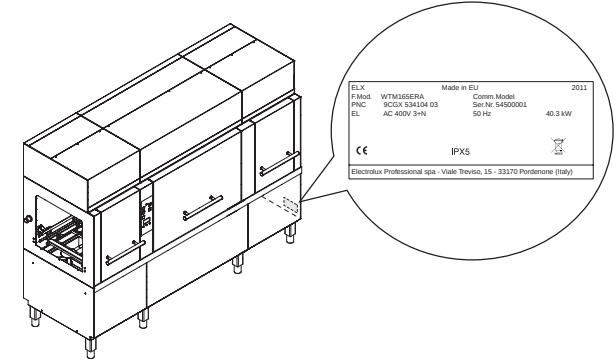


Figure 3 Position of marking (machine right)

- !

WARNING!
Do not remove, tamper with or make the machine “CE” marking illegible.
- !

IMPORTANT!
Refer to the data given on the machine “CE” marking for relations with the Manufacturer (e.g. when ordering spare parts, etc.).
- !

IMPORTANT!
When disposing of the machine the “CE” marking must be destroyed.

A5 Equipment identification

How to identify the technical data

To identify the technical data (Figure 4) read the factory description of the product (F.Mod.) on the dataplate, identify the main machine data and consult the Table 1 “Main technical characteristics, performance and consumption (electric versions)”.

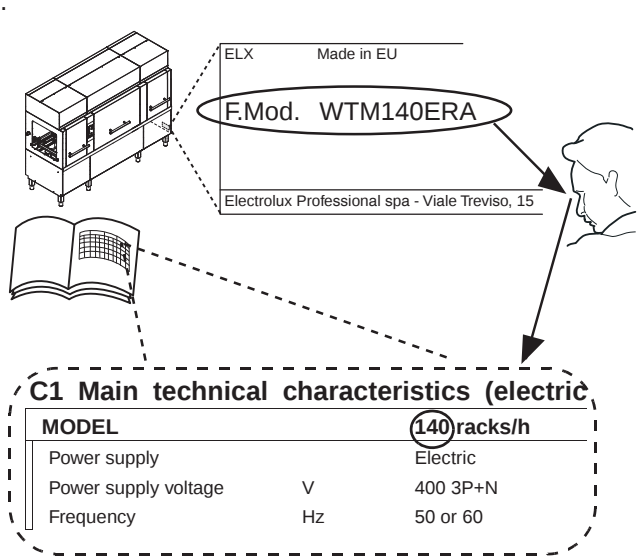


Figure 4 Technical data identification (Machine right)

How to interpret the factory description

The factory description on the dataplate has the following meaning:

(1)	(2)	(3)	(4)	(5)	(6)
RT	M	140	E	R	A
WT	M	140	E	A	A

	Description	Possible variables
(1)	Mark	WT... RT...
(2)	Machine type	M = modular, C = compact
(3)	Racks/h	140 165 180 200 250 300
(4)	Supply	E = Electric, S = Steam
(5)	Rack loading	L = from left to right R = from right to left
(6)	Condensing unit	A = with condensing unit B = without condensing unit

A6 Copyright

This manual is intended for consultation only by the operator and can be given to third parties only with the written permission of Electrolux Professional S.p.A..

A7 Liability

The instructions are updated to the month and year given in the box located at the bottom right of the cover. The edition corresponds to the manual revision number. Every new edition replaces and cancels the previous ones.

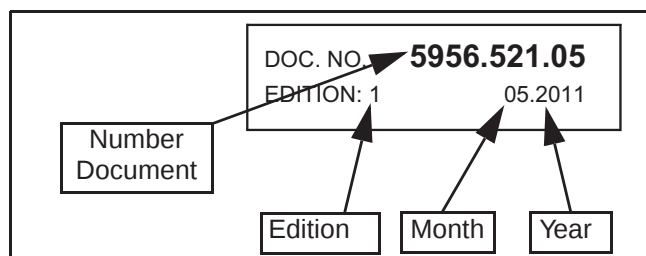


Figure 5 Example of document and edition identification data.

The Manufacturer declines any liability for damage and malfunctioning caused by:

- non-compliance with the instructions contained in this manual;
- repairs not carried out in a workmanlike fashion, and replacements using spare parts different from those specified in this manual (the fitting and use of non-original spare parts and accessories can negatively affect machine operation);
- operations by non-specialized technicians;
- unauthorized modifications or operations;
- inadequate maintenance;
- improper machine use;
- unexpected extraordinary events;
- use of the machine by uninformed and untrained personnel;
- non-application of the current provisions in the country of use, concerning safety, hygiene and health in the workplace.

The Manufacturer declines any liability for damage caused by arbitrary modifications and conversions carried out by the user or the Customer.

The employer or workplace manager is responsible for identifying and choosing adequate and suitable personal protection equipment to be worn by operators, in compliance with current regulations in the country of use.

Electrolux Professional S.p.A. declines any liability for possible inaccuracies contained in the manual, if due to printing or translation errors.

Any supplements to the instruction manual the Customer receives from the Manufacturer must be kept together with the manual, of which they will form an integral part.

A8 Personal protection equipment

Give below is a summary table of the Personal Protection Equipment (PPE) to be used during the various stages of the machine's service life.

Stage	Protective garments 	Safety footwear 	Gloves 	Glasses 	Safety helmet
Transport		X			
Handling		X			
Unpacking		X			
Assembly		X			
Normal use	X	X	X (*)		
Adjustments		X			
Routine cleaning		X	X (*)		
Extraordinary cleaning		X	X		
Maintenance		X			
Dismantling		X			
Scrapping		X			

Key:

X	PPE REQUIRED
	PPE AVAILABLE OR TO BE USED IF NECESSARY
	PPE NOT REQUIRED

(*) During Normal use, gloves protect hands from the contact with chemical substances, water and hot surfaces.

Failure to use the personal protection equipment by operators, specialised technicians or users can involve exposure to chemical risk and possible damage to health.

A9 Keeping the manual

The manual must be carefully kept for the entire life of the machine until decommissioning.

The manual must stay with the machine in case of transfer, sale, hire, granting of use or leasing.

A10 Constructional modifications

The Manufacturer provides for the possibility of connecting the rack-type dishwasher to rack handling systems included in the Electrolux Professional product catalogue, with the possibility of obtaining various configurations.

The EC Conformity Declaration provided with the machine also envisages these configurations. The Manufacturer does not provide for the possibility of making other constructional modifications to the machine, but allows the execution of other types of combinations with systems different from those described above (in order to create a series of machines arranged and controlled in an integral way), as illustrated in this documentation.

In which case it is necessary to comply with provisions of the applicable European Directives or current regulations in the country of use, and obtain the required certifications. The Manufacturer declines any liability for damage caused by arbitrary modifications and conversions carried out by the user or third parties. For requests or for further information, contact Electrolux Professional S.p.A. - Via Treviso, 15 - 33170 Porde- none - Italy.

A11 Users of the manual

This manual is intended for:

- the carrier and handling personnel;
- installation and start-up personnel;
- the employer of machine users and the workplace manager;
- operators in charge of normal machine use;
- specialized technicians - technical assistance (see wiring diagram and service manual).

B

GENERAL DESCRIPTION OF MACHINE

B1 General description

The rack-type dishwasher is suitable for washing dishes, glasses, cups, cutlery, trays, containers and receptacles in plastic and/or steel used for preparing, cooking and serving; as well as various cooking utensils in ceramic and/or metal.

The machine is designed for the above-mentioned applications. Under no circumstances may the machine be used for other applications or ways not provided for in this manual.

This equipment has been produced to meet the needs for a better work environment and economical efficiency. These dishwashers are used in restaurants, cafeterias, cooking centres and large institutions.

The special dish racks, that can be equipped with various inserts, offer practical and easy use for obtaining excellent washing results. Rack handling inside the machine occurs automatically. The electronic system enables complete supervision of the washing process. The control panel also has a display that shows the operating parameters and signals any anomalies.

In this type of machine the rack is taken from the loading point to the unloading point, through the various washing functions. Systems for scraping and wetting the dishes (e.g. manual prewash spray) and areas for sorting and arranging them in the racks must be arranged ahead of the dishwasher.

The possible configurations of modular rack-type dishwashers, classified according to the maximum number of racks washed in one hour, are as follows:

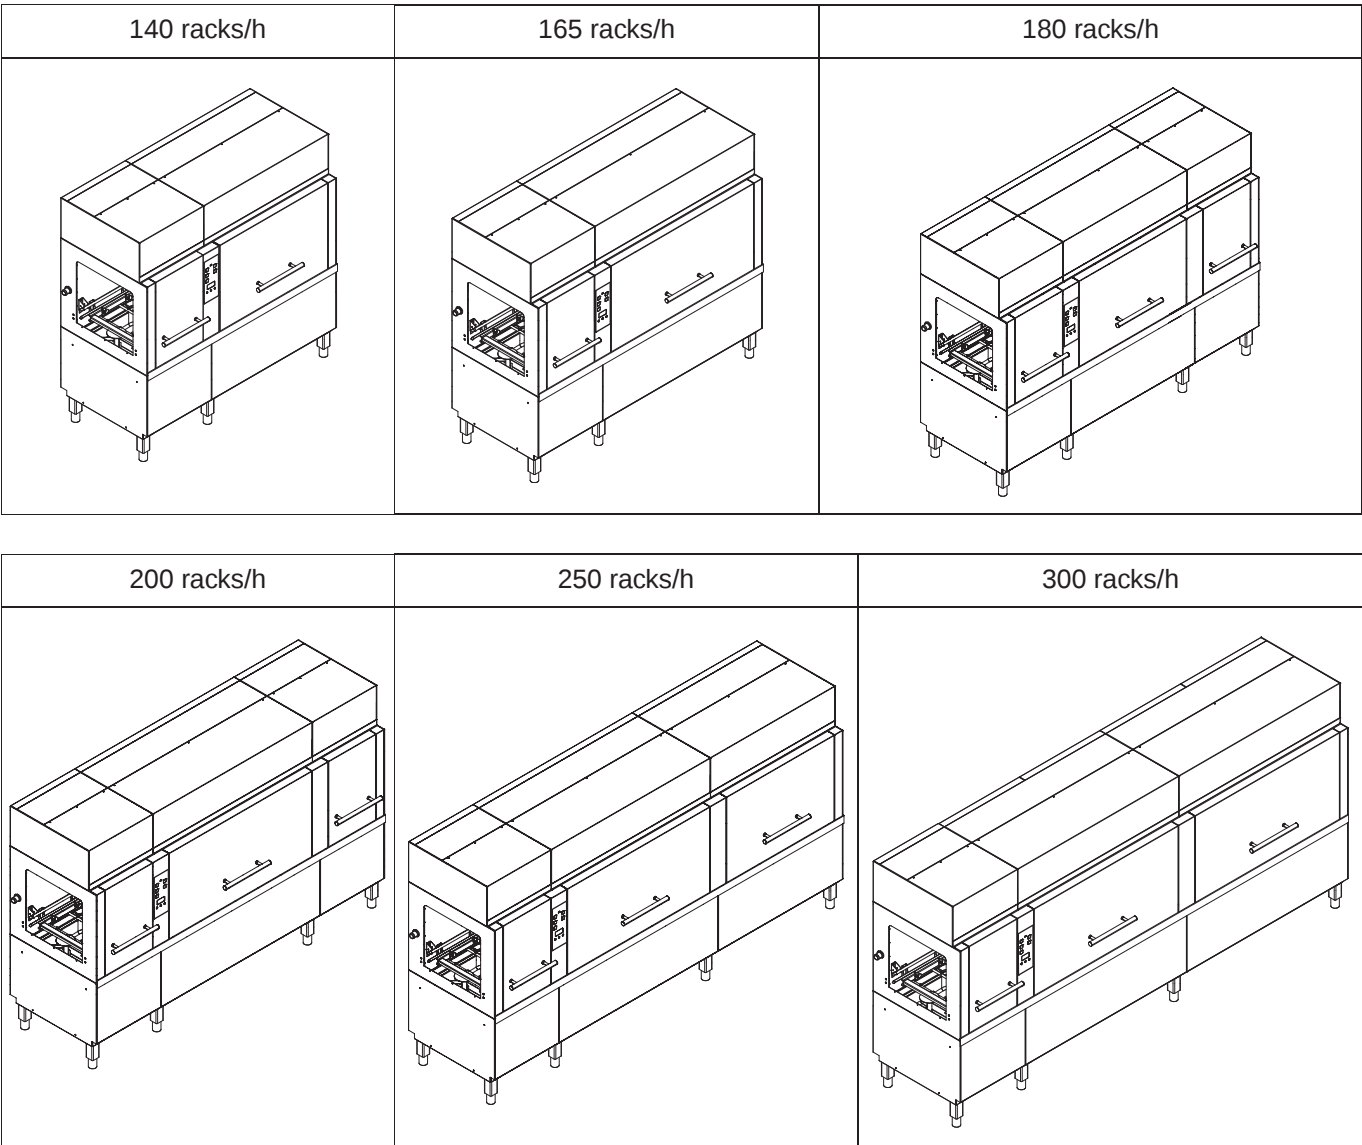


Figure 6 View of different configurations of modular rack-type dishwashers

B2 Description of machine modules

The machine consists of the following zones:

- wash zone
- rinse zone

and can be integrated with the following units:

- prewash zone
- energy recovery/steam suppression unit (CU)
- drying zone (DT).

B2.1 Wash zone

Water with the addition of detergent is sprayed on the dishes in the wash zone through an upper and lower wash arm system. The purpose of this function is to remove all residuals of food from the dishes. Washing is carried out with water circulating at a temperature of 55-65 °C / 131-149 °F.

B2.2 Rinse zone

Water with the addition of rinse aid is sprayed on the dishes in the rinse zone through a system of arms equipped with special nozzles. The purpose of this function is to remove all residuals of detergent deriving from the previous wash phase.

Rinsing is carried out with clean water coming from the water system, heated to a max. temperature of 80-90 °C / 176-194°F.

The high temperature ensures satisfactory drying and careful neutralization of bacteria. The addition of rinse aid allows the water to easily run off the dishes, thus favouring the drying process.

An extra function called "Duo-rinse" can be implemented in the rinse module". The "Duo-rinse" is a device that partially recycles the water coming from rinsing, spraying it on the dishes before the actual rinse.

In this way the rinse water is collected in a tank and sent by means of a pump to two specific arms equipped with nozzles. This considerably reduces water consumption during the conventional rinse phase. The "Duo-rinse" is only present in the modular rack-type dishwashers.

B2.3 Prewash zone

Water is sprayed on the dishes in the prewash zone through an upper and lower prewash arm system. The purpose of this function is to remove the larger food residuals, preparing the dishes for the subsequent wash phase.

Prewash is carried out with water circulating at a max. temperature of 35°C / 95°F in order to prevent food residuals (in particular proteins) from sticking to the dishes.

B2.4 Energy recovery/steam suppression unit (CU)

Some rack-type dishwasher versions can be supplied with an energy recovery/steam suppression unit called a condensing unit (CU). It consists of a fan and an air-water heat exchanger. By means of the fan, the steam present inside the wash zone is exhausted and condensed thanks to the heat exchange with the cold water entering; the condensed steam (water) is recovered in the wash tank. This also offers the advantage of heating the cold water entering, recovering a part of the heat that would otherwise be dissipated into the environment.

B2.5 Drying zone (DT)

The dishes come under a flow of hot air in the drying zone, facilitating the water evaporation process. Drying occurs with hot air at a temperature of 50-60 °C / 122-140 °F. This function can be added at the machine outfeed after the rinse zone.

B2.6 View of module composition

In rack-type dishwashers the various zones just described are thus applied to the various previously defined configurations.

Rack-type dishwasher - 140 racks/h	Rack-type dishwasher - 165 racks/h
Rack-type dishwasher - 180 racks/h	Rack-type dishwasher - 200 racks/h
Rack-type dishwasher - 250 racks/h	Rack-type dishwasher - 300 racks/h
Possible drying zone added only at the machine outfeed after the rinse zone	

C

TECHNICAL DATA

C1

Main technical characteristics (electric versions)

MODEL			140 racks/h	165 racks/h	180 racks/h	200 racks/h	250 racks/h	300 racks/h
MAIN TECHNICAL DATA	Power supply		Electric	Electric	Electric	Electric	Electric	Electric
	Power supply voltage	V	400 3P+N	400 3P+N	400 3P+N	400 3P+N	400 3P+N	400 3P+N
	Frequency	Hz	50 or 60	50 or 60	50 or 60	50 or 60	50 or 60	50 or 60
	Max. power. absorbed (1) (4)	kW	27.4	31.5 (3)	32.2	31.8 (3)	44.2	45.3
	Max. current. absorbed (2) (4)	A	41.4	48.3 (3)	48.7	50.1 (3)	68.2	70.7
	Type of power cable		H07RN-F	H07RN-F	H07RN-F	H07RN-F	H07RN-F	H07RN-F
	Power cable	A	5x25	5x25	5x25	5x25	5x25	5x25
	Main switch	A	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N
	Supply water pressure	kPa [bar]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]
	Hot water supply temp.	°C/°F	50/122	50/122	50/122	50/122	50/122	50/122
	Cold water supply temp.	°C/°F	15/59	15/59	15/59	15/59	15/59	15/59
	Concentration of chlorides in water	ppm	< 20	< 20	< 20	< 20	< 20	< 20
	Electric conductivity of water	µS/cm	< 400	< 400	< 400	< 400	< 400	< 400
	Supply water hardness	°fH/°dH/°cH	14/8/10	14/8/10	14/8/10	14/8/10	14/8/10	14/8/10
	Rack loading/feed	RH machine LH machine	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right
	No. speeds		2	2	2	2	2	2
	Capacity speed 1	racks/h	80	90	110	130	160	180
	Capacity speed 2	racks/h	140	165	180	200	250	300
	Air emission	m³/h	180	180	180	180	180	180
	Emitted air temperature	°C/°F	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77
PREWASH	Water consumption	l/h	250	315	325	330	345	360
	Equivalent sound pressure level Leq (5)	dB(A)	< 70	< 70	< 70	< 70	< 70	< 70
	Protection rating		IPX5	IPX5	IPX5	IPX5	IPX5	IPX5
	Net weight (6)	kg	410	442	570	602	692	724
	tank capacity	l	-	-	45	45	100	150
	temperature	°C/°F	-	-	max. 35 / 95	max. 35 / 95	max. 35 / 95	max. 35 / 95
	pump delivery	l/min			150	150	600	500 + 350
	pump power	kW	-	-	0.23	0.23	2.2	2.2 + 1.1
WASH	current absorbed by pump	A			0.8	0.8	4.8	4.8 + 2.5
	tank heating element (7)	kW	-	-	10.5	10.5	16.5	16.5
	module inlet minimum feed flow rate	l/min	4	4	4	4	4	4
	tank capacity	l	100	150	100	150	150	150
	temperature	°C/°F	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149
	pump delivery	l/min	600	500 + 350	600	500 + 350	500 + 350	500 + 350
	pump power	kW	2.2	2.2 + 1.1	2.2	2.2 + 1.1	2.2 + 1.1	2.2 + 1.1
	current absorbed by pumps	A	4.8	4.8 + 2.5	4.8	4.8 + 2.5	4.8 + 2.5	4.8 + 2.5
DUO RINSE	tank heating element	kW	6.0 + 6.0	10.5 + 10.5	6.0 + 6.0	10.5 + 10.5	10.5 + 10.5	10.5 + 10.5
	module inlet minimum feed flow rate	l/min	4	4	4	4	4	4
	tank capacity	l	23	23	23	23	23	23
	temperature	°C/°F	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158
	pump delivery	l/min	15	15	15	15	15	15
	pump power	kW	0.35	0.35	0.35	0.35	0.35	0.35
	current absorbed by pump	A	0.8	0.8	0.8	0.8	0.8	0.8
	tank heating element	kW	3	3	3	3	3	3
RINSE	temperature	°C/°F	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194
	pump delivery	l/min	4	5	5	5	5	5
	pump power	kW	0.35	0.35	0.35	0.35	0.35	0.35
	current absorbed by pump	A	0.8	0.8	0.8	0.8	0.8	0.8
	boiler heating elements	kW	6.0 + 6.0	10.5 + 6.0	10.5 + 6.0	10.5 + 6.0	10.5 + 6.0	10.5 + 6.0
	boiler capacity	l	12	12	12	12	12	12
	module inlet minimum feed flow rate	l/min	5	6	6	6	6	6
CU	fan motor power	kW	0.13	0.13	0.13	0.13	0.13	0.13
	current absorbed by fan	A	0.4	0.4	0.4	0.4	0.4	0.4

Table 1 Main technical characteristics, performance and consumption (electric versions)

- (1) For versions without condensing unit (CU) deduct 0.13 kW.
- (2) For versions without condensing unit (CU) deduct 0.4 A.
- (3) In 165 racks/h and 200 racks/h versions the “max. power” option can be activated by means of software. In this configuration the dishwasher will have power and absorbed current values given in Table 2. Activation of this configuration is advisable whenever the dishwasher is used continuously for many hours to wash thick ceramics.

MODEL		165 racks/h	200 racks/h
Max. power. absorbed	kW	42.0	42.3
Max. current. absorbed	A	63.4	65.2

Table 2 Technical data in “max. power” configuration (165 and 200 racks/h versions)

- (4) For users requiring an installed power lower than the standard (Table 1) the “min. power” option can be activated by means of software. In this configuration the dishwasher will have power and absorbed current values given in Table 3. Since the tank and boiler heating elements do not work at the same time in this configuration, activation is advisable whenever use is not continuous (e.g. 30 minutes rack washing and at least 15 minutes wait for racks).

MODEL		140 racks/h	165 racks/h	180 racks/h	200 racks/h	250 racks/h	300 racks/h
Max. power. absorbed	kW	18.4	24.0	23.2	24.3	30.7	31.8
Max. current. absorbed	A	31.6	40.6	38.9	41.4	51.9	54.4

Table 3 Technical data in “min. power” configuration

- (5) The value could increase depending on the work station where measured.
 (6) For versions without condensing unit (CU) deduct 42 kg.
 (7) Only in versions with sanitization cycle.

**** In machines equipped with DT, to determine the absorbed powers/absorbed currents, add the absorbed current/power values to those given in the similar table in the DT instruction manual.**

C2 Main technical characteristics (steam versions)

MODEL			140 racks/h	165 racks/h	180 racks/h	200 racks/h	250 racks/h	300 racks/h
MAIN TECHNICAL DATA	Power supply	Steam	Steam	Steam	Steam	Steam	Steam	Steam
	Power supply voltage	V	400 3P+N	400 3P+N	400 3P+N	400 3P+N	400 3P+N	400 3P+N
	Frequency	Hz	50 or 60	50 or 60	50 or 60	50 or 60	50 or 60	50 or 60
	Max. power. absorbed	kW	6.4	7.5	6.6	7.7	9.7	10.8
	Max. current. absorbed	A	17.8	20.3	18.6	21.1	25.1	27.6
	Steam consumption	kg/h	92	92	92	92	92	92
	Type of power cable		H07RN-F	H07RN-F	H07RN-F	H07RN-F	H07RN-F	H07RN-F
	Power cable	A	5x25	5x25	5x25	5x25	5x25	5x25
	Main switch	A	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N	125A 3P+N
	Supply water pressure	kPa [bar]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]	150..700 [1.5..7]
	Inlet steam relative dynamic pressure	kPa [bar]	150..300 [1.5..3]	150..300 [1.5..3]	150..300 [1.5..3]	150..300 [1.5..3]	150..300 [1.5..3]	150..300 [1.5..3]
	Hot water supply temp.	°C/°F	50/122	50/122	50/122	50/122	50/122	50/122
	Cold water supply temp.	°C/°F	15/59	15/59	15/59	15/59	15/59	15/59
	Concentration of chlorides in water	ppm	< 20	< 20	< 20	< 20	< 20	< 20
	Electric conductivity of water	µS/cm	< 400	< 400	< 400	< 400	< 400	< 400
	Supply water hardness	°fH/°dH/°cH	14/8/10	14/8/10	14/8/10	14/8/10	14/8/10	14/8/10
	Rack loading/feed	RH machine LH machine	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right	From right to left From left to right
	No. speeds		2	2	2	2	2	2
	Capacity speed 1	racks/h	80	90	110	130	160	180
	Capacity speed 2	racks/h	140	165	180	200	250	300
	Air emission	m³/h	180	180	180	180	180	180
	Emitted air temperature	°C/°F	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77	20-25/68-77
	Water consumption	l/h	250	315	325	330	345	360
	Equivalent sound pressure level Leq (5)	dB(A)	< 70	< 70	< 70	< 70	< 70	< 70
	Protection rating		IPX5	IPX5	IPX5	IPX5	IPX5	IPX5
	Net weight	kg	410	442	570	602	692	724
PREWASH	tank capacity	l	-	-	45	45	100	150
	temperature	°C/°F	-	-	max 35 / 95	max 35 / 95	max 35 / 95	max 35 / 95
	pump delivery	l/min			150	150	600	500 + 350
	pump power	kW	-	-	0.23	0.23	2.2	2.2 + 1.1
	current absorbed by pump	A			0.8	0.8	4.8	4.8 + 2.5
	Steam consumption (7)	kg/h	-	-	25	25	65	65
	module inlet minimum feed flow rate	l/min	4	4	4	4	4	4
WASH	tank capacity	l	100	150	100	150	150	150
	temperature	°C/°F	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149	55-65 / 131-149
	pump delivery	l/min	600	500 + 350	600	500 + 350	500 + 350	500 + 350
	pump power	kW	2.2	2.2 + 1.1	2.2	2.2 + 1.1	2.2 + 1.1	2.2 + 1.1
	current absorbed by pumps	A	4.8	4.8 + 2.5	4.8	4.8 + 2.5	4.8 + 2.5	4.8 + 2.5
	Steam consumption	kg/h	65	65	65	65	65	65
	module inlet minimum feed flow rate	l/min	4	4	4	4	4	4
DUO RINSE	tank capacity	l	23	23	23	23	23	23
	temperature	°C/°F	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158	60-70 / 140-158
	pump delivery	l/min	15	15	15	15	15	15
	pump power	kW	0.35	0.35	0.35	0.35	0.35	0.35
	current absorbed by pump	A	0.8	0.8	0.8	0.8	0.8	0.8
	tank heating element	kW	3	3	3	3	3	3
RINSE	temperature	°C/°F	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194	80-90 / 176-194
	pump delivery	l/min	4	5	5	5	5	5
	pump power	kW	0.35	0.35	0.35	0.35	0.35	0.35
	current absorbed by pump	A	0.8	0.8	0.8	0.8	0.8	0.8
	Steam consumption	kg/h	27	27	27	27	27	27
	boiler capacity	l	11	11	11	11	11	11
	module inlet minimum feed flow rate	l/min	5	6	6	6	6	6
CU	fan motor power	kW	0.13	0.13	0.13	0.13	0.13	0.13
	current absorbed by fan	A	0.4	0.4	0.4	0.4	0.4	0.4

Table 4 Main technical characteristics, performance and consumption (steam versions)

(5) The value could increase depending on the work station where measured.

(7) Only in versions with sanitization cycle.

**** For machines equipped with DT, to determine steam consumption, add the steam consumption values to those given in the similar technical data table in the DT instruction handbook.**

C3 Characteristics of power supply

The AC power supply to the machine must meet the following conditions:

- max. voltage variation $\pm 10\%$
- max. frequency variation $\pm 1\%$ continuous $\pm 2\%$ for a short period.

Harmonic distortion, unbalanced three-phase supply voltage, voltage pulses, interruption, dips and the other electric characteristics must respect the provisions of point 4.3.2 of Standard EN 60204-1 (IEC 60204-1).



IMPORTANT!

The machine's power supply must be protected against overcurrents (short circuits and overloads) by fuses or suitable thermal magnetic circuit breakers.



IMPORTANT!

For protection against indirect contacts (depending on the type of supply provided for and connection of earths to the equipotential protection circuit) refer to point 6.3.3 of EN 60204-1 (IEC 60204-1) with the use of protection devices that ensure automatic cut-off of the supply in case of isolation fault in the TN or TT systems or, for IT systems, the use of isolation controllers or differential current protection devices to activate automatic power disconnection (an isolation controller must be provided for indicating a possible first earth fault of a live part, unless a protection device is supplied for switching off the power in case of a such a fault. This device must activate an acoustic and/or visual signal which must continue for the entire duration of the fault).

For example: in a TT system, a differential switch with cut-in current (e.g. 30 mA) coordinated with the earthing system of the building where the machine is located must be installed ahead of the supply.



IMPORTANT!

Customers are requested to follow these instructions, otherwise the Manufacturer does not guarantee the machine for continuous operation and/or against faults.

D TRANSPORT, HANDLING AND STORAGE

D1 Introduction

Transport (i.e. transfer of the machine from one place to another) and handling (i.e. transfer inside work-places) must occur with the use of special equipment of adequate capacity.



IMPORTANT!

Due to its size, during transport, handling and storage one machine cannot be stacked on top of another, therefore possible risks of load overturning are excluded.

The machine must only be transported, handled and stored by qualified personnel, who must have:

- specific technical training and experience;
- knowledge of the safety regulations and applicable laws in the relevant sectors;
- knowledge of the general safety provisions;
- the ability to recognize and avoid any possible hazard.

D1.1 Transport: Instructions for the carrier



WARNING!

Do not stand under suspended loads during the loading/unloading phases. Unauthorized personnel must not access the work zone.



IMPORTANT!

The machine's weight alone is not sufficient to keep it steady.

The transported load can shift:

- when braking;
- when accelerating;
- in corners;
- on particularly rough roads.

D2 Handling

Arrange a suitable area with flat floor for machine unloading and storage operations.

D2.1 Procedures for handling operations

For correct and safe lifting operations:

- use the type of equipment most suitable for characteristics and capacity (e.g. lift trucks or electric pallet truck);
- cover sharp edges;
- check the forks and lifting procedures according to the instructions given on the packing.

Before lifting:

- send all operators to a safe position and prevent persons from accessing the handling zone;
- make sure the load is stable;
- make sure no material can fall during lifting, and manoeuvre vertically in order to avoid impacts;

- handle the machine, keeping it at minimum height from the ground.



CAUTION!

For machine lifting, do not use movable or weak parts such as casings, electrical raceways, pneumatic parts, etc., as anchoring points.

D2.2 Translation

The operator must:

- have a general view of the path to be followed;
- stop the manoeuvre in case of hazardous situations.

D2.3 Placing the load

Before placing the load make sure the path is free and that the floor is flat and can take the load.

D3 Storage

The machine and/or its parts must be stored and protected against damp, in a non-aggressive place free of vibrations and with room temperature of between -10°C / 14°F and 50°C / 122°F.

The place where the machine is stored must have a flat support surface in order to avoid any twisting of the machine or damage to the support feet.



IMPORTANT!

Machine positioning, installation and disassembly must be carried out by a specialized technician.



IMPORTANT!

Do not make modifications to the parts supplied with the machine. Any missing or faulty parts must be replaced with original parts.

E

INSTALLATION AND ASSEMBLY

**IMPORTANT!**

Machine installation operations must only be carried out by specialized Technicians provided with all the appropriate personal protection equipment (safety shoes, gloves, glasses, overalls, etc.), tools, utensils and ancillary means.

**IMPORTANT!**

Make sure the MAIN SWITCH of the machine is locked in the Off position - "O".

E1 Customer responsibilities

The Customer must provide for the following:

- installation of an adequate electrical power supply ahead of the machine, according to the equipment's technical specifications (Table 1 and C3 "Characteristics of power supply");
- the equipotential connection of the workplace electrical system to the metal structure of the machine by means of a copper cable of adequate section (see position "Q" in par. E6.2 "Installation diagrams");
- Adducting for the electrical connection between the workplace electric panel and the equipment;
- the water supply and drain connections and other connections as indicated in Table 1 and par. E6 "Plumbing connections".

E2 Characteristics of the place of machine installation

The machine is designed for installation in professional and not domestic-type kitchens. Water collection traps/ metal grates must be arranged in the floor at the machine discharges (see par. E6.2 "Installation diagrams"), possibly replaceable with a single water trap sized for a flow rate of at least 3 l/s.

E3 Machine space limits

A suitable space must be left around the machine (for operations, maintenance, etc.).

The passages enabling personnel to operate on the machine must be at least 70 cm wide, except at the rear of the machine (see par. E6.2 "Installation diagrams").

The size must be increased in case of use and/or transfer of other equipment and/or means or if exit routes are necessary inside the workplace.

E4 Positioning

Unless otherwise agreed, the machine is supplied in a single unit.

The machine must be taken to the place of installation and the packing base removed only when being installed.

Arranging the machine:

- Position the machine in the required place.
- Adjust the equipment by turning the special adjustable feet and making sure it is perfectly level, both lengthwise and crosswise.

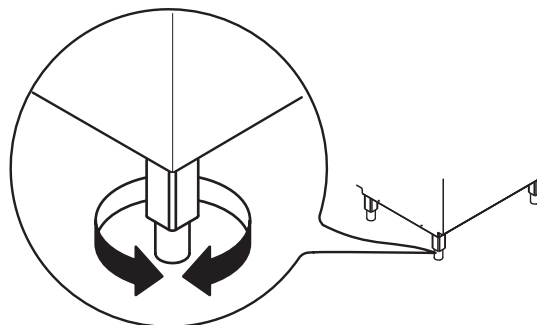


Figure 7 Feet adjustment

- Wear protective gloves and unpack the machine.
- Carefully remove the protective film from the outer panels without tearing it, to avoid leaving traces of glue.

E5 Disposal of packing

All materials used for packing are environmentally compatible. They can be safely kept, and recycled or burnt in a special waste incineration plant. Plastic parts subject to possible recycling are marked as follows:



polyethylene: outer wrapping, instruction booklet bag.



polypropylene: roof packing panels, straps.



polystyrene foam: corner protectors.

Parts in wood and cardboard can be disposed of respecting the current regulations in the country of use.

E6 Plumbing connections

Install the machine water filling and drain pipes according to the plumbing circuit and installation diagrams given below.

E6.1 Plumbing circuits

Cold water connection ISO 228/1 DN 20 (G3/4").

10-15°C 150 - 700 kPa (1.5-7 bar) at 0.3 l/sec

Hot water connection ISO 228/1 DN 20 (G3/4").

50-65°C 150 - 700 kPa (1.5-7 bar) at 0.3 l/sec

If the pressure at one of the unions exceeds 700 kPa (7 bar), a pressure reducing valve must be installed on the inlet piping. Connection pipes with anti-return protection and check valve and stop cock are available as optional accessories.

If the water hardness exceeds 14°FH/8°dH/10°cH, install a softener filter on the dishwasher inlet connection piping to ensure efficient machine operation.



IMPORTANT!

Connect the wash zone to the hot water inlet; connect the prewash zone to the cold water inlet and connect the rinse zone to the hot water inlet if the condensing unit (CU) is not present, and to the cold water inlet if the CU is present.

Connect the equipment water supply pipes to the water system, interposing a cock, filter and pressure gauge.



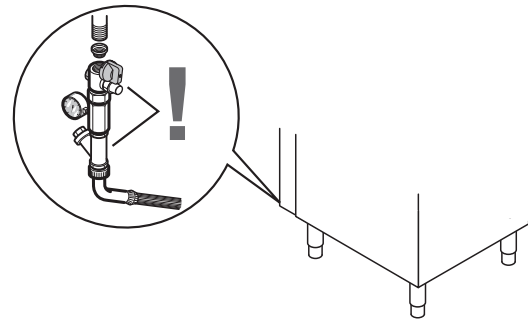



Figure 8 Water connection

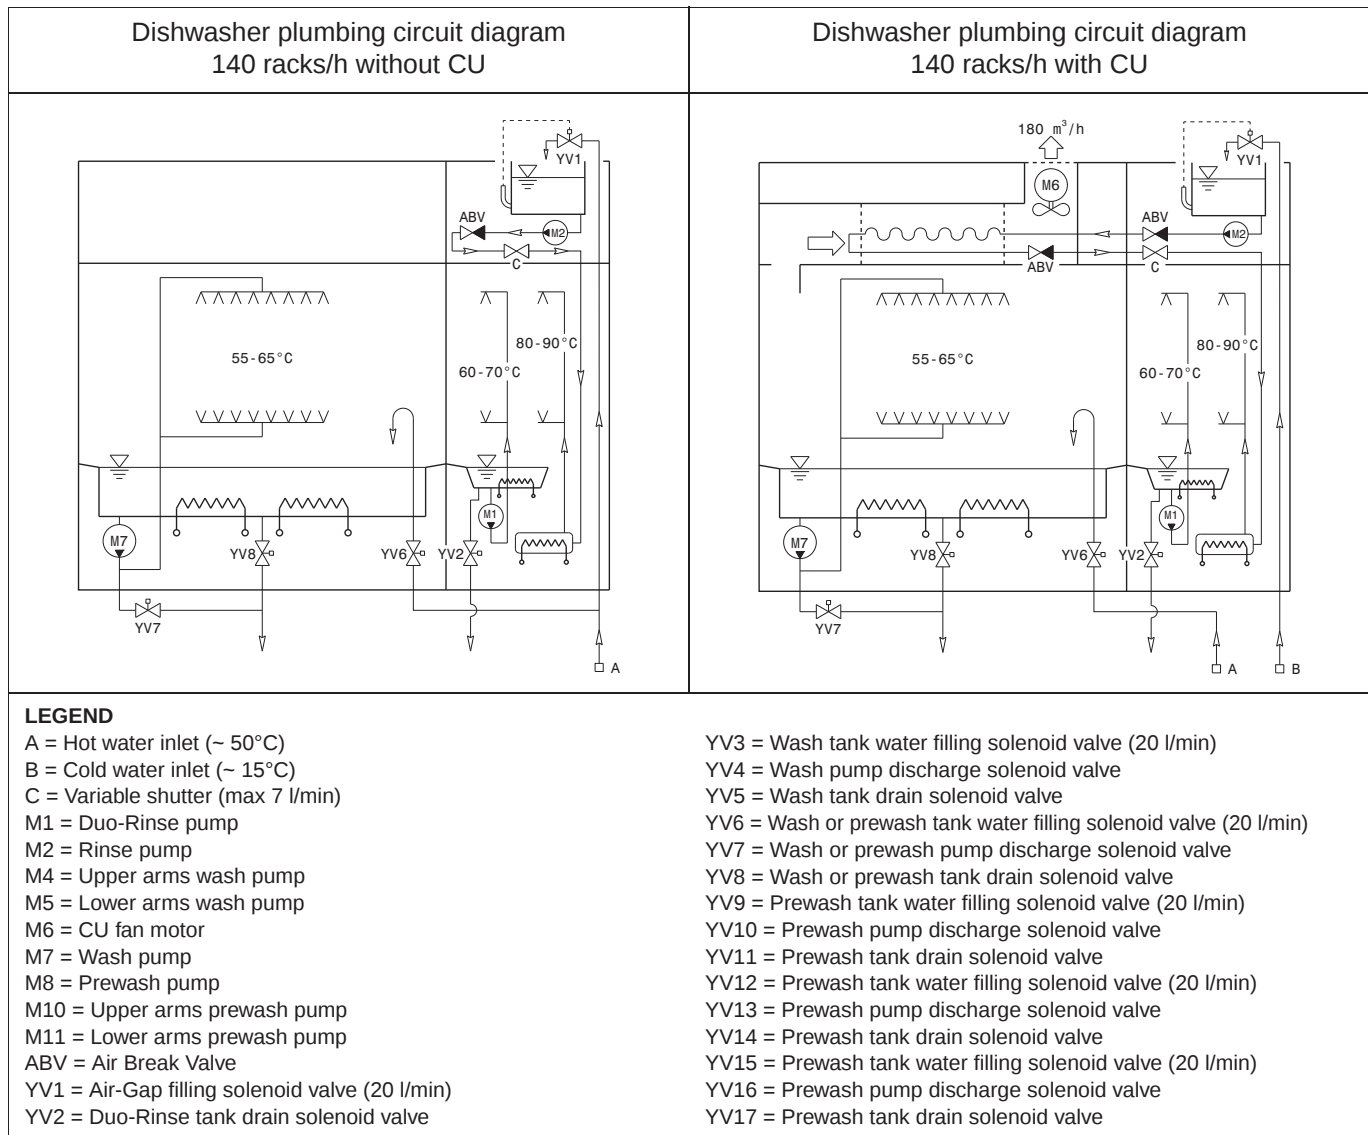


Dishwasher plumbing circuit diagram
165 racks/h without CU

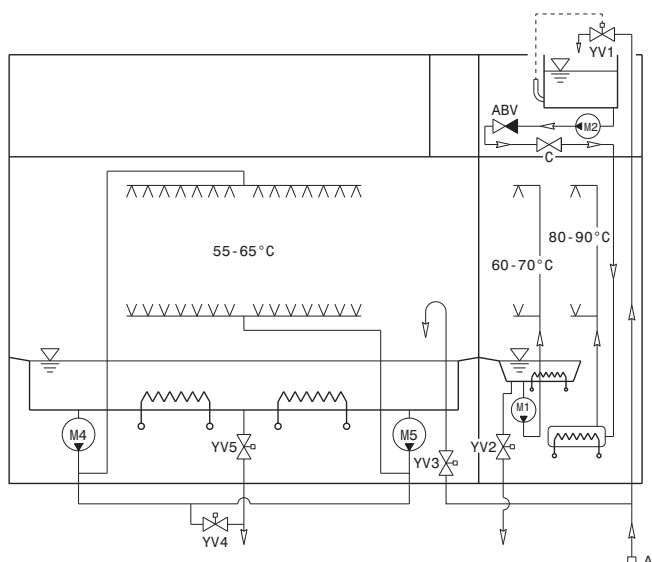

Dishwasher plumbing circuit diagram
165 racks/h with CU

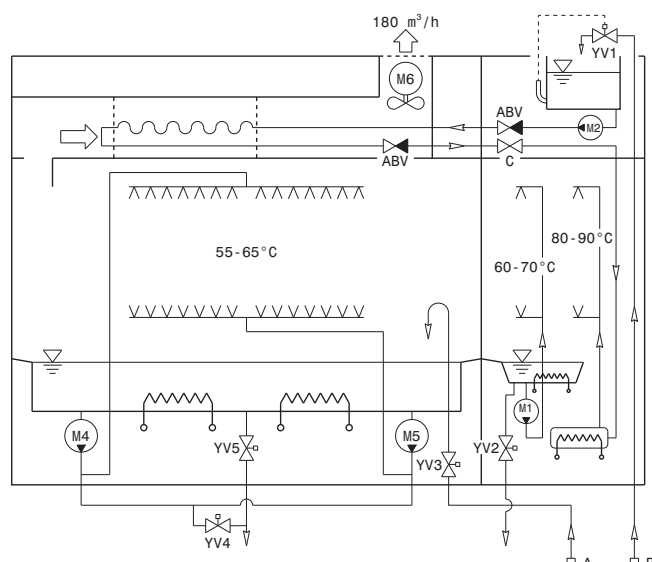

Plumbing circuit diagram, dishwashers - 180 racks/h without CU

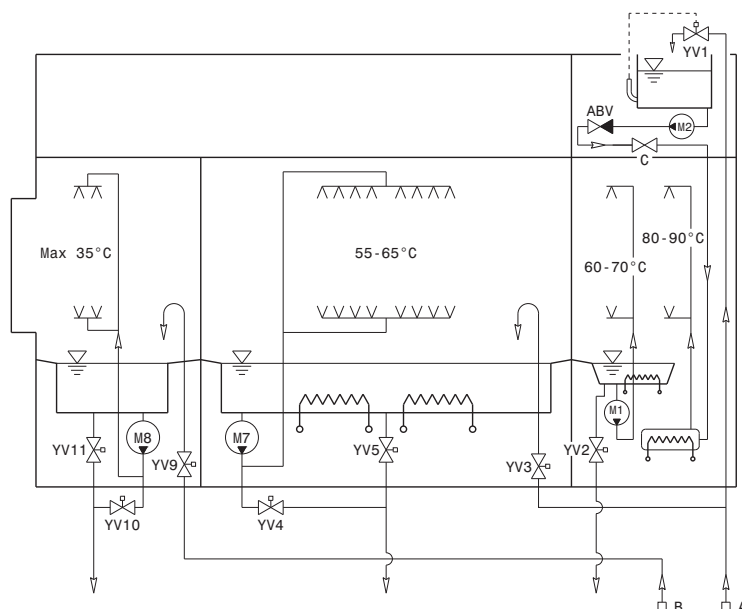


LEGEND


A = Hot water inlet (~ 50°C)
B = Cold water inlet (~ 15°C)
C = Variable shutter (max 7 l/min)
M1 = Duo-Rinse pump
M2 = Rinse pump
M4 = Upper arms wash pump
M5 = Lower arms wash pump
M6 = CU fan motor
M7 = Wash pump
M8 = Prewash pump
M10 = Upper arms prewash pump
M11 = Lower arms prewash pump
ABV = Air Break Valve
YV1 = Air-Gap filling solenoid valve (20 l/min)
YV2 = Duo-Rinse tank drain solenoid valve

YV3 = Wash tank water filling solenoid valve (20 l/min)
YV4 = Wash pump discharge solenoid valve
YV5 = Wash tank drain solenoid valve
YV6 = Wash or prewash tank water filling solenoid valve (20 l/min)
YV7 = Wash or prewash pump discharge solenoid valve
YV8 = Wash or prewash tank drain solenoid valve
YV9 = Prewash tank water filling solenoid valve (20 l/min)
YV10 = Prewash pump discharge solenoid valve
YV11 = Prewash tank drain solenoid valve
YV12 = Prewash tank water filling solenoid valve (20 l/min)
YV13 = Prewash pump discharge solenoid valve
YV14 = Prewash tank drain solenoid valve
YV15 = Prewash tank water filling solenoid valve (20 l/min)
YV16 = Prewash pump discharge solenoid valve
YV17 = Prewash tank drain solenoid valve

Plumbing circuit diagram, dishwashers - 180 racks/h with CU

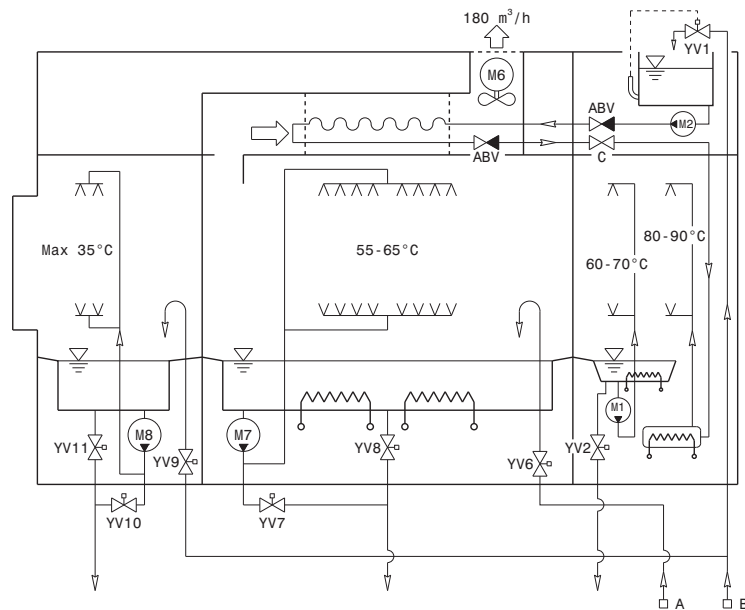

Plumbing circuit diagram, dishwashers - 200 racks/h without CU

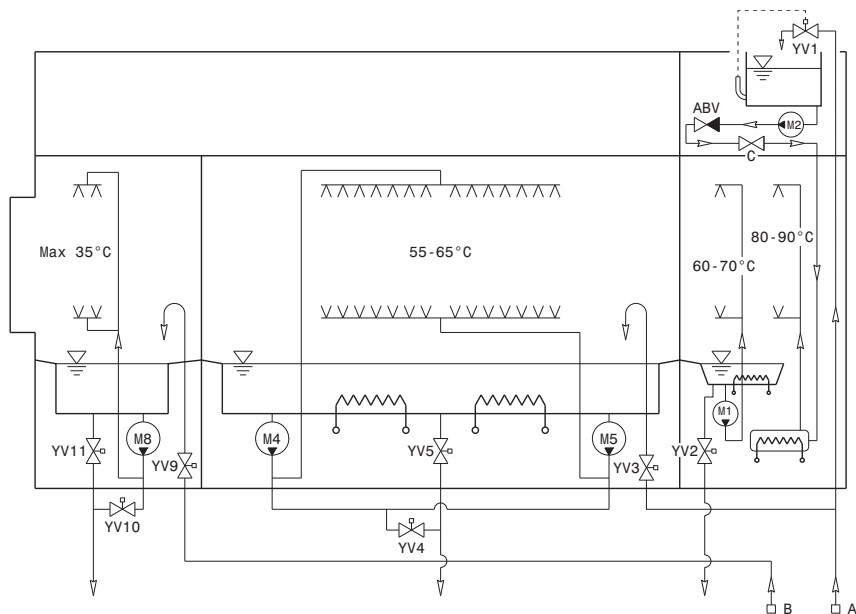

LEGEND

A = Hot water inlet (~ 50°C)
B = Cold water inlet (~ 15°C)
C = Variable shutter (max 7 l/min)

M1 = Duo-Rinse pump
M2 = Rinse pump
M4 = Upper arms wash pump
M5 = Lower arms wash pump

M6 = CU fan motor

M7 = Wash pump

M8 = Prewash pump

M10 = Upper arms prewash pump

M11 = Lower arms prewash pump

ABV = Air Break Valve

YV1 = Air-Gap filling solenoid valve (20 l/min)

YV2 = Duo-Rinse tank drain solenoid valve

YV3 = Wash tank water filling solenoid valve (20 l/min)

YV4 = Wash pump discharge solenoid valve

YV5 = Wash tank drain solenoid valve

YV6 = Wash or prewash tank water filling solenoid valve (20 l/min)

YV7 = Wash or prewash pump discharge solenoid valve

YV8 = Wash or prewash tank drain solenoid valve

YV9 = Prewash tank water filling solenoid valve (20 l/min)

YV10 = Prewash pump discharge solenoid valve

YV11 = Prewash tank drain solenoid valve

YV12 = Prewash tank water filling solenoid valve (20 l/min)

YV13 = Prewash pump discharge solenoid valve


YV14 = Prewash tank drain solenoid valve

YV15 = Prewash tank water filling solenoid valve (20 l/min)


YV16 = Prewash pump discharge solenoid valve

YV17 = Prewash tank drain solenoid valve

Plumbing circuit diagram, dishwashers - 200 racks/h with CU

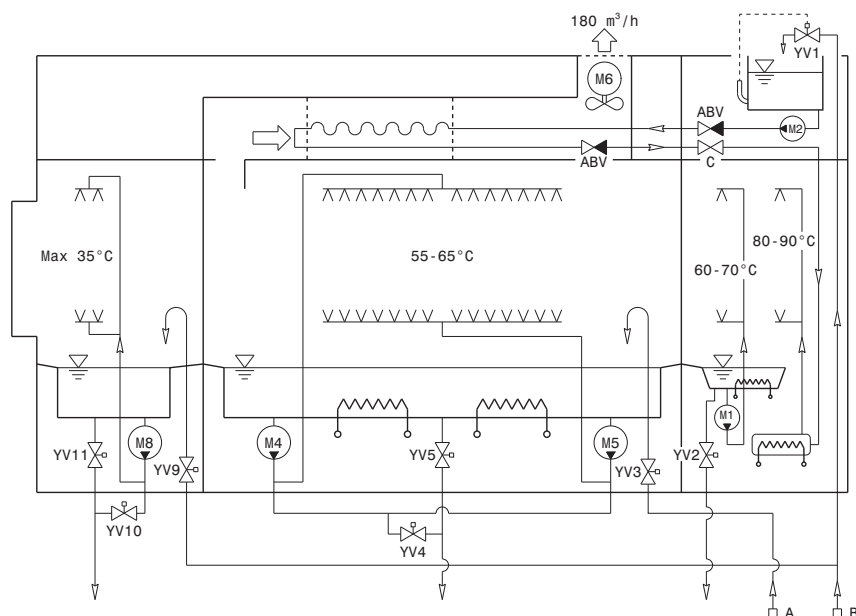

Plumbing circuit diagram, dishwashers - 250 racks/h without CU

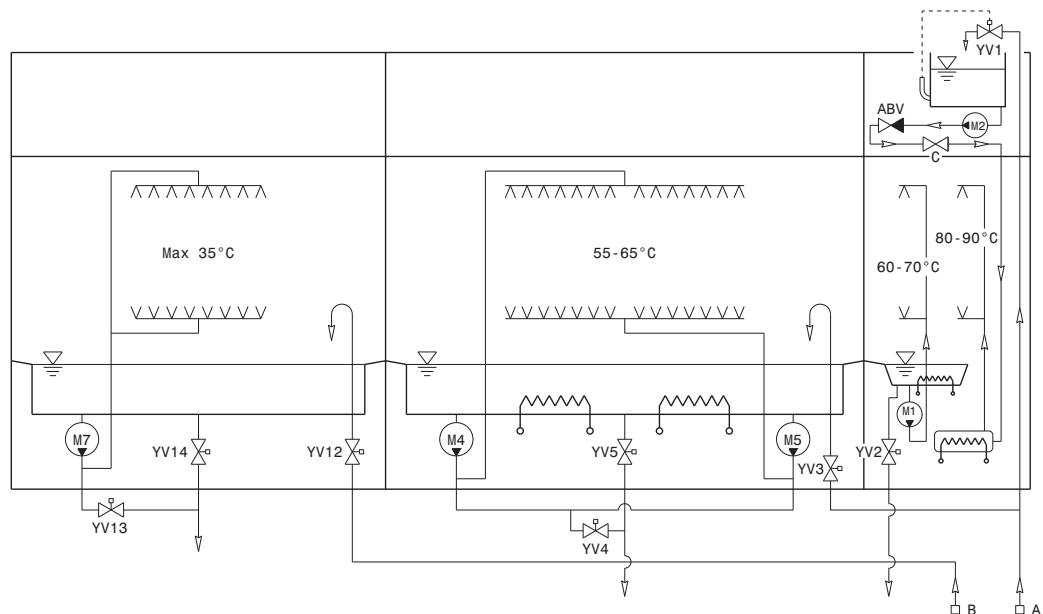


LEGEND


A = Hot water inlet (~ 50°C)
 B = Cold water inlet (~ 15°C)
 C = Variable shutter (max 7 l/min)
 M1 = Duo-Rinse pump
 M2 = Rinse pump
 M4 = Upper arms wash pump
 M5 = Lower arms wash pump
 M6 = CU fan motor
 M7 = Wash pump
 M8 = Prewash pump
 M10 = Upper arms prewash pump
 M11 = Lower arms prewash pump
 ABV = Air Break Valve
 YV1 = Air-Gap filling solenoid valve (20 l/min)
 YV2 = Duo-Rinse tank drain solenoid valve

YV3 = Wash tank water filling solenoid valve (20 l/min)
 YV4 = Wash pump discharge solenoid valve
 YV5 = Wash tank drain solenoid valve
 YV6 = Wash or prewash tank water filling solenoid valve (20 l/min)
 YV7 = Wash or prewash pump discharge solenoid valve
 YV8 = Wash or prewash tank drain solenoid valve
 YV9 = Prewash tank water filling solenoid valve (20 l/min)
 YV10 = Prewash pump discharge solenoid valve
 YV11 = Prewash tank drain solenoid valve
 YV12 = Prewash tank water filling solenoid valve (20 l/min)
 YV13 = Prewash pump discharge solenoid valve
 YV14 = Prewash tank drain solenoid valve
 YV15 = Prewash tank water filling solenoid valve (20 l/min)
 YV16 = Prewash pump discharge solenoid valve
 YV17 = Prewash tank drain solenoid valve

Plumbing circuit diagram, dishwashers - 250 racks/h with CU

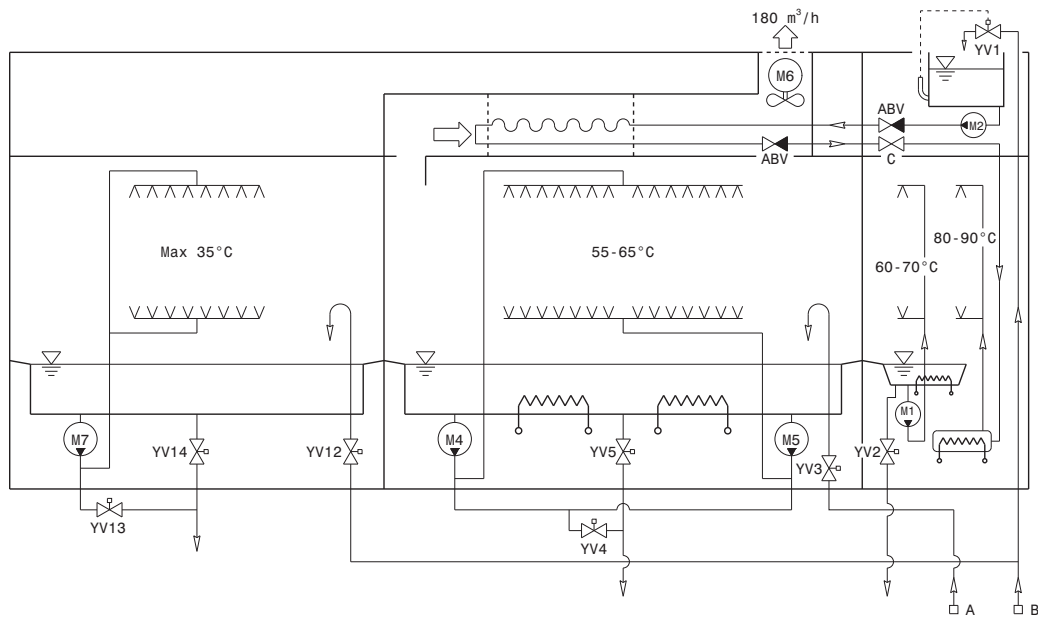

Plumbing circuit diagram, dishwashers - 300 racks/h without CU

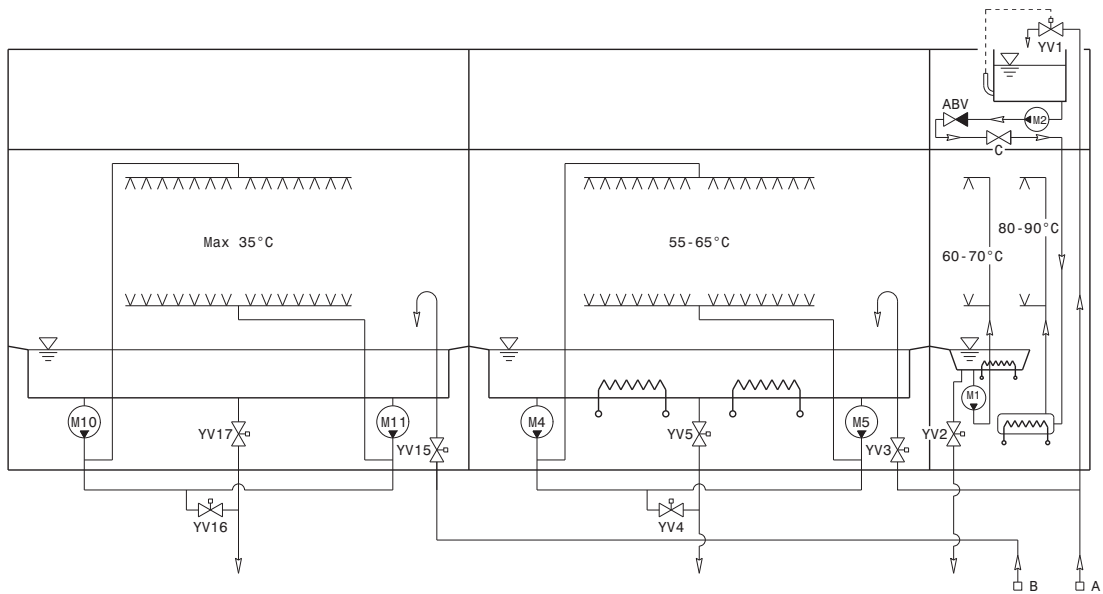


LEGEND

A = Hot water inlet (~ 50°C)
B = Cold water inlet (~ 15°C)
C = Variable shutter (max 7 l/min)

M1 = Duo-Rinse pump
M2 = Rinse pump
M4 = Upper arms wash pump
M5 = Lower arms wash pump
M6 = CU fan motor
M7 = Wash pump
M8 = Prewash pump
M10 = Upper arms prewash pump
M11 = Lower arms prewash pump
ABV = Air Break Valve
YV1 = Air-Gap filling solenoid valve (20 l/min)
YV2 = Duo-Rinse tank drain solenoid valve

YV3 = Wash tank water filling solenoid valve (20 l/min)
YV4 = Wash pump discharge solenoid valve
YV5 = Wash tank drain solenoid valve
YV6 = Wash or prewash tank water filling solenoid valve (20 l/min)
YV7 = Wash or prewash pump discharge solenoid valve
YV8 = Wash or prewash tank drain solenoid valve
YV9 = Prewash tank water filling solenoid valve (20 l/min)
YV10 = Prewash pump discharge solenoid valve
YV11 = Prewash tank drain solenoid valve
YV12 = Prewash tank water filling solenoid valve (20 l/min)
YV13 = Prewash pump discharge solenoid valve
YV14 = Prewash tank drain solenoid valve
YV15 = Prewash tank water filling solenoid valve (20 l/min)
YV16 = Prewash pump discharge solenoid valve
YV17 = Prewash tank drain solenoid valve

Plumbing circuit diagram, dishwashers - 300 racks/h with CU

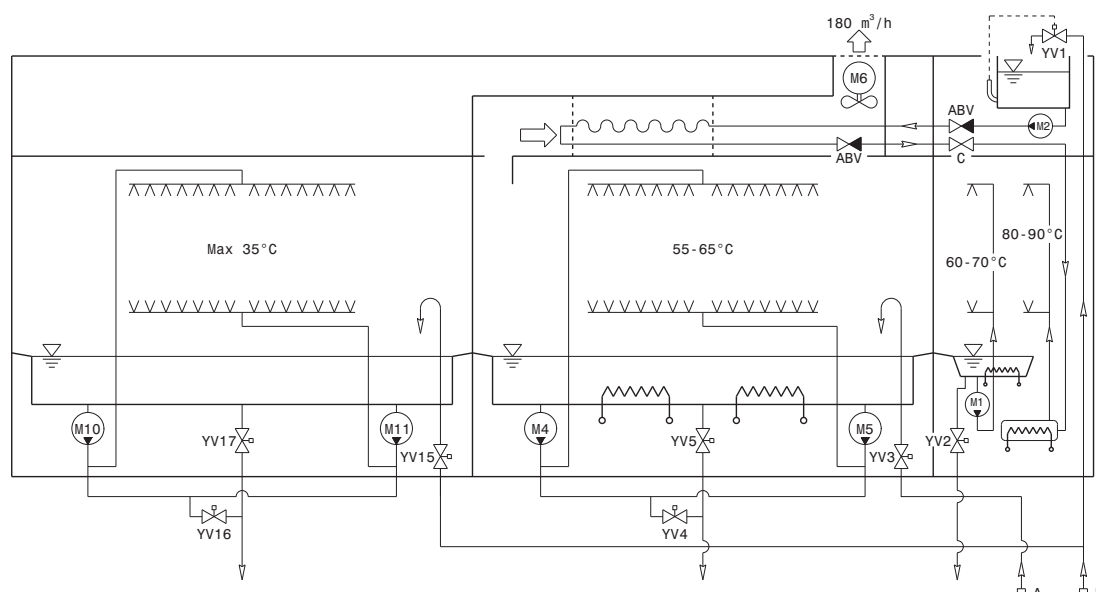

LEGEND

A = Hot water inlet (~ 50°C)
B = Cold water inlet (~ 15°C)
C = Variable shutter (max 7 l/min)
M1 = Duo-Rinse pump
M2 = Rinse pump
M4 = Upper arms wash pump
M5 = Lower arms wash pump
M6 = CU fan motor
M7 = Wash pump
M8 = Prewash pump
M10 = Upper arms prewash pump
M11 = Lower arms prewash pump
ABV = Air Break Valve
YV1 = Air-Gap filling solenoid valve (20 l/min)
YV2 = Duo-Rinse tank drain solenoid valve

YV3 = Wash tank water filling solenoid valve (20 l/min)
YV4 = Wash pump discharge solenoid valve
YV5 = Wash tank drain solenoid valve
YV6 = Wash or prewash tank water filling solenoid valve (20 l/min)
YV7 = Wash or prewash pump discharge solenoid valve
YV8 = Wash or prewash tank drain solenoid valve
YV9 = Prewash tank water filling solenoid valve (20 l/min)
YV10 = Prewash pump discharge solenoid valve
YV11 = Prewash tank drain solenoid valve
YV12 = Prewash tank water filling solenoid valve (20 l/min)
YV13 = Prewash pump discharge solenoid valve
YV14 = Prewash tank drain solenoid valve
YV15 = Prewash tank water filling solenoid valve (20 l/min)
YV16 = Prewash pump discharge solenoid valve
YV17 = Prewash tank drain solenoid valve

E6.2 Installation diagrams

The following installation diagrams give the machine overall dimensions and position of water and electrical connections, as well as the position of the surround elements such as walls and extractor hoods.



IMPORTANT!

The extractor hood is installed to remove the steam emitted by the machine. The hood air delivery must be calculated taking into account the machine model, the type of installation and the work environment where installed. However, an air delivery of not greater than 300 m³/h is recommended.



IMPORTANT!


In particular, make sure to position the possible extractor hood at a distance of not less than 400 mm from the machine so as not to compromise machine operation.

The hood is represented in the diagrams with the symbol:





Also, the equipment must be installed at a distance of not less than 50 mm from the wall so as not to affect correct ventilation of internal components.




The wall is represented in the diagrams with the symbol:




Installation diagram - rack-type dishwasher, 140 racks/h left (electric version)

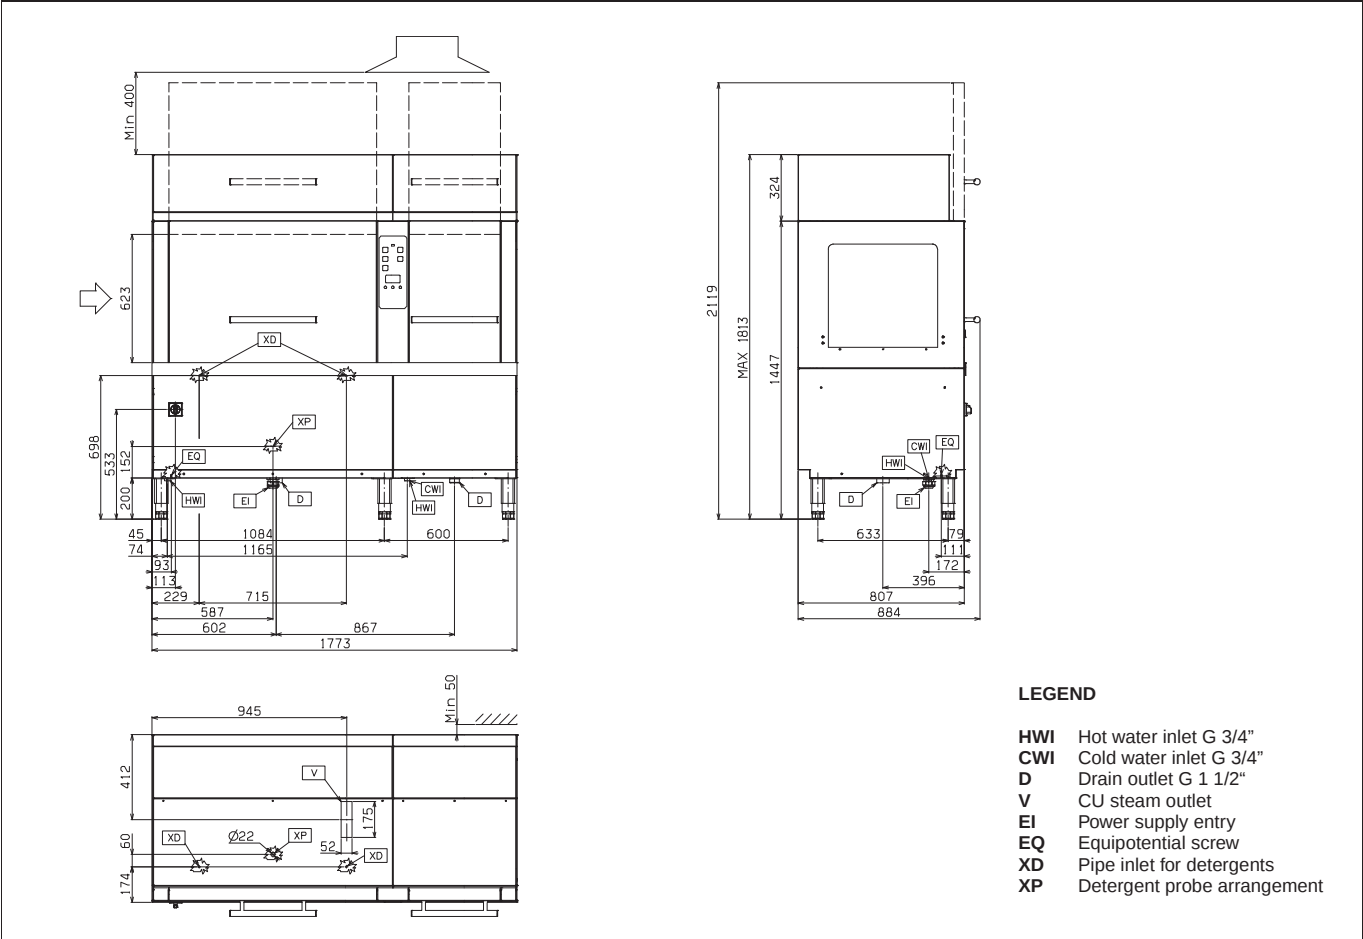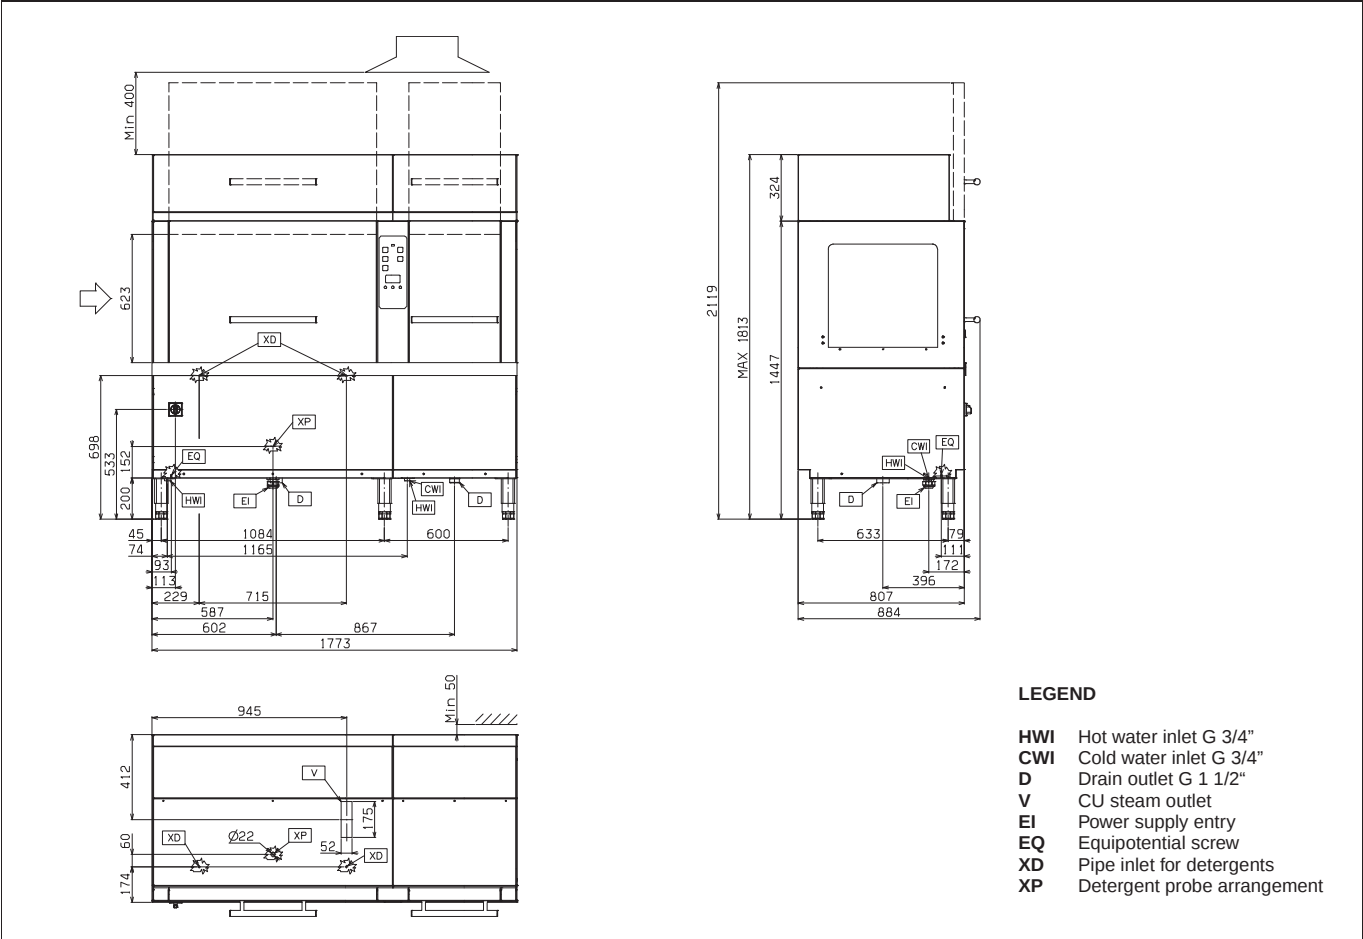

Installation diagram - rack-type dishwasher, 140 racks/h right (electric version)

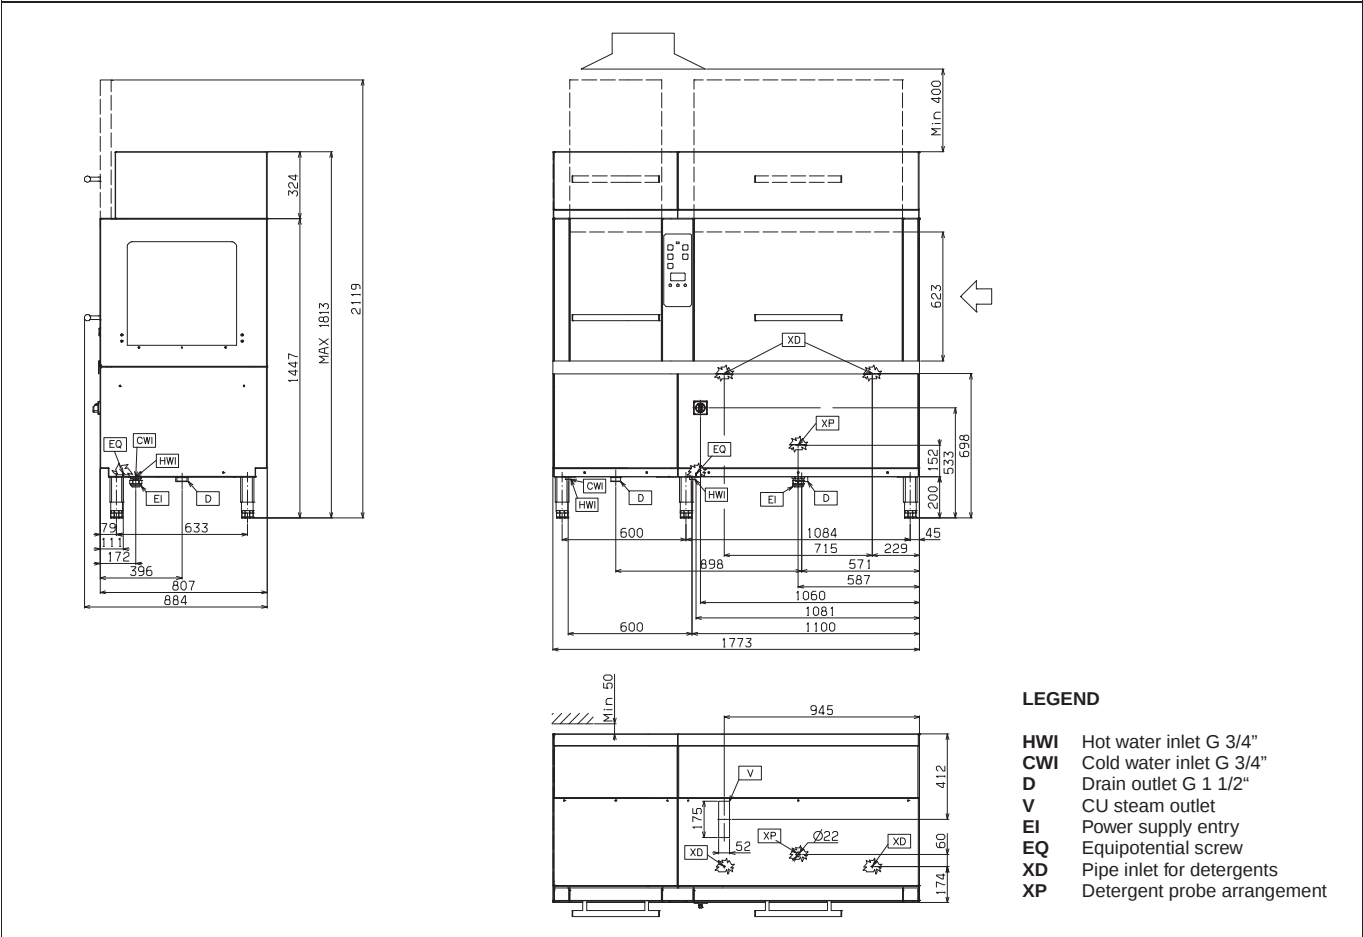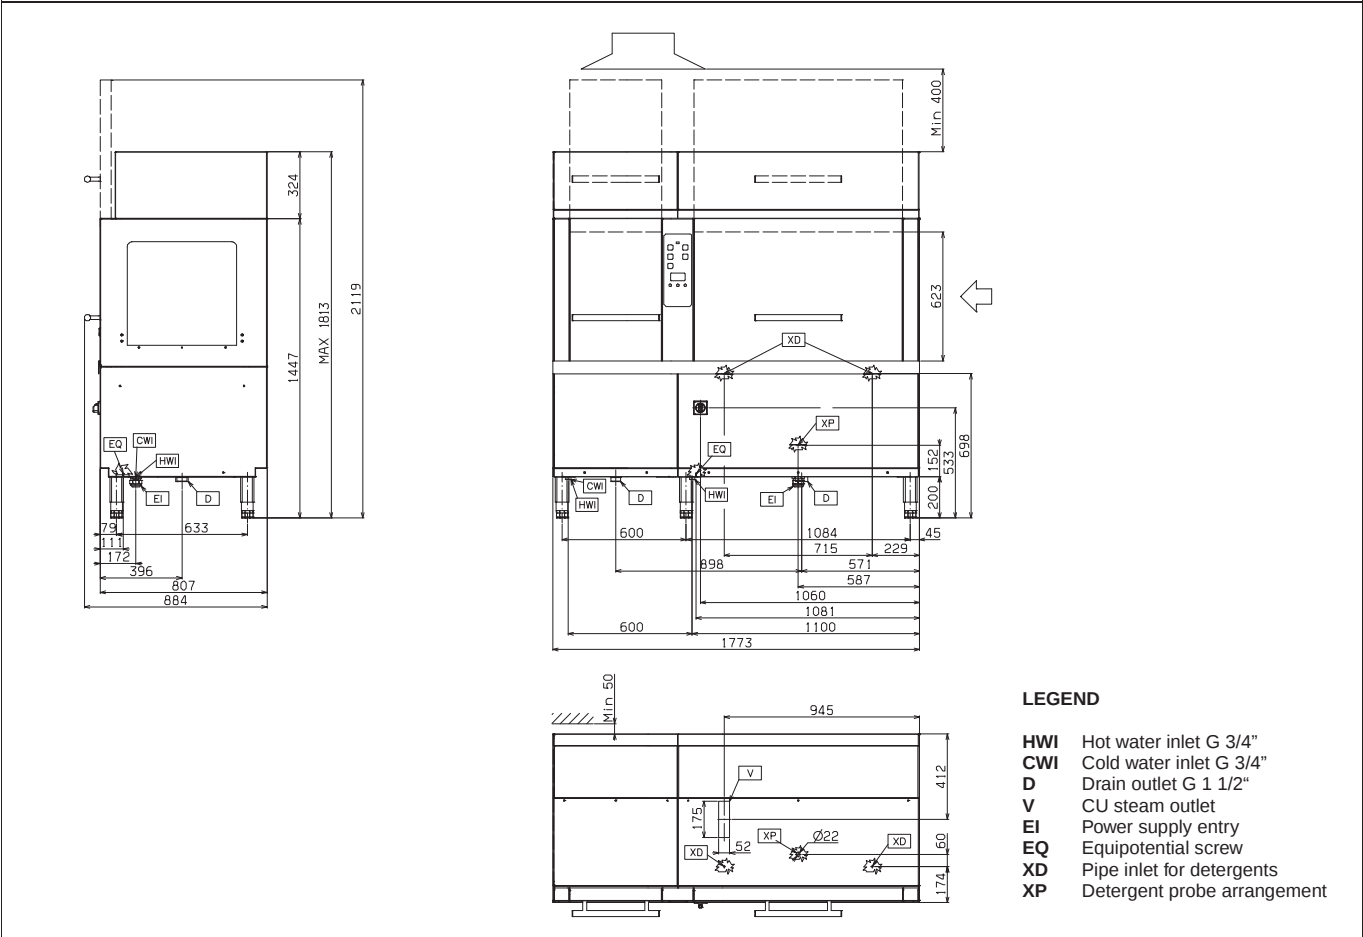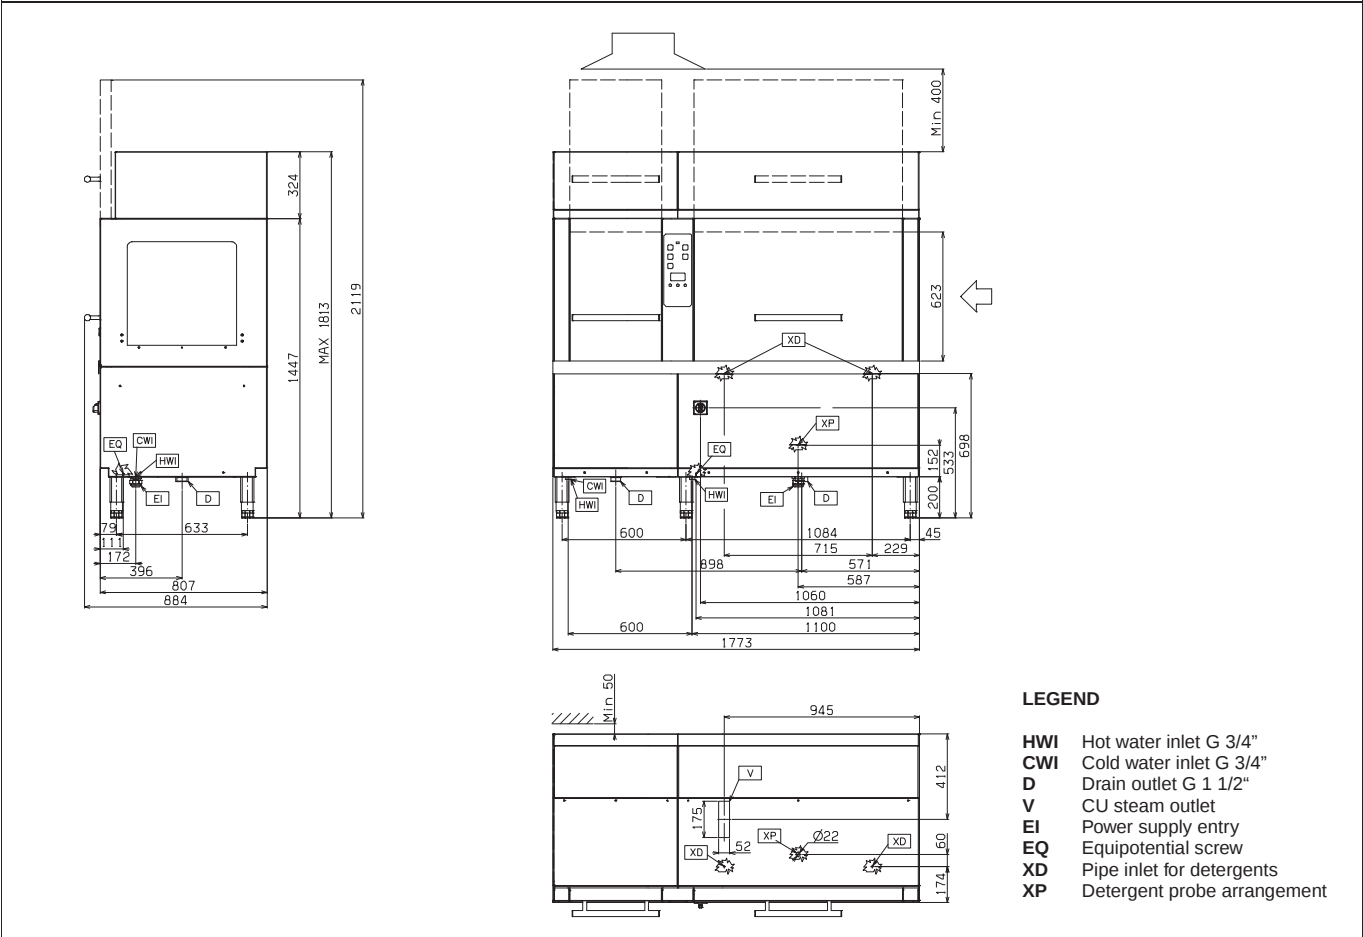


Installation diagram - rack-type dishwasher, 165 racks/h left (electric version)

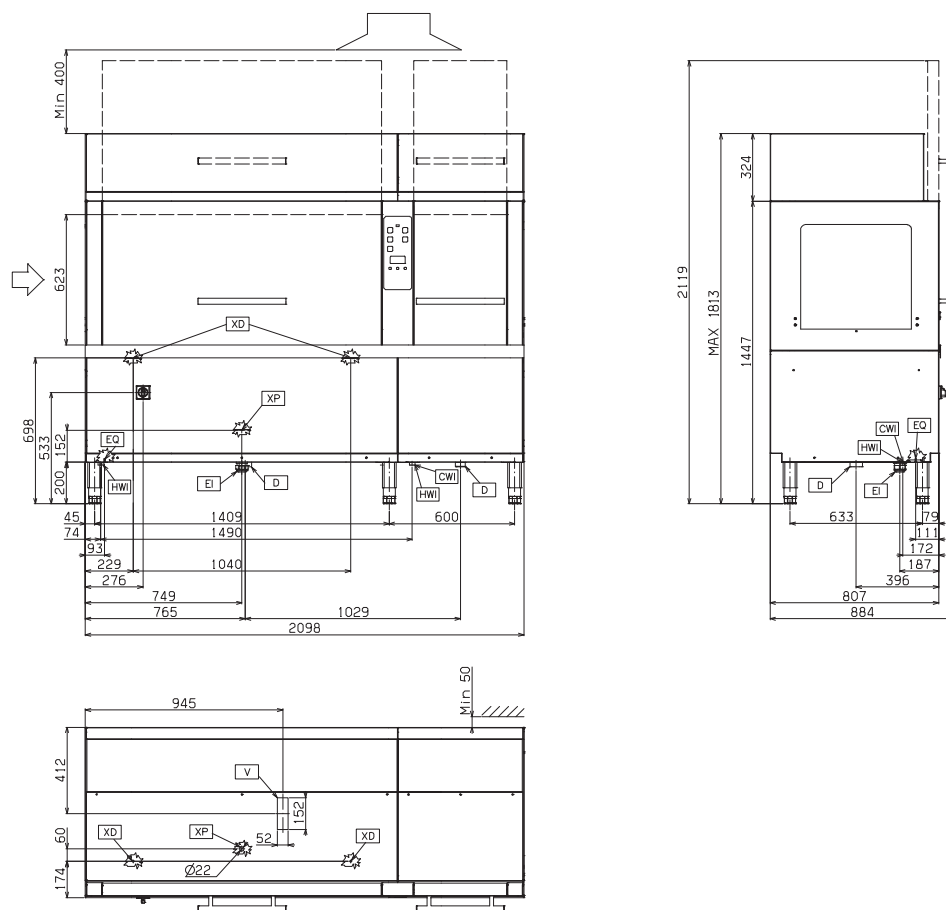

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement



Installation diagram - rack-type dishwasher, 165 racks/h right (electric version)

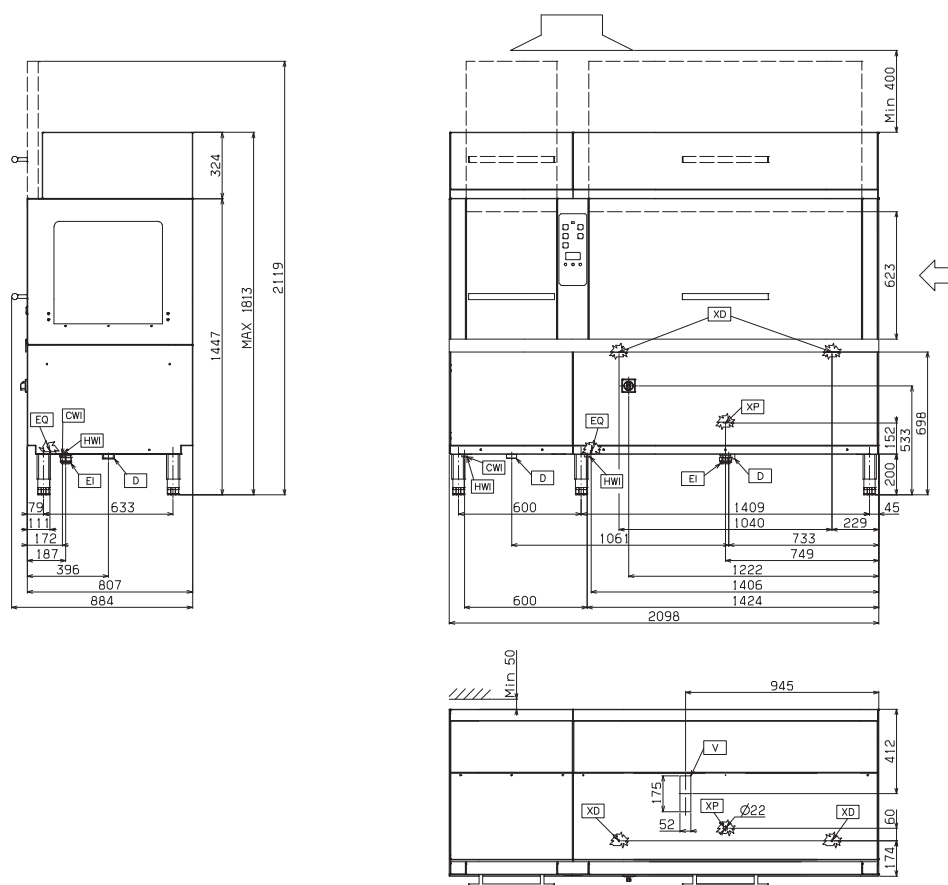

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement



Installation diagram - rack-type dishwasher, 180 racks/h left (electric version)

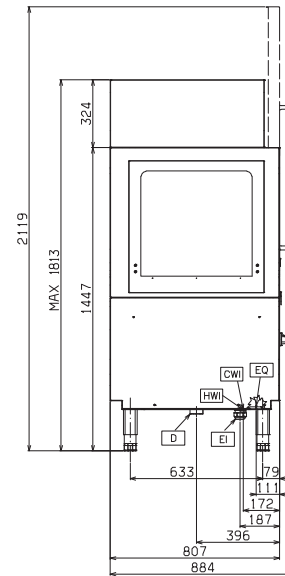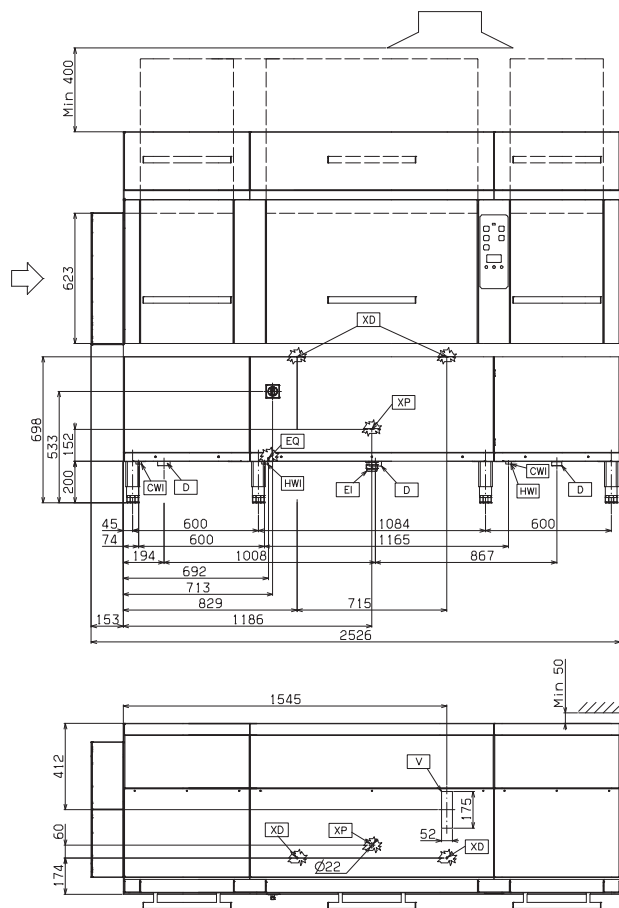

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 180 racks/h right (electric version)

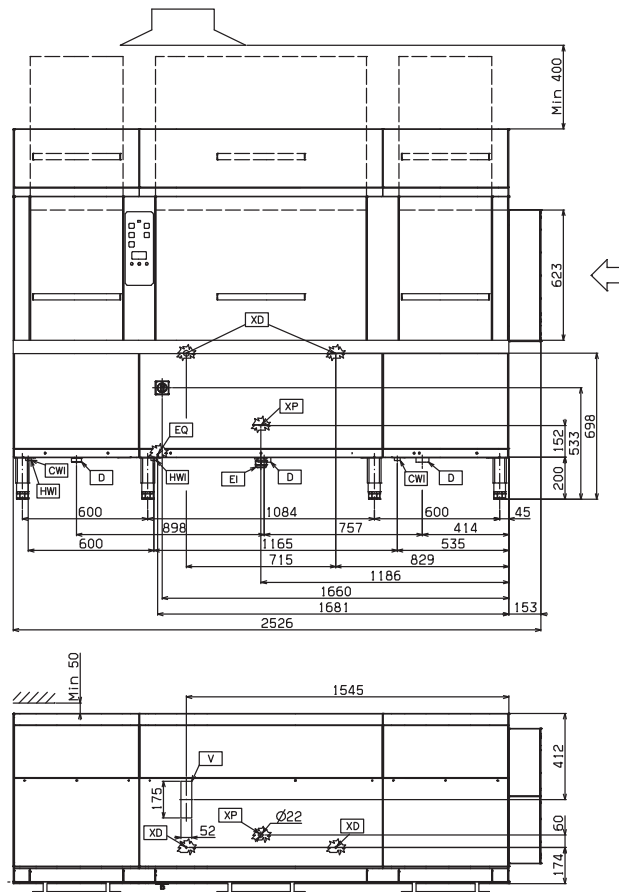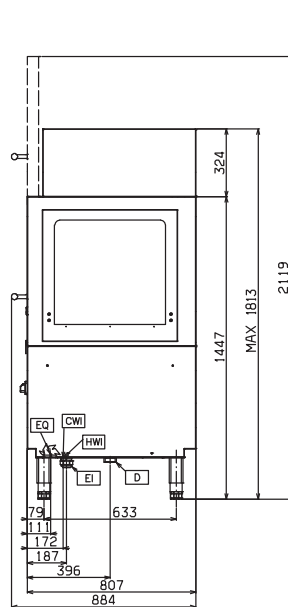

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 200 racks/h left (electric version)

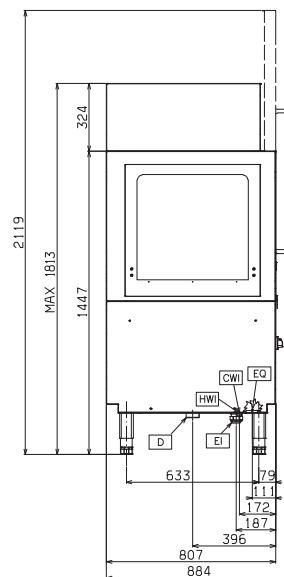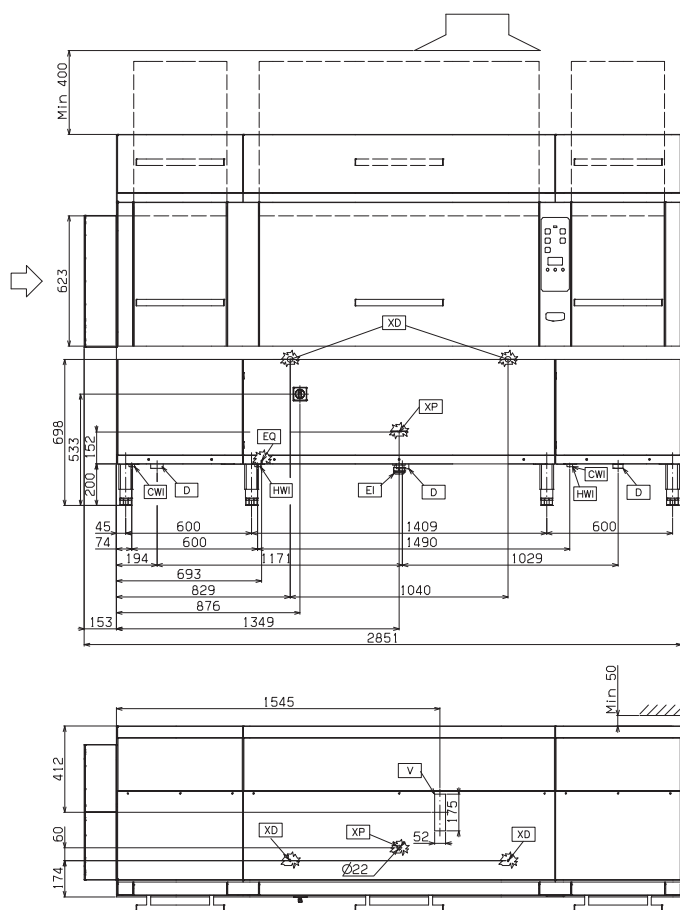

LEGEND


- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement

Installation diagram - rack-type dishwasher, 200 racks/h right (electric version)

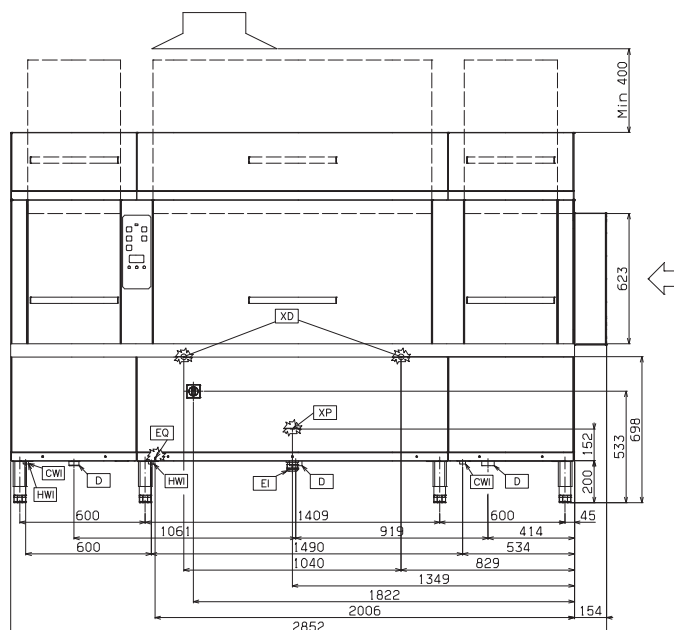
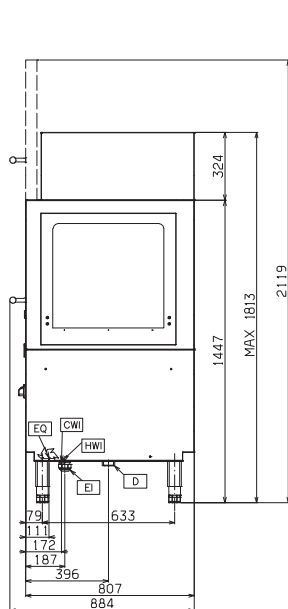


LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement

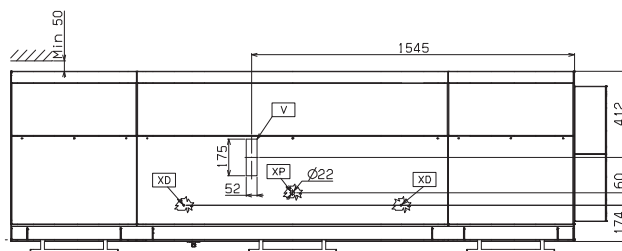


Installation diagram - rack-type dishwasher, 250 racks/h left (electric version)

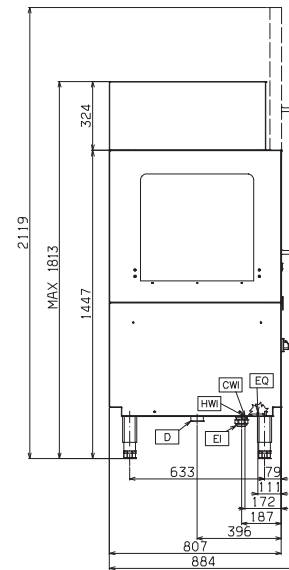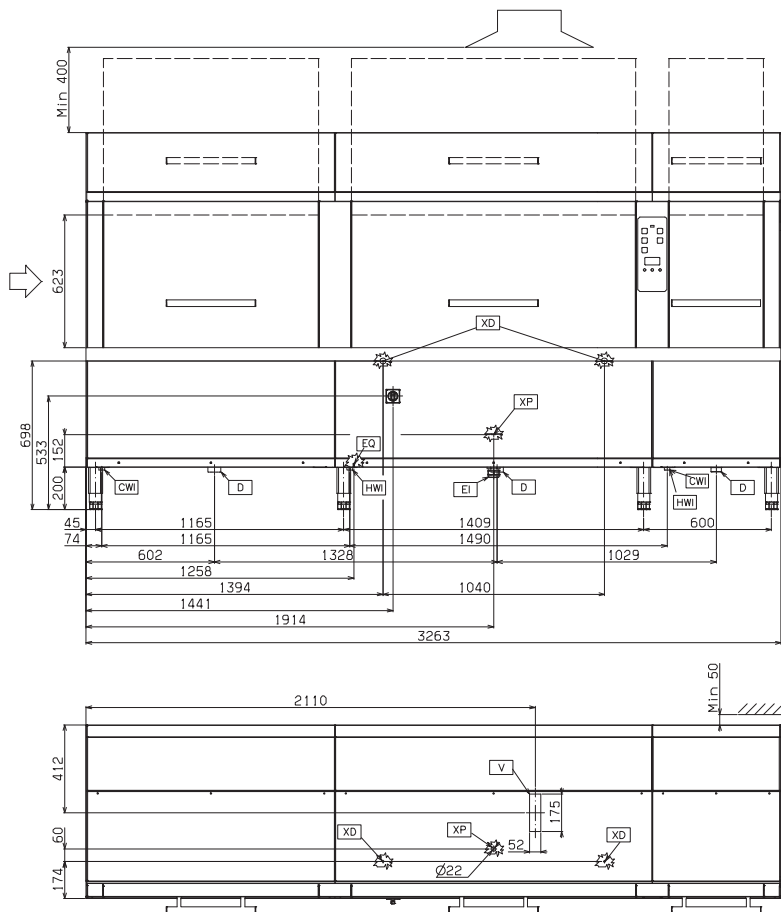

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 250 racks/h right (electric version)

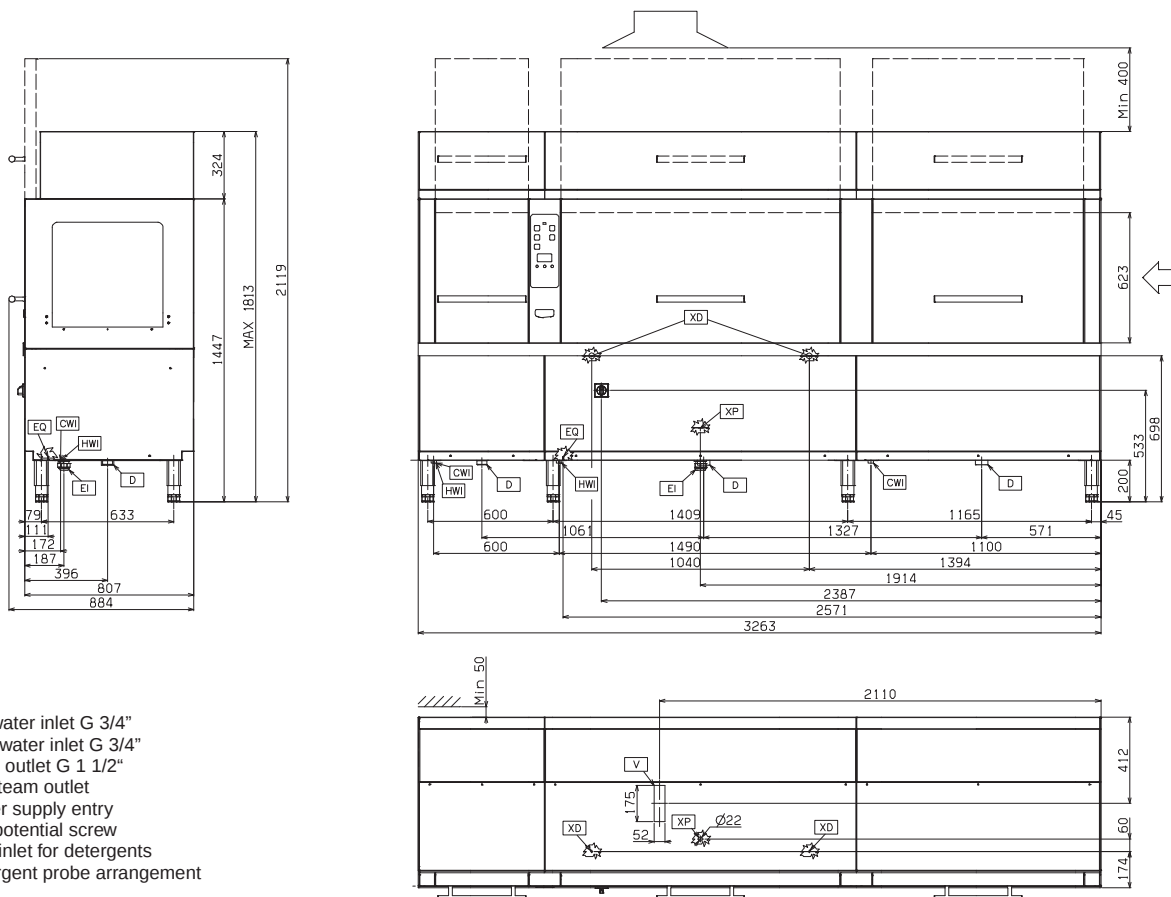

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement


Installation diagram - rack-type dishwasher, 300 racks/h left (electric version)

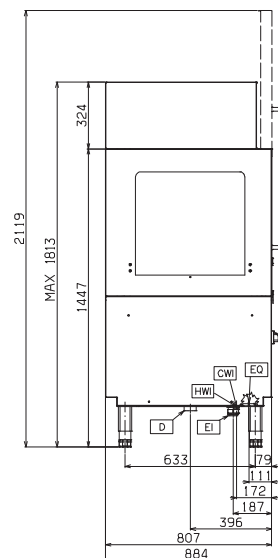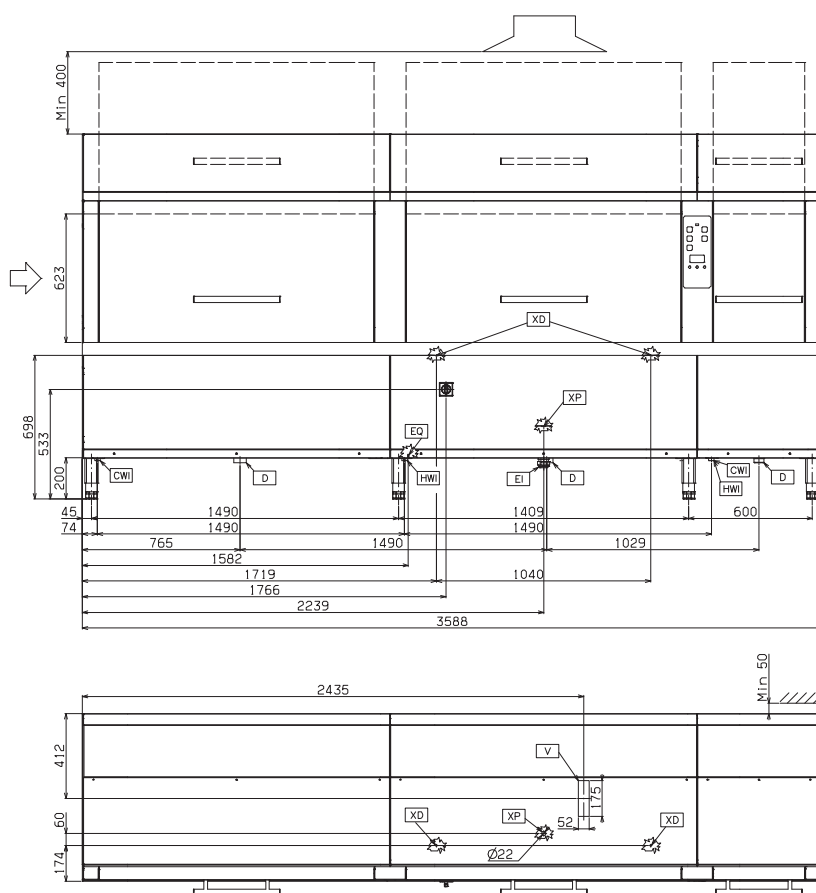

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement


Installation diagram - rack-type dishwasher, 300 racks/h right (electric version)

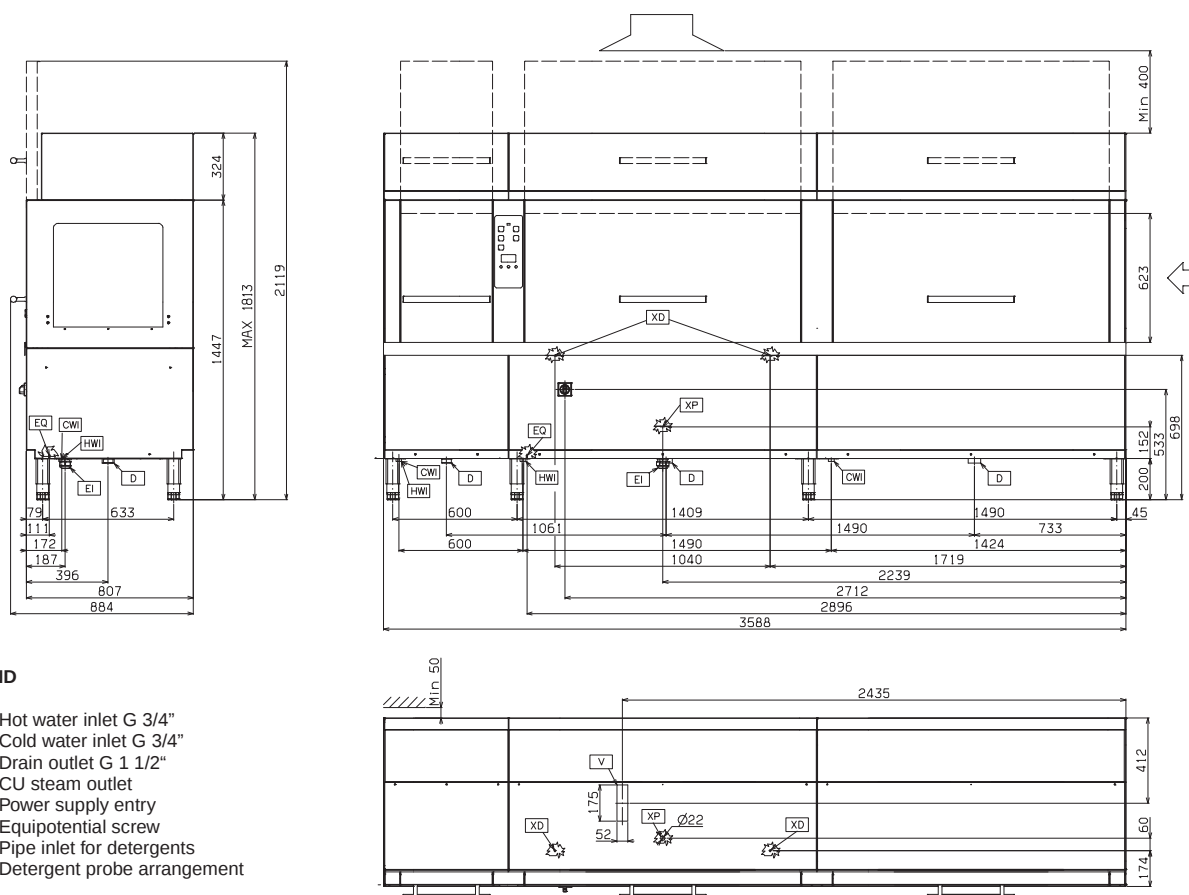

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement


Installation diagram - rack-type dishwasher, 140 racks/h left (steam version)

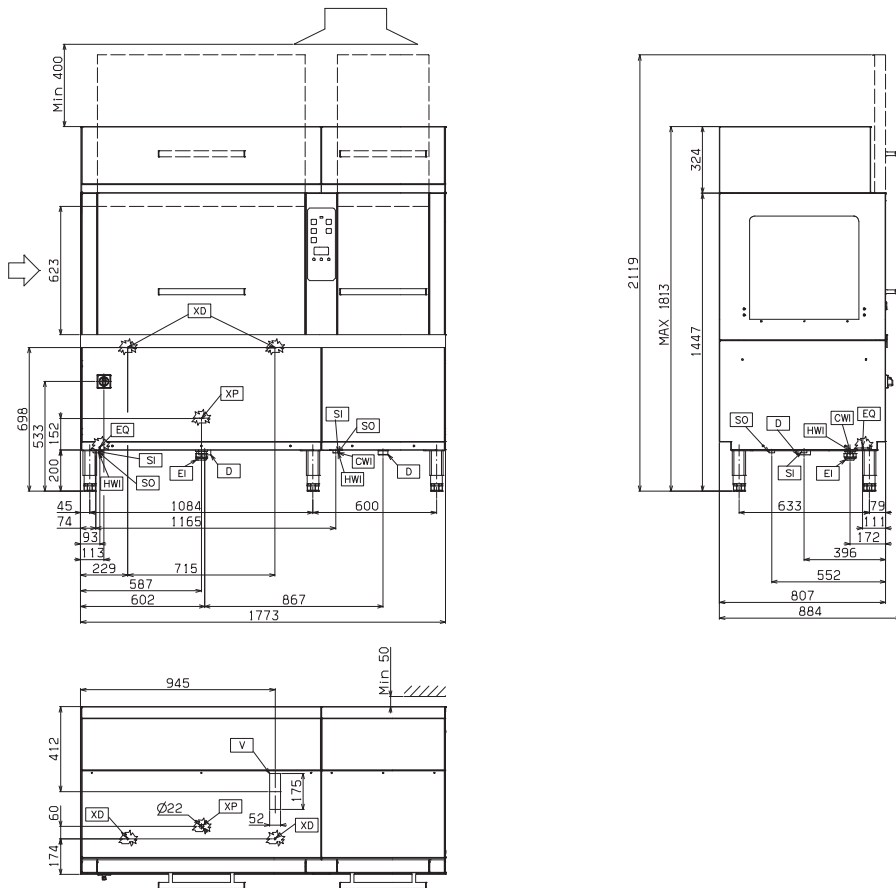

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- SO** Condensate discharge
- SI** Steam inlet
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 140 racks/h right (steam version)

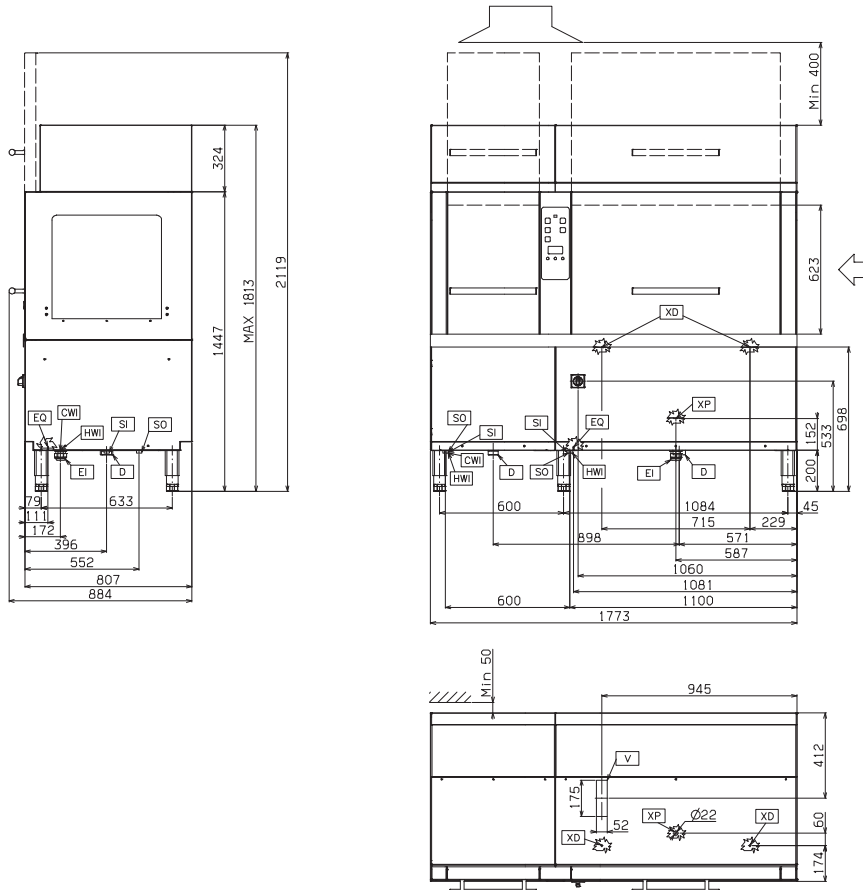

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- SO** Condensate discharge
- SI** Steam inlet
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 165 racks/h left (steam version)

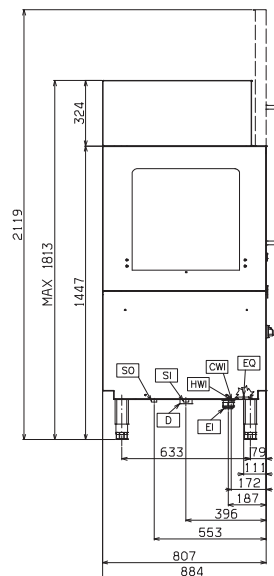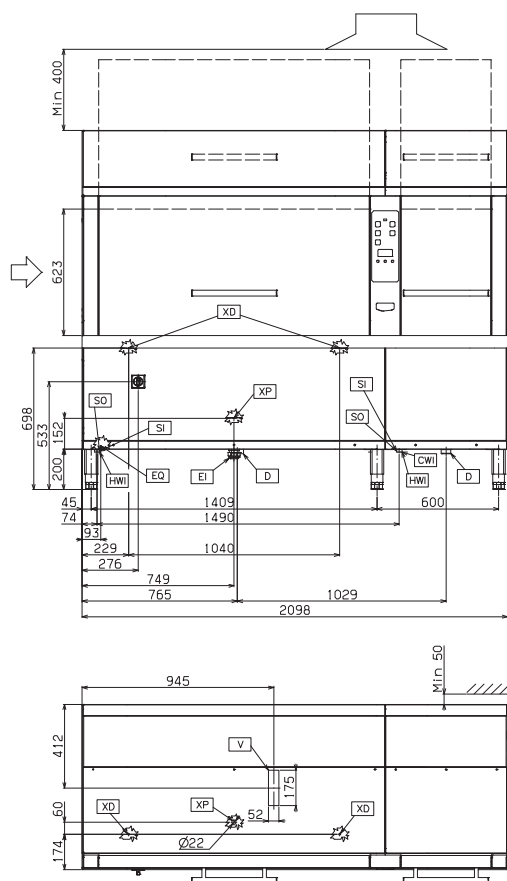

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement



Installation diagram - rack-type dishwasher, 165 racks/h right (steam version)

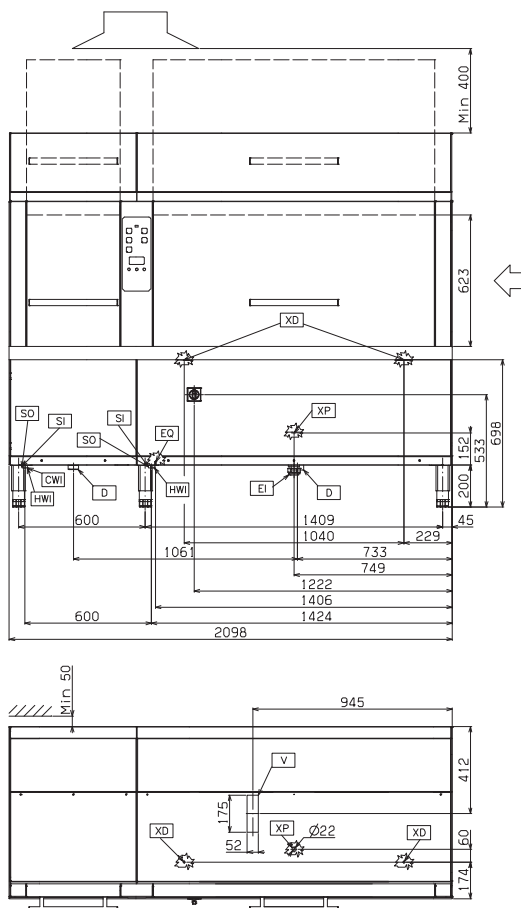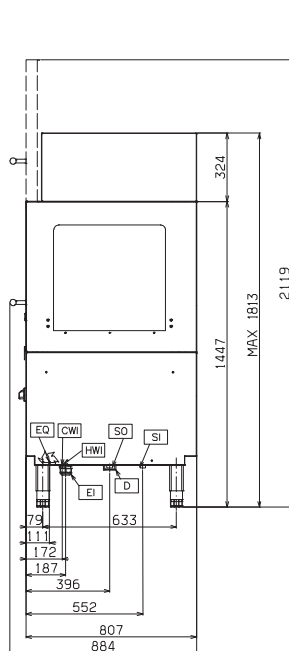

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement


Installation diagram - rack-type dishwasher, 180 racks/h left (steam version)

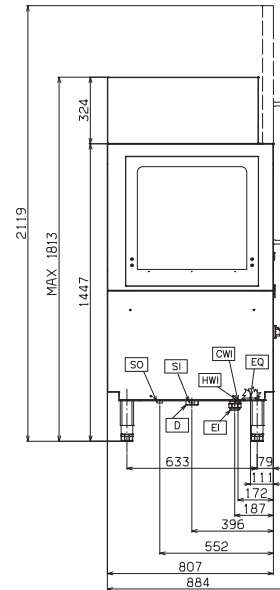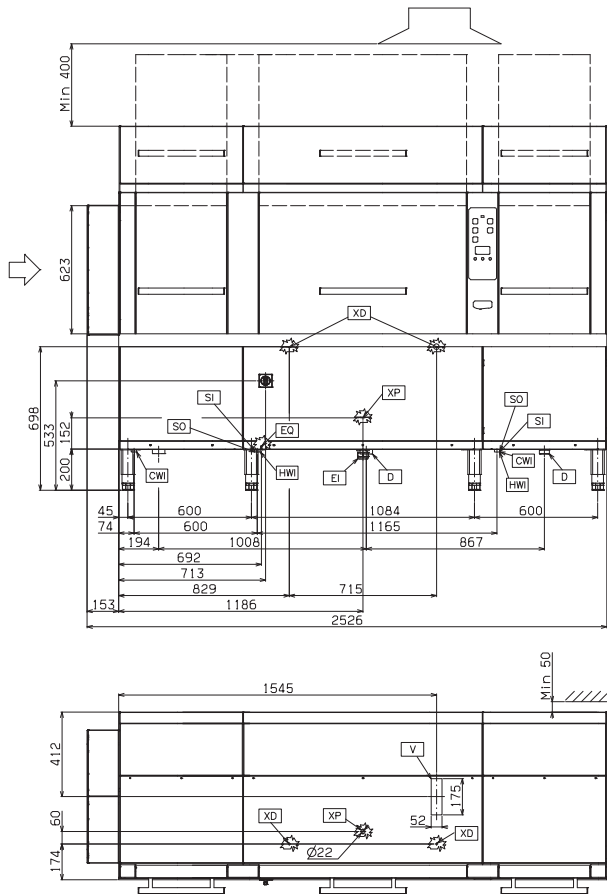

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement


Installation diagram - rack-type dishwasher, 180 racks/h right (steam version)

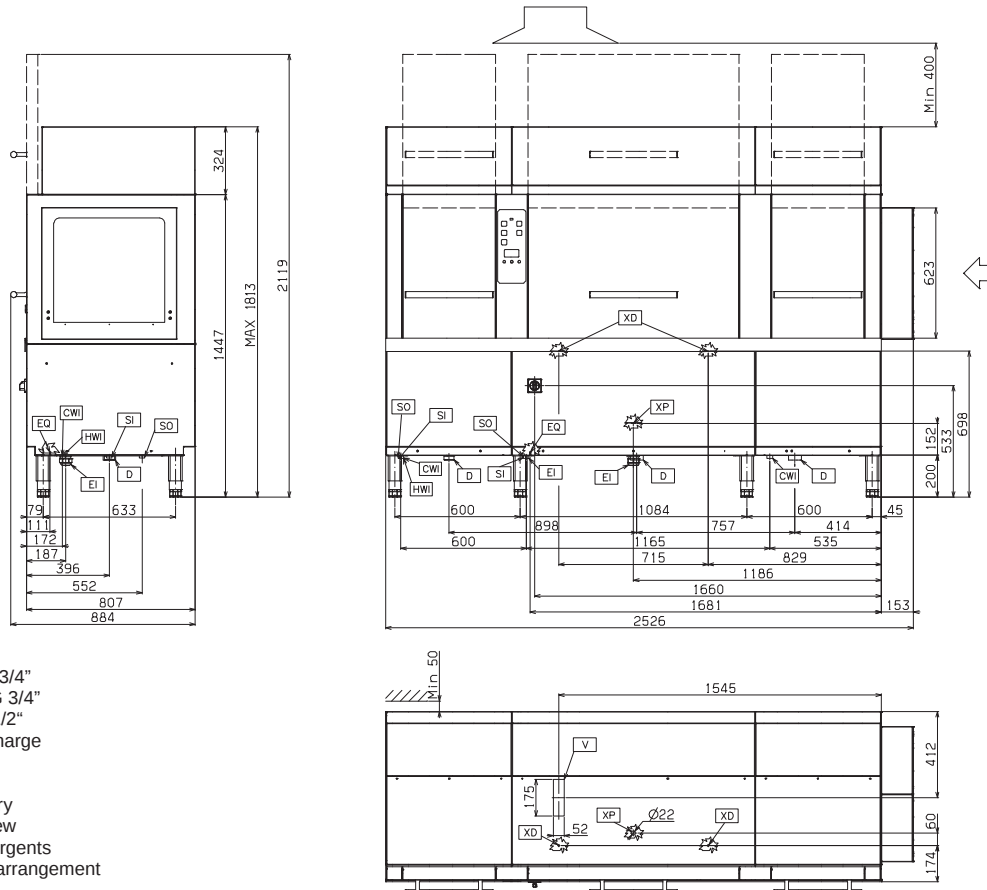


LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement



Installation diagram - rack-type dishwasher, 200 racks/h left (steam version)

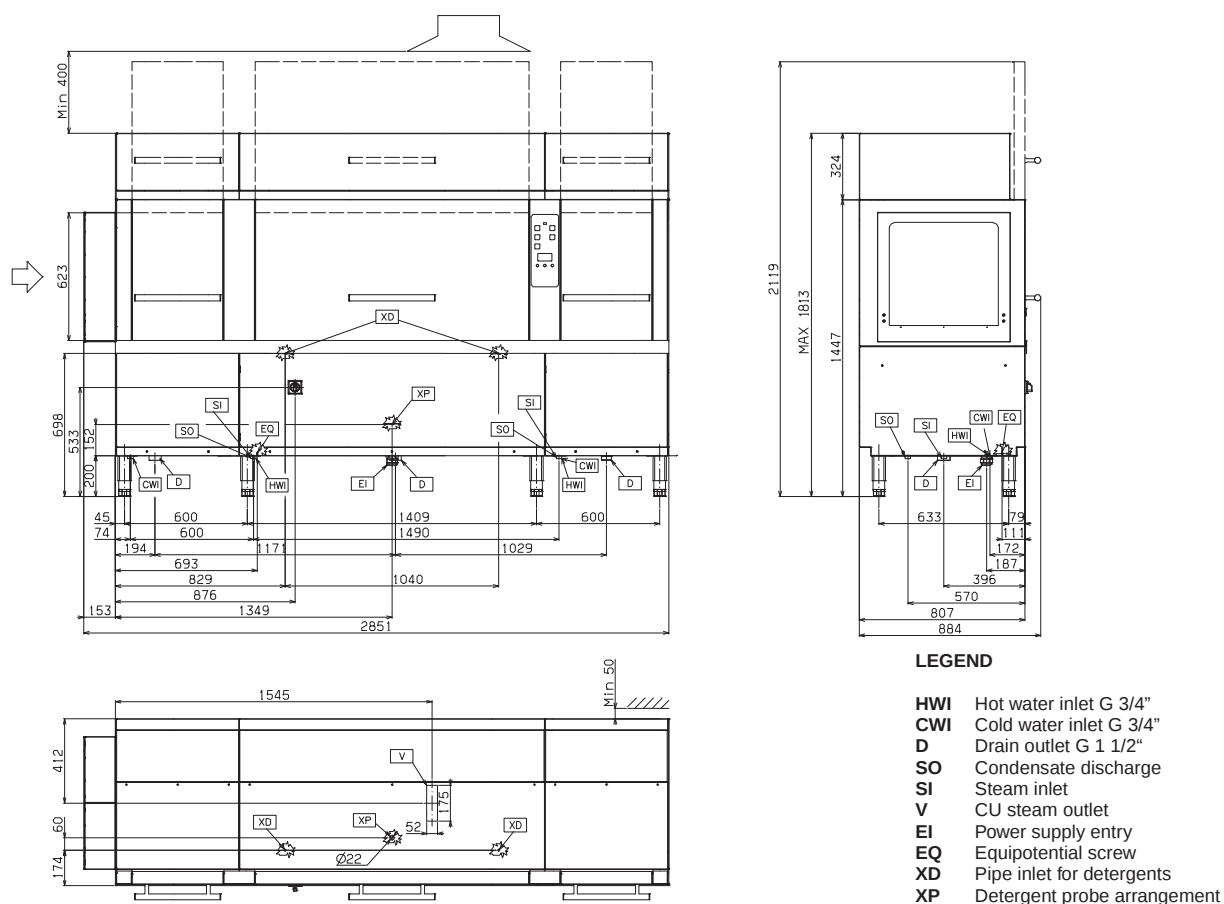

Installation diagram - rack-type dishwasher, 200 racks/h right (steam version)

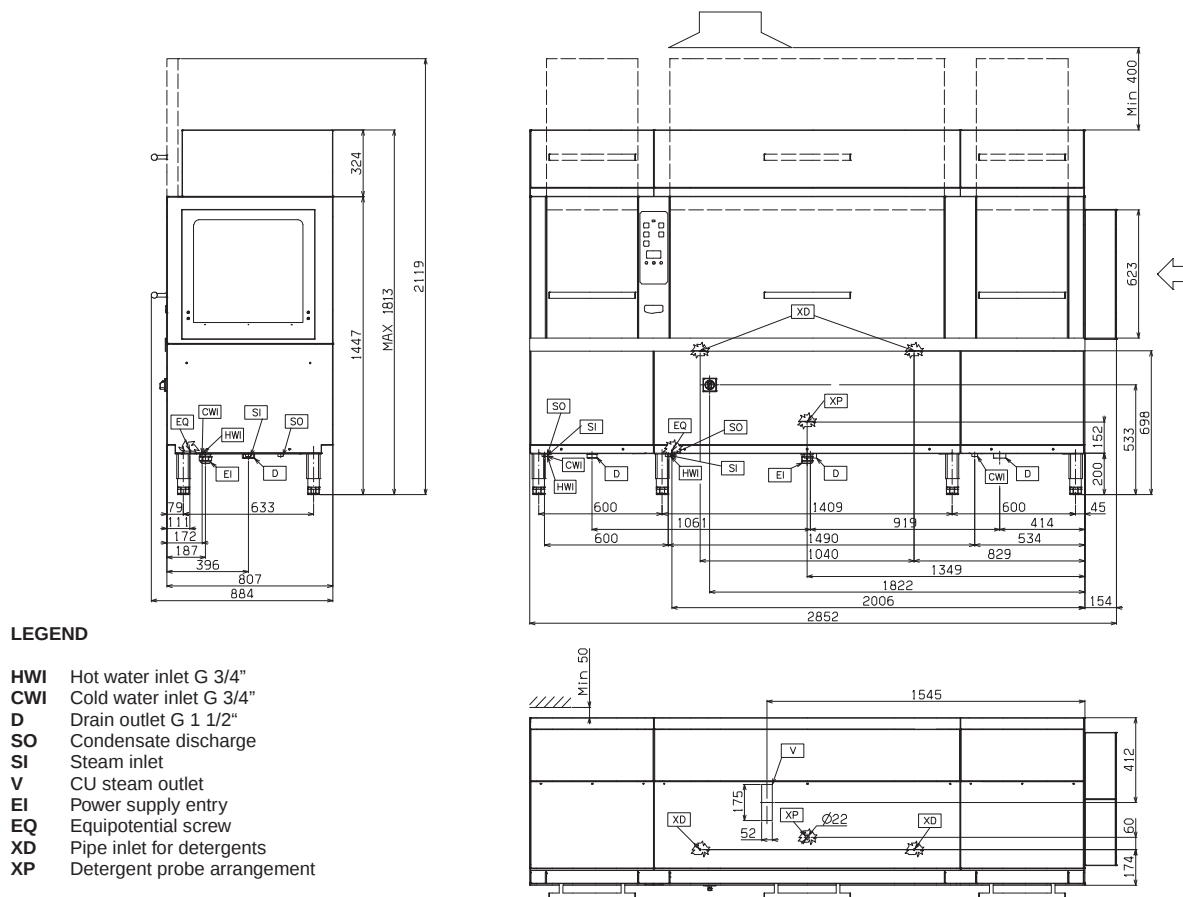


Installation diagram - rack-type dishwasher, 250 racks/h left (steam version)

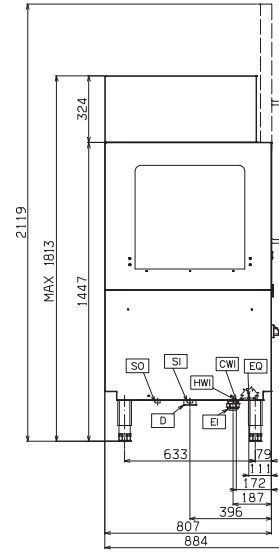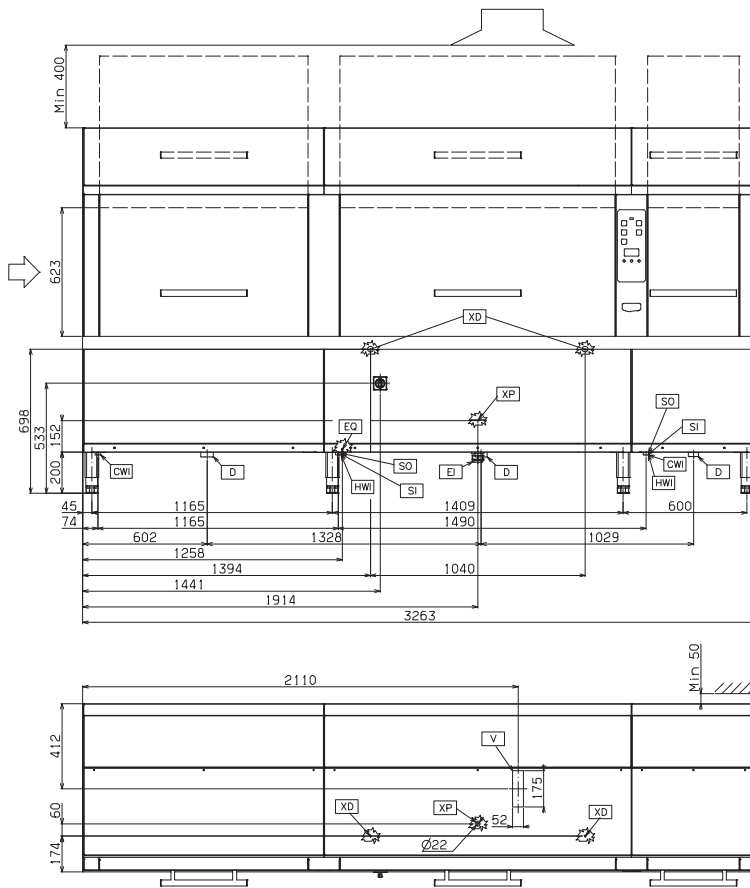

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- SO** Condensate discharge
- SI** Steam inlet
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement



Installation diagram - rack-type dishwasher, 250 racks/h right (steam version)

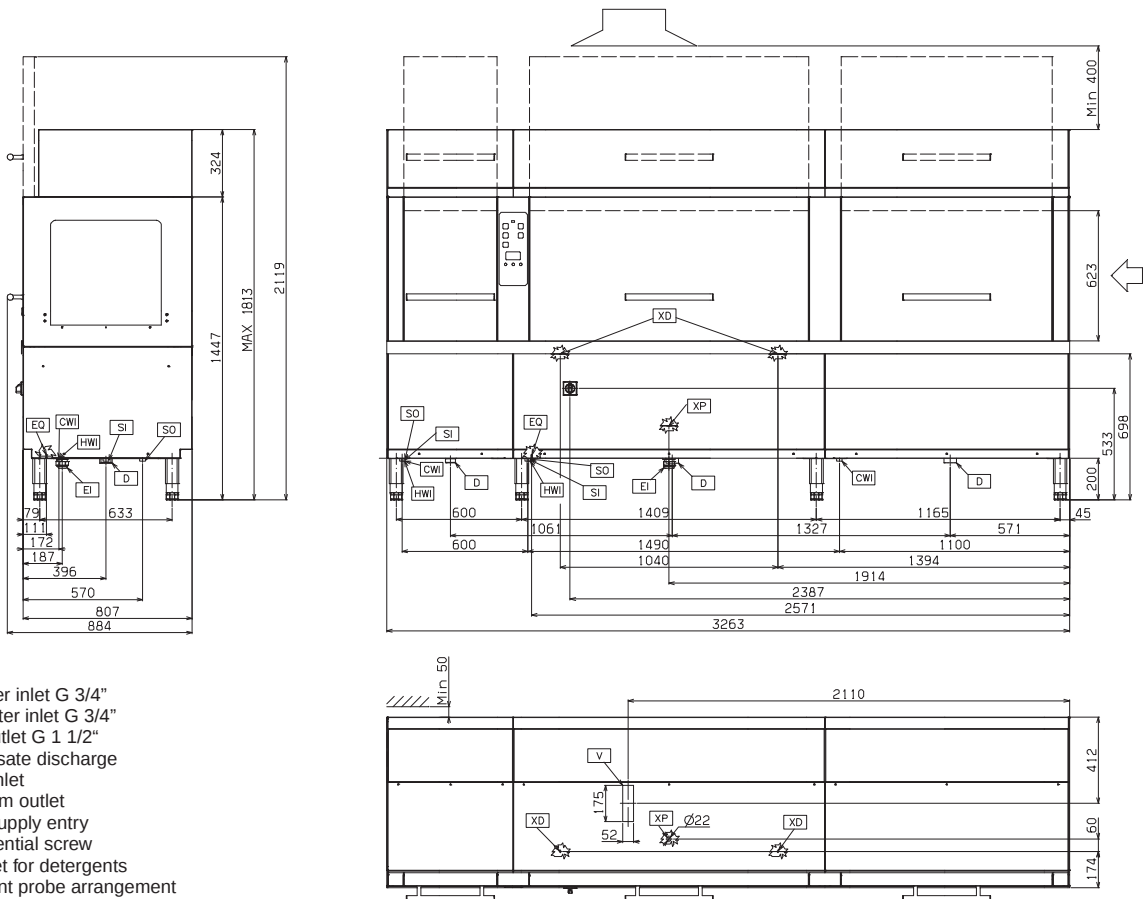

LEGEND

- HWI** Hot water inlet G 3/4"
- CWI** Cold water inlet G 3/4"
- D** Drain outlet G 1 1/2"
- SO** Condensate discharge
- SI** Steam inlet
- V** CU steam outlet
- EI** Power supply entry
- EQ** Equipotential screw
- XD** Pipe inlet for detergents
- XP** Detergent probe arrangement


Installation diagram - rack-type dishwasher, 300 racks/h left (steam version)

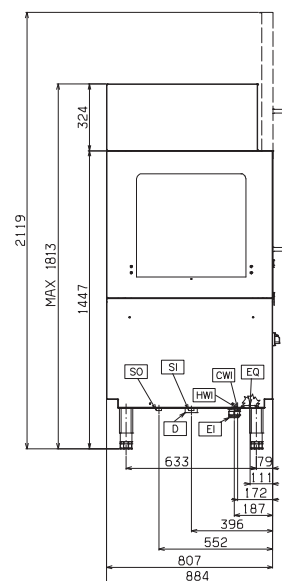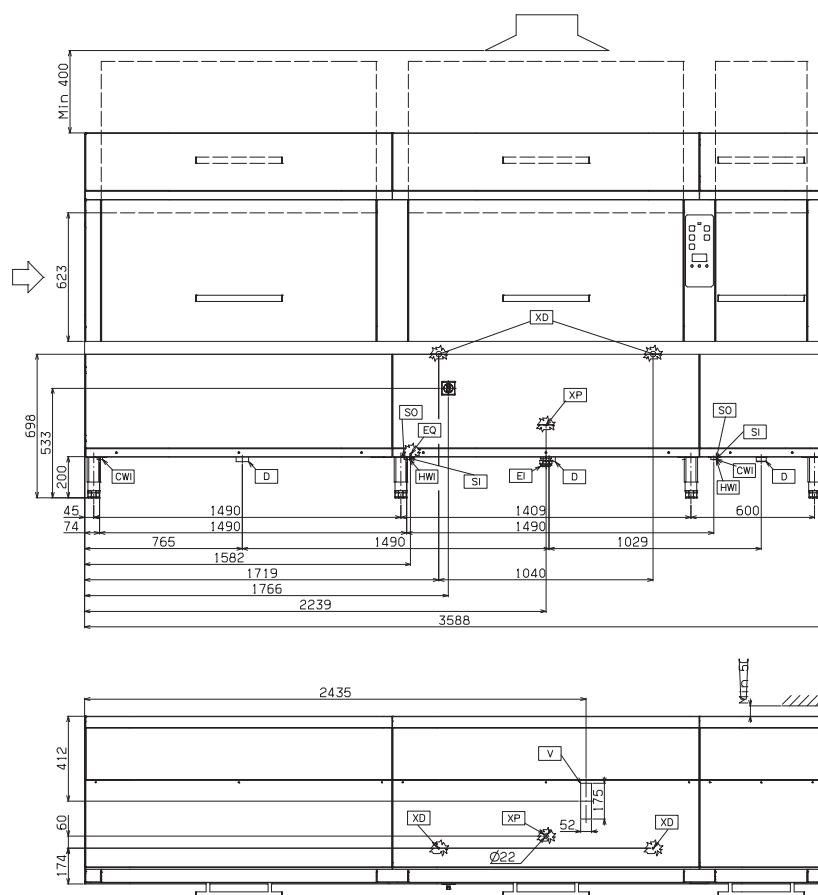

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement

Installation diagram - rack-type dishwasher, 300 racks/h right (steam version)

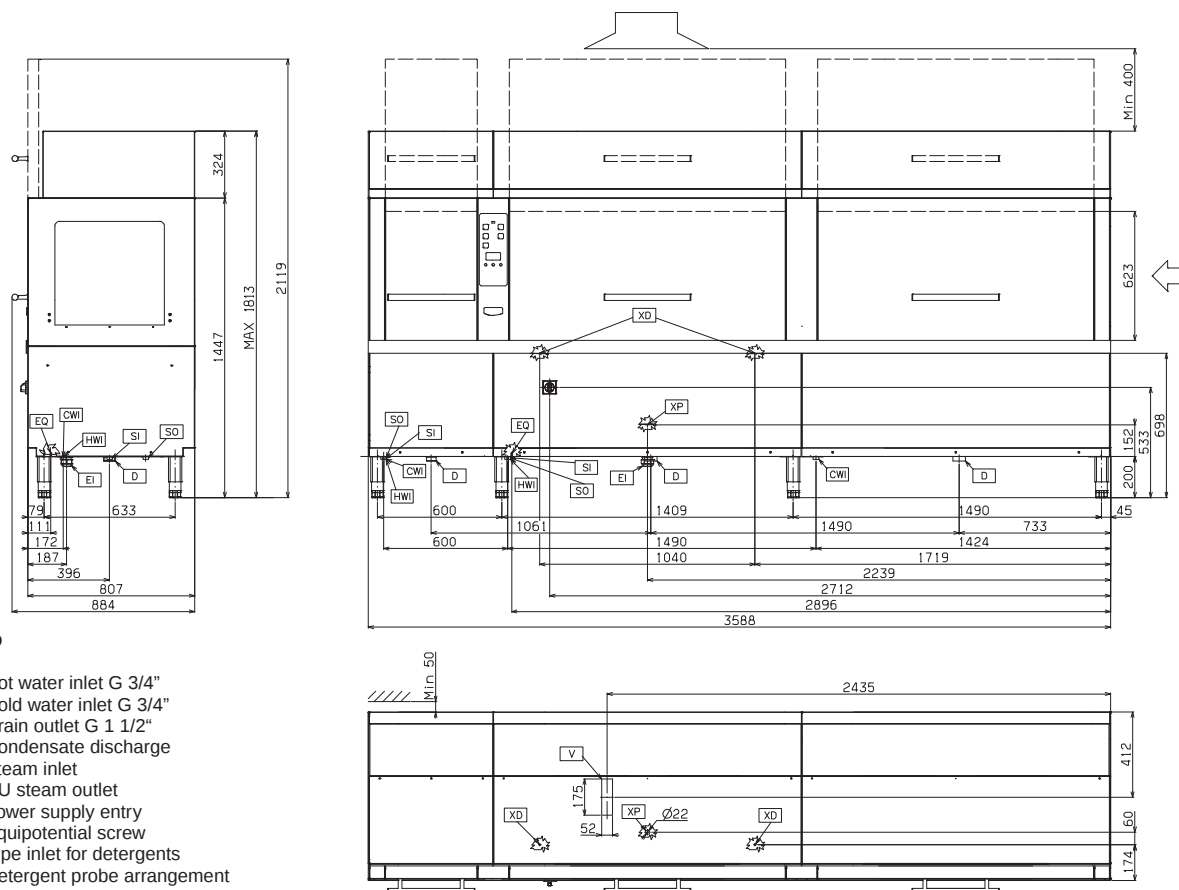

LEGEND

- HWI Hot water inlet G 3/4"
- CWI Cold water inlet G 3/4"
- D Drain outlet G 1 1/2"
- SO Condensate discharge
- SI Steam inlet
- V CU steam outlet
- EI Power supply entry
- EQ Equipotential screw
- XD Pipe inlet for detergents
- XP Detergent probe arrangement

E7 Electrical connections

Connection to the power supply must be carried out in conformity with the current regulations and provisions in the country of use.



IMPORTANT!

Work on the electrical systems must only be carried out by a qualified electrician.

- Make sure the machine power supply voltage specified on the rating plate (Table 1) matches the mains voltage.
- Make sure the system power supply is arranged and able to take the actual current load and that it is executed in a workmanlike manner according to the regulations in force in the country of use.

To connect the power cable to the equipment, proceed as follows:

- remove the front panel of the machine, in which the main switch is located;
- connect the power cable to the main switch as indicated in the wiring diagram attached to the machine, and secure it with the special cable gland;



IMPORTANT!

The connection cable must be H07RN-F type, oilproof.

- close the front panel of the machine.



IMPORTANT!

All electrical interventions ahead of the machine must be carried out by qualified electricians and with the power to the equipment being wired disconnected.

E8 Installation of detergent/rinse aid dispensers

The machine is arranged for installation of detergent and rinse aid dispensing devices.

The dispensers must be fitted in a way that does not compromise machine operation or safety.



IMPORTANT!

Do not start the machine if the dispenser devices do not meet the safety requirements of EC Directives or current regulations in the country of use.



CAUTION!

Contact with chemical substances (e.g. detergent, rinse aid, scale remover, etc.) without taking appropriate safety precautions (e.g. personal protection equipment) can involve exposure to chemical risk and possible damage to health. Therefore always refer to the safety cards and labels on the products used.



CAUTION!

The use of "foaming"/non-specific detergents or in any case detergents used in different ways from that prescribed by the manufacturer, can cause damage to the dishwasher and compromise washing results.

E8.1 Arrangement for water connection

Described below are all the possible plumbing connections that can be made in the machine for installing detergent or rinse aid dispensing devices.



IMPORTANT!

Carry out all the following plumbing connections with particular care, in order to avoid any leaks of liquid inside the machine and near the electrical connections.



IMPORTANT!

Faulty plumbing connections can cause low machine performance due to pressure losses in the system.

E8.1.1 Detergent concentration measurement probe

For positioning the detergent concentration measurement probe there is a hole "XP" (Ø 22 mm) closed with a plug (Figure 9) in the wash tank, as already indicated also in par. E6.2 "Installation diagrams".

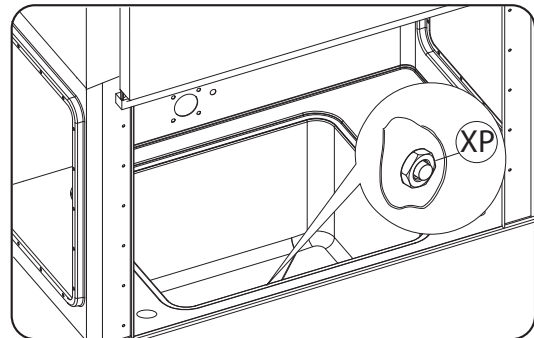


Figure 9 Hole for detergent probe

E8.1.2 Liquid detergent dispensers

Inside the wash tank there are two indents "XD" (Ø 5 mm) to be perforated for fitting a liquid detergent injector (Figure 10), as already indicated also in par. E6.2 "Installation diagrams".

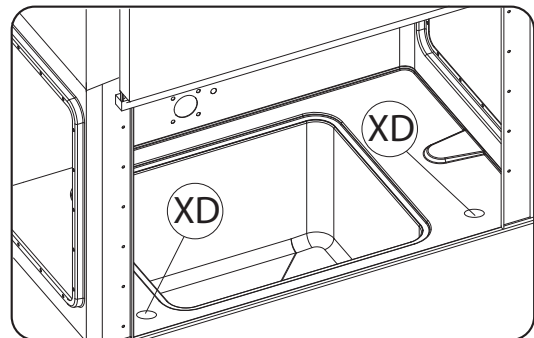


Figure 10 Arrangement for liquid detergent

E8.1.3 Arrangement for solid detergent

The left and right side panels of the dishwasher have a hose union "P" (Figure 11) for connecting the solid/powder detergent dispensers.

To connect the dispensers, carefully carry out the following instructions:

- remove protection cap "R" (Figure 11) from hose union "P";
- fit the solid detergent pipe, coming from the external dispenser, on hose union "P" (Figure 12);
- secure the pipe to the hose union with the special clamp supplied.

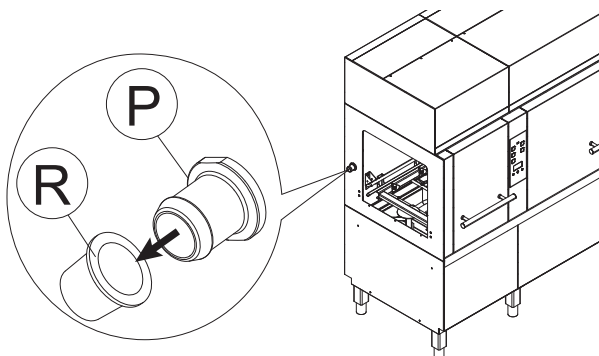


Figure 11 Prearrangement for solid detergent

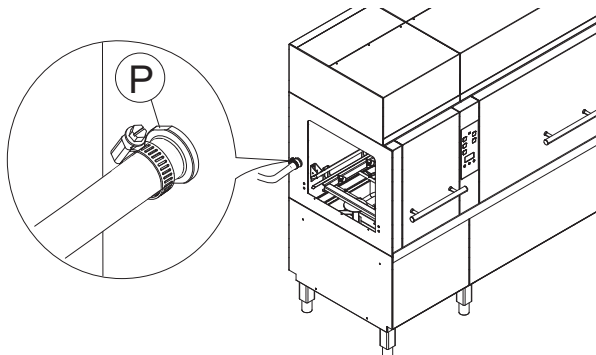


Figure 12 Solid detergent pipe connection

E8.1.4 Rinse aid dispensers

The machine has a nipple for the rinse aid dispenser connection.

Carefully follow the instructions given below to correctly carry out the connection for the rinse aid:

- remove the front panel of the rinse module;
- remove the cover on the electrical panel;
- release the electrical panel;

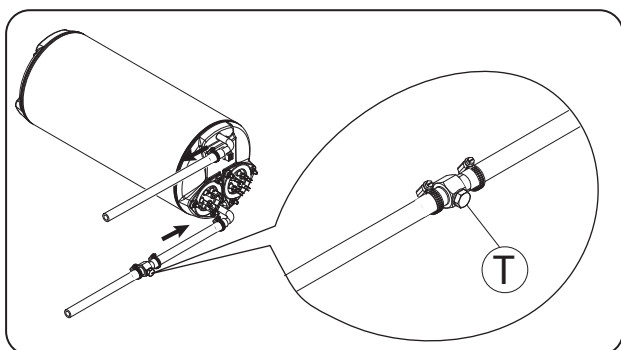


Figure 13 Rinse aid connection

- connect the rinse aid dispenser pipe, unscrewing plug "T" (Figure 13), always paying attention to

potential plumbing leaks (tighten the clamps securely);

- refit the electrical panel, its cover and the front cover of the rinse module.

E8.2 Arrangement for electrical connection

The electrical connection of the dispenser devices must be carried out by a specialised technician according to that indicated below.

Detergent dispenser

- remove the wash module panel;
- remove the electrical panel cover;
- connect the dispenser between terminals no. 11 and 12 on terminal block X3 or X4 (V 230Vac; PMAx 30VA);
- refit the electrical panel cover and wash module front panel.

Rinse aid dispenser

- remove the rinse module panel;
- remove the electrical panel cover;
- connect the dispenser between terminals no. 11 and 12 on terminal block X2 (V 230Vac; PMAx 30VA);
- refit the electrical panel cover and rinse module front panel.



IMPORTANT!

Do not make direct connections on the printed circuits.



IMPORTANT!

The connection cables must comply with the standards: CEI EN 60332, CEI EN 50265, CEI 20 - 35 e CEI 20 - 20.

E9 Fitting curtains

With the machine switched off and cold, fit or refit the curtains as illustrated below. The machines are represented in the assembly diagrams firstly in the version with left rack loading and then in the version with right rack loading.

Types of curtains on the machine

Double short (1)	Double long (2)	Single short (3)	Double long rounded (4)	Single drawing (5)


Important:
fasten the curtains with the flat part against the hook.

Rack-type dishwasher - 140 racks/h


Rack-type dishwasher - 165 racks/h

Rack-type dishwasher - 180 racks/h


Rack-type dishwasher - 200 racks/h

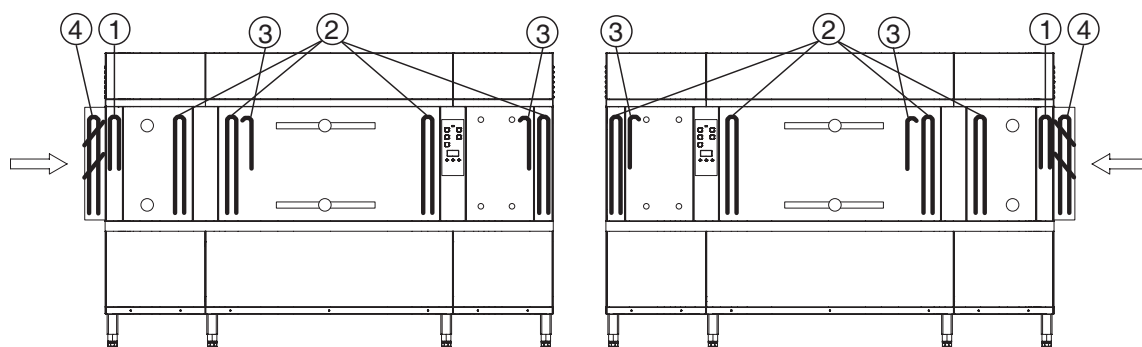

Rack-type dishwasher - 250 racks/h

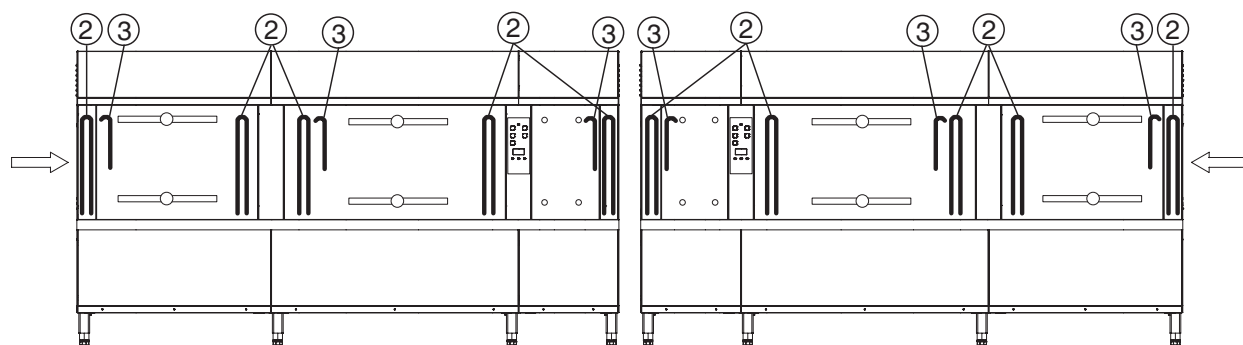

Rack-type dishwasher - 300 racks/h

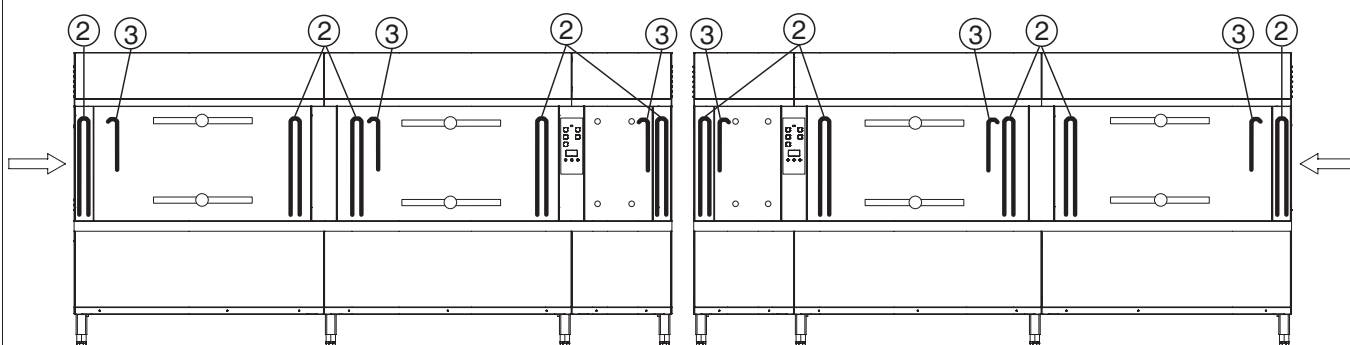

Drying zone (if provided for)

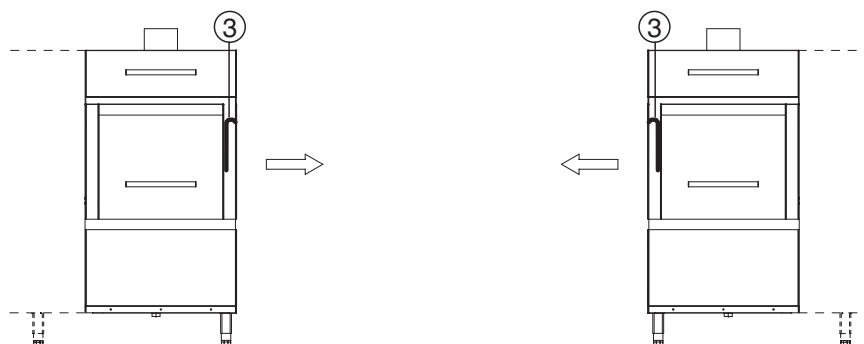


Figure 14 Diagram of curtain positioning on modular machines

E10 Installation of rack handling systems



CAUTION!

Machine installation operations must only be carried out by specialized Technicians provided with all the appropriate personal protection equipment (safety shoes, gloves, glasses, overalls, etc.), tools, utensils and ancillary means.



IMPORTANT!

Make sure the MAIN SWITCH of the machine is locked in the Off position - "O".



IMPORTANT!

Work on the electrical equipment must only be carried out by a qualified electrician.

The Manufacturer provides for the possibility of connecting the rack-type dishwasher to rack handling systems included in the Electrolux Professional S.p.A. product catalogue, with the possibility of obtaining various configurations.

The arrangements for the mechanical and electrical connections provided for on the rack-type dishwasher are described below: for further details on the various types of rack handling system couplings, consult the instructions supplied with the specific handling system installed.

These arrangements are suitable for fitting motor-operated rack handling systems (e.g. rope conveyor belts) and non-motor-operated rack handling systems (e.g. rollerways, tables, etc.).

E10.1 Arrangement for mechanical connection

There are holes in the left and right side panels of the dishwasher for carrying out the mechanical connection of the rack handling systems.

Only use the following four holes "A" (Figure 15), whatever the type of system (motor-operated or not) to be connected to the dishwasher.

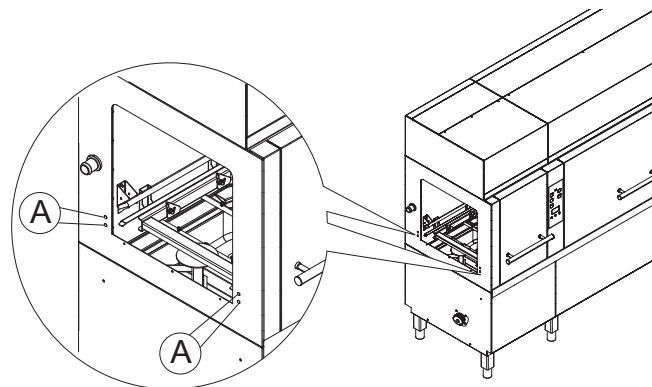


Figure 15 Handling mechanical connection system

E10.2 Arrangement for electrical connection

The left and right side panels of the dishwasher have a connector "B" (Figure 16), closed with a plug "A" (Figure 16), to be used for carrying out the electrical connection of the rack handling systems.



IMPORTANT!

The rack handling system electrical connection power lines are protected against short circuits as shown in the wiring diagram. However, protection against overloads must be ensured as provided for in point 7 of EN60204-1 (IEC 60204-1).

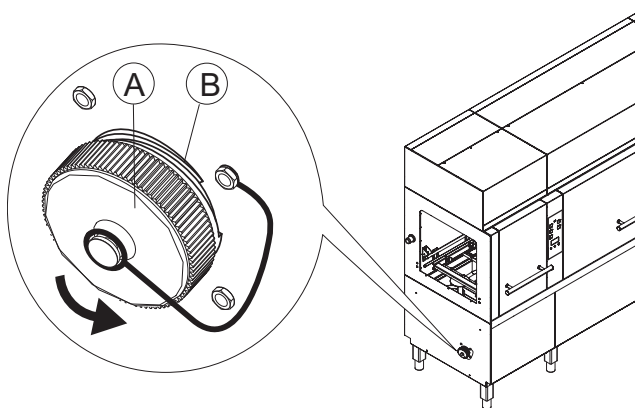


Figure 16 Handling electrical connection system

Whatever the type of system (motor-operated or not) to be connected to the dishwasher, proceed as follows:

- unscrew plug "A" (Figure 16) anticlockwise;
- connect the rack handling system connector "C" (Figure 17) to connector "B" of the dishwasher.

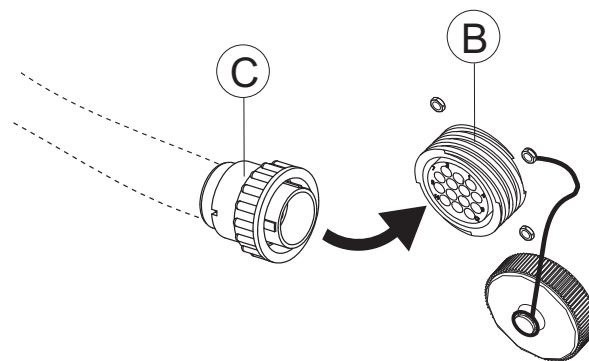


Figure 17 Detail of electrical connection

If a type "C" connector is not available for carrying out the connection, follow the indications in the machine wiring diagram: make sure to pass the external cable through the special cable gland, avoiding zones where the connection can be damaged (e.g. lower part of the machine, due to periodical cleaning of the floor with sweepers).

E10.3 Positioning of emergency switches

If rack handling systems are connected at the infeed or outfeed of a rack-type dishwasher, install on such systems emergency switches that are clearly visible and identifiable and easily accessed by the operator "R" (Figure 18) who must use them.

Described below are possible couplings of dishwashers "L" (Figure 18) with rack handling systems "M", with the corresponding positions of the emergency switches "E" and work stations "R" (Figure 18).



IMPORTANT!

The emergency switches installed on the machine do not exempt operators from diligent and careful use of the machine. The function of these devices guarantees prompt intervention in case of emergency.



IMPORTANT!

Operators must know the position of the emergency switches installed on the machine. The paths to reach and operate them must be kept free of obstacles.



IMPORTANT!

Emergency switches must be installed, otherwise the machine cannot operate (see wiring diagram).



IMPORTANT!

Anyone detecting a danger for persons must immediately operate one of the emergency stops; the same applies in case of operation anomalies and/or damage to parts of the machine requiring it to be stopped immediately.

E10.4 Emergency stop reinstatement

When an emergency switch is operated, restart the machine only after making sure that:

- the cause requiring operation of the emergency switch has been eliminated;
- restarting machine operation does not involve any hazard.

If the EMERGENCY SWITCH is operated during machine operation, the entire machine is deactivated.

To reinstate machine operation, proceed as follows:

- release the previously operated red emergency mushroom push button, turning or pulling it in order to disconnect its interlock;
- restart the machine according to what is described in par. I3 "Daily activation of machine".

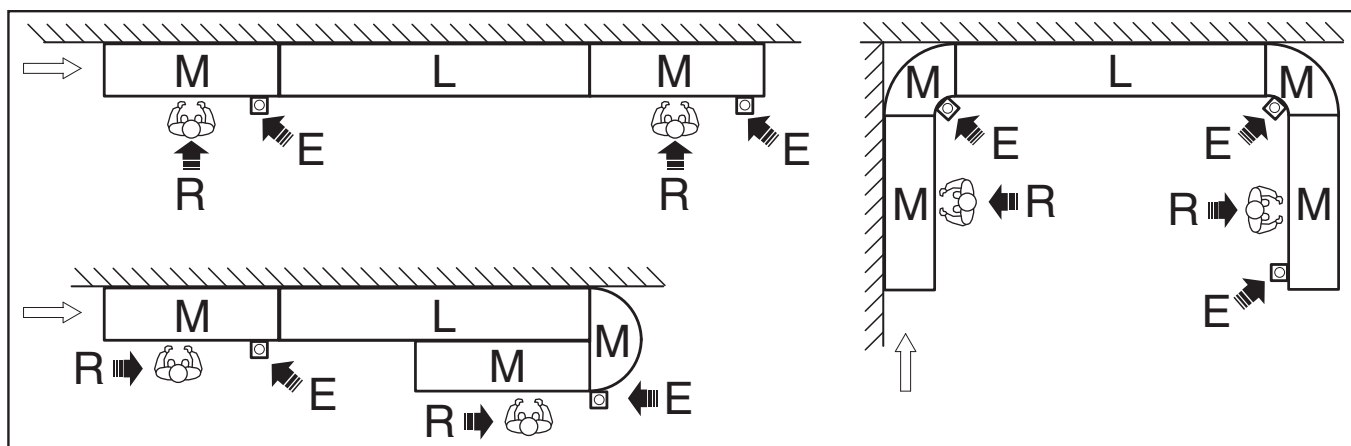


Figure 18 Examples of dishwasher and rack handling system couplings

F DESCRIPTION OF CONTROL PANEL

The possible control panel configurations for modular rack-type dishwashers are as follows:

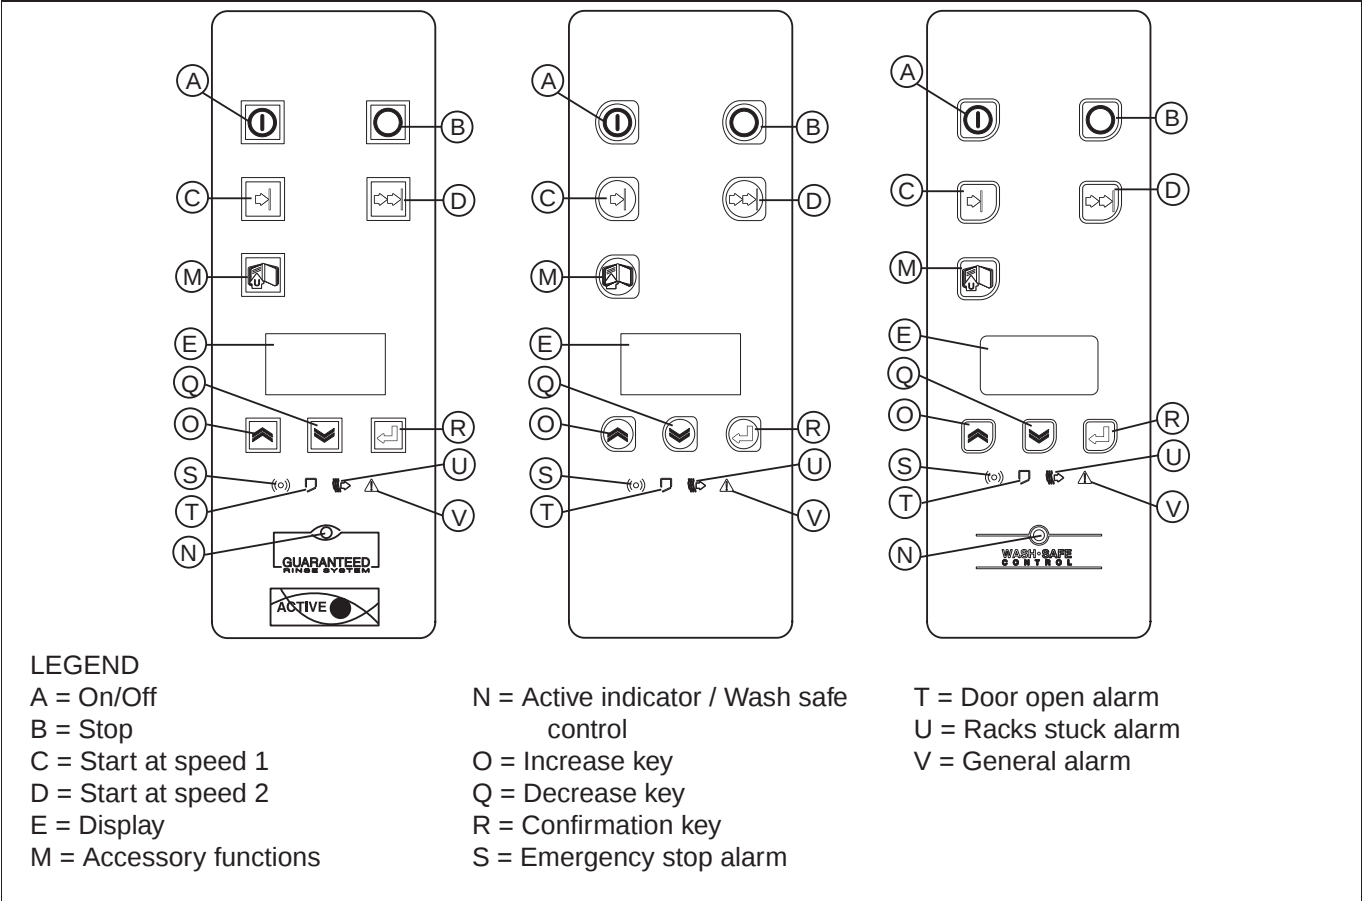


Table 5 Control panel

Described below are all the single keys and functions present in the various control panel models listed above. Some functions are shared by all models of the range, whereas others are available only on several versions.

F1 Basic controls

On/Off




This key indicates the status of the equipment: on or off. When the equipment is switched on, the key is green.

Start at speed 1 (low speed)



This key is used to start a wash cycle at speed 1. This speed is recommended for washing very dirty dishes.

Start at speed 2 (high speed)



This key is used to start a wash cycle at speed 2. This speed is recommended for washing medium dirty or not very dirty dishes.

When a speed is selected the corresponding key turns yellow.

Stop



This key is used to stop a wash phase or drain/cleaning cycle.
When the machine is carrying out the wash phase the key flashes yellow; when it is carrying out a drain/cleaning cycle the key flashes green.

F2 Accessory function selection controls

Accessory functions



This key is used to access the “accessory functions” menu which is displayed.

When activating the accessory functions menu or executing one of these functions the key is green.

To quit the accessory functions menu, press the accessory functions key again.

After entering the accessory functions menu, the required function can be selected by means of the increase ("O" - Table 5) and decrease ("Q" - Table 5) keys.



After selecting the required accessory function, it can be started by pressing the confirm key ("R" Table 5).



F3 Service alarms/signalling

Lighting up of the indicators listed below enables management of the following information:



emergency switch activated alarm



door open alarm

The display ("E" - Table 5) indicates the module with door open);



The rack has reached the end of the feed system.



general alarm

(described in detail on the display)

G1 Preliminary checks, adjustments and operational tests



IMPORTANT!

These operations must only be carried out by specialized technicians provided with adequate personal protection equipment (e.g. safety footwear, gloves, glasses, etc.), tools and suitable ancillary equipment.

G1.1 Electrical and plumbing checks

Before starting the machine:

- check correct connection of the electrical wires that feed the machine;
- make sure the power supply voltage and frequency match the data given in Table 1;
- check correct connection of the water supply and drain pipes (par. E6 "Plumbing connections");
- make sure all the guards, safety devices and emergency switches are in place and efficient.

G1.2 Check the positioning of tank components



IMPORTANT!

The following operations must be carried out by operators provided with suitable personal protection equipment (e.g. protective gloves, etc.) with the machine switched off and cold.

G1.2.1 Check the fitting of filters and overflows

Make sure the tank drain grid "1", overflow "2", the flat filters "3" and box strainer "4" (Figure 19) are fitted in the prewash module, if present in the machine.

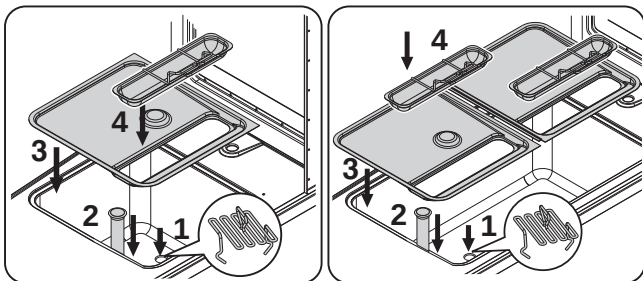
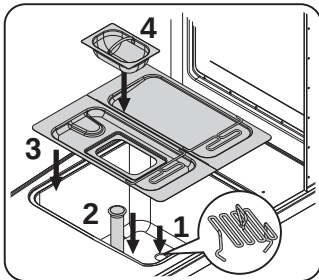


Figure 19 Prewash module tank filters

Make sure the tank drain grid "1", overflow "2", flat filter/s "3" and box strainer/s "4" (Figure 20) are fitted in the wash module.

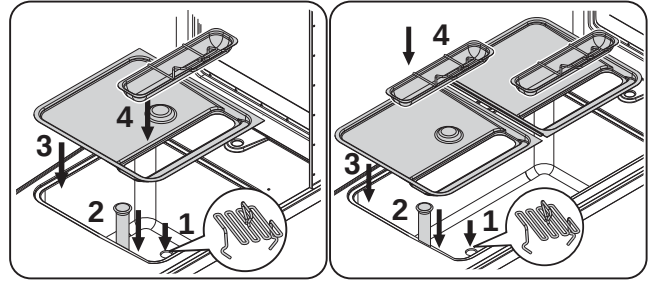


Figure 20 Wash module tank filters

Make sure the overflow "1" and the flat filter "2" are fitted in the rinse module (Figure 21).

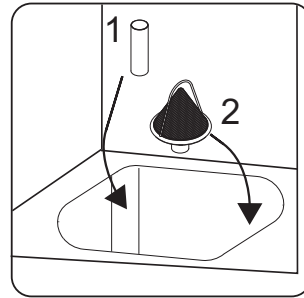


Figure 21 Rinse module tank filters

G1.2.2 Check the fitting of arms and curtains

Make sure the upper and lower prewash (Figure 22), wash (Figure 23) and rinse (Figure 24) arms are correctly fitted.

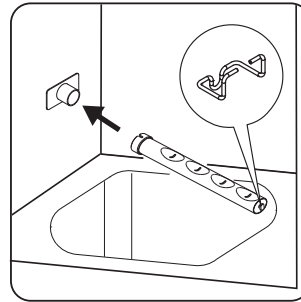


Figure 22 Prewash

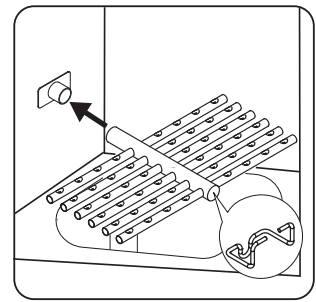


Figure 23 Wash

Also make sure the prewash and wash arm couplings are correctly locked and that the rinse arms are secured.

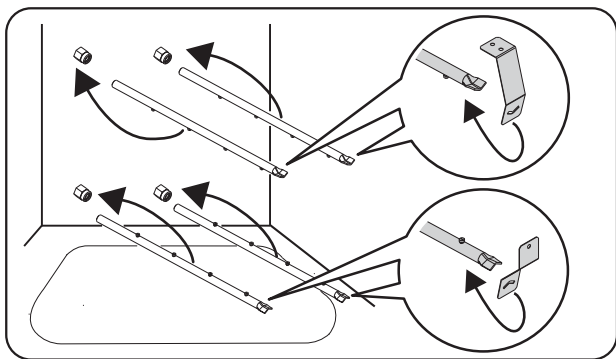


Figure 24 Rinse

Make sure all the types of curtains, provided for the machine model, are correctly fitted according to that indicated in par. E9 "Fitting curtains".

Close the doors of the various machine modules only when all the parts previously described are correctly installed, then start the dishwasher.

G2 Starting

- Open the water supply cocks.
- Turn the main switch of the machine to "I".
- Press the On/Off key Table 5 ("A" - "Control panel").

H GENERAL SAFETY RULES

H1 Introduction

The machines are provided with electric and/or mechanical safety devices for protecting workers and the machine itself. Therefore the user must not remove or tamper with such devices.

The Manufacturer declines any liability for damage due to tampering or their non-use.

H1.1 Protection devices installed on the machine

H1.1.1 Guards

The guards on the machine are:

- fixed guards (e.g. casings, covers, side panelling, etc.), fixed to the machine and/or frame with screws or quick-release couplings that can only be removed or opened with tools;
- interlocked movable guards (front panels) for access to inside the machine;
- access doors to the machine's electrical equipment, made from hinged panels openable with tools. The door must not be opened during machine movement, if inside the door there is equipment that is hazardous when live or under pressure.



IMPORTANT!

Several illustrations in the manual represent the machine, or parts of it, without guards or with guards removed. This is purely for explanatory requirements. Never operate the machine without the guards or with the safety devices deactivated.

H1.1.2 Safety devices

The machine has:

- a yellow/red main switch that acts as an emergency switch;
- interlocks on the front panels giving access to inside the machine;
- emergency stop push buttons and stops must be installed on the rack handling tables in case the racks exceed their travel.

H1.2 Safety signs to be displayed on the machine

PROHIBITION	MEANING
	Do not oil, lubricate, repair and adjust moving parts.
	Do not remove the safety devices.
	Do not use water to extinguish fires (shown on electrical parts).

DANGER	MEANING
	DANGER OF CRUSHING HANDS
	DANGER OF BURNS
	DANGER OF ELECTROCUTION (shown on electrical parts with indication of voltage).



WARNING!

Do not remove, tamper with or make the labels on the machine illegible.

H2 Decommissioning

When the machine is no longer to be used, make it unusable by removing the feed wiring from the power supply and the water connections.

H3 Instructions for use and maintenance

Risks mainly of a mechanical, thermal and electrical nature are present in the machine.

Where possible the risks have been neutralized:

- directly, by means of adequate design solutions,
- or indirectly by using guards, protection and safety devices.

Any anomalous situations are signalled on the control panel display.

During maintenance several risks remain, as these could not be eliminated and which must be neutralized through specific behaviour and precautions.

Do not carry out any control, cleaning, repair or maintenance operations on moving parts.

Workers must be informed of the prohibition by means of clearly visible signs.

To guarantee machine efficiency and correct operation, periodical maintenance must be carried out according to the instructions given in this manual.

In particular, make sure to periodically check correct operation of all the safety devices and the insulation of electrical cables, which must be replaced if damaged.



IMPORTANT!

Machine maintenance operations must only be carried out by specialized Technicians provided with all necessary personal protection equipment (safety shoes, gloves, glasses, overalls, etc.), tools, utensils and suitable ancillary means.



WARNING!

Never operate the machine by removing, modifying or tampering with the guards and protection or safety devices.



IMPORTANT!

Before carrying out any operation on the machine, always consult the manual which gives the correct procedures and contains important information on safety.

H4 Improper use

Improper use is any use differing from that specified in this manual. During machine operation, other types of work or activities considered improper and that in general can involve risks for the safety of operators and damage to the system are not allowed.

Improper use includes:

- failure to disconnect the power supply with the main switch in "O" off position before carrying out adjustment, cleaning, resetting and maintenance operations;
- failure to disconnect the power supply with the main switch in off position "O" at the end of the day;
- lack of machine maintenance, cleaning and periodical checks;
- structural changes or modifications to the operating logic;
- tampering with the guards or safety devices;
- failure to use personal protection equipment by operators, specialized technicians and maintenance personnel;
- failure to use suitable accessories (e.g. use of equipment, ladders, etc., unsuitable for carrying out maintenance on equipment positioned inside the machine);
- keeping combustible or flammable materials, or in any case materials not compatible with or pertinent to the work, near the machine;
- incorrect machine installation (see chapter E "Installation and assembly");
- placing in the machine any objects or things not compatible with washing or that can obstruct/dam-

age the machine or persons or pollute the environment;

- non-compliance with the requirements for correct machine use;
- other actions that can cause risks not eliminable by the Manufacturer.

H5 Residual risks

The machine has several risks that were not completely eliminated from a design standpoint or with the installation of adequate protection devices.

Nevertheless, through this manual the Manufacturer has taken steps to inform operators of such risks, carefully indicating the personal protection equipment to be used by them.

Sufficient spaces are provided for during the machine installation phases in order to limit these risks.

To preserve these conditions, the corridors and areas around the machine must always be:

- kept free of obstacles (e.g. ladders, tools, containers, boxes, etc.);
- clean and dry;
- well lit.

For the Customer's complete information, the residual risks remaining on the machine are given below; such actions are to be considered incorrect and therefore strictly forbidden.

RESIDUAL RISK	DESCRIPTION OF HAZARDOUS SITUATION	APPLICATION PHASE
Slipping or falling	The operator can slip due to water or dirt on the floor.	Normal use Maintenance
Catching, dragging or crushing	Catching or dragging of the operator or other persons in the drive, during the machine work phase, due to improper actions, such as: - placing an arm inside the machine to remove a stuck rack without stopping the machine by operating an emergency switch; - accessing the rack handling system without stopping the machine by operating an emergency switch. Use of improper clothing with loose parts (e.g. necklaces, scarves, shawls, ties, etc.) or long hair not gathered, which could get caught up in moving parts.	Normal use Maintenance Cleaning
Burns	The operator deliberately or unintentionally touches some components inside the machine or dishes at the outfeed without using gloves or without allowing them to cool.	Normal use Maintenance Cleaning
Shearing of upper limbs	The operator violently closes the front panels.	Normal use Maintenance Cleaning
Electrocution	Contact with live parts during maintenance operations carried out with the electrical panel powered. The operator intervenes (with a power tool or without disconnecting the power to the machine) lying down on the wet floor.	Maintenance
Falling from above	The operator intervenes on the machine using unsuitable systems to access the upper part (e.g. rung ladders, or climbs on it).	Installation Normal use Maintenance
Tipping of loads	During maintenance on the machine or the packing containing the machine with the use of unsuitable accessories or lifting systems or with load unbalanced.	Installation Maintenance
Chemical	Contact with chemical substances (e.g. detergent, rinse aid, scale remover, etc.) without taking adequate safety precautions. Therefore always refer to the safety cards and labels on the products used.	Installation Normal use Maintenance Cleaning

Table 6 Residual risks

NORMAL MACHINE USE

I1 Correct use

Our appliances are designed and optimized in order to obtain high performance and efficiency. This equipment must only be used for its expressly designed purpose, i.e. washing dishes with water and specific detergents. Any other use is to be deemed improper.

I2 Characteristics of personnel enabled to operate on the machine

Operator qualified for normal use must have at least:

- knowledge of the technology and specific experience in operating the machine;
- adequate general basic education and technical knowledge for reading and understanding the contents of the manual,
- the capacity for a correct interpretation of the drawings, signs and pictograms;
- sufficient technical knowledge for safely performing his duties as specified in the manual;
- knowledge of the regulations on work hygiene and safety.

In the event of a significant anomaly (e.g. short circuits, wires coming out of the terminal block, motor breakdowns, worn electrical cable sheathing, etc.) the operator qualified for normal machine use must:


- immediately deactivate the machine by turning the main switch to "O" or operating the main emergency switch on the machine;
- close the machine water supply by shutting off the water.

I3 Daily activation of machine

- Make sure the filters, arms and curtains are correctly fitted according to that indicated in par. G1.2 "Check the positioning of tank components" and E9 "Fitting curtains".
- Make sure there are no foreign objects or materials not pertinent to the process on the conveyors and inside the machine.
- Make sure there are no persons extraneous to the work, or who are carrying out operations not compatible with dishwasher starting, in the immediate vicinity of the machine.
- Close the doors of the various machine modules.
- Open the water supply cocks.
- Activate the main switch by turning it to position "I".
- Press the On/Off key ("A" - Table 5).




- The display ("E" - Table 5) comes on and the machine starts the filling/heating phase.

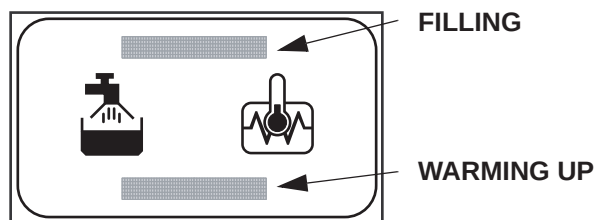

- The dishwasher can begin washing when the tanks are filled and the temperatures have reached the set levels.

I3.1 Wash phase

When the following message appears on the display:

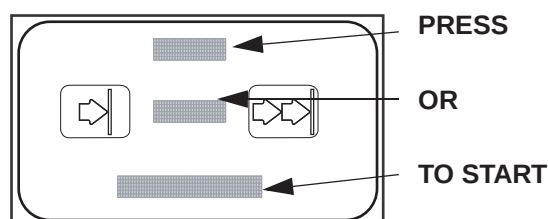


the operator can start the wash phase.


At the same time, the start key corresponding to the last rack feed speed set flashes on the control panel. To start washing select one of the start keys ("C" or "D" - Table 5).



The machine starts washing and the display shows:

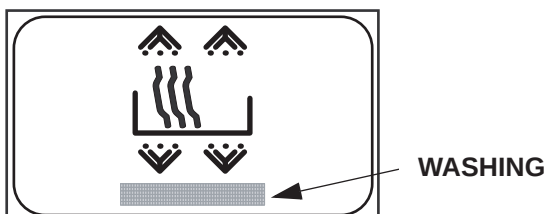


If racks are not inserted after a few seconds, the conveyor continues operating whereas the pumps stop and the display shows

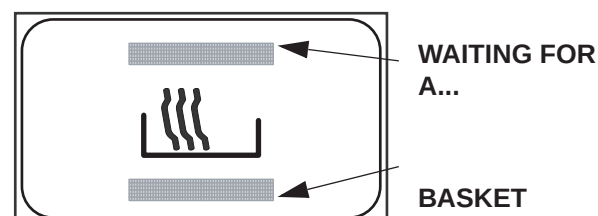

Clean and arrange the dirty dishes on the racks as indicated in par. I3.5 "Loading dishes on racks".

Insert a rack with dishes in the dishwasher infeed and allow the automatic feed system to take it to the various wash zones.

An acoustic signal sounds when a rack reaches the end of the conveying system; the display shows

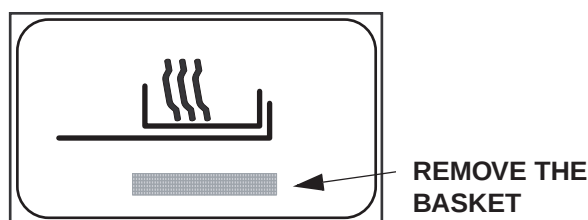

and the indicator "U" (Table 5) flashes.

Remove the rack and load new racks with dirty dishes at the dishwasher infeed.




IMPORTANT!

The Customer must appraise, according to the current regulations in the country of use, the risk concerning manual handling of loads by operators, on the basis of ergonomic aspects and the weights to be handled, as well as the work loads.

13.2 Rack jamming

If the dishes are not correctly loaded on the racks, jamming may occur inside the tunnel, and the display shows:

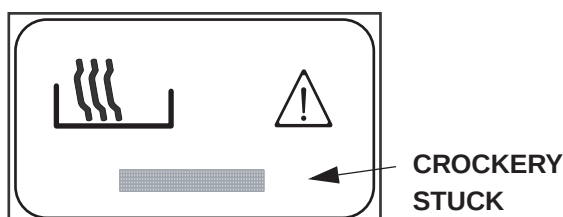

Switch the machine off, open the doors and eliminate the cause of jamming.

13.3 Wash phase stop

Press the **Stop** key ("B" - Table 5) to stop the wash phase.



Washing stops, and the machine stays on standby mode (Ready). Press a start key to restart washing.


13.4 Temperature display

The current machine temperatures can be displayed during all the phases described above.

Select the increase key ("O" - Table 5):



the following is displayed for 30 seconds

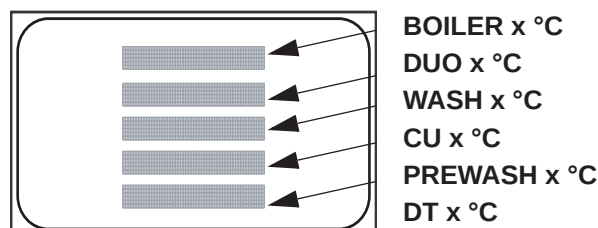

To return to the standard display press the decrease key ("Q" - Table 5):



WARNING!

Inside the machine there are temperatures with risk of burns: if necessary, intervene with the machine cold or using suitable protection equipment (e.g. gloves).

13.5 Loading dishes on racks

The rack-type dishwasher is suitable for washing dishes, glasses, cups, cutlery, trays, containers and receptacles in plastic and/or steel used for preparing, cooking and serving; as well as a wide variety of ceramic and/or metal cooking utensils. However it is advisable not to wash decorated dishes or place silverware in contact with other metals.



IMPORTANT!

All the dishes must be arranged in the special racks in order to be washed; do not place dishes directly on the rack conveyor system.



IMPORTANT!

The rack-type dishwasher must only be used for washing dishes, containers, etc. (see above) do not use the machine to wash animals or food (e.g. fruit, vegetables, meat or fish).

Before inserting the racks in the machine, clear the dishes of any food residuals and rinse them with cold or lukewarm water (at a max. temperature of 35°C / 95°F), using a manual prewash spray.



IMPORTANT!

Failure to remove the residuals of detergent possibly used for manual prewash can cause malfunctioning of the dishwasher and compromise washing results.

Arrange the dishes on the racks, observing the following:

- Hollow containers such as cups, glasses, pots, etc., must be arranged with openings facing downwards, to avoid collecting water inside.
- Arrange dishes and pans on the racks following the feed direction of the rack conveyor system

(Figure 25 / Figure 26).



IMPORTANT!

To facilitate the flow of water leave a space of 100 mm between each pan.

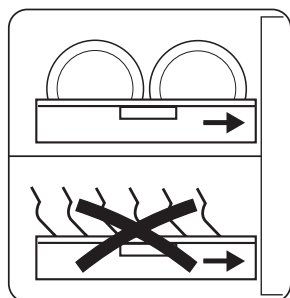


Figure 25 Positioning dishes

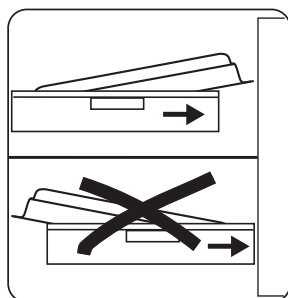


Figure 26 Positioning pans

- Position the trays on the racks with the long side in the feed direction of the conveyor system, leaving the last rack position free, since a tray positioned there could collide with the wall of the machine (Figure 27).


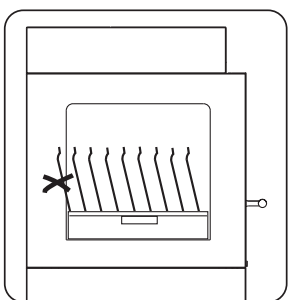


Figure 27 Positioning trays

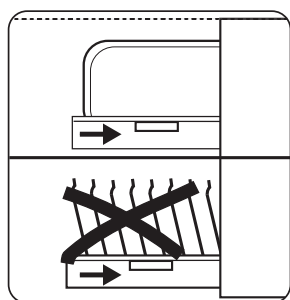


WARNING!

Keep limbs away from the rack entry zone - danger of crushing.

13.6 Tank filter cleaning

This function is present only if enabled by a specialized technician.

During normal operation a check of the amount of grime accumulated on the wash and prewash (if present) filters is automatically performed. When the amount of dishes washed has accumulated enough grime on the filters to compromise washing efficiency, the machine display shows the following message:

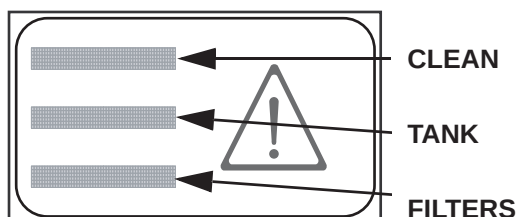

Open the doors of the machine, remove the filters and wash them thoroughly (Figure 28).

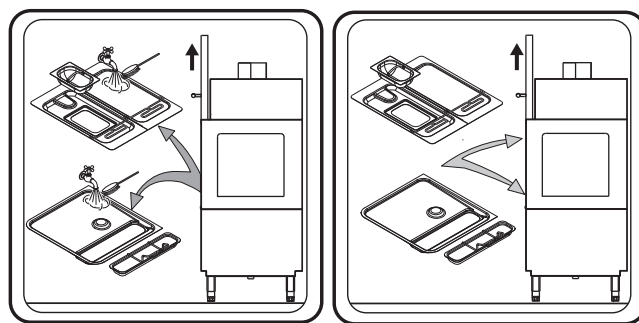


Figure 28 Tank and filter cleaning

- At the end of cleaning operations, refit the previously removed parts.
- Close the machine door.

WARNING

Failure to clean the filters when required will eventually make it impossible to do a wash cycle.

13.7 Accessory functions

To activate an accessory function make sure the machine is not in the wash phase; if necessary press the **Stop** key ("B" - Table 5).



Press the **accessory functions** key ("M" - Table 5)



the accessory functions menu is accessed.

To quit the accessory functions menu, press the **accessory functions** key ("M" - Table 5) again.


After entering the accessory functions menu the required function can be selected by means of the increase ("O" - Table 5) and decrease ("Q" - Table 5) keys.




The accessory functions that can be activated are:

Function	Description
DRAIN TANKS	Complete emptying of all machine tanks.
DRAIN PREWASH	Complete emptying of prewash tanks (if present in machine).
DRAIN WASH	Complete emptying of wash tank.
DRAIN DUO	Complete emptying of DUO-Rinse tank.
DRAIN AIR GAP	Complete emptying of the Air gap.
DRAIN & CLEAN	Cleaning inside machine and complete emptying of all tanks.
SANITIZATION (optional)	Complete emptying of all machine tanks and refilling of tanks with clean water. Heating of water up to 75°C/167°F and wash for 1 minute, then complete emptying of tanks.


The display shows:

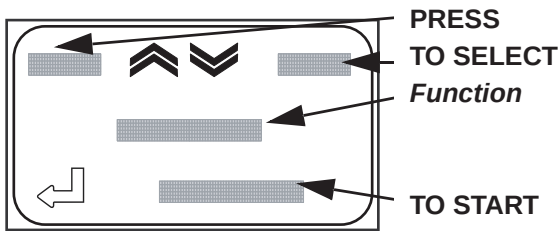

When an accessory function is being performed, the display shows

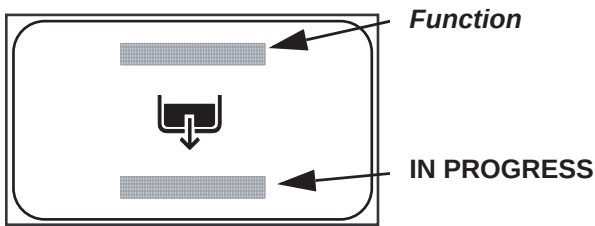


if a drain or drain/cleaning cycle is being performed, or shows

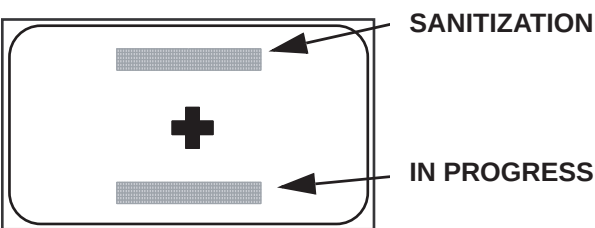


if a sanitization cycle is being performed.

When an accessory function has ended, the dishwasher emits three acoustic signals and the display shows

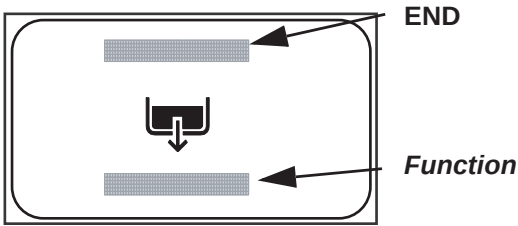

or

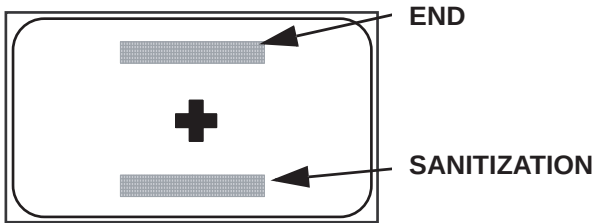

It is now possible to:

- quit the accessory functions mode and restart tank filling by pressing the accessory **functions key** ("M" - Table 5)



- switch the machine off by pressing the **On/Off key** ("A" - Table 5)




WARNING!



When the machine is switched off by pressing the On/Off button ("A" - Table 5), the machine remains powered. Press the On/Off button ("A" - Table 5) again to restart the machine. Turn the main switch to "0" to disconnect the power to the machine.


In machines equipped with DT/HAB, shutdown may be delayed 1 minute in order to carry out drying tunnel cooling. The display shows:

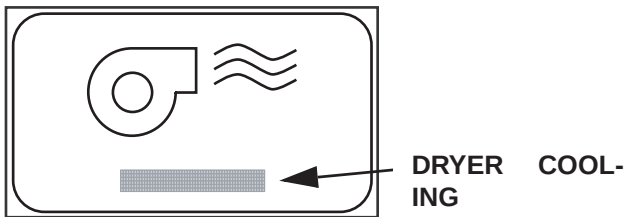

Wait for the machine to shut down, which occurs automatically, before turning the main switch to "0".

I3.8 Door open


When one or more doors are open, the indicator "T" (Table 5) flashes and the display shows

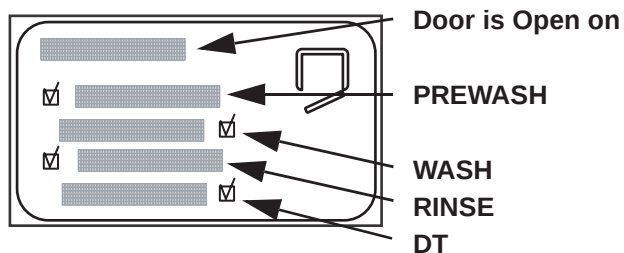

Close all open doors and restore normal dishwasher operation.

I3.9 Emergency stop


When the emergency stop push button is activated, the dishwasher emits an acoustic signal, the indicator "S" (Table 5) flashes and the display shows

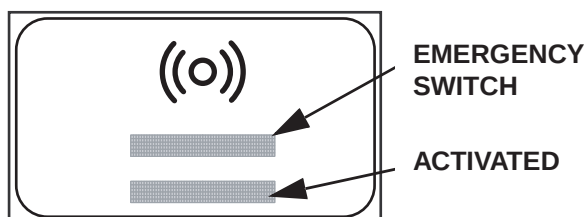

Deactivate the emergency stop push button to restore normal dishwasher operation, following that given in par. E10.4 "Emergency stop reinstatement".

I3.10 General alarm

When the dishwasher has a general anomaly it emits an acoustic signal, the indicator "V" (Table 5) flashes and the display shows

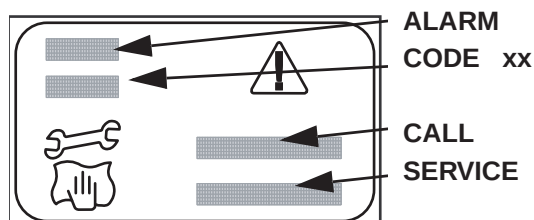

List of possible documented machine alarms:

Rinse zone alarms	
Code	Description
11	The Air Gap was not completely filled within the max. filling time.
12	The pressure sensor on the Air Gap electronic board does not work correctly.
13	The Duo-Rinse tank was not completely filled within the max. filling time.
14	The pressure sensor on the rinse module electronic board does not work correctly.
15	The required temperature was not reached in the boiler within the max. heating time.

16	The water temperature in the boiler is too high.
17	The boiler temperature sensor is short-circuited.
18	The boiler temperature sensor is open.
19	The required temperature was not reached in the Duo-Rinse tank within the max. heating time.
20	The water temperature in the Duo-Rinse tank is too high.
21	The Duo-Rinse tank temperature sensor is short-circuited.
22	The Duo-Rinse tank temperature sensor is open.
23	The rinse pump thermal protector has tripped.
24	The Duo-Rinse pump thermal protector has tripped.
25	The Duo-Rinse tank was not completely emptied within the max. emptying time.
27	The inverter that controls the feeding gearmotor has generated an error.
30	The Air Gap was not completely emptied within the max. emptying time provided for.
76	The rinse module PCB is not correctly connected to the inverter (wire short-circuited to earth).
77	The rinse module PCB is not correctly connected to the inverter (wire not connected).

Wash zone alarms	
Code	Description
31	The wash tank was not completely filled within the max. filling time.
32	The pressure sensor on the wash module electronic board does not work correctly.
33	The required temperature in the wash tank was not reached within the max. heating time.
34	The water temperature in the wash tank is too high.
35	The wash tank temperature sensor is short-circuited.
36	The wash tank temperature sensor is open.
37	The upper wash pump thermal protector has tripped.
38	The lower wash pump thermal protector has tripped.

39	The CU (Condensing unit) fan thermal protector has tripped.
40	The wash tank was not completely emptied within the max. emptying time.
60	The CU temperature sensor is short-circuited (only machines with heat pump).
61	The CU temperature sensor is disconnected (only machines with heat pump).
62	The heat pump has generated an error (only machines with heat pump).

Prewash zone alarms	
Code	Description
51	The prewash tank was not completely filled within the max. filling time.
52	The pressure sensor located on the prewash module PCB does not work properly.
53	The required temperature in the prewash tank was not reached within the max. heating time.
54	The water temperature in the prewash tank is too high.
55	The prewash tank temperature sensor is short-circuited.
56	The prewash tank temperature sensor is open.
57	The prewash pump thermal protector has tripped.
58	The prewash tank was not completely emptied within the max. emptying time.

Drying zone alarms	
Code	Description
71	The required temperature in the drying tunnel was not reached within the max. heating time.
72	The drying tunnel temperature is too high.
73	The drying tunnel temperature sensor is short-circuited.
74	The drying tunnel temperature sensor is open.
75	The drying tunnel fan thermal protector has tripped.

Communication alarms	
Code	Description
89	The temperature on the user interface is too high.

90	Communication problems between machine electronic boards.
91	The user interface is damaged.

I4 Machine cleaning

Cleaning must be carried out after every day of use. Use hot water, a neutral detergent/deterative if necessary, and a soft brush or sponge. If another type of detergent is used carefully follow the manufacturer's instructions and observe the safety rules given in the information cards provided with the product or substance.

In order to reduce the environmental impact of pollutant substances, clean the equipment (externally and internally where necessary) with products that are more than 90% biodegradable.



IMPORTANT!

Do not clean the machine with jets of water.



CAUTION!

Do not use steel wool or similar material to clean s/steel surfaces. Do not use detergents containing chlorine.



CAUTION!

Contact with chemical substances (e.g. detergent, rinse aid, scale remover, etc.) without taking appropriate safety precautions (e.g. personal protection equipment) can involve exposure to chemical risk and possible damage to health. Therefore always refer to the safety cards and labels on the products used.

I4.1 Daily internal cleaning

At the end of a day's work carry out the instructions listed below.

- Completely empty the dishwasher tanks as indicated in par. I3.7 "Accessory functions".
- After draining the tanks, press the On/Off key ("A" - Table 5 "Control panel") to switch off the dishwasher.
- Turn the main switch of the machine to "O".
- Close the water supply cocks.
- Open the machine doors and remove the filters, overflows and prewash, wash and rinse arms (Figure 29) and wash them carefully with hot water and neutral detergent/deterative, if necessary using a soft brush or sponge. If necessary remove the end plugs from the wash arms and rinse them.
- Remove and clean the curtains in the machine.
- Clean inside the machine, making sure to remove any residuals of detergent or food.
- Clean the inside of doors with a damp cloth and detergent.

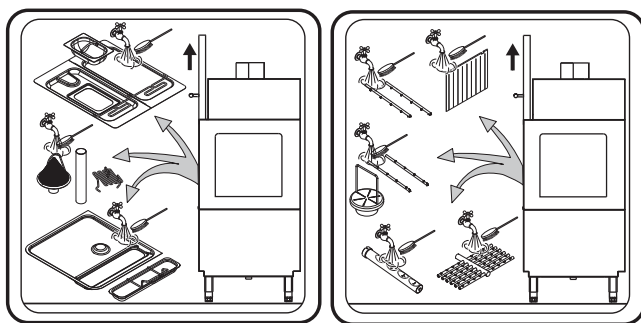


Figure 29 Cleaning filters and arms

- At the end of cleaning operations, refit the previously removed parts.
- Close the machine door.

I4.2 Exterior cleaning

Clean the stainless-steel surfaces with lukewarm soapy water (do not use detergents containing abrasive substances, steel wool, brushes or scrapers in common steel) then rinse with a wet cloth and dry carefully.

I5 Long idle periods

Whenever the machine is not going to be used for a long period of time (e.g. one month), carefully carry out the following instructions.

- Completely empty the tanks as indicated in par. I3.7 "Accessory functions".
- After draining the tanks, press the On/Off key ("A" - Table 5 "Control panel") to switch off the dishwasher.
- Turn the main switch of the machine to "O".
- Close the water supply cocks.
- Clean the inside and outside of the machine as indicated in par. I4.1 "Daily internal cleaning" and I4.2 "Exterior cleaning".
- Spread a film of paraffin oil over the steel surfaces.

When using the machine again, follow the indications in par. I3 "Daily activation of machine".

I6 Maintenance



IMPORTANT!

Make sure the MAIN SWITCH of the machine is locked in the Off position - "O".

Inspection and maintenance intervals depend on the actual machine operating conditions (total wash hours) and ambient conditions (presence of dust, damp, etc.), therefore precise time intervals cannot be given. In any case, to minimize interruptions of the service, careful and periodical machine maintenance is advisable.

Therefore, it is advisable to:

- Descale the boiler, inside surfaces of the tank and the machine piping once or twice a year (call technical assistance).
- Every month descale the prewash, wash and rinse jets with vinegar or scale remover.
- Once or twice a year clean the finned coil of the CU (call technical assistance).

It is also advisable to stipulate a scheduled preventive maintenance contract with technical assistance.

I7 Machine disposal

At the end of the product's life cycle, make sure the equipment is not dispersed in the environment. The equipment must be disposed of in compliance with current regulations in the country of use.

All metal parts are in s/steel (AISI 304) and removable. Plastic parts are marked with the letters of the material.

The symbol  on the product indicates that this product should **not** be treated as domestic waste, but must be correctly disposed of in order to prevent possible negative consequences for the environment and the human health.

Regarding the recycling of this product, please contact the sales agent or dealer of your product, your after-sales service or the appropriate waste disposal service.

THE DISHWASHER DOES NOT WASH PROPERLY
1. Check the suction filter and carefully clean it if dirty. 2. Make sure the wash jets are not clogged by solid residuals. 3. Make sure the initial quantity of detergent and/or subsequent additions are correct. 4. Make sure the modules making up the machine respect the recommended values given in the technical data table. 5. Make sure the dishes are correctly placed in the racks.
GLASSES AND DISHES ARE NOT PROPERLY DRIED
1. Make sure there is rinse aid in the container and top-up if necessary. 2. Make sure the water temperature of the rinse module is between 80°C and 90°C. 3. If present in the machine, check operation of the drying module (that hot air comes out). 4. Make sure the curtains are correctly positioned. 5. Make sure the dishes were not immersed in foamy detergent (e.g. hand wash detergent) before being put in the machine.
CONDENSATE ON GLASSES
1. Make sure there is rinse aid in the container and top-up if necessary.
STAINS ON GLASSES
1. Only use “non-foaming” products for professional dishwashers.
EXCESSIVE FOAM IN THE TANK
1. Make sure the washing module water temperature is not below the minimum recommended value given in the technical data table. 2. Make sure the tank has been cleaned with suitable detergents. 3. Empty the tank and carefully rinse before resuming work. 4. If a foaming detergent was used, empty and refill the tank with water until the foam has been removed.