

### XP1080B

**HD IR Waterproof Fixed IP Camera (With Integrated Bracket)** 

**User's Manual** 

## Welcome

Thank you for purchasing our IP camera!

This user's manual is designed to be a reference tool for your system.

Please read the following safeguard and warnings carefully before you use this series product!

Please keep this user's manual well for future reference!

## **Important Safeguards and Warnings**

#### 1. Electrical safety

All installation and operation here should conform to your local electrical safety codes.

The power shall conform to the requirement in the SELV (Safety Extra Low Voltage) and the Limited power source is rated 12V DC or 24V AC in the IEC60950-1. This series product can not support these two modes at the same time.

We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.

We are not liable for any problems caused by unauthorized modification or attempted repair.

#### 2. Transportation security

Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.

#### 3 . Installation

Do not apply power to the camera before completing installation.

Please install the proper power cut-off device during the installation connection.

Always follow the instruction guide the manufacturer recommended.

#### 4. Qualified engineers needed

All the examination and repair work should be done by the qualified service engineers.

We are not liable for any problems caused by unauthorized modifications or attempted repair.

#### 5 . Environment

This series IP camera should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.

Please keep it away from the electromagnetic radiation object and environment.

Please make sure the CCD (CMOS) component is out of the radiation of the laser beam device.

Otherwise it may result in CCD (CMOS) optical component damage.

Please keep the sound ventilation.

Do not allow the water and other liquid falling into the camera.

Thunder-proof device is recommended to be adopted to better prevent thunder.

The grounding studs of the product are recommended to be grounded to further enhance the reliability of the camera.

#### 6. Daily Maintenance

Please shut down the device and then unplug the power cable before you begin daily maintenance work.

Do not touch the CCD (CMOS) optic component. You can use the blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, please use the water to dilute the mild detergent first and then use it to clean the device. Finally use the dry cloth to clean the device.

Please put the dustproof cap to protect the CCD (CMOS) component when you do not use the camera.

#### 7. Accessories

Be sure to use all the accessories recommended by manufacturer.

Before installation, please open the package and check all the components are included.

Contact your local retailer ASAP if something is broken in your package.

Accessory Name	Amount
IPC Unit	1
Quick Start Guide	1
12V to 24V Conversion Cable (For AC 24V series product only)	1
Installation Accessories Bag	1
CD	1

# **Table of Contents**

1	Gener	ral Introduction	1
	1.1	Overview	1
	1.2	Features	1
	1.3	Specifications	2
		.3.1 Performance	
2	Structu	ure	11
	2.1	Multiple-function Combination Cable	11
	2.2	Framework and Dimension	12
	2.3	Bidirectional talk	13
		2.3.1 Device-end to PC-end	
	2.4	Alarm Setup	13
3	Installa	ationation	15
	3.1	Device Installation	15
	3.2	SD Card Installation	15
	3.3	Lens Adjustment	16
	3.4	Bracket Adjustment	17
4	Quick	Configuration Tool	18
	4.1	Overview	18
	4.2	Operation	18
5	Web C	Operation	21
	5.1	Network Connection	21

	5.2	Login and Logout	21
6	FAQ		24
Аp	pendix	Toxic or Hazardous Materials or Elements	25

### 1 General Introduction

#### 1.1 Overview

This series IP camera integrates the traditional camera and network video technology. It adopts audio and video data collection, transmission together. It can connect to the network directly without any auxiliary device.

This series IPC uses standard H.264 video compression technology and G.711a audio compression technology, which maximally guarantee the audio and video quality.

It supports the IR night vision function. In the night environments, the device can use the IR light to highlight the object which is suitable for the surveillance function in the low illumination environments. The built-in protection enclosure and waterproof design conforms to the IP 66 level. It has the sound waterproof function suitable for use in the outdoor environments.

It supports real-time monitor and listening at the same time. It supports analog video output and dual-way bidirectional talk.

It can be used alone or used in a network area. When it is used lonely, you can connect it to the network and then use a network client-end. Due to its multiple functions and various uses, this series IPC is widely used in many environments such office, bank, road monitor and etc.

### 1.2 Features

User Management	<ul> <li>Different user rights for each group, one user belongs to one group.</li> <li>The user right shall not exceed the group right.</li> </ul>
Storage Function	<ul> <li>Support central server backup function in accordance with your configuration and setup in alarm or schedule setting</li> <li>Support record via Web and the recorded file are storage in the client-end PC.</li> <li>Support built-in SD card.</li> <li>Do not support local SD card hot swap storage function. Support short-time storage when encounter disconnection.</li> <li>Support network storage function such as FTP.</li> </ul>
Alarm Function	<ul> <li>Real-time respond to external on-off alarm input, and video detect as user predefined activation setup and generate corresponding message in screen and audio prompt(allow user to pre-record audio file)</li> <li>Real-time video detect: motion detect, camera masking.</li> </ul>
Network Monitor	<ul> <li>IPC supports one-channel audio/video data transmit to network terminal and then decode. Delay is within 270ms (network bandwidth support needed)</li> <li>Max supports 20 connections.</li> <li>Adopt the following audio and video transmission protocol: HTTP, TCP, UDP, MULTICAST, RTP/RTCP, RTSP and etc.</li> <li>Support web access.</li> </ul>
Network Management	<ul> <li>Realize IPC configuration and management via Ethernet.</li> <li>Support device management via web or client-end.</li> </ul>
Power	<ul> <li>External power adapter DC12V/AC 24V. You can select according to your actual environments. Please note system can not support these two types of power supplying at the same time.</li> </ul>
Assistant Function	<ul> <li>Log function</li> <li>Support system resource information and running status real-time display.</li> </ul>

- Day/Night mode auto switch.
- Built-in IR light. Support IR night vision.
- Support picture parameter setup such as electronic shutter and gain setup.
- Backlight compensation: screen auto split to realize backlight compensation to adjust the bright.
- Support video watermark function to avoid vicious video modification.
- The enclosure conforms to the IP 66 protection. Has the waterproof function.

## 1.3 Specifications

#### 1.3.1 Performance

Please refer to the following sheet for IPC performance specification.

D	Model	HFW3300C	HFW3200C	HFW3202C	HFW3100C	HFW3101C			
Parame	Main Processor	TI Davinci high performance DSP							
System	OS		•	J3F					
ste		Embedded LINUX							
3	System Resources	Support real-time network, local record, and remote operation at the same time.							
	User Interface	•	Remote operation interface such as WEB, DSS, PSS						
	System Status	SD card status	s, bit stream sta	tistics, log, and	software version	n.			
<u>≤</u>	Image Sensor	1/2.8-inch CM	OS		1/3-inch CMO	S			
Video Parameter	Pixel	2080(H)*155 3(V)	1920(H)*1080	` '	1280(H)*960(\	•			
aran	Day/Night Mode			ch and IR-CUT a cal component.).		e. (The lens			
net	Auto Aperture	DC drive							
94	Gain Control	Fixed/Auto							
	White Balance	Manual/Auto							
	BLC	On/Off				Off/BLC/WD (Value:1- 100)			
	Exposure Mode		from 1/3 to 1/1 es from 1/4 to 1						
	Video Compression Standard	H.264/JPEG/N	ЛJPG						
	Video Frame Rate	PAL: Main stream ( 3M@15fp s,1080P@2 5fps,SXGA @25fps, 1.3M@25fps ,720P@25fp s,704*576@ 25fps) Extra stream (704*576@2 5fp, 352*288@2 5fps)	PAL: Main stream (1080P@25fp SXGA@25fps 1.3M@25fps, 704*576@25f Extra stream (704*576@25 352*288@25f	720P@25fps, ps),	PAL: Main stream (1.3M@25, 720P@25fps, 704*576@25fps) Extra stream (704*576@25fps , 352*288@25fps)				

		NTSC:	NTSC:		NTSC:	1	
		NTSC: Main stream	Main stream		NTSC:		
				1000D@20fpa	Main stream:	4.014.000	
		(3M@15fp		1080P@30fps,	(	1.3M@30fps,	
		s ,1080P@3 0fps,	SXGA@30fps	720P@30fps,	720P@30fps,		
		SXGA@30fp	704*480@30f	•	704*480@30f	ps)	
		s,	Extra stream	ps),	Extra stream	001 050+040	
		1.3M@30fps	(704*480@	30fps,352*240	( 704*480@ ( @30fps)	30fps,352*240	
		, 720P@30fp	@30fps)				
		s, 704*480@3					
		Ofps),					
		Extra stream					
		(704*480@					
		30fps,352*2					
		40@30fps)					
		H.264: 56Kbp	•				
	Video Bit Rate		ustable and bit	rate is adjustab	ole.		
			Support customized setup.				
	Video Flip	Support mirror Support flip fu					
	Snapshot	Max 1f/s snap	shot. File exten	sion name is JF	PEG.		
	Privacy Mask	Supports max	4 privacy mask	zones			
	Video Setup	Support paran	neter setup suc	h as bright, con	trast.		
	Video	Channal title	tima titla, matia	n dataat aamar	ra maakina		
	Information	Channel title,	time title, motion	n detect, camer		I Manual	
		   Massacial =======	2.2	Motorized	Manual	Manual	
	Lens	Manual zoom	3.3-	zoom 3-	zoom 3.3-	zoom 2.8-	
		12mm@F1.4		9mm@F1.2	12mm@F1.	12mm@F1.	
	Lens Interface	Φ14 interface	Lens is the def	l fault accessorie	•	4	
	Audio Input	1-channel. RC					
	Audio Output	1-channel. RC					
Au	Bidirectional	T GHAIIIGI. IXC	<i>,</i> , , , , , , , , , , , , , , , , , ,				
Audio	Talk Input	Reuse the firs	t audio input ch	annel			
	Audio Bit Rate	16kbps 16BIT	-				
	Audio		'				
	Compression Standard	G.711a/G.711	u/PCM				
	Gtandard						
			letection zones		el ranges from	1 to 6 (The 6 <sup>th</sup>	
<u> </u>	Motion Detect		nighest sensitivi				
Video			nt: alarm device	e, audio/video s	torage, image s	snapshot, log,	
		email function	and etc.				
Alarm In	put	2-channel inpu	ut, 1-channel o	utput			
	-			•			
Reco	Record Priority	Manual>External alarm >Video detect>Schedule					
ord	Local Storage	Support Micro	SD card storag	je			
Record and Backup	Storage	Support display local storage status					
	Management Wire Network	• • • • • • • • • • • • • • • • • • • •			Ethornot		
Netw ork	MILE METMOLK		Ethernet port, P, TCP/IP, ARF			D DTCD	
¥	Network Protocol		DHCP, DNS, DE				
			,, 101 , D110, DL	,,,o,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	, iti , itili , DUI	Jour, Orvivir .	

	Remote Operation	Monitor, PTZ control, system setup, file download, log information, maintenance, upgrade and etc.					
<b>5</b> .	Video Output	1-channel analogue video output, BNC port.					
AUX Interface	Restore Default Setup	Reset button					
	Power	Support AC24V/DC12V power. (Cannot support these two modes at the same time.)					
	Power	8W MAX (10W MAX when ICR switch)					
ଜୁ	Consumption						
nera	Working Temperature	-10°C~+60°C					
General Parameter	Working Humidify	10%~90%					
ame	Dimensions(mm)	φ104*306.7					
eter	Weight	1250g (Excluding box)					
•	Installation	Bracket is included in the accessories bag.					

## 1.3.2 Factory Default Setup

Please refer to the following sheet for factory default setup information.

		Item			Default Se	tup			
Set	up				HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C
င္လ	Cc	Brightness			50				
Camera	Conditions	Contra	ast		50				
മ		Hue			50				
		Satura	ation		50				
		Gain N	Mode		Auto				
		Gain A	Adjust		80				
		Exposure Mode		Auto					
		Auto Iris		On					
		Scene Mode		Auto	Auto				
		Day/night Mode		Auto					
		BLC Mirror			Off				WDR
					Off				
		Flip			Off				
	Video	Video		Bit stream type	General				
	0	Video bit stream		Encode mode	H.264				
		ream	Main Stream	Resolution	1080P (1920 <sup>5</sup>	*1080)		1.3M (1280*960 )	720P (1280*720 )
			(FPS)	Frame Rate (FPS)	PAL:25 NTSC:30				
				Bit Rate Type	CBR				
				Recommen	3584-8192	Kb/S			

				Default Setup					
up	Item				HFW320 0C	HFW3	202	HFW31 0C	0 HFW310 1C
			ded Bit		<u> </u>				
			Bit Rate	8192					
			I Frame	50					
			Watermark	Enable					
			Watermark character	DigitalCCTV					
			Enable	Enable					
	Sub Stream		Bit stream type	General					
			Encode mode	H.264					
			Resolution	PAL:CIF(352 NTSC:CIF(3					
			Frame Rate (FPS)	PAL:25 NTSC:30					
			Bit Rate Type	CBR					
		Recommen ded Bit	192-1024Kb	/S					
			Bit Rate	1024					
			I Frame	50					
			Snapshot Type	General					
	Snaps	shot	Image Size	1080P (1920*1080	1080P (1920*		1.3M (12 )	1 80*960	720P (1280*720 )
			Quality	5					
			Interval	1s					
			Privacy Mask	Disable					
	Video	Overlay	Channel Title	Enable					
			Time Title	Enable					
	Path		Snapshot Path	C:\PictureDo	wnload				
L			Record Path	C:\RecordDo	ownload				
Α			Enable	Enable					
Audio	Main S	Stream	Encode Mode	G.711A					
			Enable	Disable					
	Sub S	Sub Stream Encode Mode		G.711A					

		Default Setup							
Setup	Item		HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C		
Z		Host Name	IPC						
Network		Ethernet Card	Wire(Default)						
		Mode	Static						
		Mac Address	Device MA	C address wl	hen it is ship	ped out of the	e factory		
		IP Version	IPV4						
		IP Address	192.168.1.	108					
	TOD/ID	Subnet Mask	255.255.25	5.0					
	TCP/IP	Default Gateway	192.168.1.	1					
		Preferred DNS	8.8.8.8						
		Alternate DNS	8.8.8.8						
		Enable ARP/Ping set device IP address service	Enable						
		Max Connection	10						
		TCP Port	37777						
	Connection	UDP Port	37778						
		HTTP Port	80						
		RTSP Port	554						
		Enable	Disable						
	PPPoE	Username	none						
		Password	N/A						
		Server Type	Disable, C	N99 DDNS					
		Server IP	none						
		Server Port	80						
	DDNS	Domain Name	none						
		User	none						
		Password	N/A						
		Update Period	5 minutes						
	IP Filter	Trusted sites	Disable						

		Default Setup						
Setup	Item		HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C	
		SMTP Server	none					
		Port	25					
		Anonymity	Disable					
		User Name	anonymity					
		Password	N/A					
		Sender	none					
	SMTP(Email)	Authenticati on (Encryption mode)	N/A					
		Title (Subject)	IPC Messa	ge				
		Attachment	N/A					
		Mail Receiver	0 seconds					
		Email Test	Disable, in	nterval=60 mi	nutes			
	UPnP	Enable UPnP	Disable					
		SNMP v1	Disable					
		SNMP v2	Disable					
		SNMP Port	161					
	SNMP	Read Community	public					
	SINIVIE	Write Community	private					
		Trap Address	N/A					
		Trap Port	162					
		Enable	Enable					
	Bonjour	Server Name	MAC					
	Multicast	Multicast Address	239.255.42	2.42				
		Port	36666					
	QoS	Real-time Monitor	0					
		Command	0					
nt Eve	Motion Detect	Enable	Disable					
, v	גט	Anti-dither	5 seconds					

				Default Setup					
Setup	Ite	n		HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C	
			Sensitivity	3					
			Record Channel	Enable					
			Record Delay	10 seconds	}				
			Relay out	Enable					
			Alarm Delay	10 seconds	1				
			Send Email	Disable					
			Snapshot	Disable					
			Enable	Disable					
			Record Channel	Enable					
		Video	Record Delay	10 seconds	}				
		Masking	Relay out	Enable					
			Record Delay	10 seconds	;				
			Send Email	Disable					
			Snapshot	Disable					
	Alarm	Alarm	Enable	Disable					
			Relay in	Alarm 1					
			Anti-dither	0 seconds					
			Sensor Type	NO					
			Record Channel	Enable					
		Activation	Record Delay	10 seconds	1				
			Relay out	Enable					
			Alarm Delay	10 seconds	i				
			Send Email	Disable					
			Snapshot	Disable					
		Relay output		1					
	Αb		Enable	Disable					
	nor		Relay out	Enable					
	Abnormity	No SD Card	Relay out Delay	10 seconds	5				
			Send email	Disable					
			Enable	Disable					
		Capacity	Capacity Limit	10%					
		Warning	Relay out	Enable					
				Relay out	10 seconds	3			

				Default Setup				
Setup	Itei	m		HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C
			Delay					
			Send Email					
			Enable	Disable				
		SD Card Error	Relay out	Enable				
			Relay out Delay	10 seconds	10 seconds			
			Send email	Disable				
			Enable	Disable				
			Record	Enable				
		Disconnectio n	Record Delay	10 seconds				
			Relay out	Enable				
			Relay out Delay	10 seconds	S			
		IP Conflict	Enable	Disable				
			Record	Enable				
			Record Delay	10 seconds	S			
			Relay out	Enable				
			Relay out Delay	10 seconds	S			
St	Sto	FTP	Enable FTP	Disable				
Storage	Storage		Server IP	N/A				
ě			Port	21				
			Username	anonymity				
			Password	N/A				
			Remote path	share				
			Emergency (Local)	Disable				
			Pack Duration	8 minutes				
			Pre-record	5 seconds				
	Record Control		Disk Full	Overwrite				
			Record Mode	Auto				
			Record Stream	Main strear	n			
S	Ō		Device No	Device MA	С			
System	Genera	Local Host	Language	English				
_ ∄	r <u>al</u>	Local Float	Video Standard	PAL				

	Item_			Default Setup					
Setup				HFW330 0C	HFW320 0C	HFW3202 C	HFW310 0C	HFW310 1C	
			Date Format	Y-M-D					
			Time Format	24H					
			Time Zone	GMT+08:00					
			System Time	Sync					
		Data	DST	Disable					
		Date and time	DST Type	Week					
			Start Time	00:00:00 of the first Sunday of the month					
			End Time	00:00:00 of the second Monday of the month					
			NTP	Disable					
			NTP Server	clock.isc.org					
			Port	37					
			Update Period	10 minutes					
		Auto Rebo		Enable					
	Auto Maintenance		Auto Delete Old Files	Disable					

# 2 Structure

### 2.1 Multiple-function Combination Cable

You can refer to the following figure for multiple-function combination cable information. See Figure 2-1.

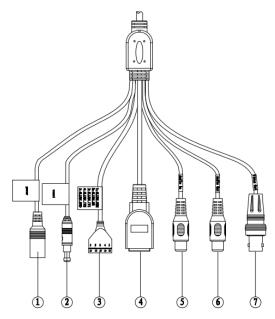


Figure 2-1

Please refer to the following sheet for detailed information.

SN	Port Name	Function	Connection	Note
1	DC 12V/AC 24V	Power input port	1	Power port. Input DC 12V/AC 24V (Please use the provided conversion cable)
2	Reset	et Reset port		Hardware reset function. Press it for 3 to 5 seconds; system hardware can restore default setup.
3	I/O	I/O port	/	Connect to I/O port.
4	LAN	Network port	Ethernet port	Connect to standard Ethernet cable.
5	AUDIO IN	Audio input port	RCA	Input audio signal. It can receive the analog audio signal from the pickup.
6	AUDIO OUT Audio output port		RCA	Output audio signal to the devices such as the sound box.
7	VIDEO OUT	Video output port	BNC	Output analog video signal. It can connect to the TV monitor to view the video.

Please refer to the follow sheet for detailed I/O port information.

Port Name	SN	Name	Note	
	1	ALARM_COM	Alarm output public port.	
I/O Port	2	ALARM_NO	Alarm output port. It is to output the alarm signal to the alarm device.  NO: normal open alarm output port.  It works with the ALARM_COM port.	
	3	ALARM_IN1	Alarm input port 1. It is to receive the on-off signal from the external alarm source.	
	4	ALARM_IN2	Alarm input port 2. It is to receive the on-off signal from the external alarm source.	
	5	GND	Ground port	

## 2.2 Framework and Dimension

Please refer to the following two figures for dimension information. The unit is mm. See Figure 2-2 and Figure 2-3.

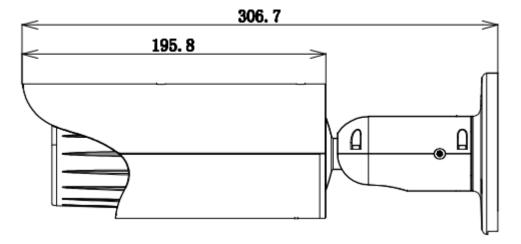


Figure 2-2

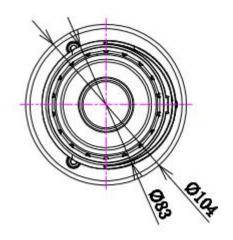


Figure 2-3

#### 2.3 Bidirectional talk

#### 2.3.1 Device-end to PC-end

#### **Device Connection**

Please connect the speaker or the MIC to the audio input port of the device. Then connect the earphone to the audio output port of the PC.

Login the Web and then click the Audio button to enable the bidirectional talk function.

You can see the button becomes orange after you enabled the audio talk function.

Click Audio button again to stop the bidirectional talk function.

#### **Listening Operation**

At the device end, speak via the speaker or the pickup, and then you can get the audio from the earphone or sound box at the pc-end.

#### 2.3.2 PC-end to the Device-end

#### **Device Connection**

Connect the speaker or the MIC to the audio input port of the PC and then connect the earphone to the audio output port of the device.

Login the Web and then click the Audio button to enable the bidirectional talk function.

You can see the button becomes orange after you enabled the audio talk function.

Click Audio button again to stop the bidirectional talk function.

Please note the listening operation is null during the bidirectional talk process.

#### **Listening Operation**

At the PC-end, speak via the speaker or the pickup, and then you can get the audio from the earphone or sound box at the device-end.

### 2.4 Alarm Setup

The alarm interface is shown as in Figure 2-4. Please follow the steps listed below for local alarm input and output connection.

- 1) Connect the alarm input device to the alarm input port (No.3 pin or No.4 pin) of the I/O cable.
- 2) Connect the alarm output device to the alarm output port (No.2 pin) and alarm output public port (No.1 pin). The alarm output port supports NO (normal open) alarm device only.
- 3) Open the Web, go to the Figure 2-4. Please set the alarm input 01 port for the first channel of the I/O cable (No.3 pin). The alarm input 02 is for the 2<sup>nd</sup> channel of I/O cable (No.4 pin). Then you can select the corresponding type (NO/NC.)
- 4) Set the WEB alarm output. The alarm output 01 is for the alarm output port of the device. It is the No.2 pin of the I/O cable.

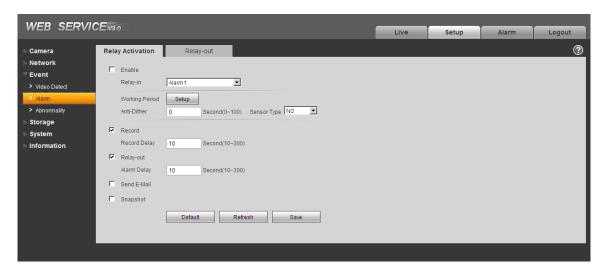


Figure 2-4

Please refer to the following figure for alarm input information. See Figure 2-5.

Alarm input: When the input signal is idle or grounded, the device can collect the different statuses of the alarm input port. When the input signal is connected to the 5V or is idle, the device collects the logic "1". When the input signal is grounded, the device collects the logic "0".

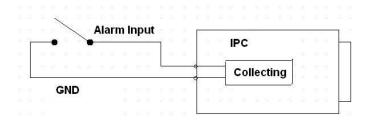


Figure 2-5

Please refer to the following figure for alarm output information. See Figure 2-6.

Port ALARM\_COM and Port ALARM\_NO composes an on-off button to provide the alarm output. If the type is NO, this button is normal open. The button becomes on when there is an alarm output. If the type is NC, this button is normal off. The button becomes off when there is an alarm output.

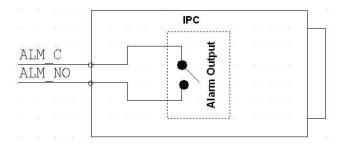


Figure 2-6

#### 3 Installation

#### 3.1 Device Installation

Please follow the steps listed below to install the device. Please refer to Figure 3-1 for reference.

- Please draw the installation holes in the installation surface and then mark three expansion bolts holes in the surface. Insert three bolts in the hole and secure firmly.
- Please line up the installation holes of the bottom of the pendant mount bracket to the installation holes in the surface. Then insert the three bolts to the holes of the bottom of the bracket. Finally fasten the device on the installation surface.

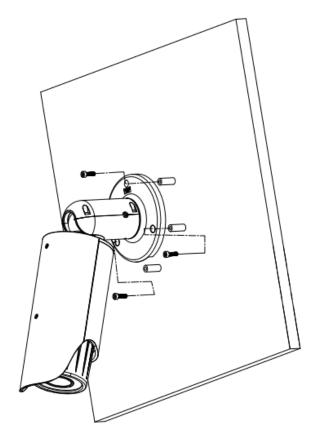


Figure 3-1

#### 3.2 SD Card Installation

Use the inner hex wrench from the installation accessories bag to remove the four inner hex screws from the rear cover. Please refer to Figure 3-2 to find the SD card slot position. Insert the SD card and the fix the four screws of the rear cover.

#### **Important**

- Please make sure the cable connection between the power board and the main board is firm.
   Otherwise, it may result in device malfunction.
- The rear cover of the device adopts the waterproof design. Please secure four screws firmly after you complete the SD card installation.

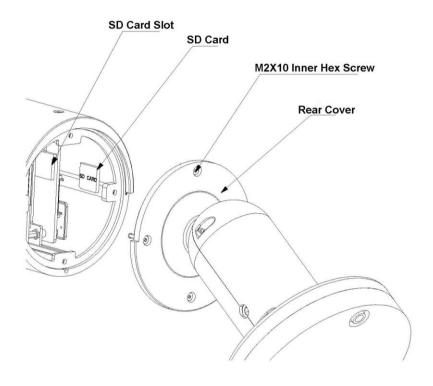


Figure 3-2

## 3.3 Lens Adjustment

Turn counter clockwise to remove the lens cover, now you can see the iris front and rear control rod. The front control rod is to focus and the rear control rod is to zoom. See Figure 3-3. Please turn clockwise to fix the lens cover back firmly.

#### **Important**

- Please remove the sunshield first and remove the lens cover if you can not unfasten the lens cover.
- The lens cover has the waterproof function. Please make sure it is secure after you complete the lens adjustment.
- HFW3202C series product has the default motorized zoom lens. You do not need to adjust manually.

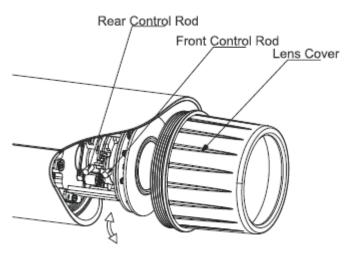


Figure 3-3

### 3.4 Bracket Adjustment

You can use a M4 inner hex screw to control the bracket. Please use the inner hex wrench from the installation accessories bag to unfasten the screw. See Figure 3-4.The horizontal angle of the rear cover can rotate 360°, the tilt angle can rotate 90° and the chassis can rotate 360°.

Please use the inner hex wrench to secure the screw firmly after you complete the setup.

#### **Important**

 Please make sure the M4 inner hex screw is firm, otherwise it may result in chassis vibration and the camera can not fix to a specified angle.

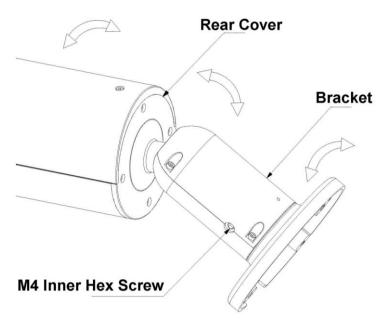


Figure 3-4

## 4 Quick Configuration Tool

#### 4.1 Overview

Quick configuration tool can search current IP address, modify IP address. At the same time, you can use it to upgrade the device.

Please note the tool only applies to the IP addresses in the same segment.

### 4.2 Operation

Double click the "ConfigTools.exe" icon, you can see an interface is shown as in Figure 4-1. In the device list interface, you can view device IP address, port number, subnet mask, default gateway, MAC address and etc.

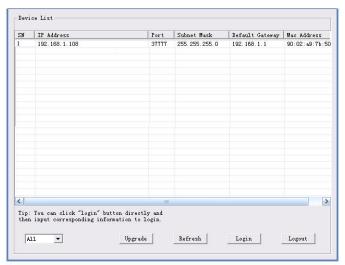


Figure 4-1

Select one IP address and then right click mouse, you can see an interface is shown as in Figure 4-2. **Note:** 

You can set the IP address, subnet mask and gateway for the IPC and PC. Please note IPC IP address and PC IP address shall be in the same network segment if there is no router. IPC default IP address is 192.168.1.108. If there is a router, please set the corresponding gateway and subnet mask. The factory default user name is **admin** and password is **admin**. For security reasons, please modify your password after you first login.

For detailed WEB operation, please refer to the IPC Web Operation Manual in the resource CD.

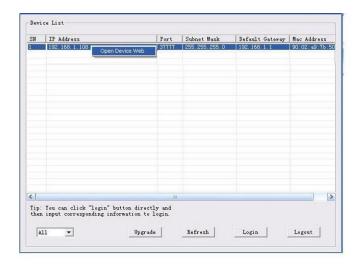


Figure 4-2

Select the "Open Device Web" item; you can go to the corresponding web login interface. See Figure 4-3.

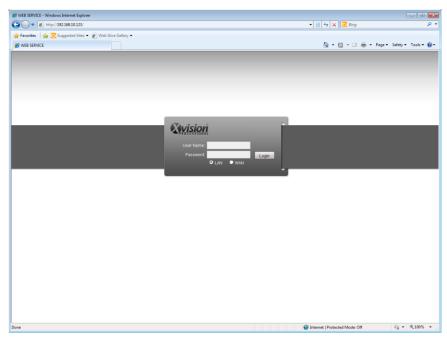


Figure 4-3

If you want to modify the device IP address without logging in the device web interface, you can go to the configuration tool main interface to set.

In the configuration tool search interface (Figure 4-1), please select a device IP address and then double click it to open the login interface. Or you can select an IP address and then click the Login button to go to the login interface. See Figure 4-4.

In Figure 4-4, you can view device IP address, user name, password and port. Please modify the corresponding information to login.

Please note the port information here shall be identical with the port value you set in TCP port in Web Network interface. Otherwise, you can not login the device.

If you are using device background upgrade port 3800 to login, other setups are all invalid.

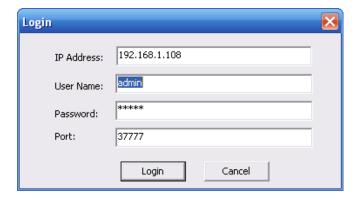


Figure 4-4

After you logged in, the configuration tool main interface is shown as below. See Figure 4-5.

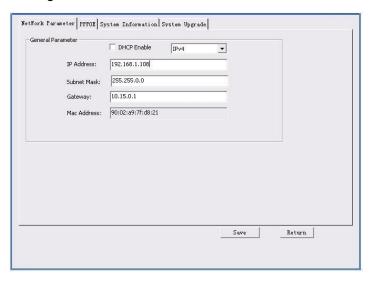


Figure 4-5

For detailed information and operation instruction of the quick configuration tool, please refer to the *Quick Configuration Tool User's Manual* included in the resources CD.

## 5 Web Operation

This series IPC product support the Web access and management via PC.

Web includes several modules: monitor channel preview, system configuration, alarm and etc.

#### 5.1 Network Connection

Please follow the steps listed below for network connection.

- Make sure the IPC has connected to the network properly.
- Please set the IP address, subnet mask and gateway of the PC and the IPC respectively. IPC default IP address is 192.168.1.108. Subnet mask is 255.255.255.0. Gateway is 192.168.1.1
- Use order ping \*\*\*.\*\*\*.\*\*\*(\* IP camera address) to check connection is OK or not.

### 5.2 Login and Logout

Open IE and input IP camera address in the address bar.

For example, if your camera IP is 192.168.1.108, then please input http:// 192.168.1.108 in IE address bar. See Figure 5-1.

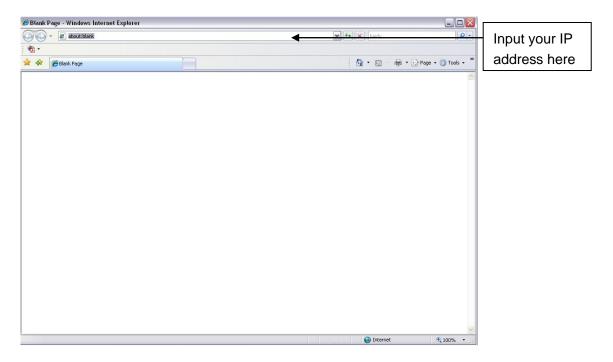


Figure 5-1

The login interface is shown as below. See Figure 5-2.

Please input your user name and password.

Default factory name is admin and password is admin.

Note: For security reasons, please modify your password after you first login.

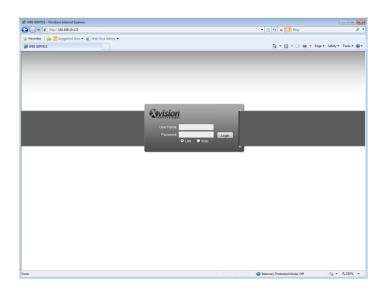
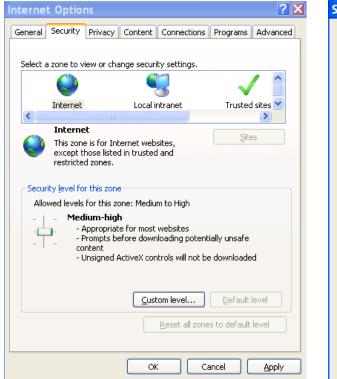


Figure 5-2

If it is your first time to login in, system pops up warning information to ask you whether install control webrec.cab or not after you logged in for one minute. Please click OK button, system can automatically install the control. When system is upgrading, it can overwrite the previous Web too. If you can't download the ActiveX file, please check whether you have installed the plug-in to disable the control download. Or you can lower the IE security level. See Figure 5-3.



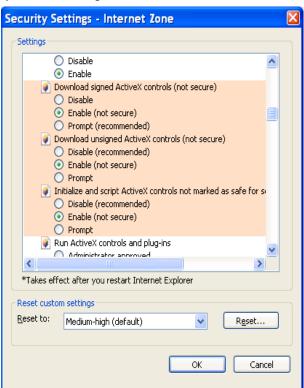


Figure 5-3

After you logged in, you can see the main window. See Figure 5-4.

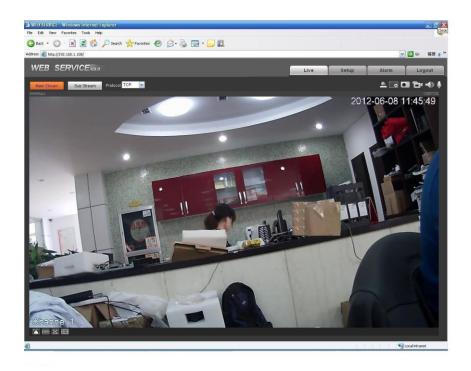


Figure 5-4

Please refer to the Web Operation Manual included in the resource CD for detailed operation instruction.

# 6 FAQ

Bug					
I cannot boot up the device.	Please click RESET button for at least five seconds to restore factory default setup.				
SD card write times	Do not set the SD card as the storage media to storage the schedule record file. It may damage the SD card duration.				
I cannot use the disk as the storage media.	When disk information is shown as hibernation or capacity is 0, please format it first (Via Web).				
I cannot upgrade the device via network.	When network upgrade operation failed, you can use port 3800 to continue upgrade.				
Recommended SD card brand	Kingston 4GB, Kingston 1GB, Kingston 16GB, Transcend 16GB, SanDisk 1G, SanDisk 4G				
	Usually we recommend the 4GB (or higher) high speed card in case the slow speed results in data loss.				
Audio function	Please use active device for the audio monitor input, otherwise there is no audio in the client-end.				
To guarantee setup update	After you modified the important setup, please reboot the device via the software to make sure the setup has been updated to the storage medium.				
Power adapter	The general power adapter can work ranging from $0^{\circ}$ to 40 $^{\circ}$ . The device may result in unstable power supply when the temperature exceeds the working temperature.				
	Please replace an industry-level power adapter if you are using in the harsh environments.				
I can not fix the bracket firmly.	Please use the S3 inner hex wrench to secure the rear bracket firmly. Please use your hands to test the camera is firm or not after the installation.				

## Appendix Toxic or Hazardous Materials or Elements

Component	Toxic or Hazardous Materials or Elements							
Name	Pb	Hg	Cd	Cr VI	PBB	PBDE		
Circuit Board Component	0	0	0	0	0	0		
Case	0	0	0	0	0	0		
Wire and Cable	0	0	0	0	0	0		
Packing Components	0	0	0	0	0	0		
Accessories	0	0	0	0	0	0		

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

#### Note

- This user's manual is for reference only. Slight difference may be found in user interface.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.