

## **I370 Motherboard**

Mini-ITX Fan SBC w/ Intel® Socket M  
CPU, VGA, LCD, Giga Ethernet,  
Mini-PCI and PCI-E x16 Interface.

**USER MANUAL Version 1.5**

## ***FCC Statement***



This device complies with part 15 FCC rules. Operation is subject to the following two conditions :

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class "a" digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at him own expense.

## **Copyright Notice**

Copyright © 2007 Winmate Technology Inc., ALL RIGHTS RESERVED. No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

## **Trademark Acknowledgement**

Brand and product names are trademarks or registered trademarks of their respective owners.

## **Disclaimer**

Winmate Communication Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Winmate Communication assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Winmate Communication Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

## **Warranty**

Winmate warrants that each of its products will be free from material and workmanship defects for a period of one year from the invoice date. If the customer discovers a defect, Winmate will, at its option, repair or replace the defective product at no charge to the customer, provided it is returned during the warranty period of one year, with transportation charges prepaid. The returned product must be properly packaged in its original packaging to obtain warranty service.

If the serial number and the product shipping data differ by over 30 days, the in-warranty service will be made according to the shipping date. In the serial numbers the third and fourth two digits give the year of manufacture, and the fifth digit means the month (e. g., with A for October, B for November and C for December).

For example, the serial number 1W07Axxxxxxx means October of year 2007.

## **Packing List**

Before using this Motherboard, please make sure that all the items listed below are present in your package :

- I370 Motherboard
- I370 SBC User Manual
- HDD SATA Cable
- User's Manual & Driver CD
- RS232 Cable

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

## **Customer Service**

We provide service guide for any problem as follow steps : First, visit the website at <http://www.winmate.com> to find the update information about the product. Second, contact with your distributor, sales representative, or our customer service center for technical support if you need additional assistance. You may have the following information ready before you call :

- Product serial number
- Peripheral attachments
- Software (OS, version, application software, etc.)
- Description of complete problem
- The exact wording of any error messages

In addition, free technical support is available from our engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products. Please do not hesitate to call or e-mail us.

## **Safety Precautions**

### ◆ **Warning!**



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronic personnel should open the PC chassis.

### ◆ **Caution!**



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## ***Safety and Warranty***

1. Please read these safety instructions carefully.
2. Please keep this user's manual for later reference.
3. Please disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
4. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
12. Never pour any liquid into an opening. This could cause fire or electrical shock.
13. Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
14. If any of the following situations arises, get the equipment checked by service personnel:
  - A. The power cord or plug is damaged.
  - B. Liquid has penetrated into the equipment.
  - C. The equipment has been exposed to moisture.
  - D. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - E. The equipment has been dropped and damaged.
  - F. The equipment has obvious signs of breakage.
15. Do not leave this equipment in an uncontrolled environment where the storage temperature is below -20° C (-4°F) or above 60° C (140° F). It may damage the equipment.

## ***Revision History***

| <b>Version</b> | <b>Date</b> | <b>Note</b>                                             | <b>Author</b> |
|----------------|-------------|---------------------------------------------------------|---------------|
| 0.1            | 2007.08.10  | ✓ Initial Draft                                         | Shawn Kuo     |
| 0.2            | 2007.08.16  | ✓ Increase Driver installation                          | Aladin Huang  |
| 0.3            | 2007.09.07  | ✓ Increase BIOS                                         | Aladin Huang  |
| 0.4            | 2007.09.12  | ✓ Change COM3 and COM4.<br>✓ Increase SDVO 2 Resolution | Aladin Huang  |
| 1.0            | 2007.09.17  | ✓ Check Spec.                                           | Aladin Huang  |
| 1.1            | 2007.09.20  | ✓ Add new Resolution                                    | Aladin Huang  |
| 1.2            | 2007.10.04  | ✓ BIOS Check                                            | Aladin Huang  |
| 1.3            | 2007.10.05  | ✓ Cancel Audio Jack                                     | Aladin Huang  |
| 1.4            | 2007.10.23  | ✓ Revised COM port                                      | Chris Tsai    |
|                |             | ✓ Revised 2.4.2<br>✓ Add CF issue                       | Aladin Huang  |
|                |             | ✓ Revised 2.5.14                                        | Aladin Huang  |

|  |  |                  |              |
|--|--|------------------|--------------|
|  |  | ✓ Revised 2.5.15 | Aladin Huang |
|--|--|------------------|--------------|

# Contents

|                  |                                           |           |
|------------------|-------------------------------------------|-----------|
| <b>CHAPTER 1</b> | <b>GENERAL INFORMATION .....</b>          | <b>2</b>  |
| 1.1              | INTRODUCTION .....                        | 2         |
| 1.2              | FEATURE .....                             | 2         |
| 1.3              | MOTHERBOARD SPECIFICATIONS .....          | 3         |
| 1.4              | FUNCTION BLOCK .....                      | 4         |
| 1.5              | BOARD DIMENSIONS .....                    | 5         |
| <b>CHAPTER 2</b> | <b>INSTALLATIONS .....</b>                | <b>7</b>  |
| 2.1              | MEMORY MODULE ( DIMM ) INSTALLATION ..... | 7         |
| 2.2              | I/O EQUIPMENT INSTALLATION .....          | 8         |
| 2.3              | JUMPERS AND CONNECTORS.....               | 10        |
| 2.4              | JUMPER SETTING .....                      | 12        |
| 2.5              | CONNECTORS AND PIN ASSIGNMENT .....       | 14        |
| <b>CHAPTER 3</b> | <b>GRAPHIC DRIVER INSTALLATION .....</b>  | <b>23</b> |
| 3.1              | STANDARD CMOS FEATURE.....                | 23        |
| 3.2              | PANEL RESOLUTION SETTING.....             | 27        |
| <b>CHAPTER 4</b> | <b>CHIPSET DRIVER INSTALLATION .....</b>  | <b>30</b> |
| 4.1              | STANDARD CMOS FEATURES .....              | 30        |
| <b>CHAPTER 5</b> | <b>ETHERNET DRIVER INSTALLATION.....</b>  | <b>35</b> |
| 5.1              | INTRODUCTION .....                        | 35        |
| 5.2              | INSTALLATION OF ETHERNET DRIVER.....      | 36        |
| <b>CHAPTER 6</b> | <b>AUDIO DRIVER INSTALLATION .....</b>    | <b>40</b> |
| 6.1              | INTRODUCTION .....                        | 40        |
| 6.2              | INSTALLATION OF AUDIO DRIVER.....         | 40        |
| <b>CHAPTER 7</b> | <b>AWARD BIOS INSTALLATION .....</b>      | <b>43</b> |
| 7.1              | BIOS INTRODUCTION .....                   | 43        |
| 7.2              | BIOS SETUP.....                           | 43        |
| 7.3              | STANDARD CMOS SETUP .....                 | 44        |
| 7.4              | ADVANCE BIOS FEATURE.....                 | 46        |
| 7.5              | ADVANCED BIOS FEATURE.....                | 49        |
| 7.6              | ADVANCED CHIPSET FEATURE.....             | 52        |
| 7.7              | INTEGRATED PERIPHERALS .....              | 55        |
| 7.8              | POWER MANAGEMENT SETUP .....              | 58        |

# General Information

This chapter includes I370 Motherboard background information.

Sections include:

- Introduction
- Feature
- Motherboard Specification
- Function Block
- Board Dimensions

# Chapter 1 General Information

## 1.1 Introduction

I370 SBC is equipped with Intel 945GME North Bridge and Intel ICH7M South Bridge which are designed for use with Intel's mobile platform, Intel® Centrino® Duo mobile technology. Comparing to previous generation chipset, the 945GME chipset's low power design enables up to 28% less average power consumption and the chipset delivers up to 2x improvement in graphics performance and enables up to 25% higher data transfer bus speed rate.

In peripheral connectivity, I370 SBC features PCI Express x16 slot and Mini-PCI I/O ports, two Serial ATA connectors, and eight Hi-Speed USB 2.0 connectors. Additionally, I370 SBC build-in a 12V DC-IN power adapter.

Thus, I370 SBC is designed to satisfy most of the applications in the industrial computer market, such as Gaming, POS, KIOSK, Industrial Automation, and Programmable Control System. It is a compact design to meet the demanding performance requirements of today's business and industrial applications.


## 1.2 Feature

- Mini-ITX Form Factor ( 170mm x 170mm)
- Supports Socket M Intel® Core™2 Duo/Duo/Solo, Celeron M/ULV processors
- System memory up to 4GB DDR2 400/533/667, 2xDIMM
- Integrated Intel 945GME + ICH7M Chipset
- Intel® GMA 950 Integrated Graphics Engine supports LVDS, CRT and SDVO
- Dual Gigabit Ethernet
- 1 x PCI-E x16 slot, 1 x Mini PCI, 4 x COM, 8 x USB2.0, 2 x SATA, 1 x PATA and CF Card Type I/II( optional )


## 1.3 Motherboard Specifications

|                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>CPU Type</b>                       | Intel Core 2 Duo, Core Duo, Core Solo, Celeron M ULV                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>CPU FSB</b>                        | 533MHz/667MHz                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>CPU Socket</b>                     | Intel Socket M                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Chipset</b>                        | Intel 945GME / ICH7M                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>BIOS</b>                           | Award 4MB Flash                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>VGA</b>                            | Intel® GMA 950 Integrated Graphics Engine<br>Up to 224MB shared with system memory                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>LVDS</b>                           | Intel® GMA 950 Integrated Graphics Engine built-in, single-<br>or dual-channel panel support up to 1600 x 1200, 18bit                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>LAN</b>                            | 2 x Giga LAN (Dual Realtek RTL8111B Controller )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Memory Type</b>                    | 2 x DDR2 DIMM socket, supports up to 4GB DDR2<br>533/667 SDRAM                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>LPC I/O</b>                        | Winbond W83627EHG integrated hardware monitoring                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Keyboard/Mouse</b>                 | 2 x PS/2 Keyboard/Mouse connectors                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>IDE Interface</b>                  | One channels; supports Ultra DMA 33/66/100                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Sound</b>                          | Realtek ALC655 5.1 channel (Line-out, Line-in & Mic in)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>USB</b>                            | 8 ports, USB 2.0 (4 x USB Connector, 4 x USB pin-header )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Edge Connectors</b>                | 1 x DC-IN Jack<br>2 x PS/2 connector for keyboard/mouse<br>2 x DB9 for COM1 & COM2<br>1 x VGA out connector + 1 x DB9 for COM3<br>1 x Gigabit LAN RJ-45 + 1 x dual USB stack connector<br>1 x Gigabit LAN RJ-45 + 1 x dual USB stack connector<br>1 x Audio Jack for Audio (Line-Out, Line-In, Mic-in)<br>(Optional)                                                                                                                                                                                                                                                                                                                                       |
| <b>On Board Pin-Header Connectors</b> | 1 x 44 pins box-header<br>2 x SATA connector for SATAI/II 3.0 Gb/s<br>1 x 10pins pin-header for Front Panel(2x5)<br>1 x 8pins pin-header for 5V/12V external power<br>1 x 3pins pin-header for CPU Fan<br>1 x 3pins pin-header for System FAN<br>2 x 2pins pin-header for 5V external power<br>1 x 2pins pin-header for 12V external power<br>2 x 2pins pin-header for Front Audio<br>2 x 10pins pin-header for USB 5/6, 7/8(2x5)<br>1 x 10pins pin-header for COM4(RS232)<br>1 x 4pins ATX 12V connector<br>1 x 40pins DF13 Connector for LVDS<br>1 x 3pins digital panel backlight brightness controller<br>1 x 7pins digital panel backlight controller |
| <b>Power Connector</b>                | Input: 4-pin ATX 12V Power input                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Expansion Slots</b>                | 1 x PCIEx16, 1 x Mini-PCI, 1 x CF Card Type I/II(Optional)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Form Factor</b>                    | Mini-ITX                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Dimensions</b>                     | 170mm x 170mm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Mechanical &amp; environmental</b> | Operating temperature: 0 deg. C to 60 deg. C<br>Operating Humidity: 30 ~ 90% Relative humidity,<br>non-condensing<br>Certification: CE, FCC, RoHS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## 1.4 Function Block

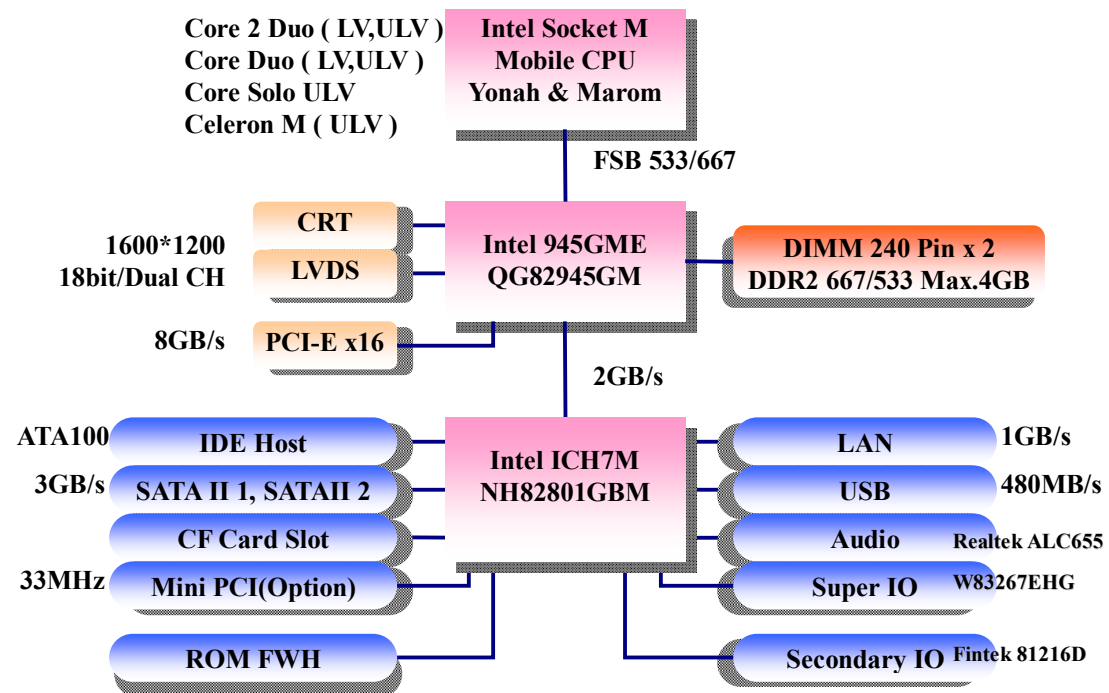

## 1.5 Board dimensions

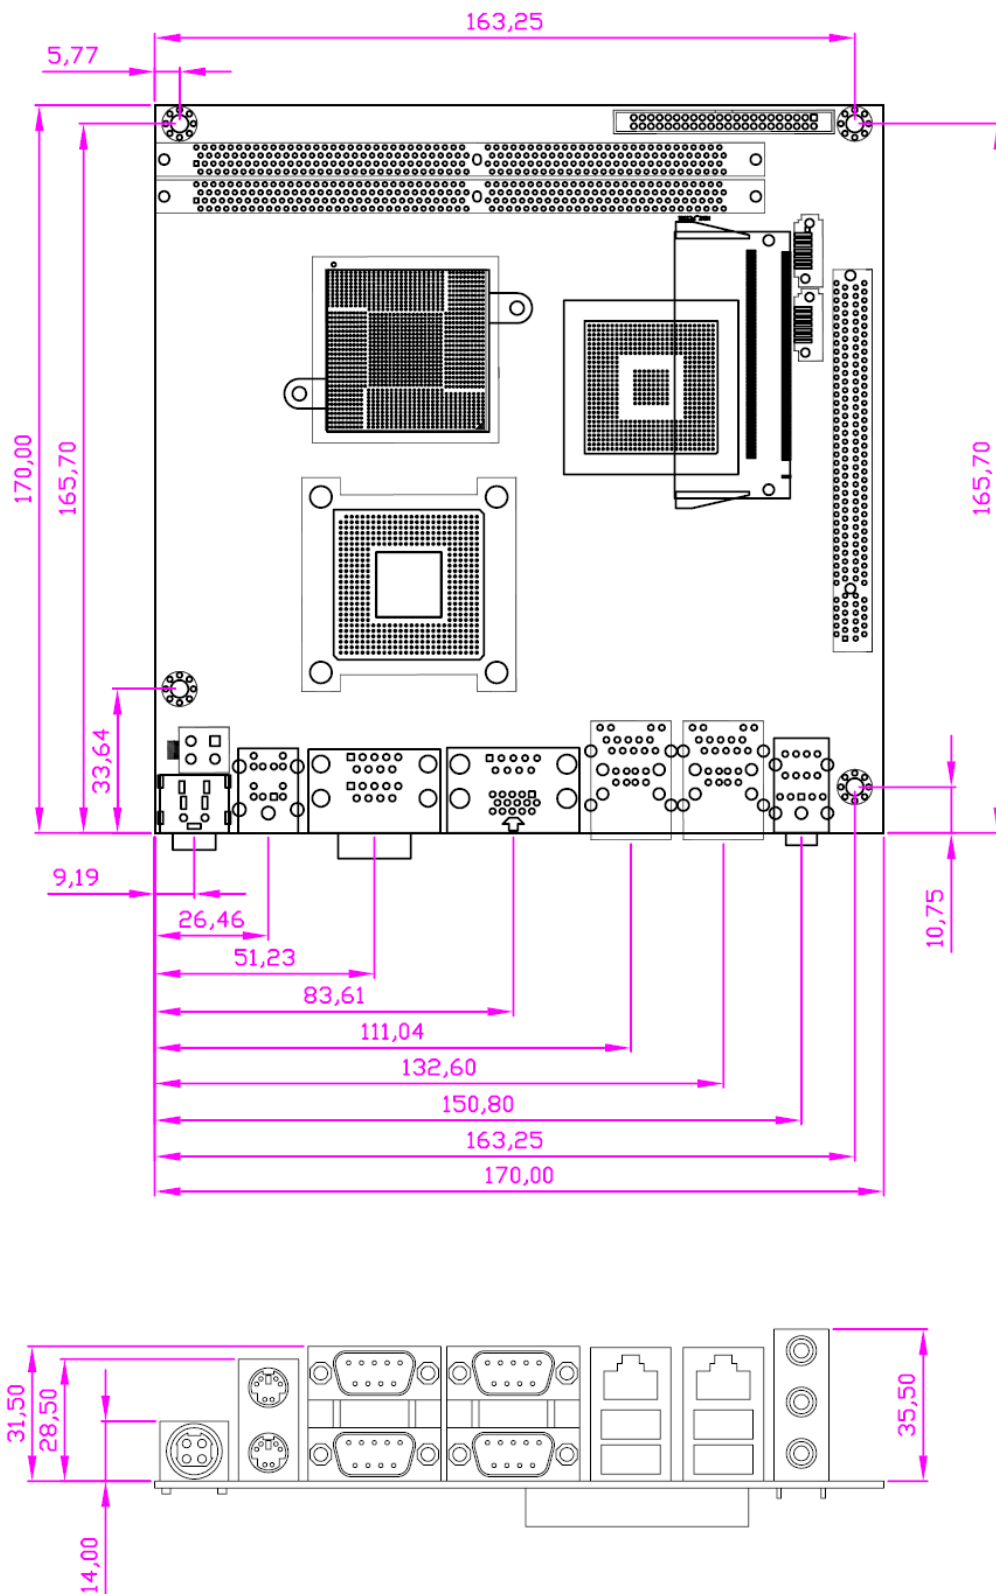

Note: Audio Jack and CF slot is optional.

## Installations

This chapter provides information on how to use the jumps and connectors on I370 Motherboard.

The Sections include:

- Memory Module Installation
- I / O Equipment Installation
- Setting the Jumpers
- Connectors on I370 Motherboard

## Chapter 2 Installations


### 2.1 Memory Module ( DIMM ) Installation

I370 motherboard supports two DDR2 memory socket for a maximum total memory of 4GB in DDR2 memory type.

#### 2.1.1 Installing and Removing Memory Modules

To install the DDR2 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR2 module so that the key of the DDR module align with those on the memory slot.
2. Gently push the DDR2 module in an upright position until the clips of the slot close to hold the DDR2 module in place when the DDR module touches the bottom of the slot.
3. To remove the DDR2 module, press the clips with both hands.

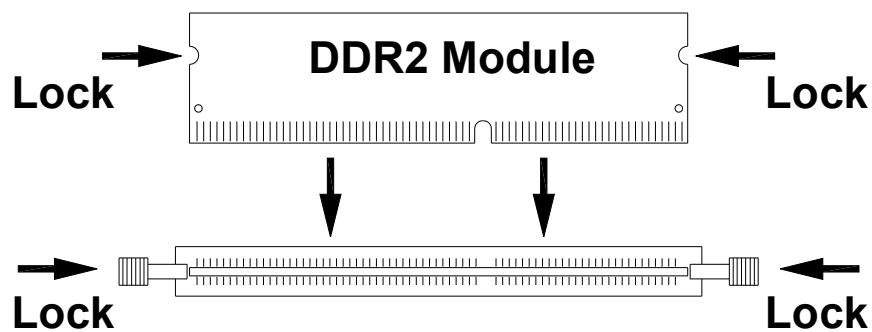

## **2.2 I/O Equipment Installation**

### **2.2.1 12V DC-IN**

The Motherboard allows plugging 12V DC-IN jack on the board without another power module converter under power consumption by Intel socket M processor in 945GME with ICH7M chipset.

### **2.2.2 PS/2 Keyboard and PS/2 Mouse**

The Motherboard provides two PS/2 interface. The PS/2 connector supports Keyboard and Mouse. In other cases, especially in embedded applications, a mouse is not used. Therefore, the BIOS standard setup menu allows you to select\* “All, But Keyboard” under the “Halt On”. This allows no-keyboard operation in embedded system applications without the system halting under POST.

### **2.2.3 Serial COM ports**

Two RS-232 connectors build in the rear I/O. Three optional COM ports support RS-232. When an optional touch-screen is ordered with PPC, serial com port can connect to a serial or an optional touch-screen. One optional COM port supports RS232/422/485 choice through jumper setting.

### **2.2.4 Internal VGA**

The Motherboard has one VGA port that can be connected to an external CRT/ LCD monitor. Use VGA cable to connect to an external CRT / LCD monitor, and connect the power cable to the outlet. The VGA connector is a standard 15-pin D-SUB connector.

### **2.2.5 Ethernet interface**

The Motherboard is equipped with Realtek RTL8111B + Realtek RTL8111B chipset which is fully compliant with the PCI 10/100/1000 Mbps Ethernet protocol compatible. It is supported by major network operating systems. The Ethernet ports provide two standard RJ-45 jacks.

### **2.2.6 USB ports**


Eight USB devices (four with pin headers) may be connected to the system though an adapter cable. Various adapters may come with USB ports. USB usually connect the external system to the system. The USB ports support hot plug-in connection. Whatever, you should install the device driver before you use the device.

### **2.2.7 Audio function (Pin-header)**

The Audio 5.1 channel capabilities are provided by a Realtek ALC655 chipset supporting digital audio outputs. The audio interface includes Mic-in, line-in and line-out.


## 2.3 Jumpers and Connectors

TOP

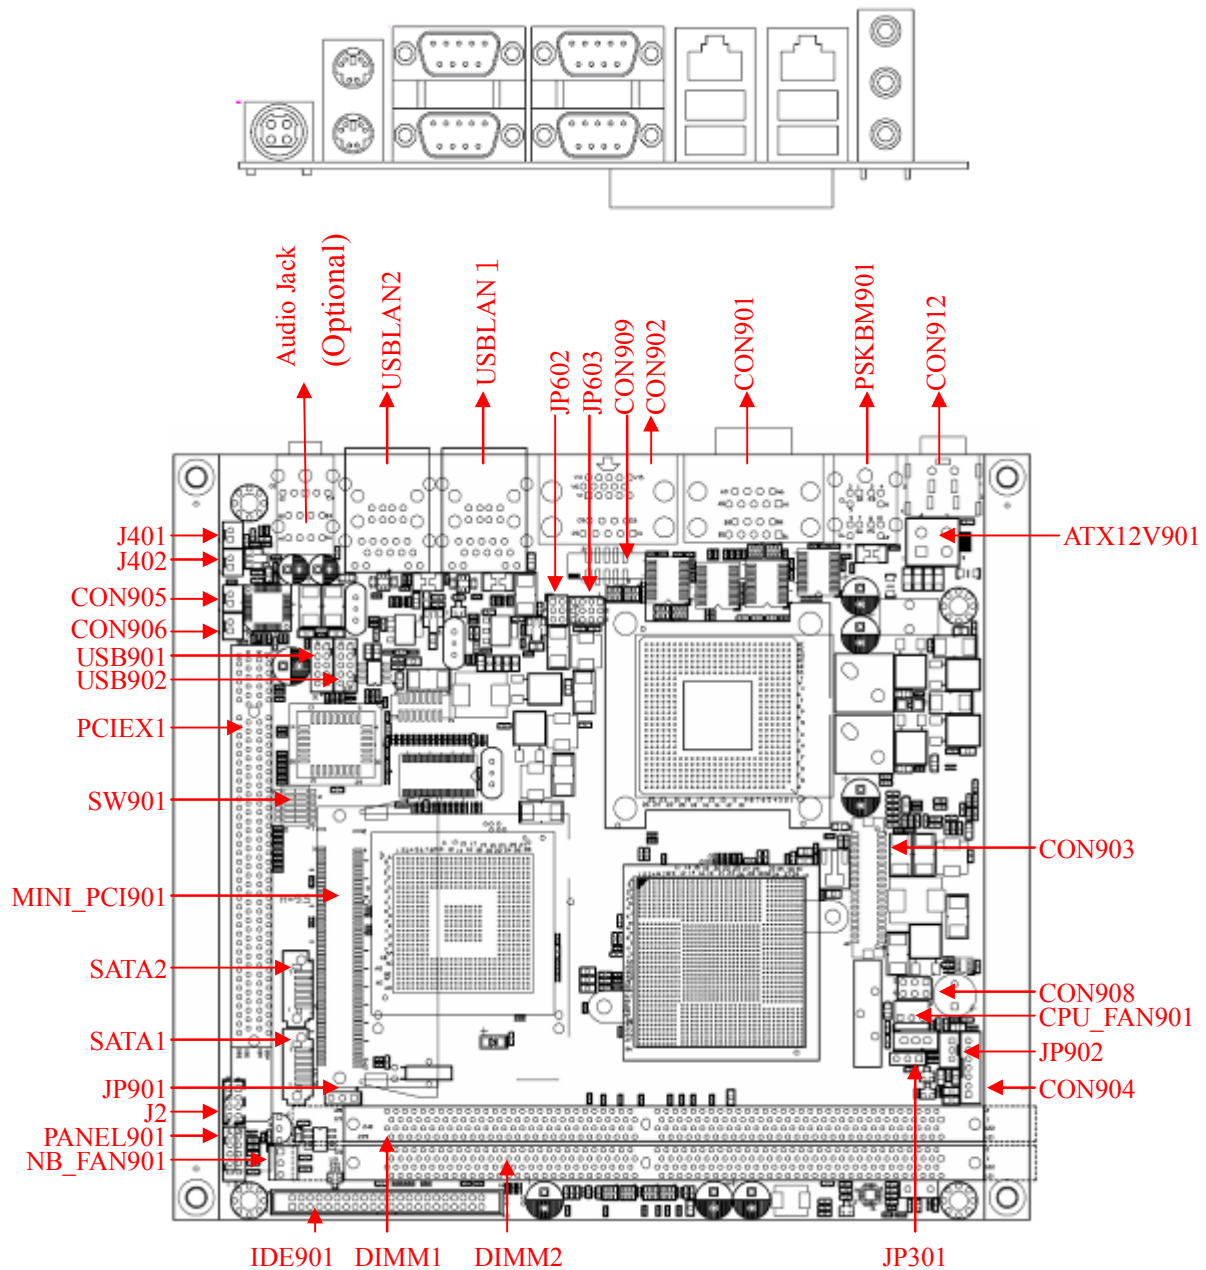

*Locating Jumpers and Connectors (front side)*

## BOTTOM

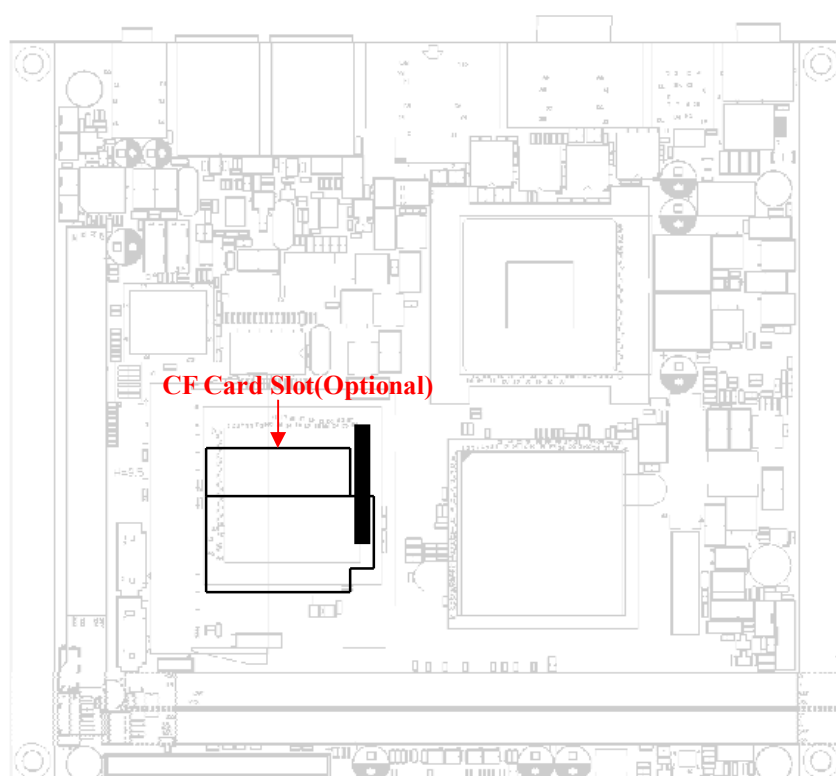


*Locating Jumpers and Connectors (rear side)*

## 2.4 Jumper Setting

A pair of needle-nose pliers may be helpful when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes. Generally, you simply need a standard cable to make most connections.

The jumper setting diagram is as below. If a jumper shorts pin 1 and pin 2, the setting diagram is shown as the right one.

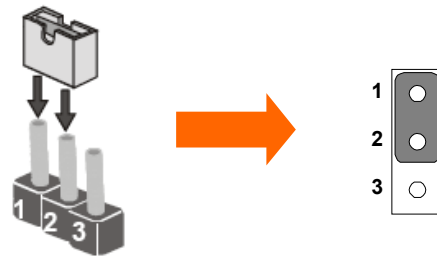


The following tables list the function of each of the board's jumpers.

| Label  | Function                       | Note                     |
|--------|--------------------------------|--------------------------|
| JP301  | Clear CMOS                     | 3x1 header , pitch 2.0mm |
| JP602  | RS232 / RS422 / RS485 Selector | 2x3 header , pitch 2.0mm |
| JP603  | RS232 / RS422 / RS485 Selector | 3x4 header , pitch 2.0mm |
| JP901  | CF CARD PRIORITY               | 3x1 header , pitch 2.0mm |
| CON908 | LVDS VOLTAGE                   | 2x3 header , pitch 2.0mm |

### 2.4.1 JP301: Clear CMOS


User must make sure the power supply to turn off the power supply before setting Clear CMOS. Users remember to setting jumper back to Normal before turning on the power supply. Default: 2short3.

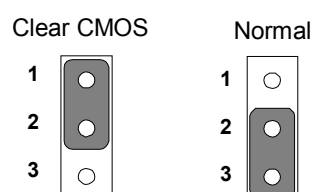

| Pin No.   | Functions  |
|-----------|------------|
| 1 Short 2 | Clear CMOS |
| 2 Short 3 | Normal     |

### 2.4.2 JP602: RS232 / RS422 / RS485 Selector


The jumper can be configured to operate COM1 in RS-232/422/485 mode. And the setting must be cooperated with the 2.4.3 settings.

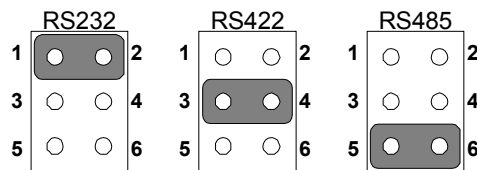

| Pin No.   | Functions |
|-----------|-----------|
| 1 Short 2 | RS232     |
| 3 Short 4 | RS422     |
| 5 Short 6 | RS485     |

### 2.4.3 JP603: RS232 / RS422 / RS485 Selector


The jumper can be configured to operate COM1 in RS-232/422/485 mode. And the setting must be cooperated with the 2.4.2 settings.

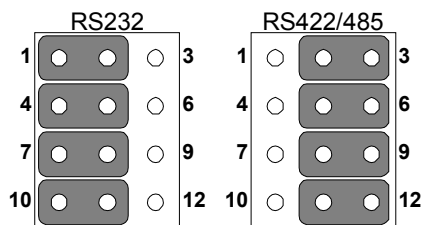

| RS232 | RS422/485 |
|-------|-----------|
| 1-2   | 2-3       |
| 4-5   | 5-6       |
| 7-8   | 8-9       |
| 10-11 | 11-12     |

### 2.4.4 JP901: CF Card Priority


JP901 can be configured to operate CF Card Priority in Master/Slave mode.

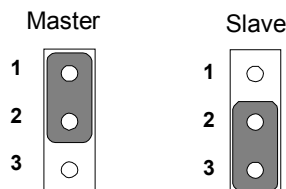

| Pin No.   | Functions |
|-----------|-----------|
| 1 Short 2 | Master    |
| 2 Short 3 | Slave     |

### 2.4.5 CON908: LCD Panel Voltage Select

CON908 can be configured to operate in 3.3Volts / 5Volts / 12Volts mode.

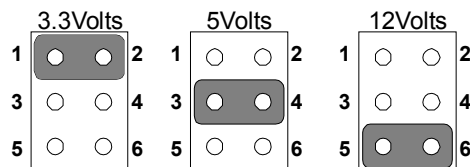

| Pin No.   | Functions         |
|-----------|-------------------|
| 1 Short 2 | 3.3Volts Selected |
| 3 Short 4 | 5Volts Selected   |
| 5 Short 6 | 12Volts Selected  |

## 2.5 Connectors and Pin Assignment

The table below lists the function of each of the board's connectors.

| Label      | Function                                   | Note                     |
|------------|--------------------------------------------|--------------------------|
| CON903     | LVDS LCD Output Connector                  | DF13-40DP-1.25V          |
| JP902      | Digital Panel Backlight Brightness Control | 3x1 header, pitch 2.54mm |
| CON904     | Digital Panel Backlight Brightness Control | 7x1 header, pitch 2.54mm |
| PSKBM901   | PS2 Keyboard/Mouse Connector               | PS/2 Conn.               |
| CON902     | D-SUB Dual COM1/VGA Output                 | 9pin COM/ 15pin VGA      |
| CON909     | Serial port COM2                           | 9pin COM port            |
| CON901     | D-SUB Dual Serial Port COM3, COM4          | 9pin COM port            |
| AUDIO401   | Audio Jack                                 | 3 Audio I/O              |
| IDE901     | IDE Connector                              | 44Pin IDE Conn.          |
| USB901     | USB PIN HEADER                             | 5x2 Pin Header           |
| USB902     | USB PIN HEADER                             | 5x2 Pin Header           |
| NB_FAN901  | FAN CONNECTOR                              | 3x1 Pin Header           |
| CPU_FAN901 | FAN CONNECTOR                              | 3x1 Pin Header           |
| PANEL901   | System Function Connector                  | 5x2 header ,pitch 2.0mm  |
| J401       | Front Audio                                | 1x2 header ,pitch 2.54mm |
| J402       | Front Audio                                | 1x2 header ,pitch 2.54mm |
| CON905     | 12V External Power                         | 2x1 header, pitch 2.54mm |
| CON906     | 5V External Power                          | 2x1 header, pitch 2.54mm |
| J2         | 12V External Power                         | 4x2 header ,pitch 2.54mm |
| CON912     | 12V DC Jack                                | 4 Pin Jack               |
| ATX12V901  | 12V DC Connector                           | 4 Pin Connector          |

### 2.5.1 CON903: LVDS Connector



| Pin No. | SYMBOL | Pin No. | SYMBOL     |
|---------|--------|---------|------------|
| 1       | LCDVDD | 2       | LVDS_LTX0- |
| 3       | LCDVDD | 4       | LVDS_LTX0+ |
| 5       | LCDVDD | 6       | LVDS_LTX1- |
| 7       | GND    | 8       | LVDS_LTX1+ |
| 9       | GND    | 10      | LVDS_LTX2- |
| 11      | GND    | 12      | LVDS_LTX2+ |
| 13      | GND    | 14      | LVDS_LCLK- |
| 15      | GND    | 16      | LVDS_LCLK  |
| 17      | GND    | 18      | NC         |
| 19      | GND    | 20      | NC         |
| 21      | GND    | 22      | LVDS_UTX0- |
| 23      | GND    | 24      | LVDS_UTX0+ |
| 25      | GND    | 26      | LVDS_UTX1- |
| 27      | GND    | 28      | LVDS_UTX1+ |
| 29      | GND    | 30      | LVDS_UTX2- |
| 31      | GND    | 32      | LVDS_UTX2+ |
| 33      | GND    | 34      | LVDS_UCLK- |
| 35      | GND    | 36      | LVDS_UCLK  |
| 37      | GND    | 38      | NC         |
| 39      | GND    | 40      | NC         |

### 2.5.2 JP902: Digital Panel Backlight Brightness Control




| Pin No. | SYMBOL              |
|---------|---------------------|
| 1       | VCC                 |
| 2       | Black Light Control |
| 3       | GND                 |

### 2.5.3 CON904: Digital Panel Backlight Control



| Pin No. | SYMBOL              |
|---------|---------------------|
| 1       | +12V                |
| 2       | +12V                |
| 3       | +12V                |
| 4       | GND                 |
| 5       | Black Light Control |
| 6       | GND                 |
| 7       | Black Light EN 5V   |


### 2.5.4 PSKBM901: PS2 Keyboard/Mouse Connector

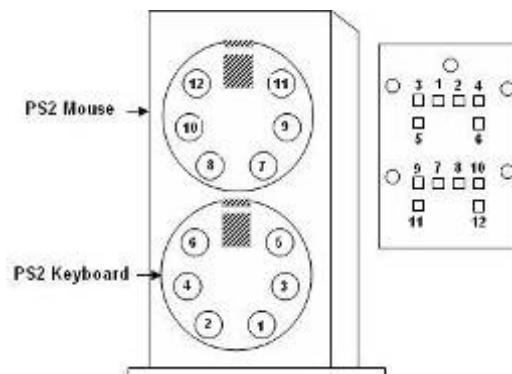

| PS/2 Keyboard |        | PS/2 Mouse |        |
|---------------|--------|------------|--------|
| Pin No.       | SYMBOL | Pin No.    | SYMBOL |
| 1             | KDATA  | 11         | MDATA  |
| 2             | NC     | 12         | NC     |
| 3             | Ground | 13         | Ground |
| 4             | VCC    | 14         | VCC    |
| 5             | KCLK   | 15         | MCLK   |
| 6             | NC     | 16         | NC     |

### 2.5.5 CON902: D-SUB Dual Output

The serial port COM1, which is option for RS232 / RS422 / RS485, is the Winbond I/O serial port.

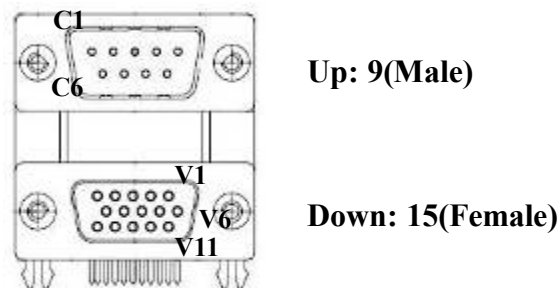

| Pin No. | SYMBOL        | Pin No. | SYMBOL    |
|---------|---------------|---------|-----------|
| C1      | DCD4/485TXRX- | V1      | R         |
| C2      | SRD4/485TXRX+ | V2      | G         |
| C3      | STD4/422RX+   | V3      | B         |
| C4      | DTR4/422RX-   | V4      | NA        |
| C5      | GND           | V5      | GND       |
| C6      | NDSRA         | V6      | GND       |
| C7      | NRTSA         | V7      | GND       |
| C8      | NCTSA         | V8      | GND       |
| C9      | NRIA          | V9      | VCC       |
|         |               | V10     | GND       |
|         |               | V11     | NA        |
|         |               | V12     | DAC_SDAT0 |
|         |               | V13     | 3VHSYNC0  |
|         |               | V14     | 3VVSYNCO  |
|         |               | V15     | DAC_SCL0  |


### 2.5.6 CON909: Serial port COM2

The serial port COM2, which is Winbond I/O support, is RS232 only.

|    |   |     |        |     |        |
|----|---|-----|--------|-----|--------|
| 2  | 1 | Pin | SYMBOL | Pin | SYMBOL |
| 4  | 3 | 2   | NDSR1A | 1   | NDCD1A |
| 6  | 5 | 4   | NRTS1A | 3   | NRXD1A |
| 8  | 7 | 6   | NCTS1A | 5   | NTXD1A |
| 10 | 9 | 8   | NCTS1A | 7   | NDTR1A |
|    |   | 10  | GND    | 9   | GND    |


### 2.5.7 CON901: D-SUB Dual Serial Port

The serial port COM3/4, RS232 only, from A1 to A9 is COM3, and B1 to B9 is COM4, which is supported by Fintek.

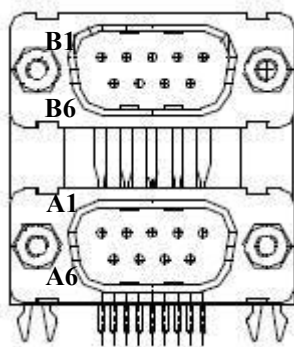

| Pin No. | SYMBOL    | Pin No. | SYMBOL    |
|---------|-----------|---------|-----------|
| A1      | FK_NDCD1  | B1      | FK_NDCD2  |
| A2      | FK_NSIN1  | B2      | FK_NSIN2  |
| A3      | FK_NSOUT1 | B3      | FK_NSOUT2 |
| A4      | FK_NDTR1  | B4      | FK_NDTR2  |
| A5      | GND       | B5      | GND       |
| A6      | FK_NDSR1  | B6      | FK_NDSR2  |
| A7      | FK_NRTS1  | B7      | FK_NRTS2  |
| A8      | FK_NCTS1  | B8      | FK_NCTS2  |
| A9      | FK_NRI1   | B9      | FK_NRI2   |


### 2.5.8 AUDIO401: Audio Jack




| Pin   | SYMBOL        |
|-------|---------------|
| Color | Signal        |
| Blue  | Line In       |
| Green | Line Out      |
| Pink  | Microphone In |

#### Pin-Header

|       |          |
|-------|----------|
| C0~C4 | Line in  |
| B1~B4 | Line out |
| A1~A4 | Mic in   |

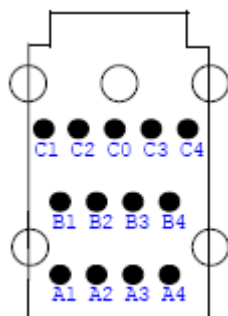


## 2.5.9 IDE901: IDE Connector



| Pin No. | SYMBOL  | Pin No. | SYMBOL  |
|---------|---------|---------|---------|
| 1       | RESET   | 2       | GND3    |
| 3       | DD7     | 4       | DD8     |
| 5       | DD6     | 6       | DD9     |
| 7       | DD5     | 8       | DD10    |
| 9       | DD4     | 10      | DD11    |
| 11      | DD3     | 12      | DD12    |
| 13      | DD2     | 14      | DD13    |
| 15      | DD1     | 16      | DD14    |
| 17      | DD0     | 18      | DD15    |
| 19      | GND1    | 20      | NC      |
| 21      | DREQ    | 22      | GND4    |
| 23      | DIOW#   | 24      | GND5    |
| 25      | DIOR#   | 26      | GND6    |
| 27      | IO_RDYD | 28      | CSEL    |
| 29      | DACK#   | 30      | GND7    |
| 31      | IRQ     | 32      | IOCS16# |
| 33      | DA1     | 34      | CBL_ID# |
| 35      | DA0     | 36      | DA2     |
| 37      | DCS#1   | 38      | DCS#3   |
| 39      | DASP#   | 40      | GND8    |
| 41      | +5V1    | 42      | +5V2    |
| 43      | GND     | 44      | NC      |

## 2.5.10 USB901/USB902: USB PIN HEADER

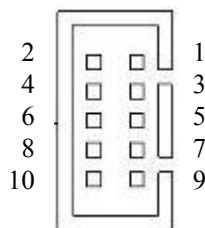

| USB902 |         |     |         |
|--------|---------|-----|---------|
| Pin    | SYMBOL  | Pin | SYMBOL  |
| 2      | USBVCC4 | 1   | USBVCC4 |
| 4      | USB_P6- | 3   | USB_P7- |
| 6      | USB_P6+ | 5   | USB_P7+ |
| 8      | GND     | 7   | GND     |
| 10     | KEY     | 9   | GND     |

| USB901 |         |     |         |
|--------|---------|-----|---------|
| Pin    | SYMBOL  | Pin | SYMBOL  |
| 2      | USBVCC3 | 1   | USBVCC3 |
| 4      | USB_P4- | 3   | USB_P5- |
| 6      | USB_P4+ | 5   | USB_P5+ |
| 8      | GND     | 7   | GND     |
| 10     | KEY     | 9   | GND     |

## 2.5.11 NB\_FAN901/CPU\_FAN901: FAN CONNECTOR



Pin 1 GND  
Pin 2 +12V  
Pin 3 SENSE


**NB\_FAN901**




Pin 1 GND  
Pin 2 +12V  
Pin 3 SENSE

**CPU\_FAN901**


### 2.5.12 PANEL901: Front Panel System Function Connector

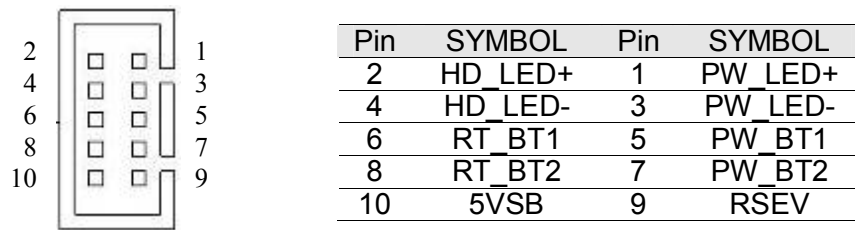


### 2.5.13 J401/J402: Front Audio

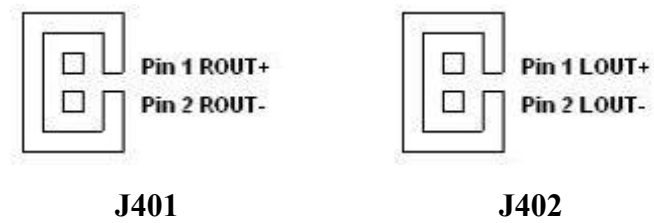


### 2.5.14 CON905/CON906/J2: External Power

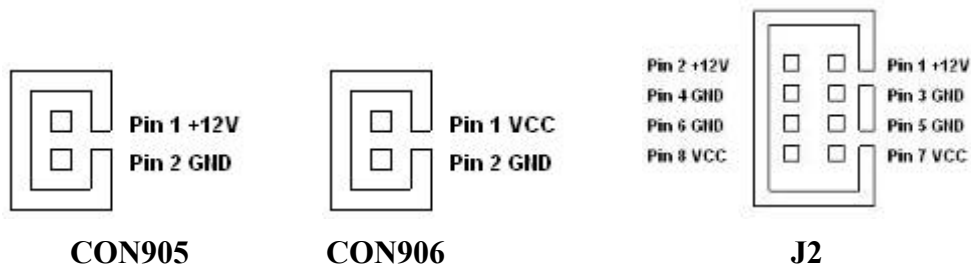


### 2.5.15 CON912: DC Jack

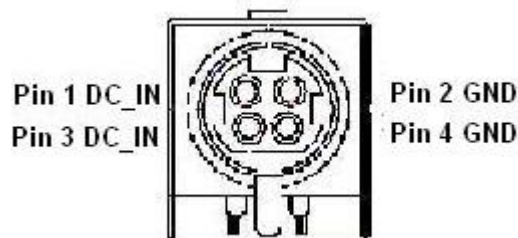

### 2.5.16 ATX12V901: 12V DC Connector

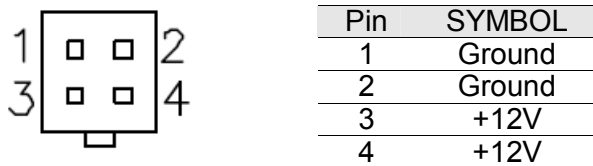

### 2.5.17 Digital: Digital I/O Connector

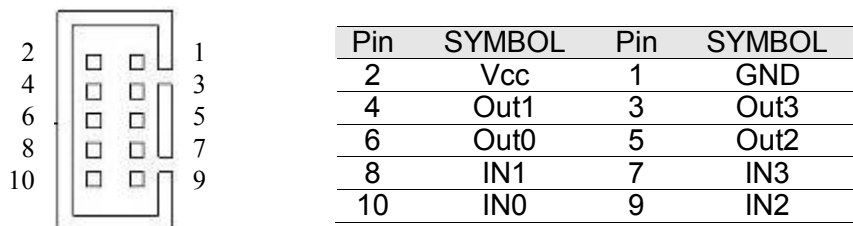

# CHAPTER 3

## Graphic Driver Installation

This chapter offers information on the chipset software Installation utility


- Installation of Graphic Driver
- Panel Resolution Setting

## Chapter 3 Graphic Driver Installation


### 3.1 Standard CMOS Feature

I370 Motherboard is equipped with Intel 945GME / ICH7M Companion Device. The Intel Graphic Drivers should be installed first, and it will enable “Video Controller (VGA compatible). Follow the instructions below to complete the installation. You will quickly complete the installation.


**Step.1.** Insert the CD that comes with the Motherboard. Open the file document “Graphic Driver “.

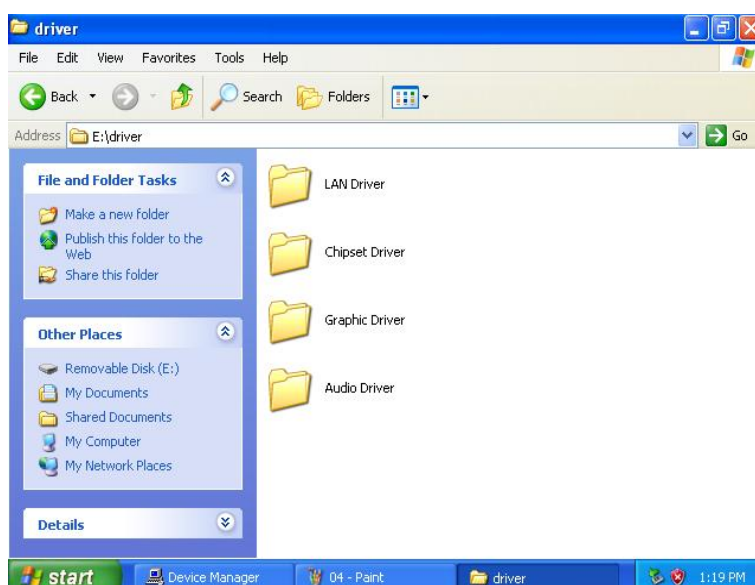


**Step.2.** Click on “win2K\_xp1429” to execute the setup.

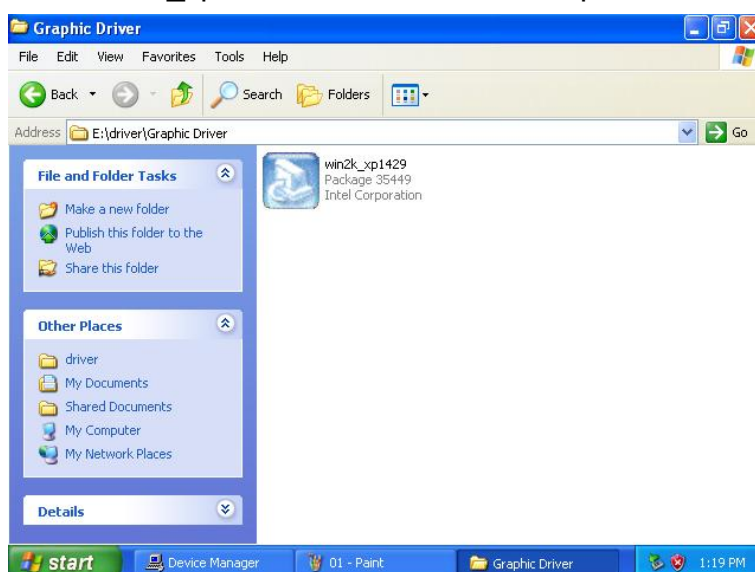


**Step.3.** Click on “Next “ to install Driver.

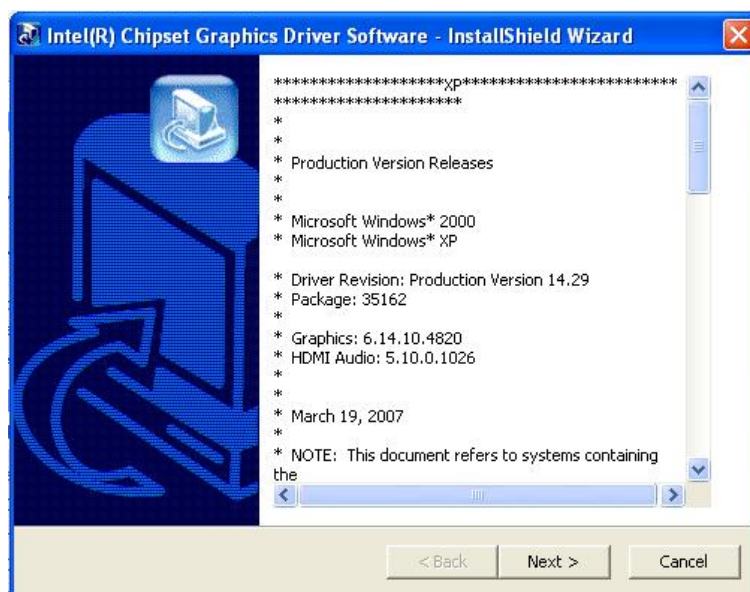


**Step.4.** Click on “Next “ to install Driver.

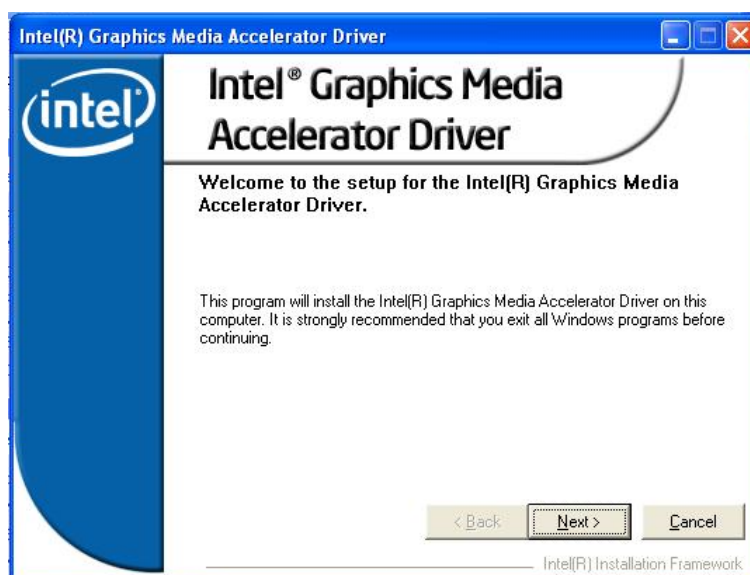


**Step.5.** Click on “Yes “ to agree License.

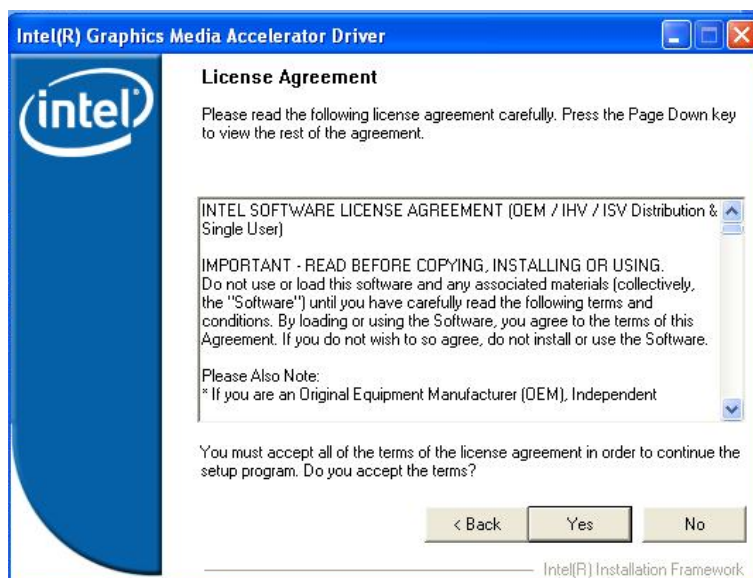


**Step.6.** Click on “Next “ to install Driver.

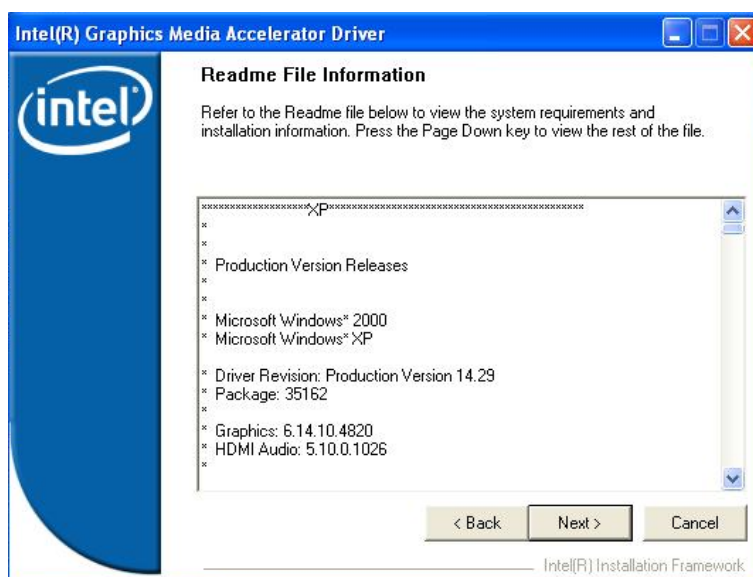

**Step.6.** Click on “Next “ to install Driver.

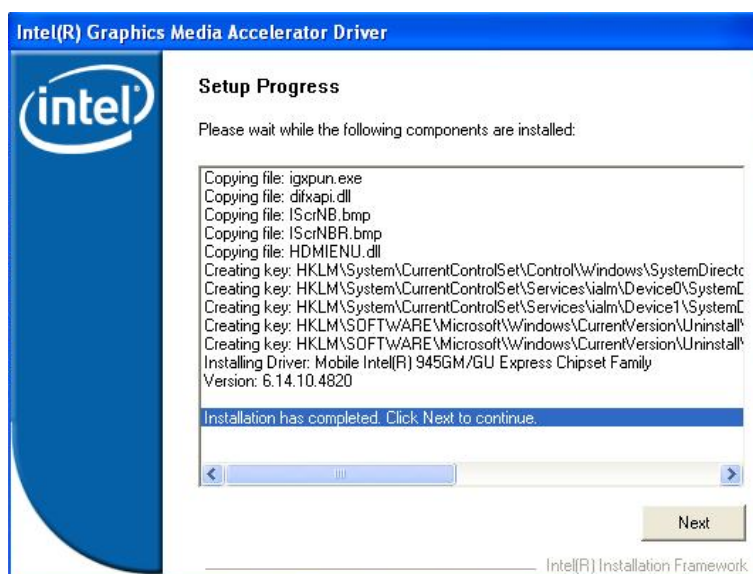


**Step.7.** Click on “Yes, I want to restart this computer now“ to go on.

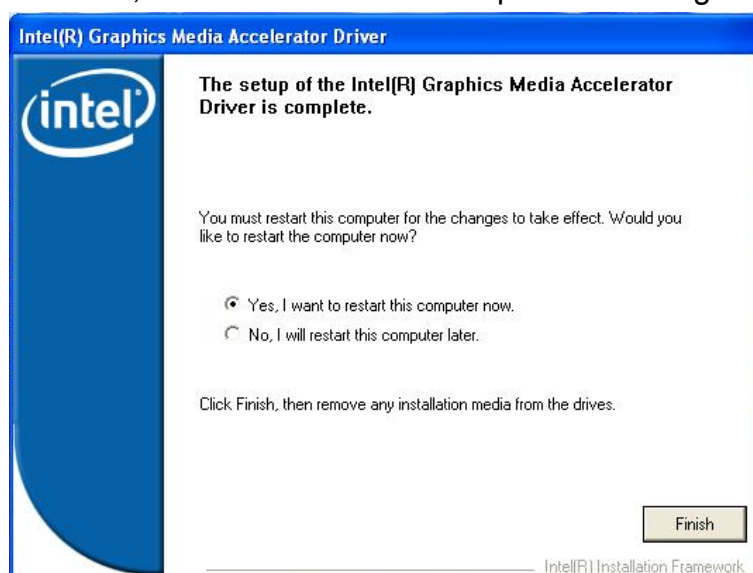


## 3.2 Panel Resolution Setting

**Step.1.** Right-click the desktop, and then click Properties.


**Step.2.** In the Display Properties dialog box, click the Settings tab.

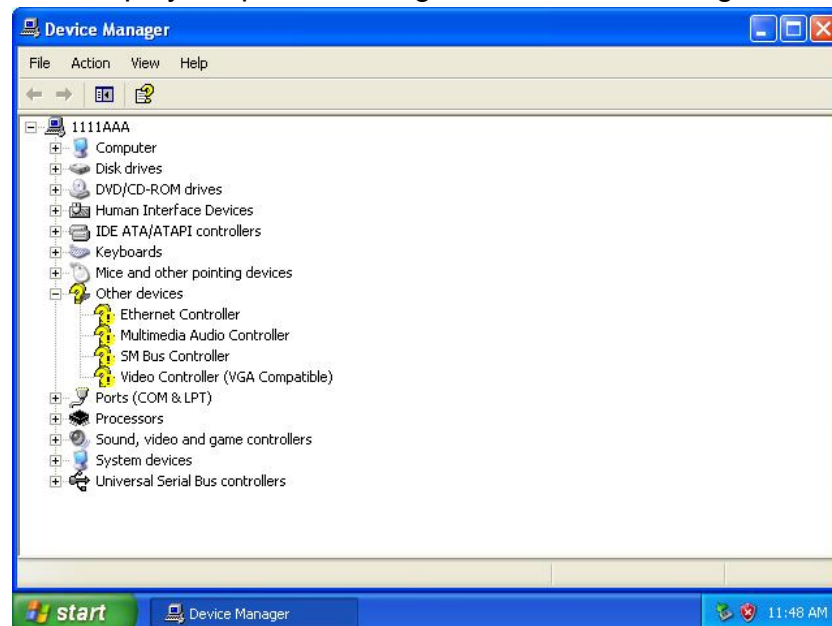


**Step.3.** Click on “Monitor”.

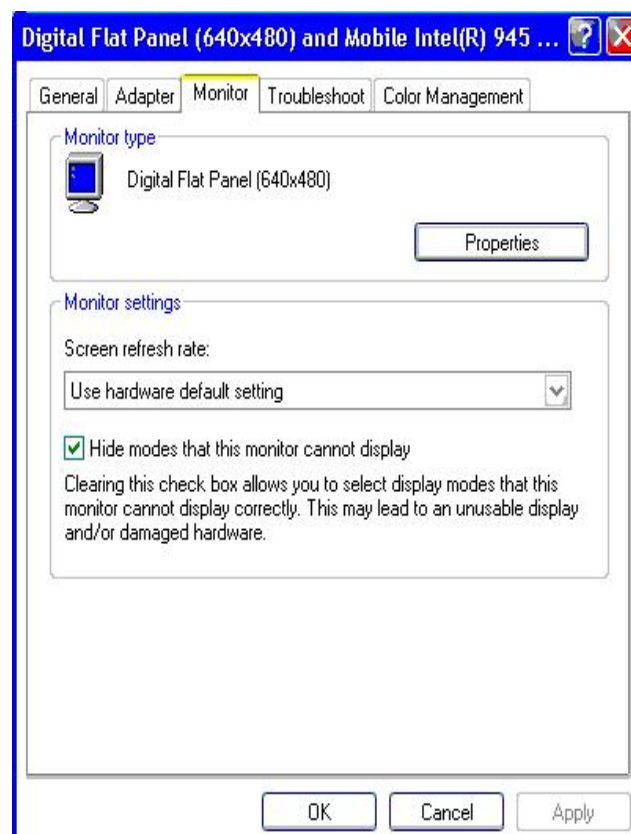

**Step.4.** Click on “Hide modes that this monitor cannot display” to remove this option.

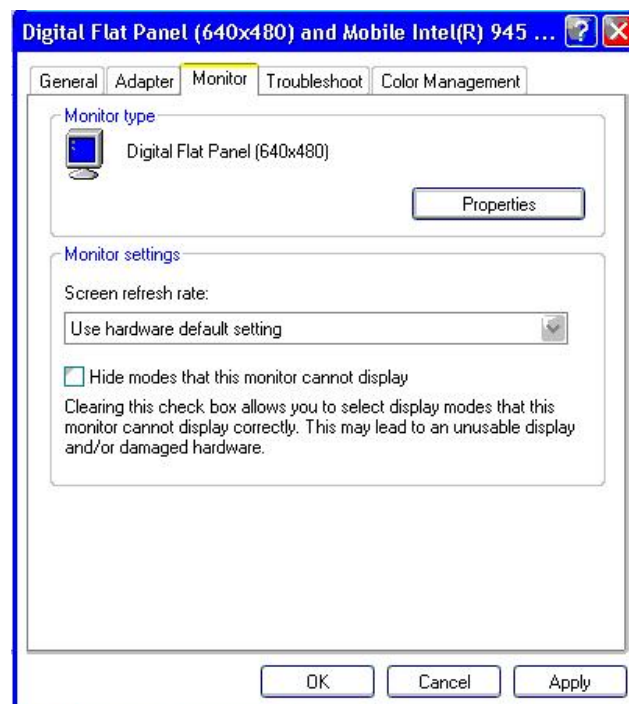

**Step.5.** Click on “Setting”, then could choose 32bit color qualify.

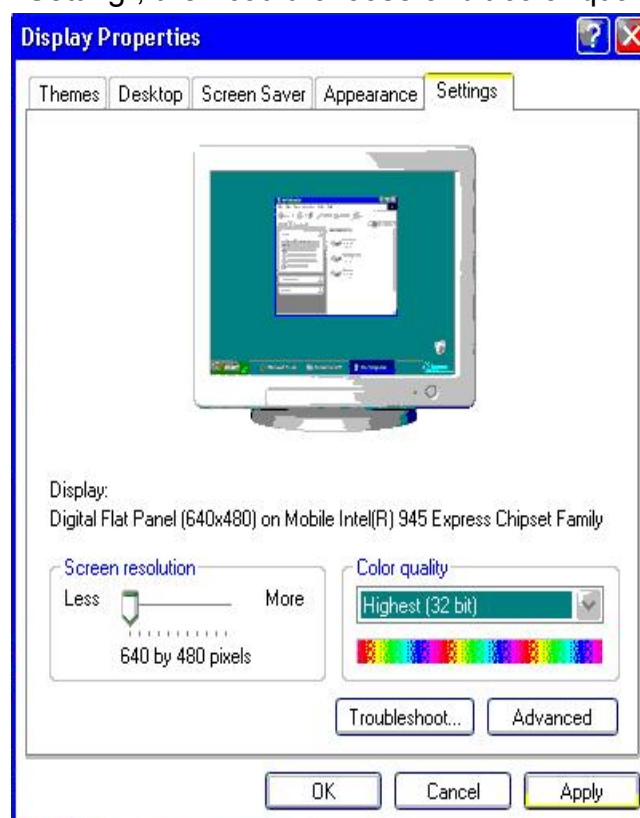

## Chipset Driver Installation


This chapter offers information on the chipset software Installation utility

- Installation of Chipset Driver
- Further information


## Chapter 4 Chipset Driver Installation

### 4.1 Standard CMOS Features

**Setp.1.** Insert the CD that comes with the motherboard. Open the file document “Chipset Driver”.

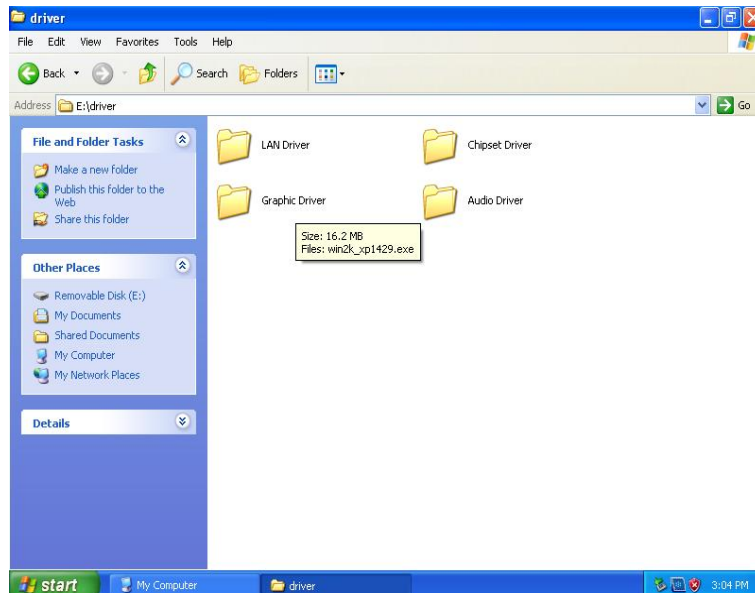

**Setp.2.** Click on “infinst\_auto.exe” to install driver.

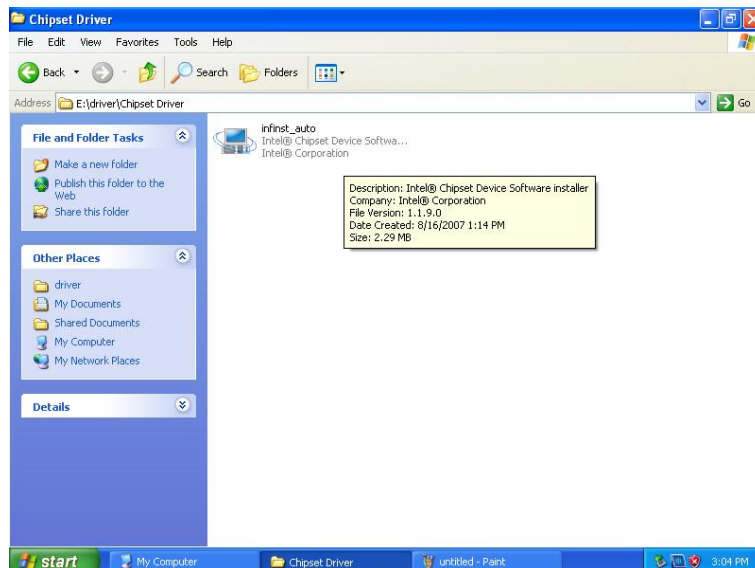

**Setp.3.** Click on “Next” to install driver.



**Setp.4.** Click on “Yes “ to agree License



**Setp.5.** Click on “Next” to install driver.



**Setp.6.** Click on “Next” to install driver.



**Step.7.** Click on “Yes, I want to restart this computer now” to go on.



# CHAPTER 5

## Ethernet Driver Installation

This chapter offers information on the Ethernet software installation utility.

Sections include:

- Introduction
- Installation of Ethernet Driver

## **Chapter 5 Ethernet Driver Installation**

### **5.1 Introduction**


I370 Motherboard is equipped with the Realtek RTL8111B Gigabit Ethernet controller combines a triple-speed IEEE 802.3 compliant Media Access Controller (MAC) with a triple-speed Ethernet transceiver, PCI Express bus controller, and embedded memory. With state-of-the-art DSP technology and mixed-mode signal technology, it offers high-speed transmission over CAT 5 UTP cable or CAT 3 UTP (10Mbps only) cable. Functions such as Crossover Detection & Auto-Correction, polarity correction, adaptive equalization, cross-talk cancellation, echo cancellation, timing recovery, and error correction are implemented to provide robust transmission and reception capability at high speeds.

The device supports the PCI Express 1.0a bus interface for host communications with power management and is compliant with the IEEE 802.3u specification for 10/100Mbps Ethernet and the IEEE 802.3ab specification for 1000Mbps Ethernet. It also supports an auxiliary power auto-detect function, and will auto-configure related bits of the PCI power management registers in PCI configuration space.


## 5.2 Installation of Ethernet Driver

The Users must make sure which operating system you are using in the I370 Motherboard before installing the Ethernet drivers. Follow the steps below to complete the installation of the Realtek RTL8111B LAN drivers. You will quickly complete the installation.


**Step.1.** Insert the CD that comes with the motherboard. Open the file document “LAN Driver”.

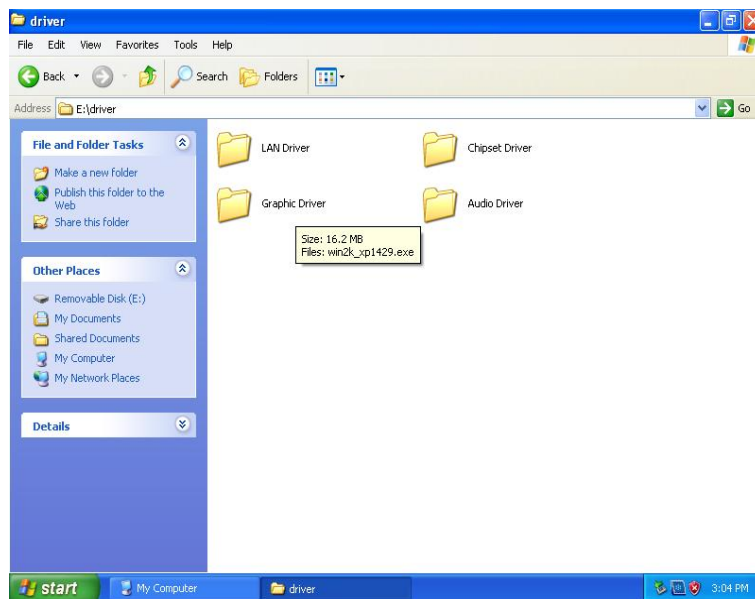


**Step.2** Click on “Setup” to execute the setup.

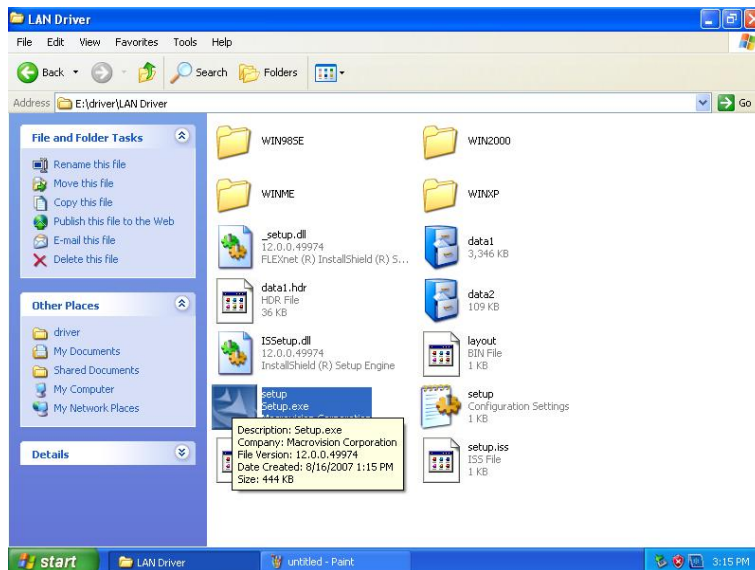


**Step.3.** Click on “Next” to install driver.

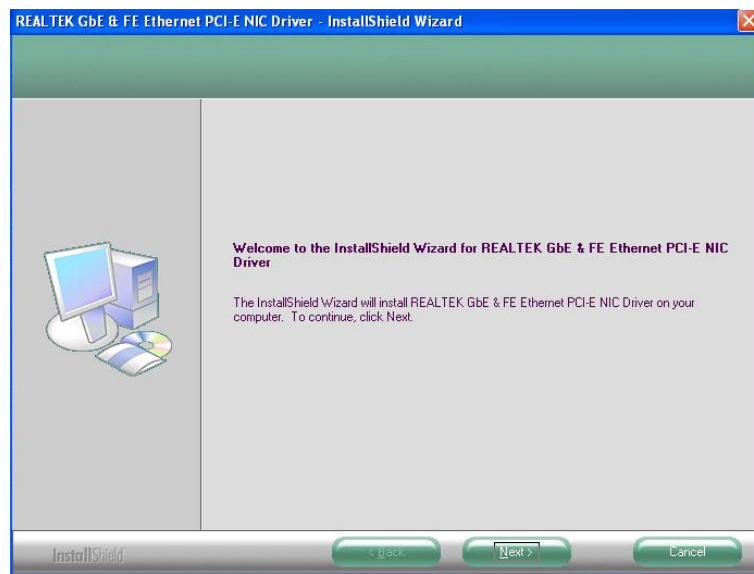

**Step.3.** Click on “Install” to install driver.

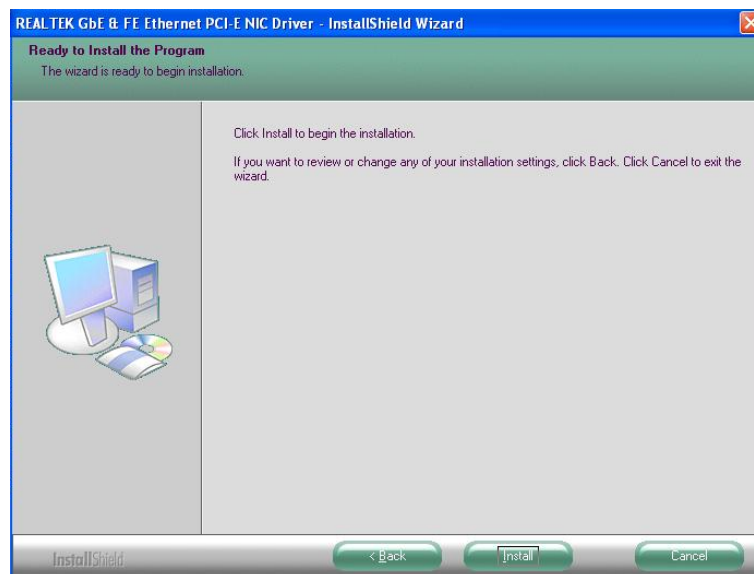

**Setp.3.** Click on “Finish” and go on.

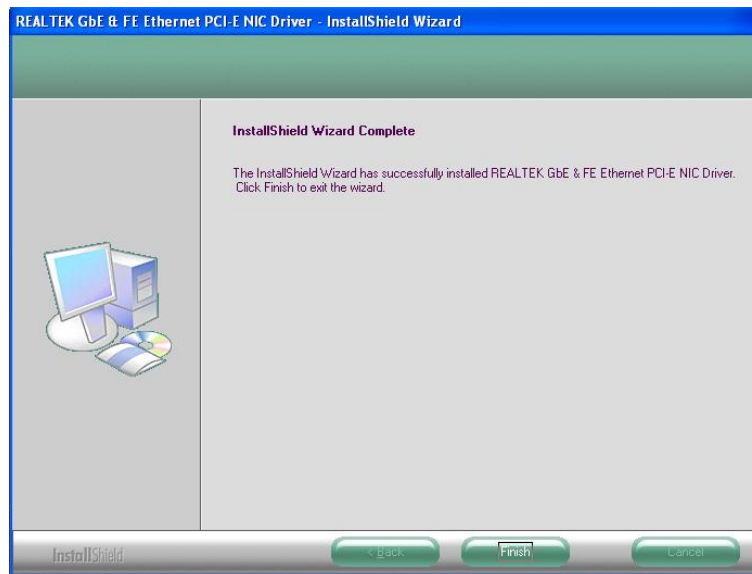

## Audio Driver Installation

This chapter offers information on the Audio software installation utility.

Sections include:

- Introduction
- Installation of Audio Driver

## Chapter 6 Audio Driver Installation

### 6.1 Introduction


The I370 Motherboard is equipped with the ALC655 is a 16-bit, full-duplex AC'97 Rev. 2.3 compatible six-channel audio CODEC designed for PC multimedia systems, including host/soft audio and AMR/CNR-based designs..

The ALC655 CODEC provides three pairs of stereo outputs with 5-bit volume control, a mono output, and multiple stereo and mono inputs, along with flexible mixing, gain, and mute functions to provide a complete integrated audio solution for PCs.


### 6.2 Installation of Audio Driver

The users must make sure which operating system you are using in the I370 Motherboard before installing the Audio drivers. Follow the steps below to complete the installation of the Realtek ALC655 Audio drivers. You will quickly complete the installation.


**Step.1.** Insert the CD that comes with the motherboard. Open the file document “alc655\_driver” and click on “Setup.exe” to execute the setup.

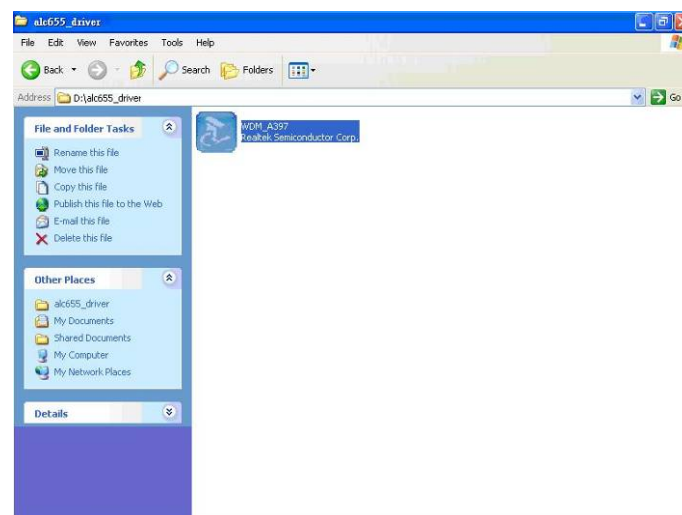

**Step.2.** Click on “Next” to install driver.

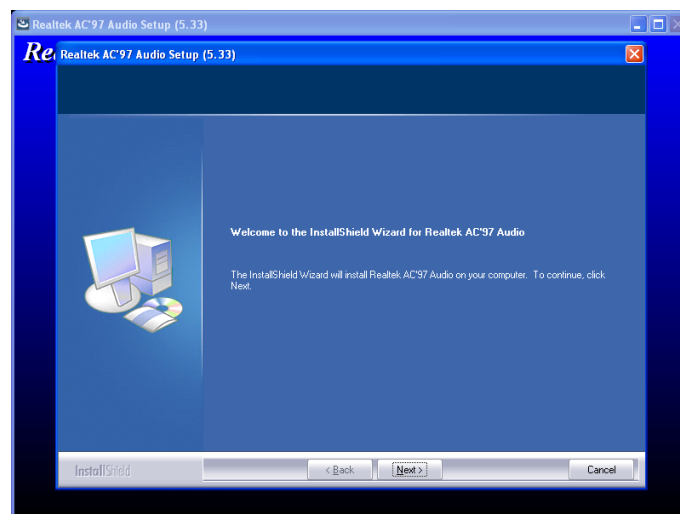

**Step.3.** Click on “Yes, I want to restart my computer now” to finish installation.

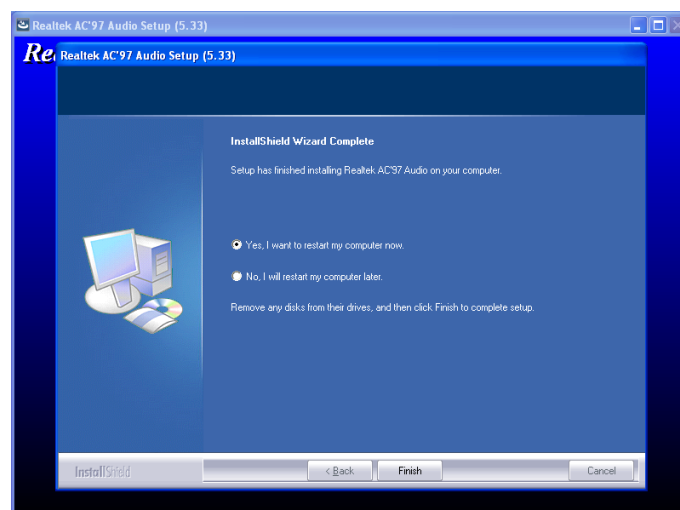

## Award BIOS Installation

This chapter describes the different settings available in the Award BIOS that comes with the board. This chapter offers information on the Award BIOS installation utility.


Sections include:

- BIOS Introduction
- BIOS Setup
- Standard CMOS Setup
- Advanced BIOS Features
- Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PC Health Status
- Frequency/Voltage Control
- Load Fail-Safe Defaults
- Load Optimized Defaults
- Set Supervisor/User Password
- Save & Exit Setup
- Exit Without Saving



## 7.3 Standard CMOS Setup

Standard CMOS Setup” choice allows you to record some basic hardware configurations in your computer system and set the system clock and error handling. If the motherboard is already installed in a working system, you will not need to select this option. You will need to run the Standard CMOS option, however, if you change your system hardware configurations, the onboard battery fails, or the configuration stored in the CMOS memory was lost or damaged.

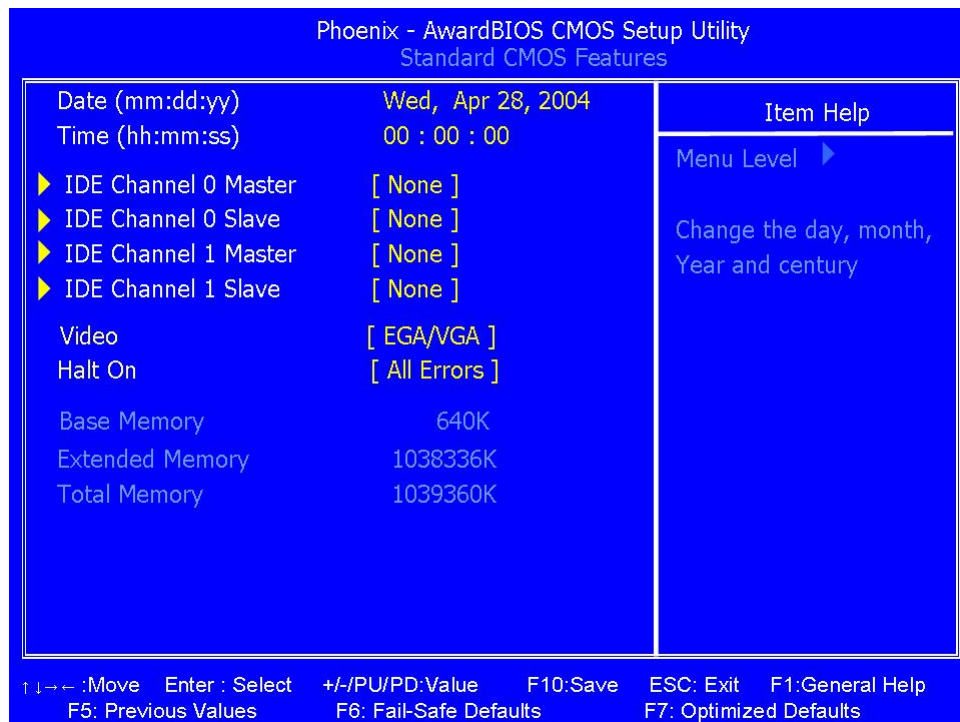

The following describes each item of this menu.

### **Date (mm : dd : yy)**

The date format is:

Day : Sun to Sat

Month : 1 to 12

Date : 1 to 31

Year : 1999 to 2099

To set the date, highlight the “Date” field and use the PageUp/ PageDown or +/- keys to set the current time.

### **Time**

The time format is: Hour : 00 to 23

Minute : 00 to 59

Second : 00 to 59

To set the time, highlight the “Time” field and use the <PgUp>/ <PgDn> or +/-

keys to set the current time.

### **IDE Channel Master/Slave**

The onboard PCI-IDE connector provides one channel for connecting up to one IDE hard disks or other IDE device.

Press <Enter> to configure the hard disk. The selections include None, Auto, and Manual. Select 'Manual' to define the drive information manually. You will be asked to enter the following items.

|                |                            |
|----------------|----------------------------|
| Cylinder :     | Number of cylinders        |
| Head :         | Number of read/write heads |
| Precomp :      | Write precompensation      |
| Landing Zone : | Landing zone               |
| Sector :       | Number of sectors          |

### **Video**

This field selects the type of video display card installed in your system. You can choose the following video display cards:

|         |                                                             |
|---------|-------------------------------------------------------------|
| EGA/VGA | For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (default) |
| CGA 40  | Power up in 40 column mode.                                 |
| CGA 80  | Power up in 80 column mode.                                 |
| MONO    | For Hercules or MDA adapters.                               |

### **Halt On**

This field determines whether or not the system will halt if an error is detected during power up.

#### **No errors**

The system boot will not be halted for any error that may be detected.

#### **All errors**


Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.

#### **All, But Keyboard**

The system boot will not be halted for a keyboard error; it will stop for all other errors

## 7.4 Advance BIOS Feature

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

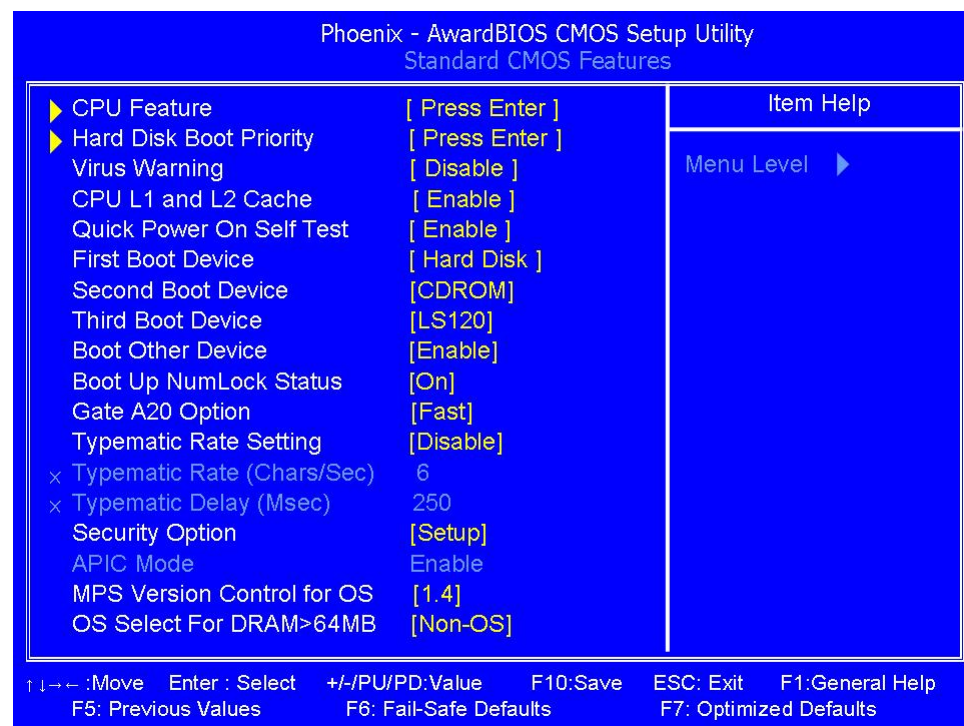

### CPU Feature

Press Enter to configure the settings relevant to CPU Feature.

### Hard Disk Boot Priority

With the field, there is the option to choose, aside from the hard disks connected, "Bootable add-in Cards" which refers to other external devices.

### Virus Warning

If this option is enabled, an alarm message will be displayed when trying to write on the boot sector or on the partition table on the disk, which is typical of the virus.

### CPU L1 and L2 Cache

Cache memory is additional memory that is faster than conventional DRAM (system memory). CPUs from 486-type on up contain internal cache memory, and most, but not all, modern PCs have additional (external) cache memory. When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for even faster access by the CPU. These allow you to enable (speed up memory access) or disable the cache function.

### Quick Power On Self Test

When enabled, this field speeds up the Power On Self Test (POST) after the system is turned on. If it is set to Enabled, BIOS will skip some items.

**First/ Second/ Third Boot Device**

These fields determine the drive that the system searches first for an operating system. The option available include Floppy, LS120, Hard Disk, CDROM, ZIP100, USB-Floppy, USB-ZIP, USB-CDROM, LAN and Disable.

**Boot Other Device**

These fields allow the system to search for an OS from other devices other than the ones selected in the First/Second/Third Boot Device.

**Boot Up NumLock Status**

This allows you to activate the NumLock function after you power up the system.

**Gate A20 Option**

This field allows you to select how Gate A20 is worked. Gate A20 is a device used to address memory above 1 MB.

**Typematic Rate Setting**

When disabled, continually holding down a key on your keyboard will generate only one instance. When enabled, you can set the two typematic controls listed next. By default, this field is set to Disabled.

**Typematic Rate (Chars/Sec)**

When the typematic rate is enabled, the system registers repeated keystrokes speeds. Settings are from 6 to 30 characters per second.

**Typematic Delay (Msec)**

When the typematic rate is enabled, this item allows you to set the time interval for displaying the first and second characters. By default, this item is set to 250msec.

**Security Option**

This field allows you to limit access to the System and Setup. The default value is Setup. When you select System, the system prompts for the User Password every time you boot up. When you select Setup, the system always boots up and prompts for the Supervisor Password only when the Setup utility is called up.

**APIC Mode**

APIC stands for Advanced Programmable Interrupt Controller. The default setting is Enabled.

**MPS Version Control for OS**


This option is specifies the MPS (Multiprocessor Specification) version for your operating system. MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. The default setting is 1.4.

**OS Select for DRAM > 64MB**

This option allows the system to access greater than 64MB of DRAM memory when used with OS/2 that depends on certain BIOS calls to access memory. The default setting is Non-OS/2.

## 7.5 Advanced BIOS Feature

This Setup menu controls the configuration of the chipset.

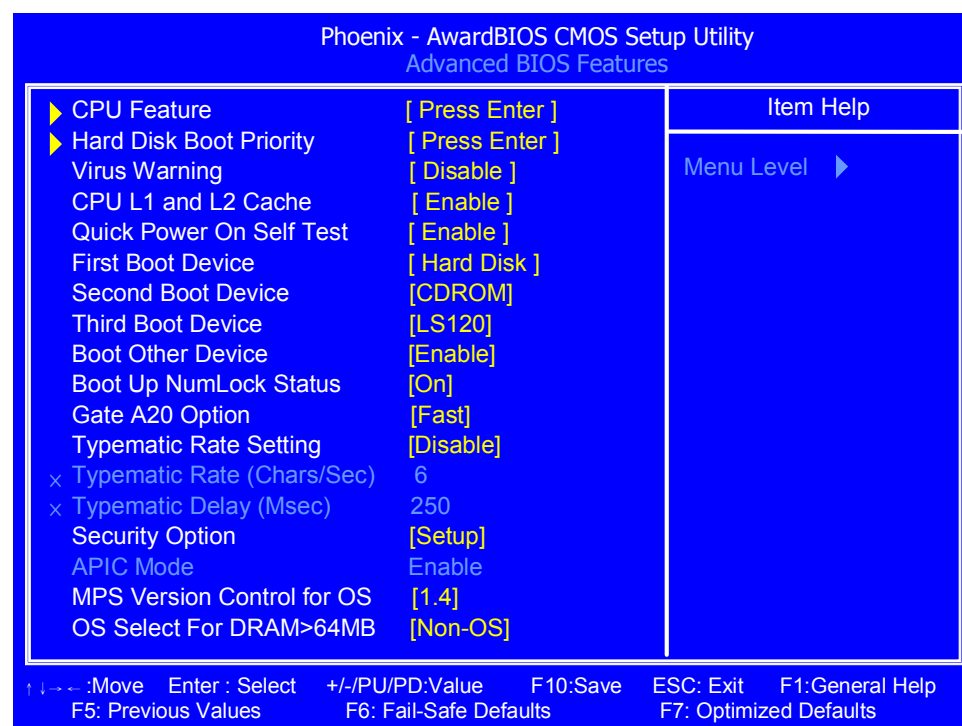

### CPU Feature

Press Enter to configure the settings relevant to CPU Feature.

### Hard Disk Boot Priority

With the field, there is the option to choose, aside from the hard disks connected, "Bootable add-in Cards" which refers to other external devices.

### Virus Warning

If this option is enabled, an alarm message will be displayed when trying to write on the boot sector or on the partition table on the disk, which is typical of the virus.

### CPU L1 and L2 Cache / CPU L3 Cache

Cache memory is additional memory that is faster than conventional DRAM (system memory). CPUs from 486-type on up contain internal cache memory, and most, but not all, modern PCs have additional (external) cache memory. When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for even faster access by the CPU. These allow you to enable (speed up memory access) or disable the cache function.

### Quick Power On Self Test

When enabled, this field speeds up the Power On Self Test (POST) after the system is turned on. If it is set to Enabled, BIOS will skip some items.

**First/Second/Third Boot Device**

These fields determine the drive that the system searches first for an operating system. The options available include LS120, Hard Disk, CDROM, ZIP100, USB-Floppy, USB-ZIP, USB-CDROM, LAN and Disable.

**Boot Other Device**

These fields allow the system to search for an OS from other devices other than the ones selected in the First/Second/Third Boot Device.

**Boot Up Floppy Seek**

This feature controls whether the BIOS checks for a floppy drive while booting up. If it cannot detect one (either due to improper configuration or its absence), it will flash an error message.

**Boot Up NumLock Status**

This allows you to activate the NumLock function after you power up the system.

**Gate A20 Option**

This field allows you to select how Gate A20 is worked. Gate A20 is a device used to address memory above 1 MB.

**Typematic Rate Setting**

When disabled, continually holding down a key on your keyboard will generate only one instance. When enabled, you can set the two typematic controls listed next. By default, this field is set to Disabled.

**Typematic Rate (Chars/Sec)**

When the typematic rate is enabled, the system registers repeated keystrokes speeds. Settings are from 6 to 30 characters per second.

**Typematic Delay (Msec)**

When the typematic rate is enabled, this item allows you to set the time interval for displaying the first and second characters. By default, this item is set to 250msec.

**Security Option**

This field allows you to limit access to the System and Setup. The default value is Setup. When you select System, the system prompts for the User Password every time you boot up. When you select Setup, the system always boots up and prompts for the Supervisor Password only when the Setup utility is called up.

**APIC Mode**

APIC stands for Advanced Programmable Interrupt Controller. The default setting is Enabled.

**MPS Version Control for OS**

This option specifies the MPS (Multiprocessor Specification) version for your operating system. MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. The default setting is 1.4.

**OS Select for DRAM > 64MB**

This option allows the system to access greater than 64MB of DRAM memory when used with OS/2 that depends on certain BIOS calls to access memory. The default setting is Non-OS/2.

**Report No FDD For WIN95**


The default setting is No.

**Small Logo (EPA) Show**

The default setting is Disable.

## 7.6 Advanced Chipset Feature

This Setup menu controls the configuration of the chipset.

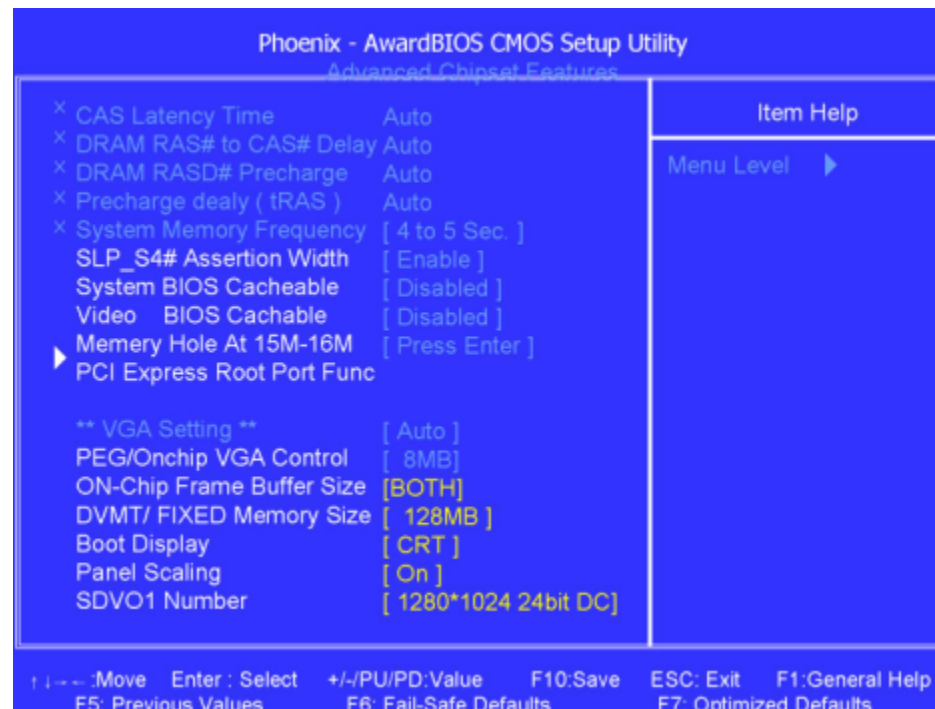

### DRAM Timing Selectable

This option refers to the method by which the DRAM timing is selected. The default is By SPD.

### CAS Latency Time

You can configure CAS latency time in HCLKs as 2 or 2.5 or 3. The system board designer should set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.

### DRAM RAS# to CAS# Delay

This option allows you to insert a delay between the RAS (Row Address Strobe) and CAS (Column Address Strobe) signals. This delay occurs when the SDRAM is written to, read from or refreshed. Reducing the delay improves the performance of the SDRAM.

### DRAM RASD# Precharge

This option sets the number of cycles required for the RAS to accumulate its charge before the SDRAM refreshes. The default setting for the Active to Precharge Delay is 4.

### Precharge Delay (tRAS)

The default setting for the Precharge Delay is 12.

**System Memory Frequency**

The default setting is 533MHz.

**SLP\_S4# Assertion Width**

The default setting is 1 to 2 Sec.

**System BIOS Cacheable**

The setting of Enabled allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

**Video BIOS Cacheable**

The Setting Enabled allows caching of the video BIOS ROM at C0000h-F7FFFh, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

**Memory Hole At 15M-16M**

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16 MB. The choices are Enabled and Disabled.

**On-Chip VGA Setting**

The fields under the On-Chip VGA Setting and their default settings are:

**PEG/On Chip VGA Control:**

The default setting is Auto

**On-Chip Frame Buffer Size:**

The default setting is 8MB

**DVMT/Fixed Memory Size:**

The default setting is 128MB

**Boot Display:**

You could select Auto/CRT/LVDS1/LVDS1+CRT. The default setting is Auto

**Panel Scaling:** Auto

### Panel Number

These fields allow you to select the LCD Panel type. The default values for these ports are 1024x768

|          |       |    |
|----------|-------|----|
| 640x480  | 18bit | SC |
| 800x600  | 18bit | SC |
| 1024x768 | 18bit | SC |
| 1280x800 | 18bit | SC |
| 800x480  | 18bit | SC |

### SDVO1 Number: (Default: LVDS1 : 1024x768 ; LVDS2: 1280x1024)


|           |       |    |
|-----------|-------|----|
| 1280x1024 | 24bit | DC |
| 1366x768  | 24bit | SC |
| 1440x900  | 24bit | DC |
| 1024x768  | 24bit | DC |

### SDVO 2 Number: (Default: LVDS2: 1400x1050)

|           |       |    |
|-----------|-------|----|
| 1400x1050 | 24bit | SC |
| 1600x1200 | 24bit | DC |
| 1920x1080 | 24bit | SC |
| 1920x1200 | 24bit | DC |

## 7.7 Integrated Peripherals

This section sets configurations for your hard disk and other integrated peripherals. The first screen shows three main items for user to select. Once an item selected, a submenu appears. Details follow.

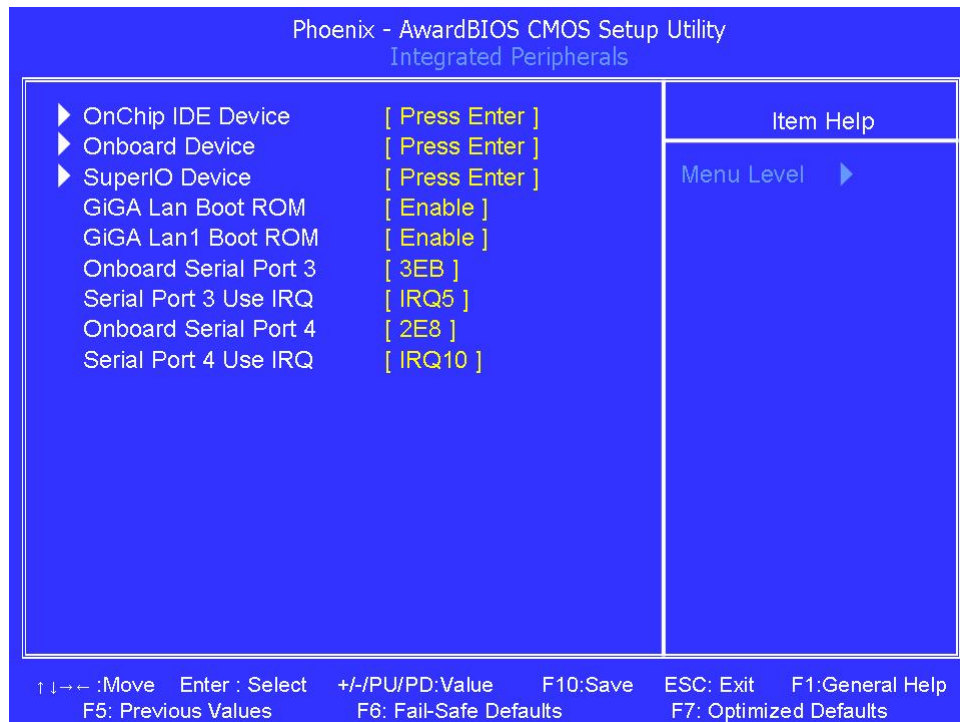

### On Chip IDE Device / On Chip Primary / Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately.

### On Chip IDE Device /IDE Primary/Secondary Master/Slave PIO

These fields allow your system hard disk controller to work faster. Rather than have the BIOS issue a series of commands that transfer to or from the disk drive, PIO (Programmed Input/Output) allows the BIOS to communicate with the controller and CPU directly.

The system supports five modes, numbered from 0 (default) to 4, which primarily differ in timing. When Auto is selected, the BIOS will select the best available mode.

### On Chip IDE Device / IDE Primary/Secondary Master/Slave UDMA

These fields allow your system to improve disk I/O throughput to 33Mb/sec with the Ultra DMA/33 feature. The options are Auto and Disabled.

### Onboard Device/ USB Controller

The options for this field are Enabled and Disabled. By default, this field is set to Enabled.

**Onboard Device/USB 2.0 Controller**

The options for this field are Enabled and Disabled. By default, this field is set to Enabled. In order to use USB 2.0, necessary OS drivers must be installed first. Please update your system to Windows 2000 SP4 or Windows XP SP1.

**Onboard Device/USB Keyboard Support**

The options for this field are Enabled and Disabled. By default, this field is set to Disabled.

**Onboard Device/USB Keyboard Support**

The options for this field are Enabled and Disabled. By default, this field is set to Disabled.

**Onboard Device/AC97 Audio**

The default setting of the AC97 Audio is Auto.

**Onboard LAN/LAN1 Devices**

The default setting is Enable.

**SuperIO Device / Onboard Serial Port1 ( Port2)**

These fields allow you to select the onboard serial and parallel ports and their addresses. The default values for these ports are:

|               |          |
|---------------|----------|
| Serial Port 1 | 3F8/IRQ4 |
| Serial Port 2 | 2F8/IRQ3 |

**SuperIO Device / UART Mode Select**

This field determines the UART 2 mode in your computer. The default value is Normal. Other options include IrDA and ASKIR.

**Power On After Fail**

The setting configures the system power on status when power is restored to the system after a power failure occurrence. The default setting is Off.

**GiGA Lan (Lan1) Boot ROM**

The function is boot from LAN, and the default setting is disable.

**Onboard Serial Port3**

These fields allow you to select the onboard serial ports and their addresses. The default values for these ports are:

|                        |         |
|------------------------|---------|
| On Board Serial Port 1 | Disable |
|                        | 3F8     |
|                        | 2F8     |
|                        | 3F8     |
|                        | 2F8     |

### **Serial Port3 Use IRQ**

The default values for these ports are: IRQ3/IRQ4/IRQ5/IRQ7/IRQ10/IRQ11.

### **Onboard Serial Port4**

These fields allow you to select the onboard serial ports and their addresses. The default values for these ports are:


|                        |         |
|------------------------|---------|
| On Board Serial Port 1 | Disable |
|                        | 3F8     |
|                        | 2F8     |
|                        | 3F8     |
|                        | 2F8     |

### **Serial Port4 Use IRQ**

The default values for these ports are: IRQ3/IRQ4/IRQ5/IRQ7/IRQ10/IRQ11.

## 7.8 Power Management Setup

This section sets configurations for your Power Management function setting. The screen shows some items for user to select. Once an item selected, a submenu appears. Details follow.

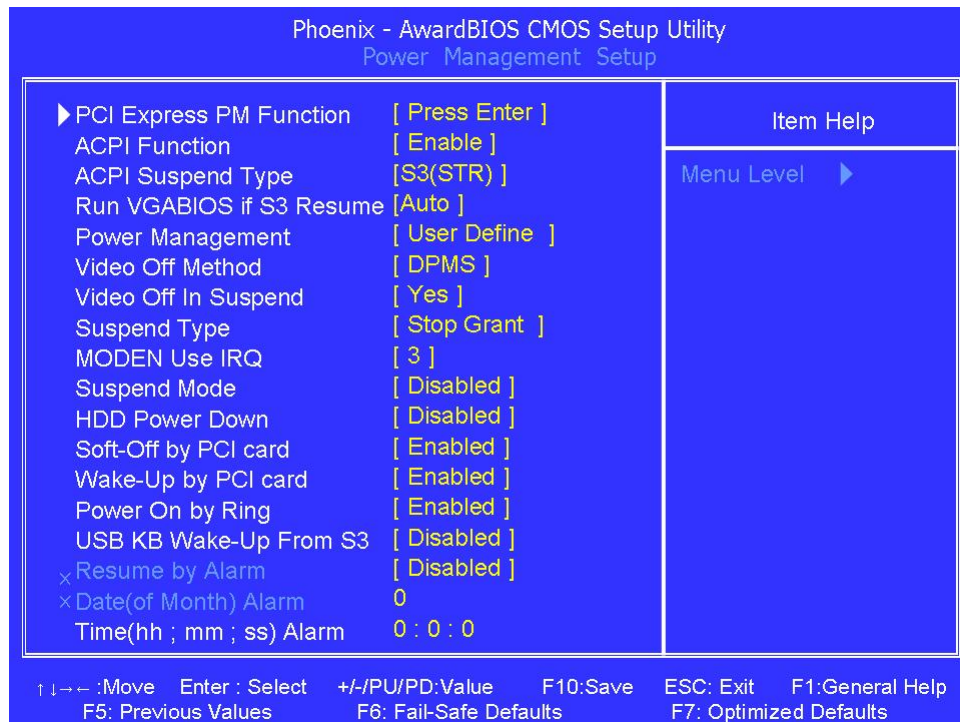

### ACPI Function

Enable this function to support ACPI (Advance Configuration and Power Interface).

### Power Management

This field allows you to select the type of power saving management modes. There are two selections for Power Management.

Min. Saving            Minimum power management  
Max. Saving            Maximum power management.

User Define    Each of the ranges is from 1 min. to 1hr. Except for HDD Power Down which ranges from 1 min. to 15 min.

### **Video Off Method**

This field defines the Video Off features. There are three options.

|                  |                                                                                  |
|------------------|----------------------------------------------------------------------------------|
| V/H SYNC + Blank | Default setting, blank the screen and turn off vertical and horizontal scanning. |
| DPMS             | Allows BIOS to control the video display.                                        |
| Blank Screen     | Writes blanks to the video buffer.                                               |

### **Video Off In Suspend**

When enabled, the video is off in suspend mode. The default setting is Yes.

### **Suspend Type**

The default setting for the Suspend Type field is Stop Grant.

### **Suspend Mode**

When enabled, and after the set time of system inactivity, all devices except the CPU will be shut off.

### **HDD Power Down**

When enabled, and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

### **Soft-Off by PWRBTN**

This field defines the power-off mode when using an power supply. The Instant Off mode allows powering off immediately upon pressing the power button. In the Delay 4 Sec mode, the system powers off when the power button is pressed for more than four seconds or enters the suspend mode when pressed for less than 4 seconds.

### **Wake up by PCI Card**

By default, this field is disabled.

### **Power On by Ring**

This field enables or disables the power on of the system through the modem connected to the serial port or LAN.

### **Resume by Alarm**

This field enables or disables the resumption of the system operation. When enabled,

the user is allowed to set the Date and Time.

## 7.9 PnP / PCI Configuration

This option configures the PCI bus system. All PCI bus systems on the system use INT#, thus all installed PCI cards must be set to this value.

| Phoenix - AwardBIOS CMOS Setup Utility                                            |               |              |
|-----------------------------------------------------------------------------------|---------------|--------------|
| Pnp/PCI Configurations                                                            |               |              |
| Reset Configuration Data                                                          | [Disable]     | Item Help    |
|                                                                                   |               | Menu Level ► |
| Resources Controlled By                                                           | [AUTO]        |              |
| IRQ Resources                                                                     | [Press Enter] |              |
| PCI/VGA Palette Snoop                                                             | [Disable]     |              |
| ↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save Esc: Exit F1: General Help |               |              |
| F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults                 |               |              |

### Reset Configuration Data

This field allows you to determine whether to reset the configuration data or not. The default value is Disabled.

### Resources Controlled by

This PnP BIOS can configure all of the boot and compatible devices automatically with the use of a use a PnP operating system such as Windows 95.

### PCI/VGA Palette Snoop

Some non-standard VGA display cards may not show colors properly. This field allows you to set whether or not MPEG ISA/VESA VGA cards can work with PCI/VGA. When this field is enabled, a PCI/VGA can work with an MPEG ISA/VESA VGA card. When this field is disabled, a PCI/VGA cannot work with an MPEG ISA/VESA card.

## 7.10 PC Health Status

This section shows the parameters in determining the PC Health Status. These parameters include temperatures, fan speeds and voltages.

| Phoenix - AwardBIOS CMOS Setup Utility                                                             |                |              |
|----------------------------------------------------------------------------------------------------|----------------|--------------|
| PC Health Status                                                                                   |                |              |
| CPU Warning Temperature                                                                            | [ 120 ]        | Item Help    |
| Current System Temp                                                                                | 42°C/116°F     | Menu Level ▶ |
| Current CPU Temp                                                                                   | 35°C/95°F      |              |
| System FAN Speed                                                                                   | 0 RPM          |              |
| CPU FAN Speed                                                                                      | 4720 RPM       |              |
| Vcore(V)                                                                                           | 1.03 V         |              |
| VIN0                                                                                               | 3.79 V         |              |
| VIN1                                                                                               | 12.52 V        |              |
| VIN2                                                                                               | 5.18 V         |              |
| VIN3                                                                                               | 5.58 V         |              |
| VIN4                                                                                               | 0.05 V         |              |
| VCC (V)                                                                                            | 5.56 V         |              |
| VBAT (V)                                                                                           | 3.20 V         |              |
| 5VSB(V)                                                                                            | 5.56 V         |              |
| Smart Fan2 Temperature                                                                             | [ 42°C/116°F ] |              |
| Fan2 Tolerance Value                                                                               | [ 5 ]          |              |
| ↑ ↓ ← → : Move    Enter : Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help |                |              |
| F5: Previous Values    F6: Fail-Safe Defaults    F7: Optimized Defaults                            |                |              |

### CPU Warning Temperature

This field allows the user to set the temperature so that when the temperature is reached, the system sounds a warning. This function can help prevent damage to the system that is caused by overheating.

### Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status.

### Shutdown Temperature

This field allows the user to set the temperature by which the system automatically shuts down once the threshold temperature is reached. This function can help prevent damage to the system that is caused by overheating.

### Smart Fan2 Temperature

This field enables or disables the smart fan feature. At a certain temperature, the fan

starts turning. Once the temperature drops to a certain level, it stops turning again.

### **Smart Fan Tolerance Value**

The default value is 5.

## **7.11 Load Fail-Safe Defaults**

This option allows you to load the troubleshooting default values permanently stored in the BIOS ROM. These default settings are non-optimal and disable all high-performance features.

## **7.12 Load Optimized Defaults**

This option allows you to load the default values to your system configuration. These default settings are optimal and enable all high performance features.

## **7.13 Set Supervisor Password**

These two options set the system password. Supervisor Password sets a password that will be used to protect the system and Setup utility. User Password sets a password that will be used exclusively on the system. To specify a password, highlight the type you want and press <Enter>. The Enter Password: message prompts on the screen. Type the password, up to eight characters in length, and press <Enter>. The system confirms your password by asking you to type it again. After setting a password, the screen automatically returns to the main screen.

To disable a password, just press the <Enter> key when you are prompted to enter the password. A message will confirm the password to be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

## **7.14 Save & Exit Setup**

This option allows you to determine whether or not to accept the modifications. If you type “Y”, you will quit the setup utility and save all changes into the CMOS memory. If you type “N”, you will return to Setup utility.

## **7.15 Exit Without Saving**

Select this option to exit the Setup utility without saving the changes you have made in this session. Typing “Y” will quit the Setup utility without saving the modifications. Typing “N” will return you to Setup utility.

## Note:

There is some problem when install software in CF Card as following condition:

1. Master: IDE CD-ROM ( PIONEER DVD-227A )  
Slave: CF Card ( Transcend 120X-standard )  
CF Card is not founded.
2. Master: CF Card ( InnoDisk )  
Slave: IDE CD-ROM ( Plextor PX-760A )  
CD-ROM is not founded.
3. Master: CF Card ( InnoDisk )  
Slave: IDE CD-ROM ( PIONEER )  
CF Card is not founded.
4. Master: CF Card ( Transcend 120X-standard )  
Slave: IDE CD-ROM ( Plextor PX-760A )  
CD-ROM is not founded.
5. Master: IDE CD-ROM ( Plextor PX-760A )  
Slave: CF Card ( Transend 120X-standard )  
CF Card is not founded.