

Baja
Motorsports™

Baja Comet 90cc Mini Bike

Read this manual carefully. It contains important safety information.
No one under the age of 16 should operate this Mini Bike .

OWNER'S MANUAL

Model Number: BC90

Minimum Age Requirement: 16



Rev. A (US)
012709

Always wear a helmet; It could save your Life!

Do not remove this operator's manual from this vehicle.

Please obtain, review, and follow provincial / municipal government acts and regulations pertaining to owning and operating an off-road vehicle.



Congratulations on your purchase of the BAJA INC. Mini Bike.

Your Mini bike is warranted to be free of manufacturing defects in material and workmanship for a period of 90 days from the date of purchase. During the warranty period BAJA, INC. will at its option, repair, provide replacement parts or replace your BAJA INC. Mini Bike at no charge. This warranty does not cover normal wear items or damage caused by neglect or misuse of the product.

Engine Warranty – 90 days

Frame Warranty – 90 days

Warranty is void if:

Frame is bent or broken due to abuse

Wheels are bent or broken

Fender bent or broken due to abuse

Any sign of impact, accident, jumping, spin-outs or roll over.

BAJA, INC. is not liable for any damage claim or liability claim person or otherwise resulting from the operation of this product in any way.

Should you experience a problem with your vehicle, please call Baja Inc. customer service line toll free at 1-888-863-2252 between the hours of 7am and 5pm Monday through Friday MST (Mountain Standard Time). MDT (Mountain Daylight Time) during the daylight saving time. You will be instructed how to proceed.

A COPY OF THE SALES RECEIPT IS REQUIRED.



WARNING

This manual should be considered as a permanent part of the vehicle and should remain with the vehicle when resold or otherwise transferred to a new user or operator. The manual contains important safety information and instructions which should be read carefully before operating the vehicle.



WARNING

**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.
CALIFORNIA PROPOSITION 65**

Table of Contents

NOTICE TO USERS.....	2
SAFE OPERATION.....	3
SAFETY GEAR.....	4
MODIFICATION OF VEHICLE.....	4
PRE-RIDE CHECKLIST.....	5
MAIN DATA.....	6
PARTS & SUBASSEMBLIES.....	7
LOCATION OF WARNING LABELS.....	9
OPERATION.....	10
FUEL FILLING.....	10
ENGINE STARTING AND STOPPING.....	11
LEFT HANDLEBAR SWITCH.....	12
GEAR SHIFTING.....	13
CHECK-UPS, ADJUSTMENT AND MAINTENANCE.....	14
CHANGING THE OIL.....	14
CHECK-UP OF SPARK PLUG.....	15
VALVE CLEARANCE.....	16
CHECKING & CLEANING THE AIR FILTER.....	17
ADJUSTING THE THROTTLE CABLE.....	18
ADJUSTING THE CARBURETOR.....	18
ADJUSTMENT OF REAR AND FRONT BRAKE.....	19
ADJUSTMENT OF CHAIN.....	20
GREASING PROCEDURES TO THE DRIVING CHAIN.....	20
VEHICLE WASHING.....	21
INSTRUCTIONS FOR STORAGE.....	22
RESUMPTION OF SERVICE AFTER STORAGE.....	23
TABLE AND TORQUE OF FASTENERS.....	23
MAINTENANCE ROUTINE DIAGRAM.....	24
TROUBLE SHOOTING.....	25
WIRE DIAGRAM.....	26
VIN AND SERIAL NUMBER LOCATION.....	27
EMISSION CONTROL SYSTEM WARRANTY.....	28

Please read this manual and follow all instructions carefully. To emphasize the special information, the symbol **▲** and the words **WARNING** or **CAUTION** have some special meanings. Pay attention to the messages.

▲ WARNING

Indicates a potential hazard that could result in death or injury.

CAUTION

Indicates a potential hazard that could result in vehicle damage.

NOTE: Indicating special information which is to make maintenance easier or instructions clearer.

WARNING and **CAUTION** are arranged like this:

▲ WARNING-or-CAUTION

The first part will identify a **POTENTIAL HAZARD**.

The second part will describe **WHAT COULD HAPPEN** if you ignore the **WARNING** or **CAUTION**.

The third part will describe **HOW TO AVOID THE HAZARD**.

This user's manual contains important safety and maintenance information. Read it carefully before riding. Failing to follow the warnings contained in this manual could result in **INJURY** or **DEATH**.

It is important that this manual remain with the vehicle when you transfer it to another user or owner.

All information, illustrations, photographs and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or other changes, there will be some discrepancies in this manual. We reserve the right to make product changes at any time, without notice and without incurring any obligation to make the same or similar changes to the vehicle previously built or sold.

SAFE OPERATION

Rules for Safe Operation

- A pre-operation check must be conducted before starting engine to insure safety, prevent mishaps, and prevent damage to components.
- It is strongly suggested that all operators take a certified motorcycle rider's course prior to operating the vehicle.
- Full attention is required during driving; paying close attention to the following points to avoid any injury to you by other motorized vehicles:
- Do not drive too close to other vehicles.
- Never operate this mini bike at night. Night is defined as the period of time 30 minutes before sunset to 30 minutes after sunrise.
- Driving at high speeds is the cause of many accidents; do not drive at a speed that the actual situation does not permit.
- This user's manual contains important safety and maintenance information. Read it carefully before riding. Failing to follow the warnings contained in this manual could result in INJURY or DEATH.
- It is important that this manual remain with the vehicle when you transfer it to another user or owner.
- All information, illustrations, photographs and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or other changes, there will be some discrepancies in this manual. We reserve the right to make product changes at any time, without notice and without incurring any obligation to make the same or similar changes to the vehicle previously built or sold
- Always avoid operating this mini bike on paved surfaces, including; sidewalks, paths, parking lots, driveways, streets, roads, and highways. Never operated this or any Off-Road Vehicle on a public street, road or highway where motor vehicles are in operation.

SAFETY GEAR

- 1. Never operate this mini bike without wearing a DOT approved motorcycle helmet which fits properly. Operators should also wear eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket, and long pants.**
- 2. Loose clothes are not suitable for motorcycle driving or riding as they may get caught on footrest or in moving parts.**

MODIFICATION OF THE VEHICLE

CAUTION
Never perform any unauthorized modifications to this vehicle. Only use original replacement part which can be obtained through BAJA INC. 888-863-2252

Pre-Ride Checklist

Before Starting the Engine

1. Engine oil level

- a) Check for leaks
- b) Tighten filler cap securely.
- c) Add oil if required.

2. Fuel level

- a) Add fuel as necessary.
- b) Do not overfill (no fuel in the filler neck).
- c) Do not mix oil with gas.
- d) Replace cap tightly.
- e) Do not refuel a hot engine. Allow engine to cool before adding fuel.

3. Warning decals

- a) Make sure all warning decals are legible and securely attached.
- b) Replace as necessary.

4. Tires

- a) Ensure that both tires are in safe riding condition.
- b) Both tires must be inflated to the pressure indicated on the tire sidewalls.

5. Drive chain

- a) Check condition and tension.
- b) Lubricate and adjust tension as necessary.


6. Throttle

- a) Check for smooth operation. Make sure the throttle “snaps” back to idle.
- b) Check for frayed cable or damaged cable housing. Replace damaged cable.
- c) Check for mud, debris and ice in the throttle cable/mechanism. Clean out any contamination.



MAIN DATA

Description	Data	Description	Data
<i>Overall length</i>	1539 mm (60.61 in.)	<i>Brake Type</i>	Drum
<i>Overall width</i>	669.8 mm (26.37 in.)	<i>Capacity of gasoline tank</i>	3L (.79 gal.) 87 octane or higher unleaded gasoline
<i>Overall height</i>	959.6 mm (37.78 in.)	<i>Capacity of oil tank</i>	.24L (.25 qt.)
<i>Wheelbase</i>	1070 mm (42.11 in.)	<i>Displacement of cylinder</i>	86cc
<i>Ground clearance</i>	189.7 mm (7.47 in.)	<i>Ignition means</i>	Magneto
<i>Vehicle weight</i>	67.59 kg (149 lbs.)	<i>Idling speed</i>	1500 ± 100rpm.
<i>Weight capacity</i>	69.4 kg (153 lbs)	<i>Spark plug</i>	MEIYA - A7TC, NGK - C7HSA, DENSO - U22FS-U, CHAMPION - Z10YC
<i>Front wheel</i>	3.50 - 10 36psi	<i>Spark plug gap</i>	0.6-0.7mm (.024"-.028")
<i>Rear wheel</i>	3.50 - 10 36psi	<i>Valve Clearance</i>	Intake 0.002 inch (0.05 mm) Exhaust 0.003 inch (0.0762 mm)

PARTS & SUBASSEMBLIES

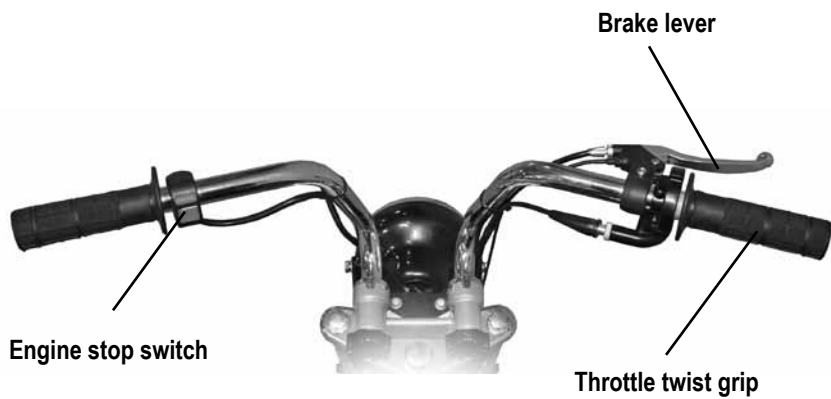

PARTS & SUBASSEMBLIES

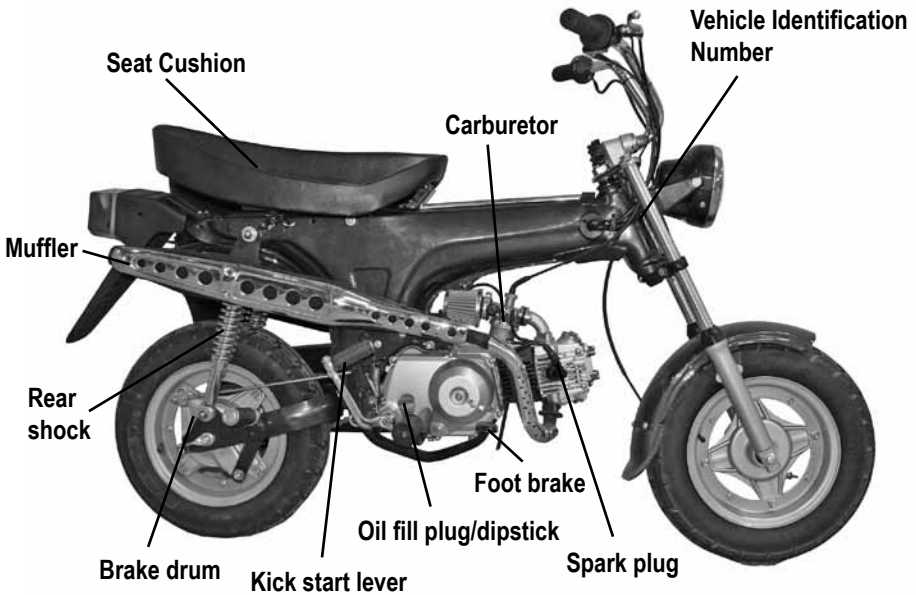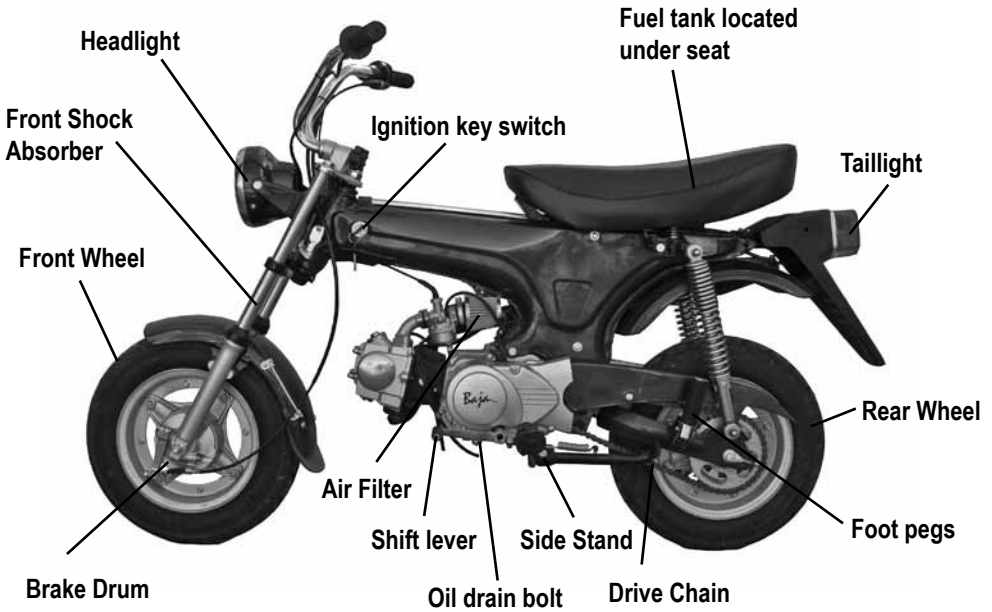

LOCATION OF WARNING LABELS

Read and follow all of the warnings labels on your Mini bike. Make sure you understand all the labels. Keep the labels on the Mini bike. Do not remove them for any reason. If a label comes off or becomes difficult to read, you should get a replacement by contacting Baja Inc.

1

THIS VEHICLE IS AN OFF ROAD VEHICLE
AND IS NOT INTENDED FOR USE ON
PUBLIC ROADS OR HIGHWAYS.

2

⚠ WARNING

No one under the age of 16
should operate this vehicle
without adult supervision.

3

⚠ WARNING


- Study the owners manual carefully
- Always wear a helmet, eye protection and protective riding gear.
- Do not drive while drinking alcohol or while on medication.




OPERATION

Fuel filling


The capacity of the fuel tank is 3L (.79 gal) Use only 87 octane or higher unleaded gasoline. Unscrew the gas cap by turning it counter clockwise and carefully fill the tank with unleaded gasoline through the opening. **DO NOT MIX GAS AND OIL TOGETHER, THIS IS A 4-STROKE ENGINE.** Replace the gas cap by carefully aligning the threads on the cap and the tank and turning the cap clock wise. Wipe any spilled fuel from the mini bike using a cloth and dispose of the cloth properly. **DO NOT SMOKE OR REFUEL THE VEHICLE NEAR OPEN FLAMES OR NEAR HEATING UNITS. ONLY REFUEL THE VEHICLE IN OPEN AREAS TO REDUCE THE LIKELIHOOD OF THE BUILD UP OF GASOLINE FUMES.**

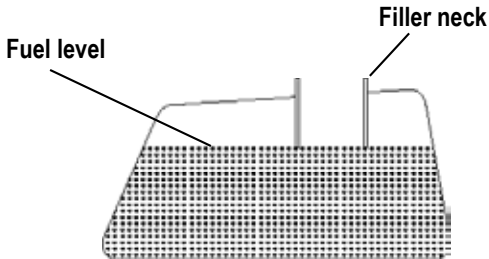

DO NOT OVERFILL TANK. FUEL LEVEL SHOULD BE BELOW FILLER NECK

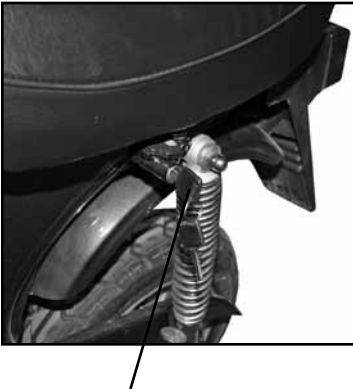

**Unlock seat cushion
with ignition key**

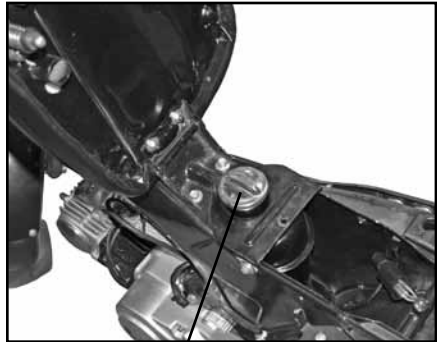

**Fuel tank cap located
under seat cushion**

ENGINE STARTING


CAUTION

Verify oil level prior to starting


Starting the engine with low or no oil will damage engine.

▲ WARNING

Never start the engine in a closed place as the exhausted gas from the vehicle contains toxic carbon monoxide.

1. Set ignition key switch to “” (ON) position.
2. Place mini bike in neutral gear.
3. Ensure there is fuel in fuel tank.

Choke lever

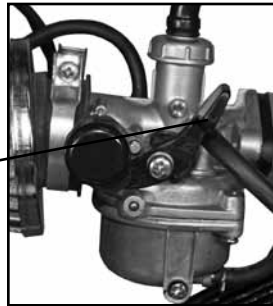


To start a cold engine:

1. Place choke lever in “UP” (ON) position.
2. Start engine with kick lever
3. Once engine has started, allow engine to warm up approximately 3 - 5 minutes. . (Do not rev the engine. Revving a cold engine could cause damage).
4. Place carburetor choke lever in the “DOWN” (OFF) position when engine has sufficiently warmed up.

CAUTION

Unnecessarily increasing RPM's to a high level while Mini Bike is warming up is harmful to engine.


Procedures for stopping the engine:


1. Release throttle twist grip to slow engine RPM's to idle.
2. Shift mini bike transmission to neutral position.
3. Set ignition switch key to “” (OFF) position.


LEFT HANDLEBAR SWITCH

Engine stop switch

The engine stop switch is provided on the left handlebar.

When the switch is turned to “” (off) position, the engine will not start or will stop engine if running.

When the switch is turned to “” (on) position, the engine can start and the vehicle can be driven.

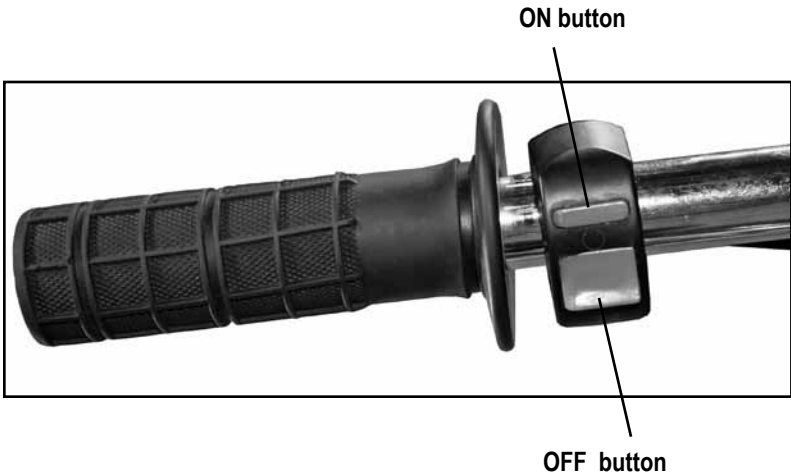

GEAR SHIFTING

Reduce throttle before shifting. Never increase the throttle while shifting gears.


Depress Shift lever to place gear in 1st, 2nd, 3rd or 4th. Lift up on shift lever to down shift or place gear in neutral.

Do not rest foot on gear-shift lever while operating mini bike. Resting foot on shift lever could damage the transmission, or cause transmission to shift unexpectedly.


Shifting sequence

- (N) Neutral
- (1) 1st gear
- (2) 2nd gear
- (3) 3rd gear
- (4) 4th gear

Shifting to higher gears

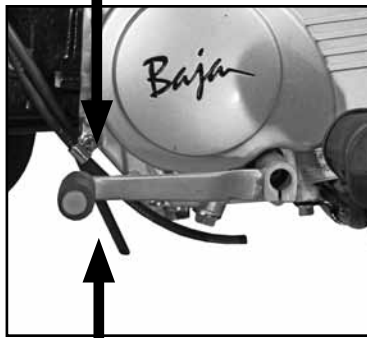

Down shifting to lower gears or neutral



Points of Attention during Drive

1. Avoid unnecessary idling of engine at high speeds. Idling engine at high speeds can damage engine.
2. Down shift to lower gears when there is insufficient power to climb hills or continue forward.
3. As a general rule, the front brake provides approximately 70% of stopping power. Always use both the rear brake pedal and front brake lever simultaneously when stopping. Using both front and rear brakes simultaneously will stop mini bike with greater stability.
4. Decrease the throttle while braking.

CHECK-UPS, ADJUSTMENT AND MAINTENANCE

Checking the Oil

Check engine oil each time prior to operating mini bike.

The oil level should be between the upper and lower lines on oil dipstick.

1. Set Mini Bike on level ground, remove oil plug/dipstick, wipe dipstick clean, insert dipstick into crankcase to check oil level. Note: There is no need to screw dipstick completely in hole to check level.
2. Add lubricating oil up to edge of the fill hole
3. re-install oil dipstick.



Oil dip stick


CAUTION

Never start the engine when there is insufficient lubricating oil. Otherwise, it will cause harm to the engine.

Lubricating Oil Recommended


The lubricating oil is an important factor affecting the performance and service life of the engine. Please refer to the chart for the correct grade of engine oil based on the environmental conditions in your area. Do not use any other type of oil other than what is recommended in the chart. **DO NOT MIX OIL WITH THE GASOLINE.**

Lubricating oils of different viscosity shall be employed in different regions and at different temperatures.

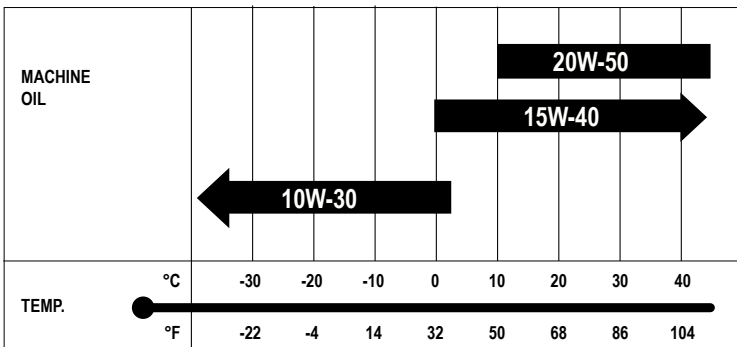

CHANGING THE OIL


1. Let engine warm up approximately 3 minutes to warm up oil.
2. Shut off engine, remove “Screw Plug” located at bottom of the engine and let oil drain into an approved collection container. **DO NOT PERFORM THIS PROCEDURE WHILE THE ENGINE IS HOT. SERIOUS BURNS COULD RESULT FROM CONTACT WITH HOT OIL.**
3. Dispose of used oil properly. For proper disposal procedures, contact your local oil recycling center.
4. Clean and re-install the “Screw Plug” . Torque to 18 ft.lb.
5. Refill engine with 0.25 qt. (0.24L) of recommended oil, recheck the amount of oil in the engine by using the oil dip stick.

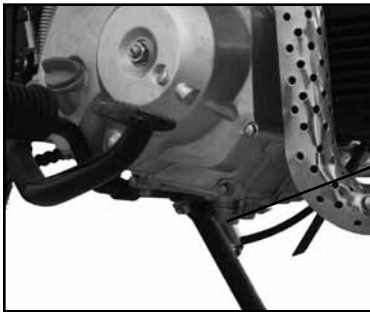

Screw plug for oil draining

CHECK-UP OF SPARK PLUG

1. Remove the spark plug cap. Remove spark plug by using the spark plug wrench provided.
2. Clean spark plug all around or replace plug if it is corroded or there is too much deposit on it.
3. Regulate gap of spark plug to 0.6-0.7mm (.024”-.028”).
3. The spark plug of the designated type should be used. The applicable type of spark plug: MEIYA - A7TC, NGK - C7HSA, DENSO - U22FS-U, CHAMPION - Z10YC

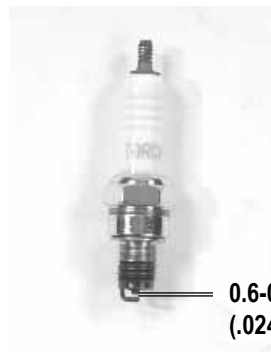

0.6-0.7mm
(.024”-.028”)

VALVE INSPECTION

REFER TO MAINTENANCE SCHEDULE IN THIS OWNER'S MANUAL FOR VALVE ADJUSTMENT INSPECTION INTERVALS.

Valve clearance should be:

Intake: 0.002 inch (0.05 mm)


Exhaust: 0.003 inch (0.0762 mm)

Excessive clearance will cause noise. Insufficient clearance will cause loss of power and possibly damage the valves.

For those who are mechanically proficient and have the proper tools, instructions on adjusting the valve clearance are given in the service manual. If assistance is needed please contact Baja Inc. to find your local service center.

CHECKING & CLEANING THE AIR FILTER

TAP AIR FILTER ON A FIRM SURFACE TO DISLodge AS MUCH DIRT AND debris as possible. NOTE: If tapping air filter does not remove the dirt and debris, replace air filter.

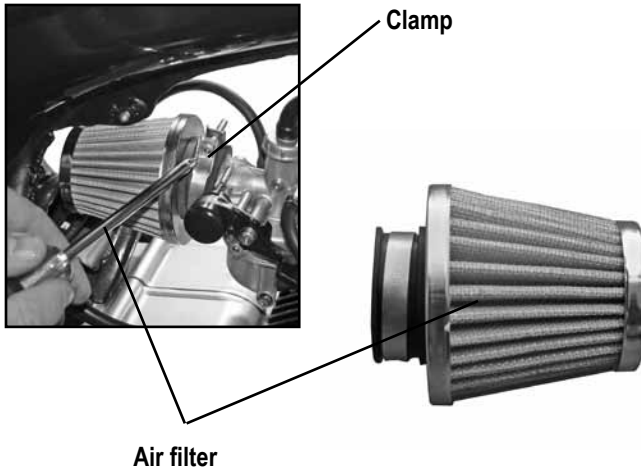

CAUTION

The air filter element must be intact or the engine will suck in dust and dirt, resulting in a shorter service life of the engine.

Water should be prevented from entering into the filter when washing the vehicle.

The filter element shall be cleaned gently. Replace the air filter element with a new one if it is broken or cracked.


ADJUSTING THROTTLE CABLE

Make sure throttle cable is adjusted properly. To adjust throttle cable, rotate adjustment nut located at the hand throttle.


Check if throttle twist grip has the required free operating movement.

The required free operating movement: 2 - 6 mm (0.078 -0.24in) . If the grip cannot be moved freely, turn the adjusting nut to ensure proper operating movement.

After adjustment, start engine and check for the operating movement again. Repeat the adjustment if necessary until the desired operating movement is obtained.

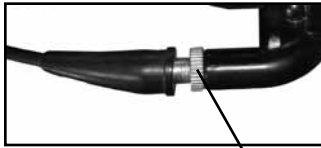

Throttle cable adjust nut

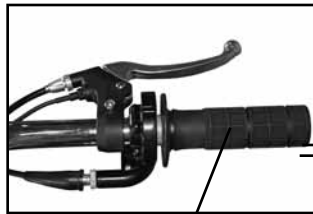

Throttle twist grip

2 - 6 mm
(0.078 - 0.24 in.)

ADJUSTING CARBURETOR

Idle speed adjustment:

1. place vehicle in neutral and start engine.
2. Adjust idle speed by turning the throttle stop screw to 1500 ± 100 rpm.



Throttle stop screw


CAUTION

Do not try to correct a malfunctioning carburetor by adjusting the idling speed. If the carburetor is not functioning properly, it should be repaired by a service center.

Adjust idle speed only when engine has been warmed up or 10 minutes after operation.

ADJUSTMENT OF REAR BRAKE


1. To make adjustment, turn rear adjusting nut clockwise to increase braking or counterclockwise to decrease braking.
2. Brake shoes should be replaced by a qualified service technician once brake shoes are worn.

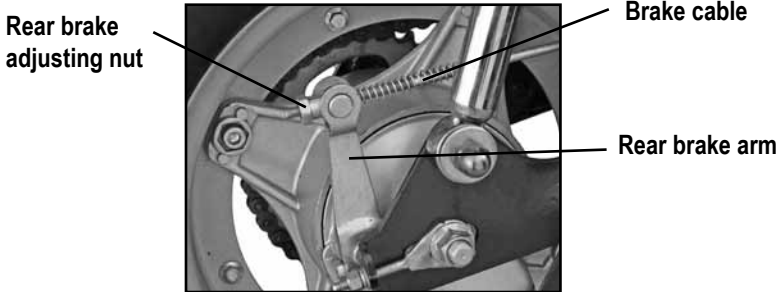


ADJUSTMENT OF FRONT BRAKE

1. The front hand brake lever should have free operating movement of 5 - 7 mm (0.2 - 0.3 in.) .
2. To make adjustment on brake lever, loosen jam nut then turn adjusting nut counter-clockwise to reduce and clockwise to increase the free operating movement of the front hand brake lever
3. To make adjustment on brake cable tension, turn adjusting nut located on the front hub assembly. Clockwise to increase braking and counter-clockwise to decrease braking.
4. Brake shoes should be replaced by a qualified service technician once brake shoes are worn.

5 - 7 mm free play (0.2 - 0.3 in)

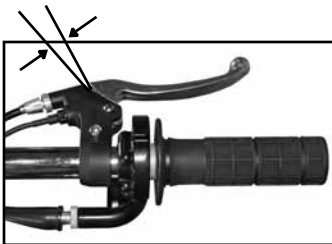


Adjusting nut

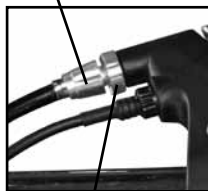

Jam nut


Adjusting nut

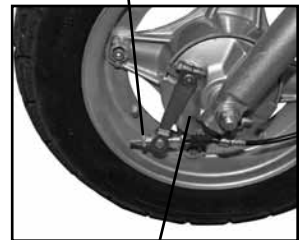

Front brake hub

ADJUSTMENT OF CHAIN


1. When chain adjustment is needed, loosen rear axle nut.
2. Turn chain adjusting nuts on the left and right sides to adjust the tension of the chain. Align the marking of the chain adjuster with the engraved lines in the frame on both sides.
3. After adjustment has been made, torque rear axle nut to 50-60Nm (37-44 ft.lb.).
4. Check chain tension before each ride.

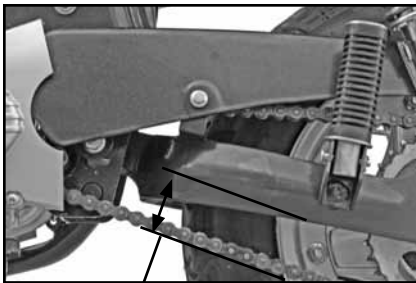

15-20mm
1/2" - 3/4"
Chain tension

Chain adjustment
marks

Rear axle nut

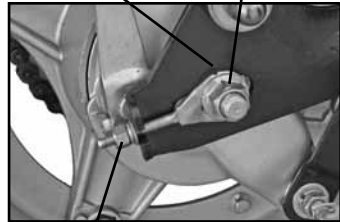

Chain adjusting nut
Both Sides

GREASING PROCEDURES TO DRIVE CHAIN

1. Shut off engine
2. Add a light amount of chain lube to drive chain. (Too much oil or chain grease may cause splattering to occur.)

Attention:

The chain should be replaced when the adjusting limit has reached it's maximum.

VEHICLE WASHING

Cleaning the vehicle regularly can slow down color fading and make it easier to check for damage and/or oil leakage.

CAUTION
<p>Washing the Mini Bike with over-pressurized water may cause damage to some of its components. Therefore, do not use a pressure washer to clean the vehicle. The following parts should be cleaned using low pressure water:</p> <ul style="list-style-type: none">— Wheel hub— Exhaust pipe— Fuel tank and lower portion of cushion— Carburetor— Head lock and ignition switch

1. After pre-wiping, the vehicle should be washed with clean water to remove dirty residues so as to prevent corrosion. Plastic subassemblies should be cleaned by wiping with a cloth or foam soaked in neutral detergent solution, followed by rinsing with clean water.
2. After vehicle has air dried, lube drive chain then run engine at idle speed for a few minutes.
3. Prior to driving, carefully check brake system, repair or adjust if necessary.

INSTRUCTIONS FOR STORAGE

If the vehicle is not going to be used for a long period of time, for example, in winter time, some steps should be taken to prevent malfunction of and damage to components.

1. Change engine oil.
2. Drain fuel from the fuel tank and carburetor. Spray atomized anti-rust oil to the inside walls of the tank. Dispose of any drained fuel properly so as not to adversely affect the environment.



Carburetor drain screw

Attention:

If storage will last for more than one month, fuel in the carburetor must be fully drained. This will help ensure that the carburetor maintains its normal performance after storage.

▲ WARNING

Gasoline is flammable and may cause fire and even an explosion under certain conditions. Therefore, do not smoke, make a fire or have any fire around while draining fuel.

3. Remove spark plug, pour about 15-20ml (.5 - .68 oz.) of clean engine oil into the cylinder, step down on kick lever repetitively several times to have the oil distributed evenly inside the engine cylinder.
4. Re-install spark plug.
5. Wash vehicle clean, wipe dry and apply an even coat of wax to painted surfaces. Apply a light coat of anti rust oil to all metal parts
6. Inflate tires as required and place vehicle up on wooden blocks with the wheels above the ground.
7. Store vehicle in a shady, cool place free from humidity and direct sunlight. Cover vehicle with a tarp (not with plastic painted materials). If a garage is available, store within.

RESUMPTION OF SERVICE AFTER STORAGE

1. Remove covering and remove wooden blocks used in storing the vehicle. Change engine oil if the vehicle has been out of service for over 4 months.
2. Drain off any remaining atomized anti-rust oil from the fuel tank. Fill tank with fresh gasoline.
3. Prior to driving, all the required check-ups must be made. After checking vehicle, start engine and drive slowly at first in an open area to make sure vehicle operates correctly.

TABLE AND TORQUE OF FASTENERS

No.	Fastener	Torque (Newton/m) (Foot/lb)
1	Front wheel axle nut	35-45Nm (26-33 ft.lb.)
2	Rear wheel axle nut	50-60Nm (37-44 ft.lb.)



MAINTENANCE SCHEDULE

ITEM OF MAINTENANCE	EA. USE	1ST MO./20 HRS.	EVERY 3 MO./50 HRS.	EVERY 6 MO./100 HRS.	EVERY YR./300 HRS.
Engine oil-Check	X				
*Engine oil-Change		X		X	
Air filter-Check	X				
*Air filter-Clean			X		
*Air filter-Change					X
*Carburetor sediment cup-Clean				X	
Spark plug-Check-Adjust				X	
Spark plug-Replace					X
Idle speed-Check-Adjust					X
**Valve clearance-Check-Adjust				X	
Fuel tank and filter-Clean				X	
Fuel tube-Check					X
Front shock bolts-Tighten to spec.	X				
All nuts and bolts-Check for tightness	X				
Chain tension-Check	X				
*Brakes-Check	X				
*Throttle-Check	X				
*Throttle cable-Check	X				

“*” means: This item of maintenance should be carried out at a service center. It may be also done by the user with reference to this manual provided special tools and authorized spare parts are used. The user must also be capable of completing the procedure.

“***” means: This item can only be carried out by an authorized service center in order to ensure safety.

Notes:

- Maintenance should be conducted more frequently when Mini Bike is driven in dusty areas.
- When Mini bike has exceeded the maximum figures specified in the table, maintenance should be still cycled according to the intervals of time or hours stated herein.

TROUBLESHOOTING


Engine will not Start

<i>SYMPTOM</i>	<i>POSSIBLE FIX</i>
1. Choke OPEN	Move Choke Lever to CLOSED
2. Out of fuel	Refuel
3. Bad fuel; engine stored without treating or draining gasoline, or refueled with bad gasoline	Drain fuel from fuel tank and carburetor. Refuel with fresh gasoline
4. Spark plug faulty, fouled, or improperly gapped	Remove and inspect spark plug. Clean, gap, or replace
5. Spark plug wet with fuel (flooded engine)	Remove and inspect spark plug. Dry and reinstall spark plug.
6. Carburetor malfunction, ignition malfunction, valves stuck, etc.	Take vehicle to a qualified mechanic. Replace or repair faulty components as necessary

Engine Lacks Power

<i>SYMPTOM</i>	<i>POSSIBLE FIX</i>
1. Filter element (s) clogged	Check air filter Clean or replace.
2. Bad fuel; engine stored without treating or draining gasoline, or refueled with bad gasoline.	Drain fuel tank and carburetor. Refuel with fresh gasoline.
3. Carburetor malfunction, ignition malfunction , valves stuck, etc.	Take engine to a qualified mechanic. Replace or repair faulty components as necessary.

WIRE DIAGRAM

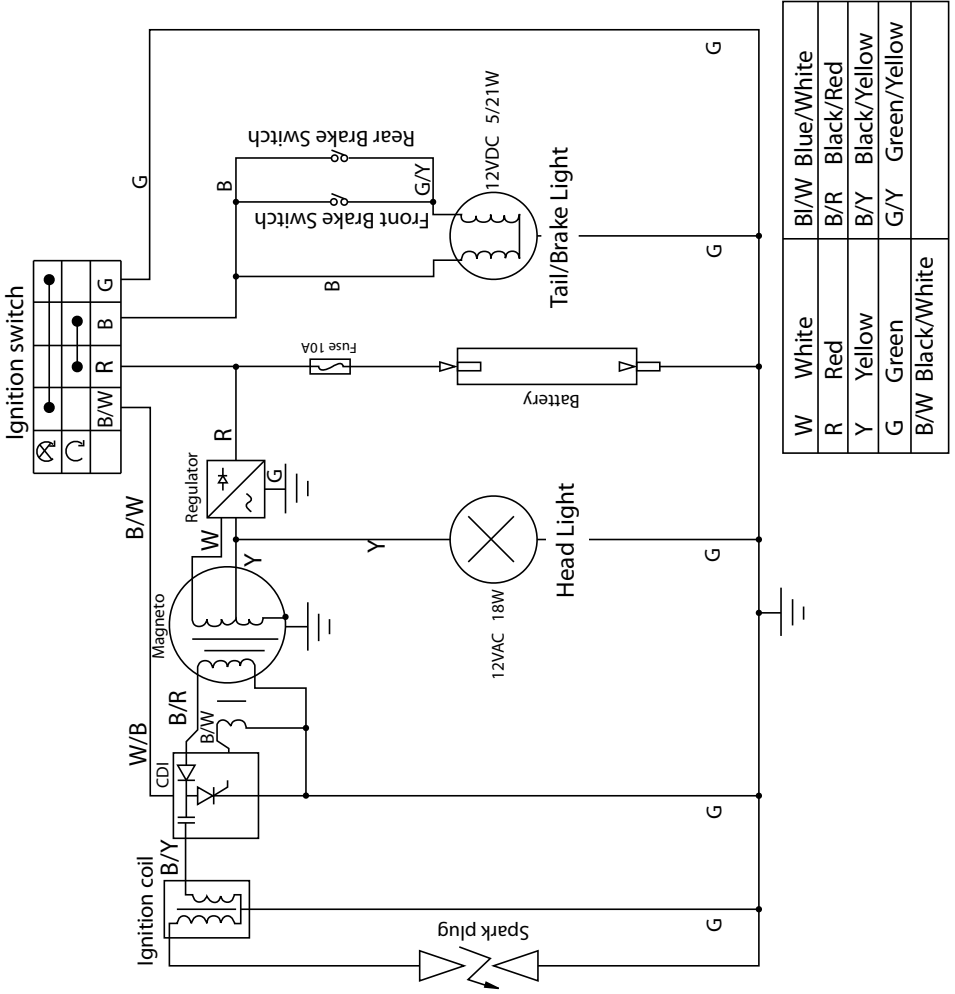


W	White	B/W	Blue/White
R	Red	B/R	Black/Red
Y	Yellow	B/Y	Black/Yellow
G	Green	G/Y	Green/Yellow
B/W	Black/White		

VIN. AND SERIAL NUMBER LOCATION

You need to know the frame VIN# and engine serial numbers. You need these numbers to help your authorized service center or BAJA INC. order parts.

The Frame number is stamped on front of Mini bike frame. The engine number is located on the left side of the engine housing.

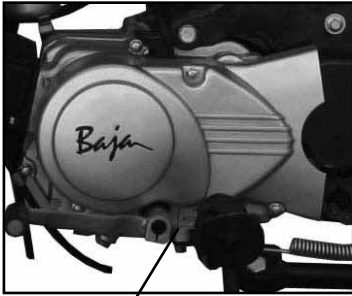

Engine Serial number



Frame VIN#

Write down the serial numbers here for your future reference

Frame No.:

Engine No.:

BAJA INC. – EMISSION CONTROL SYSTEM WARRANTY

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The emission control system warranty period for this vehicle begins on the date the vehicle is delivered to the first purchaser other than an authorized dealer, or the date it is first used as a demonstrator, lease, or company vehicle, whichever comes first and continues for 60 months after that date, or 5,000km, whichever comes first, provided there has been no abuse, neglect or improper maintenance of your vehicle. Where a warrantable condition exists, the Distributor will repair your vehicle at no cost to you, including diagnosis, parts and labor. If an emission-related part on your vehicle is defective, the part will be repaired or replaced by the Distributor. This is your emission control defects warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the vehicle owner, you are responsible for the performance of the required maintenance. You should maintain a record of all maintenance performed on your vehicle and retain all receipts covering maintenance on your vehicle. You may not be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance or lack of maintenance records or receipts. You are responsible for presenting your vehicle to an authorized dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As the vehicle owner, you should be aware that you may be denied your warranty coverage if your vehicle or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

WARRANTY COVERAGE

The Distributor warrants that each new 2009 and later vehicle:

- is designed, built, and equipped so as to conform at the time of initial retail purchase with all applicable regulations of the United States Environmental Protection Agency, and the California Air Resources Board; and
- is free from defects in material and workmanship which cause such vehicle to fail to conform with applicable regulations of the United States Environmental Protection Agency or the California Air Resources Board for the periods specified above.

Your emission control system warranty covers components whose failure would increase an engine's emission, including electronic controls, fuel injection system, carburetor, the ignition system, catalytic converter, or any other system utilized in this vehicle to control emission if it is originally equipped. Also included may be hoses, connectors and other emission-related assemblies. Replacing or repairing other components (including parts, labor, and other costs) not covered by this emission control system warranty or the standard warranty is the responsibility of the owner.

Coverage of repairs under this warranty applies only when repairs are completed at an authorized dealer or repair facility. The Distributor will not cover repairs performed outside of an authorized dealer or repair facility. The use of replacement parts not equivalent to the original parts may impair the effectiveness of your vehicle's emission control system. If such a replacement part is used and an authorized dealer determines it is defective or causes a failure of a warranted part, your claim for repair to bring your vehicle into compliance with applicable standards may be denied.

This Emission Control System Warranty is in addition to the standard Limited Warranty.

EXCLUSIONS AND LIMITATIONS

This warranty does not cover the following:

- Failures or malfunctions of the emission control systems caused by abuse, alteration, accident, misuse, the use of leaded gasoline.
- Replacement of expendable maintenance items unless they are original equipment defective in material or workmanship under normal use, and the first required replacement interval for the item has not been reached. Expendable maintenance items include but not limited to spark plugs, filters, coolant, lubricants, gaskets, hoses, and belts.
- Replacements of parts and other services and adjustments for required maintenance.
- Any vehicle equipped with an odometer or hour meter where the reading is altered so that actual mileage cannot be readily determined.
- Repairs or replacements as a result of:
 - o Accident
 - o Misuse
 - o Use of replacement parts or accessories not conforming to the original specifications which adversely affect performance
- Physical damage, corrosion, or defects caused by fire, explosions or similar causes beyond the control of the Distributor.
- Failures not caused by a defect in material or workmanship.

Use of the vehicle in any type of competitive racing or related events immediately and completely voids this and all other warranties.

LIMITED LIABILITY

The liability of the Distributor under this Emission Control System Warranty is limited solely to the remedying of defects in material workmanship by an authorized dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the vehicle or transportation of the vehicle to/from the authorized dealer. The Distributor is not liable to any person for incidental, consequential or special damages of any description, whether arising out of express or implied warranty or any other contract, negligence or other tort or otherwise.

No express emission control system warranty is given by the Distributor except as specifically set forth herein. Any emission control system warranty implied by law, including any warranty of merchantability or fitness for a particular purpose is limited to the express emission control system warranty terms stated in this warranty. The foregoing statements of warranty are exclusive and in lieu of all other remedies. All express warranties not stated in this warranty are disclaimed. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply if it is inconsistent with the controlling state law.

No dealer is authorized to modify this Emission Control System Warranty. If you have any questions regarding your warranty rights and responsibilities, you should contact BAJA INC. (888) 863-2252.



Baja Motorsports®

Baja, INC.

P.O. Box 61150

Phoenix, AZ 85082

Tel: 602-443-9180

Toll Free: 1-888-863-2252
