

LEIXEN

VV-808S

- 双音多频功能
DTMF FUNCTION
- 收音机功能
FM RADIO FUNCTION
- 身份识别码功能
PTT ID FUNCTION
- 语音压扩/加密
BUILT-IN COMPANDER/SCRAMBLER

无线车载台
MOBILE TRANSCEIVER



Notice
**Please use the transceiver in
compliance with local regulations.**

To User

Thank you for purchasing the Mobile transceiver. We trust this transceiver will give you convenient and reliable communication for many years.

For the best experience, we advise that you read this manual completely before using your new transceiver.

Contents

Security Information	1
Accessories & Options	2
Supplied Accessories	2
Optional Accessories	2
Installation	3
Connect Power	3
Keeping the Transceiver Cool	3
Install with Bracket	4
Connect Accessories	4
Getting Acquainted	6
DTMF Microphone Panel	9
LCD Display	11
Basic Operation	13
Power on/off	13
Turn Volume	13
Choose Channel	14
Transmitting and receiving	14
Function Menu Operation	15
Auto Power Off(APO): Menu 01	15
APRO (APRO): Menu 02	15
Busy Channel Lock (BC Lock): Menu 03	15

Key Beep (Beep): Menu 04.....	16
Channel Save (CHASave): Menu 05.....	16
DTMF Function (DTMF): Menu 06	16
Dual Watch (DW): Menu 07	21
Decode Type and Decode Code (Menus 08 and 09)	21
Encode Type and Encode Code (Menus 10 and 11)	23
FM Radio Function(FM): Menu 12.....	24
FM Scan(FM Scan)): Menu 13.....	25
FM SQL (FM SQL): Menu 14	25
FM DualWatch (FM DW): Menu 15.....	26
Font size (Choose (Font): Menu 16.....	26
Key Lock Function (Keylock)	26
Keypad Function(Keypad): Menu 18.....	27
Backlight (Lamp): Menu 19	27
Setting Channel Names: (Name): Menus 20 /21/22	28
Set Opening Display (OpenDIS): Menu 23	29
Custom Keys Set (P1-P3、 M Key): Menus 24-29	29
High/Low Power Set (Power): Menu 30.....	31
PTT ID (PTT ID): Menu 31	31
ROGER(ROGER): Menu 32.....	32
REVERSE (REVERSE): Menu 33	32
Offset Frequency (RPT SET/RPT TYPE): Menus	34

and 35	33
Save Battery (SaveBat): Menu 36	34
Scan (SCAN): Menus 37, 38, and 39	35
Squelch Level (SQL): Menu 40	37
Step (Step): Menu 41	37
Tail Elimination (Tail): Menu 42.....	37
Talk Around (Talk): Menu 43	38
Time out timer(TOT): Menu 44	38
TX Stop (TXStop): Menu 45.....	38
VOX (VOX): Menus 46-49.....	39
Wide and Narrow Bandwidth Set (WidNar): Menu 50.....	40
User-defined Keys Menu	40
OFF	40
FM (FM)	41
Channel UP (UP)	41
Channel Down (DOWN)	41
Monitor Momentary (MONI)	41
Monitor Lock (MOLO)	42
SQ OFF Momentary (SQM)	42
Mute (MUTE)	42
Scan (SCAN)	42
High/Low Power (LOW)	43

Emergency (EMG)	43
V/M Mode Switch (V/M)	43
DTMF Function (DTMF)	43
Call (Call)	43
Transmit 1750Hz (1750Hz)	43
A/B Mode Switch (A/B)	44
Talk Around (Talk)	44
Reverse Frequency (Reverse)	44
Reset Menu.....	44
All Reset.....	44
Function Reset.....	45
Programming Operation.....	46
Lease Function	46
Wireless Change Frequency.....	46
RX Inhibit/RXTX Inhibit.....	49
Setting Transmission Limits Per Minute	50
Maintenance	51
Base Knowledge.....	51
Cleaning and Maintenance.....	51
Specification.....	53

Security Information

To use this transceiver safely and efficiently, please read the following safety information.

- ∞ Refer service to qualified technicians only.
- ∞ Turn off the transceiver while refueling or while parked in a gasoline service station.
- ∞ Please turn off the transceiver where flammable gases or fumes may be present.
- ∞ Do not place the transceiver where it might block airbag deployment.
- ∞ Do not expose the transceiver to long periods of direct sunlight or extreme heat.
- ∞ Do not transmit for long periods, especially at high power. Doing so may damage the transceiver or cause the transceiver to overheat.
- ∞ Do not use the transceiver with a damaged antenna or feedline. Doing so may damage the transmitter.
- ∞ When using this transceiver, Please make sure the antenna is connected. Transmitting without an antenna may damage the final amplifier in the transmitter.
- ∞ Please keep at least 2in (5cm) away from the antenna while transmitting.

-
- ☞ Turn off the power immediately if the transceiver emits peculiar odors or smoke and contact the nearest authorized dealer for service.

Accessories & Options

Welcome to your new mobile transceiver. Please unpack it carefully and ensure that the below accessories are included. If you find any missing or damaged components, please contact your dealer immediately.

Supplied Accessories

Item	Qty
Mobile transceiver	1
DC Power Cable	1
Bracket	1
Bracket Screw (Installed in sides of transceiver)	2
User Manual	1

Optional Accessories

USB Programming Cable	DC/AC Adaptor
DTMF Keypad Microphone	No Keypad Microphone
Antenna Sucker	Antenna

Installation

Connect Power

This transceiver should be connected to a 13.8V DC power supply. It cannot be connected directly to an AC outlet. Connect the transceiver to a regulated power supply with the supplied power cable. Do not replace the DC power cable with a thinner wire. The supplied cable is rated to meet the power requirements of the transceiver.

Connect the DC power cable to a DC power supply or battery. Connect the red wire to the positive terminal and the black wire to the negative terminal. Then, plug the power connector into the DC power outlet of the transceiver.

Note: Make sure to turn off the DC power supply and transceiver before connecting.

The DC power supply can only be connected to an AC power outlet after all connections are completed.

Keeping the Transceiver Cool

As with all modern electronics, it is very important that the transceiver not be allowed to overheat. The Transceiver has been designed to take advantage of natural air flow to keep it cool. Thus, to help in providing enough space for natural air flow, it is very

important that you install the transceiver using the supplied mounting bracket. If the transceiver is installed without providing for adequate air flow, the transceiver may overheat. If adequate air flow is not available, the transceiver will be damaged from overheating. Do not place books or other equipment directly on the transceiver. Allow 4In (10cm) of clearance between the rear of the transceiver and any other objects.

Install with Bracket

An adjustable angle bracket is supplied with the transceiver. Please attach the bracket to your desired installation location. Remove the two mounting screws from the sides of the transceiver and reinstall them through the holes in the bracket.

Note: Do not install the transceiver where it might interfere with the deployment of airbags.

Do not place the transceiver in the front windshield. The heat of the sun may damage the transceiver.

Connect Accessories


Hand Microphone: The Hand microphone connection jack is located on the left side of the front panel of the transceiver.

Earphone: The Earphone connection jack is located in the right of the rear panel of the transceiver. The


internal speaker is muted when an earphone or external speaker is connected to this jack

Antenna: The antenna mount connection is on the left of the rear panel of the transceiver. The antenna system is composed of an antenna, feedline, and ground network components. Carefully consider your antenna system installation for best results with this transceiver. For instance, be sure the antenna you will use matches your desired operating frequencies. Selecting an appropriate antenna is beyond the scope of this manual. Do not transmit without first connecting an antenna. Doing so may damage the transceiver.


Getting Acquainted

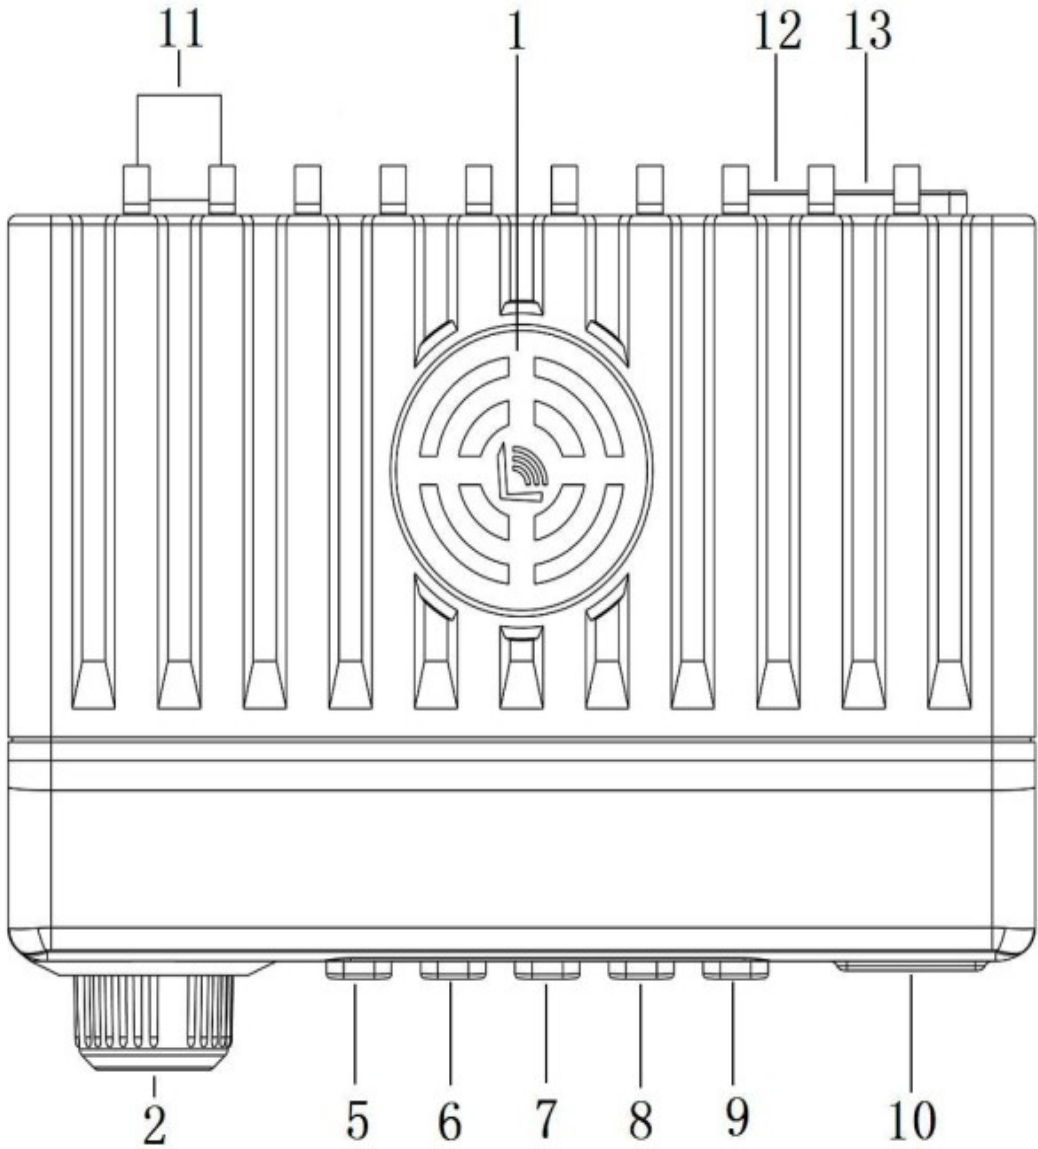


Upper Panel

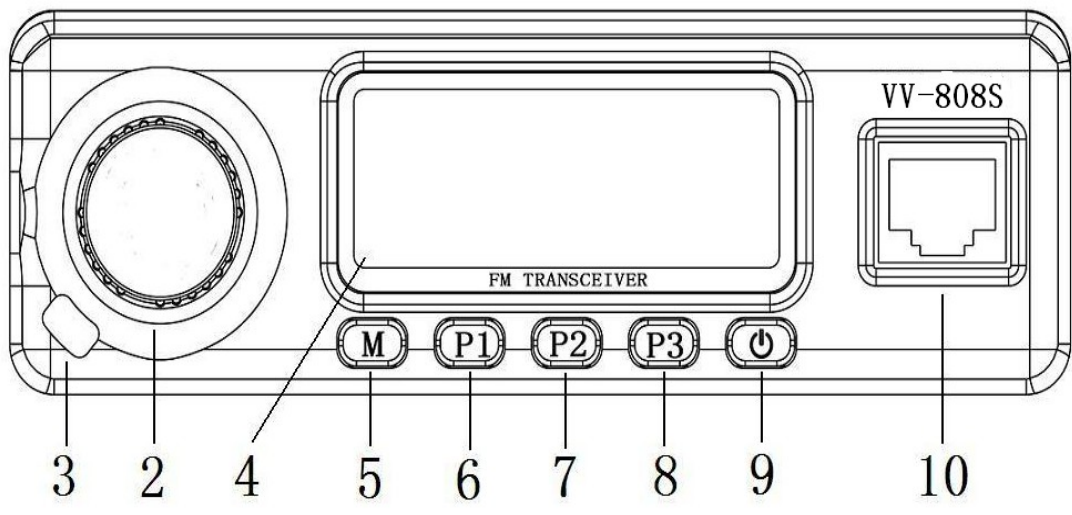


Front Panel

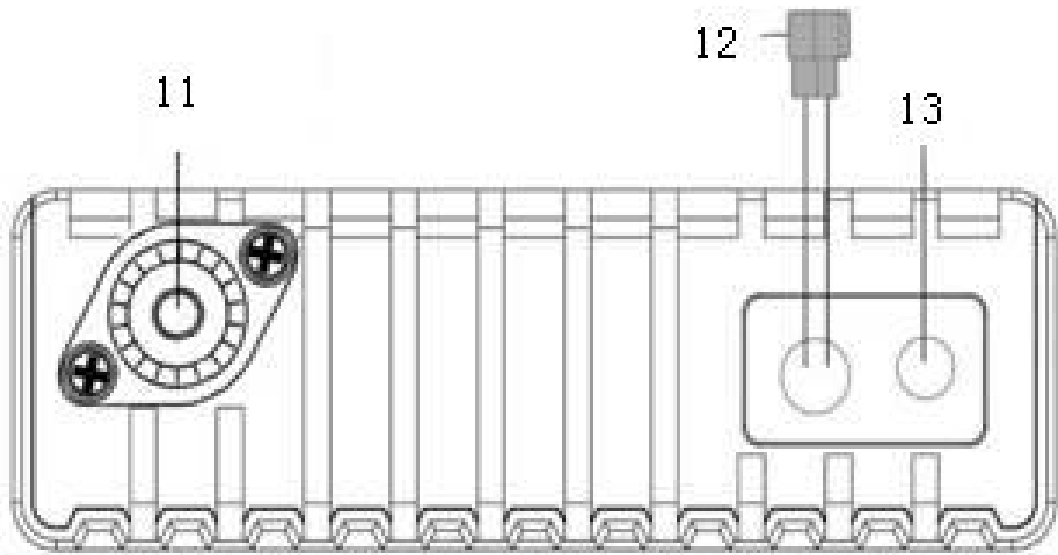

Rear Panel


1,Loudspeaker	2,Dial Knob
3,Indicator Light (Red light、green light)	4,LCD display screen
5, Menu Key	6,P1 Key (User defined)
7,P2 Key (User defined)	8,P3 Key (User defined)
9,  Power Switch	10,MIC Connector (RJ45)
11,Antenna Connector	12,Power Connector
13,Earphone Connector	

DTMF Microphone Panel

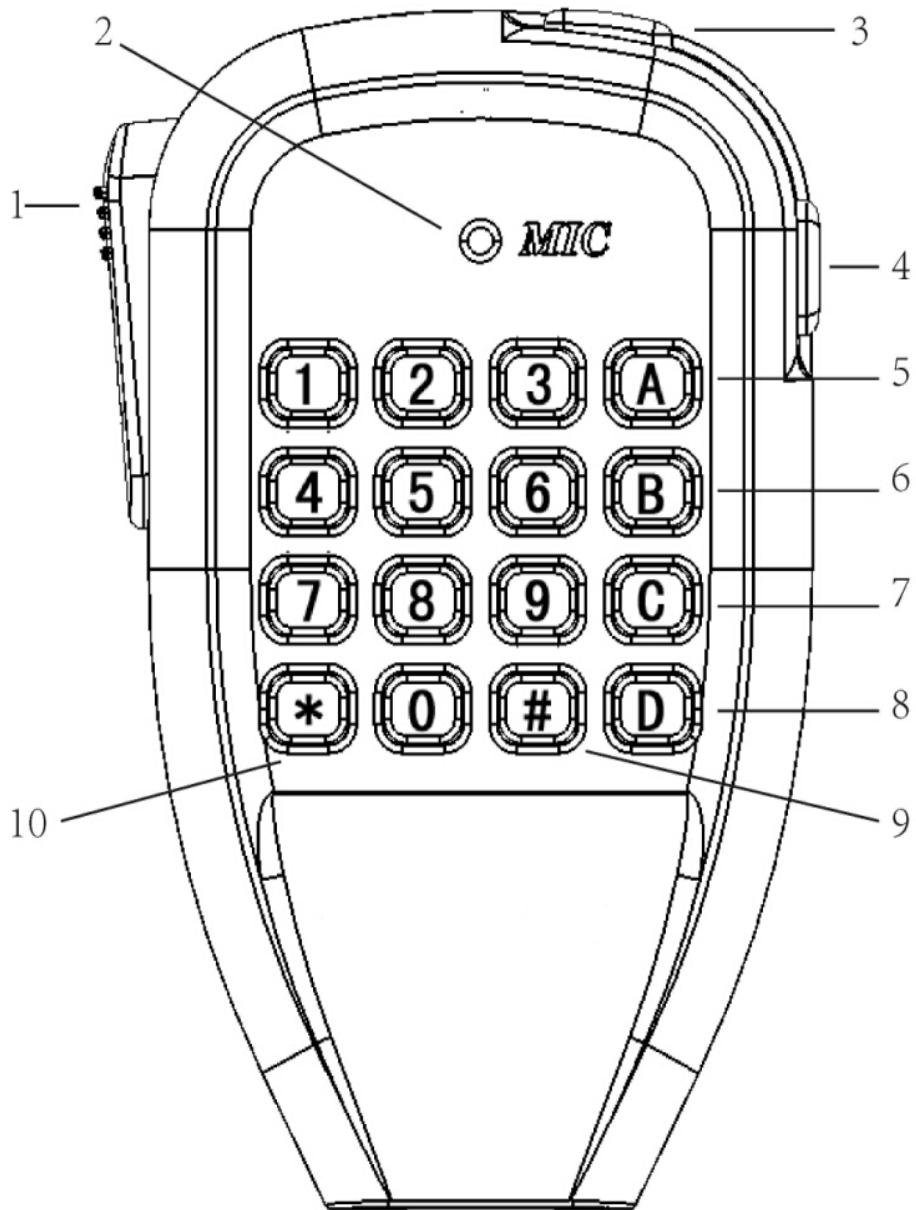




1, PTT	Push to Talk
2, MIC	Microphone
3, UP	Up, VOL+
4, DN	Down, VOL-
5, A	Call
6, B	VFO/MR Switch
7, C	A/B mode Switch
8, D	VFO Band Change
9, #	CHA+
10, *	CHA-

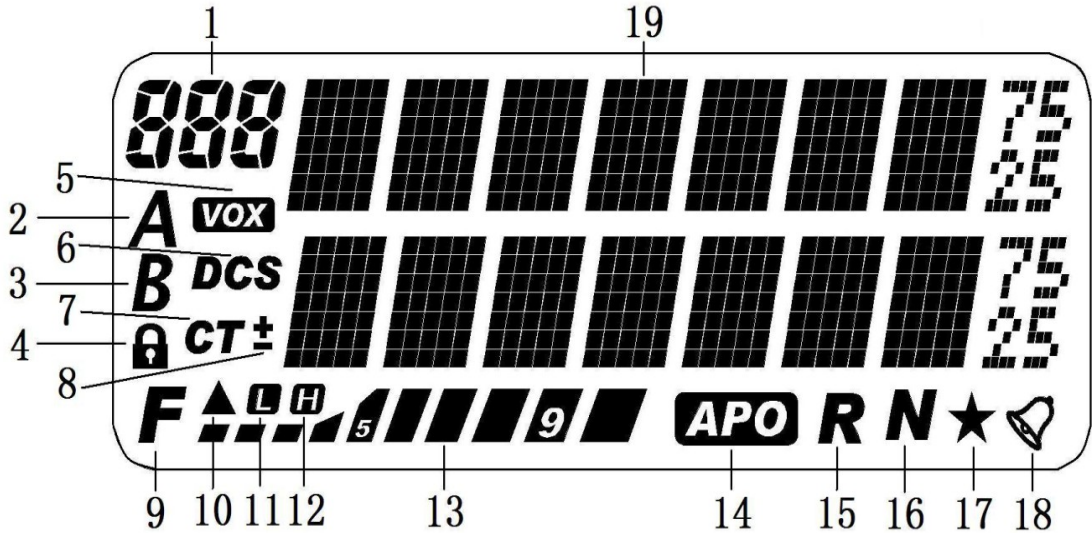LCD Display





No	Icon	Feature Description	Operation Method
1	000	Memory Channel No.	----
2	A	Being A Channel	Switch A/B Key
3	B	Being B Channel	Switch A/B Key
4		Keyboard Lockout	Press M Key for 2 Seconds
5	VOX	VOX Open	Refer to Menu 45
6	DCS	DCS Open	In VFO/MR mode: Decode Type and Decode Code refer to Menu08 and 09, Encoded Type and

			Encoded Code refer to Menu 10 and 11
7	CT	CT Open	The same as above (DCS)
8	±	Offset Frequency	Refer to Menu 34 and 35
	F	Wireless Frequency Open	Refer to Page 47
10	▲	Channel scan disabled	Refer to Menu 39
11	L	Low Power	Refer to Menu 30
12	H	High Power	Refer to Menu 30
13		Indicate Power strength when transmitting, 10 grids for high power, 5 grids for small power. Indicate signal strength when receiving.	----
14	APO	Auto Power off	Refer to Menu 01
15	R	Reverse Frequency	Refer to Menu 33
16	N	Narrowband	Refer to Menu 50
17	★	Dual Reception	Refer to Menu 07
18		DTMF	Refer to Menu 06


19		Displayed frequency value, channel names, menu items, and other numbers, letters or symbols Information	----
----	---	--	------

Basic Operation

Power on/off

Connect the power and press the  button, the radio turned on, issued a "toot toot" tone. Press the  key for 2 seconds, the radio turned off.

Turn Volume

When the radio is in memory channel mode (A or B on the screen display), press  button or press the D key on DTMF microphone to enter the VOL adjustment mode (A or B on the display disappears), rotating the knob to adjust the volume, clockwise to increase volume, counterclockwise to decrease volume. Or press the UP or # key on DTMF microphone to increase volume, DN or * key to decrease volume.

The volume level range: 0-15. Default: 4.

Choose Channel

How to choose a channel? As following:

- 1, Store your favorite channels through programming software as Memory Channels in advance, you can select the channel you want to communicate in the MR mode directly.
- 2, Input the frequency value by using the DTMF keypad in the VFO mode.
- 3, Rotate the knob to set the frequency in the VFO mode.

Note: This radio has a dual-waiting function, you can switch A/B channel by key C (A/B switch key) on the DTMF microphone. A-channel can only be in the MR/CH memory channel, B-channel can be in VFO frequency channel or the MR/CH memory channel. Please refer to page 40 of the user-defined key function of A/B switch and VFO/MR switch.

Transmitting and receiving

Press and hold the PTT key of the microphone and speak to start a call. Release the PTT key to end the call.

- Please use Low Power to communicate if the communication distance is nearby, in order to reduce radiation and save electricity.
- Keep the microphone about 5 cm from mouth, with the usual volume to speak, to get the best sound quality.

-
- The indicator shows red when transmitting.

Function Menu Operation

Auto Power Off(APO): Menu 01

Auto Power Off will automatically turn the transceiver off after a set length of inactivity. This function is disabled (off) by default. The Auto Power Off interval can be set to 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 2 hours, 4 hours, 6 hours, 8 hours, 10 hours, 12 hours, 14 hours, or 16 hours. The transceiver displays an **APO** icon when APO function is enabled.

APRO (APRO): Menu 02

Voice processing features include: Disabled, voice compressor and scrambler. Each channel can be set individually. You can set voice processing mode by Menu 02: Disabled (OFF), voice compressor (Comp), and voice scrambler (Scra). Default is OFF.

Busy Channel Lock (BC Lock): Menu 03

When a Channel has the “BC LOCK” function enabled, the ability to transmit is disabled on that

channel if it is active. You will again be able to transmit on the channel when the channel is quiet. This option can be set to “ON” or “OFF”. The default setting is OFF.

Key Beep (Beep): Menu 04

Whether open key beep or not when there is a key operation. You can set menu 04 to open(ON) or lock(OFF) key beep. Default is ON.

Channel Save (CHASave): Menu 05

Users can save custom frequency as memory channel, so that save time to re-set the frequency parameters. In VFO mode, enter the frequency you want to save, press the M key and rotating knob to menu 05 “CHASAVE”, rotating again to select the channel number you want to keep after the screen displayed "CHASave TO 001", then the frequency is saved.

Note: You can save up to 199 channels, Default save the channel to number 001, choose a right channel number when save a new channel in order to avoid the previously saved channels are replaced.

DTMF Function (DTMF): Menu 06

DTMF (Dual Tone Multi Frequency), dual tone multi-frequency, consists of high-frequency group and low frequency group, each group contains four

frequencies. A high frequency signal and a low frequency signal superimposed to form a combined signal which representing a number. DTMF signaling has 16 codes, can be set freely. When a radio channel setting of the DTMF enabled, you can send DTMF codes by wireless control to achieve individual call, group call or RX Inhibition, RXTX Inhibition and other functions.

Dual-Tone Multi-Frequency (DTMF) is a signaling method in which two tones are combined to create one of 16 separate codes. These codes represent digits 0-9, plus *, #, A, B, C, and D. The transceiver can generate and decode DTMF sequences in order to control other equipment, remotely control or inhibit other transceivers, or page individual radio users or groups of users. Each of the 199 channels can be individually programmed for DTMF signaling to be enabled or disabled. Note that if DTMF is disabled on a channel, it can neither be transmitted nor decoded.

✧ **Enable Or Disable DTMF Signaling**

1, In VFO / MR mode, select a frequency or memory channel to modify DTMF signaling. Alternatively, you can enable DTMF signaling in the programming software.

Note:

a), If the transceiver is in CH mode, you can not enable or

disable DTMF signaling from the transceiver's front panel. In CH mode, this setting can only be modified from the programming software.

b), In MR mode, each memory channel can be independently set to have DTMF signaling enabled or disabled.

2, Press the M key and rotating to menu 06, open or close DTMF function. "ON" is open, "OFF" is close.

✧ **Individual call/ group call**

Individual call: Using programming software, set the transceiver's individual ID code. This can be any code of up to 15 characters, using the digits 0-9, *, #, A, B, C, and D. The default transceiver individual call ID code is 1000.

Group Call: Using a group call character in any part of a radio calling sequence will call all radios in a specific calling group. The only radios in the group that will not automatically respond to a group call are transceivers which are either set to selective call only or those which have receive or receive/transmit inhibit enabled. The group character may be *, #, A, B, C, or D. The default group character is A.

Consider the following example.

Set 10 transceivers as follows:

Item	Individual ID	Unite ID	Group ID.
Transceiver 1	80811	C	Group 1
Transceiver 2	80812	C	Group 1
Transceiver 3	80813	C	Group 1
Transceiver 4	80814	C	Group 1
Transceiver 5	80815	C	Group 1
Transceiver 6	80831	C	Group 3
Transceiver 7	80832	C	Group 3
Transceiver 8	80833	C	Group 3
Transceiver 9	80834	C	Group 3
Transceiver 10	80835	C	Group 3

Send the ID code: 80814 to call "Transceiver 4".

Send the ID code: 80832 to call "Transceiver 7".

Send the ID code: 8081C to call all transceivers in Subgroup 1.

Send the ID code: 8083C to call all transceivers in Subgroup 3.

Send the ID code: 808CC to call all transceivers in Group 1 and Subgroup 3 which are both in Group C.

✧ **DTMF code transmission mode:**

1, Automatic transmission: Fill in the DTMF call list in the software to make a fast dialed call. In VFO / MR / CH mode, keep DTMF open, press the CALL key (A key) + a serial number of list by microphone and then press PTT to send the DTMF code. (Note: No. 0-9 can be entered or press UP / DOWN keys on microphone directly or rotate knob to select, number 10-15 can only press UP / DOWN button on microphone or rotate knob to select.

2, Manual transmission: If the DTMF list in software is empty, the radio would close CALL function when operate by automatic transmission. You can press CALL key twice, enter the DTMF code and press PTT to transmit when the screen appears "send". It will issue a "toot toot toot toot" sound when individual call is successful, and issue a "jingle ring, jingle ring ring" sound when Group call is successful.

✧ **Remote RX Inhibition/ RXTX Inhibition:**

RX Inhibition: If RX Inhibit is enabled, the receiver will remain inactive until it receives the correct RX Enable code.

RXTX Inhibition: With RX/TX Inhibit enabled, the transceiver will be unable to receive or transmit until it receives the correct RX/TX Enable code.

Refer to page 49 for more about RX Inhibition and RXTX Inhibition.

Dual Watch (DW): Menu 07

This setting determines whether the dual watch feature is enabled or disabled. With dual watch enabled, the transceiver will monitor two frequencies periodically. Select Menu 07 to modify this function, which can be turned ON or OFF. The default is ON.

Decode Type and Decode Code (Menus 08 and 09)

Using Menus 08 and 09, you may determine what will open the receiver's squelch. Set the "DecType" option (Menu 08) to select the squelch mode:

OFF: Any signal on the channel will open the receiver's squelch.

CTCSS: Only a signal on the channel containing a matching CTCSS tone (one of 58 tones) will open the receiver's squelch.

NDCS: Only a signal on the channel containing a matching normal DCS code (one of 107 codes) will open the receiver's squelch.

IDCS: Only a signal on the channel containing a

matching inverted DCS code (one of 107 codes) will open the receiver's squelch.

After you have selected the decode type in Menu 08, select the CTCSS or DCS code in Menu 09 from the following tables.

CTCSS: 56-254.1 Hz (58 groups), NDCS: 107 groups
Normal DCS code. IDCS: 107 groups Invert DCS code.

CTCSS standard frequency table (58 groups)

56.0	74.4	107.2	156.7	189.9	241.8
57.0	77.0	110.9	159.8	192.8	250.3
58.0	79.7	114.8	162.2	196.6	254.1
59.0	82.5	118.8	165.5	199.5	
60.0	85.4	123.0	167.9	203.5	
61.0	88.5	127.3	171.3	206.5	
62.0	91.5	131.8	173.8	210.7	
63.0	94.8	136.5	177.3	218.1	
67.0	97.4	141.3	179.9	225.7	
69.3	100.0	146.2	183.5	229.1	
71.9	103.5	151.4	186.2	233.6	

DCS Standard Code Table

017	053	125	172	251	315	411	462	565	703
023	054	131	174	252	325	412	464	606	712
025	065	132	205	255	331	413	465	612	723
026	071	134	212	261	332	423	466	624	731
031	072	143	223	263	343	431	503	627	732
032	073	145	225	265	346	432	506	631	734
036	074	152	226	266	351	445	516	632	743
043	114	155	243	271	356	446	523	645	754
047	115	156	244	274	364	452	526	654	
050	116	162	245	306	365	454	532	662	
051	122	165	246	311	371	455	546	664	

Encode Type and Encode Code (Menus 10 and 11)

Similar to the settings for “Decode Type” and “Decode Code” above, using Menu 10, “EncType” and Menu 11”Enc code”, you may determine the CTCSS or DCS code that is used on a particular channel. You may need such a code in order to access a repeater system

or other radio users who have CTCSS or DCS squelch enabled. You may set Menu 10 as follows:

OFF: Disable. The transmitted signal does not send any CTCSS or DCS codes.

CTCSS: Transmit a specified CTCSS tone (one of 56 tones)

NDCS: Transmit a specified normal DCS code (one of 107 codes).

IDCS: Transmit a specified inverted DCS code (1 of 107 codes)

Use Menu 11 to set the desired CTCSS or DCS tone, using the same tables as for Menu 09.

FM Radio Function(FM): Menu 12

This transceiver has a built-in FM broadcast receiver. To turn the FM broadcast radio on or off. FM frequency range: 87.5-108MHz.

Open/Close FM Function

In VFO / MR / CH mode, press M key rotating knob to Menu 12, then press M key to turn on the radio. To turn off again, follow the same procedure.

✧ You can set P1-P3 as the shortcut key for FM radio function, pressing the shortcut key on or off the radio in the VFO / MR / CH mode.

Rotating knob to select or enter by microphone keyboard to input FM frequency directly, or store your favorite radio programs frequency in the software in advance, that you can quick select your favorite radio programs. Frequency range: 87.5-108MHz.

Note: To ensure good FM reception, please connect an antenna to the transceiver.

FM Scan(FM Scan)): Menu 13

In the FM mode, users can define that the FM frequency is increase or decrease by step (OFF) or by scanning channels with signals (ON). You can choose ON or OFF in Menu 13. ON: The Fm Scan function enabled, the radio just scan channels with signals, FM Scan opened can improve the scanning speed; OFF: Turn off the FM scan. Default is ON.

FM SQL (FM SQL): Menu 14

The FM SQL menu determines the sensitivity of the FM broadcast scan. The higher this setting, the stronger a signal must be in order for the scan to stop on a particular FM broadcast channel. Settings range from 0 (always on) to 9 (tightest squelch for scan). The default level is 5.

FM DualWatch (FM DW): Menu 15


The FM Dual Watch feature allows you to continue listening to an FM broadcast station at the same time as another signal from the transceiver is present. If this feature is disabled, a signal from the main transceiver will interrupt FM broadcast radio reception. In either case, pressing the PTT will interrupt FM broadcast reception. This feature may be turned ON or OFF through Menu 15. The default setting is ON.

Font size (Choose (Font): Menu 16


You can select the font size of the channel display through this menu. Select “BIG” to show both channels in a larger font. Choose “SMAL” to have the active channel in a larger font and the second channel in a smaller font. The default setting is SMAL.


Note: “BIG” font can only be set if Channel Alias is also set as active.

Key Lock Function (Keylock)


You may lock the transceiver controls by holding the “M” key for one second. When the lock is enabled, the  symbol appears. Unlock the transceiver controls by again holding the “M” key for one second.

You can choose what controls are locked through Menu 17 as follows:

KEY: Numeric and function keys, keys on the microphone and the front panel of transceiver, excluding the “M” key and the  key.

K + S: KEY + DAIL. Numeric +function keys + knob. excluding the “M” and  keys

PTT: PTT Key.

ALL: KEY + DAIL + PTT excluding the “M” and  keys

Default is K + S.

Keypad Function(Keypad): Menu 18

Menu 18 is set depending on which microphone shipped with your transceiver. If you received the DTMF microphone, set this menu to ON. Setting to OFF will not allow you to use the keys on the DTMF microphone. If you did not receive the DTMF microphone, for power conservation, we recommend you set this menu to OFF. The default setting is ON.

Backlight (Lamp): Menu 19

You can set backlight behavior through Menu 19. Select from the following settings:

OFF: Backlight is disabled

KEY: Backlight is active only when a key is pressed.

CONT: Backlight is always enabled. The default setting is CONT.

Setting Channel Names: (Name): Menus 20 /21/22

Menu 20 determines whether the transceiver allows the user-defined channel names to be displayed. If it is enabled, channels would display user-defined channel name, if it is disabled, all user-defined channel names would not be displayed.

Menu 21 determines whether a user-defined channel name will be displayed. Set this option to ON if you would like to see channel names instead of merely channel numbers. The default is OFF.

It may be helpful for you to name particular channels with meaningful labels, such as callsigns, cities, or channel use. Your channel names can be up to seven characters long.

You can edit channel names using Menu 22. Access Menu 22, press P2 to edit the first digit, rotate the knob to select the character desired, then press P2 to confirm and edit next digit, after edit all digit desired, press P3 key to end edit and press Menu key to exit. The default label for any channel is “Name***”. You may use any of the characters in the following table in your channel names.

Edit Alias valid characters:

A	B	C	D	E	F	G	H	I	J	K	L
M	N	O	P	Q	R	S	T	U	V	W	X
Y	Z	[¥]	^	-	`	a	b	c	d
e	f	g	h	i	j	k	l	m	n	o	p
q	r	s	t	u	v	w	x	y	z	{	
}	→	←	space	!	"	#	\$	%	&	'	(
)	*	+	,	-	.	/	0	1	2	3	4
5	6	7	8	9	:	;	<	=	>	?	@

Set Opening Display (OpenDIS): Menu 23

You can select what displays when the transceiver first powers on by using Menu 23. Choose from the following options:

ALL: Boot displayed as full screen display.

SYS: Boot displayed as system welcome word.

User: Boot display as User-defined word.

You can set the user-defined word in the programming software.

Time: Boot display as remaining lease time.

The default setting is USER.

Custom Keys Set (P1-P3、 M Key): Menus 24-29

You can define the shortcut function directly through

software. Default of M short press is to enter the Menu.

Several keys on the front panel of the transceiver are user programmable. Each key has two possible functions, defined in Menus 24 through 29.

Key functions are accessed via a short press (press and release) or long press (press and hold for 1.5 seconds by default, although this time can be adjusted in the programming software).

Please refer to Page 40 for details of setting up these programmable shortcut keys.

While functions for short and long press of Keys P1, P2, and P3 are defined in Menus 24 through 29, the M key is a special case. The short press of the M key can only be defined in the programming software, since its default behavior is to access the setup menu. The M long press is not user defined, as it locks or unlocks keys and/or PTT. (See “Keylock”, Menu 17, for details).

The default functions of the programmable keys are as follows:

P1 Long Press: FM (FM transceiver)

P1 Short Press: Time (Time display on screen)

P2 Long Press: MOLO (Monitor Lock)

P2 Short Press: Bandchange (Change band 136/245/400 MHz)

P3 Long Press: SCAN (scan)

P3 short Press: MUTE (mute)

M Short Press: Enter the menu function

High/Low Power Set (Power): Menu 30

You may select your desired transmit power level from Menu 30. For communication with nearby stations, we recommend that you use low power. This will produce less heat and prolong the useful life of the final amplifier. For stations that are more distant, you should use high power for improved communication clarity. High power is the default setting.

PTT ID (PTT ID): Menu 31

PTT ID allows you to send a code that identifies your specific transceiver. The PTT ID code is defined in the programming software; the default ID is “123”.

You can also set whether PTT ID’s are spoken or displayed. If voice is selected, ID’s of up to five digits will be spoken. However, up to 14 digit ID’s can be displayed if voice ID’s are disabled.

Each channel stores whether the PTT ID is enabled.

To enable PTT ID:

In VFO / MR mode, choose the frequency or channel on which you would like to enable the PTT ID.

Set Menu 31 to ON if you would like to enable the

PTT ID, or OFF to disable it.

Note:

- a) In CH Mode, you may not modify this setting.
- b) In MR mode, each memory channel can be individually programmed to enable or disable PTT ID.

You may also use the programming software to enable or disable PTT ID for any channel.

The PTT ID can be sent:

1. At the beginning of the transmission: The ID is sent immediately when the PTT key is pressed.
2. At the end of the transmission: the PTT ID is sent when the PTT key is released.
3. Both: the PTT ID is sent both when the PTT key is pressed and again when it is released.

ROGER(ROGER): Menu 32

The transceiver can send a “Roger beep” to mark the end of a transmission. Select Menu 32, and select “ON” to enable this feature, or “OFF” to disable it. The default setting is OFF.

REVERSE (REVERSE): Menu 33

The Reverse feature can only be enabled if Offset Frequency and RPT Type, Menus 34 and 35, are also

set. The Reverse function swaps the receive and transmit frequencies so that you can hear another transceiver's calls directly rather than through a repeater. This would be useful in order to determine whether you can establish direct contact with a nearby station, freeing up the repeater for other uses.

To set the Reverse function, set Menu 33 to "ON". To return to normal operation, set Menu 33 to "OFF".

Offset Frequency (RPT SET/RPT TYPE): Menus 34 and 35

You can set a channel to use different receive and transmit frequencies. This is most useful for operating through a repeater, which receives on one frequency and then retransmits on another frequency from a higher antenna. This effectively provides systems using the repeater with greater communication range than they would achieve alone.

Setting these separate frequencies is accomplished by setting Menus 34 and 35. First, you will need to set the offset amount, which is the difference between the receive and transmit frequencies. The transceiver can accept offset values from 0.000 to 00.000-69.995MHz.

Setting mode: In VFO Mode, select Menu 34, enter the offset value using the number keys on the DTMF

microphone, or rotating knob to choose value.

Select the offset direction using Menu 35. Rotate knob to select “RPT+” (positive offset, the transmit frequency is higher than the receive frequency), “RPT-” (the transmit frequency is lower than the receive frequency), or “SING” (no offset, only a single frequency is used).

For example: In VFO mode, enter a frequency as 450MHz, set value of Offset frequency 5MHz in RPT SET, if RPT Type is + RPT, then receiving frequency is 450MHz, and transmitting frequency is 455MHz; if RPT Type is -RPT, then receiving frequency is 450MHz, and transmitting frequency is 445MHz; if RPT Type is SING, receiving frequency and transmitting frequency both are 450MHz.

Note: Offset frequency setting is only available in VFO mode setting; in MR mode, offset frequency can only set through program software by write the receiving and transmitting frequencies directly.

Save Battery (SaveBat): Menu 36

Battery Save mode lowers current consumption by putting the receiver in a low power “sleep” mode periodically during quiet periods with no received signals. Set Menu 36 ON to enable this function, or OFF to disable it. The default setting is ON.

Scan (SCAN): Menus 37, 38, and 39

Scan mode allows you to monitor several channels more efficiently. Channels are scanned until activity is detected on a channel. Depending on the scan mode, scanning may continue after a specific length of time, or it will only continue when the channel is inactive.

Scan Mode: Select the scan mode in Menu 38. There are two modes:

- ✧ Time operated (TO): Scanning stops when an active channel is encountered. The scan will pause for five seconds, then scanning will continue, even if the channel is still active.
- ✧ Carrier operated (CO): Scanning stops when an active channel is encountered. Scanning resumes after two seconds of channel inactivity.
- ✧ The default setting is “TO”.

Note: Press any key except UP or DOWN key or rotating the knob, to stop scanning.

Scan Type: You may choose two different scanning modes:

- ✧ VFO frequency scan: All frequencies on the band would be scanned.
In VFO mode, enter Menu 37 and press M key to start scanning, the radio automatically scan from current frequency to higher frequencies in wide

band. To scan direction toward low frequencies, press DOWN key or turn knob counterclockwise, then scan direction reversed. To re-scan to higher frequencies direction, just press UP key or turn knob clockwise. Press any key except UP or DOWN key or rotating knob, the radio stops scanning.

✧ MR / CH Frequency scan: Only scan frequencies which stored in memory channel.

In MR / CH mode, enter Menu 37 and press M key to start scanning, the radio automatically scans from current channel to higher stored number channel in wide band. To scan direction toward lower stored number channel, press DOWN key or turn knob counterclockwise, then scan direction reversed. To re-scan to higher channel direction, just press UP key or turn knob clockwise. Press any key except UP or DOWN key or rotating knob, the radio stops scanning.

Note:

1. Each memory channel can be set to be blocked from scan through Menu 39. If Scan Add is disabled on a channel, that channel will be skipped during MR/CH scans. A channel's scan status will be indicated on the transceiver's display.
2. MR/CH Scan is only available if two or more channels are programmed with Scan Add enabled.
3. Scan is only effective if the squelch is closed.

Squelch Level (SQL): Menu 40

The squelch circuit allows you to only hear desired signals. If a strong enough signal is not present, the squelch circuit is closed, and you will hear no background noise. Higher levels of the Squelch level setting require stronger signals to open the squelch circuit. Set the squelch level to one appropriate to the amount of RF noise in your environment. A squelch setting that is too high may cause you to miss receiving a weaker signal, while too low a setting may cause you to hear more noise than you might want.

Set the Squelch Level using Menu 40. There are nine levels of squelch setting; the default level is 2.

Step (Step): Menu 41

Step is the value in which the operating frequency increases or decreases with rotating knob or press UP / DOWN key in VFO mode. Step is set through Menu 41. The range: 2.5/5/6.25/10/12.5/25KHz. Default: 25 KHz.

Tail Elimination (Tail): Menu 42

The Tail elimination function eliminates the burst of background noise encountered at the end of a transmission. . Set Menu 42 to ON if you would like to enable this feature, or OFF to disable it. The default

is ON.

Talk Around (Talk): Menu 43

When the Talk around feature is enabled, the transmit and receive frequency and signaling mode are the same. This would be useful if two stations who are close together wish to temporarily use the output frequency of a repeater. Turn Menu 43 ON to enable this feature. The default is OFF.

Time out timer(TOT): Menu 44

You may use Menu 44 to specify a time-out timer for the transmitter. Setting such a timer would prevent accidental, lengthy transmissions where the transmitter does not properly unkey(a stuck PTT key, for instance). Not only could such transmissions be disruptive to other communications, they could damage the transmitter. Select Menu 44, and set the Time-Out Timer to OFF, or in 10-second intervals of up to 120 seconds. The default setting is 30 seconds.

TX Stop (TXStop): Menu 45

The TXStop function disables the transmitter when it is enabled. If TXStop is enabled, pressing the PTT key will issue an audible alert tone, indicating that you are unable to transmit. Select Menu 45, and set it to ON if

you would like to enable this feature. The default setting is off.

VOX (VOX): Menus 46-49

VOX, or Voice-Operated Transmit, allows you to transmit by simply speaking into the microphone. With VOX enabled, you won't need to press the PTT key to enable the transmitter. Use Menu 46 to turn VOX ON or OFF. The default is OFF.

VOX S (Sensitivity):

VOX Sensitivity determines the level of sound that is needed for the VOX to key the transmitter. You should experiment with VOX Sensitivity to find a level that is appropriate to your voice but does not trigger on the presence of too much other background noise. Set Vox S using Menu 47. There are eight possible levels. The default level is 3.

VOX D(Delay):

VOX Delay determines the delay to stop transmitting after you finish speaking. Set the VOX Delay in Menu 48. Too short a delay will cause the transmitter to unkey too frequently. Delay can be set from 1 to 4 seconds; the default setting is 3 seconds.

VXB (VOX inhibited when receiving):

Set Menu 49 to ON if you do not want VOX active while the receiver is active. To avoid the receiver keying the VOX by mistake, it is probably a good idea

to leave this setting at its default ON state.

Wide and Narrow Bandwidth Set (WidNar): Menu 50

You can set the channel bandwidth to “WIDE” or “Narrow” using Menu 50. Set this according to your country or radio service regulations. The default setting is WIDE.

User-defined Keys Menu

As previously mentioned the P1, P2, P3, and Menu keys are user programmable. While the short press of the M key can only be changed in the programming software, the P1, P2, and P3 keys can be programmed using Menus 24-29.

Each of these keys has two programmable functions, accessed by a short press (press and release) or a long press (Press and hold for 1.5 seconds). Each of these functions is set in one of the programmable key menus.

Note: If you would like to change the hold time for Long Press, you may do so using the programming software.

You may set any of the programmable keys to perform the following functions:

OFF

If a shortcut key is disabled, it is not usable unless

Wireless Change Frequency is enabled. Please refer to Page 47 for details.

FM (FM)

Setting a shortcut to FM toggles the FM broadcast radio on or off.

Channel UP (UP)

Setting a shortcut to Channel UP, channel would be plus one more when press the shortcut key.

Note: Channel UP can only set as short press.

Channel Down (DOWN)

Setting a shortcut to Channel DOWN, channel would be decreased one more when press the shortcut key.

Note: Channel DOWN can only set as short press.

Monitor Momentary (MONI)

Setting a shortcut key to MONI will allow you to temporarily open the receiver squelch, in order to hear a weak signal that cannot break through at the current squelch setting. Pressing MONI will open the receiver's squelch, and releasing will close it again.

Note: MONI can only be set as Long press.

Monitor Lock (MOLO)

Setting MOLO will open the squelch to allow you to listen for weaker signals. Pressing the MOLO shortcut will open the squelch, while pressing it again will close the squelch again. If MOLO stays active for more than 10 seconds, squelch will automatically close.

SQ OFF Momentary (SQM)

If the SQM shortcut is enabled, pressing it will disable any CTCSS or DCS squelch, allowing any signal to activate the receiver. Pressing this key will issue an audible alert indicating the feature is active. Pressing the key a second time will sound a different alert to indicate that the receiver is in its normal state.

Note: SQM can only be set as Long press.

Mute (MUTE)

When the Mute shortcut is enabled, pressing the Mute key will disable audio from the receiver's speaker. Press the key again to unmute the speaker.

Scan (SCAN)

Pressing the LOW shortcut will toggle the power level between HIGH and LOW power.

High/Low Power (LOW)

Pressing the LOW shortcut will toggle the power level between HIGH and LOW power.

Emergency (EMG)

The EMG key will sound an emergency alarm. When this alarm sounds, the indicator LED's will alternate between flashing red and green and "TX STOP" will display on the screen. This mode will remain in force until the PTT is pressed or the transceiver is powered down.

V/M Mode Switch (V/M)

The VM shortcut will toggle the B operation between VFO and MR mode.

DTMF Function (DTMF)

The DTMF shortcut will turn DTMF Mode on or off.

Call (Call)

The CALL shortcut will toggle the CALL function on and off.

Transmit 1750Hz (1750Hz)

The 1750Hz shortcut will transmit a 1750Hz burst

tone when pressed.

A/B Mode Switch (A/B)

The A/B shortcut will toggle between the A and B channel.

Talk Around (Talk)

The Talk Around shortcut turns Talk Around mode on or off.


Reverse Frequency (Reverse)

The Reverse shortcut enables or disables Reverse frequency mode.

Reset Menu


All Reset

All Reset resets the transceiver to all factory settings, leaving only the DTMF dial list untouched.)

To perform an All Reset, press the  key to turn the transceiver on. When the welcome screen is displayed, hold the M key for two seconds. The screen will display “Menu 0/ALL RES? “. Press the M key again and the screen will display “RESET”. Press the M key a third time, and the screen will display “Waiting”.

When the transceiver restarts, the reset is complete. Note: You may cancel the reset by pressing any key other than the “M” key when the “Reset?” prompt appears.

Function Reset

To perform a Function Reset, press the  key to turn the transceiver on. When the welcome screen is displayed, hold the M key for two seconds. The screen will display “Menu 0/ALL RES? “. Use the microphone’s UP/Down keys, or the knob to select “Menu 1 FUN RES”. Press the M key again and the screen will display “RESET”. Press the M key a third time, and the screen will display “Waiting”. When the transceiver restarts, the reset is complete. Note: You may cancel the reset by pressing any key other than the “M” key when the “Reset?” prompt appears.

Programming Operation

Lease Function

The Lease function can be set to limit how long a transceiver can be used. When the Lease Time expires, the transceiver will no longer operate, and the indicator LED will light continuously red. At this point, the user may only turn the transceiver power off. This function can only be reset with programming software.

Remaining time: You can set the transceiver to display the time remaining for the transceiver lease. If the Lease function is enabled using the programming software, the startup display can be set to display the remaining lease time.

Lease Time: You may set the transceiver Lease Time through the programming software. The valid Lease Time range is from 1 minute to 255 days 24 hours, and 59 minutes.

Wireless Change Frequency

Wireless Frequency Change is a feature that allows the transceivers to be programmed with new frequency information remotely. In other words, one master transceiver can program several deployed transceivers in the field by sending the appropriate

commands over the air.

Consider the following example:

A team bought 10 transceivers. One is used at the home office, while the other nine are installed in company cars. The home office needs to add a new communications channel to all deployed radios. Thus, the staff at the home office may use Wireless Frequency Change to program all the radios remotely without having to do them one at a time and without having to recall them back to the home office for programming.

Refer to details as following:

- 1) First, all transceivers should have Wireless Frequency Change enabled on all 10 transceivers ahead of time. This is accomplished using the programming software. Additionally, set a 1-15 digit activation code using DTMF digits 0-9 plus *, #, A, B, C, and D.
- 2) Program one of the programmable shortcut keys to OFF, so that it can be used to access the Wireless Frequency Change function.
- 3) The transceiver at the home office should be programmed as the “master” transceiver. It should also have a DTMF microphone.
- 4) The new channel should be programmed into one of the master transceiver’s 199 channels. For our

example, we'll program it into Channel 03.

5) When all transceivers are prepared for the changes, the change can be accomplished manually or automatically:

- a), Manually change frequency: Alert the other nine transceivers that a frequency change is ready to be programmed. The operators of those nine transceivers would press the shortcut key to enable the transfer. An icon "**F**" will appear acknowledging that the transceiver is ready for programming. The master radio would initiate the change using the instructions in Step 6 below. Once programming is complete, the icon "**F**" will disappear. If it does not disappear, programming was not successful. Once programming is successful, the remote users can switch to the newly programmed channel.
- b), Automatically changing frequency: Alert the other nine transceivers that a frequency change is ready to be programmed. The master transceiver then sends the Wireless Frequency Change Enable code. When this is received, an icon "**F**" will appear to acknowledge the remote transceivers are ready for programming. The master radio would then initiate the change using the instructions in Step 6 below. Once programming is complete, the icon "**F**" will disappear. If it does not disappear, programming was not successful. Once programming is

successful, the remote users can switch to the newly programmed channel.

- 6) Changing operation: On the master transceiver, press the Call key (“A” on the DTMF microphone). “Send 01” appears on the screen. Rotating knob to select the channel you wish to program, such as Channel 003, then press the PTT key. Press the “A” key again. This will display “Send 03”. Press the PTT to send the second programming code. If the icon “**F**” disappears, programming was successful.

RX Inhibit/RXTX Inhibit

RX Inhibition: When RX Inhibit is enabled, the receiver will be inactive until the correct RX Enable code is received. While the transceiver is in RX Inhibit mode, pressing the PTT key will also produce an error tone.

RXTX Inhibition: When RX/TX Inhibit is enabled, the transceiver will remain completely inactive; it will neither receive nor transmit until the correct RX/TX Enable code is received. If you attempt to transmit while RX/TX Inhibit is in force, the transceiver will not indicate transmission, and it will produce an error tone.

RX inhibit and RXTX inhibit And Reactivate

Codes: These codes are up to 15 characters long, using 0-9, A-D, * and #.

To activate RX Inhibit or RX/TX Inhibit, use the programming software to enable the appropriate settings and assign the appropriate Inhibit and Reactivate codes. You can then send the Inhibit or Activate codes using another transceiver that has DTMF capability.

Note: If “Activation Enable” hasn’t been checked, the transceiver cannot be activated over the air with a reactivation code. In this case, it can only be reactivated through the programming software.

Setting Transmission Limits Per Minute

To prevent users from transmitting too often and potentially disrupting communications, you can limit the number of transmissions allowed during one minute period. Set this from 0 (No limit) to 255 in the programming software. If a limit is set and that limit is exceeded, the transmitter will issue an error tone and will not transmit until the timer resets.

Maintenance

Base Knowledge

This transceiver has been strictly and carefully calibrated and tested at the factory to ensure that it meets our stated specifications. Please refer any service issues to authorized repair facilities. Any tampering, user performed maintenance or adjustment of the transceiver will void your warranty. Please refer any service or maintenance concerns to authorized dealer.

Cleaning and Maintenance

- 1) Handle this equipment with care. Do not carry the transceiver by its power cable, microphone, or antenna.
- 2) Use a soft, clean, dry cloth to clean the transceiver.
- 3) When storing the transceiver, avoid temperature extremes of heat or cold. Extreme temperatures may shorten the life of the transceiver.
- 4) After prolonged use, the transceiver may require cleaning. Use only mild detergents. Do not use any corrosive or harsh chemical cleaners. Using alcohol, oil or spray chemical agents may damage the transceiver casing.

5) Please use only approved antennas. Unauthorized antennas or modified accessories could damage the transceiver or violate regulations governing RF devices.

6) Please back up all settings and programmed data from your transceiver before sending it in for repair.

7) If your transceiver is defective or develops a problem, please send it only to authorized service center. Please contact your local dealer for assistance.

We strived to write content of the manual accurately and completely, but errors and omissions may still exist. We do not assume any responsibility. We keep right to change product design and specifications at any time. As technology develops, design and product specifications are subject to change without notice.

Specification

Single Band	VV-808SU:UHF/VV-808SV:VHF
TX Frequency	400~470MHz/136~174MHz
RX Frequency	400~470MHz/136~174MHz 87.5-108MHz
Channel Capacity	199
Output Power	4W/10W
Operation Mode	Half-Duplex
Dimension(L*W*H)	120×90×40mm
Weight	275g
Modulation Limitation	≤±5KHz
Spurious Radiation	60dB
TX Current	1A/1.8A
Frequency Stability	±2.5PPM
Rx Sensitivity	<0.18μV
Modulation Type	F3E
Audio Power	≥400mW
Standby Current	78mA(Power Saving mode is 30mA)
Rated Voltage	13.8V

