

ABRITES

Commander for

PEUGEOT CITROEN

User Manual

Version:

1.3

issued by: Abritus 72 Ltd.

List of Revisions			
Date	Chapter	Description	Revision
19.Oct.2010	ALL	First version of the document.	1.0
22. Oct.2010	1	Added information for 25-to-25 pin adapter	1.1
	2.1	Clear Fault log	1.1
15.May 2010	2.2.3	Chapter removed	1.2
	ALL	Updated for PSA Commander 5.9	1.2
05.June.2013	ALL	Updated for PSA Commander 6.2	1.3

CONTENTS

1 INTRODUCTION.....4

2 VEHICLE DIAGNOSTICS WITH “ABRITES COMMANDER FOR PEUGEOT / CITROEN”5

2.1 STANDARD DIAGNOSTICS.....6

2.2 SPECIAL FUNCTIONS.....9

2.2.1. READ SECURITY CODE9

2.2.2. KEY LEARNING.....13

2.2.3. ENGINE CONTROL UNIT16

2.2.4. BSI EXCHANGE17

3 SUPPORT.....18

1 INTRODUCTION

“ABRITES Commander for PEUGEOT / CITROEN” is a Windows PC based professional diagnostic software for vehicles from the PEUGEOT / CITROEN group. With the help of this software you can perform complete diagnostic operations of all CAN-based vehicles from the PEUGEOT / CITROEN group, which are in most cases unsupported from the producer diagnostic testers. The “ABRITES Commander for PEUGEOT / CITROEN” provides also standard diagnostics (read faults, erase faults) for PEUGEOT / CITROEN vehicles.

This user manual covers the functionalities of “ABRITES Commander for PEUGEOT / CITROEN” version 6.2

Diagnostics is performed via the OBD-II connector . Diagnostic interface currently supports K-Line and CAN-BUS interface.

Depending of the hardware revision of the Abrates interface used, it might be necessary to use additional 25-to-25 pin adapter that allows older interfaces to perform diagnostics on peugeot/citroen cars. If the Commander detects **only** Engine Control unit via CAN you probably need this adapter so bus please contact abritus72 for delivery;

2 VEHICLE DIAGNOSTICS WITH “ABRITES COMMANDER FOR PEUGEOT / CITROEN”

The “ABRITES Commander for PEUGEOT / CITROEN” consists basically of two parts:


- Standard diagnostic functions like reading/clearing fault codes (DTC), scanning for available devices in the car.
- Special functions like Reading Security Code (PIN), Key Learning, Odometer Correction and Dump Tool.

Supported vehicles by “ABRITES Commander for PEUGEOT / CITROEN”

- Peugeot 1007
- Peugeot 207
- Peugeot 208
- Peugeot 307 2005+
- Peugeot 308
- Peugeot 3008
- Peugeot 407
- Peugeot 508
- Peugeot 5008
- Peugeot 607 2006+
- Peugeot 807 2006+
- Peugeot Partner 2008+
- Peugeot Expert 2007+
- Citroen C2
- Citroen C3 2005+
- Citroen DS3
- Citroen C4
- Citroen C4 Picasso
- Citroen C4 II
- Citroen DS4
- Citroen C5 2007+
- Citroen DS5
- Citroen C6
- Citroen Berlingo 2008+
- Older vehicles with EDC15 engine ECU

2.1 Standard Diagnostics

From the main window of the program you can see a complete list of all supported device and a four tabs below it – for scanning units, clearing DTCs, vehicle selection and special functions.

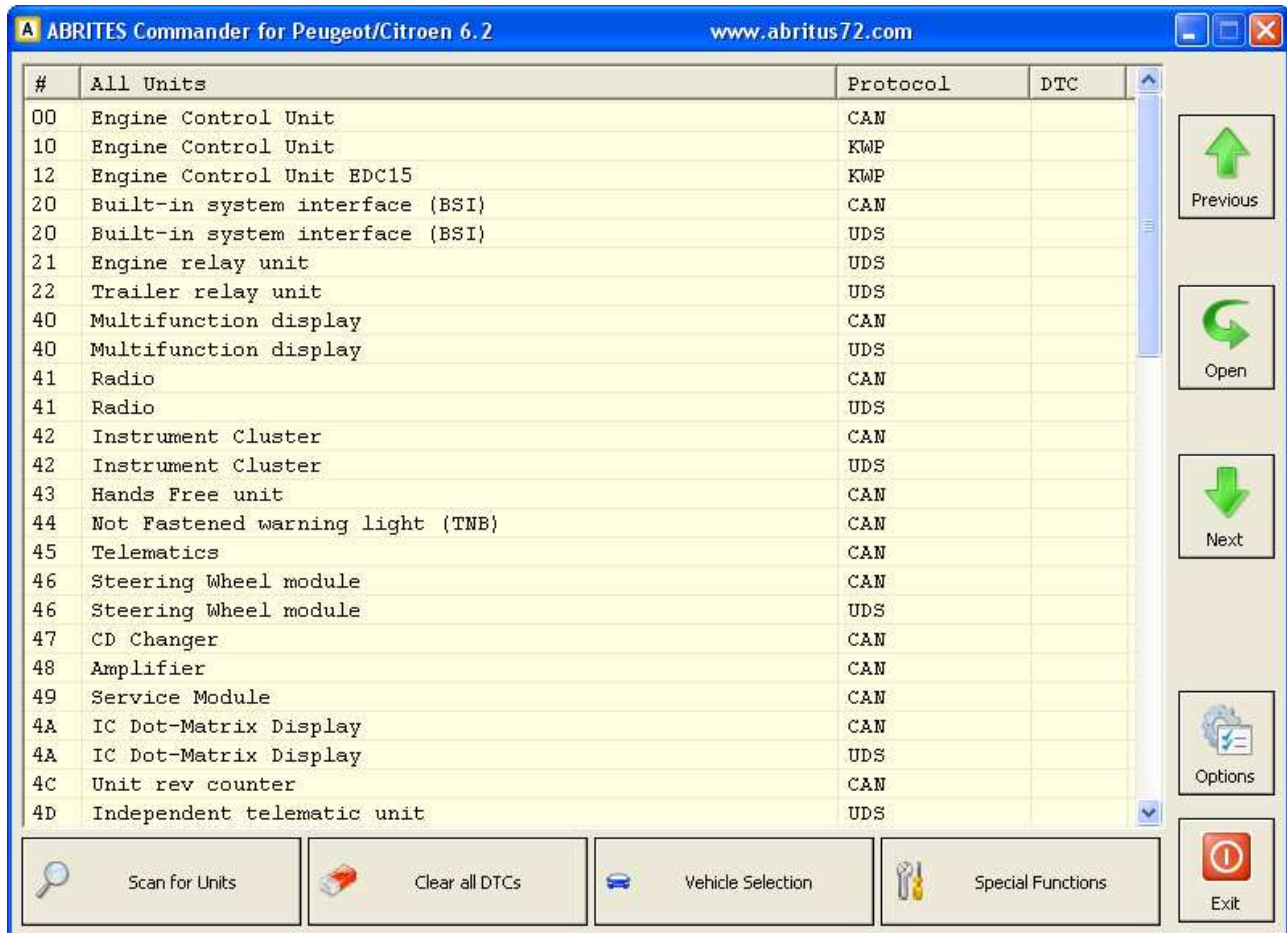

If you want to filter only the devices specific for a defined vehicle you can select a car brand i.e. Peugeot or Citroen and a specific model of this brand. This will show you all the devices that might be present in the selected car. This doesn't mean that all of them are really available – it depends on the level of equipment of the current car and the extra options ordered by the customer.

If you want to filter only the devices present in the current vehicle – click “Scan for Units” button. After a while the device list will be populated only with present ECU's with DTC's retrieved for each of them. In the vehicle context drop down box is visible < Scan Result >. You can return to all units view by selecting < All Units > or filter the specific for a defined model units by selecting model directly.

Clicking the button Clear All DTC's will erase all stored faults in all units if possible.

If you want to find specific device by name click “Filter” button and type part of the device name in the input dialog. As a result the list of devices will have only those of the devices that contain the keyword entered. In this case vehicle context is switched to < Filtered >, so if you want to return to all units view or select supported units for a specific car you have to select it through vehicle context drop down box.

Settings can be adjusted by clicking “Options” button from the main program window:

Settings

General CAN

Device Scanning: Current vehicle context

Debug Logging: Enabled

Keep Log Files: 3 Months

☐ Save working session on exit

OK Cancel

Device scanning: “Current vehicle context” search units only specific for the currently selected vehicle, “All devices/on CAN/on K-Line” search available units in all possible units.

There is an option for enable/disable log files and selection of the period for their preservation. Second tab contains CAN resistor selection that in general don't have to be changed

Settings


General CAN

MS CAN Resistor: 120 Ohm

HS CAN Resistor: 120 Ohm

OK Cancel

If you want to connect to a specific device just double click on the device from the list. A dialog with identification information is shown.

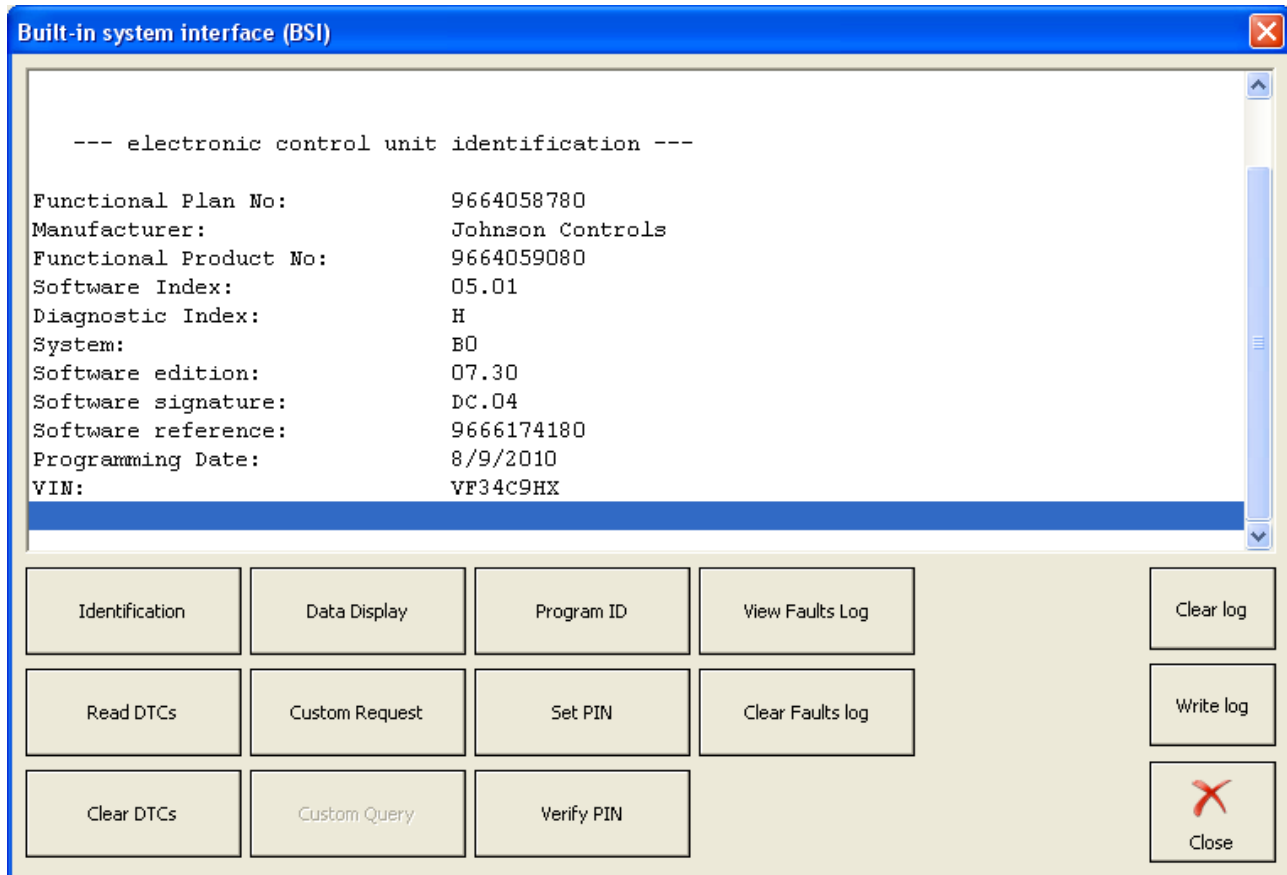

Available actions are:

- retrieving identification again
- reading/clearing DTC's
- sending custom messages
- data display – available only for BSI, Engine ECU and dashboards

In case of BSI device there are a few more actions:

- programming ID (VIN)
- setting PIN - setting a new pin is possible only if you had previously entered/verified a valid PIN or in case of a virgin device
- verifying PIN code – checks if the provided Pin code is the same as the PIN code stored in the car
- View Faults log – display all errors stored in vehicle (not for the UDS BSI)
- Clear Faults log – erase fault log stored in the BSI (independent from DTC's) (not for the UDS BSI)

In case of Engine Control Unit there is one more button:

- History – display all stored operations of clearing the DTCs

2.2 Special Functions

The appropriate special function is opened by selecting it from the list box and double-clicking on it, or by selecting it and then pressing the “Open” button.


2.2.1. Read Security Code

Security Code (PIN) is 4 symbols code that is requested for Key learning and vehicle configuration modifications. In order to start this special function, click on “Read Security Code” icon in special functions section.


After ReadSecurityCode dialog is opened, select the vehicle and the unit. If you're not sure which is the car model or there are errors retrieving the PIN – set it to “< AUTO DETECT >”. If you're not sure about the unit or there are errors while retrieving the PIN leave it to “< AUTO DETECT >”.

The image shows a software dialog box titled "Read Security Code" with a blue header bar and a red close button in the top right corner. The dialog has a light beige background. It contains two dropdown menus: "Vehicle model:" and "Unit:", both currently set to "< AUTO DETECT >". Below these is a button labeled "Automatically recognize pin code from the vehicle". Underneath that is a text label "Security code:" followed by an empty rectangular input field. At the bottom right, there are two buttons: "Read" (highlighted with a dashed border) and "Close" (which has a red 'X' icon above the text).

Click on the Read button and wait till the operation finish.

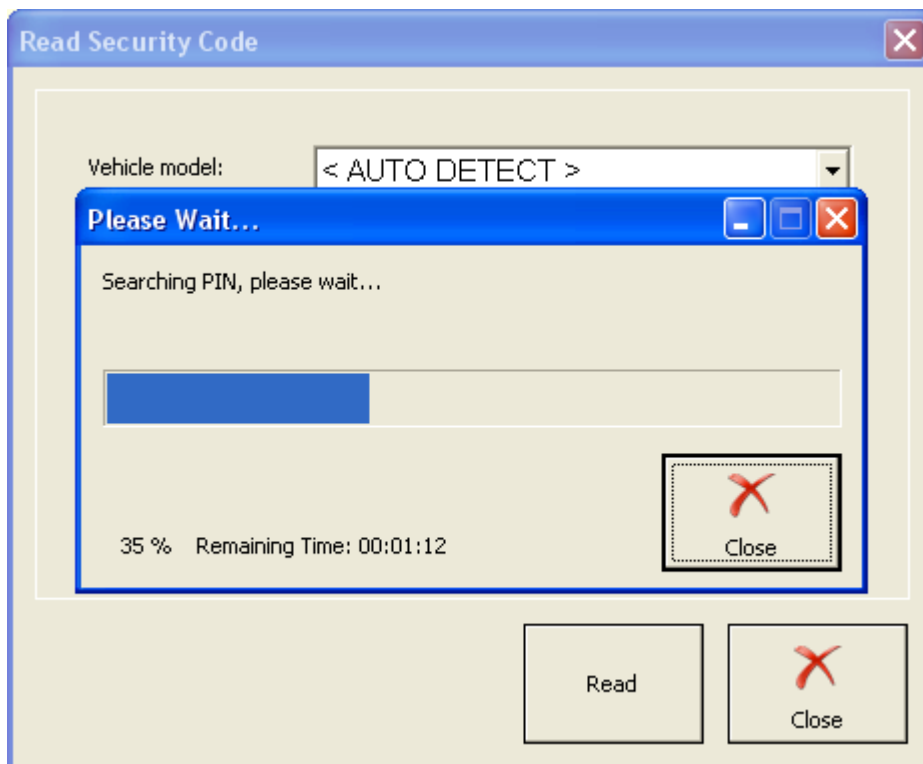

Note that PIN search always starts with checking the PIN reading capabilities that may take up to 15 minutes. Some BSI's require some additional specific operations to be performed – this is “Working on BSI” phase – up to 5 minutes. At the end the following message should appear:

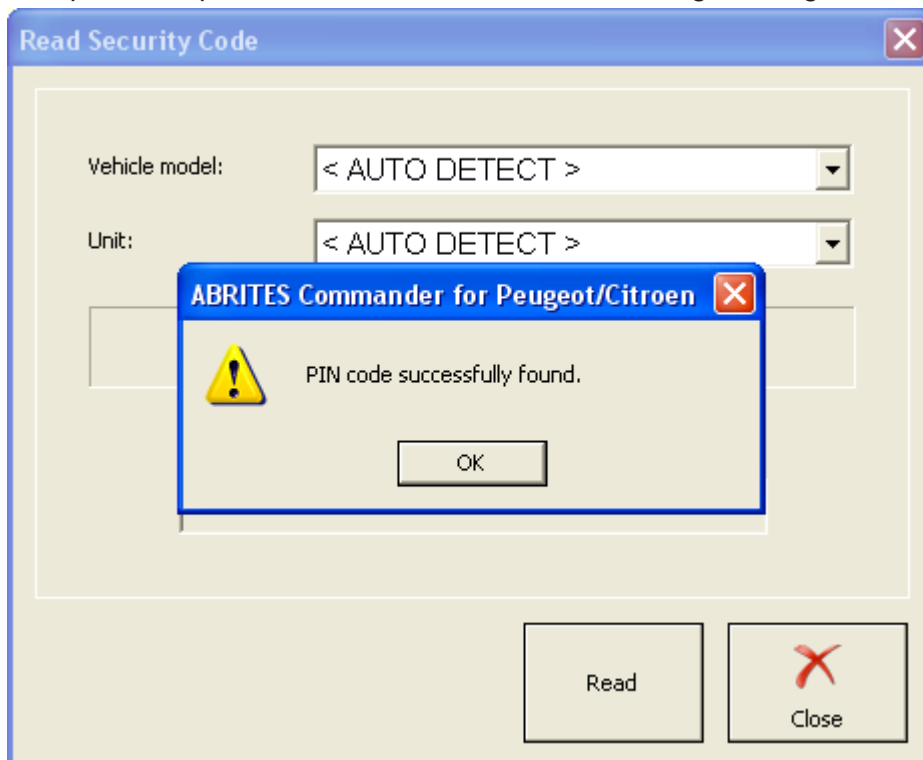

Click OK to see the PIN code in the field Security Code:


It's possible to have an error message that the PIN code can't be retrieved or the current BSI is not supported. In such a case please contact abritus72 via mail support@abritus72.com.

If the procedure has been interrupted for example by:

- OBD cable disconnection
- Low vehicle battery
- Low computer battery
- PC/Windows hang or/and restart
- Program crash
- e.t.c

The car may be left in not operational state. In this case please restart the procedure – when it finishes successfully the vehicle will get into operational state. If the vehicle gets into operational state but procedure finish with an error you can try repeating the procedure or also contact abritus72 via mail support@abritus72.com.


During PIN code retrieving the vehicle gets into service mode in which the front wipers and low beams are turned on. This can draw the vehicle battery faster, In case of poor battery you could remove the front wipers fuse and the fuse for the front beams before starting the procedure. These fuses are located in the front fuse compartment and are probably different for each model. Here is an example of Peugeot 308 fusebox:

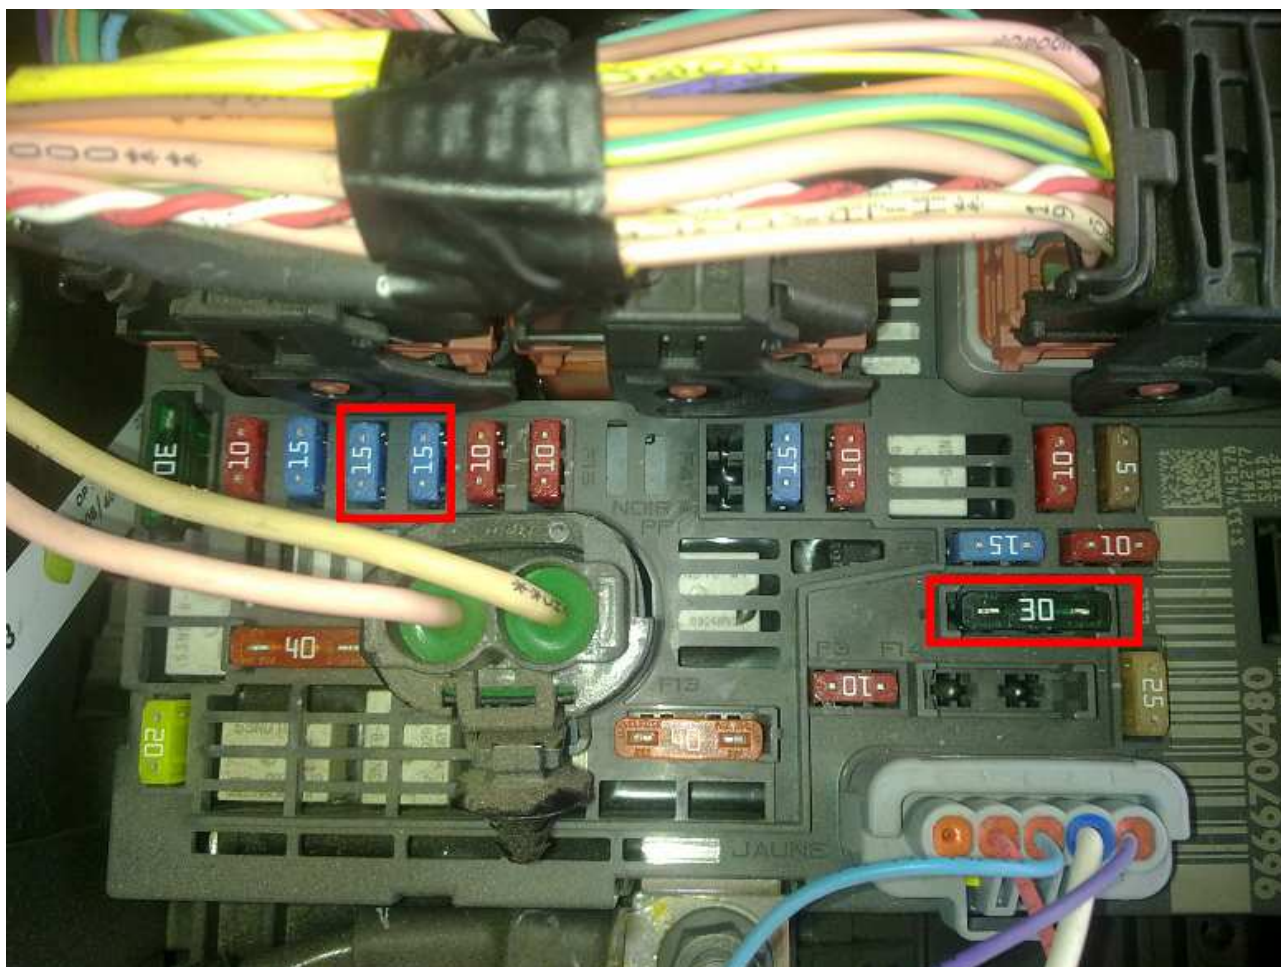

- Front left/right low beams – two 15A fuses
- Front wiper – 30A fuse

2.2.2. Key Learning

Key learning function can be used only if PIN code is already known. If ReadSecurityCode operation has previously completed correctly, KeyLearning procedure can take the already retrieved PIN code, otherwise you have to enter the PIN code manually. If you retrieved PIN code for more than one vehicle the correct PIN code will be recognized and selected.

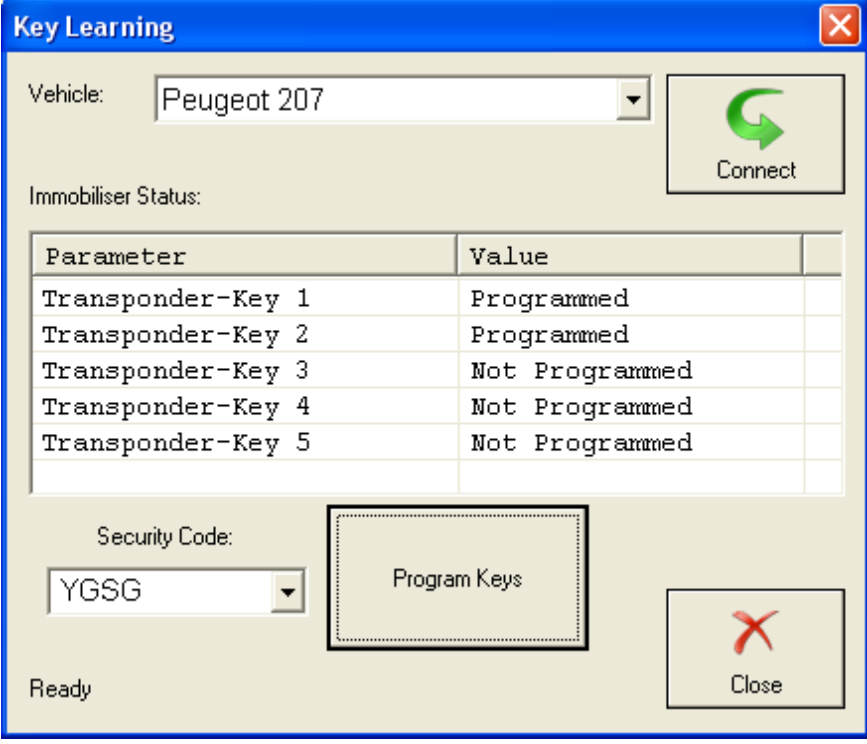


The 'Key Learning' dialog box features a blue title bar with a close button. It includes a 'Vehicle' dropdown menu set to 'Peugeot 207', a 'Connect' button with a green circular arrow, and an 'Immobliser Status' section. This section contains a table with two columns: 'Parameter' and 'Value'. The table lists five transponder keys, with the first two marked as 'Programmed' and the last three as 'Not Programmed'. Below the table is a 'Security Code' dropdown menu set to 'YGSG'. A 'Program Keys' button is highlighted with a dashed border. At the bottom, there is a 'Ready' status indicator and a 'Close' button with a red 'X'.


Parameter	Value
Transponder-Key 1	Programmed
Transponder-Key 2	Programmed
Transponder-Key 3	Not Programmed
Transponder-Key 4	Not Programmed
Transponder-Key 5	Not Programmed

Start the procedure and follow the on-screen instructions. Please prepare all the keys to be learned before the procedure! Generally key learning is based on setting ignition ON with ALL keys that have to be learned.


By clicking the button "Program Keys", the key learning procedure is started and a dialog for key numbers is shown – please enter the number of the keys that have to be learned.

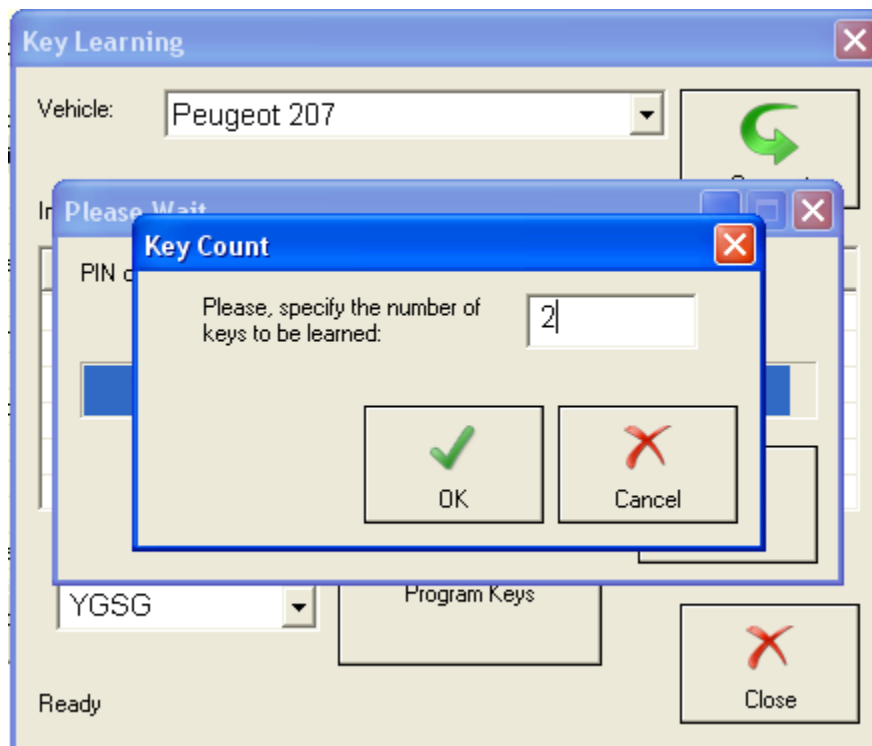

After entering the number of keys to program and click OK you have to insert the first key and switch ON the ignition. This has to be done within 15 seconds. If it's not done within 15 seconds a message will appear and you will have an opportunity to do that again.

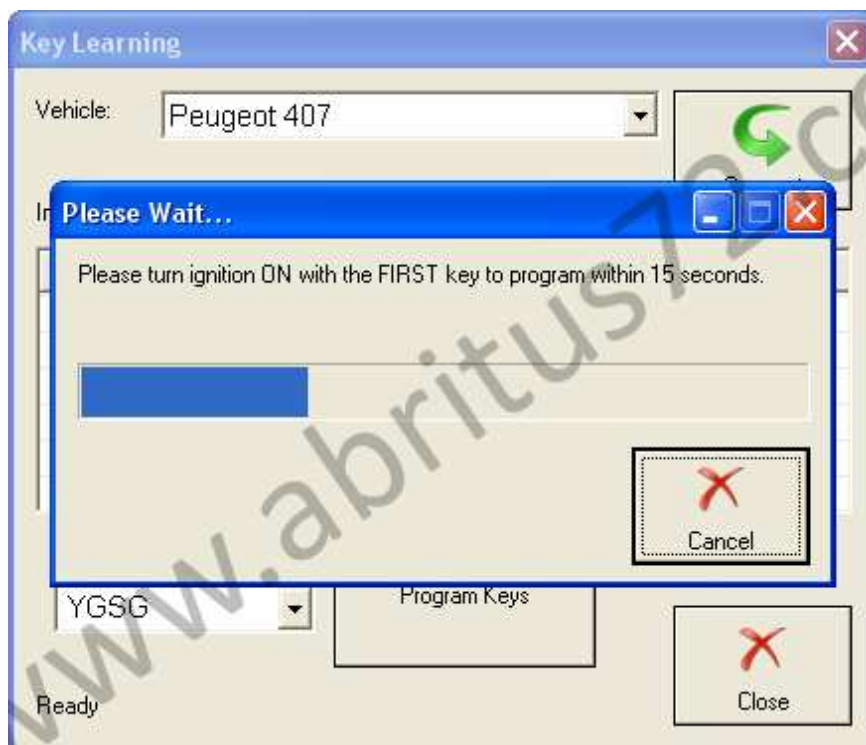

Completing the procedure for the first key finish with the following message:

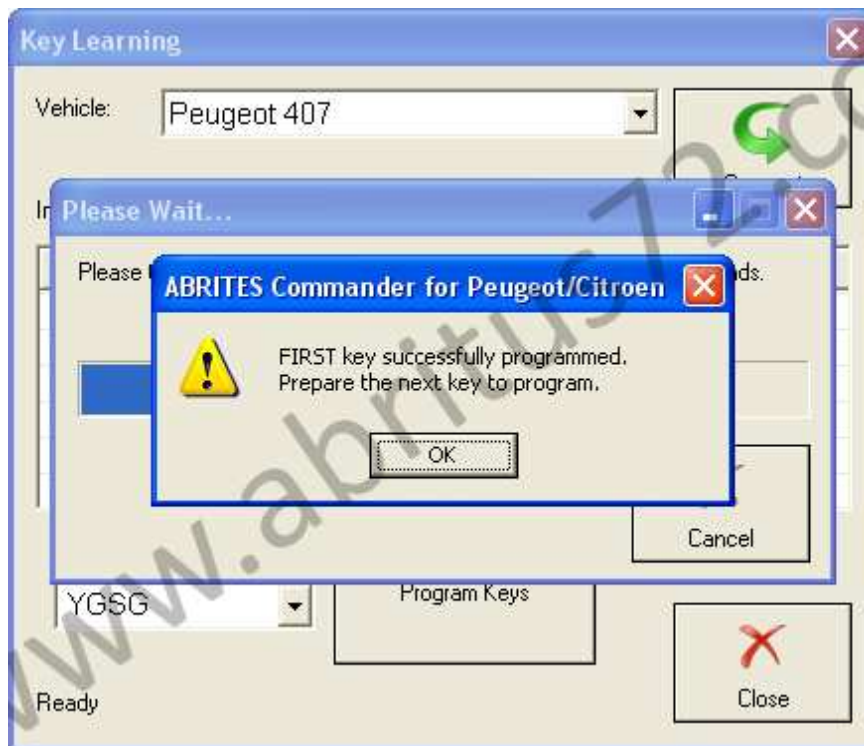

Click OK to continue with the next keys to program. After programming of all entered keys complete, the following message appears:




Now you can try if all the keys will start the engine.

2.2.3. Engine Control Unit


This dialog is the same as in PSA Commander 2.0 and gives you the following options:

- Read/Write EEPROM of EDC15 Engine ECU and make Immo OFF, AfterSales and Edit Service List
- Read/Write Flash of EDC16 both CAN and K-Line variants are supported
- Read/Write Flash and Eeprom of SID80x series, edit Service List, display/change PIN

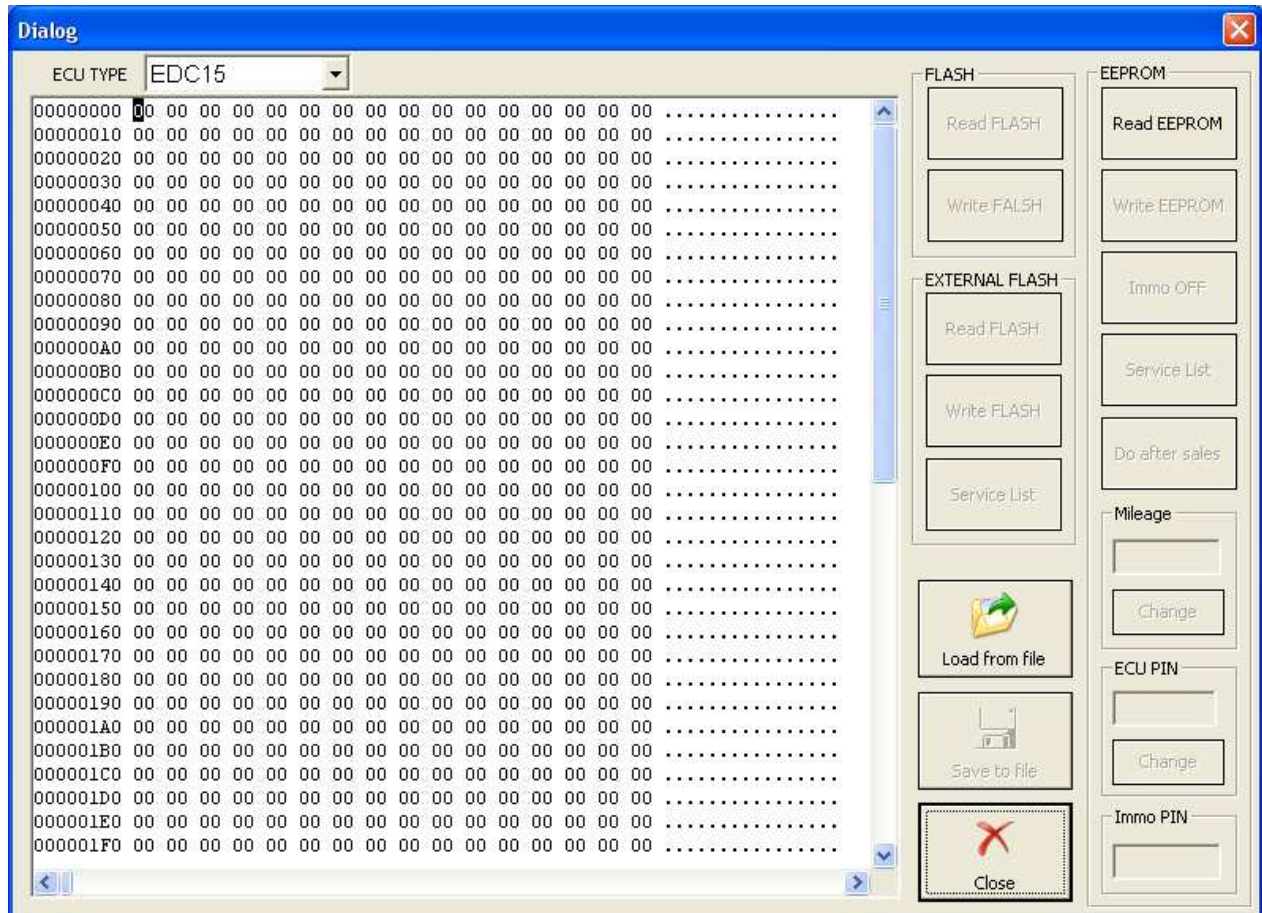

2.2.4. BSI Exchange

This dialog allows you to read the whole content of the one BSI (JCI or Valeo CAN) and transfer it to the new one. It is very important to use the same hardware type of the replacement BSI. The Valeo BSIs are two types - the old one is thick, while the new one is thin, so they can't be mistaken. The JCI BSIs are also two types, but they can't be identified by their exterior, because both are thin. In this case take a look at the sticker for a HW version:

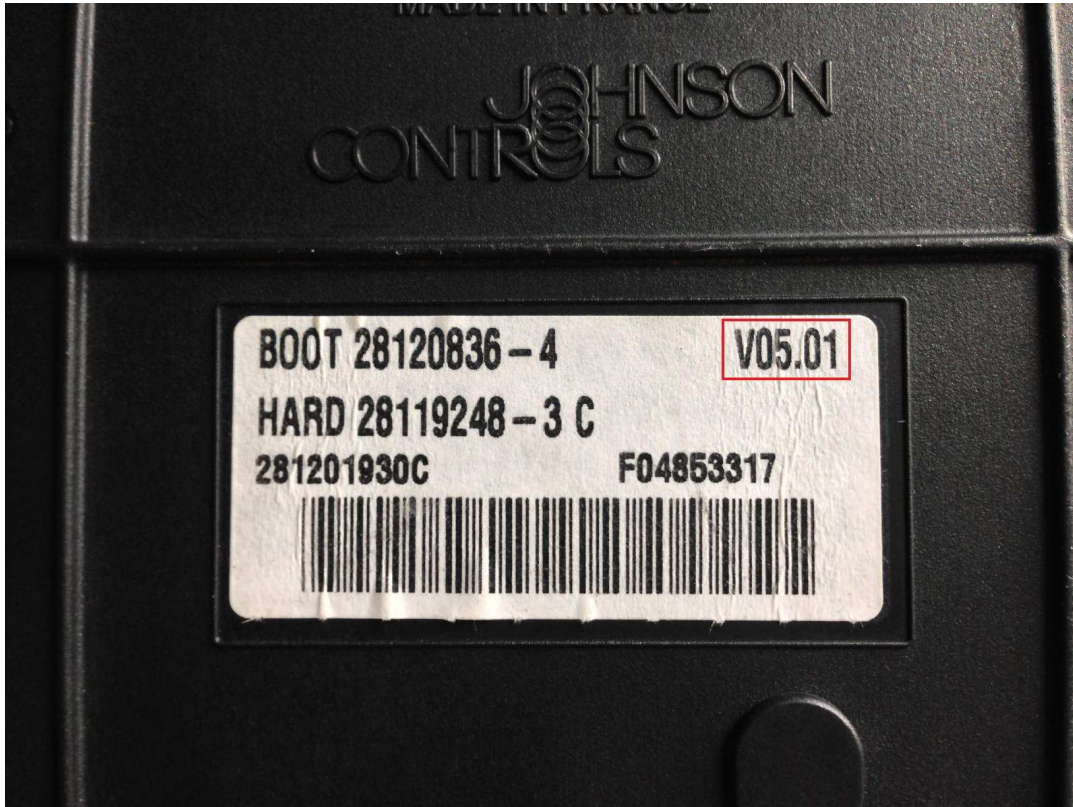

The BSI from the picture is V5.01 and can be found in vehicles from 2008 to now. The older vehicles have HW version V2.00 and are typical from 2004 to 2008.

Note that after a successful BSI exchange the keys have to be learned again in order to start the engine!

3 SUPPORT

For support, please write an email with a detailed explanation to support@abritus72.com .

Be sure to check the News Section at our website frequently to be informed about all the latest updates: www.abritus72.com .