




## **GT 01W Tangram with GT42 Modules (CI Simulcrypt)**



**GT 01 *WISI* Tangram chassis**

## GT42 WISI Tangram CI module

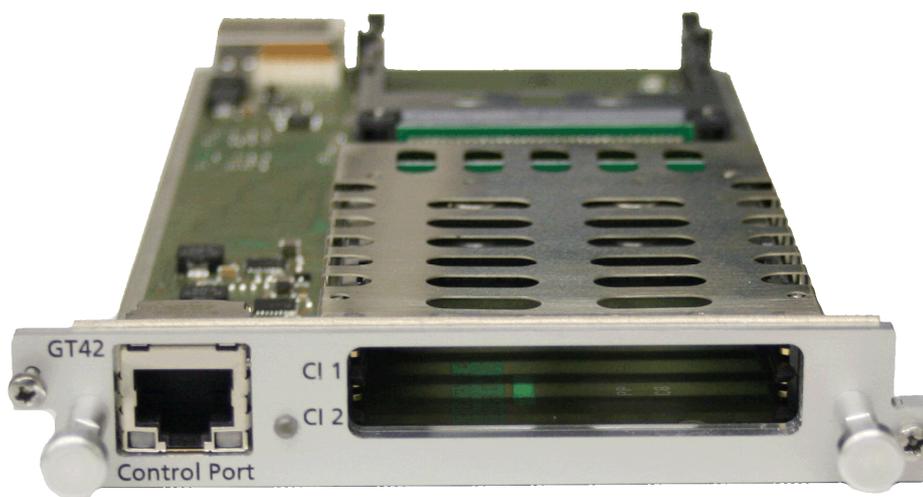

### Features:

The GT42 module is part of the Tangram product portfolio.

WISI Tangram is an FPGA technology based Headend for use in FTTx and HFC networks.

The Tangram platform shows very high density and is highly flexible for all kinds of networks. WISI Tangram has a fully redundant concept (n+1, 1+1).

- Descrambling + MUX function
- Multichannel Decryption
- Up to 4 CAM modules per GT42
- Descrambling of up to 4 x MPTS per Module
- 20 x MPTS or SPTS output
- Modification of PSI /SI- Tables
- Block pid / pid remapping
- User friendly configuration via standard Web browser
- Low electrical power consumption

This page is intended to be empty



## Table of contents

1	Safety Instructions.....	6
1.1	ESD Protection .....	6
2	Technical Data / Mechanical Overview .....	7
2.1	GT42 Module Front View .....	7
3	Installation, Configuration and Maintenance .....	8
3.1	Module Installation .....	8
3.2	Tangram Front IP Ports.....	10
3.2.1	IP / Ethernet Ports at the Front of Tangram .....	10
3.3	Tangram Hardware : RF / Video Modules Slots.....	11
3.3.1	Chassis Slots GT01 .....	11
3.3.2	GT42 Modules Ports .....	11
3.4	Configuration of Tangram .....	12
3.4.1	The Tangram Web UI (GUI).....	12
3.4.2	Connecting to the Default Management IP Address: .....	13
3.4.3	GT11 SETTINGS Tab: Changing the IP Address to Your Own Network .....	13
3.4.4	IP / Ethernet Ports Groups (using internal VLAN IDs).....	14
3.4.5	GT11 SETTINGS Tab: Throughput measurement.....	15
3.5	Tangram GT11 / 12 Switch Modules / Main Control Page .....	16
3.5.1	Main Status GT11- Control .....	16
3.5.2	Maintenance Tab / Future GT11 Main Updates & Upgrades .....	16
3.6	Tangram GT11 / 12 Internal Switch / Control Tab.....	17
3.6.1	Modules Tab on the GT11-Control .....	17
3.6.2	Module Status and Settings .....	17
3.7	Configuration of Modules .....	18
3.7.1	Connecting to the Modules .....	18
3.7.2	Adding Additional IP Addresses to the Modules .....	18
3.8	Tangram & SW Options .....	20
3.8.1	Connect to WISI Portal & Activating the Output Modules: .....	20
3.8.2	Serial Number / Linking to the Modules .....	20
3.8.3	Requesting Access to the wisiconnect.tv Portal.....	20
3.8.4	Login to the wisiconnect.tv.....	20

3.10	Registering Tangram Modules to the WISI Tangram Portal.....	21
3.10.1	Registering Modules .....	21
3.10.2	Downloading SW Options (entitlement file) to your PC.....	21
3.10.3	Uploading SW Options (Entitlement File) to your Tangram Module GT42.....	21
3.10.4	Using the IP Supporter Tool.....	21
3.11	Configuring Inputs.....	22
3.11.1	Defining / adding inputs .....	22
3.12	Service Decryption.....	23
3.13.2	Service Selection and Filtering .....	26
3.13.4	Adding and Removing Services to/from IP Outputs.....	28
3.14	Managing the Tangram Module .....	29
3.14.1	Add and configure Network interfaces .....	30
3.14.2	Setting up Common Interface .....	31
3.14.3	Setting up DATE AND TIME .....	33
3.14.4	Module Software and SW options (Entitlement) .....	34
3.14.5	Module maintenance .....	35
3.14.6	Factory reset & Backup / Restore .....	36
4.	GT42 Module Status Information .....	37

## Document Revision Information

Date finished	Document Rev.	GT42 SW Version	Description	Name
2012-12-06	1.48-1.49	1.1	First GT42 draft	KD
2013-01-11	1.50-1.53	1.1	Review Inputs, Updates	KD
2013-01-21	1.54	1.1	GT11 changes, Reviewed Inputs	KD



## **1 Safety Instructions**

### **1.1 ESD Protection**

This product contains electrostatic sensitive devices. These devices can be damaged or effectively destroyed by electrostatic discharge (ESD) during unpacking, installation, removal, storage, or shipment if incorrectly handled. Please note that discharge might go unnoticed by a user. Always take normal static precautions when handling the equipment!

## 2 Technical Data / Mechanical Overview

### 2.1 GT42 Module Front View



GT42 module view with the external CI slots 1 +2

### 3 Installation, Configuration and Maintenance

#### 3.1 Module Installation

The Tangram GTxx modules are single function modules. The modules are hot-swappable and can be plugged into the chassis from the back. On the front side of the Tangram chassis there are the switch modules, the power supplies and the fan tray. The power supplies and the fan tray are situated behind the panels. Power supplies and the fan tray can be replaced during operation.

The physical installation of GTxx modules, power supplies and fan modules into Tangram GT01 chassis is described in detail in the GT01 & GTxx Installation Quick Guides, please refer to them in case you have to insert or remove a module.



Quick Guide

GT 01W Tangram Basic unit





This page is intended to be empty



### 3.2 Tangram Front IP Ports

#### 3.2.1 IP / Ethernet Ports at the Front of Tangram

Tangram has up to 9x GigE ports at the front side, 5x RJ-45 100/1000T with GT11 and optionally an additional 4x SFP ports with GT12 at the upside position (Slot 8).



Tangram with GT11 Switch module (Slot 7)



Tangram equipped with GT11 & GT12 Switch modules

The numbering on Tangram ports is from down to up and from left to right, the first lower Port from the left ( "MAN" ) on GT11 is dedicated for out-of-band management.

---

**Networking**

**Management IPv4:** 
**Netmask:** 
**Gateway:**

**NTP-Server:**

---

**GT11 Port Group-Member settings:**

	RJ 45				
<b>Port :</b>	MAN	1	2	3	4
<b>Group ID:</b>		A ▼	B ▼	C ▼	A ▼

### 3.3 Tangram Hardware : RF / Video Modules Slots

#### RF Modules and Ports at the Rear of Tangram

##### 3.3.1 Chassis Slots GT01

Tangram has 6 module slots on the rear side.



Tangram rear view (Example)



The numbering of Tangram modules is always from down to up and from left to right, the first lower module on the left (seen from the back) is the first, second is above.

##### 3.3.2 GT42 Modules Ports




The numbering of slots on the CI slots is from up to down and from front to back.

## 3.4 Configuration of Tangram

### 3.4.1 The Tangram Web UI (GUI)

A standard web browser can be used to configure all settings on a Tangram chassis.

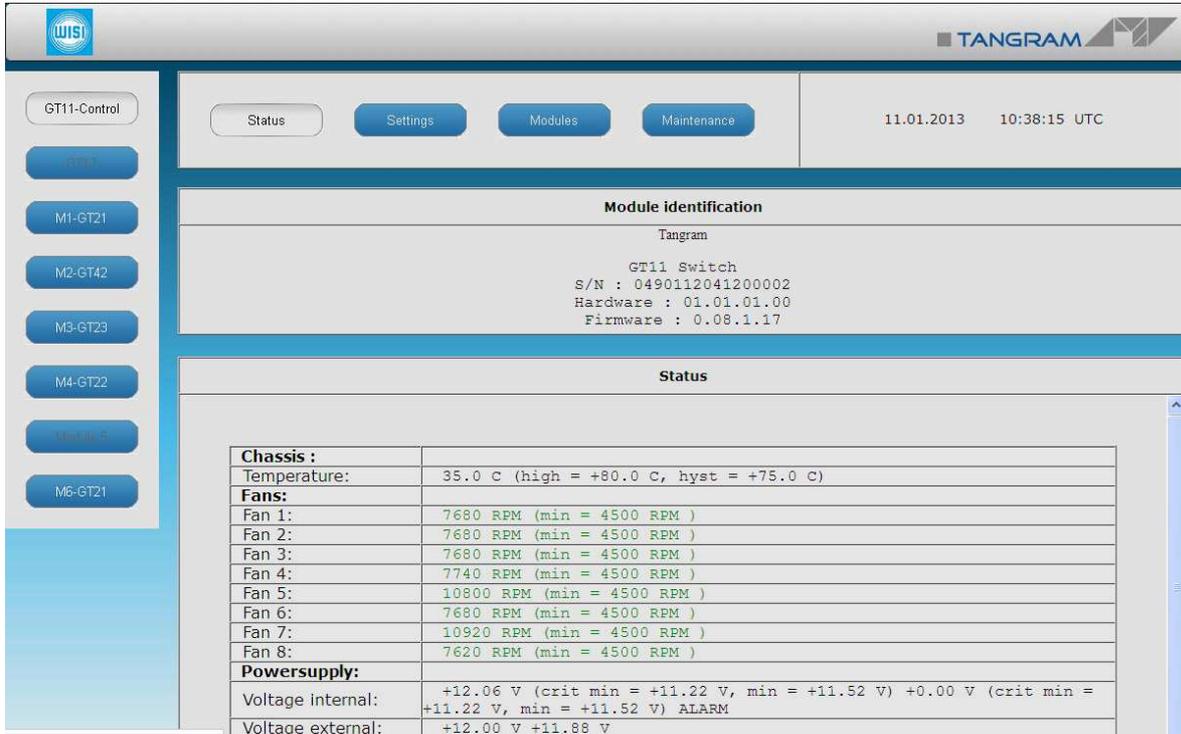

Chassis :	
Temperature:	35.0 C (high = +80.0 C, hyst = +75.0 C)
Fans:	
Fan 1:	7680 RPM (min = 4500 RPM )
Fan 2:	7680 RPM (min = 4500 RPM )
Fan 3:	7680 RPM (min = 4500 RPM )
Fan 4:	7740 RPM (min = 4500 RPM )
Fan 5:	10800 RPM (min = 4500 RPM )
Fan 6:	7680 RPM (min = 4500 RPM )
Fan 7:	10920 RPM (min = 4500 RPM )
Fan 8:	7620 RPM (min = 4500 RPM )
Powersupply:	
Voltage internal:	+12.06 V (crit min = +11.22 V, min = +11.52 V) +0.00 V (crit min = +11.22 V, min = +11.52 V) ALARM
Voltage external:	+12.00 V +11.88 V

In the left field there are the Modules / Slots identified by the Chassis / Switch.

#### General information about the web interface structure

The Tangram Web UI is designed to get a logical structure for the user/ installer, and an overview of the device via the side tabs and module details via the top tabs.

The **GT11-Control & GT12** tab on the left contain settings about the chassis & switch such as main Status, main networking Settings, the modules identified & maintenance.

The tabs below on the left side starting with **M1 (Module 1)** down to **M6 (Module 6)** are the links to the Tangram modules.

After choosing a module on the left – the UI is changing to the **Module view** – and the Tangram modules can be configured in detail.

The main interface while managing services within the modules is the modules **SERVICE MANAGEMENT** tab. Here, you will have an overview of the configured inputs and outputs, and you will also manage the service selection and decryption with GT42.

Before you start managing the services on the modules, you should add and configure the inputs and configure the outputs in their respective tabs.




### 3.4.2 Connecting to the Default Management IP Address:

#### Supported web browsers

The Tangram web interface is verified for Firefox version 9 and higher. Other web browsers might work, but the functionality cannot be guaranteed.


The Tangram default IP address on the left front management “MAN” port is 192.168.1.20 (GT11 SW rel. <0.8.1.5 : 192.168.0.11)

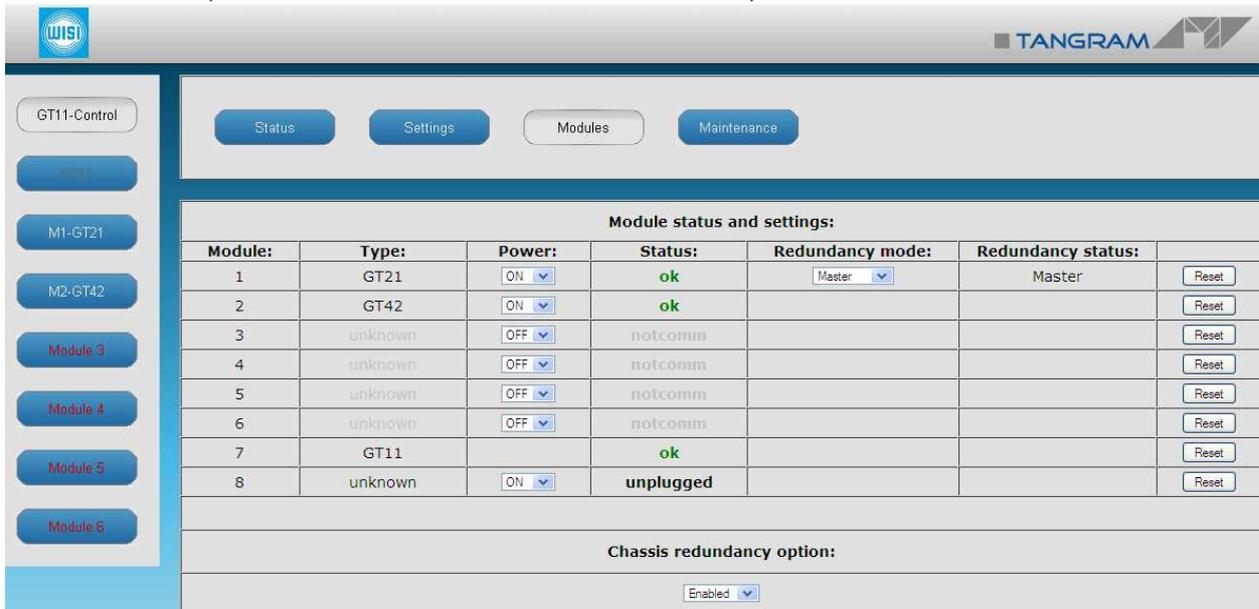

To access the Tangram Web- Interface please set the IP address on your PC or Network adaptor to an address in the same address subnet & use same network mask.

### 3.4.3 GT11 SETTINGS Tab: Changing the IP Address to Your Own Network

It is recommended to change the IP to a unique IP address in your network. Please change the IP address under SETTINGS / NETWORKING.

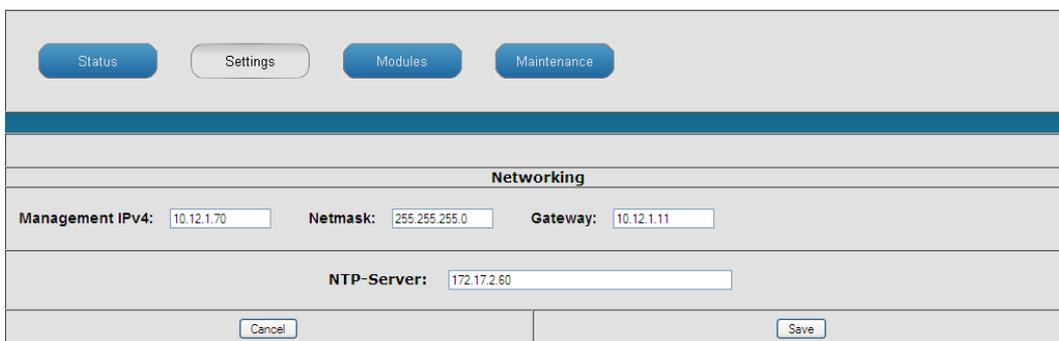

Within the Network configuration following data has to be filled in completely: The IP address, the Netmask and the default gateway. A known NTP Server source can be used for the time-of-day sync, useful for the logs timestamp. When finished with the changes press the “Save” button to activate the changes..



### 3.4.4 IP / Ethernet Ports Groups (using internal VLAN IDs)

There are **Port Groups** to easily distribute video traffic of above 1 Gbit on Tangram. GT11 Port Group A is representing internal VLAN ID=2 up to Group H with VID=9 and they are available to choose in a pull-down menu. All external ports on Tangram are untagged ports.

#### Tangram reserved Groups (VIDs 10-15 & 16):

- GT11 MGMT Port 0 using VID=1: Connection to GT switch and module web UI.
- Internal Management net uses VID=16: reserved for internal control.
- The additional internal Groups "I- M" (VID=10-15) are reserved for internal stream distribution on Tangram.

Port Group-Member settings on GT11:

**GT11 Port Group-Member settings:**

	RJ 45				
Port :	MAN	1	2	3	4
Group ID:		A ▼	B ▼	C ▼	D ▼

Port Group-Member settings on GT12:

**GT12 Port Group-Member settings:**

	RJ 45	RJ 45	RJ 45	RJ 45
Port :	1	2	3	4
Group ID:	E ▼	E ▼	E ▼	E ▼

GT11 & 12 Port Group- Member settings in the Main Setting Tabs

#### Settings in the example:

- GT11 Port 1: Connection to GT streaming net A (VID=2)
- GT11 Port 2: Connection to GT streaming net B (VID=3)
- GT11 Port 3: Connection to GT streaming net C (VID=4)
- GT11 Port 4: Connection to GT streaming net D (VID=5)
  
- GT12 Port 1: Connection to GT streaming net E (VID=6)
- GT12 Port 2: Connection to GT streaming net E (VID=6)
- GT12 Port 3: Connection to GT streaming net E (VID=6)
- GT12 Port 4: Connection to GT streaming net E (VID=6)



### 3.4.5 GT11 SETTINGS Tab: Throughput measurement

Below of the Group-Member settings you find the button: **Show current traffic throughput**

Buttons: Status, Settings, Modules, Maintenance

---

**Networking**

Management IPv4:     Netmask:     Gateway:

NTP-Server:

Buttons: Cancel, Save

---

**GT11 Port Group-Member settings:**

	RJ 45	RJ 45	RJ 45	RJ 45	RJ 45
Port :	MAN	1	2	3	4
Group ID:		<input type="text" value="A"/>	<input type="text" value="B"/>	<input type="text" value="C"/>	<input type="text" value="A"/>

Buttons: Show current traffic troughput, Cancel, Save

Sent & Received packets for each switch-port are shown, and Overflow packets and CRC errors can be checked per port:

Buttons: Status, Settings, Modules, Maintenance

---

**GT11 Front-Ports Traffic-throughput :**

Port:	Sent:	Received:	ReceiveFifoOverrun:	SendFifoOverrunOrCrcError:
1	50 Mbit/s	54 Mbit/s	0	0
2	0 Mbit/s	0 Mbit/s	0	0
3	0 Mbit/s	0 Mbit/s	0	0
4	0 Mbit/s	0 Mbit/s	0	0

---

**GT11 Module-Slots Traffic-throughput :**

Slot:	Sent:	Received:	ReceiveFifoOverrun:	SendFifoOverrunOrCrcError:
1	110 Mbit/s	0 Mbit/s	0	0
2	59 Mbit/s	52 Mbit/s	0	0
3	0 Mbit/s	0 Mbit/s	0	0
4	0 Mbit/s	0 Mbit/s	0	0
5	0 Mbit/s	0 Mbit/s	0	0
6	0 Mbit/s	0 Mbit/s	0	0



### 3.5 Tangram GT11 / 12 Switch Modules / Main Control Page

#### 3.5.1 Main Status GT11- Control

On the Tangram GT11-Control Status Tab you can monitor overall stats like Alarms, Fans, Power, Temperature, Serial Number and main SW- Version of the Tangram

Chassis :	
Temperature:	34.5 C (high = +80.0 C, hyst = +75.0 C)
Fans:	
Fan 1:	7680 RPM (min = 4500 RPM )
Fan 2:	7680 RPM (min = 4500 RPM )
Fan 3:	7680 RPM (min = 4500 RPM )
Fan 4:	7800 RPM (min = 4500 RPM )
Fan 5:	10800 RPM (min = 4500 RPM )
Fan 6:	7680 RPM (min = 4500 RPM )
Fan 7:	10860 RPM (min = 4500 RPM )
Fan 8:	7620 RPM (min = 4500 RPM )
Powersupply:	
Voltage internal:	+12.06 V (crit min = +11.22 V, min = +11.52 V) +0.00 V (crit min = +11.22 V, min = +11.52 V) ALARM

#### 3.5.2 Maintenance Tab / Future GT11 Main Updates & Upgrades

In future there may be additional functionality added to Tangram.

Firmware update or upgrade for the main switch are applied via the Maintenance tab.

IP addresses set and Group membership will survive a Firmware update as long as not stated differently in the release notes.

File to upload:



### 3.6 Tangram GT11 / 12 Internal Switch / Control Tab

#### 3.6.1 Modules Tab on the GT11-Control

Module:	Type:	Power:	Status:	Redundancy mode:	Redundancy status:	
1	GT21	ON	ok	Master	Master	Reset
2	GT42	ON	ok			Reset
3	unknown	OFF	notcomm			Reset
4	unknown	OFF	notcomm			Reset
5	unknown	OFF	notcomm			Reset
6	unknown	OFF	notcomm			Reset
7	GT11		ok			Reset
8	unknown	ON	unplugged			Reset

Chassis redundancy option: Enabled

#### 3.6.2 Module Status and Settings

You can check and set the Modules on the Modules tab. You can switch them on /off and you can reset them remotely. Additionally you can configure (n+1) Module Redundancy.



### 3.7 Configuration of Modules

#### 3.7.1 Connecting to the Modules


The Tangram modules can be accessed through the front management port by just choosing the module on the left column in the Web UI.

(to access all modules with the same Management IP-address through the switch, please make sure that the IP ports 80 to 86 are opened with your Firewalls )

#### 3.7.2 Adding Additional IP Addresses to the Modules

To receive and to send streams you need to setup streaming interfaces to the Internal Port. This can be configured through the NETWORKING tab.

As an option it is possible to put an unique IP management address to every module available through the Switch Management Port (e.g. Main address +1,+2, etc.). This can be used e.g. to get SNMP- traps directly from the Modules.

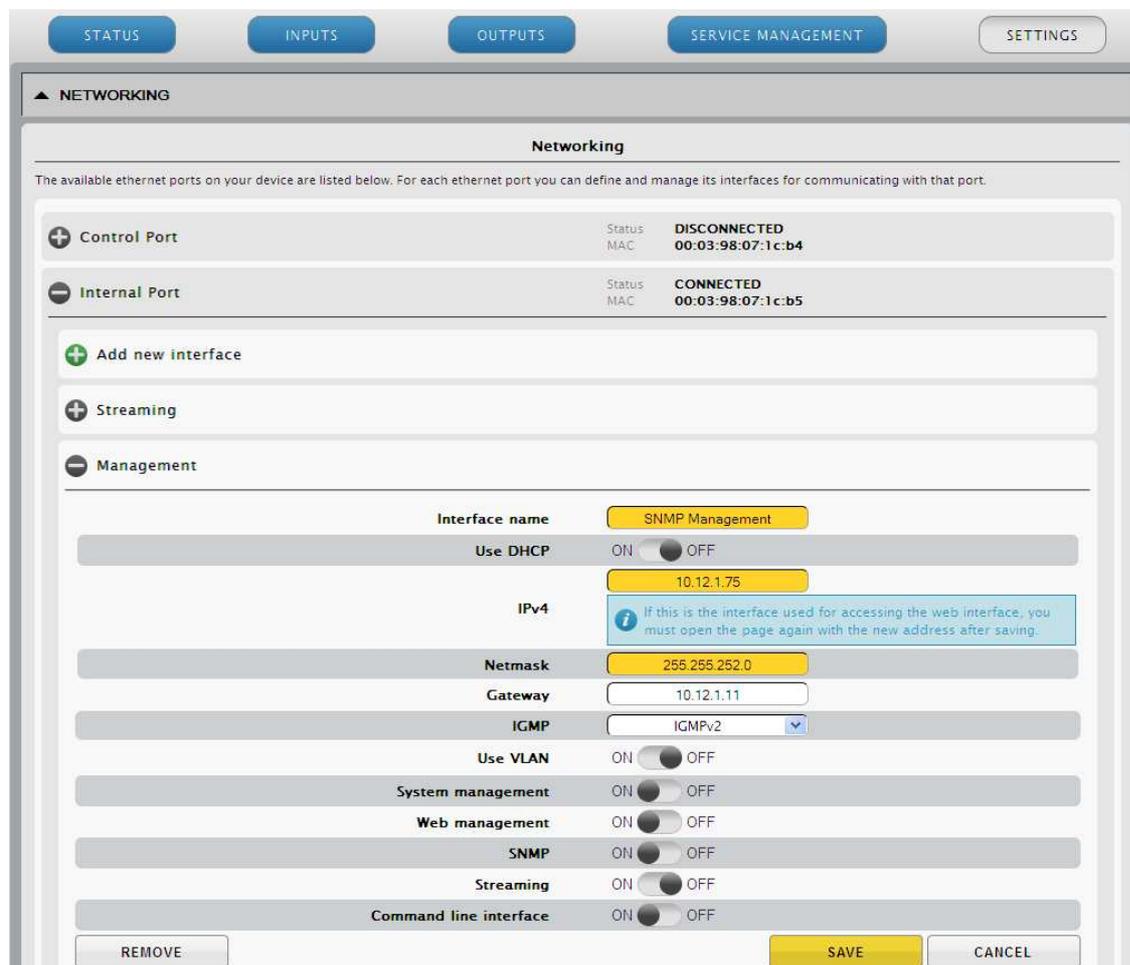




You can edit the IP addresses of a Module under SETTINGS / NETWORKING. Please always remove and configure new network- address, the netmask plus the default gateway. If you don't want to specify, put in 0.0.0.0 as gateway address.

As a further alternative or to recover a problem you may use the backup Control Port on the back of module with default address 192.168.1.20 and netmask 255.255.255.0.

As with the front port a standard web browser is used to connect by typing the IP address in the address field to get access from the Control Port on the back.

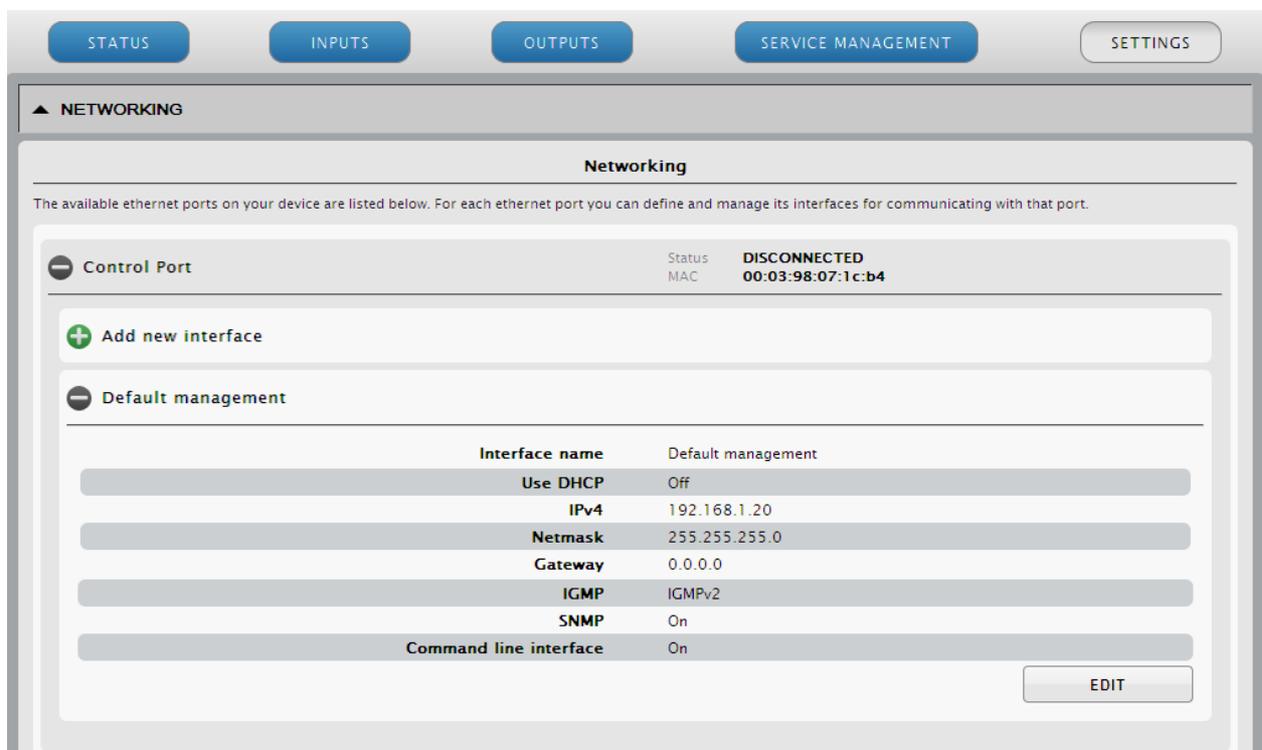

If all address settings of Tangram are unknown or lost you can recover on the module control port by using the IP Supporter tool – it can be downloaded from the product portal.



## **3.8 Tangram & SW Options**

### **3.8.1 Connect to WISI Portal & Activating the Output Modules:**

The Tangram modules GT2x & GT42 (not the Tangram chassis, nor the GT11) must be registered at the WISI portal and activated through an entitlement file when they are shipped with the factory default setup. You can get / download that from WISI Web-Portal:

## **The WISI Tangram portal**

**Portal URL: <http://www.wisiconnect.tv>**

Connect to the Tangram portal using the URL: <http://wisiconnect.tv>

(in case [wisiconnect.tv](http://wisiconnect.tv) is down / not available temporarily, you can use <http://www.chameleonconnect.tv> which offers the same functionality and data.

### **3.8.2 Serial Number / Linking to the Modules**

The Tangram module to be activated can be accessed through the main management by just choosing the module on the left column. Please copy / write down the serial number displayed in the Status tab of the module to be activated.

### **3.8.3 Requesting Access to the [wisiconnect.tv](http://www.wisiconnect.tv) Portal**

If you do not yet have a password for access to the portal, please click the [Request access to Tangram portal](#) link.

### **3.8.4 Login to the [wisiconnect.tv](http://www.wisiconnect.tv)**

Enter your e-mail address and password, and click Login. Only with the first module you have to register once for the Portal. Then after some time to generate your account or if you have forgotten your password & clicked the [Reset password](#) link, an e-mail will be sent to the entered e-mail address. The e-mail contains a hyper-link that you should follow to confirm the request for a new password.



### 3.10 Registering Tangram Modules to the WISI Tangram Portal

If you do not have yet a password for access to the portal, please refer to chapter 3.8.3

#### 3.10.1 Registering Modules

Please copy / write down the serial number out of the Status tab of the module to be activated

#### Register new Tangram

Serial number:	<input type="text"/>
Module name:	<input type="text"/>
Firmware version:	<input type="text"/>
Vendor:	<input type="text"/>
Description:	<input type="text"/>

#### 3.10.2 Downloading SW Options (entitlement file) to your PC

Go to the tab My Tangrams and enter the serial number of your Tangram module.

[My Tangram list](#)

Click the **Register Tangram** tab to start registering the Tangram GT42 module.

Enter the serial number of your module. Optionally, also enter Module name, Vendor, and Description (these fields are intended for your own use, to be able to track and maintain your installed base). The fields for SLA status and SW options are filled out automatically from the information stored in the WISI Unit Data Base. Click the **Register** button to register the Tangram module.

Go to the tab **My Tangrams**, and click the serial number for the module to download SW options (entitlement file) for. In the Edit Tangram view, click Download file. Save the file to your computer

After login and choosing Register Tangram tab number for the module to download SW options (entitlement file). In the Edit Tangram view, click Download file.


#### 3.10.3 Uploading SW Options (Entitlement File) to your Tangram Module GT42

*(via Tangram Web GUI)*

Under **SETTINGS / SOFTWARE AND ENTITLEMENT UPGRADE**, browse for the entitlement file you previously downloaded to your computer. Click Upload, and reboot the module when the upload is ready.

#### 3.10.4 Using the IP Supporter Tool

With the Tangram connected to your computer, and your computer connected to Internet, you can upload the entitlement file directly. Select your Tangram module, and check the Entitlement from WISI / a2b server, and click Upload.

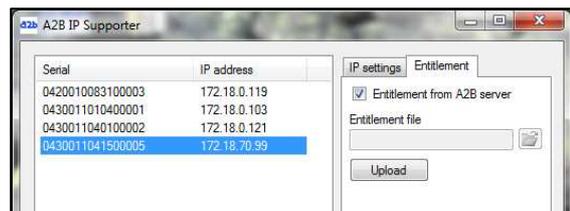


### 3.11 Configuring Inputs

To receive streams you need to setup the Streaming sources. This can be configured through the INPUT tab.

#### 3.11.1 Defining / adding inputs

##### Add input

1. Click the INPUTS tab, and *Add new input*.
2. Type or select the appropriate parameters and settings.
3. Click the SAVE button.

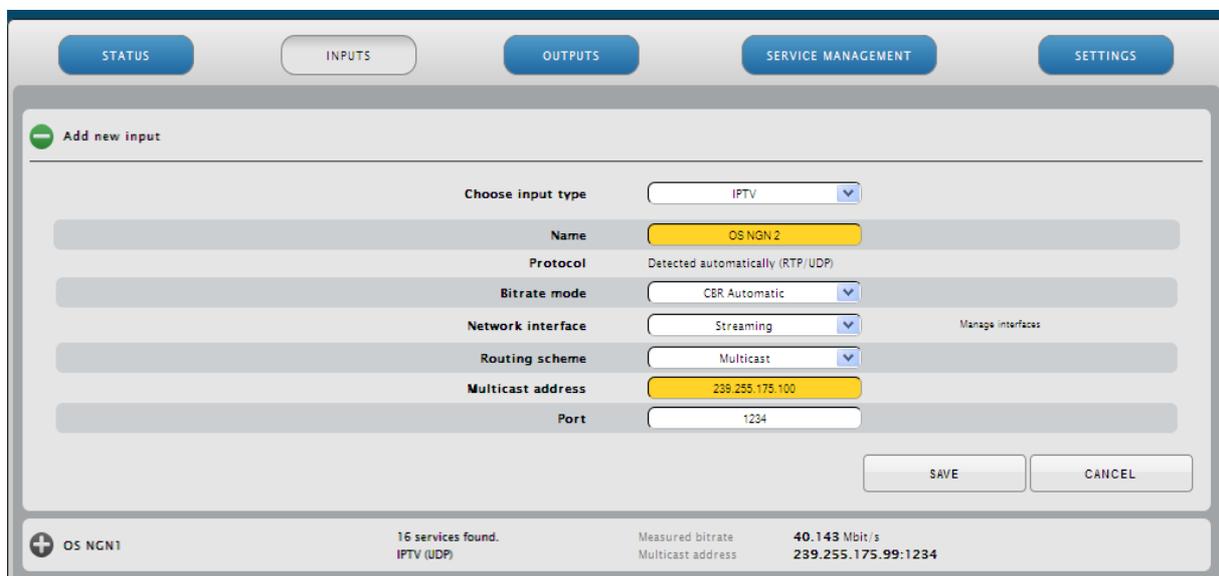

The screenshot shows the 'Add new input' configuration form. At the top, there are navigation tabs: STATUS, INPUTS (selected), OUTPUTS, SERVICE MANAGEMENT, and SETTINGS. Below the tabs, there is a green minus icon and the text 'Add new input'. The form contains several fields:

- Choose input type: IPTV (dropdown)
- Name: OS NGN 2 (text input)
- Protocol: Detected automatically (RTP/UDP) (text input)
- Bitrate mode: CBR Automatic (dropdown)
- Network interface: Streaming (dropdown) with a 'Manage interfaces' link
- Routing scheme: Multicast (dropdown)
- Multicast address: 239.255.175.100 (text input)
- Port: 1234 (text input)

At the bottom right of the form are 'SAVE' and 'CANCEL' buttons. Below the form, there is a status bar with a plus icon and 'OS NGN1'. It displays: '16 services found. IPTV (UDP)', 'Measured bitrate 40.143 Mbit/s', and 'Multicast address 239.255.175.99:1234'.

##### Status information

After clicking Save, the status of the input will be shown.

The status includes information about the interface (tuner etc.), and about services found.



The screenshot shows the status bar with a plus icon and 'OS NGN1'. It displays: '16 services found. IPTV (UDP)', 'Measured bitrate 39.88 Mbit/s', and 'Multicast address 239.255.175.99:1234'.

##### Add more inputs

Re-iterate the "Add input" process.




### 3.12 Service Decryption

The GT42 module is to decrypt services via four different CI slots. Each CI slot can be handled individually regarding settings of input source and bit rate for the used CAM.


Up to four IP inputs can be created (SPTS or MPTS). For the output, up to four IP outputs can be used (SPTS or MPTS).

INPUT menu:

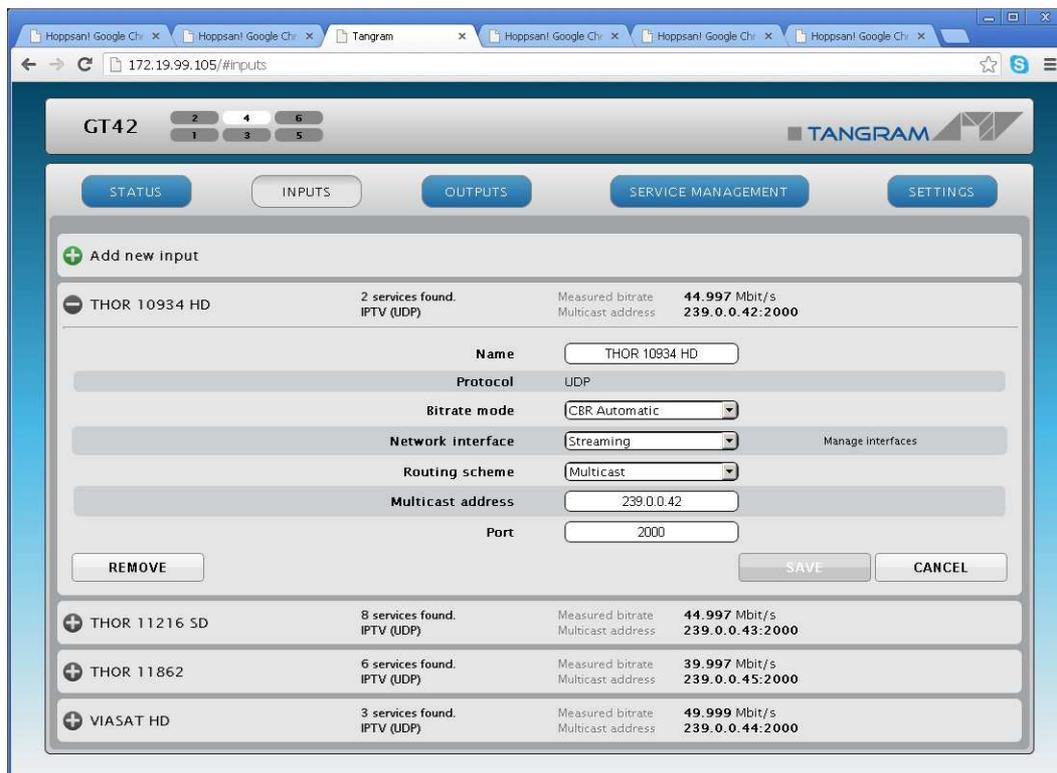



## OUTPUT MENU:

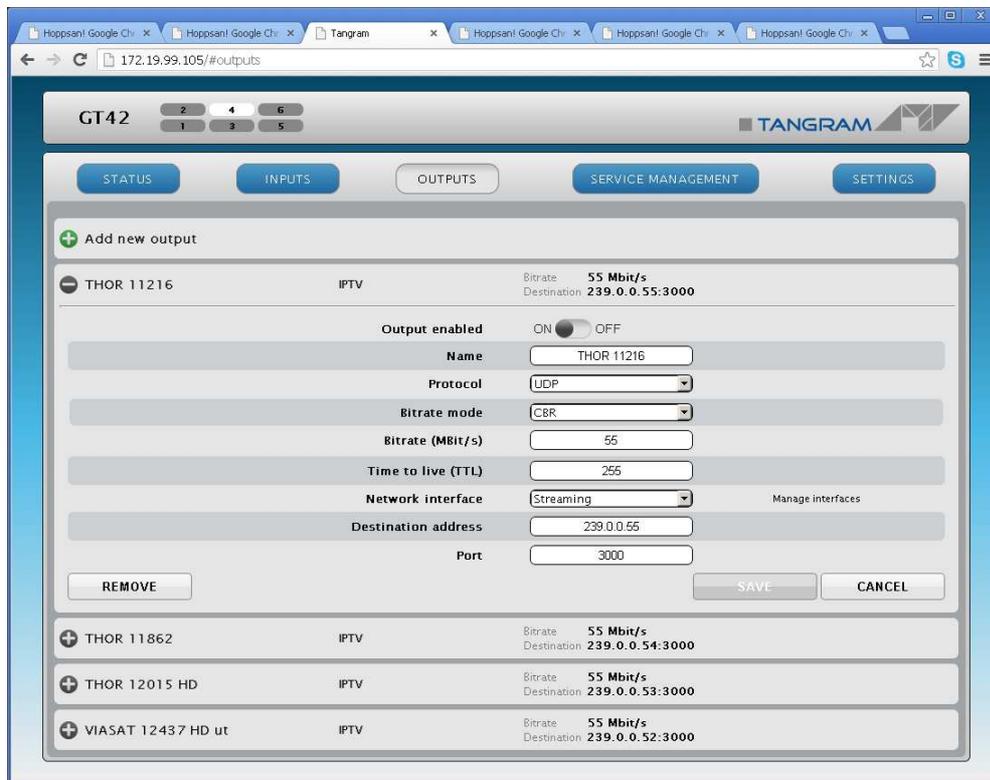

In the service management menu one chose decryption for the wanted services to be decrypted and also connect the decrypted (and not decrypted) services to the created outputs.

NOTE! Number of services that can be decrypted simultaneously is depending on the used CAM and smartcard.



### 3.13 Service Management

Click on the SERVICE MANAGEMENT tab to see available inputs and outputs.

Service IDs and PIDs of received Input services are shown and can be checked



The screenshot shows the GT42 interface with the SERVICE MANAGEMENT tab selected. It displays two main sections: Inputs and Outputs.

**Inputs Section:**

NAME	TYPE	Value
IPTV input 1	IP	239.255.175.99:1234

Below the input, a list of services is shown:

NAME	SID
Bayerisches FS Nord	28110
Bayern 1	28400
Bayern 2	28401
BAYERN 3	28402
BR-KLASSIK	28403
Das Erste	28106
hr1	28419
hr2	28420
hr3	28421
hr-fernsehen	28108
hr-INFO	28424
KIRAKA	28482
SWR Fernsehen BW	28113
WDR 2	28476
WDR 3	28477
WDR Köln	28111

**Outputs Section:**

NAME	TSID	ONID	NID	LCN
New IPTV output 1	17001	0	1	Nordig

Network Name: Test

Below the output, a list of services is shown:

NAME	PROVIDER	SID	LCN
Das Erste	ARD	28106	1

Below the services, a list of PIDs is shown:

IN	OUT	TYPE	BLOCKED	STATE
101	101	📺	NO	
102	102	🎵	NO	
103	103	🎵	NO	
104	104	📺	NO	
105	105	📺	NO	
106	106	🎵	NO	
2070	2070	📺	NO	
2171	2171	📺	NO	

Service IDs shown in the Tab SERVICE MANAGEMENT

The INPUTs and their PIDs are shown starting from INPUT 0 to INPUT n, depending on how many Inputs are configured and received.

### 3.13.2 Service Selection and Filtering

#### Service management functionality and pre-requisites

The SERVICE MANAGEMENT tab is the main view for handling service selection, decryption, encryption and PID management. Before starting with the service management, the inputs and outputs must be defined.



#### Inputs, Outputs, and their available/assigned services

The left part of the SERVICE MANAGEMENT view shows the Inputs with their available services. The right part shows Outputs with the names you have typed while configuring the output. By default, Output have no assigned services, no services has been added.

To see the services in the inputs or in the outputs, expand the input (or output) by clicking the heading plus sign.

The PIDs of each input service can be shown by clicking the + to expand the service.

## Service Selection and Filtering (cont.)

### 3.13.3 Structure of the available/assigned services under INPUTS and OUTPUTS

*Input:* Each **Input/service** has 3 columns;

**Name** (service names), **SID** (service id), and an edit arrow ">" for adding to output.

The screenshot shows the 'Service Management' interface with tabs for STATUS, INPUTS, OUTPUTS, SERVICE MANAGEMENT, and SETTINGS. The 'Inputs' section displays a table with columns NAME, TYPE, and a value field. Below it is a 'Services' table with columns NAME and SID. The 'Outputs' section displays a table with columns NAME, TSID, ONID, NID, and LCN. Below it is a 'Services' table with columns NAME, PROVIDER, SID, and LCN. A 'PIDS' table is also visible with columns IN, OUT, TYPE, BLOCKED, and STATE. A pop-up menu is shown over the 'Outputs' section, with options 'Add all services to' and 'Connect transparently to', and a 'New IPTV output 1' button.

Assigning services from the inputs to the outputs is done by clicking the arrow > and selecting the output to add the service to in the appearing pop-up boxes.

*Outputs:* Each **Output** has 6 columns; **Name** (mux names), **TSID** (transport stream id), **ONID** (Original Network id), **NID** (Network id), **LCN** (LCN type) and the edit arrow ">"

Outputs				
NAME	TSID	ONID	NID	LCN
QAM 1	0	0	No id	None

Network Name: Not set

Each **Output Service** has 5 columns; **Name** (service name), **Provider** (service provider name), **SID** (service id), **LCN** (service LCN number) and the edit arrow ">" .

Every Name & ID can be changed by clicking on the entry in the table or resetted / removed by clicking the arrow ">"

The screenshot shows the 'Outputs' section with a table having columns NAME, TSID, ONID, NID, and LCN. The row for 'QAM 1' has input fields for TSID (0), ONID (0), NID (65535), and LCN (None). A 'set' pop-up menu is shown with options 'Edit', 'Reset values', and 'Remove'.

### 3.13.4 Adding and Removing Services to/from IP Outputs


#### Adding services to the outputs

1. Click the edit arrow tailing an input service. When you click the arrow, an “Add / Connect” pop-up will appear.
2. Move the mouse pointer to the Add pop-up.
3. Select the **Output** to add the service.



#### Adding all services to the outputs


1. Click the edit arrow tailing an input. When you click the arrow, a pop-up will appear with “Connect transparently to” and “Add all services to”.
2. Select “Add all services to”, and select the **Output** to add services to.

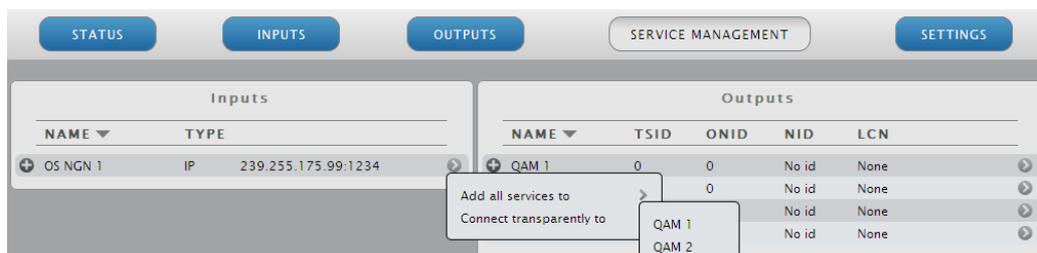

#### Removing services from the outputs

##### Removing a single service from an output

1. Click the edit arrow > of an output service.
2. Click “Remove” in the pop-up window.

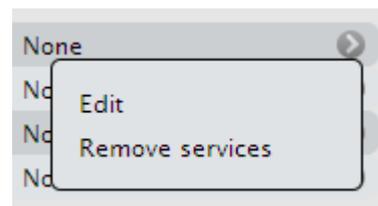

##### Removing all services from an output

1. Click the edit arrow > of an output.
2. Click “Remove services” in the pop-up window.



### 3.14 Managing the Tangram Module

Under the module **SETTINGS tab** – module specific settings are managed:




#### NETWORKING

Networking settings for defining and configuring IP interfaces, and for setting the capabilities for the defined IP interfaces.

Note: Every Tangram module has an extra IP port on the Tangram back for separate 10/100 Ethernet management (“Control Port”, default IP 192.168.1.20/24), the module internal GigE port is switched through GT11 switch for streaming & main management.

There are no IP addresses defined for the GigE streaming per default and they have to be set accordingly to customer network.

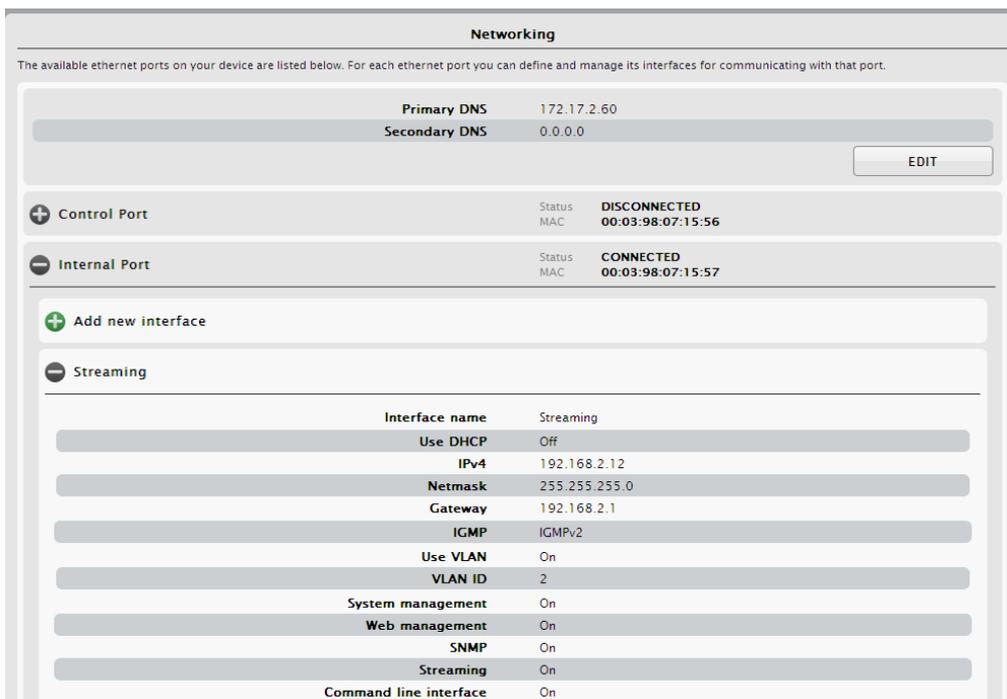

Example of Networking setup



## Managing the Tangram module

### 3.14.1 Add and configure Network interfaces

1. Click on NETWORKING in the **SETTINGS** tab
2. Click Add new interface
3. Type a name for the interface
4. Enter the IPv4 address, the Netmask and the Gateway
5. Select the capabilities needed for the interface (e.g. for Streaming the VLAN ID)
6. Click SAVE

The screenshot shows a configuration window for an 'Internal Port'. At the top right, the status is 'CONNECTED' and the MAC address is '00:03:98:07:1f:98'. Below this is a section for 'Add new interface' which is currently expanded to show the 'Streaming' configuration. The configuration fields are as follows:

Field	Value
Interface name	Streaming Interface
Use DHCP	OFF
IPv4	192.168.2.20
Netmask	255.255.255.0
Gateway	0.0.0.0
Use VLAN	OFF
VLAN ID	2
System management	OFF
Web management	OFF
SNMP	OFF
Streaming	OFF
Command line interface	OFF

At the bottom of the configuration section, there are three buttons: 'REMOVE', 'SAVE', and 'CANCEL'. Below the configuration section is a collapsed 'Management' section.




## Managing the GT42 Tangram module

### 3.14.2 Setting up Common Interface

The inserted CAM modules can be edited & controlled via the SETTINGS tab

1. Click on COMMON INTERFACE in the **SETTINGS** tab
2. Click EDIT

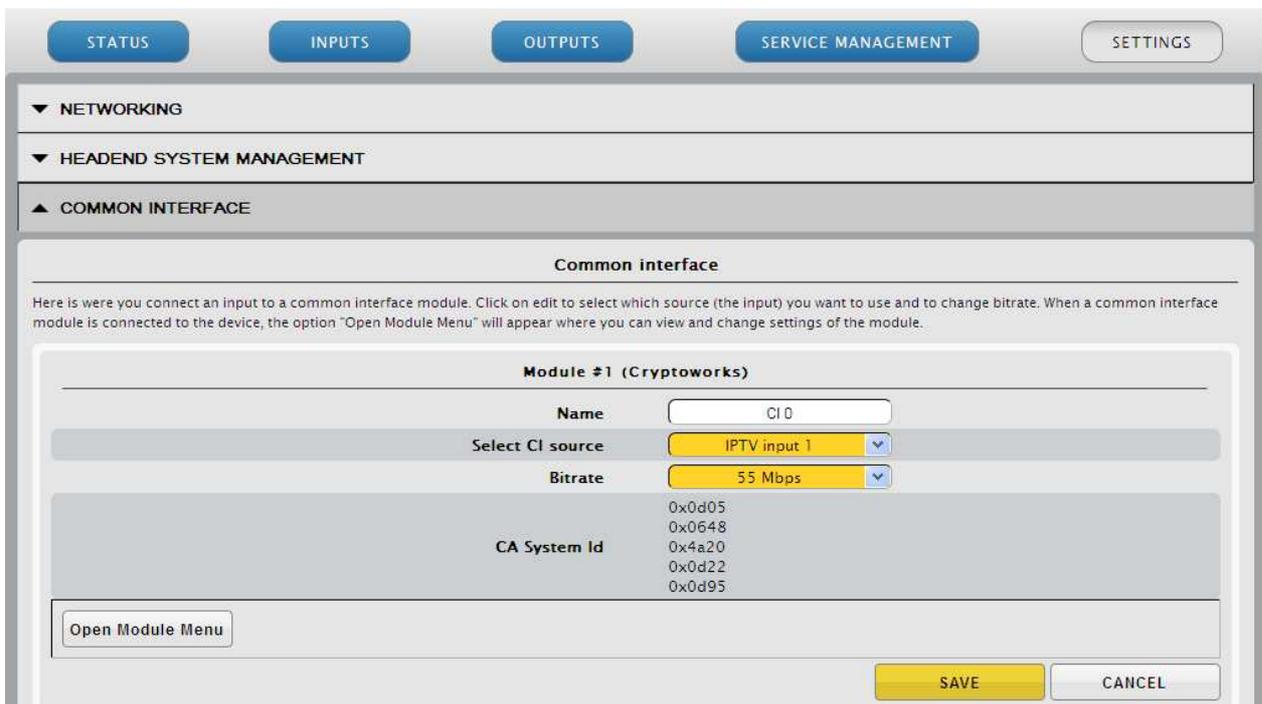


Here is were you connect an input to a common interface module. Select which source (the input) you want to use and change the Bitrate.


3. Click SAVE

When a common interface module is connected to the device, the option "Open Module Menu" will appear where you can view and change settings of the CA module.

After selecting "Open Module Menu" the CAM Menu will appear where you can view and change settings of the Module & Smartcard.

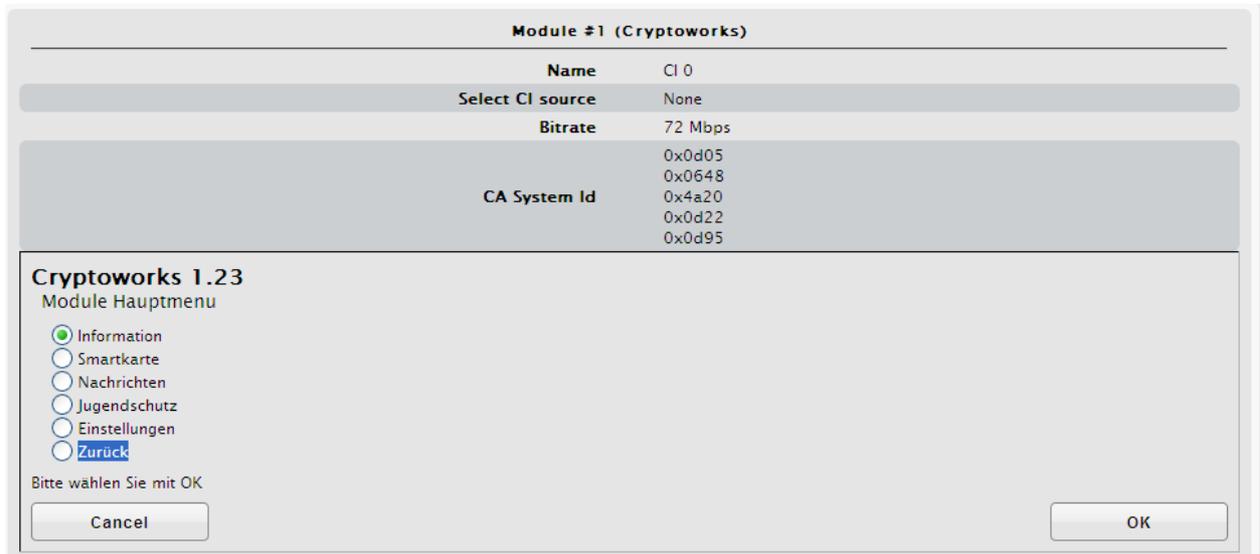

Depending on the CAM used you are able to change detail settings of the CAM

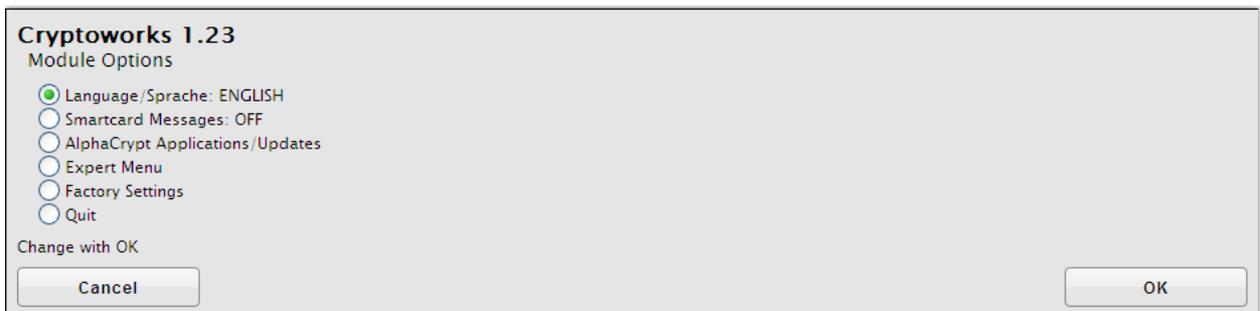


Depending on the CAM used, changes done in the CAM module menu are applied directly or do need a restart of the CAM module.

### 3.14.3 Setting up DATE AND TIME

To synchronize Tangram modules with a time source you can either use NTP protocol through the IP interfaces or Time information delivered by the received MPTS- Streams.

1. Click on DATE AND TIME in the **SETTINGS** tab
2. Click EDIT
3. Select the Time zone, automatic or manual daylight saving timer and the reachable NTP servers (separate by adding a comma after each address)
4. Click SAVE
5. If no NTP is available/ configured a Stream source including that information can be used to synchronize the date & time of Tangram modules

(Note: NTP servers can be connected from the modules external or internal GigE ports and switched through GT11 switch. There are no IP addresses defined for the internal Interface for NTP use per default and they and the gateway have to be set for every module accordingly to customer management network. )

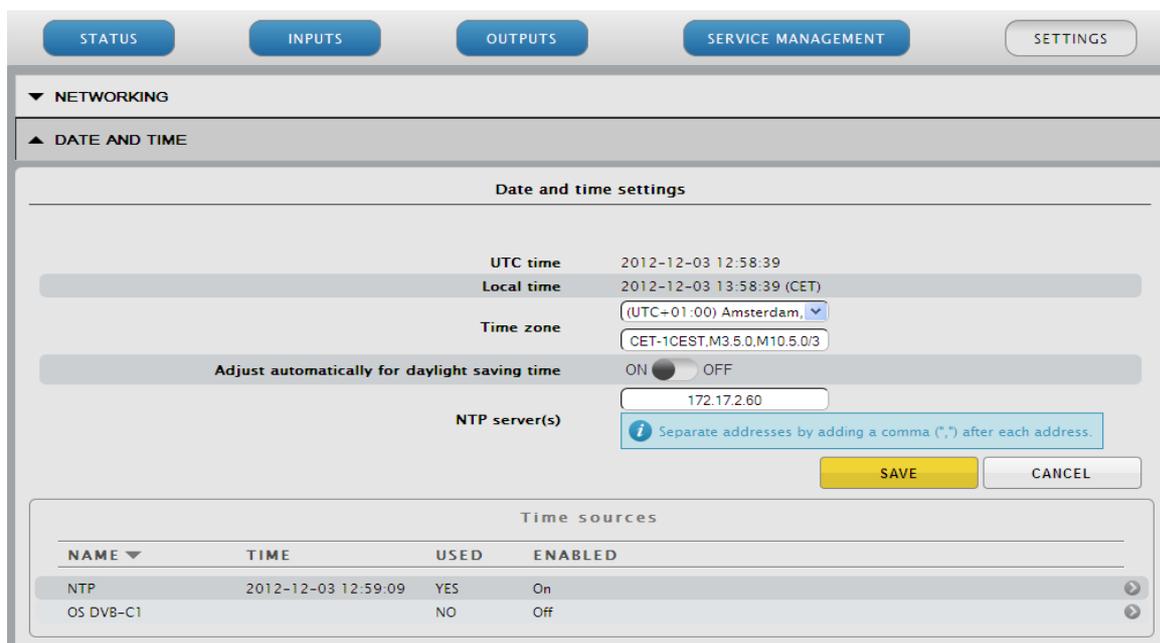

The screenshot shows the 'DATE AND TIME' settings page. At the top, there are navigation tabs: STATUS, INPUTS, OUTPUTS, SERVICE MANAGEMENT, and SETTINGS. The 'DATE AND TIME' section is expanded. Below it, the 'Date and time settings' are displayed. The 'UTC time' is 2012-12-03 12:58:39. The 'Local time' is 2012-12-03 13:58:39 (CET). The 'Time zone' is set to '(UTC+01:00) Amsterdam'. The 'Adjust automatically for daylight saving time' is set to OFF. The 'NTP server(s)' field contains '172.17.2.60'. A tooltip message says 'Separate addresses by adding a comma (",") after each address.' Below the settings are 'SAVE' and 'CANCEL' buttons. At the bottom, there is a 'Time sources' table.

NAME	TIME	USED	ENABLED
NTP	2012-12-03 12:59:09	YES	On
OS DVB-C1		NO	Off

Example of a Date & time setting using a NTP server

## Managing the Tangram module

### 3.14.4 Module Software and SW options (Entitlement)

If a module is shipped from factory it has no License / Entitlement for operation. Both FW and SW options are uploaded via SOFTWARE AND ENTITLEMENT UPGRADE in the **SETTINGS** tab. Additionally, there is status information available about the running software version, and if a new software is uploaded, also about the latest uploaded (not yet running) software version.



#### Uploading software options / Entitlement

- Click **UPLOAD**. Click “Browse” in the pop-up to browse for the software options file (\*.ent) for this specific Tangram module

*Note:* The SW options file will have the format <serial number>.ent. If you need to, you can download the entitlement file from the Wisiconnect.tv portal or please ask your WISI representative

- Locate the software options file on your PC, and select it
- Click the Upload button



#### Uploading new Firmware


- Click **UPLOAD**. Click “Browse” in the pop-up, and select the software file (\*.bin file) to be uploaded from your PC
- Click the Upload button
- Wait for the upload complete message before rebooting the module
- Reboot the module in your maintenance window



## Managing the Tangram module

### 3.14.5 Module maintenance

Module maintenance functions are available within the Maintenance tab:

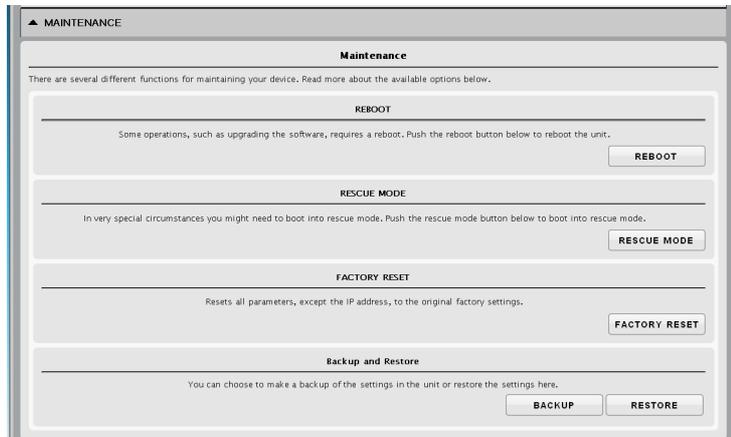

#### Reboot of the module

Some operations, such as upgrading the software, require a reboot to get it active.

Click the **Reboot** button to reboot the unit.

During the rebooting process, "Rebooting" will be shown.




After rebooting, the web GUI will go automatically to the **STATUS** tab.

#### Rescue mode

In very special circumstances you might need to boot into rescue mode. If you are sure push the **Rescue mode** button to boot into rescue mode.

During the rebooting process, Booting into rescue will be shown.

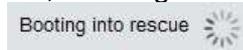

In the rescue mode, you can access basic functionality via web interface, and upload new software and software options. In some cases you may have to connect via the backside control port to get access again.



#### Returning to normal mode

Click the **Reboot** button in the rescue mode to return to normal mode. *Note:* re-enter the IP address of your Tangram in the address field of you browser to access the normal mode web GUI.



### 3.14.6 Factory reset & Backup / Restore

#### Factory reset

The Tangram module can be reset to the same status as when delivered from the factory. Go to the SETTINGS tab, and MAINTENANCE.


Before you Click on FACTORY RESET please always do a backup of your last configuration as described below ! It may help you to save time & effort to get back to your original setup.



#### Factory reset from the rescue interface

There is a factory reset button in the rescue mode UI.


**WARNING!** Factory reset from the rescue mode will remove all settings, remove the entitlement file enabling the SW options, and will reset the IP address to the default.

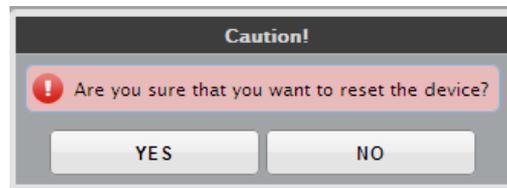

#### Backup and restore (saving & restoring configuration)

The backup and restore functionality gives you the possibility to save the complete configuration of a Tangram / module to your PC. The stored config file is in readable xml format.

The backup file can be used for e.g. copying /clone configurations between different installations, or keeping a possibility to upload back the original configuration to a module after a change.

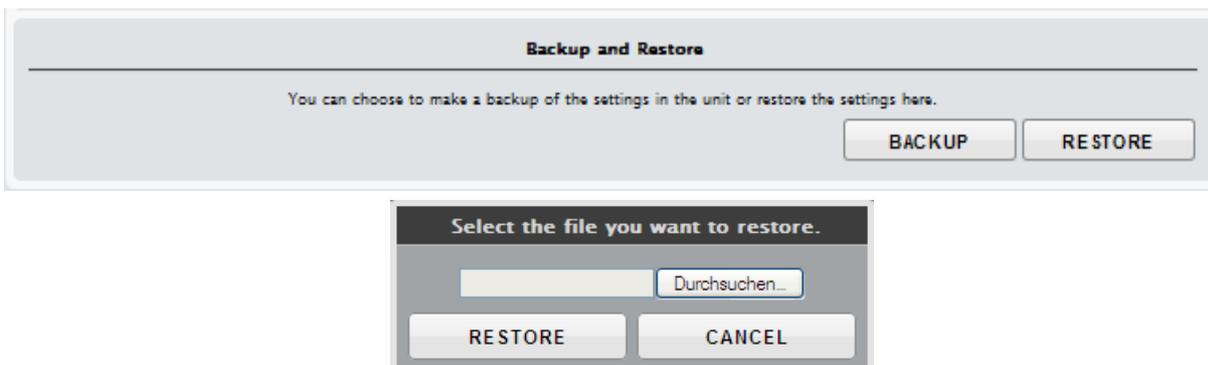



## 4. GT42 Module Status Information

The **STATUS** tab gives a general overview over the Tangram module. This page is also the starting page for the Module UI.

MODULE IDENTIFICATION	
Serial	0500112112900008
Hardware revision	1101
Name	
Location	
Description	
<input type="button" value="EDIT"/>	

CONFIGURATION	
Software version	1.1
Software options	GT42HW

STATUS	
Uptime	2d 1h 23m 36s
Temperature	28.5 °C

SERVICE LICENSE AGREEMENT (SLA)	
Registered	Yes
Expires	2013-12-10

### MODULE IDENTIFICATION

Serial number and the HW version is shown. Further, there are three editable fields; Name, Location and Description. Choosing **EDIT** below the box enables you to save your own selected information about this Tangram module.

### CONFIGURATION

The configuration box shows you the Operation mode, the Software version, and the enabled SW options. A warning will be shown if no operation mode is selected.

### STATUS

Uptime (from last reboot), and current module temperature.

### SERVICE LICENCE AGREEMENT

Shows if the Tangram is registered at the WISI portal, and the expiry date of the service level agreement.



## **5. Support and further information**

For further information and help, please contact our support organisations:

E-mail: [support\\_headend@wisi.de](mailto:support_headend@wisi.de)

Telephone: +49 (0)7233 / 66-621

### **User manual and installation guide updates**

Updates to the user manual and the installation guide are available at the Website [www.wisi.de](http://www.wisi.de) and through the wisiconnect Portal.



**WISI Communications GmbH & Co. KG**

Empfangs- und Verteiltechnik

Wilhelm-Sihn-Straße 5-7

75223 Niefern-Oeschelbronn, Germany

Tel.: +49 7233 - 66-292, Fax: 66-320,

E-mail: [info@wisi.de](mailto:info@wisi.de), <http://www.wisi.de>

*excellence in digital ...*

Technische Änderungen und Druckfehler vorbehalten!  
Technical Modifications reserved. WISI cannot be held  
liable for any printing error.