



A higher level of performance

Safety instructions




HAWK SULTAN SERIES

Smart Universal Level Transmitter And Network

(A20)

ATEX Category 1 D

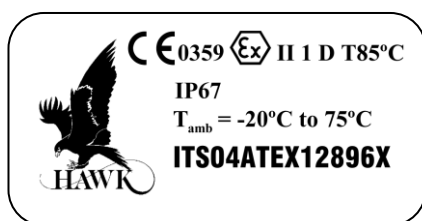

Equipment types:

AWRT series Remote Transducer
AWR series Remote Electronics
AWI series Integral Transmitter
AWST series Smart Transducer

1. General

This document provides instructions for the installation of equipment for Category 1 hazardous dust locations, according to EC-Type Examination Certificate ITS04ATEX12896X. ATEX Categories are relevant in all parts of the European Community. Device Category 1D is similar to Zone 20. This equipment can also be installed in Categories 2 and 3.

The Hawk Sultan Series Acoustic Wave equipment uses high frequency acoustic waves to measure the distance from the sensor face to the material product surface. The equipment is available as an Integral Transmitter or as a Remote system, with various levels of Ex rating.

The Remote Sultan system is one where an AWRT series Sultan Acoustic Wave Remote Transducer is mounted at the level measurement point, and an AWR series Sultan Remote Electronics unit is installed some distance away, in a more convenient location.

The AWI series Sultan Acoustic Wave Integral Transmitter models, as well as the AWST series Sultan Smart Transducer models consist of a transducer and an electronic control amplifier in a single housing. They are mounted directly at the level measurement point – usually at the top of a vessel and focused downwards to the product surface. The Integral Transmitter includes a user interface keypad and display, whereas the Smart Transducer is smaller in size and has no user interface except for the communication port.

2. Equipment Identification

The ATEX Category 1D marking label is shown above.

When Hawk Sultan Acoustic Wave equipment is installed and mounted in Category 1 or 2 hazardous areas, these User Manual Safety and Operating Instructions, the general Ex installation regulations and the general installation regulations for electrical equipment must all be observed. The installation of Ex instruments should only be made by trained personnel.

3. Putting Into Service

To put a Hawk Sultan Unit safely into service, the following steps must be taken:

- a) To be compliant, the equipment must be installed with suitable protection for the cable. It must be protected in a suitable manner and terminated in an enclosure suitable for the environment, such as a suitably certified EEx e junction box.
- b) Follow the instructions in **Typical Installations and Installation Guide**, as well as the relevant conditions on the ATEX EC-Type Examination Certificate:-
 - Transducer cables shall be appropriately connected.
 - Units with terminal compartment shall be mounted with the terminal compartment outside the hazardous area.
 - Units shall not be installed where they are subject to direct sunlight.
- c) Remote Electronics enclosure conduit entry locations for AWR series models are shown in **Dimensions – Remote Enclosure**. Remove the terminal cover by loosening the two captive screws. Use a flat blade screwdriver and a slight tap to remove the selected conduit entry openings in the front of the enclosure. Follow the installation instructions in the **Installation Guide** and **Wiring Diagram** sections. Be careful to seal any unused cable glands. When wiring is complete, ensure the cable glands are securely sealed against the enclosure and the cable, then seal the terminal cover by tightening the two screws.
- d) Integral Transmitter AWI series models have cable glands located at the rear of the housing which face downward to protect against moisture ingress. Ensure that cable glands are securely tightened to adequately seal the cable. Be careful to seal any unused cable glands. The Smart Transducer model AWST has one cable entry point.
- e) Correct wiring. Follow the instructions in the **Wiring Diagram** sections. Wiring should be in accordance with relevant installation standards for hazardous area equipment or other local codes of practice.
- f) Safe temperature. Temperature must not exceed the operating range of the Sultan unit. In particular, Ex rated equipment must not exceed the temperature limits shown on the marking label.
- g) Safe power supply. Power supply values must be according to the **Specifications**.
- h) It is advised to provide a cover for the unit to prevent damage that could happen due to environmental conditions.
- i) Do not put into service where there is a possibility of contact with acetic acid.

4. Use

The instructions for safe use of the Sultan Unit is as follows:

- a) The Sultan equipment must put into service safely. (see **Putting Into Service**, above).
- b) This User Manual must be read and understood by any person involved with the unit.
- c) Environment and installation conditions should be checked regularly.
- d) When opening the cover of the any Sultan unit, prevent dust, liquids or chemical substances from getting inside the unit. Do not leave any cover open in rain or snow conditions.
- e) The LCD display is visible through the clear lid of the AWR series Sultan Remote Electronics enclosure. To view the LCD display on the AWI series Sultan Integral Transmitter, open the visor by lifting up the front edge with a finger. Close and click into place again after viewing so that the display is protected from environmental effects.
- f) Before making any wiring or hardware configuration changes, it is important to disconnect power from the equipment.

5. Assembling and dismantling

The only assembly that may be required by the user is to reconfigure a Sultan '234' unit (2,3,4 wire operation) to that of a Sultan '2' unit (2 wire operation). This flexibility is unique to Sultan equipment.

To safely reconfigure a Sultan '234' model to that of a Sultan '2' model:

- a) Make sure that the original unit is a Sultan '234' model (eg, AWI234 or AWR234). It is not possible to reconfigure a Sultan '2' model (eg, AWI2 or AWR2) as a Sultan 234 model. Only Sultan '234' models can be reconfigured to operate as Sultan '2' models, and this modification is reversible.
- b) Disconnect the power to the Sultan '234' Unit.
- c) To do the modification, follow the instructions in **Wiring – Change Sultan 234 <=> Sultan 2**.
- d) Modify the wiring to suit the new output configuration as shown in **Wiring Diagrams**.

6. Installation and Wiring

Carefully follow **Typical Installations**, **Installation Guide** and **Wiring Diagram** sections. Follow all points listed in **Putting Into Service**, above. Wiring should be in accordance with relevant installation standards for hazardous area equipment (eg, EN 61241-14) or other local codes of practice.

7. Adjustment

a) Sultan Integral AWI series models:

To access the user controls, loosen the single captive screw sufficiently to release the lid. The lid can then be raised to one of two positions – 1) vertical, 2) swung right back [hinge unlocks] to gain access to the cable wiring located under the interior hinged cover flap. To close the lid, ensure that the double hinge at the top of the enclosure is locked into place before re-tightening the lid fastening screw.

b) Sultan Remote Electronics AWR series models:

To access the user controls, unlock the clear cover using the lever on the right hand side of the clear lid. Press this lever in the direction of the arrow (towards the lid) to release the catch. The lid can then be swung open to gain access to the user control push buttons. Close the lid when finished. To lock the lid, press on the lower part of the lever, which moves the arrow symbol (in reverse) slightly away from the lid, locking the lid closed.

c) Change of output configuration:

The only other hardware adjustment that may be desired by the user is converting from the Sultan '234' output configuration to the Sultan '2' output configuration. Refer to *Assembling and Dismantling*, above.

d) Software Adjustment:

For software adjustment of Sultan unit parameter adjustment and data entry, refer to instructions in *Entering Data*, and all of the *Setup* sections. If *GosHawk II* software is to be used for parameter adjustment and data entering from a lap-top computer, read and fully understand the information in the *GosHawk II Manual* either supplied with the equipment or downloaded free from the Hawk web-site: <http://www.hawklevel.com> The AWST series models (with no buttons) can only be adjusted in this way.

8. Application Conditions

a) Voltage Supply:

Must be according to the voltage supplies given in *Specifications*.

b) Temperature:

Must not exceed the operating temperature range stated in *Putting Into Service*, above. To prevent inaccuracies due to extremes in temperature and the effect of long term UV exposure, it is recommended that transducers constructed with grey/beige polypropylene housing material be protected from direct sunlight. This does not apply to the blue/green and dark grey plastic enclosure parts. These parts have better UV stability.

c) **Cable Connection:**

Cables must only be replaced by the same cable type. If extending the cable, it must be protected in a junction box and terminated in an enclosure suitable for the environment. Refer to Wiring Diagrams – Transducer.

d) **Earthing:**

Hawk Sultan Acoustic Wave equipment must be earthed to ensure that shielded cabling is effective.

e) **Electrostatic Discharge:**

Hawk Sultan Acoustic Wave equipment has been certified safe to use in hazardous dust locations.

f) **Industrial Conditions:**

This equipment is designed for use in normal industrial conditions relating to humidity, vibration, etc. If the user intends to operate the equipment in more severe environmental conditions, the manufacturer or local distributor should be consulted for advice.

9. List of ATEX certified equipment types:

| | |
|---|---------------|
| Sultan Acoustic Wave Remote Electronics | – AWR series |
| Sultan Acoustic Wave Remote Transducer | – AWRT series |
| Sultan Acoustic Wave Integral Transmitter | – AWI series |
| Sultan Acoustic Wave Smart Transducer | – AWST series |

Flange, Cone and Accessory Selection in any combination.

10. Wiring Configuration drawings:

Note: All equipment in Zone 20 Hazardous area must have ATEX Cat 1D marking.


HAW_RD_WIR-ATEX-H1-A20_.jpg

HAW_RD_WIR-ATEX-J1-A20_.jpg

H1. Wiring for ATEX Category 1 D Sultan 3&4-wire Remote Amplifier in Safe Zone & Remote Transducer in Zone 20 Hazardous Area


Note: All equipment in Zone 20 Hazardous area must have ATEX Cat 1 D marking

Certificate No.: ITS04ATEX12896X

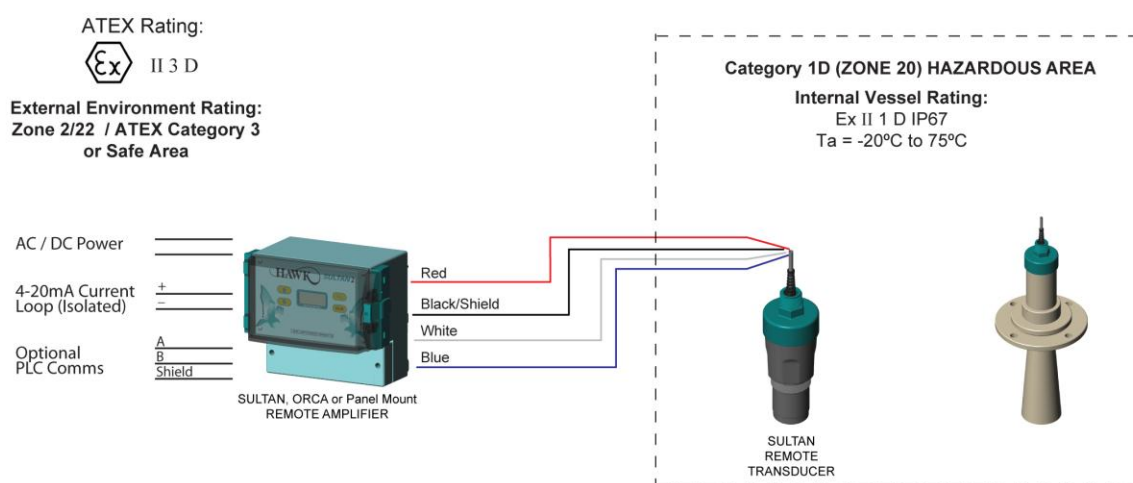

Note 1. Wiring to conform to EN 61241-14

Related Drawing
 No modifications permitted
 without the approval of the
 Engineering Manager


| | | |
|--|--|----------------------|
| DOC NO: | NOT TO SCALE | ALL DIMENSIONS IN MM |
| COMPANY: |  HAWK MEASUREMENT SYSTEMS 15-17 MAURICE COURT, NUNAWADING, VICTORIA, AUSTRALIA 3131 | |
| DRAWN: MT | DATE 15/12/2011 | |
| CHECKED: CP | DATE 19/12/2011 | |
| APRVD: CP | DATE 20/12/2011 | |
| REF. | TITLE: Wiring for ATEX Category 1 D Sultan 3&4-wire Remote Amplifier in Safe Zone & Remote Transducer in Zone 20 Hazardous Area | |
| THIS DRAWING AND THE CONTENTS THEREOF ARE THE PROPRIETARY PROPERTY OF HAWK MEASUREMENT SYSTEMS. REPRODUCTION OR USE OF THIS INFORMATION WITHOUT PRIOR WRITTEN AUTHORISATION FROM HAWK MEASUREMENT IS PROHIBITED | DWG NO. HAW_RD_WIR-ATEX-H1-A20 | REVISION A01 |
| | | SHEET 1-1 |

J1. Wiring for ATEX Category 1 D Sultan Integral Transducer in Zone 20 Hazardous Area


Note: All equipment in Zone 20 Hazardous area must have ATEX Cat 1 D marking

Certificate No.: ITS04ATEX12896X

ATEX Rating:

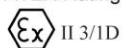


External Environment Rating:
Zone 2/22 / ATEX Category 2
or Safe Area

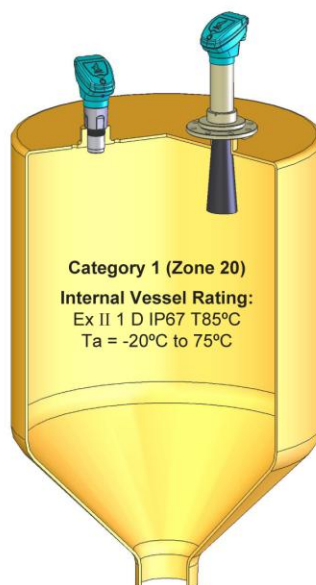

Note 1. Wiring to conform to EN 61241-14

Related Drawing
No modifications permitted
without the approval of the
Engineering Manager

| | | | | | | | |
|--|----|---|--|----------------------|-------|------|------------|
| DOC NO: | | NOT TO SCALE | | ALL DIMENSIONS IN MM | | | |
| COMPANY: | | <div><div><div>HAWK MEASUREMENT SYSTEMS</div><div>15-17 MAURICE COURT, NUNAWADING, VICTORIA, AUSTRALIA 3131</div></div></div> | | | | | |
| DRAWN: | MT | | | | | DATE | 15/12/2011 |
| CHECKED: | CP | | | | | DATE | 19/12/2011 |
| APRVD: | CP | | | | | DATE | 20/12/2011 |
| REF. | | TITLE: Wiring for ATEX Category 1 D Sultan Integral Transducer in Zone 20 Hazardous Area | | | A4 | | |
| THIS DRAWING AND THE CONTENTS THEREOF ARE THE PROPRIETARY PROPERTY OF HAWK MEASUREMENT SYSTEMS. REPRODUCTION OR USE OF THIS INFORMATION WITHOUT PRIOR WRITTEN AUTHORISATION FROM HAWK MEASUREMENT IS PROHIBITED | | DWG NO. | | REVISION | SHEET | | |
| | | HAW_RD_WIR-ATEX-J1-A20 | | A01 | 1-1 | | |