

www.innovative-energies.com

User Manual

+PROTOCONMB

Modbus Protocol Converter




Power Supply Modbus Interface Programmer incl.
Power MBLink v1.3 software

Revision: 3 (07-Jun-11 8:58 AM)

TABLE OF CONTENTS

TABLE OF CONTENTS.....	2
INTRODUCTION.....	3
WIRING DIAGRAM.....	4
INFORMATION AVAILABLE.....	5
PROGRAMMING SETUP	5
SERIAL MODBUS RTU PROTOCOL.....	9
DIMENSIONS	9
COMMUNICATION SETTINGS	10
RESETTING TO DEFAULT COMMUNICATION PARAMETERS.....	10
MODBUS REGISTER SET (MODBUS FUNCTIONS 3, 6, 15 & 22).....	11
GENERAL.....	11
DIGITAL MONITORING	11
<i>Revised Digital Monitoring Bits.....</i>	<i>11</i>
<i>Old Digital Monitoring Bits.....</i>	<i>12</i>
DIGITAL CONTROL.....	13
ANALOGUE PARAMETERS.....	13
ANALOGUE SETTINGS.....	14
MODBUS COIL (BIT) SET (MODBUS FUNCTIONS 1, 5 & 15).....	15
MONITORING.....	15
<i>Revised Digital Monitoring Bits.....</i>	<i>15</i>
<i>Old Digital Monitoring Bits.....</i>	<i>16</i>
CONTROL	17
REVISION HISTORY	18


INTRODUCTION

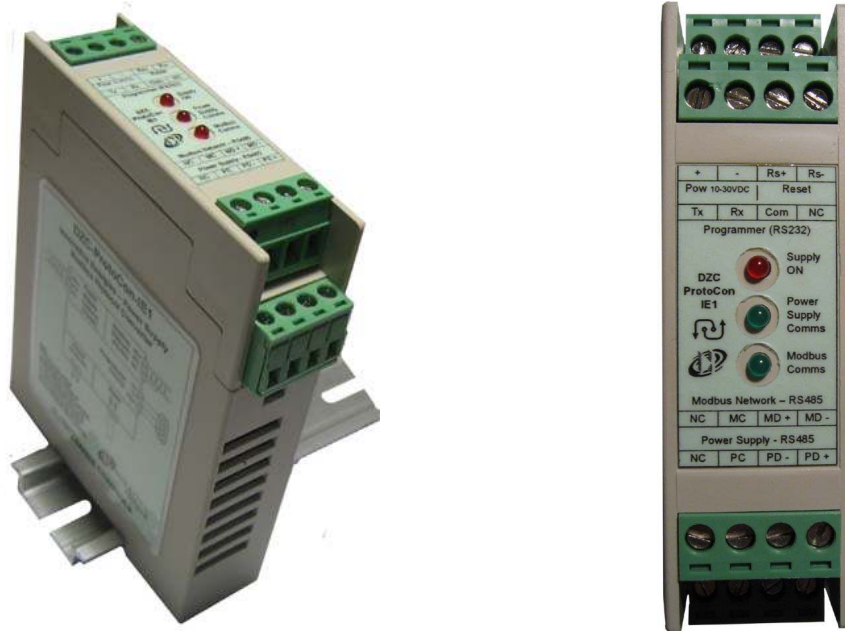

This product must be used with Innovative Energies power supplies and *No-Break™* DC chargers with a RS485 serial interface.


The 'Power MBLink' software is used to configure the Modbus address and baud rate of the interface.

Its primary function is to monitor in real time the various power supply parameters as well as control the battery condition function via the Modbus port. These parameters may also be monitored via the RS232 programming port using a PC.

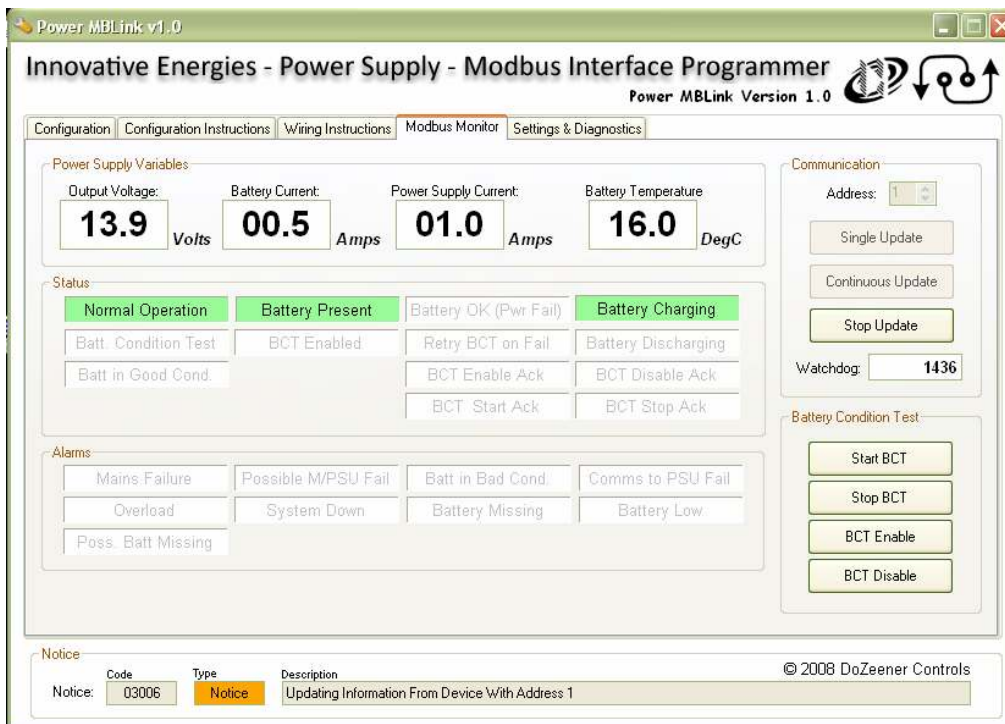

WIRING DIAGRAM

+PROTOCONMB:	Modbus RTU on RS485 link
+PROTOCONMB-OE:	Modbus RTU on RS485 & Modbus TCP and HTTP over ethernet

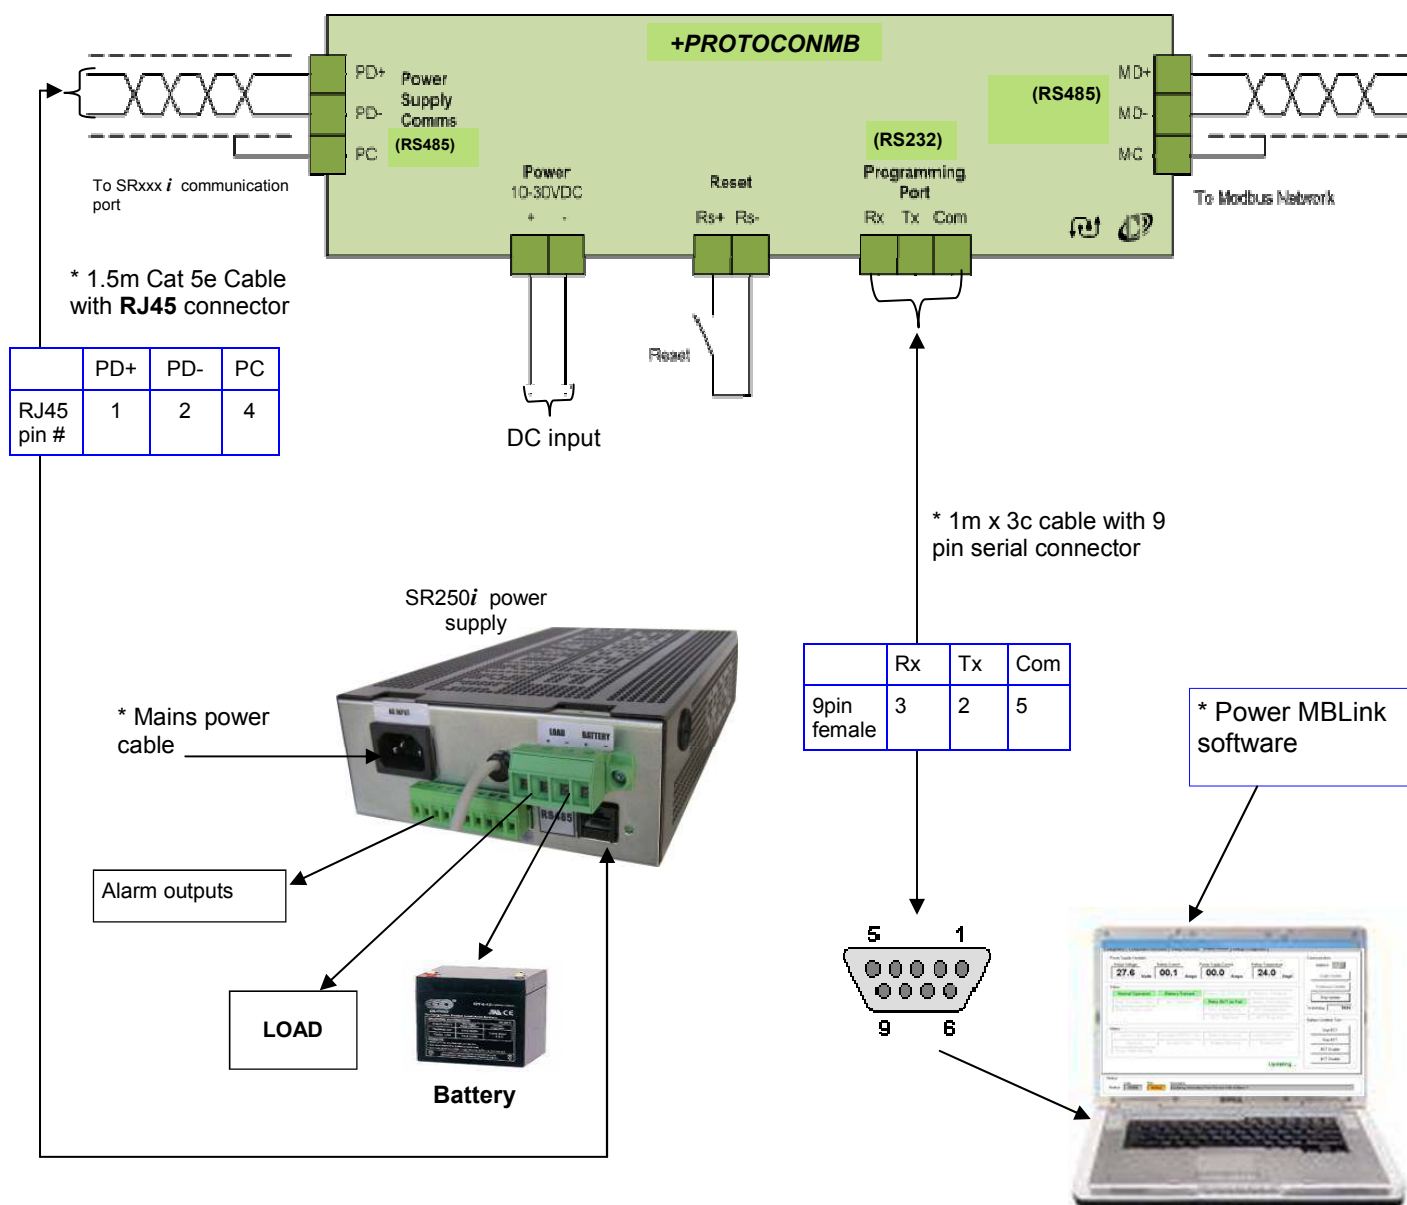

*** Accessories included**

INFORMATION AVAILABLE VIA MODBUS LINK OR LOCAL PROGRAMMING PORT

Continuously Updated Variables:

- Output Voltage
- Battery Current
- Power Supply Current
- Battery Temperature

Alarms

- Mains Failure
- Possible Mains/PSU Fail
- Battery in Bad Condition
- Communications to PSU Fail (eg. on LV disconnect)
- Overload
- System Down
- Battery Missing
- Battery Low
- Possible Battery Missing

Alarm State Signals:

- Normal Operation
- Battery Present
- Battery OK (on input power fail)
- Battery Charging
- Battery Condition Test
- BCT enabled
- Retry BCT on fail
- Battery Discharging
- Battery in Good Condition


Command Functions:

- BCT Enable Acknowledge
- BCT Disable Acknowledge
- BCT Start Acknowledge
- BCT Stop Acknowledge

PROGRAMMING THE PROTOCOL CONVERTER

The protocol converter is supplied with a programming software and programming cable. The software enables the user to set the baud rate and modbus address of the device while also making it possible to monitor the various power supply parameters.

Install Software from disk Power MBLink v1.2 by clicking on **Setup.exe**

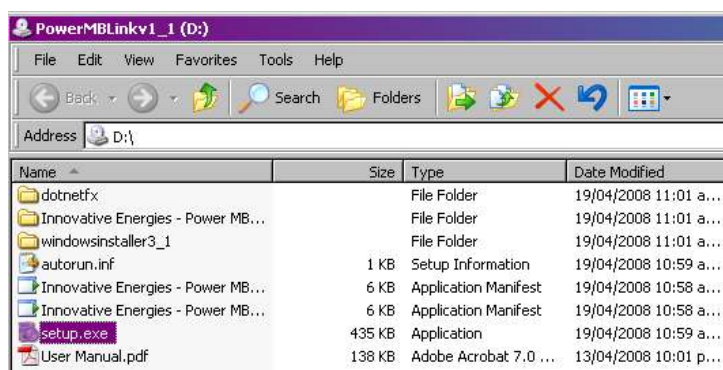

Click Start / 'All Programs / DoZeener Controls / Innovative Energies Power MBLink v1.2'

The program will begin.

In Communication settings: Click on 'List Available Ports'

The screenshot shows the 'Power MBLink v1.2' software window. The title bar reads 'Power MBLink v1.2'. The main title is 'Innovative Energies - Power Supply - Modbus Interface Programmer'. Below the title is 'Power MBLink Version 1.2' and a logo. The interface has a tabbed menu with 'Configuration', 'Configuration Instructions', 'Wiring Instructions', 'Modbus Monitor', and 'Settings & Diagnostics'. The 'Configuration' tab is active, showing 'Communication Settings' and 'Converter Information' sections. In 'Communication Settings', 'Port' is set to 1, 'Baud Rate' is 9600, 'Data Bits' is 8, and 'Stop Bits' is 1. There are buttons for 'List Available Ports', 'Open Comm Port', and 'Close Comm Port'. The 'List Available Ports' button is highlighted. In 'Converter Information', 'Serial Number' is 'No Data', 'Address' is 1, and there are buttons for 'Get Specs', 'Type', 'Hardware Rev', 'Firmware Rev', and 'Released', all showing 'No Data'. Below these is a 'Communications Setup' section with 'New Settings' for Address (1), Baud Rate (9600), Data Bits (8), Stop Bits (1), and Parity (None), with a 'Set New Comm Settings' button. At the bottom, there is a 'Notice' section with a table showing a notice with Code '03001', Type 'Notice', and Description 'COM1 Is/Are Available On This Machine.'.

Power MBLink v1.2

Innovative Energies - Power Supply - Modbus Interface Programmer

Power MBLink Version 1.2

Configuration | Configuration Instructions | Wiring Instructions | Modbus Monitor | Settings & Diagnostics

Communication Settings

Port: 1 Baud Rate: 9600

Data Bits: 8 Stop Bits: 1

List Available Ports Open Comm Port Close Comm Port

Converter Information

Serial Number: No Data

Address: 1

Get Specs

Type: No Data

Hardware Rev: No Data

Firmware Rev: No Data

Released: No Data

No Data

Communications Setup

New Settings: Address: 1 Baud Rate: 9600 Data Bits: 8 Stop Bits: 1 Parity: None

Set New Comm Settings

innovative energies

© 2008 DoZeener Controls - New Zealand
www.dozeener.com

Notice

Code	Type	Description
03001	Notice	COM1 Is/Are Available On This Machine.

In Communications Setup:

Set Port number to the available ports listed (preferably Port 1) and click Open Com Port. In the notice section Type should go from Notice to Success

This screenshot is identical to the previous one, but the 'List Available Ports' button is no longer highlighted. The 'Notice' section at the bottom now shows a notice with Code '01001', Type 'Success', and Description 'Communication Port 1 Successfully Opened'.

Power MBLink v1.2

Innovative Energies - Power Supply - Modbus Interface Programmer

Power MBLink Version 1.2

Configuration | Configuration Instructions | Wiring Instructions | Modbus Monitor | Settings & Diagnostics

Communication Settings

Port: 1 Baud Rate: 9600

Data Bits: 8 Stop Bits: 1

List Available Ports Open Comm Port Close Comm Port

Converter Information

Serial Number: No Data

Address: 1

Get Specs

Type: No Data

Hardware Rev: No Data

Firmware Rev: No Data

Released: No Data

No Data

Communications Setup

New Settings: Address: 1 Baud Rate: 9600 Data Bits: 8 Stop Bits: 1 Parity: None

Set New Comm Settings

innovative energies

© 2008 DoZeener Controls - New Zealand
www.dozeener.com

Notice

Code	Type	Description
01001	Success	Communication Port 1 Successfully Opened

In Converter Information:
Click on Get Specs

Power MBLink v1.2

Innovative Energies - Power Supply - Modbus Interface Programmer

Power MBLink Version 1.2

Configuration

Configuration Instructions

Wiring Instructions

Modbus Monitor

Settings & Diagnostics

Communication Settings

Port: 1Baud Rate: 9600Data Bits: 8Stop Bits: 1

List Available Ports

Open Comm Port

Close Comm Port

Converter Information

Serial Number: 08-00000-00000008

Type: 100

Address: 1Hardware Rev: v1.0

Get SpecsFirmware Rev: v1.0

Released: 13-4-8

DZC-ProtoCon-IE1 -> Innovative Energies Modbus Protocol Converter

Communications Setup

New Settings: Address: 1Baud Rate: 9600Data Bits: 8Stop Bits: 1Parity: None

Set New Comm Settings

innovative

energies

© 2008 DoZeener Controls - New Zealand
www.dozeener.com

Notice

Code	Type	Description
Notice: 01003	Success	Device Type, Release Date and Firmware Version Received Successfully From Device With Address1

When the information is displayed you will have started communications between the module and the computer.
Then go to: **Modbus Monitor TAB** and click on Continuous update in Communication.

Power MBLink v1.2

Innovative Energies - Power Supply - Modbus Interface Programmer

Power MBLink Version 1.2

Configuration

Configuration Instructions

Wiring Instructions

Modbus Monitor

Settings & Diagnostics

Power Supply Variables

Output Voltage: 27.7Volts

Battery Current: 00.0Amps

Power Supply Current: 01.5Amps

Battery Temperature: 20.0DegC

Status

Normal Operation

Battery Present

Battery OK (Pwr Fail)

Battery Charging

Batt. Condition Test

BCT Enabled

Retry BCT on Fail

Battery Discharging

Batt in Good Cond.

BCT Enable Ack

BCT Disable Ack

BCT Start Ack

BCT Stop Ack

Alarms

Mains Failure

Possible M/PSU Fail

Batt in Bad Cond.

Comms to PSU Fail

Overload

System Down

Battery Missing

Battery Low

Poss: Batt Missing

Communication

Address: 1

Single Update

Continuous Update

Stop Update

Watchdog: 5519

Battery Condition Test

Start BCT

Stop BCT

BCT Enable

BCT Disable

Notice

Code	Type	Description
Notice: 03006	Notice	Updating Information From Device With Address 1

You will then be able to view the Power Supply Variables and Settings and Diagnostics.

Power MBLink v1.2

Innovative Energies - Power Supply - Modbus Interface Programmer

Power MBLink Version 1.2

Configuration | Configuration Instructions | Wiring Instructions | Modbus Monitor | Settings & Diagnostics

Modbus Packets

Successful Polls: 110

Failed Polls: 0

Rest Counters

Power Supply Settings

BatDetect	60	Minutes
VPres	24.4	Volts
VShut	23.0	Volts
VBatI	22.0	Volts
VDisco	20.0	Volts
BCCL	100	%
BCTim	20	Minutes
CCMins	40	Minutes
CCHrs	23	Hours
CCDays	27	Days
MfiBCT	60	Minutes

Hover mouse over Power Supply Settings to display a description below

Move mouse over power supply setting to display a description of the parameter

Please send us your feedback on support@dozeener.com

Notice	Code	Type	Description
Notice:	03006	Notice	Updating Information From Device With Address 1

SERIAL MODBUS RTU PROTOCOL

The PROTOCONMB module is compatible with the following Modbus function codes:

- 01 – Read Coil Status
- 03 – Read Holding Registers
- 05 – Force Single Coil
- 06 – Preset Single Register
- 15 – Force Multiple Coils
- 16 – Preset Multiple Registers
- 22 – Mask Write 4x Register

A maximum of 80 coils can be polled at one time using function 01

A maximum of 32 register can be polled at one time using function 03

A maximum of 5 register can be preset at one time using function 06

A maximum of 32 coils can be preset at one time using function 15

Modbus ASCII mode is not supported.

DIMENSIONS

25 W x 90 H x 120 D mm

COMMUNICATION SETTINGS

The communication parameters of the protocol converter can be changed via the software “Power MBLink”

The following Baud Rate Settings are possible:

9600
14400
19200
38400
5600
57600
115200

The Modbus slave device also can be changed via the software

Parity can be changed to None, Odd, Even, Space and Mark only to models released after November 2009.

The Data Bits and Stop Bits cannot be changed and are set as 8 and 1 respectively.

RESETTING TO DEFAULT COMMUNICATION PARAMETERS

To reset to the default communication settings of

- Modbus address 1
- Baud rate 9600
- No parity
- 8 data bits and
- 1 stop bit

The reset connections RS+ and RS- must be shorted while powering up the device, then removed after approximately 5 seconds.

MODBUS REGISTER SET (MODBUS FUNCTIONS 3, 6, 15 & 22)

GENERAL

Reference	Modbus Address	Description	Type	Read / Write
Watchdog	40001	Watchdog	Register	R

DIGITAL MONITORING

Revised Digital Monitoring Bits

Modbus Address	Description	Type	Read / Write
BCT Related Digitals			
40008:1	BCT Active	Bit	R
40008:2	BCT Status(Enabled/Disabled)	Bit	R
40008:3	BCT Start (Acknowledge)	Bit	R
40008:4	BCT Stop (Acknowledge)	Bit	R
40008:5	BCT Enable (Acknowledge)	Bit	R
40008:6	BCT Disable (Acknowledge)	Bit	R
Information Digitals			
40009:1	Charge Cycle	Bit	R
40009:2	Battery Ok	Bit	R
40009:3	Battery Present	Bit	R
40009:4	Battery Possibly Missing	Bit	R
40009:5	Possible Mains Fail (Brown Out)	Bit	R
40009:6	Battery Sign (Set for Negative/Discharge)	Bit	R
40009:7	Temperature Sign (Set for Negative)	Bit	R
40009:8	Retry Battery Test on Fail	Bit	R
Alarm Digitals			
40010:1	Battery Bad	Bit	R
40010:2	Battery Missing	Bit	R
40010:3	Overload	Bit	R
40010:4	Communications Fail to Power Supply	Bit	R
40010:5	System Down	Bit	R
40010:6	Battery Low	Bit	R
40010:7	Mains Failure	Bit	R

Old Digital Monitoring Bits

The following registers have been replaced with the ones in the previous section '*Revised digital monitoring bits*'. The digital values in this section provide the same information as the revised ones but have a different interpretation.

It is recommended that these registers are not used for new applications.

Reference	Modbus Address	Description	Type	Read / Write
CC	40011:1	Charge Cycle (Normal Operation)	Bit	R
OL	40011:2	Overload	Bit	R
MF	40011:3	Mains Failure	Bit	R
BCT	40011:4	Battery Condition Test	Bit	R
BP	40011:5	Battery Present	Bit	R
BM	40011:6	Battery Missing	Bit	R
BL	40011:7	Battery Low	Bit	R
BB	40011:8	Battery Bad	Bit	R
M?	40011:9	Power Supply or Mains Failed (Brown Out)	Bit	R
B?	40011:10	Possibly Battery Missing	Bit	R
SD	40011:11	System Down	Bit	R
BO	40011:12	Battery OK during mains/psu fail	Bit	R
Bcond	40011:13	Battery Condition Test Enabled	Bit	R
Ret	40011:14	Retry Battery Test on Fail	Bit	R
TempSign	40011:15	Temperature Sign (1 = Negative, 0 = Positive)	Bit	R
BatSign	40011:16	Battery Current Sign (1 = Out, = 0 In)	Bit	R
BCT Start	40012:1	Battery Condition Test Started	Bit	R
BCT Stop	40012:2	Battery Condition Test Stopped	Bit	R
BCT Enable	40012:3	Battery Condition Test Enabled	Bit	R
BCT Disable	40012:4	Battery Condition Test Disabled	Bit	R
CommsF	40012:5	Communications Failure to Power Supply	Bit	R
b?	40012:9	Possibly Battery Missing (Battery Bad)	Bit	R
bM	40012:10	Battery Missing (Battery Bad)	Bit	R
bO	40012:11	Battery OK during mains/psu fail (Battery Bad)	Bit	R
bL	40012:12	Battery Low (Battery Bad)	Bit	R
bP	40012:13	Battery Present (Battery Bad)	Bit	R

DIGITAL CONTROL

Reference	Modbus Address	Description	Type	Read / Write
BCT Start	40013:1	Start Battery Condition Test	Bit	R/W
BCT Stop	40013:2	Stop Battery Condition Test	Bit	R/W
BCT Enable	40013:3	Enable Battery Condition Test	Bit	R/W
BCT Disable	40013:4	Disable Battery Condition Test	Bit	R/W

ANALOGUE PARAMETERS

Reference	Modbus Address	Description	Type	Read / Write
Vout	40014	Output Voltage (Scaled 1:10; 245 = 24.5 Volts)	Register	R
Ibat	40015	Battery Current (Scaled 1:10; 123 = 12.3 Amps)	Register	R
Ipsu	40016	Power Supply Current (Scaled 1:10; 123 = 12.3 Amps)	Register	R
Temp	40017	Temperature (in DegC)	Register	R

ANALOGUE SETTINGS

Reference	Modbus Address	Description	Type	Read / Write
BatDetect	40018	Time in minutes between battery detect tests (in mins)	Register	R
Vpres	40019	Minimum voltage to detect battery presence (Scaled 1:10 in Volts)	Register	R
Vshutd	40020	Shutdown Voltage (Scaled 1:10 in Volts)	Register	R
Vbatl	40021	Battery low alarm voltage level (Scaled 1:10 in Volts)	Register	R
Vdisco	40022	Battery disconnect voltage (Scaled 1:10 in Volts)	Register	R
Bccl	40023	Battery charge current limit (Scaled 1:10 in Amps)	Register	R
BCTim	40024	Length of battery condition test (in mins)	Register	R
CC Mins	40025	Time interval between BCTs (in mins)	Register	R
CC Hrs	40026	Time interval between BCTs (in hours)	Register	R
CC Days	40027	Time interval between BCTs (in days)	Register	R
MfiBCT	40028	Mains fail check interval during BCT (in mins)	Register	R

MODBUS COIL (BIT) SET (MODBUS FUNCTIONS 1, 5 & 15)

MONITORING

Revised Digital Monitoring Bits

Modbus Address	Description	Type	Read/ Write
BCT Related Digitals			
00030	BCT Active	Bit	R
00031	BCT Status(Enabled/Disabled)	Bit	R
00032	BCT Start (Acknowledge)	Bit	R
00033	BCT Stop (Acknowledge)	Bit	R
00034	BCT Enable (Acknowledge)	Bit	R
00035	BCT Disable (Acknowledge)	Bit	R
Information Digitals			
00036	Charge Cycle (Normal Operation)	Bit	R
00037	Battery Ok	Bit	R
00038	Battery Present	Bit	R
00039	Battery Possibly Missing	Bit	R
00040	Possible Mains Fail (Brown Out)	Bit	R
00041	Battery Sign (Set for Negative/Discharge)	Bit	R
00042	Temperature Sign (Set for Negative)	Bit	R
00043	Retry Battery Test on Fail	Bit	R
Alarm Digitals			
00044	Battery Bad	Bit	R
00045	Battery Missing	Bit	R
00046	Overload	Bit	R
00047	Communications Fail to Power Supply	Bit	R
00048	System Down	Bit	R
00049	Battery Low	Bit	R
00050	Mains Failure	Bit	R

Old Digital Monitoring Bits

The following coils have been replaced with the ones in the previous section '*Revised digital monitoring bits*'. The digital values in this section provide the same information as the revised ones but have a different interpretation.

It is recommended that these coils are not used for new applications.

Reference	Modbus Ad- dress	Description	Type	Read / Write
CC	00001	Charge Cycle (Normal Operation)	Bit	R
OL	00002	Overload	Bit	R
MF	00003	Mains Failure	Bit	R
BCT	00004	Battery Condition Test	Bit	R
BP	00005	Battery Present	Bit	R
BM	00006	Battery Missing	Bit	R
BL	00007	Battery Low	Bit	R
BB	00008	Battery Bad	Bit	R
M?	00009	Power Supply or Mains Failed (Brown Out)	Bit	R
B?	00010	Possibly Battery Missing	Bit	R
SD	00011	System Down	Bit	R
BO	00012	Battery OK during mains/psu fail	Bit	R
Bcond	00013	Battery Condition Test Enabled	Bit	R
Ret	00014	Retry Battery Test on Fail	Bit	R
TempSign	00015	Temperature Sign (1 = Negative, 0 = Positive)	Bit	R
BatSign	00016	Battery Current Sign (1 = Out, = 0 In)	Bit	R
BCT Start	00017	Battery Condition Test Started	Bit	R
BCT Stop	00018	Battery Condition Test Stopped	Bit	R
BCT Enable	00019	Battery Condition Test Enabled	Bit	R
BCT Disable	00020	Battery Condition Test Disabled	Bit	R
CommsF	00021	Communications Failure to Power Supply	Bit	R
b?	00022	Possibly Battery Missing (Battery Bad)	Bit	R
bM	00023	Battery Missing (Battery Bad)	Bit	R
bO	00024	Battery OK during mains/psu fail (Battery Bad)	Bit	R
bL	00025	Battery Low (Battery Bad)	Bit	R
bP	00026	Battery Present (Battery Bad)	Bit	R

CONTROL

Reference	Modbus Ad- dress	Description	Type	Read / Write
BCT Start	00065	Start Battery Condition Test	Bit	R/W
BCT Stop	00066	Stop Battery Condition Test	Bit	R/W
BCT Enable	00067	Enable Battery Condition Test	Bit	R/W
BCT Disable	00068	Disable Battery Condition Test	Bit	R/W

REVISION HISTORY

Revision Number	Date Revised	Revised By	Description
1	10-Jun-08	RM	Initial Revision
2	16-Jun-09	RM	Reformatted Document and programming cable wiring information
3	9-Jul-10	RM	Added revised digital monitoring set