



12843 Foothill Blvd.,  
Suite D  
Sylmar, CA 91342  
818 898 3380 voice  
818 898 3360 fax  
[www.dnfcontrols.com](http://www.dnfcontrols.com)

# **Model No. 4040CL-O-PBIO (& 4040CL-O-T-PBIO)**

## **300 CLIP FAST ACCESS SYSTEM**

*Odetics Protocol*

**USER MANUAL**

# TABLE OF CONTENTS

<b>1. REVISION HISTORY</b>	<b>4</b>
<b><i>GETTING STARTED . . .</i></b>	<b><i>5</i></b>
<b>2. SYSTEM DESCRIPTION</b>	<b>5</b>
DEFINITIONS	5
<b>3. SYSTEM INSTALLATION</b>	<b>6</b>
A. ST400-S/SM, VTR/DDR CONTROLLER	6
B. PRODUCTION SWITCHER	6
<b>4. VIDEO SERVER SETUP</b>	<b>7</b>
<b>4. VIDEO SERVER SETUP</b>	<b>8</b>
<b>5. LOAD A CLIP</b>	<b>8</b>
<b>6. LEARN A CLIP OR CLIP COMBINATION</b>	<b>9</b>
A. LEARN ON THE PRODUCTION SWITCHER	9
B. LEARN ON THE ST400	9
<b>7. RECALL A CLIP OR CLIP COMBINATION</b>	<b>10</b>
A. RECALL A CLIP FROM THE PRODUCTION SWITCHER	10
B. RECALL A CLIP FROM THE ST400	10
<b>8. RECUE CLIP</b>	<b>10</b>
<b>9. CLEAR CUE POINTS</b>	<b>11</b>
<b>10. LOOP CLIP</b>	<b>11</b>
<b>11. PLAY CLIP SEGMENT</b>	<b>12</b>
<b>12. PBIO ENABLE/DISABLE</b>	<b>12</b>
<b>13. PRODUCTION SWITCHER PBIO TRIGGER VALUES</b>	<b>13</b>
<b>14. TIMECODE SEARCH</b>	<b>14</b>
<b><i>ADVANCED FEATURES . . .</i></b>	<b><i>15</i></b>
<b>15. CREATING A CLIP</b>	<b>15</b>
<b>16. CAPTURE</b>	<b>15</b>
<b>17. CREATE CUE POINT LABELS</b>	<b>16</b>
ON THE ST400	16
<b><i>REFERENCE . . .</i></b>	<b><i>17</i></b>
<b>18. SETUP MENU</b>	<b>17</b>
<b>19. FUNCTION TABLE</b>	<b>20</b>
<b>20. SPECIFICATIONS</b>	<b>22</b>
RS422 SERIAL CONNECTOR	22
POWER CONNECTOR	22
<b>21. TROUBLESHOOTING</b>	<b>23</b>
PBIO TROUBLESHOOTING	23

<b>22. SCREEN SHOT</b>	<b>24</b>
<b>23. KEY LAYOUT</b>	<b>27</b>
<b>24. DNF CONTROLS LIMITED WARRANTY</b>	<b>28</b>

**Manual Version..... 3.53 110606**  
**Document ID..... 4040CL-O-PBIO\_User\_Manual.doc**

## **1. REVISION HISTORY**

100903	Rev. 3.2	Company header information revised.
102903	Rev. 3.3	Added DNF Controls Limited Warranty. Added Timecode Setup and Clearing Labels (Section 14).
073004	Rev. 3.4	Revised GPI IN/OUT CONNECTOR.
080205	Rev. 3.5	Updated Connection Diagram.
052506	Rev. 3.51	Updated dimensions for T-bar and Non T-bar housings. Added screen shots.
102606	Rev. 3.52	Updated CREATE functions.
110606	Rev. 3.53	Corrected clip capacity.

## *Getting Started . . .*

### **2. SYSTEM DESCRIPTION**

The 4040CL system includes DNF's most robust controller, the ST400, with the Cliplist software. The ST400 controls up to 6 video channels individually or ganged. It features full transport functionality.

The 4040CL provides fast access to fill clip and key clip combinations with the press of one key.

The 4040CL-O supports Odetics Broadcast protocol and requires that the Video Server be controllable under Odetics Broadcast Protocol.

The 4040CL provides fast access to existing video clips stored in the Grass Valley Group PROFILE, the Leitch VR, and other Video Servers supporting Odetics Broadcast Protocol.

### **DEFINITIONS**

- ❑ Throughout this document, DDR, VDR & Video Server will be referred to collectively as "Video Server."
- ❑ Words surrounded by brackets, for example, [ENTER], are keys on the ST400. [XXX] + [XXX] means hold the two keys down simultaneously.
- ❑ The 6 keys directly below the display are referred to as "Softkey." Their function changes as indicated on the last line of the display.

### **3. SYSTEM INSTALLATION**

#### **a. ST400-S/SM, VTR/DDR CONTROLLER**

- 1) Plug one end of a 9-conductor, RS422 serial cable into the VTR1 (2, 3, 4, 5 or 6) connector on the rear of the ST400. Plug the other end of the cable into the 9-pin REMOTE connector on the Video Server.
- 2) Connect the supplied POWER SUPPLY, APX#4108, into the POWER connector on the rear of the ST400. Plug the Power Supply into an outlet, 90 VAC - 240 VAC.
- 3) Check SETUP MENU prior to using the ST400 to confirm proper Record mode and other User settable modes.

#### **b. PRODUCTION SWITCHER**

- 1) Plug one end of a 9-conductor, RS422 serial cable into the "PBIO" connector on the rear of the ST400. Connect the other end of the cable to the Peripheral Bus Connector on the production switcher.
- 2) Refer to "SETUP MENU," Section 15 to set VTR1, VTR2, VTR3, VTR4, VTR5, & VTR6 Pbus Device Addresses, PBIO parity to match the Production Switcher, and Production Switcher type.

The Pbus baud rate must be set to "38400" on the Production Switcher.

- 3) Configure the production switcher:

On the production switcher -

Enable the Peripheral Bus.


Enable the Peripheral Device Addresses assigned to the ST400.

Enable the appropriate Learn/Recall levels.

Enable the Timeline or Recall Trigger function.

Installation is complete.

## CONNECTION DIAGRAM

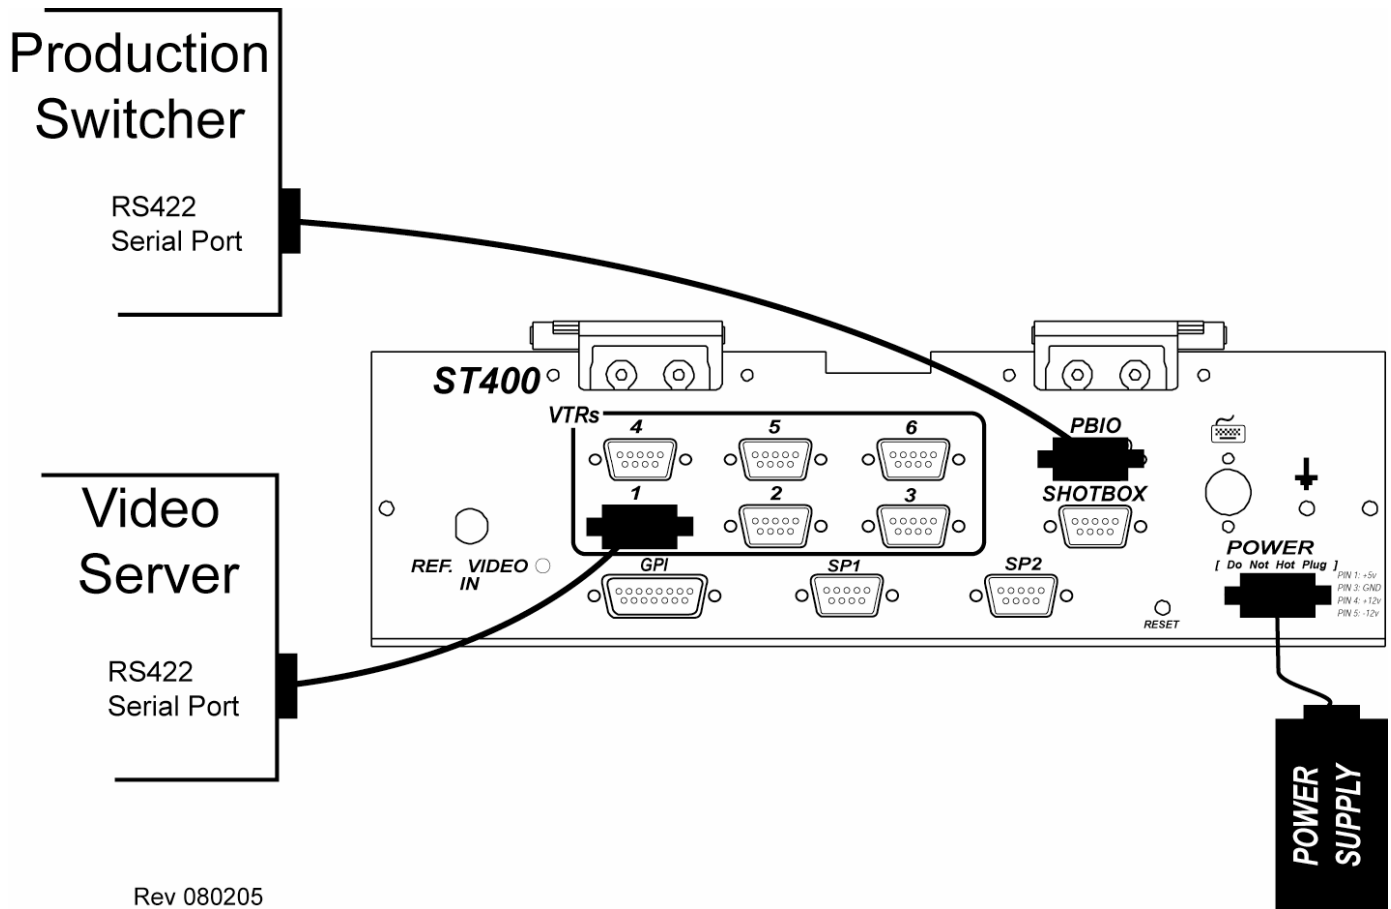

## 4. VIDEO SERVER SETUP

- a. Select ODETICS Broadcast communications protocol on the VIDEO SERVER to be controlled.
- b. Assign a serial port on the VIDEO SERVER through which the ST400 will control it.

**NOTES:** The VIDEO SERVER may not support LTC or VITC time modes in ODETICS Broadcast mode. The ST400 will default to Tape Time if a non-supported time mode is selected.

In ODETICS Broadcast mode, the VIDEO SERVER may **ONLY** allow Full Record. INSERT and ASSEMBLE record modes may be disabled.

The Grass Valley Group PROFILE does **not** support search to a time location using Timecode (LTC or VITC) in ODETICS Protocol. Tape Time mode (TM) must be selected on the ST400.

## 5. LOAD A CLIP

- a. Select a VTR by pressing VTR [1], [2], [3], [4], [5] or [6].
- b. Press [CLIP LIST] to view the list of CLIP IDs that are resident on the Video Server. The CLIP LIST indicator will turn on.
- c. Press [CREATE] to create and load a new clip.  
(Creating a clip is described in “CREATING A CLIP,” Section 12.)

**OR**

Turn the Wheel to view the existing CLIP IDs on the video server.

Turn the Wheel clockwise to scroll forward, or counter-clockwise to scroll backward, through the list of available CLIPs. Backward scrolling is limited to the last 10 screens of CLIP IDs viewed.

Press [LOAD] to load the highlighted CLIP ID. After loading the selected clip, the CLIP LIST function will terminate. The CLIP LIST indicator will turn off.

**OR**

Manually enter a Clip ID using the ST400 numeric keypad, or PC keyboard.

- d. Press [LOAD] to load the entered CLIP ID for payout.
- e. Repeat steps a. – b. to load clips on desired VTRs.
- f. Set the Gang Mode, if required. See ‘GANG SETUP’ in “FUNCTION TABLE,” Section 16.



## 6. LEARN A CLIP OR CLIP COMBINATION

### a. LEARN ON THE PRODUCTION SWITCHER

- 1) On ST400, Load a clip(s) on the desired VTR(s). (See “**LOAD A CLIP**,” Section 4.)
- 2) Select and enable the Peripheral Device Addresses for the ST400.
- 3) Do a LEARN to the desired REGISTER.

The ST400 will: LEARN (save) the VTR number, loaded CLIP ID and current IN & OUT time into the REGISTER number in the ST400.

### b. LEARN ON THE ST400

- 1) Press VTR [1], [2], [3], [4], [5] or [6] to select the channel to learn.
- 2) Load a clip on the selected channel. See section LOAD A CLIP.
- 3) Use the transport functions to view the clip.

Press [IN] to mark an IN point. The IN LED will turn on.  
On recall, the clip will cue to the IN time, not the beginning of the clip.

Optional- Press [OUT] to mark an OUT point. The OUT LED will turn on.  
On recall, the clip will play to the OUT point then stop.

To delete an IN or OUT point, press and hold [DEL], then press [IN] or [OUT].  
The IN/OUT LED will turn off.

If no IN point is marked, the current location of the clip will be learned as the IN point.

- 4) For GANGs, repeat steps 1) and 2) for each channel.

Then, press the [GANG] softkey.

Press VTR [1], [2], [3], [4], [5] or [6] to add it to the GANG. The VTR led will turn on.

Press the VTR key again to remove it from the gang. The VTR led will turn off.

Press [ESC] to exit GANG mode. The LEDs of all GANGed VTRs will turn on.

- 5) Select the desired Cue Point by pressing [NEXT CUE], [LAST CUE] or by manually entering the Cue Point using the numeric keypad, followed by [ENTER].

The selected Cue Point number is shown on the bottom part of the display.

- 6) Press [SHIFT] + [LEARN] to initiate the LEARN.  
The display will show: “Select VTRs to learn:-----”

- 7) Select the VTRs to learn by pressing VTR keys [1], [2], [3], [4], [5], and or [6].
- 8) Press [**LEARN**] to complete the learn process.  
NOTE: LEARN will overwrite the previous contents of the Shotkey.

Press [**ESC**] at anytime to escape without LEARNing.

## **7. RECALL A CLIP OR CLIP COMBINATION**

### **a. RECALL A CLIP FROM THE PRODUCTION SWITCHER**

- 1) On the ST400 in the SETUP MENU, set the desired PB addresses for the selected ST400 VTR channels that will be controlled by the Production Switcher.
- 2) On the Production Switcher, select and enable the PB addresses for the ST400 VTR channels that will be controlled.
- 3) On the Production Switcher, recall the desired REGISTER.

The ST400 will automatically load the Learned clips on the Learned VTRs, set the Learned IN and OUT points, cue the clips to the Learned IN point, set the Learned GANG mode.

### **b. RECALL A CLIP FROM THE ST400**

- 1) Select the desired Cue Point by pressing [**NEXT CUE**], [**LAST CUE**] or by manually entering the Cue Point using the numeric keypad.

The selected Cue Point number is shown on the bottom of the display.

- 2) Press [**LOAD**] on the ST400.

The ST400 will automatically load the Learned clips on the Learned VTRs, cue the clips to the Learned IN time, then set the Learned GANG mode.

## **8. RECUE CLIP**

- a. Press [**RECUE**]. If an IN Point is marked (the IN indicator is on), the clip will RECUE to the IN Point.

If the IN point is not marked, the clip will RECUE to the start of the clip.

- b. Press [**CUE OUT**] to cue to the marked OUT point.

## 9. CLEAR CUE POINTS

- a. Select the cue point to be cleared using [NEXT CUE], [LAST CUE], or manually entering the cue point number.
- b. Press [SHIFT] + [LEARN].  
The **CLEAR** softkey will be displayed on the bottom of the display.
- c. Press the [CLEAR] softkey to clear the cue point.  
The cue point will be cleared and the display will return to the normal screen.  
**OR**

Press [ESC] to escape without clearing.

## 10. LOOP CLIP

- a. Load the clip using CLIP LIST, or recall a cue point.  
(The clip **MUST** be loaded from the 4040CL.)
- b. Optional - Set an IN Point and/or OUT Point.  
Jog/Shuttle to the desired IN point. Press [IN].  
Jog/Shuttle to the desired OUT point. Press [OUT].  
**OR**  
  
Press [SHIFT] + [IN]. Manually enter the IN time on the numeric keypad.  
Press [ENTER].  
  
Press [SHIFT] + [OUT]. Manually enter the OUT time on the numeric keypad.  
Press [ENTER].
- c. Press [LOOP ENABLE].  
The clip will immediately start looping.

**NOTE:** If the CLIP ID ends with an asterisk ("\*"), it will automatically loop when either [LOOP ENABLE] or [PLAY] is pressed.

## 11. PLAY CLIP SEGMENT

- a. Set an IN Point and OUT Point.  
Jog/Shuttle to the desired IN point. Press **[IN]**.  
Jog/Shuttle to the desired OUT point. Press **[OUT]**.

**OR**

Press **[SHIFT]** + **[IN]**. Manually enter the IN time on the numeric keypad. Press **[ENTER]**.

Press **[SHIFT]** + **[OUT]**. Manually enter the OUT time on the numeric keypad. Press **[ENTER]**.

- b. Press **[RECUE]**. The clip will cue to the IN point.
- c. Press **[PLAY]**.  
The clip will play from its current time to the OUT point, then stop.

## 12. PBIO ENABLE/DISABLE

On the ST400 press the **[PBIO]** softkey to enable or disable PBIO. When disabled, the ST400 will ignore all Pbus commands. When enabled, the ST400 will respond to all Pbus commands.

When enabled and Pbus commands are received, the softkey's LED will flash.

## 13. PRODUCTION SWITCHER PBIO TRIGGER VALUES

The Production Switcher outputs a Peripheral Bus trigger at specific Timeline key frames, as programmed by the operator. The 4040CL performs a specific function for each trigger value:

### GRASS VALLEY GROUP Production Switcher

<u>Trigger Value</u>	<u>Mode</u>
0	Play (If OUT point is specified, stop at OUT. If clip ends with “*”, Loop Play.)
1	Recue to beginning of clip
2	Slo-mo using ST400 Preset Speed
3	Reverse Play
4	Still Frame
5	Loop (Odetics mode only)
6	Record
7 or greater	Play

### SONY Production Switcher

<u>Trigger Value</u>	<u>Mode</u>
0	Recue to beginning of clip Play
1	Play (If OUT point is specified, stop at OUT. If clip ends with “*”, Loop Play)
2	Slo-mo using ST400 Preset Speed
3	Reverse Play
4	Still Frame
5	Loop (Odetics mode only)
6	Record
7 or greater	Play

To control more than one VTR, enable the Peripheral Device Address for each VTR. The Trigger value will be sent to the enabled devices.

**OR**

GANG the required VTRs on the ST400. See “**FUNCTION TABLE**,” Section 16, for GANG instructions. Enable the Peripheral Device Address for one of the GANGed VTRs. The Trigger will be sent to the enabled VTR. The other VTRs in the GANG will perform the same action.

## 14. TIMECODE SEARCH

In order to properly search by Timecode, please select Timecode = NOT SUPPORTED menu option for every channel connected to the Profile and Timecode = SUPPORTED for all other channels.

To select “Timecode” option:

- a. Press [**MENU**] key.
- b. Turn the wheel until TIMECODE option is highlighted.
- c. Press [**CHANGE**] softkey.
- d. Press a softkey to select SUPPORTED or NOT SUPPORTED setting.
- e. Press [**ESC**] twice to exit menu mode.

## *Advanced Features . . .*

### **15. CREATING A CLIP**

- a. Press **[CLIP LIST]**.
- b. Press **[CREATE]**. The display will show the default CLIP ID.
- c. Press **[LOAD]** to accept the default CLIP ID.

**OR**

Manually enter an ID with a maximum of 8 characters on the ST400 numeric keypad.

**OR**

Manually enter an ID with a maximum of 8 characters on a PC keyboard.

- d. Press **[LOAD]**.  
The clip will be created with the entered CLIP ID.

If the selected CLIP ID already exists, a warning message will be displayed. To load the existing clip, press **[ENTER]**. Press **[ESC]** to exit without loading the existing clip.

### **16. CAPTURE**

This function allows clips to be recorded onto the Video Server from a video source (SOURCE) such as a VTR. The SOURCE is connected to the VTR6 connector on the rear of the 4040CL-O.

Prior to performing a capture, press **[MENU]**.

Set the DESTINATION to other than VTR 6

Set the RECORD MODE to CRASH

Set the RECORD DELAY, this is the record delay of the video server. Typical value is 3 (frames).

Set the PROTOCOL for the SOURCE VTR (VTR 6) to BVW.

Set the PREROLL value for the SOURCE VTR. Typical value is 5 seconds.

- a. Press VTR **[6]** to initiate the Capture function.
- b. Set an IN point on the SOURCE VTR.

Jog/Shuttle to the desired IN point. Press **[IN]**.

**OR**

Press **[SHIFT] + [IN]**. Manually enter the IN time on the numeric keypad. Press **[ENTER]**.

- c. Set an OUT point on the SOURCE VTR.

Jog/Shuttle to the desired OUT point. Press **[OUT]**.

**OR**

Press **[SHIFT] + [OUT]**. Manually enter the OUT time on the numeric keypad. Press **[ENTER]**.

- d. Press **[SHIFT]** + **[REC]** keys. The display will prompt for a CLIP ID.  
  
Manually enter a CLIP ID (maximum of 8 characters) using the numeric keypad, or PC keyboard.  
  
Press **[ENTER]** to accept the entered CLIP ID.  
  
Optional: Press the **{<-}** or **{->}** sortkey to select the start timecode value. Use the Key pad to enter the timecode value.
- e. Press the **{CREATE}** softkey, this will start the create process.  
  
The SOURCE VTR will preroll to it's IN point, then play. The video server will start recording at the SOURCE IN point and stop recording at the SOURCE OUT point.  
  
The created clip will be loaded on the destination channel.

## 17. CREATE CUE POINT LABELS

Use LABELS mode to assign meaningful names to cue points. LABELS provides a faster and easier method to select cue points.

### ON THE ST400

- a. In Setup Menu, turn LABEL MODE on.
- b. Select cue point to label.
- c. Press the **[LABEL]** key.
- d. Manually enter a label, up to 8 characters in length, using the numeric keypad, or PC keyboard.
- e. Press the **[ENTER]** to assign the entered label to the selected cue point.  
**OR**  
**[ENTER]** on the PC keyboard.  
**OR**  
**[NEXT CUE]** or **[LAST CUE]**.

**NOTE** - Labels are saved in non-volatile memory in the ST400. They are not saved in the video server.



## Reference . . .

### 18. SETUP MENU

Press **[MENU]**. The MENU indicator will turn on.  
The display will show the following parameters with their current settings.

Turn the wheel to select a menu option.  
Press the **[CHANGE]** softkey to modify the current setting.

Press the **[EXIT]** softkey to exit the Setup Menu.

<b><u>PARAMETER</u></b>	<b><u>DESCRIPTION</u></b>
<b>WIND MODE</b>	<p>Press Softkey to select: HOLD (fast wind is maintained only while key is depressed.) <b>OR</b> LATCH (fast wind is maintained after key is released.)</p> <p>Set the fast wind speed (3.9 to 23.7) by pressing the <b>[SPD]</b> softkey.</p>
<b>RECORD MODE</b>	<p>Press <b>[MENU]</b> to select the desired record mode: Lockout, Assemble, Crash (Full) or Insert.</p> <p><u>Only</u> in INSERT mode: Press the associated Softkey, located below the display, to toggle Video(V), Audio1(A1), Audio2(A2), Audio3(A3) on/off, Audio4 (A4) on/off.</p>
<b>SLOMO</b>	<p>Press the <b>[TBAR]</b> (or <b>[WHEEL]</b>) softkey to select the T-bar or wheel for slomo.</p> <p><b>For T-bar:</b> The T-BAR has a speed range of 0→2x with a detent at 1x play speed <b>OR</b> a range of 0→1x (detent at 1x Play speed).</p> <p>Press <b>[SPD-RNG]</b> softkey to toggle between SLOMO speed ranges: 0 → 1x <b>OR</b> 0 → 2x.</p> <p>Press <b>[BACK]</b> softkey to return to SLOMO MENU.</p> <p>Press <b>[ESC]</b> to exit <b>OR</b> turn the Wheel to select another item.</p> <p><b>For Wheel:</b> Press the <b>[PRSET]</b> sofkey to toggle between UPDATE and STATIC modes.</p> <p>UPDATE- When exiting SLOMO mode, the last used speed is saved in the Preset Speed register.</p> <p>STATIC- ThePreset Speed register is NOT updated when exiting SLOMO mode. It is only changed by <b>[SHIFT]</b> + <b>[SLOMO]</b> (PRESET SLOMO).</p> <p>Press <b>[SPD-RNG]</b> softkey to toggle between SLOMO speed ranges: 0 → 1x <b>OR</b> 0 → 2x.</p>

<b>SYNC</b>	Select the appropriate softkey to enable or disable the Reference Video input. <b>[ON]</b> <b>[OFF]</b>
<b>RECORD KEY</b>	Select single button or 2-button record: RECORD = <b>[REC]</b> Only <b>OR</b> RECORD = <b>[REC]</b> + <b>[PLAY]</b>
<b>RECALL MODE</b>	Press <b>[NORMAL]</b> or <b>[REDIR]</b> (redirect).  REDIR- When one and only one clip is learned into a Cue Point, the Clip will be REDIRECTED to load on the currently selected VTR  NORMAL- The cue point will load on the learned VTR.
<b>PREROLL</b>	Enter Preroll value.
<b>RECORD DELAY</b>	Enter delay value. (Used by CAPTURE function.)
<b>GANG MODE</b>	<b>[PERM]</b> Permanent Gang- The GANG can be created and undone only with the <b>[GANG]</b> softkey.  <b>[TEMP]</b> Temporary Gang- Quickly create a GANG by pressing and holding a VTR key, then pressing other VTR keys. Quickly undo the GANG by pressing any VTR key.
<b>STANDARD</b>	Press <b>[NTSC]</b> or <b>[PAL]</b> to select the video standard for time calculations.
<b>PROTOCOL</b>	Select <b>[ODETICS]</b> or <b>[BVW]</b> .  <b>[ODETICS]</b> Select Odetics to allow clip functionality: Load, Create, Recue, View available Clips.  <b>[BVW]</b> Select BVW to control video server like a VTR. In this mode, the clip must have already been loaded.
<b>TIMECODE</b>	Select <b>[NOT SUPPORTED]</b> to have TC search on the GVG servers, or <b>[SUPPORTED]</b> for all other servers.

<b>CLEAR MEM</b>	<p>[DFLTS] [CLR – LBL] [CLR – QS] [CLR-BNK] [BACK]</p> <p>DFLTS Set ST400 to factory defaults. Follow the prompts on the display. Press [YES] to continue or press [NO] to exit without changing ST400.</p> <p>CLR – BNK Clears all cue points in the selected bank. Follow the prompts on the display.</p> <p>CLR – QS Clears all cue points in all banks. Follow the prompts on the display.</p> <p>CLR – LBL Clears all labels associated with cue points. Does not clear cue points. Follow the prompts on the display.</p> <p>BACK Return to prior menu item.</p>
<b>PB ADDRESS</b>	<p>Select [VTR1], [VTR2], [VTR3], [VTR4], [VTR5], or [VTR6]. Assign Pbus Device Address to selected VTR by entering an address between 0 and 23 using numeric keypad.</p> <p><b>OR</b> Press DEL to turn off Pbus control for the VTR.</p>
<b>PB SWITCHER</b>	Select [GRASS VALLEY] or [SONY] Production Switcher. For Philips, use Grass Valley.
<b>PBIO PARITY</b>	Press [NONE], [ODD] or [EVEN] parity to match the Pbus setting on your Production Switcher.

## 19. FUNCTION TABLE

Function	Key Press	Description
CUE TO OUT POINT	[CUE OUT]	If OUT point is marked, cue to the OUT point.
FFWD	[FFWD]	Press and HOLD to shuttle. Release key to stop. Set WIND Speed in MENU.
GOTO ENTERED TIME	[SHIFT] + [RECUE]	Search the VTR to the manually entered time.  Use the ST400 numeric keypad. Press [ENTER] or [RECUE].
GANG SETUP	[GANG]	Individually press the VTR keys to be included in the gang. The LED above the key will turn on. Press the VTR key again to remove from gang, the LED above the key will turn off. Press [ESC] to exit.  Upon exiting, all members of the gang will have their VTR LEDs turn on. The flashing LED shows which VTR is currently selected.
JOG	[JOG]	Select JOG mode and enable Wheel.
LAST CUE	[LAST]	Step to the previous Cue Point Location.
LOOP	[LOOP ENABLE]	Plays the currently loaded clip in a continuous loop.
NEXT CUE	[NEXT]	Step to the next Cue Point Location.
PREROLL	[PREROLL]	If an IN point is marked, preroll to the IN point using the PREROLL VALUE in the Setup Menu.
RECORD	[REC]	Places VTR into the Record mode selected by RECORD MODE in the SETUP MENU. Press [RECORD] OR [RECORD] + [PLAY].
REWIND	[RWD]	Press and HOLD to shuttle. Release key to stop. Set WIND Speed in MENU.
SHUTTLE	[SHUTTLE]	Select SHUTTLE mode and enable Wheel.
SLOMO	[SLOMO]	Press [SLOMO] to slo-mo the VTR. Turn the Wheel (or move the T-Bar, if available) to change the play speed. Press [SLOMO] to STILL frame <b>OR</b> press any transport key to exit SLOMO.
SLO-MO SPEED PRESET	[SHIFT] + [SLOMO]	For WHEEL <b>ONLY</b> : Press [SHIFT] + [SLOMO] to preset the slo-mo speed. Turn the Wheel to select desired speed. Press [ESC] or any transport key to exit.

<b>Function</b>	<b>Key Press</b>	<b>Description</b>
STOP	[ <b>STOP</b> ]	Press once to STILL frame VTR. Press again to put VTR into STOP mode.
TIME MODE SELECT	[ <b>TIME MODE</b> ]	Press to toggle between Timecode (TC), VITC (VT) or Tape Timer (TM) display modes.
PLAY	[ <b>PLAY</b> ]	If an OUT point is marked, play to the OUT point and stop. If no OUT point is marked, play normally.  If the clip ID ends with an '*', do loop play.
PLAY- SIMPLE	[ <b>SHIFT</b> ] + [ <b>PLAY</b> ]	Play normal.
SELECT DESTINATION (on VTR6 only)	[ <b>DEST</b> ]	For CAPTURE function only. Select the DESTINATION video server channel.
RECUE	[ <b>RECUE</b> ]	If the IN point is marked, cue to the IN point. If IN point is not marked, cue to the beginning of the clip.  (Under BVW protocol, no action occurs.)
PBIO ENABLE/ DISABLE	[ <b>PBIO</b> ]	PBIO LED is ON if PBIO is enabled. Toggle the key to temporarily disable all PBIO signals. The key blinks when a valid PBIO command is received from the Production Switcher.

## 20. SPECIFICATIONS

Power:	90 VAC to 265 VAC adapter supplied with IEC connector APX Model #AP4108 +5v @ 4A, +12v @ 1.0A, -12V @ 0.6A	
Size:		
Non-Tbar	(H x W x D) 1 3/4 (front) x 3 3/8 (rear) x 11 3/8 x 6 1/2 (8 5/8 high to top of display)	
T-bar	(H x W x D) 1 3/4 (front) x 3 3/8 (rear) x 13 3/4 x 6 1/2 (8 5/8" high to top of display)	
Weight:	10 lbs.	
Rear Panel Connectors:	VTR1, 2, 3, 4, 5,6 GPI Power SHOTBOX PBIO Keyboard Ref. Video In Ground	(All DB9F) (DBF25F) (DB9M) (DB9F) (DB9F) (6-pin mini DIN) (BNC) Threaded stud.
Display:	Easy to read, back-lit LCD display	
Jog/Shuttle Wheel:	With mechanical detents	

### RS422 SERIAL CONNECTOR

#### 9-Pin D-Type, Female (DB9F)

Pin #	1	Frame Ground	6	Receive Common
	2	Receive A ←	7	Receive B ←
	3	Transmit B →	8	Transmit A →
	4	Transmit Common	9	Frame Ground
	5	Spare		

### POWER CONNECTOR

#### 9-Pin D-Type, Female (DB9M)

Pin #	1	+5v DC	6	+5 VDC
	2	+5v DC	7	Ground
	3	Ground	8	Ground
	4	+12 VDC	9	Ground
	5	-12 VDC		

## **GPI IN/OUT CONNECTOR 26-Pin D-Type, Female (DB26F)**

<b>Pin #</b>	<b>Function</b>	<b>Pin #</b>	<b>Function</b>
1	No Connection	14	GPI #5 Last Cue
2	No Connection	15	GPI #6 Recall
3	No Connection	16	No Connection
4	No Connection	17	No Connection
5	No Connection	18	Ground
6	No Connection	19	+5V
7	No Connection	20	+5V
8	No Connection	21	No Connection
9	Ground	22	No Connection
10	GPI #1 Play	23	No Connection
11	GPI #2 Stop	24	No Connection
12	GPI #3 Recue	25	No Connection
13	GPI #4 Next Cue	26	Ground

## **21. TROUBLESHOOTING**

### **PBIO TROUBLESHOOTING**

Press **[SHIFT]** + **[PBIO]**. The display will show PBIO DATA.

All Pbus commands received from the production switcher will be shown on the display. Communication errors due to parity mismatch or baud rate mismatch will be shown as ‘-’. If no command data is shown, then no commands are being received from the production switcher. Check the Production Switcher’s Pbus set. Also check the cabling between the Production Switcher and ST400.

Press **[SHIFT]** + **[PBIO]** to exit this test mode.

## 22. SCREEN SHOT

### 4040CL & 2044CL Main Screen

(Not to scale)

TM 00:00:00:00	VTR1
PLAY MODE: NORMAL (REC MODE: LOCKOUT)	
LOADED:	
CLIP:	
IN: --:--:--:--	DUR: --:--:--:--
OUT: --:--:--:--	SPEED: +0.00
Q000	
Clip: CLIPNAME	
IN: 00:00:00:00	DUR: 00:00:00:00
OUT: 00:00:00:00	
VTRS: 1 3 5	
CUE-OUT GANG	




**4040CL & 2044CL GANG Screen**  
(Not to scale)

TM 00:00:00:00	VTR1
PLAY MODE: NORMAL (REC MODE: LOCKOUT)	
LOADED:	
CLIP:	
IN: --:--:--:--	DUR: --:--:--:--
OUT: --:--:--:--	SPEED: +0.00
Select VTRs to gang: 1 - 3 - 5 -	
Q000	
Clip: CLIPNAME	
IN: 00:00:00:00	DUR: 00:00:00:00
OUT: 00:00:00:00	
VTRS: 1 3 5	
CUE-OUT GANG	

**4040CL & 2044CL Clip List Screen**  
(Not to scale)

TM 00:00:00:00	VTR1
PLAY MODE: NORMAL (REC MODE: LOCKOUT)	
LOADED:	
CLIP:	
IN: --:--:--:-- DUR: --:--:--:--	
<div style="border: 2px solid black; padding: 10px;"><p>▶▶▶ CLIP0001 CLIP0002 CLIP0003 CLIP0004 CLIP0005 CLIP0006 CLIP0007 CLIP0008 CLIP0009 CLIP0010</p></div>	
Turn Wheel to view clips, LOAD to Load. Press [CREATE] to Create a new clip. Press ENTER to manually enter clip ID.	
CREATE	ESC

## 23. KEY LAYOUT

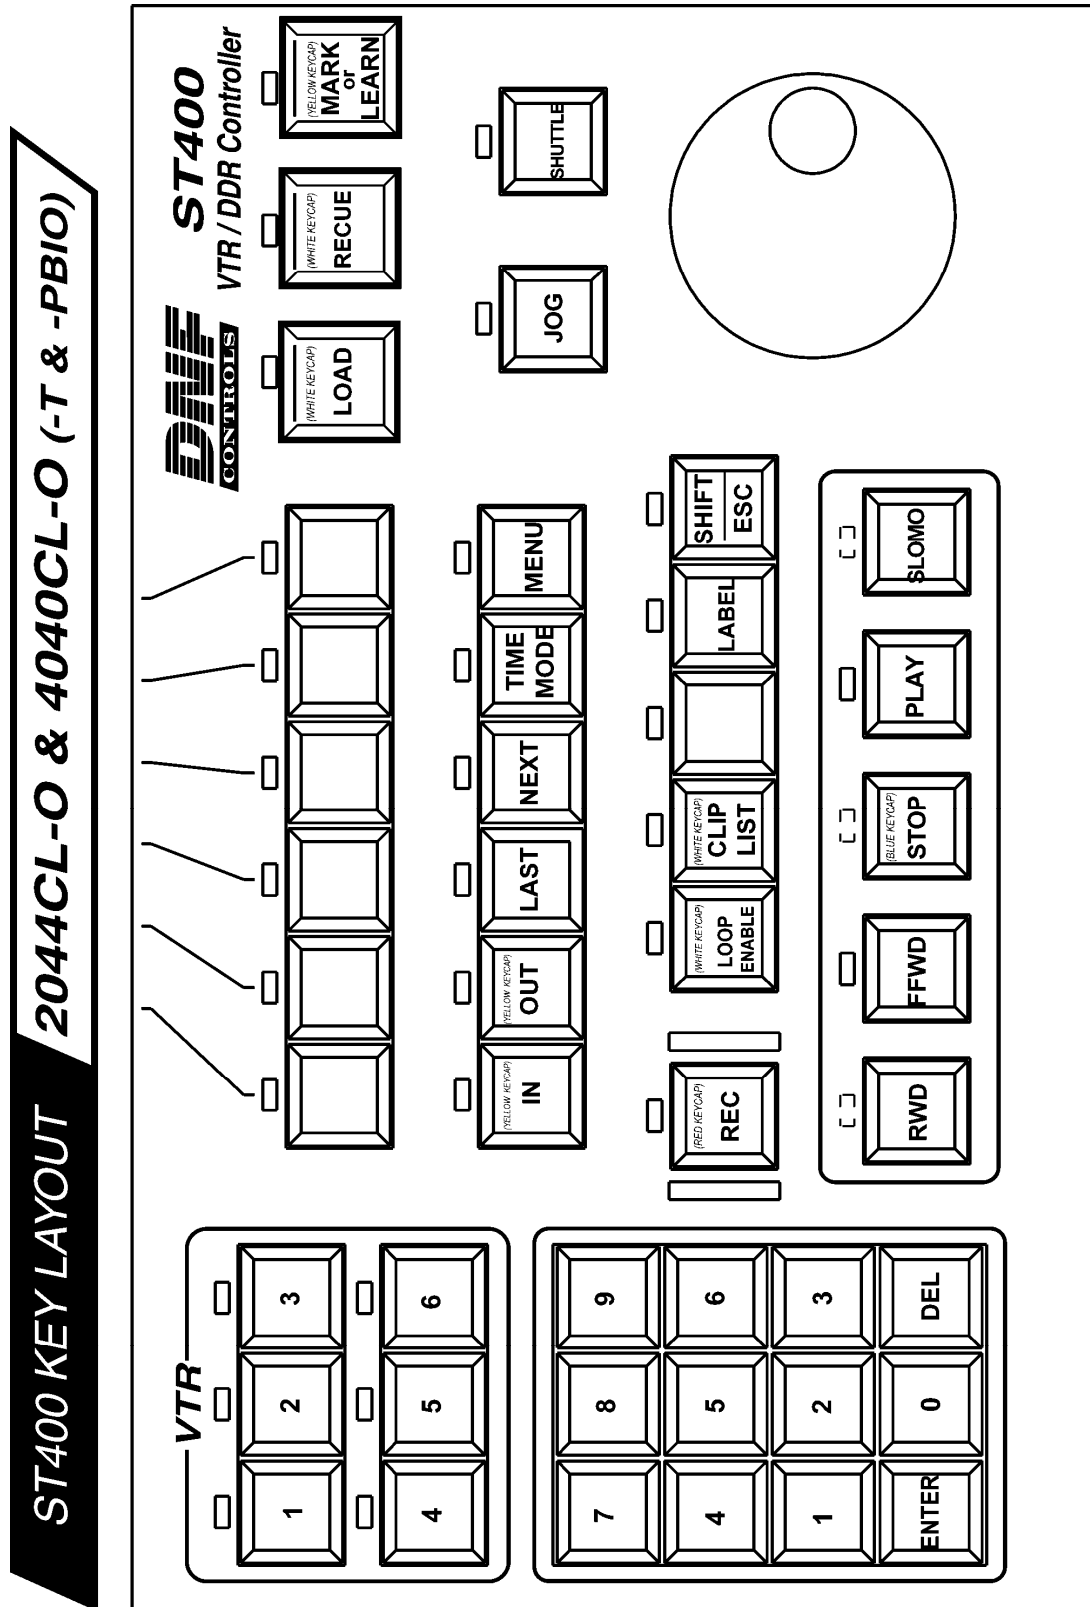

## **24. DNF CONTROLS LIMITED WARRANTY**

DNF Controls warrants its product to be free from defects in material and workmanship for a period of one (1) year from the date of sale to the original purchaser from DNF Controls.

In order to enforce the rights under this warranty, the customer must first contact DNF's Customer Support Department to afford the opportunity of identifying and fixing the problem without sending the unit in for repair. If DNF's Customer Support Department cannot fix the problem, the customer will be issued a Returned Merchandise Authorization number (RMA). The customer will then ship the defective product prepaid to DNF Controls with the RMA number clearly indicated on the customer's shipping document. The merchandise is to be shipped to:

DNF Controls  
12843 Foothill Blvd., Suite D  
Sylmar, CA 91342  
USA

Failure to obtain a proper RMA number prior to returning the product may result in the return not being accepted, or in a charge for the required repair.

DNF Controls, at its option, will repair or replace the defective unit. DNF Controls will return the unit prepaid to the customer. The method of shipment is at the discretion of DNF Controls, principally UPS Ground for shipments within the United States of America. Shipments to international customers will be sent via air. Should a customer require the product to be returned in a more expeditious manner, the return shipment will be billed to their freight account.

This warranty will be considered null and void if accident, misuse, abuse, improper line voltage, fire, water, lightning or other acts of God damaged the product. All repair parts are to be supplied by DNF Controls, either directly or through its authorized dealer network. Similarly, any repair work not performed by either DNF Controls or its authorized dealer may void the warranty.

After the warranty period has expired, DNF Controls offers repair services at prices listed in the DNF Controls Price List. DNF Controls reserves the right to refuse repair of any unit outside the warranty period that is deemed non-repairable.

DNF Controls shall not be liable for direct, indirect, incidental, consequential or other types of damage resulting from the use of the product.

###

