



EK20-IDSCAN USER MANUAL

The "RFIDSCOPE"

ID-SCAN is a powerful RFID detector covering all the most used transponders on the market. The function LF/HF/UHF SCANNER permits to identify a tag in few seconds. The function PAGE READ permits to read the memory contents (UID/EPC,TID,USER PAGE) The tags actually detected by IDSCAN are listed below:

LF SCANNER 125 KHz

Type	Page Read
UNIQUE-EM4102	UID only
Q5	UID/PAGE
TK5577	UID/PAGE
TITAN-EM4550	UID/PAGE
HITAG 1	UID/PAGE
HITAG 2	UID/PAGE
HITAG S	UID/PAGE
HITAG 256	UID/PAGE

HF SCANNER 13.56 MHz

Type	Page Read
14443A	
MIFARE 1K	UID/PAGE
MIFARE 4K	UID/PAGE
MIFARE ULTRALIGHT	UID/PAGE
MIFARE PLUS	UID
MIFARE DESFIRE	UID
14443A GENERIC	UID/PAGE
15693	
ICODE NXP 1K	UID/PAGE
ICODE NXP 2K	UID/PAGE
LRI-2K STM	
15693 GENERIC	UID/PAGE
14443B	
SRIX STM 512	UID/PAGE
SRIX STM 4K	UID/PAGE
ST19-WR08 STM	UID
CALYPSO	UID
14443B GENERIC	UID/PAGE

UHF SCANNER 868MHz (EU)

Type	Page Read
MONZA2	EPC/TID/PAGE
MONZA3	EPC/TID/PAGE
MONZA4D	EPC/TID/PAGE
MONZA4U	EPC/TID/PAGE
MONZA4QT	EPC/TID/PAGE
MONZA4E	EPC/TID/PAGE
MONZA5	EPC/TID/PAGE
HIGGS2	EPC/TID/PAGE
HIGGS3	EPC/TID/PAGE
UCODE G2XM	EPC/TID/PAGE
UCODE G2XL	EPC/TID/PAGE
UCODE G2iL	EPC/TID/PAGE
UCODE G2iL+	EPC/TID/PAGE
UHF GENERIC	EPC/TID/PAGE

Read from front side (LF-HF-UHF)



Read from bottom side(UHF)




OPERATION MODE


IDSCAN use two area to operate:

WORKING AREA is the scan operation area.

SETTINGS AREA is an area where to set some useful parameters.

TURN ON/OFF

TURN-ON Press for a short time the key 

TURN-OFF Press the key  for about 2 sec.

WORKING AREA

After turn on the LCD display the current version.

IDSCAN 5.0

If IDSCAN remains inactive for more than 3 minutes automatically will be turn off to preserve the battery.

LOW BATTERY

If a low battery is detected appears:


The LCD lamp and BUZZER flash three times and IDSCAN turn-off.

Low Battery

If no alarm detected appears :

Scanner Ready

RFID SCANNER

To start the tag detection press .

IDSCAN attempt to recognize an unknown transponder.

Before it run a scan on LF frequency

Running LF

and next a scan on HF

Running HF

and next a scan on UHF

Running UHF

When a TAG is detected the LCD lamp and BUZZER flashes 3 times.

On the LCD appear the Tag Type and the UID detected.

The UID length and meaning is different for any Type of Tag.

Refer to the "Technical Specification" of that TAG.

HITAG-1	UID
---------	-----

If no detection:

TAG UNKNOWN

PAGE READ

Place the TAG in the RF field.

To read the UID press .


HITAGS	UID
34C456F8	

To read the PAGES on the tag use   to increment or decrement the PAGE number and press .

Will appear the read value in HEX format.

HITAGS	004
12345678	

If a Data Error was detected appear Read Error.

To repeat press .

HITAGS	004
Read Error	

SOME EXAMPLES

UNIQUE-Q5-TK5557

The UID display the content of the USER AREA in HEX format (5bytes).

UNIQUE	UID
15F53244D5	

Q5 and T5577 have a PAGE containing an UNIQUE SERIAL NUMBER.

Use to change to PAGE 000 and press .

Q5 PAGE Serial Code (5 bytes HEX).

Q5	000
A534C21233	

T5577 PAGE Serial Code (8 bytes HEX).

T5577	000
E015015576B4F899	

HITAG S

Read Serial Code (4 bytes HEX)

HITAGS	UID
467BF970	

Read Page 004 (4 bytes HEX)

HITAGS	004
53535353	

ISO 14443A

MIFARE CLASSIC 1K Serial Code (4 byte Hex)

MIFARE-1K	UID
5C63161D	

Select a Page (Block 001)

MIFARE-1K	001

Then press to display 16 bytes HEX of the selected page.

1234567890ABCDEF	
FFFFFF3245778BDE25	

ISO 15693

ICODE NXP 1K Serial Code (5 bytes HEX).

ICODE NXP 1K	UID
0009CA1B95	

Read PAGE 002 (4 bytes HEX).

ICODE NXP 1K	002
696F2050	

ISO 14443B

SRIX-ST-512 Serial Code (8 bytes HEX).

SRIX-ST-512	UID
F082CB67C71802D0	

Read PAGE 010 (4 bytes HEX).

SRIX-ST-512	010
33343536	

UHF

MONZA5 EPC Code (12 or 16 bytes HEX or ASCII).

MONZA5	EPC

Press to display the EPC code

3000000000000000	
00000000	

Use to change to TID and press .

MONZA5	TID

E2801100200054C6	
155F016F	

Use to scroll the PAGES of USER AREA and press .

Any pages shows 16 bytes in HEX

MONZA5	002

Es. mode HEX

3031303230333034	
3035303630373038	

Es. mode ASCII

Paul Smith	
CAMRAS SA	

SETTINGS AREA

To pass from WORK AREA to SETTINGS AREA and vice versa, hold down the ESC key for 3 seconds.

When enter the SETTING AREA appear the first selection of the MENU list.

1)


Set the SCAN MODE:

LH scan only for LF and HF tags.

LU scan only for LF and UHF tags.

HU scan only for HF and UHF tags.

LHU scan for all tags.

Pressing , the cursor moves on the selection and **stores** the value.

Scroll down  to the next item.

SC:LH LU HU LHU

2)

Set the reading mode of an UNIQUE code.

NORM is the INOUT format.

Example: F040F2B370

INV is the SOKYMAT format

0F024FCD0E

Scroll down  to the next item.

Unique:NORM INV

3)

Set the reading mode for EPC and USER MEMORY of an UHF tag.

ASC the reading is made in ASCII format.

HEX the reading is in HEX format.

Scroll down  to the last item.

UHF_E U:ASC HEX

4)

Set all the Mifare Crypto KeyA for all Sectors at the default value: FFFFFFFFFF into the reader chip.

Pressing  start the operation.

At the end appear "Data saved".

MIF:ALL KEY DEFAULT

AVAILABLE MODELS

EK20-IDSCAN-LH

Model with LF and HF antennas

EK20-IDSCAN-LHU

Model with LF and HF and UHF antennas.

The USB interface is always present in all the models.

FIRMWARE AND TEXT UPGRADE

Open the folder: "IDSCAN_CD"

INSTALL THE DRIVER USB

1) Open the folder "MCP2200WindowsDriver".

2) In "DriverInstallationTool" select "X64" for 64bit or "X86" for 32 bit.

Launch "MCP2200DriverInstallationTool". Press "Install" and wait for the end of the driver installation.


INSTALL USB ON PC


1) Turn off the READER. Insert the USB connector and turn on the READER.

2) Begin the installation of a new device. Wait for the complete installation of the assigned COM PORT.

Turn on IDSCAN.

Will appear on the LCD:

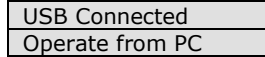

Now double click on the icon  to launch the program "EK20 UPLOADER".

- Set the COM PORT and the bit rate at 19200.


- Press UPLOAD PROGRAM.

- Select the file IDSCAN5.x.BIN


- Set the Reader address to which to send the program. (from USB is always 0)

- Press START and wait about 4 minutes to the programming end (Upload OK).

- On the Reader LCD appear:



To upgrade the TEXT in different languages repeat the before operations selecting "Upload Language" and taking the file "IDSCAN5.x.txt".

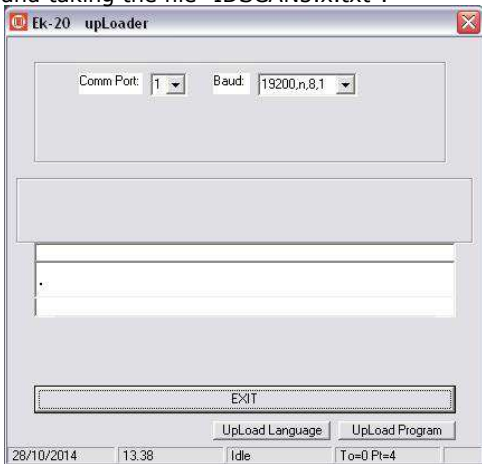

TECHNICAL SPECIFICATION

TRIPLE FREQUENCY	LF 125 KHz HF 13.56Mhz UHF 868 Mhz
DISPLAY LCD	2 row x 16 chari White-Blue
ACOUSTIC WARNING	Buzzer
BATTERY	LIPO 400mah rechargeable via USB (5VDC). Complete charge: 4hour
DATA TRANSMISSION 19200-8-N-1	USB2.0
OPERATING TEMPERATURE	-20°C to +65°C
DIMENSIONS	125mm x 70mm x 23mm
WEIGHT	170 grammi

INOUT RFID s.r.l Phone: +39 02.95138.139 Email: info@inoutsrl.it	Via Milano,14/H 20064-Gorgonzola (ITALY) Fax: +39 02.95.158.694 Web: www.inoutsrl.it
--	---