

# Ethernet controller TCW122B-CM

## User manual



### 1. Short description

**TCW122B-CM** is an Ethernet controller, based on TCW122 hardware. It has 2 digital and 2 analog inputs, 1-Wire interface for up to 2 temperature/humidity sensors and 2 relays with NO/NC contacts. The relays can be activated either remotely (WEB, SNMP etc.) or locally - from status of monitored parameter (temperature, humidity, analog voltage and dry contact). Only one parameter can manage the relay at the same time, but for every parameter can be sent e-mail/SNMP trap for alert conditions.

**TCW122B-CM** is suitable for environmental monitoring and local control of heater/coolers, industrial and building automation, data acquisition systems, general remote control and monitoring.

### 2. Features


- 10 Mb Ethernet connectivity;
- Password protected, web based configuration and control;
- 2 digital inputs with "dry contact" and "logic level" modes;
- 2 analog inputs with 0 to 60VDC range;
- 2 relays with NO and NC contacts;
- Long 1-Wire support for up to 2 temperature (TST1XX) or temperature/humidity (TSH2xx) sensors;
- SNMP v.1 support;
- SNMP traps and/or e-mail sending for alert conditions;
- SMTP with authentication (SSL is not supported);
- HTTP and SNMP port changing;
- HTTP and XML API commands;
- Remote FTP firmware update.

### 3. Technical parameters

Supply voltage, VDC	12±2
Maximum current consumption (with both relays ON), mA	200
Weight, g	110
Dimensions, mm	107 x 72 x 32
Operating temperature, °C	0 to +40
Maximum humidity in 0 to 31°C range, %RH	80
Maximum humidity at 40°C (linear slope between 31-40°C), %RH	50
Minimum high level input voltage for digital inputs, VDC	+2.5
Maximum low level input voltage for digital inputs, VDC	+0.8
Maximum input voltage for digital inputs, VDC	+5.5
Supply voltage for 1-wire bus (VDD), VDC	5.3 ± 0.2
Maximum output current for 1-wire bus (VDD), A	0.2
Analog input 1 range, VDC	0 to +60
Analog input 2 range, VDC	0 to +60
Maximum switchable current for relay contacts, A	3
Maximum switchable voltage for relay contacts, VAC/VDC	30/24

### 4. Connectors

Inputs and outputs locations are shown below:

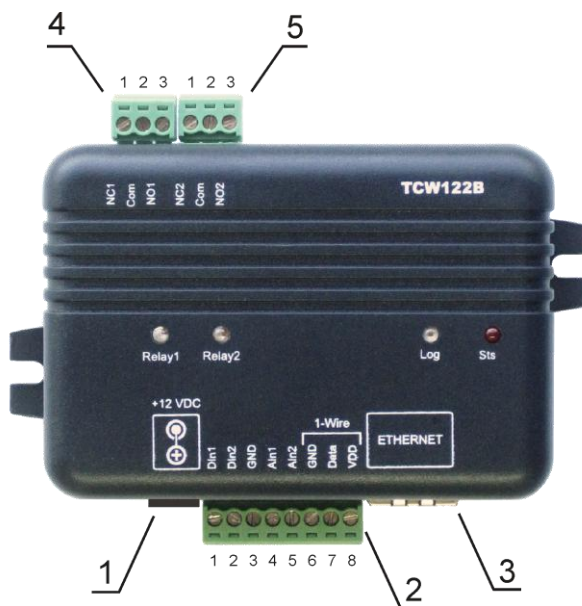

- Connector 1** – Power - central positive
- Connector 2, Pin1** - Digital input 1 (**Din1**)\*
- Connector 2, Pin2** - Digital input 2 (**Din2**)\*
- Connector 2, Pin3** - Ground
- Connector 2, Pin4** - Analog input 1 (**Ain1**)
- Connector 2, Pin5** - Analog input 2 (**Ain2**)
- Connector 2, Pin6** - Ground
- Connector 2, Pin7** – 1-Wire data
- Connector 2, Pin8** – 1-Wire power supply
- Connector 3** – Ethernet - RJ45
- Connector 4, Pin1** – NC Relay1
- Connector 4, Pin2** – COM Relay1
- Connector 4, Pin3** – NO Relay1
- Connector 5, Pin1** – NC Relay2
- Connector 5, Pin2** – COM Relay2
- Connector 5, Pin3** – NO Relay2

\* Operating mode is selected by jumper DI1/DI2 - closed for “dry contact” and open for “logic level”. By default jumpers are closed.

### 5. LED indicators

The following indicators show the status of the controller:

- **Relay1/Relay2** (green) – these LEDs are illuminated whenever the corresponding relay is activated (the NO contact is closed and the NC contact is open);
- **Sts** (red) – flashes when the main program of controller is executed;
- **Log** (yellow) – indicates that somebody is logged via WEB interface;

- **Link** (green) – located on the Ethernet connector, indicates that the device is connected to the network;
- **Act** (yellow) – located on the Ethernet connector, flashes when activity is detected on the network.

## 6. Powering

**TCW122B-CM** is designed to be supplied by adapter SYS1421-0612-W2E or similar, intended for use in the conditions of overvoltage category II, and priorly assessed for compliance with safety requirements. The power supply equipment shall be resistant to short circuit and overload in secondary circuit.

When in use do not position the equipment so that it is difficult to disconnect the device from the power supply.

## 7. Environment information

This equipment is intended for use in a Pollution Degree 2 environment, at altitudes up to 2000 meters.

When the controller is a part of a system, the other elements of the system shall comply with the EMC requirements and shall be intended for use in the same ambient conditions.

## 8. Safety

This device must not be used for medical, life saving purposes or for any purpose where its failure could cause serious injury or the loss of life.

To reduce the risk of fire, only flexible stranded wire, with cross section 0.5mm<sup>2</sup> or larger for wiring of digital and analog inputs and relay output of the device should be used.

To avoid electric shock and fire hazard, do not expose this product to liquids, rain, or moisture. Objects filled with liquids, such as vases, should not be placed on this device.

There is a risk of overheating (damage) of controller, if recommended free spaces to adjacent devices are not ensured. Joint part with external component shall have space for attachment/removal of the cable after installation.

Teracom does not guarantee successful operation of the product if the product was used under conditions deviating from the product specifications.

To ensure that the device works correctly follow the steps below:

- ensure that the device is installed correctly, refer this user manual;
- log in to the devices via browser program;
- make proper set up;
- set up the digital inputs to work in “dry contact” mode;
- short the “Din1” and “GND”;
- install sensor TSH1XX or TST1XX on 1-Wire bus;
- go to “Monitoring page” of WEB interface – proper parameters value should be displayed in the same time flashing “STS” led should indicate the proper operation.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Teracom Ltd. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

## 9. Maintenance

Upon completion of any service or repairs to the device or once per year, safety check must be performed to determine that this product is in proper operating condition.

Clean the device only with dry cloth. Do not use a liquid cleaner or an aerosol cleaner. Do not use a magnetic/static cleaning device (dust remover) or any kind of abrasive materials to clean the device.

## 10. Installation

This device must be installed by qualified personnel.

This device must not be installed directly outdoors.

Installation consists of mounting the device, connecting to an IP network, connecting inputs and outputs, providing power and configuring via a web browser.

**TCW122B-CM** can be wall or flat, not flammable surface mounted, in a clean and dry location room. Ventilation is recommended for installations where ambient air temperature is expected to be high.

Mount the device to a wall by using two plastic dowels 8x60mm (example Würth GmbH 0912 802 002) and two dowel screws 6x70mm (example Würth GmbH 0157 06 70). Attach the screws to the surface vertically. See Appendix-A, fig. 1 for mechanical details.

Maintain spacing from adjacent equipment. Allow 50 mm of space on all sides, as shown on fig.2 in Appendix A, this provides ventilation and electrical isolation.

## 11. Configuration


Please follow the steps below for proper installation :

1. Mount the controller in a dry and ventilated place.
2. Connect the Ethernet port to a 10/100MB Ethernet network. For direct connection to a PC use a "crossover" cable.
3. Connect the I/O pins of the controller according to the required application.
4. Connect the power supply.

If the red LED (STS) blinks, the main program of controller is executed. By default **TCW122B-CM** comes with the following network settings:

*IP address: **192.168.1.2**, Subnet Mask: **255.255.255.0**, Default Gateway: **192.168.1.1***

Communication with **TCW122B-CM** can be established by assigning a temporary IP address to the computer. This address should be in the same network (for example 192.168.1.3). To get access to the web interface, you should type <http://192.168.1.2> into the browser.

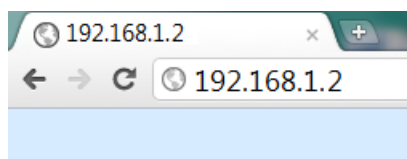


If the network settings are correct, the "Login" page will appear.

The web based interface allows configuration, monitoring and control. Recommended browser is Internet Explorer at 1024x768 resolutions.

### 11.1 Login page

After opening the Login page, authorization data must be entered (by default username=admin , password=admin). It is recommended to change the username and password to prevent unauthorized access to the controller.

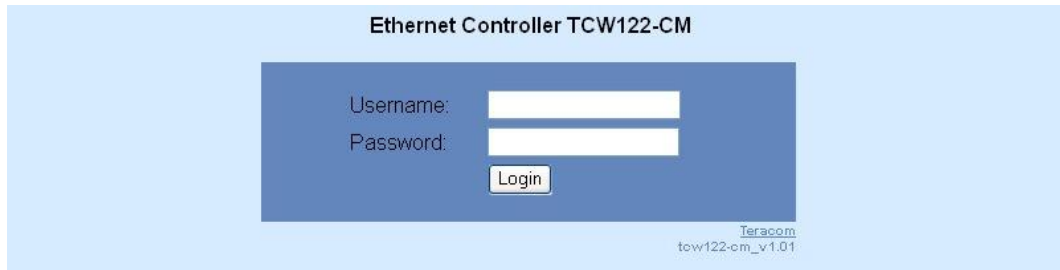

The controller supports one active session – only one user can operate the device. If another user tries to login, the message “Someone’s logged in” appears:



The active session will be terminated automatically, if the current user stays inactive for 2 minutes.

## 11.2 Monitoring page

After successful authorization, the “Monitoring” page appears:

Monitoring			
Digital Input 1	OPEN	Digital Input 2	OPEN
Analog Input 1	8.4V	Analog Input 2	4.1V
Temperature 1	29.3°C	Temperature 2	---
Humidity 1	28.3%RH	Humidity 2	---%RH
Relay output 1	OFF	automatically controlled by T1	
Relay output 2	OFF	<input type="button" value="ON/OFF"/> <input type="button" value="Pulse"/>	

The “Monitoring” page provides information about the state of the relays and digital inputs, values of analog voltages (applied on analog inputs), temperature and humidity.

The state of the relay can be changed by appropriate “ON/OFF” button. To change the state of relay for a while “Pulse” button should be pressed. Duration of the pulse is specified in “Pulse Duration” field of “I/O Setup” page.


## 11.3 I/O setup page

I/O settings can be made here.

For temperature, humidity and analog value MIN, MAX and HISTERESYS values can be set. These values arranged windows for monitored parameter.

Sensor 1				
	Min.	Max.	Hysteresis	If out of range
Temperature, °C	25.0	32.5	0.5	send_email
Humidity, %RH	25.0	50.0	1.0	send_email
Sensor 2				
	Min.	Max.	Hysteresis	If out of range
Temperature, °C	5.0	15.0	0.5	send_email
Humidity, %RH	25.0	50.0	1.0	send_email
Analog inputs				
	Min.	Max.	Hysteresis	If out of range
Voltage 1, V	5.0	10.0	0.1	send_email
Voltage 2, V	0.0	5.0	0.1	send_email

Every going out of range generates SNMP trap or e-mail (if enabled). Leaving range is considered when the parameter goes lower than MIN values or higher than MAX. Coming back in the range is considered when the parameter goes higher than (MIN + HISTERESYS) or lower than (MAX – HISTERESYS).

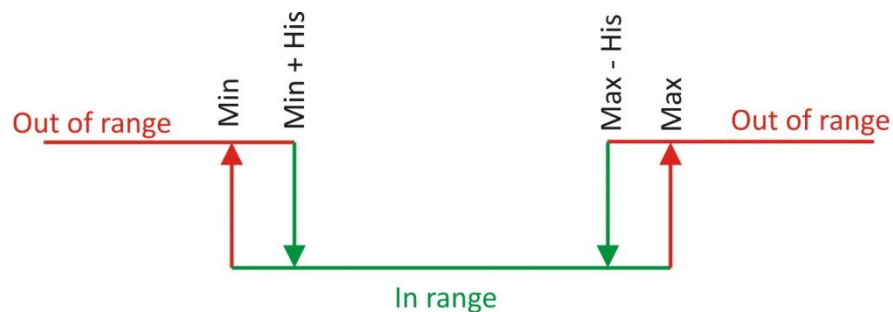

For digital inputs, conditional e-mail sending can be arranged by following part of the page:

Digital inputs	
Input 1	email_if_OPEN-TO-CLOSED
Input 2	email_if_OPEN-TO-CLOSED

Relays can be activated automatically depends of value of monitored parameter (humidity, temperature, analog voltage and changes on digital inputs) or manually. Only one parameter can be assigned for relay activation, at the same time:

Relays	
Pulse Duration	2 sec(1-253)
Relay1 Activated from	T1
Relay2 Activated from	manual

When manual activation is selected, “Pulse” and “ON/OFF” buttons on “Monitoring” page are active. The duration of pulse for relay activation can be set from 1 to 253 seconds.

For all monitored parameters only one e-mail recipients can be set.

E-mail recipient	
E-mail	JohnSmith@mail.com

Automatic monitoring page refresh interval can be set from 1 to 253 second. If 0 is chosen - no automatic refresh.

**Monitoring page**  
 Refresh Interval  sec(0-253)

#### 11.4 Network Setup page

The Network parameters are set on this page. The following parameters can be changed:

- **IP configuration** – IP Address can be static or dynamic (DHCP server should be present in the network);
- **IP address, Subnet mask , Default gateway** – these fields are active if IP address is static;
- **DNS** – these fields is mandatory, if domain names are used instead of IP addresses. By default DNS has the same Ip address as Default gateway;
- **Time Server** and **Time Zone** – these fields are not mandatory, they are used when e-mail must be sent;
- **Host Name** – up to 16 symbols, it appears as a “Subject” in sent e-mails;
- **MAC** – device MAC address.

**IP configuration**  
 Static/DHCP   
 IP address   
 Subnet mask   
 Default gateway   
 DNS   
 Time server   
 Time zone   
 Host Name   
**MAC Address**  
 MAC

The good practice is to change the default IP address of controller immediately after first power-on. This will avoid collisions if many devices are used in the same network. It may be necessary to clear the arp cache, each time you connect a new device to the network. This is done by typing `arp -d` in the command prompt window of computer.

To set up the SMTP server details, the following fields should be completed:

- **Mail server [IP:port]** – domain or IP address and port of SMTP mail server;
- **E-mail** – sender e-mail;
- **Username** and **Password** – authentication details for mail server.

Mail server is considered server for sending mails. Secure Socket Layer is not supported.

**SMTP**  
 Mailserver [IP:port]    
 Sender e-mail   
 Username   
 Password

Authentication details for WEB access to **TCW122B-CM** can be set in the last section. Only one user is supported.

Web Access	
Authentication	Enabled
Username	admin
Password	•••••
HTTP Port	80
<input type="button" value="Save"/>	

### 11.5 SNMP Setup page

TCW122B-CM supports SNMP v.1. This enables the device to be part of large monitoring and control networks. The possible settings for “SNMP” section are:

- **SNMP Configuration** – enable/disable SNMP;
- **SNMP Port** – allows standard port changing;
- **Write/Read community** – performs client authentication;
- **SNMP Traps** – enable/disable SNMP trap messages;
- **IP address** – IP address of the receiving host;
- **Community string** – performs client authentication;
- **Trap Interval** - time interval in seconds for SNMP trap messages;
- **Max. Traps number** – maximum number of SNMP trap messages sent, if trap condition is present.

SNMP Setup	
<b>SNMP</b>	
SNMP Configuration	Enable
SNMP Port	161
Write community	private
Read community	public
<b>SNMP Traps</b>	
SNMP Traps	Enable
IP address	192.168.32.100
Community string	public
Trap Interval	10
Max. Trap number	10
<input type="button" value="Save"/>	

SNMP traps are sent if:

- event occurs (status change) on Digital Input 1 or Digital Input 2;
- measured voltage on Analog Input 1 or Analog Input 2 goes outside the range;
- measured temperature goes outside the range;
- measured humidity goes outside the range;
- restart condition.



## 12. Application examples

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Teracom Ltd. cannot assume responsibility or liability for actual use based on the examples and diagrams.


### 12.1. Temperature and humidity control

**TCW122B-CM** supports 1-Wire temperature and humidity sensors, which makes it suitable for use in heating and cooling systems.




### 12.2. Remote control

The controlled device is connected in series with the relay contacts. Users can operate **TCW122B-CM** using a web browser or SNMP application. Both relays are managed independently.

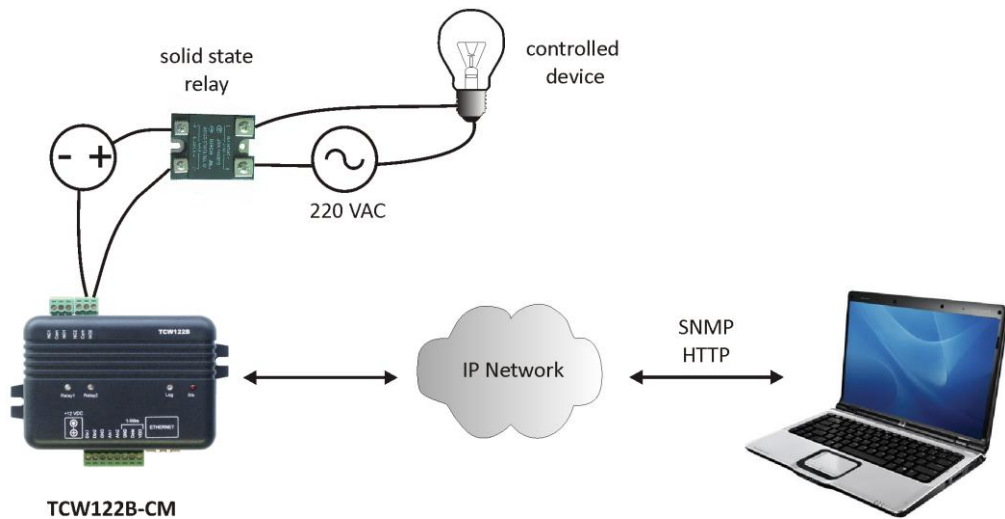


### 12.3. Remote monitoring

A relay contact of monitored device is connected to the digital input. When an event occurs – the controller can send an e-mail and/or SNMP trap.

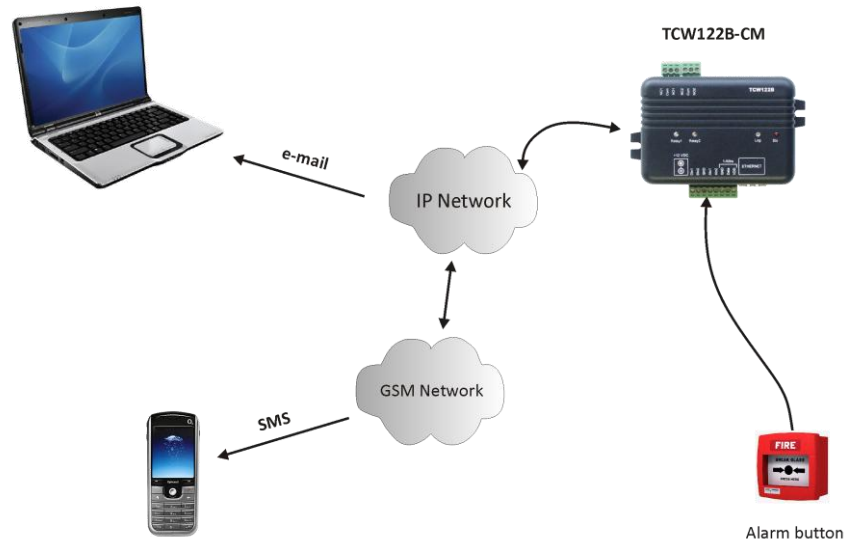

### 12.4. Data acquisition

The TCW122B-CM can be used in Data Acquisition Systems (DAQ). The device uses SNMP v.1 protocol for communication with monitoring and management software applications.

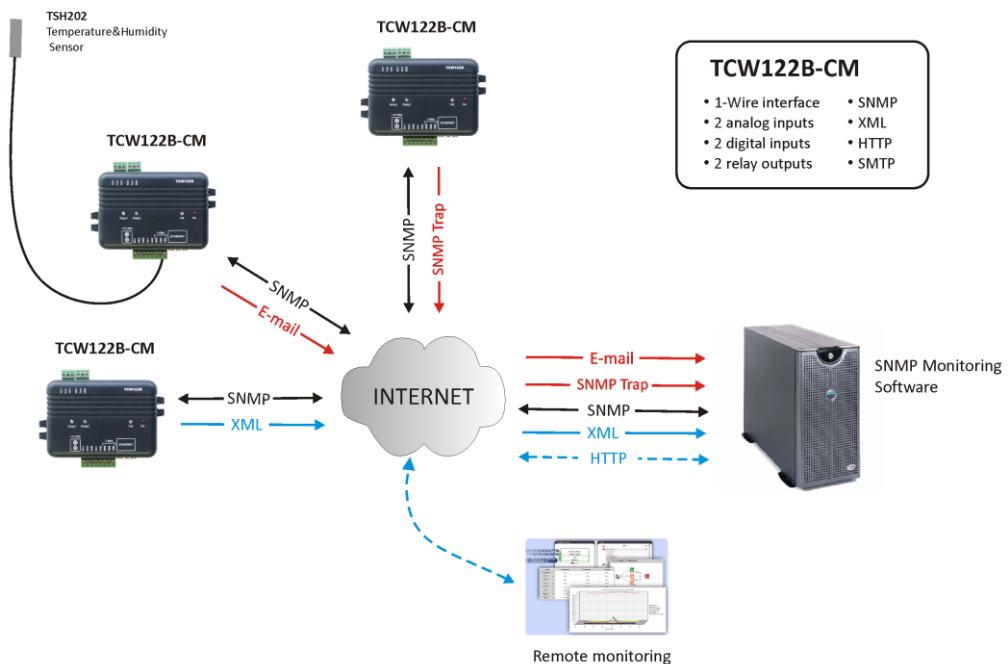

### 13. 1-Wire Bus

1-Wire is a registered trademark of Maxim Integrated Products, Inc. It is designed to connect several sensors over a short wiring. The bus carries power and a single data wire. It is not suitable for long distances or environments with EMC interference. We strongly recommend to read Maxim's 1-Wire tips at <http://www.maxim-ic.com/app-notes/index.mvp/id/148>.

We recommend keeping the total wiring length under 60m, although functionality has been achieved in longer distance. We cannot guarantee error-free operation over mentioned wiring length.

We guarantee proper operation only with our 1-Wire sensors series TST1XX and TSH2XX.

## 14. Control and monitoring using SNMP

**TCW122B-CM** can be configured and monitored through SNMP (Simple Network Management Protocol). This could be done using every SNMP v.1 compatible program. Parameters that can be changed, are grouped according to their functions in the tables below. To obtain a valid OID number it is necessary to replace the "x" symbol with "1.3.6.1.4.1.38783". To save the changes **configurationSaved** (OID x.3.13.0) should be set to "1".

### 14.1. Product

OID	Name	Access	Description	Syntax
x.1.1.0	name	read-only	Device name	String
x.1.2.0	version	read-only	Firmware version	String
x.1.3.0	date	read-only	Release date	String

### 14.2. Setup -> network

OID	Name	Access	Description	Syntax
x.2.1.1.0	deviceIPAddress	read-write	Device IP address	IpAddress
x.2.1.2.0	subnetMask	read-write	Subnet Mask	IpAddress
x.2.1.3.0	gateway	read-write	Gateway	IpAddress
x.2.1.4.0	deviceMACAddress	read-write	Device MAC Address	OCTET STRING (SIZE(6))
x.2.1.5.0	dhcpConfig	read-write	DHCP configuration ON/OFF	INTEGER { ON(1), OFF(0) }
x.2.1.6.0	DNS	read-write	Domain Name Server address	IpAddress
x.2.1.7.0	Hostname	read-write	Device hostname	String (SIZE (0..38))

### 14.3. Setup -> SNMP

OID	Name	Access	Description	Syntax
x.2.4.1.0	SNMPConfiguration	read-write	SNMP Configuration	INTEGER { ENABLED(1), DISABLED(0) }
x.2.4.2.0	trapEnabled	read-write	TRAP messages ENABLED/DISABLED	INTEGER { Yes(1), No(0) }
x.2.4.3.0	trapReceiverIPAddress	read-write	TRAP receiver IP address	IpAddress
x.2.4.4.0	trapCommunity	read-write	TRAP community	String (SIZE (0..13))
x.2.4.5.0	trapInterval	read-write	TRAP messages interval	INTEGER (1..253)
x.2.4.6.0	maxNumberOfTraps	read-write	Maximum number SNMP traps	INTEGER (1..253)

### 14.4. Setup -> oneWireSensor1 -> temperature1

OID	Name	Access	Description	Syntax
x.2.5.1.1.0	temperature1Min	read-write	Temperature1 range (min. value)	INTEGER (-400..1250)
x.2.5.1.2.0	temperature1Max	read-write	Temperature1 range (max. value)	INTEGER (-400..1250)
x.2.5.1.3.0	temperature1Hyst	read-write	Hysteresis	INTEGER (0..1250)
x.2.5.1.4.0	temperature1Action	read-write	Temperature1 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

### 14.5. Setup -> oneWireSensor1 -> humidity1

OID	Name	Access	Description	Syntax
x.2.5.2.1.0	humidity1Min	read-write	Humidity1 range (min. value)	INTEGER (0..1000)
x.2.5.2.2.0	humidity1Max	read-write	Humidity1 range (max. value)	INTEGER (0..1000)
x.2.5.2.3.0	humidity1Hyst	read-write	Hysteresis	INTEGER (0..1000)
x.2.5.2.4.0	humidity1Action	read-write	Temperature1 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

#### 14.6. Setup -> oneWireSensor2 -> temperature2

OID	Name	Access	Description	Syntax
x.2.6.1.1.0	temperature2Min	read-write	Temperature2 range (min. value)	INTEGER (-400..1250)
x.2.6.1.2.0	temperature2Max	read-write	Temperature2 range (max. value)	INTEGER (-400..1250)
x.2.6.1.3.0	temperature2Hyst	read-write	Hysteresis	INTEGER (0..1250)
x.2.6.1.4.0	temperature2Action	read-write	Temperature2 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

#### 14.7. Setup -> oneWireSensor2 -> humidity2

OID	Name	Access	Description	Syntax
x.2.6.2.1.0	humidity2Min	read-write	Humidity2 range (min. value)	INTEGER (0..1000)
x.2.6.2.2.0	humidity2Max	read-write	Humidity2 range (max. value)	INTEGER (0..1000)
x.2.6.2.3.0	humidity2Hyst	read-write	Hysteresis	INTEGER (0..1000)
x.2.6.2.4.0	humidity2Action	read-write	Temperature2 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

#### 14.8. Setup -> analogInput -> input1

OID	Name	Access	Description	Syntax
x.2.7.1.1.0	voltage1Min	read-write	Voltage1 alarm range (min. value)	INTEGER (0..1000)
x.2.7.1.2.0	voltage1Max	read-write	Voltage1 alarm range (max. value)	INTEGER (0..1000)
x.2.7.1.3.0	voltage1Hyst	read-write	Voltage1 hysteresis	INTEGER (0..1000)
x.2.7.1.4.0	voltage1Action	read-write	Voltage1 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

#### 14.9. Setup -> analogInput -> input2

OID	Name	Access	Description	Syntax
x.2.7.2.1.0	Voltage2Min	read-write	Voltage2 alarm range (min. value)	INTEGER (0..1000)
x.2.7.2.2.0	Voltage2Max	read-write	Voltage2 alarm range (max. value)	INTEGER (0..1000)
x.2.7.2.3.0	Voltage2Hyst	read-write	Voltage2 hysteresis	INTEGER (0..1000)
x.2.7.2.4.0	Voltage2Action	read-write	Voltage2 action	INTEGER {SEND_MAIL(1),NO_ACTION(0) }

#### 14.10. Setup -> digitalinput

OID	Name	Access	Description	Syntax
x.2.8.1.0	digitalinput1Action	read-write	Digital Input1 action	INTEGER { MAIL_IF_COSED_TO_OPEN(2), MAIL_IF_OPEN_TO_CLOSED(1), NO_ACTION(0) }
x.2.8.2.0	digitalinput2Action	read-write	Digital Input2 action	INTEGER { MAIL_IF_COSED_TO_OPEN(2), MAIL_IF_OPEN_TO_CLOSED(1), NO_ACTION(0) }

#### 14.11. Setup -> relay

OID	Name	Access	Description	Syntax
x.2.9.1.0	relay1ControlledBy	read-write	Relay1 control item	INTEGER { DIGITAL_INPUT2(8), ANALOG_INPUT2(7), HUMIDITY2(6), TEMPERATURE2(5), DIGITAL_INPUT1(4), ANALOG_INPUT1(3), HUMIDITY1(2), TEMPERATURE1(1), MANUAL(0) }
x.2.9.2.0	relay2ControlledBy	read-write	Relay2 control item	INTEGER { DIGITAL_INPUT2(8), ANALOG_INPUT2(7), HUMIDITY2(6), TEMPERATURE2(5), DIGITAL_INPUT1(4), ANALOG_INPUT1(3), HUMIDITY1(2), TEMPERATURE1(1), MANUAL(0) }
x.2.9.3.0	relayPulseWidth	read-write	Digital Inputs mail recipient	INTEGER { 1..253 }

#### 14.12. Setup -> recipients

OID	Name	Access	Description	Syntax
x.2.10.1.0	recipient1EmailAddress	read-write	Recipient1 e-mail	String (SIZE (0..38))

### 14.13. Monitor&control

OID	Name	Access	Description	Syntax
x.3.1.0	digitalInput1State	read-only	Digital Input1 state	INTEGER { OPEN(1), CLOSED(0) }
x.3.2.0	digitalInput2State	read-only	Digital Input2 state	INTEGER { OPEN(1), CLOSED(0) }
x.3.3.0	relay1State	read-write	Relay1 state	INTEGER { ON(1), OFF(0) }
x.3.4.0	relay1Pulse	read-write	Relay1 pulse	INTEGER { ON(1), OFF(0) }
x.3.5.0	relay2State	read-write	Relay2 state	INTEGER { ON(1), OFF(0) }
x.3.6.0	relay2Pulse	read-write	Relay2 pulse	INTEGER { ON(1), OFF(0) }
x.3.7.0	voltage1x10Int	read-only	Voltage1 x10 in integer format	INTEGER{ 0..1000 }
x.3.8.0	voltage2x10Int	read-only	Voltage2 x10 in integer format	INTEGER{ 0..1000 }
x.3.9.0	temp1x10Int	read-only	Temperature1 x10 in integer format	INTEGER{ -400..1250 }
x.3.10.0	temp2x10Int	read-only	Temperature2 x10 in integer format	INTEGER{ -400..1250 }
x.3.11.0	humi1x10Int	read-only	Humidity1 x10 in integer format	INTEGER{ 0..1000 }
x.3.12.0	humi2x10Int	read-only	Humidity2 x10 in integer format	INTEGER{ 0..1000 }
x.3.13.0	configurationSaved	read-write	Configuration save status	INTEGER { SAVED(1), UNSAVED(0) }
x.3.14.0	restartDevice	read-write	Restart device	INTEGER { RESTART(1), CANCEL(0) }

### 15. XML and HTTP API commands

XML is often preferred choice when it comes to M2M communication and system integration. The monitored values are transmitted in status.xml file that can be easily processed by software applications.

Below is the structure of the XML file, which is located at: <http://your.ip.address/status.xml>:

```

<Monitor>
  <Device>TCW122B-CM</Device>           Device Type
  <FW>tcw122-cmv1.01</FW>              Firmware version
  <DigitalInput1>OPEN</DigitalInput1>   Digital input 1 state
  <DigitalInput2>OPEN</DigitalInput2>   Digital input 2 state
  <Relay1>ON</Relay1>                   Relay 1 state
  <Relay2>OFF</Relay2>                  Relay 2 state
  <AnalogInput1>5.2</AnalogInput1>      Analog input 1 value
  <AnalogInput2>2.4</AnalogInput2>      Analog input 2 value
  <Temperature1>12.2</Temperature1>     Temperature 1 value
  <Temperature2>---</Temperature2>     Temperature 2 value
  <Humidity1>43.5</Humidity1>           Humidity 1 value
  <Humidity2>---</Humidity2>           Humidity 2 value
</Monitor>

```

The relay outputs can be controlled by sending HTTP commands:

Command	Description
<a href="http://your.ip.address/?r1=1">http://your.ip.address/?r1=1</a>	Turn Relay 1 ON
<a href="http://your.ip.address/?r1=0">http://your.ip.address/?r1=0</a>	Turn Relay 1 OFF
<a href="http://your.ip.address/?r2=1">http://your.ip.address/?r2=1</a>	Turn Relay 2 ON
<a href="http://your.ip.address/?r2=0">http://your.ip.address/?r2=0</a>	Turn Relay 2 OFF
<a href="http://your.ip.address/?tg1=1">http://your.ip.address/?tg1=1</a>	Toggle Relay 1 state
<a href="http://your.ip.address/?pl1=1">http://your.ip.address/?pl1=1</a>	Pulse Relay 1
<a href="http://your.ip.address/?r1=1&amp;r2=1">http://your.ip.address/?r1=1&amp;r2=1</a>	Turn both relays ON
<a href="http://your.ip.address/?r1=0&amp;r2=0">http://your.ip.address/?r1=0&amp;r2=0</a>	Turn both relays OFF

## 16. Factory default settings

**TCW122B-CM** can be restored to its original factory default settings, following the steps below:

- Turn off the power supply;
- Press and hold the RESET button then turn on the power supply;
- The LED's STS and LOG will flash 14 times, after that they will turn on. In this moment the RESET button should be released.



The factory default settings are:

User Name (Admin)	admin
Password (Admin)	admin
IP Address	192.168.1.2
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
SNMPConfiguration	disabled
readCommunity	public
writeCommunity	private

## 17. Firmware update

**TCW122B-CM** supports remote firmware update. To update the device follow the steps below:

- Download the TCW1XX\_Update\_Tool from [www.teracom.cc](http://www.teracom.cc);
- Download the latest firmware version file (\*.cod) from [www.teracom.cc](http://www.teracom.cc);
- Start the program and upload the new firmware.

**Attention! Don't turn off the power supply during the update. Turning off the power supply will damage the device.**

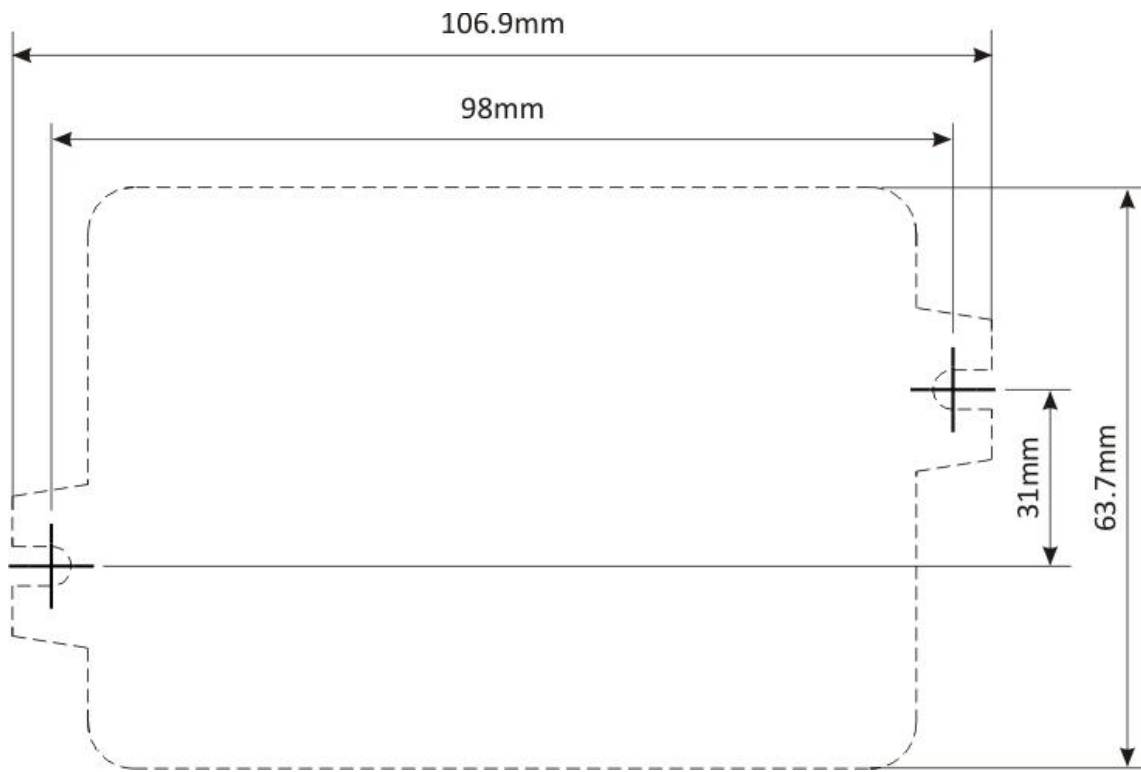


Fig.1

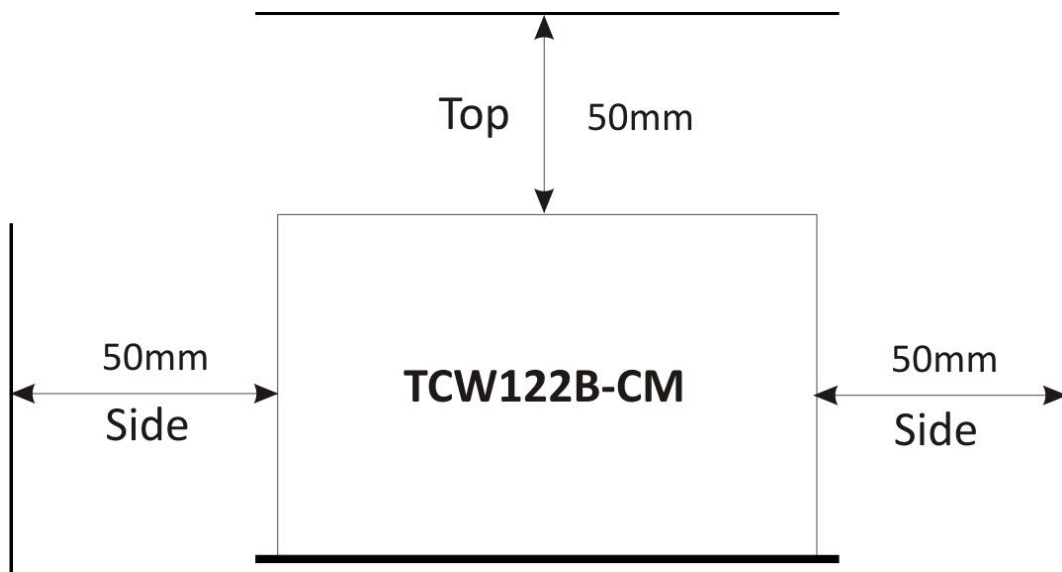


Fig.2