

# **MANUAL LSM – USER**

**Version: May 2011**

<b>1.0</b>	<b>Introduction .....</b>	<b>7</b>
	Important note .....	7
<b>2.0</b>	<b>Understanding this manual .....</b>	<b>8</b>
<b>3.0</b>	<b>Icons .....</b>	<b>9</b>
	Standard toolbar .....	10
	Areas / transponder group view .....	11
	Doors / Persons view .....	11
	Group authorisation tree view .....	12
	PROGRAMMING REQUIREMENT .....	12
<b>4.0</b>	<b>Setting up and opening the database .....</b>	<b>13</b>
<b>5.0</b>	<b>ViewS and navigating .....</b>	<b>14</b>
1.1.	Areas / transponder groups view .....	14
1.1.1	General .....	14
1.2.	Doors / Persons view .....	15
1.2.1	General .....	15
1.3.	NavigATIng .....	16
1.4.	Configuring standard view .....	18
1.5.	Adjusting views .....	20
1.5.1	Sorting .....	20
1.5.2	Additional columns in label bars .....	21
1.5.3	SWAPPING the view of components in the matrix .....	22
<b>6.0</b>	<b>Issuing authorisations .....</b>	<b>23</b>
1.6.	Show / issue group authorisation .....	23
1.7.	Show / issue individual authorisations .....	25
<b>7.0</b>	<b>SEARCH .....</b>	<b>26</b>
1.8.	SEARCHABLE OBJECTS .....	27
1.8.1	User .....	27
1.8.2	User group .....	27
1.8.3	Area .....	27
1.8.4	Public holiday .....	27
1.8.5	Public holiday list .....	27
1.8.6	Building .....	27
1.8.7	Local time zone .....	27

1.8.8	Person .....	27
1.8.9	Locking system .....	27
1.8.10	Lock .....	27
1.8.11	Location .....	27
1.8.12	Transponder .....	27
1.8.13	Transponder group .....	27
1.8.14	Door .....	27
1.8.15	Time group.....	27
1.8.16	Time zone plan .....	27
<b>8.0</b>	<b>FILTERS .....</b>	<b>28</b>
1.9.	General information about filters .....	28
1.10.	Managing / creating filters .....	28
1.11.	Managing filters – activating / deactivating .....	30
<b>9.0</b>	<b>MANAGING THE LOCKING SYSTEM.....</b>	<b>31</b>
1.12.	Locking system .....	31
1.12.1	General information about the locking system.....	31
1.12.2	Locking system properties .....	34
1.12.3	Creating a locking system.....	45
1.12.4	Editing a locking system .....	45
1.13.	Transponder group .....	46
1.13.1	General .....	46
1.13.2	Creating a transponder group .....	46
1.13.3	Editing a transponder group.....	47
1.13.4	Management .....	49
1.13.5	TRANSPONDER ASSIGNMENT .....	52
1.14.	Transponders .....	55
1.14.1	general.....	55
5.3.2	Transponder properties .....	57
1.14.2	Editing transponders .....	66
1.15.	Persons .....	67
1.15.1	General information about persons .....	67
1.15.2	Creating a person.....	69
1.15.3	Editing persons .....	69
1.16.	Area .....	71
1.16.1	General information about areas.....	71
1.16.2	Creating an area .....	73
1.16.3	Editing an area .....	73
1.17.	Lock.....	75

# MANUAL LSM – USER

Page 4

1.17.1	General information about locks .....	75
1.17.2	Lock properties .....	77
1.17.3	creating a lock .....	92
1.17.4	Editing a lock.....	94
1.18.	Doors .....	95
1.18.1	General corrections for doors .....	95
1.18.2	Edit door.....	97
1.19.	Location .....	98
1.19.1	General information about locations .....	98
1.19.2	Create location .....	99
1.19.3	Edit location.....	99
1.20.	5.9 Building .....	100
1.20.1	5.9.1 General information about buildings .....	100
1.20.2	5.9.2 Create building .....	101
1.20.3	5.9.3 Edit building .....	101
10.0	Wizards .....	102
1.21.	Door wizard.....	103
1.22.	6.2 Person wizard .....	111
11.0	Alerts .....	123
1.23.	General information about alerts .....	123
1.24.	Create alerts.....	124
1.25.	Edit alerts .....	125
1.26.	Delete alerts .....	125
1.27.	Alert monitor .....	126
12.0	Reports.....	128
1.28.	General information about reports .....	128
1.29.	Basic settings for reports .....	128
1.30.	Select report .....	128
8.1.1	Locking system .....	129
8.3.2	Area .....	130
8.1.2	Transponder group .....	131
8.1.3	Door .....	132
8.1.4	Lock.....	133
8.1.5	Transponder .....	134
8.1.6	Time group.....	135
8.1.7	Time zone plan .....	136
8.1.8	Network .....	137

8.1.9	HR structure .....	138
8.1.10	Building structure .....	139
8.1.11	User .....	140
8.1.12	Various .....	141
1.31.	Print report.....	142
1.32.	Export report.....	142
1.33.	Reports for assembly preparation .....	143
<b>13.0</b>	<b>Programming processes .....</b>	<b>145</b>
1.34.	General.....	145
1.35.	Position components .....	145
1.36.	Program.....	146
9.3.1	Program lock .....	146
9.3.2	Program transponder .....	148
1.37.	Read.....	150
9.4.1	Read lock .....	150
9.4.2	Read transponder .....	157
1.38.	Reset.....	161
1.38.1	Reset lock .....	161
1.38.2	Reset transponder .....	161
1.39.	Mobile programming.....	162
1.39.1	General.....	162
1.39.2	Export .....	165
1.39.3	Configure tasks .....	168
1.39.4	Import .....	172
1.40.	LSM Mobile .....	173
<b>14.0</b>	<b>Miscellaneous.....</b>	<b>175</b>
1.41.	Deleting an employee when transponder is returned .....	175
1.42.	Deleting an employee when transponder is not returned.....	175
1.43.	Create replacement transponder .....	175
1.44.	Procedure to follow for a defective transponder .....	176
1.45.	Procedure to follow for replacing a defective lock.....	177
1.46.	Overlay mode.....	178
1.47.	Overall locking levels.....	178
<b>15.0</b>	<b>Service and Support .....</b>	<b>179</b>

## NOTE:

In the explanations of the various functions of the system, the focus is on operating the software. Please refer to the individual product manuals for descriptions of the individual product features, fittings and functions.

It is important to comply with the product approvals and system requirements when installing and operating the products. SimonsVoss accepts no liability and cannot provide support for installation or operation which deviates from these instructions.

SimonsVoss Technologies AG reserves the right to make modifications to the product without notice. Consequently, descriptions and representations in this documentation may vary from the most recent product and software versions. As a general principle, the original German version shall apply in the event of any doubt. Subject to errors and misspellings.

These documents are based on the current programme status at the time of printing. The information and data they contain may be changed without advance notice and do not represent an obligation on the part of the seller. The software and hardware designations used in this manual are mainly registered trademarks and as such are subject to the legal copyright protection law regulations.

Neither the manual nor extracts of it may be reproduced or disseminated by mechanical or electronic means, photocopying or otherwise without our express written permission. The companies and other pieces of data used in the examples are fictitious, any similarities are therefore purely coincidental.

The editors of this LSM manual took great care when compiling this text. However we cannot guarantee that it is free from errors. The LSM editing team is not liable for technical or printing errors in this manual. The descriptions provided in this manual are not of a guaranteed quality in the eyes of the law.

Please send any corrections or suggestions for improvement to [Info@simons-voss.de](mailto:Info@simons-voss.de).

Thank you in advance for your support.

More information about SimonsVoss products can be found online at [WWW.SIMONS-VOSS.DE](http://WWW.SIMONS-VOSS.DE)


**This manual applies to software without functional limitations. Functions or views in a customer's specific installation may deviate from these due to the software modules activated.**

# MANUAL LSM – USER

Page 7

## 1.0 INTRODUCTION

Locking System Management (LSM) from SimonsVoss is a database-supported software package that enables you to create, manage and control complex locking plans efficiently. This documentation serves as a guide to help you structure and configure your locking plan. It will also assist you later on when it comes to monitoring and controlling the locking system, making management of the system easier.

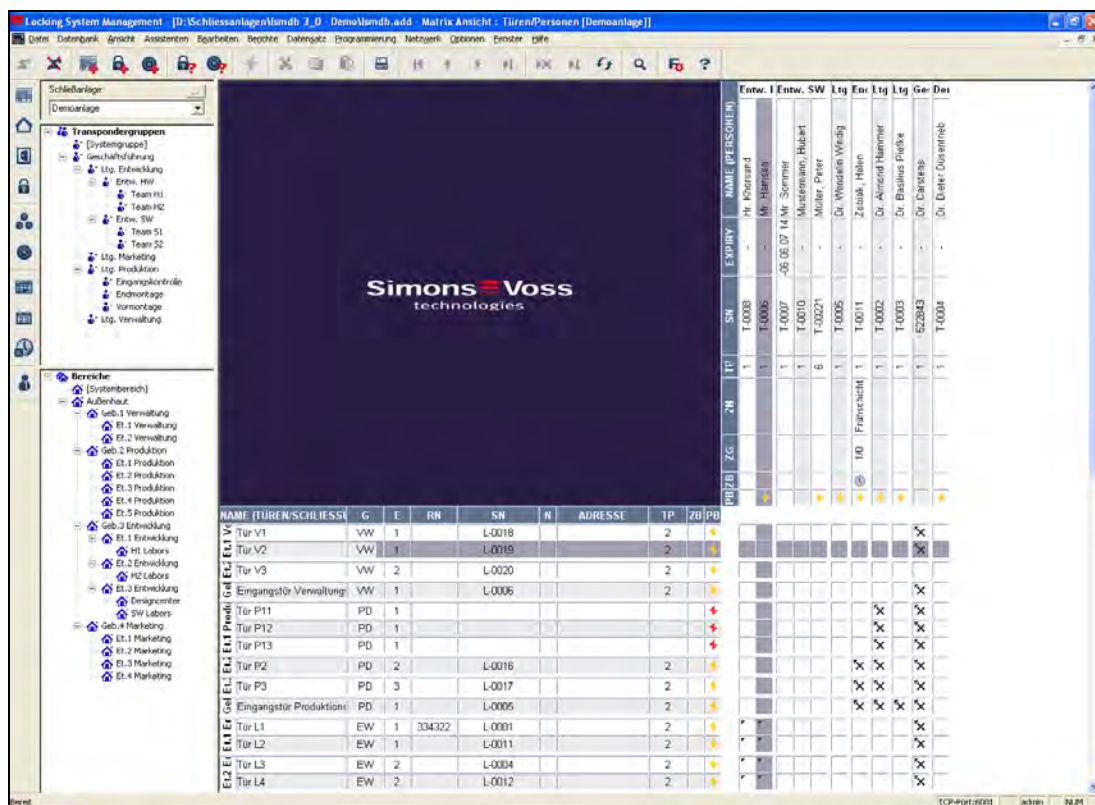

### IMPORTANT NOTE

SimonsVoss Technologies AG shall assume no liability for damage caused by incorrect assembly or installation.

Access through a door may be denied if components are incorrectly assembled or programmed. SimonsVoss AG shall assume no liability for the consequences of incorrect installation, such as denied access to injured persons or persons at risk, damage to property or any other form of damage.

## 2.0 UNDERSTANDING THIS MANUAL

### ➡ MENU ITEMS

The LSM menu items are indicated in this manual by the ➡ symbol.

#### EXAMPLES

➡ Edit  
➡ Area

### HEADINGS AND CHECKBOXES

Headings and checkboxes shown in the screenshots are differentiated by the use of inverted commas.

#### EXAMPLES

“User Groups”  
“Areas”

### BUTTONS

Buttons shown in the screenshots are highlighted in grey.

#### EXAMPLES

OK  
Apply

### KEY COMBINATIONS

The key combination you can use to start the required functions is shown in bold.

**Ctrl+Shift+X**

### PATH SPECIFICATIONS

If an instruction refers to a directory on a drive, the path is provided in italics.

#### EXAMPLE

*C:\Program files\SimonsVoss\LockSysGui\*

### NOTE





















The specification *[CDROM]* is a variable and describes the letter identifying the drive of the CDROM drive on the computer (e.g. “D”) on which installation is to be carried out.

















































## 3.0 ICONS

### NOTE

- Icons and entries in the menu only become active once an associated object is highlighted.
- You can use Shift or Ctrl to highlight multiple table entries at the same time.
- By double-clicking in the table you can jump to the object's properties.
- Edit toolbar

Active icon	Inactive icon	Function	Shortcut
		Edit locking system	<b>Ctrl+Shift+A</b>
		Area	<b>Ctrl+Shift+S</b>
		Edit door	<b>Ctrl+Shift+D</b>
		Edit lock	<b>Ctrl+Shift+C</b>
		Edit transponder group	<b>Ctrl+Shift+G</b>
		Editing transponders	<b>Ctrl+Shift+O</b>
		Edit public holiday list	
		Edit public holiday	
		Edit time zones	
		Edit person	<b>Ctrl+Shift+P</b>

## STANDARD TOOLBAR

Active icon	Inactive icon	Function	Shortcut
		Log on	
		Log off	
		New locking system	
		New lock	
		New transponder	
		Read lock	<b>Ctrl+Shift+K</b>
		Read transponder	<b>Ctrl+Shift+R</b>
		Program	
		Cut	
		Copy	
		Paste	
		Print matrix	
		First data record	
		Previous data record	
		Next data record	
		Last data record	
		Remove	
		Apply	
		Update	
		Browse	
		Filter not active	
		Filter active	
		Info	

## AREAS / TRANSPONDER GROUP VIEW



A black cross with a circle inside it represents group authorisation.



A grey cross with a circle inside it stands for “inherited authorisation.

## DOORS / PERSONS VIEW



Authorisation that has been enabled but not yet programmed into the lock



Authorisation that has been programmed into the lock



Authorisation that has been removed and not yet transferred to the lock



Authorisations that have not yet been programmed which comply with the group structure of the locking system, in other words that originate from the group view, are indicated by a small black triangle



Programmed authorisations that comply with the group structure of the locking system, in other words that originate from the group view, are indicated by a small black triangle



Removed authorisations that comply with the group structure of the locking system and have not yet been programmed



Authorisations that do not comply with the group structure of the locking system are indicated simply by a cross, with no black triangle (individual authorisation).



Authorisations that have been subsequently withdrawn, contrary to the group structure of the locking system, feature a black triangle but no cross indicating authorisation.



White (grey) box: authorisation can be enabled here.



Checked (greyed out) box: this field no longer belongs to the locking system and no authorisations can be enabled. You have no write permission or the locking plan blocks this box (e.g. when a transponder is deactivated).

## GROUP AUTHORISATION TREE VIEW



Manually enabled (black)



Directly inherited (green)



Indirectly inherited – inherited via subordinate group (blue)



Directly and indirectly inherited (blue / green)

## PROGRAMMING REQUIREMENT

### EXPLANATION

There are various reasons why it may be necessary to program a transponder or lock. The programming lightning symbol is shown in different colours to indicate the different reasons why programming is required.

### DISPLAY



Simple programming requirement for components



Transponder:  
Validity expired  
Deactivated  
Lock  
Only overall locking level assigned  
Not assigned to any door  
Not assigned to any locking system  
Door without lock




Programming requirement on a lock after creating a replacement transponder in the overlay mode of a G1 system

# MANUAL LSM – USER

Page 13

## 4.0 SETTING UP AND OPENING THE DATABASE

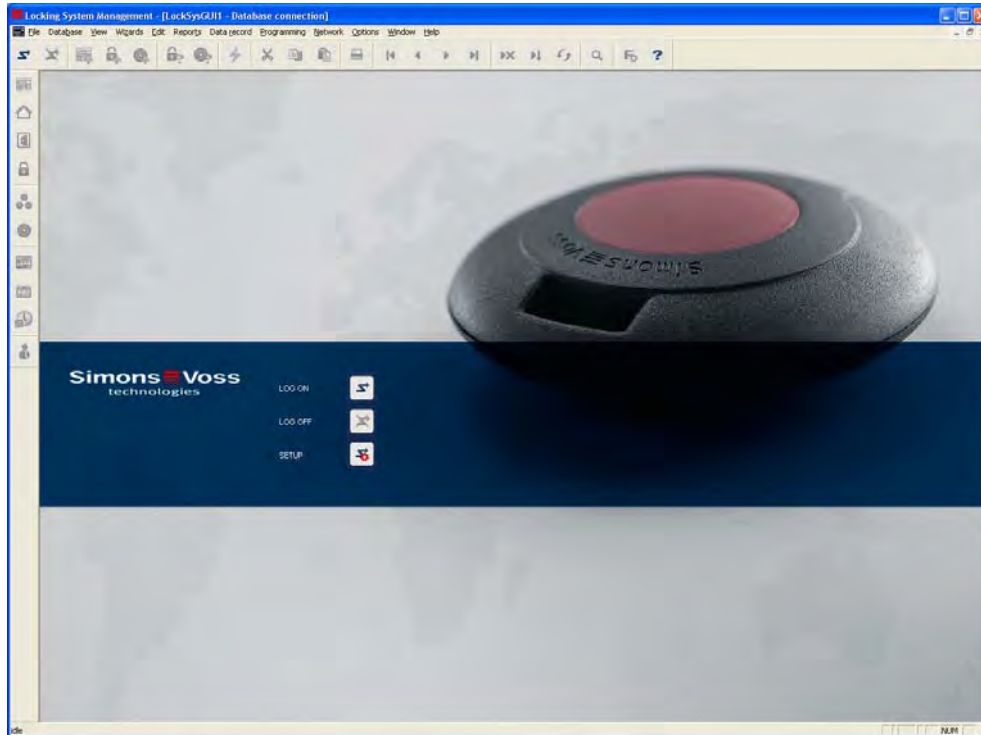

### START SCREED




Log on to the database, authentication then takes place when user data is entered

Log off the database


Settings for the database connection

In the Setup dialogue you can set the connection to the database you want.  
Your locking system administrator provides you with the necessary information.

LSM Basic

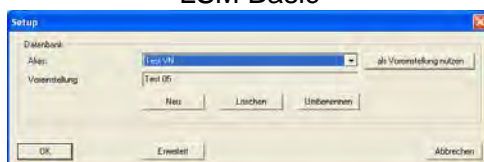

LSM Business / LSM Professional

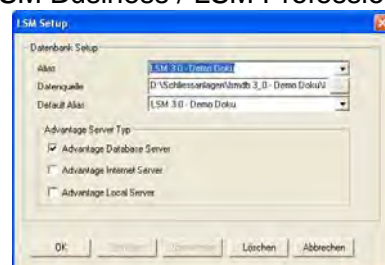

### NOTE

The software access data should be kept safe according to the valid IT guidelines and not made accessible to unauthorised persons.

# MANUAL LSM – USER

Page 14

## 5.0 VIEWS AND NAVIGATING

### 1.1. AREAS / TRANSPONDER GROUPS VIEW


#### 1.1.1 GENERAL

#### EXPLANATION

personnel and room structures and can also authorise complete transponder groups for complete areas. This matrix enables basic authorisations to be created quickly and with ease. Deviating authorisations in the form of individual expansions or limitations can be assigned in the Doors / Persons view.

#### PROCEDURE

- ➡ View
- ➡ Areas / Transponder groups

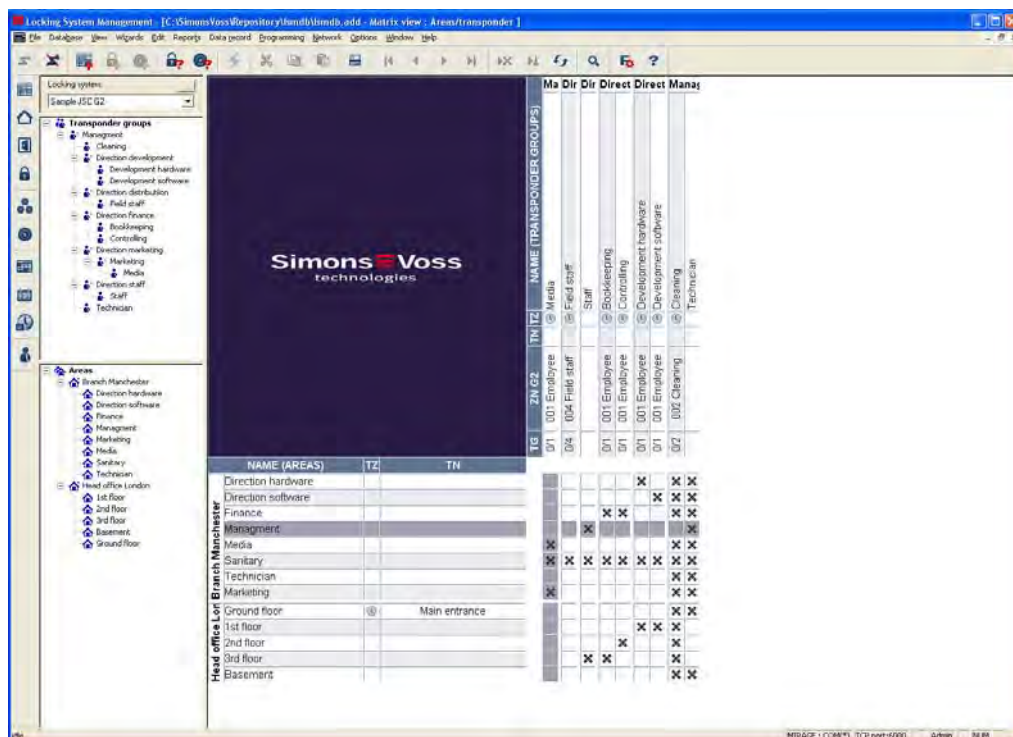

# MANUAL LSM – USER

## 1.2. DOORS / PERSONS VIEW

### 1.2.1 GENERAL

#### EXPLANATION

In this view you can see the individual authorisations of all persons for individual doors. This results in a very large matrix but does allow you to set specific exceptional authorisations. You can either expand or reduce previously set group authorisations. This view is therefore suitable for implementing individual expansions or limitations after defining the basic structure in the Areas / Transponder groups view.

#### PROCEDURE

- ➡ View
- ➡ Doors / Persons

NAME (DOORS/LOCKS)	B	F	RN	SN	N	TP	PR
NL1 Archives marketing	NL1	brnd	09	L-00001	514		X
NL1 Conference 220	NL1	2nd	220	L-00003	514		X
NL1 Conference 220	NL1	2nd	221	L-00002	514		X
NL1 Conference 321	NL1	3rd	321	L-00005	514		X
NL1 Office 201	NL1	2nd	201	L-00007	514		X
NL1 Office 202	NL1	2nd	202	L-00008	514		X
NL1 Office 203	NL1	2nd	203	L-00009	514		X
NL1 Office 204	NL1	2nd	204	L-00010	514		X
NL1 Office 205	NL1	2nd	205	L-00011	514		X
NL1 Office 206	NL1	2nd	206	L-00012	514		X
NL1 Office 207	NL1	2nd	207	L-00013	514		X
NL1 Office 208	NL1	2nd	208	L-00014	514		X
NL1 Conference 320	NL1	3rd	320	L-00004	514		X
NL1 Kitchen 3rd floor	NL1	3rd	313	L-00006	514		X
NL1 Office 301	NL1	3rd	301	L-00015	514		X
NL1 Office 302	NL1	3rd	302	L-00016	514		X
NL1 Office 303	NL1	3rd	303	L-00017	514		X
NL1 Office 304	NL1	3rd	304	L-00018	514		X
NL1 Office 305	NL1	3rd	305	L-00019	514		X
NL1 Office 306	NL1	3rd	306	L-00020	514		X
NL1 Office 307	NL1	3rd	307	L-00021	514		X



# MANUAL LSM – USER


### 1.3. NAVIGATING

#### EXPLANATION

On the left, this view includes a navigation aid that shows the two hierarchies(transponder groups and areas) in the form of two tree structures. The right-hand side of this view contains the matrix, where you can issue the authorisations you want simply by clicking.

You can vary the size of the windows by using the mouse to drag the bar separating the areas and transponder groups, and also the bar separating the matrix and navigation area.

Various icons are shown in the tree view depending on the display status to allow you to navigate around the tree structure as efficiently and confidently as possible. These are shown in the example locking plan below for the transponder groups.

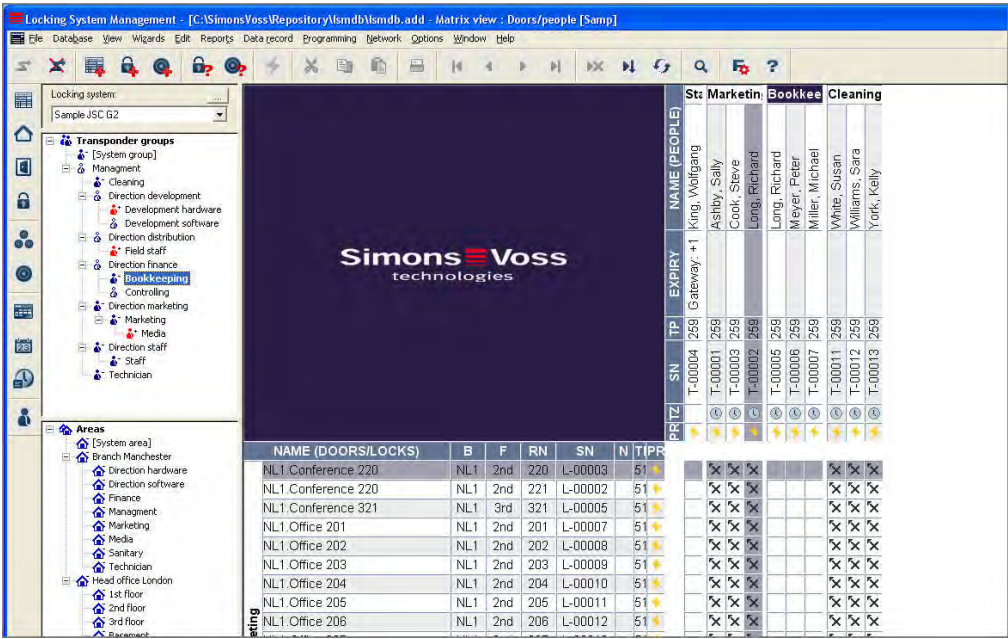

#### EXPLANATION OF ICONS



Locking system transponder groups



Individual transponder group without additional subgroups



Transponder group with at least one subordinate transponder group which is not shown



Transponder group with at least one subordinate transponder group which is shown



Locking system area





Individual area without additional sub-areas



Area with at least one subordinate area which is not shown



Area with at least one subordinate area which is shown

## PROCEDURE

- Click on the plus sign to the left of a red icon to display the next lowest level in the subordinate grouping.
- By clicking on the new plus signs that appear you can navigate to further, lower levels. There can be a maximum of 6 levels in a hierarchy
- Click on the minus signs to the left of the green icon to close the subordinate levels
- Click on the minus sign beside the locking system to close all open areas
- Double-clicking on an area or group changes the view (display of content in the matrix on or off)
- But you can also get a complete overview quickly by opening the entire tree structure:
  - ➡ View
  - ➡ Open all subordinate areas / groups
- To close all open areas or groups again, you must close the highest group in the tree structure.

## NOTE

Please note that as the tree structure grows it can take longer to prepare the data to be viewed and display it on the screen. This is noticeable when restructuring and updating the view.


## 1.4. CONFIGURING STANDARD VIEW

### EXPLANATION

Each user can configure their preferred view as the standard view. This view is displayed once the user logs on. Various basic settings can also be activated here.

### PROCEDURE

- ➡ Options
- ➡ Matrix view

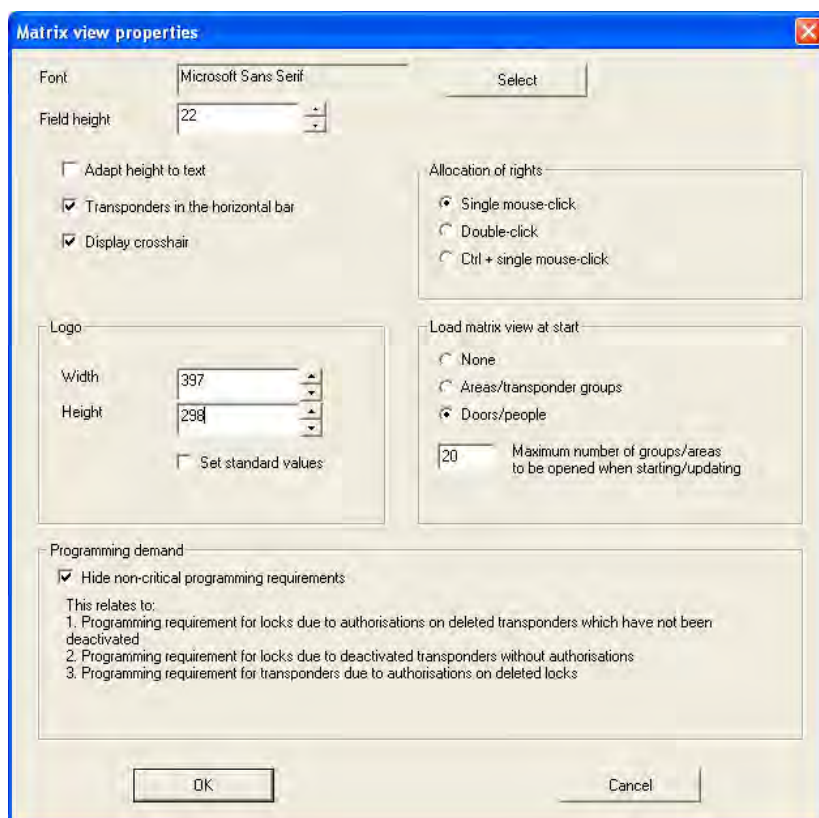

## EXPLANATION

- |                                  |  |
|----------------------------------|--|
| "Font"                           | → Standard font and font size  |
| "Field height"                   | → Adjust the height of lines and columns   |
| "Adapt height to font"           | → When this option is selected, the font size and line height are automatically optimised.   |
| "Transponders to horizontal bar" | → When this option is selected, transponders / persons are positioned (horizontally) as column headings. Horizontal is standard.   |
| "Show crosshair"                 | → Crosshair aids orientation in large matrices   |
| "Logo"                           | → This enables you to change the size of the logo in the top left-hand corner of the matrix. This can also be done in the matrix itself by dragging the mouse. By changing the size of the logo you define the height or width of the column and row names.  |
| "Issue authorisations"           | → To avoid issuing an authorisation accidentally you can choose from 3 options as to when an authorisation cross should be set   |
| "Load matrix view on start-up"   | → Select your preferred start view and the number of groups / areas which are automatically opened. The more groups and areas displayed in the matrix, the longer it takes to structure them. You can limit the number of groups / areas to be opened to enable quicker updating and starting-up of the matrix.  |
| "Programming requirement"        | → This is where the display of uncritical programming requirements is controlled. These programming requirements are of minor importance for the security of the system and only appear for reasons of completeness. Since the components involved are no longer used to lock doors or the transponders had no authorisations, these programming requirements do not necessarily have to be resolved. This represents a reduction in programming in large and non-networked systems. |

## 1.5. ADJUSTING VIEWS

### 1.5.1 SORTING

#### EXPLANATION

In all matrix views it is possible to change the order of the database objects shown. You can do this in any view.

#### PROCEDURE

- Right-click on an area name or door designation
- or
- Right-click on a transponder group name or person designation
  - ➡ Sort group / area

#### NOTE

You can only sort by properties that are shown in the matrix (see [1.5.2 Additional columns in label bars](#)).

## 1.5.2 ADDITIONAL COLUMNS IN LABEL BARS

### EXPLANATION

Extra columns can be added to both the horizontal and vertical bars to provide the user with useful additional information. The settings made only apply to the particular view where they are made. So different information will be available depending on the view being used.

The order of the data shown can also be set individually and is stored on a user-specific (Windows user) basis.

### PROCEDURE

- ➡ Options
- ➡ Extra columns
- Make selection, e.g. transponders / persons

### POSSIBLE ADDITIONS TO TRANSPONDERS / PERSONS

- |                           |        |
|---------------------------|--------|
| • Name                    | NAME   |
| • Department              | AB     |
| • Number of data records  | ND     |
| • E-mail                  | EM     |
| • Period of validity      | EXPIRY |
| • Location                | ORT    |
| • Employee number         | PN     |
| • Programming requirement | PB     |
| • Serial number           | SN     |
| • Phone number            | TN     |
| • Title                   | TITEL  |
| • Type                    | TP     |
| • Time group (image)      | ZB     |
| • Time group name         | ZN     |
| • Time group name G2      | ZN G2  |
| • Time group number       | ZG     |
| • Load exceptions         | AA     |

### POSSIBLE ADDITIONS TO LOCKS / DOORS

- |                            |         |
|----------------------------|---------|
| • Name                     | NAME    |
| • Outer dimensions         | AM      |
| • Outer dimensions of door | AT      |
| • Inner dimensions         | IM      |
| • Inner dimensions of door | IT      |
| • Expanded data            | ED      |
| • Floor                    | E       |
| • Building                 | G       |
| • Network                  | N       |
| • Network address          | ADRESSE |

- Programming requirement PB
- PinCode Terminal PIN
- Room number RN
- Serial number SN
- SmartReader SR
- Type TP
- Time zone (image) ZB
- Time zone names ZN

## POSSIBLE ADDITIONS TO TRANSPONDER GROUPS

- Name NAME
- Time group (image) ZB
- Time group name ZN
- Time group name ZN G2
- Time group number ZG

## POSSIBLE ADDITIONS TO AREAS

- Name NAME
- Time zone (image) ZB
- Time zone names ZN

### 1.5.3 SWAPPING THE VIEW OF COMPONENTS IN THE MATRIX

#### EXPLANATION

Depending on the dimensions of the locking system it may be helpful to display the areas or doors in the horizontal bar (column) and the transponder groups (persons) in the vertical bar (line).

#### PROCEDURE

- ➡ Options
- ➡ Matrix view
- Select “Transponders to horizontal bar”

## 6.0 ISSUING AUTHORISATIONS

### 1.6. SHOW / ISSUE GROUP AUTHORISATION

#### ICONS



("Doors / Persons" view)

("Areas / Transponder groups" view)

#### EXPLANATION

By issuing a group authorisation you can authorise a whole transponder group for a complete area. You can therefore create basic authorisations in the locking plan quickly and with ease. It may be useful when issuing authorisations to familiarise yourself with the intended use of the building and the organisational structure of the company in advance. Later on, a clearly structured system is a great tool for day-to-day business by making statements quickly and precisely about possible access instances and makes daily life in the company or organisation easier. You can configure exceptions to group authorisations in Doors / Persons view by removing or adding individual crosses at any time, even at a later date.

#### GROUP RESERVES

If a transponder is assigned to a group, it immediately receives all the authorisations assigned to the group. If a new transponder is assigned to a group, the affected locks need to be programmed. To avoid this situation, so-called transponder ID reserves can be assigned to groups when they are created or at a later date. At this time, however, these transponder IDs are not assigned to a person. The reserves are stored in the locks during programming and are then available to use. If a transponder ID from this reserve is assigned to a person and the transponder is programmed, there is no need to program the locks. Transponders can therefore be automatically authorised and activated in locks without the user having to perform any additional steps such as programming the lock.

#### INHERITANCE

Inheritance is a way of representing a company's hierarchy in the locking system. When inheritance is implemented correctly it greatly reduces the user's workload. It allows you to automate certain processes by assigning a transponder to a particular transponder group. Inheritance can be used when a hierarchy is in place for transponder groups and areas. Group authorisations are considered for inheritance, individual authorisations are not inherited (see LSM Administration Manual).

#### PROCEDURE

- ➡ View
- ➡ Areas / Transponder groups
- Add cross to matrix

# MANUAL LSM – USER

Locking System Management - [lsmdb - Matrix view : Areas/transponder groups [Sample JSC G2]]

File Database View Wizards Edit Reports Data record Programming Network Options Window Help

Locking system: Sample JSC G2

**Transponder groups**

- Management
  - Cleaning
  - Direction development
    - Development hardc
      - Team H1
      - Team H2
    - Development soft
      - Team S1
      - Team S2
  - Direction distribution
    - Field staff
  - Direction finance
    - Bookkeeping
  - Controlling
    - Direction marketing
  - Marketing
    - Media
  - Direction staff

**Areas**

- Branch Manchester
  - Development hardware
  - Direction software
  - Finance
  - Management
  - Marketing
  - Media
  - Sanitary
  - Technician
- Head office London
  - 1st floor
  - 2nd floor
  - 3rd floor
  - Basement
  - Ground floor

**Simons Voss technologies**

NAME (AREAS)	TNTZ	Manag	Devel	Devel	Dir	Direct	Mo	Dir
1st floor								
2nd floor								
3rd floor								
Basement								
Ground floor								
Development hardware								
Direction software								
Finance								
Management								
Marketing								
Media								
Sanitary								
Technician								

idle VIRTUALSP-72976 : COM(\*) TCP port:6000 Admin NUM



# MANUAL LSM – USER

Page 25

## 1.7. SHOW / ISSUE INDIVIDUAL AUTHORISATIONS

### ICONS



("Doors / Persons" view)

### EXPLANATION

By issuing an individual authorisation you can authorise a particular transponder for a particular door.

### PROCEDURE

- ➡ View
- ➡ Doors / Persons

The screenshot shows the Locking System Management (LSM) software interface. The title bar indicates the current view is 'Matrix view : Doors/people [Sample JSC G2]'. The interface is divided into several sections:

- Left Sidebar:** Contains a tree view of the system structure, including 'Transponder groups' (Management, Cleaning, Development hardware, Direction distribution, Direction finance, Controlling, Direction marketing, Media) and 'Areas' (System area, Branch Manchester, Development hardware, Direction software, Finance, Management, Marketing, Media, Sanitary, Technician, Head office London).
- Central Area:** Displays the 'Simons Voss technologies' logo.
- Right Panel:** A table showing authorisation data for various doors and people. The table has columns for 'NAME (DOORS/LOCKS)', 'F', 'RN', 'TZ', 'TP', and 'PR'. The rows are categorized by 'Development hardware' and 'Finance'.
- Bottom Panel:** A table showing the names of the people associated with the doors, categorized by 'NAME (PEOPLE)' and 'PR'. The names listed include Schone, Kathrin; Sheffield, Kim; Stone, May; Sheffield, Sara; White, Susan; Williams, Sara; York, Kelly; Gilmore, John; Ashtby, Sally; Ashtby, Sally; Cook, Steve; Long, Richard; Onwell, Simon; Daines, Sienna; King, Wolfgang; Long, Richard; Meyer, Peter; Miller, Michael.

# MANUAL LSM – USER


Page 26


## 7.0 SEARCH


### EXPLANATION

The search function is the easy way to look for various objects in the database, for example a particular door or a particular transponder. The different ways of performing a search are explained below.

### PROCEDURE

- Right-click on a person or a door
- Left-click on  Search
- Select object (there may be a preliminary selection corresponding to the context)
- Enter designation or part of designation you want to search for
- Select the various search options

You can also call up the search function by clicking on the  icon

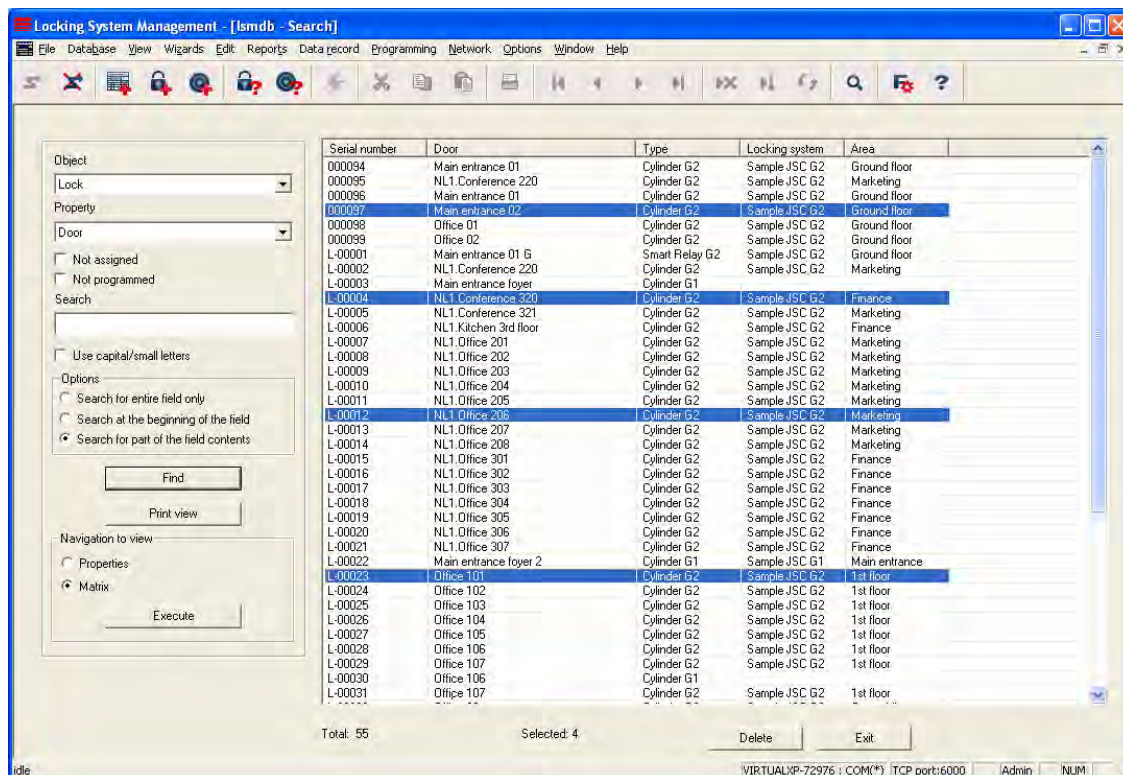

Once the search results are displayed, by selecting an object you can view its properties, the object in the matrix or in a report. A multiple selection of objects can also be deleted.

## 1.8. SEARCHABLE OBJECTS

### 1.8.1 USER

Name

### 1.8.2 USER GROUP

Description

Name

### 1.8.3 AREA

Description

Name

### 1.8.4 PUBLIC HOLIDAY

Name

### 1.8.5 PUBLIC HOLIDAY LIST

Name

### 1.8.6 BUILDING

Abbreviation

Description

Name

Location

### 1.8.7 LOCAL TIME ZONE

Name

### 1.8.8 PERSON

Department

Address

Description

E-mail

Cost centre

Surname

Location

Employee number

Tel

Title

First name

### 1.8.9 LOCKING SYSTEM

Description

Name

### 1.8.10 LOCK

PHI alphanumeric

PHI decimal

Serial number

Door

### 1.8.11 LOCATION

Abbreviation

Description

Name

### 1.8.12 TRANSPONDER

Description

Surname

PHI alphanumeric

PHI decimal

Serial number

First name

### 1.8.13 TRANSPONDER GROUP

Name

Description

### 1.8.14 DOOR

Description

Building

Name

Room number

Location

### 1.8.15 TIME GROUP

Description

Name

### 1.8.16 TIME ZONE PLAN

Description

Name

## 8.0 FILTERS

### 1.9. GENERAL INFORMATION ABOUT FILTERS


#### EXPLANATION

The introduction of filters has made it even easier to administer a locking system. You can select a wide range of filter options and make these filters available to a wide range of people or groups of people. The option of displaying additional columns provides you with extra information, while the filter function also enables you to keep the information on your screen clear and manageable.

### 1.10. MANAGING / CREATING FILTERS

#### PROCEDURE

- ➡ View
- ➡ Manage filters

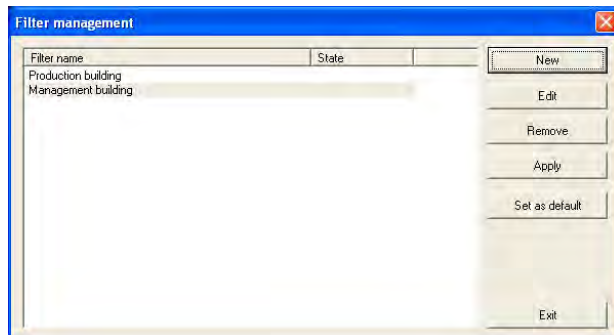

#### EXPLANATION

- |                |                                  |
|----------------|----------------------------------|
| New            | ➔ Create a new filter            |
| Edit           | ➔ Edit a selected filter         |
| Remove         | ➔ Remove a selected filter       |
| Use            | ➔ Use the selected filter        |
| Set as default | ➔ This filter is used by default |
| Close          | ➔ Hide the selection             |

# MANUAL LSM – USER

Page 29

Filter attributes: Production building

Filter name: Production building

☒ For all users  
☐ For user: Admin  
☐ For user group: Administrators

Transponder type

☒ Transponder G1 ☒ Transponder G2  
☒ Biometry G1 ☒ Biometry G2  
☒ Smart Clip ☒ Card G2  
☒ Pin code  
☒ Biometric reader user  
☒ Card

Transponder attributes

☒ All  
☐ With lapsed expiry date  
☐ With validity period  
☐ Programming demand  
☐ Transponders without people

Department: All

Transponder group list

☒ All transponder groups  
☐ Transponder group list

Time group: no

Lock type

☒ Mortise lock  
☒ Control Unit  
☒ Cylinder G1  
☒ Furniture lock  
☒ Smart Relay G1  
☒ Smart Output Module  
☒ Biometric reader  
☒ Cylinder G2  
☒ Smart Relay G2  
☒ Smart Handle G2

Door/lock attributes

☒ All  
☐ With network  
☐ Without network  
☐ Programming demand  
☐ Unprogrammed locks (LID = 0)  
☐ Doors without locks  
☒ Location/Building

List of areas

☒ All zones  
☐ List of areas

Time zone: no

Save Cancel

## EXPLANATION

“User restriction”

“Transponder type”

“Transponder properties”

“Transponder group list”

“Lock type”

“Door / lock properties”

“Area list”

- User or user group that can use the filter
- Type of transponder to be displayed (e.g. G1 transponder)
- Restrictions affecting the properties of the transponder (e.g. period of validity, programming requirements)
- Restrictions affecting the group(s) to which the transponder belongs (e.g. “Management” group)
- Type of lock to be displayed (e.g. SmartRelais)
- Restrictions affecting the properties of the lock (e.g. with network, programming requirements)
- Restrictions affecting the group(s) to which the lock belongs (e.g. “Gate” area)

## 1.11. MANAGING FILTERS – ACTIVATING / DEACTIVATING

### EXPLANATION

You can use the filters you have created with filter management or activate and deactivate the last used filter with the menu bar. There is a further selection list that can be displayed for this purpose below the locking system selection area.



The following message appears if a filter has not been set up or selected.



You can use the icons in the icon list to identify the status of the filters.



Filter not active

Filter active

### NOTE


In the menu item **View** **Manage filter** you can set a filter to be active after the user logs on to LSM by selecting an entry and clicking on **Apply setting**. A brief reminder then appears when you log on.



## 9.0 MANAGING THE LOCKING SYSTEM

### 1.12. LOCKING SYSTEM

A locking system consists of a group of locks and the associated data records on the transponders. These are represented in a matrix. In the LSM software it is possible to create and manage multiple locking systems simultaneously in a single locking plan. The building structures with your locations are also organised here.

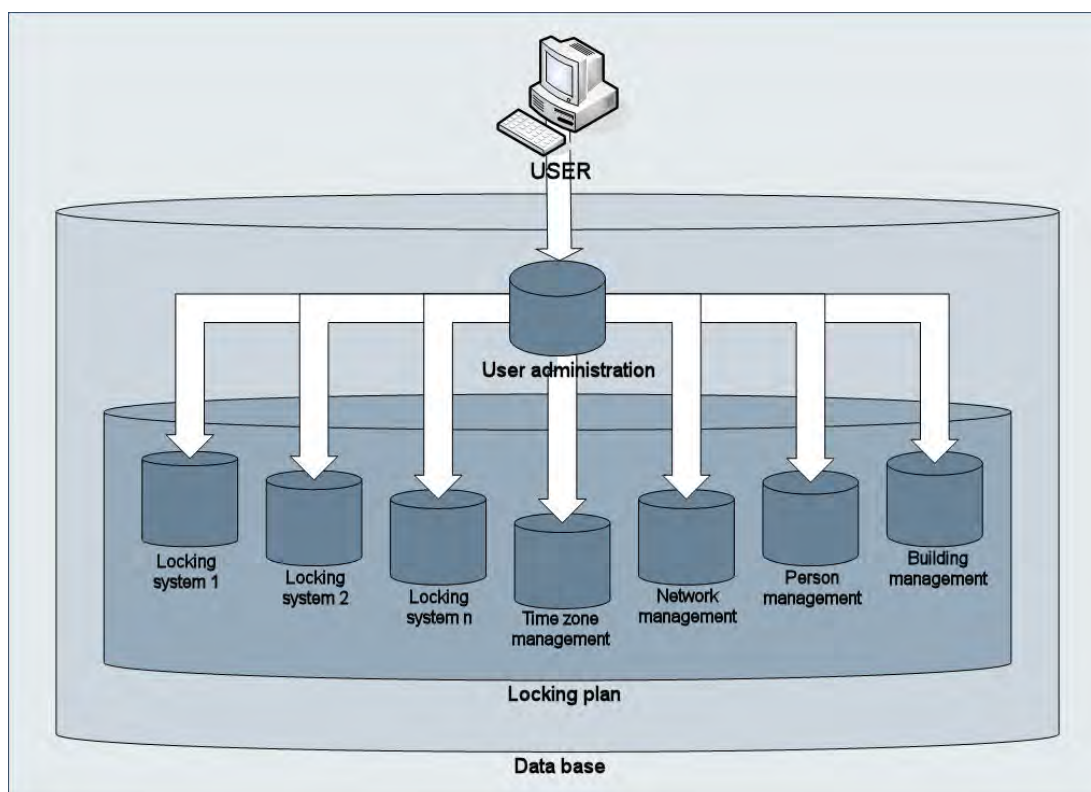

#### 1.12.1 GENERAL INFORMATION ABOUT THE LOCKING SYSTEM



#### EXPLANATION

All the basic settings for a locking system are made in this input screen. All the configurations set here apply to all components in this locking system.

#### PROCEDURE

- ➡ Edit
- ➡ Locking system
- **New**

Or for existing systems

# MANUAL LSM – USER

Page 32

- ➡ Edit
- ➡ Locking system
- **Edit**

Locking System Management - [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - New locking system]

File Database View Wizards Edit Reports Data record Programming Network Options Window Help

Name: Sample JSC G2

Use as general locking level: no

Description:

Protocol generation:

- ☐ G1
- ☒ G2
- ☐ G2+G1
- ☐ Automatically assign G1 TID
- ☒ Virtual Network

Inheritance in the hierarchy:

- ☒ Transponder group hierarchy
- ☒ Area hierarchy

Dynamic time window for G2 transponder:

- ☐ Do not change time window on gateway
- ☐ until a particular time of (next) day
- ☒ Number of hours since last complete hour of booking

Number of hours: 1 Hours

☐ Overlay Mode

G1:

Old Password: [ ]

New Password (to protect file): [ ]

Confirm Password: [ ]

Quality: [ ] 0 bits

G2:

Old Password: [ ]

New Password: [ ]

Confirm Password: [ ]

Quality: [ ] 0 bits

Edit New Apply Exit Help



## EXPLANATION

"Name"	→	Designation of locking system
"Use as overall locking level"	→	Definition of overall locking level ( <a href="#">See 10.7 Overall locking levels</a> )
"Description"	→	Free field for describing the locking system
"Old password "	→	If you change the password for the locking system, it is entered here
"New password"	→	If you change the password for the locking system, the new password is entered here
"Confirm"	→	Re-enter the new password for the locking system to confirm it
"Quality"	→	Displays the quality (complexity) of the password used (at least 64 bits)
"Log generation"	→	Selection of expansion variants for hardware components
"Automatically assign G1 TId"	→	For systems in G2+G1 mode, the G2 transponder also receives G1 data for reasons of compatibility so that it can also open G1 locks.
"Virtual network"	→	Changes to authorisations in the system are written to the transponders using gateways, this mode applies for the entire locking system
"Transponder group hierarchy"	→	Authorisations of a transponder group are inherited by the superordinate transponder group
"Area hierarchy"	→	Authorisations of an area are inherited by the superordinate area
Dynamic time window for G2 transponder		
"Do not change time window on gateway"	→	The validity of the G2 transponder to be booked on the gateway is not subject to a time constraint
"Until a particular time of (next) day"	→	The validity of the G2 transponder to be booked on the gateway is restricted to a fixed time
"Number of hours since last complete hour of booking"	→	The validity of the G2 transponder to be booked on the gateway is extended by a certain number of hours
"Operate in overlay mode "	→	Activates overlay mode (see <a href="#">10.6 Overlay mode</a> )

## 1.12.2 LOCKING SYSTEM PROPERTIES

### EXPLANATION

In the locking system properties you can modify or view all information relating to the locking system. You can navigate to the individual properties using the tabs at the top.


### PROCEDURE

- ➡ Edit
  - ➡ Locking system properties
- or
- Right-click on the locking system icon in the hierarchy tree
  - Left-click on ➡ Properties

# MANUAL LSM – USER

Page 35

## LOCKING SYSTEM PROPERTIES – NAME

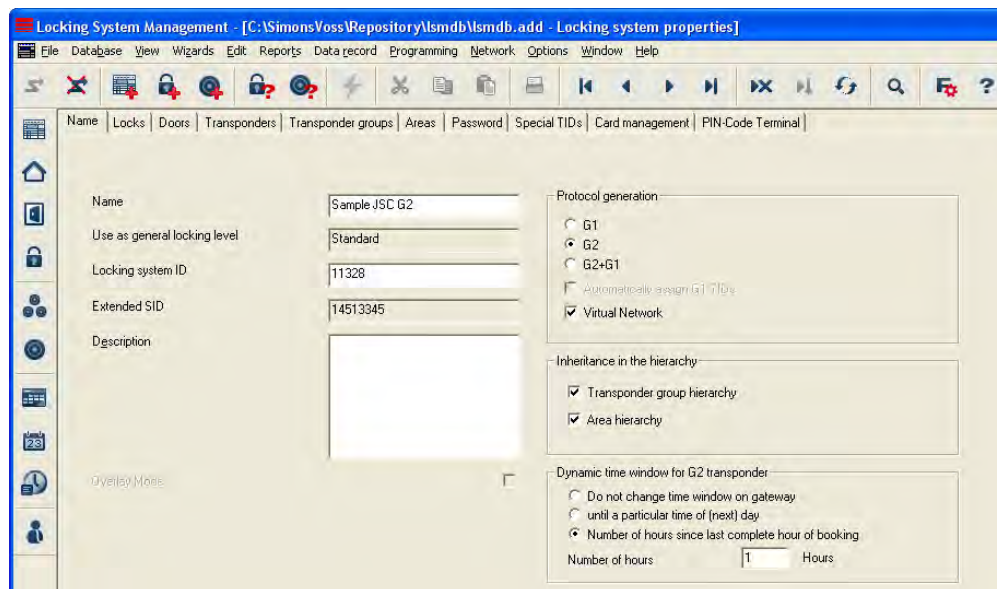

## EXPLANATION

- |   |  |
|---|--|
| "Name"                                  | → Designation of locking system  |
| "Use as overall locking level"          | → Definition of overall locking level (See <a href="#">10.7 Overall locking levels</a> )   |
| "Locking system ID"                     | → System number of locking system  |
| "Extended SID"                          | → Additional distinguishing feature of locking system  |
| "Description"                           | → Free field for describing the locking system   |
| "Operate in overlay mode "              | → Activates overlay mode (see <a href="#">10.6 Overlay mode</a> )  |
| "Log generation"                        | → Selection of expansion variants for hardware components  |
| "Automatically assign G1 TId"           | → For systems in G2+G1 mode, the low TIDs (below 8000) are managed by the system for reasons of compatibility.   |
| "Virtual network"                       | → Changes to authorisations in the system are written to the transponders using gateways, this mode applies for the entire locking system. Only available for G2 components. |
| Dynamic time window for G2 transponder  |  |
| "Do not change time window on gateway"  | → The validity of the G2 transponder to be booked on the gateway is not subject to a time restriction  |
| "Until a particular time of (next) day" | → The validity of the G2 transponder to be booked on the gateway is restricted to a fixed time   |
| "Number of hours since last"            | → The validity of the G2 transponder to be   |


complete hour of booking”

booked on the gateway is extended by a  
certain number of hours

# MANUAL LSM – USER

Page 37

## LOCKING SYSTEM PROPERTIES – LOCKS

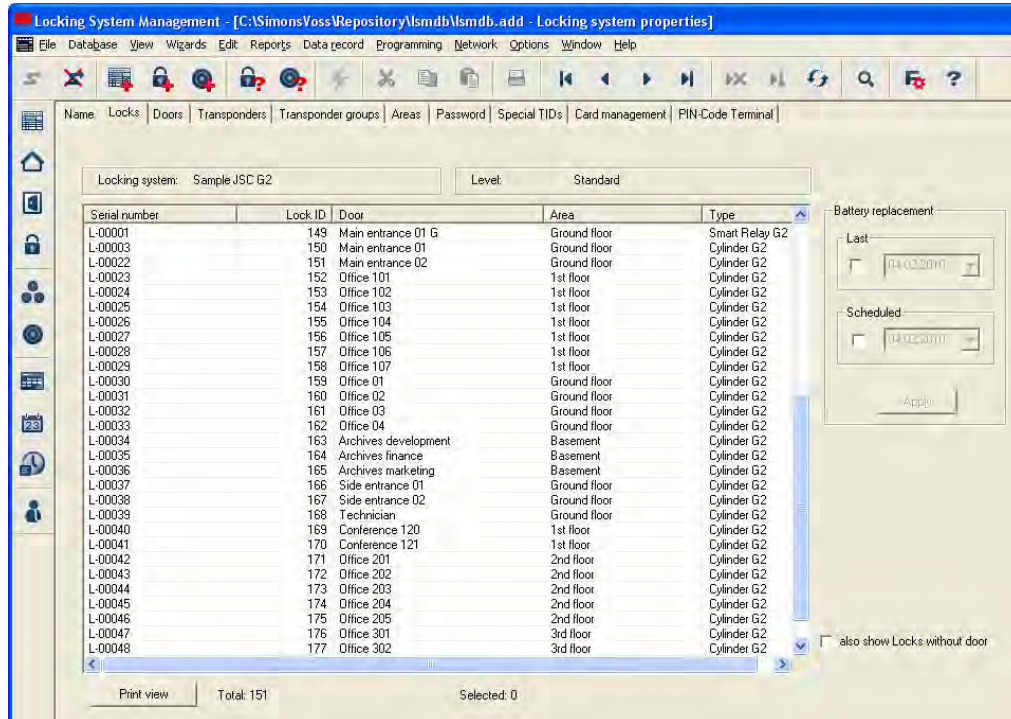

## EXPLANATION

“Locking system”

→ Name of shown locking system

“Level”

→ Type of locking system level (standard, red, green, blue)

Table

→ Overview of all locks in the locking system

“Battery change”

→ “Scheduled” battery changes are shown in the warning monitor and the action list for each lock. In the action list for a particular lock you can also enter a scheduled battery change for several locks at the same time. A battery change can be entered for one or several locks under “Last”.


“Show additional locks without door”

→ This option also shows locks without door assignment in the table.

# MANUAL LSM – USER

Page 38

## LOCKING SYSTEM PROPERTIES – DOORS

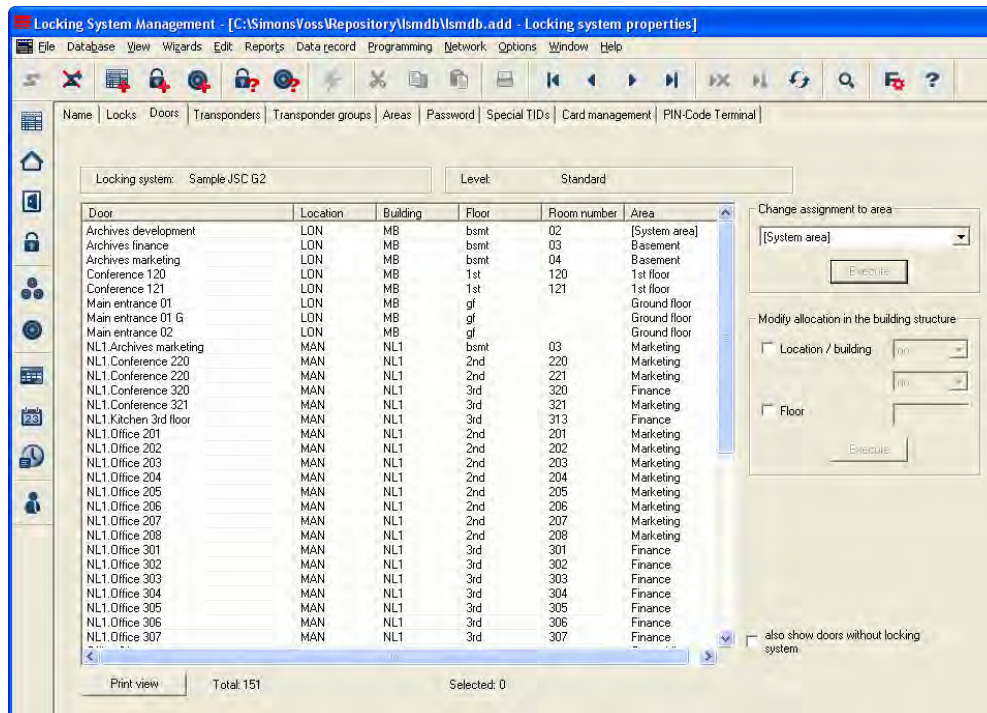

## EXPLANATION

Table

“Change assignment to area”


“Change assignment in the building structure”

- Overview of all doors in the locking system
  - You can change the area assignment of one or more doors at the same time.
  - You can change the location, building assignment or floor of one or more doors at the same time.
- The locations and buildings must be created in advance.

# MANUAL LSM – USER

Page 39

## LOCKING SYSTEM PROPERTIES – TRANSPONDERS IN G1 SYSTEMS

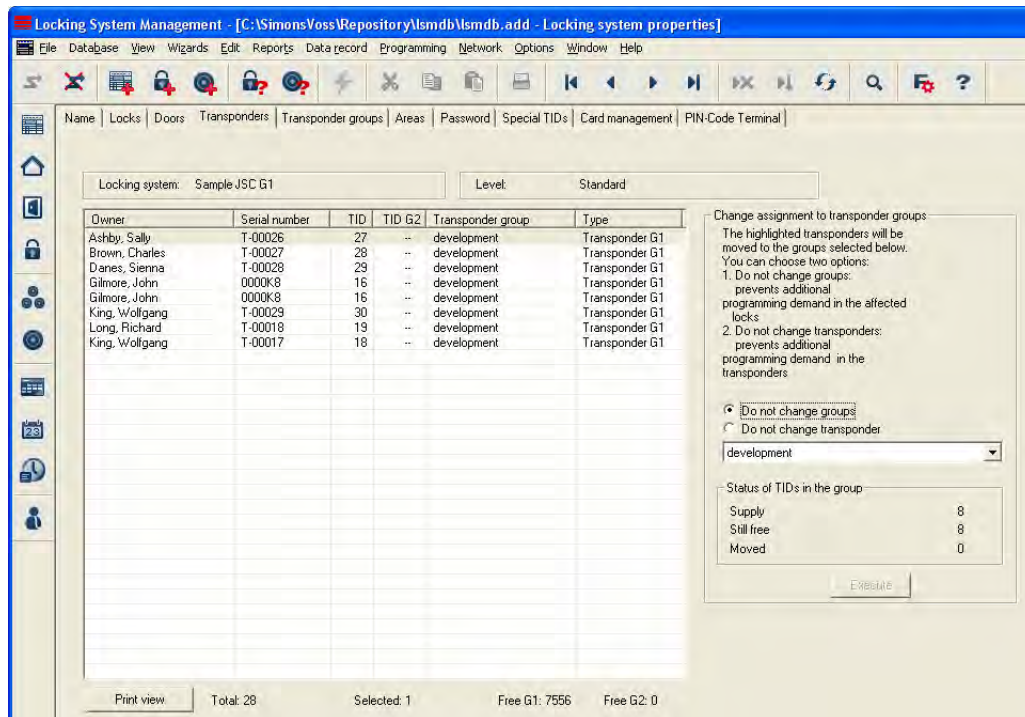

### EXPLANATION

Table

→ Overview of all transponders in the locking system

“Do not modify groups”

→ The selected transponder(s) are relocated to a different group. The transponders are given a TID from the reserve for the new transponder group. This means the transponders will need to be programmed.

“Do not modify transponders”


→ The selected transponder(s) are relocated to a different group. The transponders keep the same transponder ID. This means the locks for which the transponder's old and new transponder groups are authorised will need to be programmed.



# MANUAL LSM – USER

Page 40

## LOCKING SYSTEM PROPERTIES – TRANSPONDERS IN G2 SYSTEMS

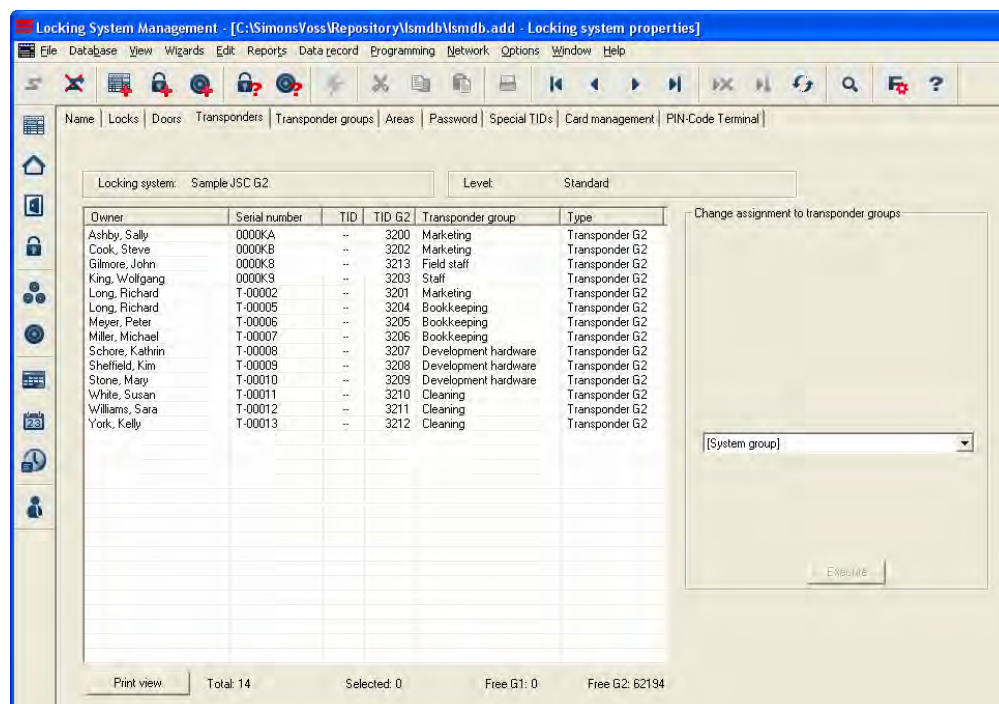

## EXPLANATION

Table

“Change assignment to transponder group”

- Overview of all transponders in the locking system
- The selected transponders are relocated to a different group. Programming is required.



# MANUAL LSM – USER

Page 41

## LOCKING SYSTEM PROPERTIES – TRANSPONDER GROUPS

Locking system: Sample JSC G2      Level: Standard

Transponder group	Superordinate group	Supply	Free stock G1	Time group name
Book-keeping	Direction finance	3	0	--
Cleaning	Managment	3	0	--
Development hardware	Direction development	4	0	--
Field staff	Direction distribution	1	0	--
Marketing	Direction marketing	5	0	--
Media	Marketing	1	0	--
Staff	Direction staff	1	0	--
[System group]	--	1	0	--

Print view      Total: 8      Stocks: 19      Free stocks G1: 0      Free G1 TID: 0

### EXPLANATION

Table


→ Overview of all transponder groups in the locking system

**MANUAL LSM – USER**

**Page 42**

Page 42

## LOCKING SYSTEM PROPERTIES – AREAS

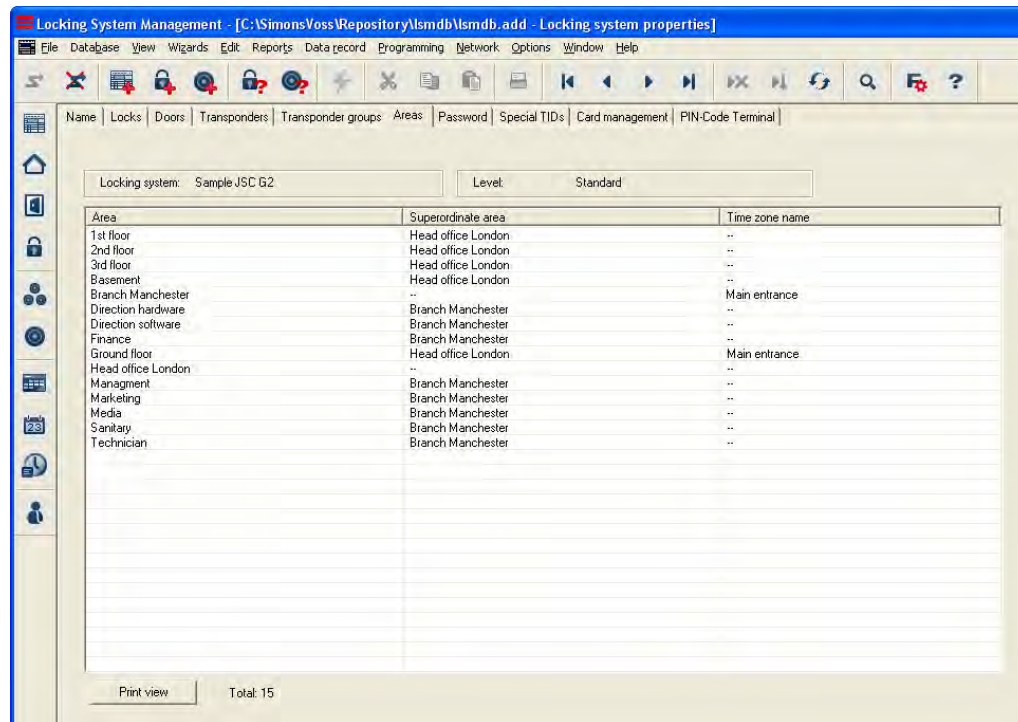

### EXPLANATION


Table

→ Overview of areas in the locking system

# MANUAL LSM – USER

Page 43

## LOCKING SYSTEM PROPERTIES – PASSWORDS

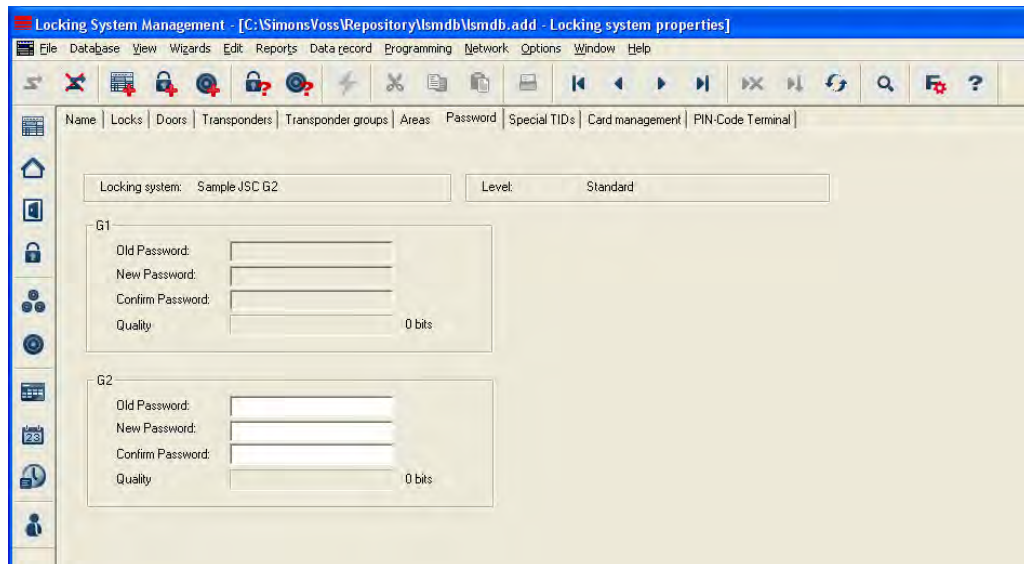

### EXPLANATION

Here, you can change the locking system passwords used to program components.


### NOTE

Please note that when changing the password for the locking system, all components (cylinder, SmartRelais, Transponder, ...) have to be reprogrammed.

# MANUAL LSM – USER

Page 44

## LOCKING SYSTEM PROPERTIES – SPECIAL TIDS

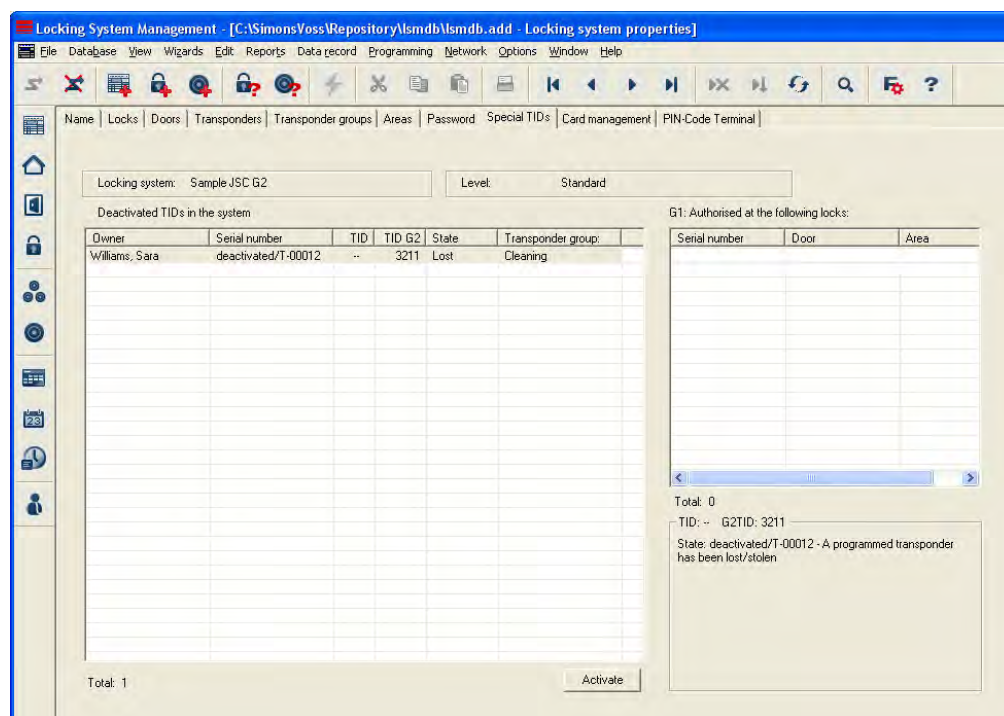

### EXPLANATION

- Left-hand table
  - Overview of all transponders which were deactivated.
- Right-hand table
  - Overview of all locks for which the selected transponders in the left-hand table are authorised.
- Activate
  - The highlighted transponder can be reactivated.
- Bottom right view
  - Information and comments on the deactivated transponder

## LOCKING SYSTEM PROPERTIES – PINCODE TERMINAL

The configuration of the PinCode Terminal is described in the relevant manual.

## LOCKING SYSTEM PROPERTIES – G1 OR G2 CARD MANAGEMENT

Please refer to the “LSM Card Management Manual” for information on card management.

## 1.12.3 CREATING A LOCKING SYSTEM

### PROCEDURE


- ➡ Edit
- ➡ Locking system
- New
- Enter details of locking system
- Apply

or


- Ctrl+Shift+A
- New
- Enter details of locking system
- Apply


## 1.12.4 EDITING A LOCKING SYSTEM

### PROCEDURE

- ➡ Edit
- ➡ Locking system
- Select locking system using arrow buttons 
- Modify data
- Apply

or

- ➡ Selection list for locking systems
- 

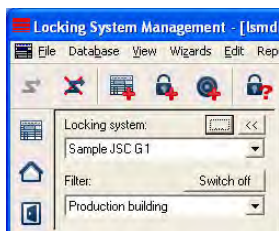

## 1.13. TRANSPONDER GROUP

### 1.13.1 GENERAL

#### ICONS

Matrix



Menu item



#### EXPLANATION

The transponder group is a set of different transponders. This set is used to issue the transponders with authorisations for certain areas on the assigned doors

#### EXAMPLE

Staff in Marketing with the transponders assigned to them for the office doors in Marketing.

#### PROCEDURE

- ➡ Edit
- ➡ Transponder group

or

- Right-click on a transponder group
- Left-click on ➡ Properties

or

- Double-click on the transponder group designation in the matrix

### 1.13.2 CREATING A TRANSPONDER GROUP


#### PROCEDURE

- ➡ Edit
- ➡ Transponder group
- **New**
- Select locking system
- Give “transponder group” a name, for example “Marketing”.
- For transponder groups lower down in the hierarchy you must select a superordinate transponder group.

When you click **Apply** the transponder group is saved. You can now create a second group, as the “New” button has already been activated.


## 1.13.3 EDITING A TRANSPONDER GROUP

### PROCEDURE

- ➡ Edit
- ➡ Transponder group
- Select locking system
- Select transponder group using arrow buttons 

or

- Select the transponder group you want to modify from the tree structure in the matrix view
- Right-click
- Left-click on ➡ Properties

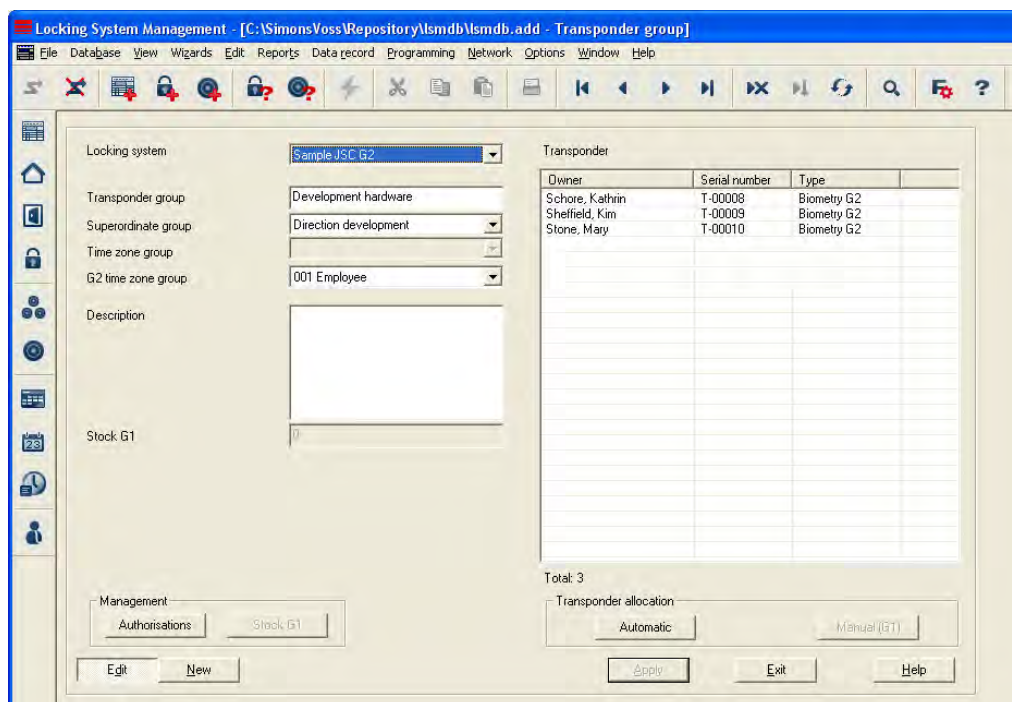

The screenshot shows the 'Locking System Management' application window. The title bar indicates the file path: [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - Transponder group]. The interface includes a menu bar (File, Database, View, Wizards, Edit, Reports, Data record, Programming, Network, Options, Window, Help) and a toolbar with various icons. On the left, a vertical toolbar contains icons for home, list, lock, and other functions. The main area is divided into two panes. The left pane, titled 'Locking system', contains several dropdown menus: 'Sample JSC G2' for the locking system, 'Development hardware' for the transponder group, 'Direction development' for the superordinate group, and '001 Employee' for the G2 time zone group. Below these is a large text area for 'Description'. The right pane, titled 'Transponder', contains a table with columns 'Owner', 'Serial number', and 'Type'. The table lists three entries: Schore, Kathrin (T-00008, Biometry G2), Sheffield, Kim (T-00009, Biometry G2), and Stone, Mary (T-00010, Biometry G2). Below the table, it says 'Total: 3'. At the bottom, there are buttons for 'Management' (Authorisations, Stock G1), 'Edit', 'New', 'Transponder allocation' (Automatic, Manual (G1)), 'Apply', 'Exit', and 'Help'.

Owner	Serial number	Type
Schore, Kathrin	T-00008	Biometry G2
Sheffield, Kim	T-00009	Biometry G2
Stone, Mary	T-00010	Biometry G2

### EXPLANATION

“Locking system”  
“Transponder group”  
“Superordinate group”  
“Time zone group”  
“Time zone group G2”  
“Description”  
“G1 reserve”

- ➔ Select the created locking system
- ➔ Name of transponder group
- ➔ Transponder group linked to a higher position in the hierarchy
- ➔ Specifies the G1 time group for the transponder group
- ➔ Specifies the G2 time group for the transponder group
- ➔ Free field for describing the transponder group
- ➔ Total number of transponder IDs available in the transponder group

Authorisations

Reserve (G1)


Automatic

Manual (G1)

- Option of issuing group authorisations
- Option of managing G1 transponder IDs
- Option of automatically assigning a free transponder to the transponder group
- Option of manually assigning a particular transponder to a particular transponder ID



## 1.13.4 MANAGEMENT

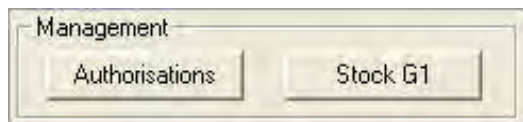

### EXPLANATION

Under “Authorisations” you can issue the transponder group with access authorisations for a complete area. (see [5.3.4.3 Management – authorisation](#))

#### 1.13.4.1 MANAGEMENT – AUTHORISATIONS

Under “Reserve” you can manage the transponder IDs for the transponder group, view the authorisations for a particular transponder, and check how many transponder IDs are still available. (see [5.3.4.2 Management – reserve](#))

#### 1.13.4.2 MANAGEMENT – RESERVE

### EXPLANATION

The reserve is the given number of transponder IDs that a transponder group contains. This number includes both transponder IDs that are in use for the programmed transponders and those that are still free. When a transponder group is authorised for a particular area, all transponder IDs, including unused ones, are automatically programmed into the locks in this area. So when a new transponder is assigned to the group and a transponder ID is used from the reserve, the locks do not therefore have to be reprogrammed.

### PROCEDURE

- ➡ Edit
- ➡ Transponder group
- Select locking system
- Select transponder group using arrow buttons
- [Reserve](#)



or

- Select the transponder group in the matrix
- Right-click
- Left-click on ➡ Properties
- [Reserve](#)

# MANUAL LSM – USER

Page 50

Manage stock

TIDs and transponders in the group

TID	State	Owner	Serial number
9	Activated	--	--
10	Activated	--	--
11	Activated	--	--
12	Activated	--	--
13	Activated	--	--
14	Activated	--	--
15	Activated	--	--
16	Activated	Gilmore, John	0000K8

All TIDs: 8 Free TIDs: 0

Authorised locks for TID:

State: Target Actual Only G1 locks are displayed for G2 transponders.

Serial number	Door	Area
---------------	------	------

Total: 0

TID range: 0 (8-511)

< Add

Activate

Release >

Available TIDs

TID	Authorisations
36	0
37	0
38	0
39	0
40	0
41	0
42	0
43	0
44	0
45	0
46	0
47	0
48	0
49	0
50	0
51	0
52	0
53	0
54	0
55	0
56	0
57	0
58	0
59	0
60	0
61	0
62	0
63	0
64	0
65	0
66	0
67	0

Total: 476  
Selected: 8

Exit

## EXPLANATION

“TIDs and transponders in...”

→ Table of all transponders belonging to the transponder group. Free TIDs can be recognised because they have no serial number

“Free TIDs”

→ List of all TIDs which are not in use, i.e. which do not belong to any transponder group, not even the system group. Click on **Add** to specifically increase the reserve with certain TIDs. Select the TID area, highlight the TIDs you want and then add them. **Activate** TIDs which have already been deactivated

**Release** (remove) TIDs from the transponder group

“TID area”

→ For technical reasons TIDs are divided into areas.

“Authorised locks...”


→ For selected transponders, the actual (programmed) and target (intended) status of the locks can be viewed

## 1.13.4.3 MANAGEMENT – AUTHORISATION

### EXPLANATION


You can use this method to issue group authorisations in a tree structure. It is very easy to check the existing group authorisation and the impact of inheritance.

### PROCEDURE

- ➡ Edit
- ➡ Transponder group
- Select locking system
- Select transponder group using arrow buttons 
- Authorisations

or


- Select the transponder group in the matrix
- Right-click
- Left-click on ➡ Properties
- Authorisations

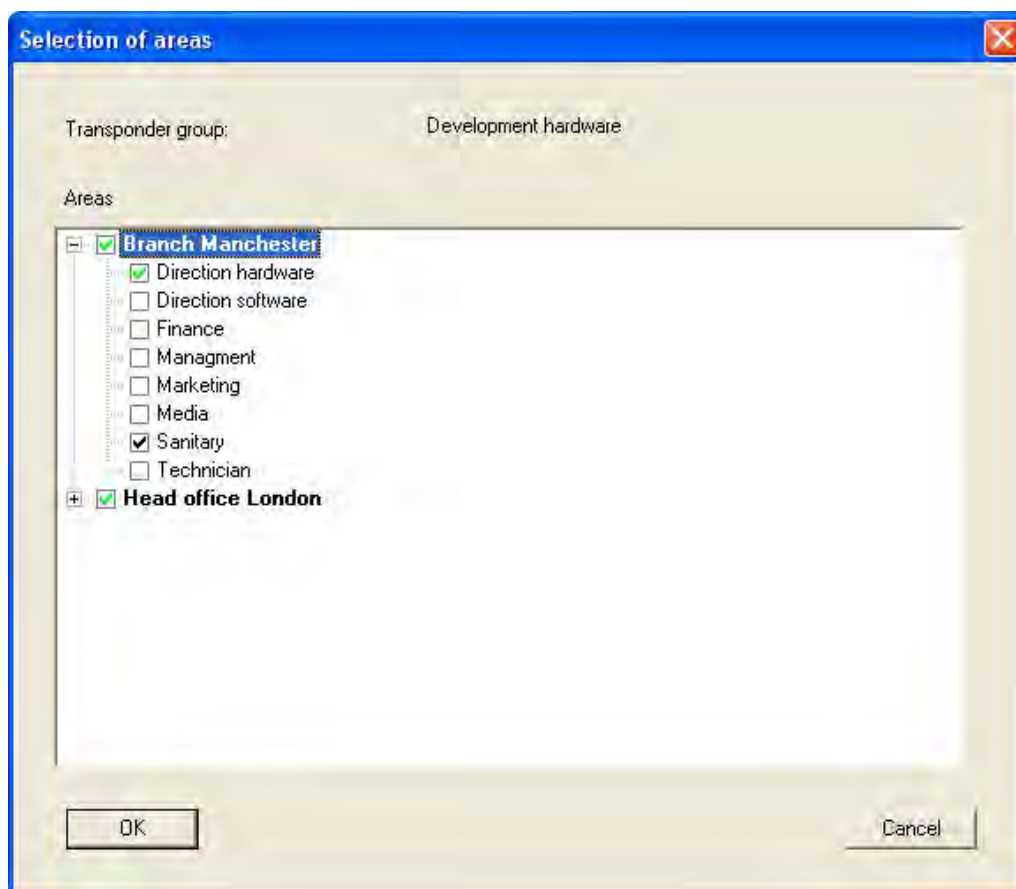

## EXPLANATION

You can issue group authorisations by selecting this option. The authorisation hierarchy is very easy to view and can be reproduced well. The ticks are indicated by various colours and represent the way in which authorisations are issued.

### 1.13.5 TRANSPONDER ASSIGNMENT

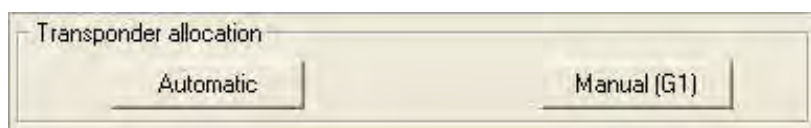


## EXPLANATION

- Under “Automatic” you can assign free transponders to the transponder group. The transponder is given the next free TID in the transponder group.
- Under “Manual” you can assign free transponders to a particular TID in the transponder group .


### 5.2.5.1 TRANSPONDER ASSIGNMENT – AUTOMATIC

## PROCEDURE

- ➡ Edit
- ➡ Transponder group
- Select locking system
- Select transponder group using arrow buttons 
- Automatic

or

- Select the transponder group in the matrix
- Right-click
- Left-click on ➡ Properties
- Automatic

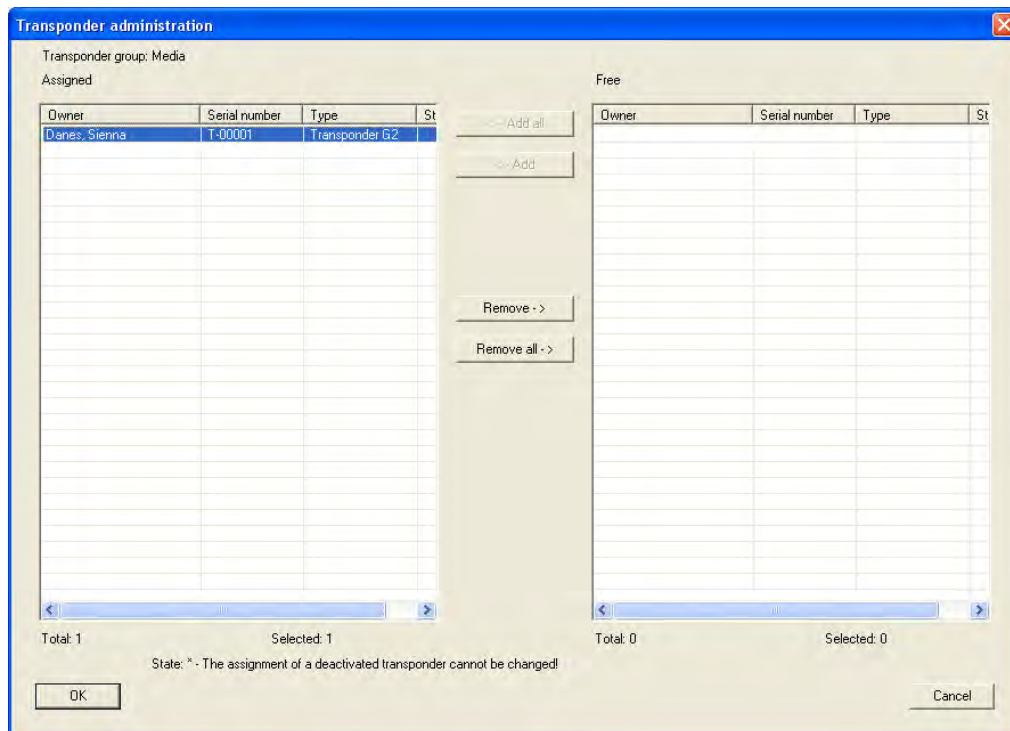


## EXPLANATION

It is possible to assign “free transponders” to the selected transponder group. The transponders are automatically given the next free transponder IDs from the transponder group’s reserve.

### 5.2.5.2 TRANSPONDER ASSIGNMENT – MANUAL

#### PROCEDURE

- ➡ Edit
- ➡ Transponder group
- Select locking system
- Select transponder group using arrow buttons 
- Manual

or

- Select the transponder group in the matrix
- Right-click
- Left-click on ➡ Properties
- Manual

## Page 54



- It is possible to assign “free transponders” to the selected transponder group. The transponders are automatically given the next free transponder IDs by clicking on **Add**.
- By selecting **Connect** you can assign a particular free transponder ID from the transponder group’s reserve to a selected “free transponder”.

## 1.14. TRANSPONDERS

### 1.14.1 GENERAL



ICON

### EXPLANATION

Transponders are the “keys” for digital locking systems. You can use transponders to operate digital locks. Data relevant to the locking system is stored on the transponder. This data is checked during a physical access process such that only authorised transponders have access.

### PROCEDURE

- ➡ Edit
- ➡ Transponder
- **New**

Or for existing transponders

- ➡ Edit
- ➡ Transponder
- **Edit**

Locking System Management - [C:\SimonsVossRepository\lsmdb\lsmdb.add - Transponder]

File Database View Wizards Edit Reports Data record Programming Network Options Window Help

Serial number: 0000K8 ☐ Deactivated Transponder group

Owner: Gilmore, John Expiry time

Type: Transponder G2 Transponder issuance

Description:

☒ Display owners without assigned transponders

Assigned transponder groups:

Locking system	Level	Transponder group	TID G1	Time group	TID G2	G2 Time group	SID ext
Sample JSC G2	Standard	Field staff	--	--	3213	004 Field staff	14513345

Edit New Apply Exit Help

## EXPLANATION

“Serial number”

“Owner”

“...”

“Type”

“Description”

“Assigned transponder gr.”

“Deactivated”

“Show owner without assigned transponder”

Transponder group

Period of validity

Transponder issue

- Serial number of transponder
- Person transponder is assigned to
- Jumps to properties for person
- Type of transponder
- Free field for describing the transponder
- Transponder group to which transponder belongs
- Indicates whether transponder is deactivated or not
- Filter for selecting owners
- Option of moving transponder to a different transponder group
- Period during which transponder will work

- Form for confirming issue to users. This is followed by questions used to manage the issue:

- Overview of authorisations

Entry in action list

- Save report



## 5.3.2 TRANSPONDER PROPERTIES

### EXPLANATION

In the transponder properties you can modify or view all information relating to the transponder. You can navigate to the individual properties using the tabs at the top.

### PROCEDURE

- ➡ Edit
  - ➡ Transponder properties
- or
- Right-click on the person / transponder
  - Left-click on Properties
  - Left-click on Transponder

# MANUAL LSM – USER

Page 58

## TRANSPONDERS – NAME

## EXPLANATION

“Serial number”

“M”

“Firmware”

“Owner”

“...”

“Type”

“Description”

Deactivate

Activate

Transponder issue

“Assigned transponder gr.  
(target)”

“Assigned transponder gr.  
(actual)”

Software reset


**!! Only perform a reset if a  
transponder is physically  
defective, otherwise copies  
could come into circulation!!**

- Serial number of transponder
- Indicates the transponder in the matrix
- Firmware version of the programmed transponder
- Person transponder is assigned to
- Links to the properties for the person
- Type of transponder
- Free field for describing the transponder
- Button for deactivating a transponder
- Button for activating a transponder
- Button for producing a transponder issue confirmation including authorisation
- Target status of transponder groups to which transponder belongs
- Actual status (programmed) of transponder groups to which transponder belongs
- Switch for resetting the software's actual status. This procedure is counted and displayed on the left.

# MANUAL LSM – USER

Page 59

## TRANSPONDERS – DOORS

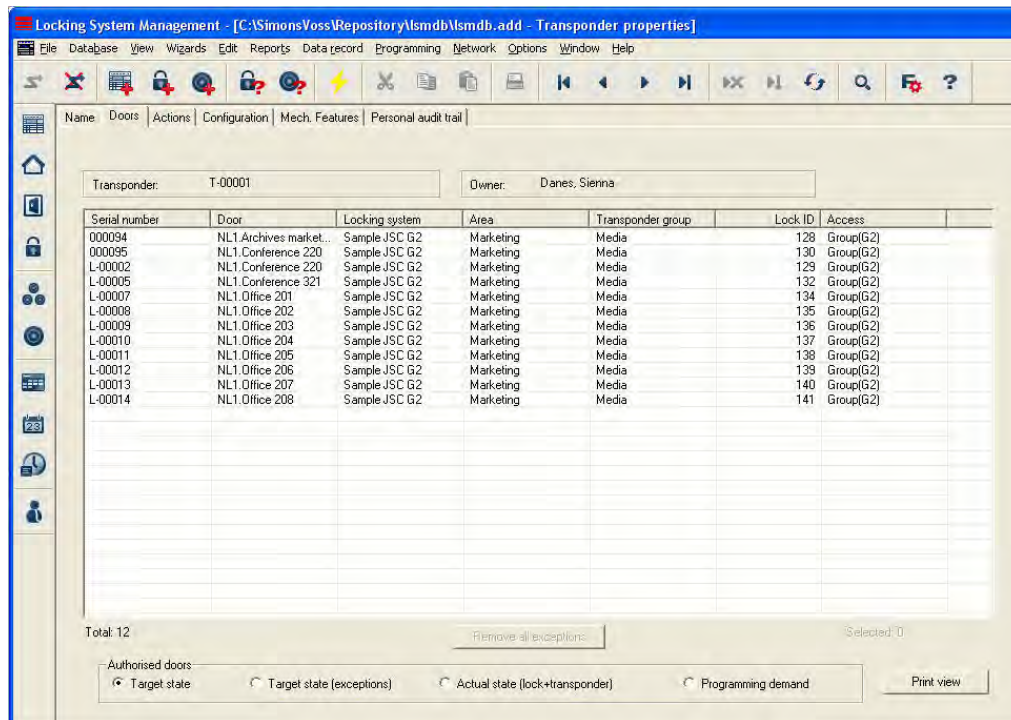

## EXPLANATION

“Transponder”

→ Serial number of transponder

“Owner”

→ Person to whom transponder is assigned

“List with doors”

→ List of doors and locks for which transponder is authorised

“Authorised doors”

→ Selectable display information for the table

Target status:

Displays the intended authorisations on locks

**Target status (exceptions):**

Displays the individual authorisations which deviate from group authorisations

**Actual status**

Displays the programmed authorisations on locks

**Programming requirement**

Displays the authorisations and changes that have not yet been programmed


“Print view”

→ Converts table to print-friendly view

# MANUAL LSM – USER

Page 60

## TRANSPONDERS – ACTIONS

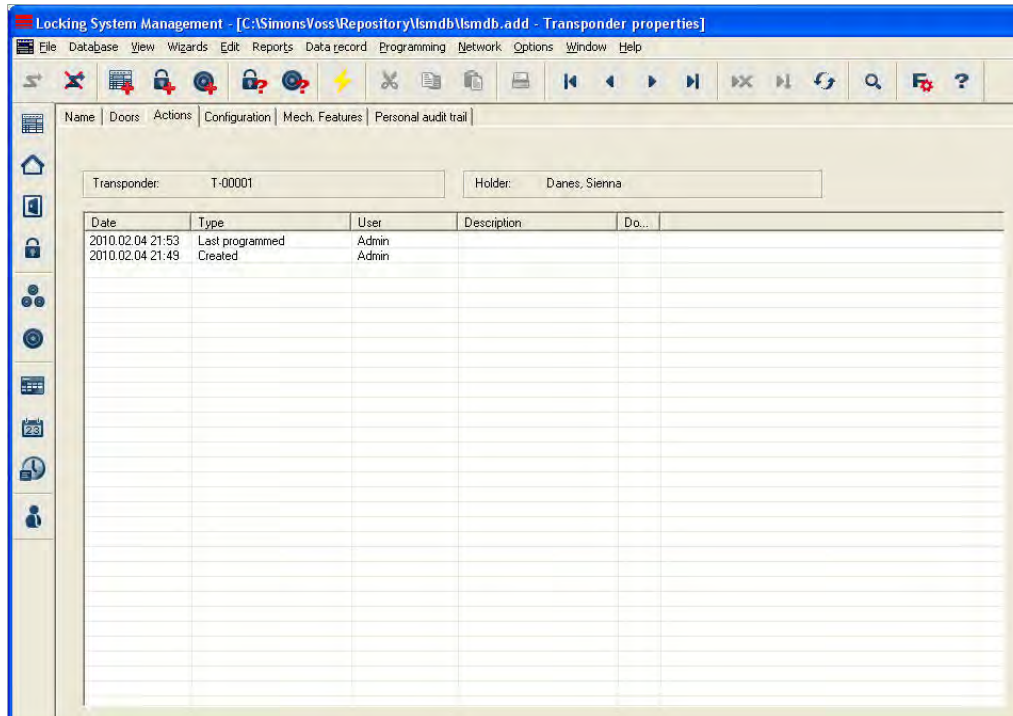


Date	Type	User	Description	Do...
2010.02.04 21:53	Last programmed	Admin		
2010.02.04 21:49	Created	Admin		

## EXPLANATION

“Transponder”  
“Owner”  
Table with actions

- Serial number of transponder
- Person to whom transponder is assigned
- Overview of activities undertaken with the transponder. Entries are automatically created, but additional actions can also be entered and documents stored here

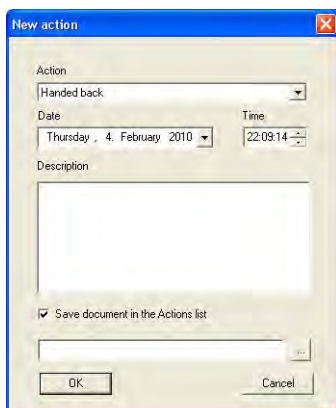

### Possible actions

- Issued
- Withdrawal implemented
- Withdrawal planned

Add  
Remove

- Add can be used to create manual entries
- Remove can be used to delete manual entries

# MANUAL LSM – USER


Page 61

## TRANSPONDERS – CONFIGURATION FOR G2 TRANSPONDERS

### EXPLANATION

"Transponder"	→	Serial number of transponder
"Owner"	→	Person to whom transponder is assigned
"Target status"	→	Configuration to be programmed
"Actual status"	→	Programmed configuration
"Long opening"	→	The lock remains open for longer
"No acoustic opening signal"	→	The lock responds to the transponder without making an acknowledgement sound
Dynamic time window for G2 transponder		The basic settings for the locking system are adopted here, but can be individually adapted to each transponder
"Do not change time window on gateway"	→	The validity of the G2 transponder to be booked on the gateway is not subject to a time restriction
"Until a particular time of (next) day"	→	The validity of the G2 transponder to be booked on the gateway is restricted to a fixed time
"Number of hours since last complete hour of booking"	→→	The validity of the G2 transponder to be booked on the gateway is extended by a certain number of hours
Profile release		Internal counter to manage the program status

If you select “Do not change time window on gateway”, the following configuration options are available to you.

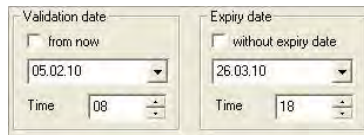

The screenshot shows a configuration window with two main sections: "Validation date" and "Expiry date".

- Validation date:** Includes a checkbox for "from now" (unchecked), a date dropdown menu showing "05.02.10", and a time spinner set to "08".
- Expiry date:** Includes a checkbox for "without expiry date" (unchecked), a date dropdown menu showing "26.03.10", and a time spinner set to "18".

“Activation date”


“Expiry date”

- Date and time as of which transponder is to be valid
- Date and time as of which transponder is to cease being valid

# MANUAL LSM – USER

Page 63

## TRANSPONDERS – FITTINGS FOR G2 TRANSPONDERS

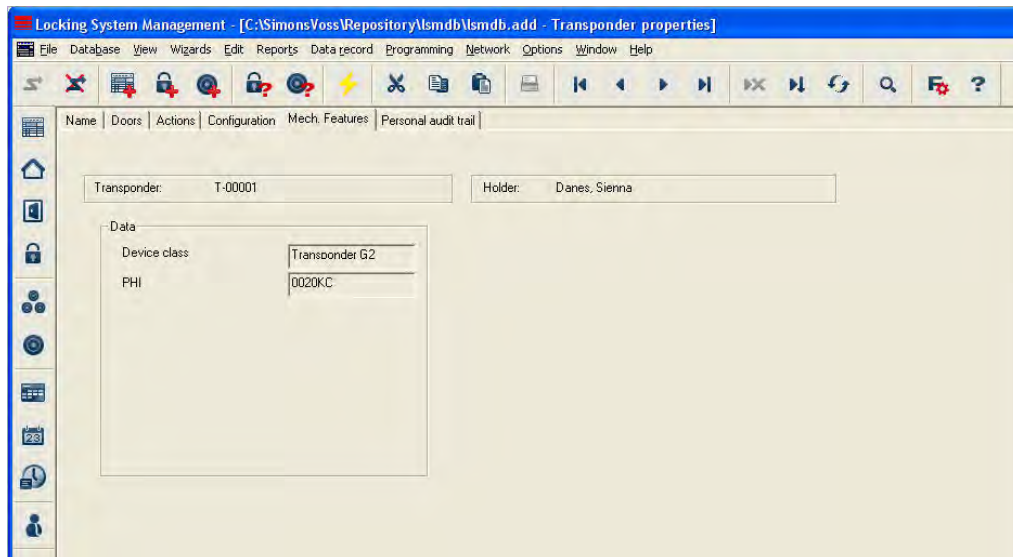

### EXPLANATION

- |                |   |
|----------------|---|
| "Transponder"  | → Serial number of transponder  |
| "Owner"        | → Person to whom transponder is assigned                                |
| Data           |   |
| "Device class" | → Integration of programmed components into a particular hardware group |
| "PHI"          | → Public Hardware Identifier, distinguishing feature for hardware       |



# MANUAL LSM – USER

Page 64

## TRANSPONDERS – PHYSICAL ACCESS LIST FOR G2 TRANSPONDERS

Locking System Management - [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - Transponder properties]

File Database View Wizards Edit Reports Data record Programming Network Options Window Help

Name | Doors | Actions | Configuration | Mech. Features | Personal audit trail

Transponder: 0000KA Owner: Ashby, Sally

Date	Door	Serial number
2010.02.28 02:26	LON.MB.gf. Main entrance 02	000097
2010.02.28 02:26	LON.MB.gf. Main entrance 02	000097
2010.02.28 02:26	... Office 01	000098
2010.02.28 02:26	... Office 02	000099
2010.02.28 02:26	... Office 02	000099
2010.02.28 02:26	LON.MB.gf. Main entrance 01	000096
2010.02.28 02:26	... Office 01	000098
2010.02.28 02:26	LON.MB.gf. Main entrance 02	000097
2010.02.28 02:26	LON.MB.gf. Main entrance 01	000096
2010.02.28 02:26	LON.MB.gf. Main entrance 01	000096

Print view Delete personal audit trail

### EXPLANATION

“Transponder”

“Owner”

Table with physical access instances

→ Serial number of transponder

→ Person to whom transponder is assigned

→ List of doors and locks that the transponder has accessed



# MANUAL LSM – USER

Page 65

## CREATING TRANSPONDERS

### PROCEDURE

or


then

- Select icon 

-  Edit
-  Transponder

- **New**
- For the serial number enter the number of the transponder or leave the default number
- Select a person or create a new one
- Select transponder group

When you click **Apply** the transponder is saved. You can now create another transponder, as the New button has already been activated.

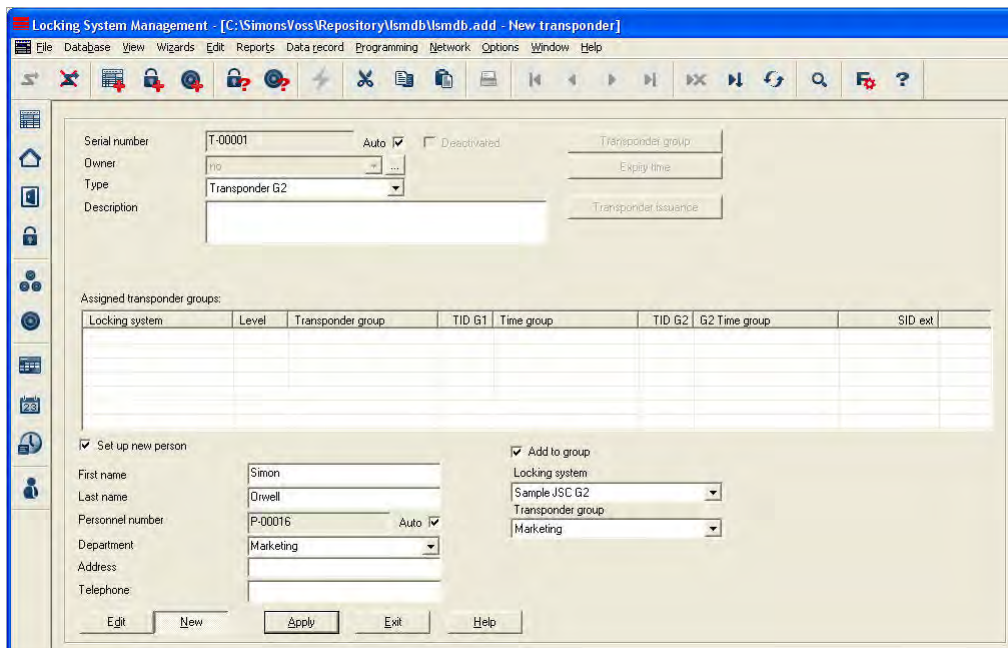

The screenshot shows the 'Locking System Management' software interface. The title bar indicates the file path: [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - New transponder]. The interface includes a menu bar (File, Database, View, Wizards, Edit, Reports, Data record, Programming, Network, Options, Window, Help) and a toolbar with various icons. The main window is divided into several sections:

- Transponder details:** Fields for Serial number (T-00001), Owner (rio), Type (Transponder G2), and Description. There are also checkboxes for 'Auto' and 'Deactivated', and buttons for 'Transponder group', 'Expiry time', and 'Transponder issuance'.
- Assigned transponder groups:** A table with columns: Locking system, Level, Transponder group, TID G1, Time group, TID G2, G2 Time group, and SID ext.
- Person details:** A section for 'Set up new person' with fields for First name (Simon), Last name (Orwell), Personnel number (P-00016), Department (Marketing), Address, and Telephone. There are also checkboxes for 'Add to group' and 'Add to group'.






At the bottom, there are buttons for 'Edit', 'New', 'Apply', 'Exit', and 'Help'.

### EXPLANATION

- “Assigned transponder group” → Displays the assigned transponder group
- “Create new person” – (first name, surname...) → Personal details of person
- “Add to group” – transponder group → Transponder group in which the person is created

## 1.14.2 EDITING TRANSPONDERS

### PROCEDURE

- Select icon 
- Select transponder using arrow buttons 
- or
-  Edit
-  Transponder properties
- Select transponder using arrow buttons 
- or
- Select the person you want to modify in the matrix
- Right-click
- Left-click on “Properties”
- Left-click on **Transponder**
- or
- Select the person you want to modify in the matrix
- **Ctrl+Shift+O**
- or
- Right-click on any transponder in the matrix
- Left-click on “Search”
- Select object
- Define property (e.g. surname)
- Enter designation or part of designation you want to search for
- **Search**
- Highlight the data record you want in the result set
- Select properties in “Navigation to view”
- Click on **Execute** to go to the transponder overview
- then
- Modify data
- **Apply**

## 1.15. PERSONS

### 1.15.1 GENERAL INFORMATION ABOUT PERSONS

#### ICON





#### EXPLANATION




The person is used to manage master data and additional information and is the assigned owner of one or more transponders.

#### PROCEDURE


or

- Select icon 
- Select person using arrow buttons 

or

-  Edit
-  Person
- Select person using arrow buttons 

or

- **Ctrl+Shift+O**
- Select person using arrow buttons 

- Select the person you want to modify in the matrix
- Right-click
- Left-click on “Properties”
- Left-click on **Transponder**

# MANUAL LSM – USER

Page 68

**Locking System Management - [lsmdb - Person]**

File Database View Wizards Edit Reports Data record Programming Network Options Window Help




First name: Sally  
Last name: Ashby  
Title:  
Address: Sample Street 123  
London WC1E 7HU  
Telephone: +44(171) 123456  
E-Mail: Sally.Ashby@sample.com  
Personnel number: P-00007  
User name: no  
Department: Marketing  
Location/Building: Head office  
Entry date: 25/04/2011 not relevant  
Quitting date: 30/04/2011 not relevant  
Date of birth: 31/04/2011 not relevant  
Cost Centre: 4462  
Note:  
Transponders:  
Serial number Type  
0000KA Biometry G2  
T-00003 Transponder G2  
T-00004 Transponder G1  
T-00026 Transponder G1  
Manage  
Edit New  
Admin NUM

## EXPLANATION

- |                   |   |
|-------------------|---|
| "First name"      | → Person's first name   |
| "Surname"         | → Person's surname  |
| "Title"           | → Person's academic salutation  |
| "Address"         | → Person's address  |
| "Tel"             | → Person's phone number   |
| "E-mail"          | → Person's e-mail   |
| "Employee number" | → Employee number (must be unique), can be modified                   |
| "User name"       | → Select the logon name if the person is also an LSM user             |
| "Department"      | → Person's department   |
| "Site/Building"   | → Site / building where the person can be found                       |
| "Employed from"   | → Start date of employment contract                                   |
| "Employed until"  | → End date of employment contract                                     |
| "Date of birth"   | → Person's date of birth  |
| "Cost centre"     | → Person's cost centre  |
| "Comments"        | → Free field for describing the person                                |
| "Picture"         | → This is where a picture of the person can be stored                 |
| Manage            | → Transponders that have already been created can be added or removed |









## 1.15.2 CREATING A PERSON

### PROCEDURE

- Select icon 
  - **New**
- or
-  Edit
  -  Person
  - **New**
- or
- **Ctrl+Shift+P**
  - **New**
- then
- In **Manage**, select a free transponder if necessary
  - Enter details of person
  - **Apply**

## 1.15.3 EDITING PERSONS

### PROCEDURE

- Select icon 
  - Select person using arrow buttons 
- or
-  Edit
  -  Person
  - Select person using arrow buttons 
- or
- Select the person you want to modify in the matrix
  - Right-click
  -  Properties
  -  Person
- or
- Right-click on any person in the matrix
  -  Search
  - Select object
  - Enter designation or part of designation you want to search for
  - **Search**
  - Highlight the data record you want in the result set
  - Select properties in “Navigation to view”
  - Click on **Execute** to go to the person overview
- then
- Modify data
  - **Apply**



## 1.16. AREA

### 1.16.1 GENERAL INFORMATION ABOUT AREAS

#### ICON



#### EXPLANATION

An area is a set of doors in a building or organisational unit with the same or similar transponder authorisations.


#### PROCEDURE

- Select icon
- or
- Select area using arrow buttons
- ↻ Edit
- ↻ Area
- or
- Select area using arrow buttons
- or
- Right-click on Area
- ↻ Properties
- or
- **Ctrl+Shift+S**
- Select area using arrow buttons
- or
- Right-click on any area in the matrix
- ↻ Search
- Select object
- Define property (e.g. name)
- Enter designation or part of designation you want to search for
- **Search**
- Highlight the data record you want in the result set
- Select properties in “Navigation to view”
- Click on **Execute** to go to the area overview

**MANUAL LSM – USER**

**Page 72**

Page 72

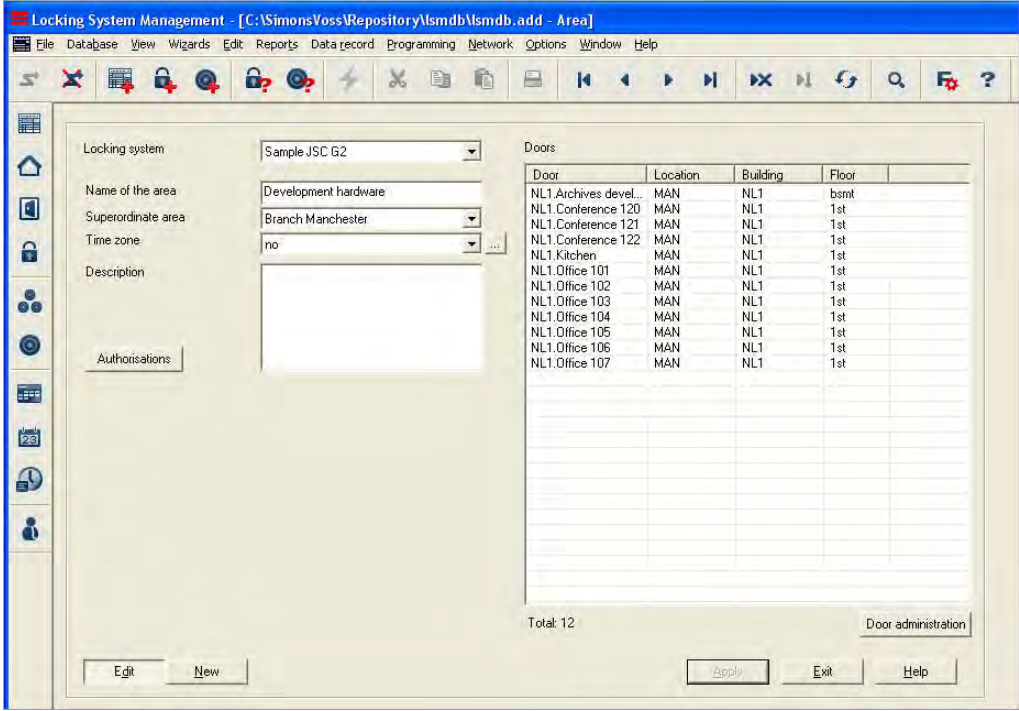

### EXPLANATION

## “Locking system”

“Name of area”

“Superordinate area”

“Time zone”


“ ”

**“Description”**

## “Doors”

## Authorisations

- Area's locking system
- Designation of area
- Details of the area one level higher in the hierarchy
- Details of time zone of area
- Links to the properties of the selected time zone
- Free field for describing the area
- Displays the assigned doors
- Authorised transponder groups can be viewed and set

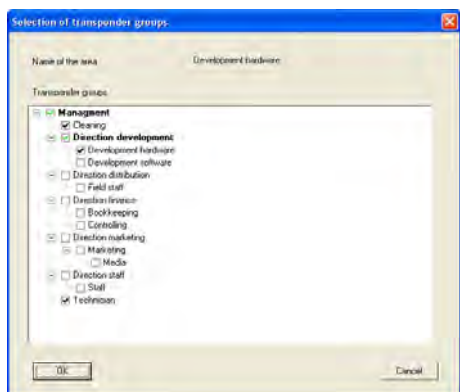




# MANUAL LSM – USER

Page 73





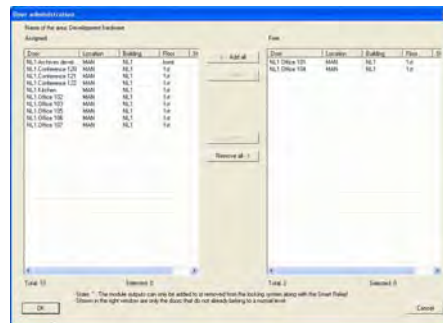

Door management

→ Displays and changes the doors assigned to the area








## 1.16.2 CREATING AN AREA

### PROCEDURE

- Select icon 
  - Select area using arrow buttons 
- or
-  Edit
  -  Area
  - Select area using arrow buttons 
- or
- Right-click on Area
  -  New
- or
- **Ctrl+Shift+S**
- then
- **New**
  - Enter details of area
  - **Apply**

## 1.16.3 EDITING AN AREA

### PROCEDURE

- Select icon 
  - Select area using arrow buttons 
- or
-  Edit
  -  Area
  - Select area using arrow buttons 
- or

- Select the area you want to modify in the matrix
  - Right-click on Area
  - ➡ Properties
- or
- **Ctrl+Shift+S**
- then
- Modify data **Apply**

## 1.17. LOCK




### 1.17.1 GENERAL INFORMATION ABOUT LOCKS




#### EXPLANATION

SimonsVoss describes as “locks” all products that can be operated with a transponder. This includes SmartRelais, activation units and locking cylinders, for example.

#### PROCEDURE

- Select icon 
  - Select area using arrow buttons 
- or
- ➡ Edit
  - ➡ Lock properties
  - Select lock using arrow buttons 
- or
- Right-click on the door / lock
  - ➡ Properties
  - **Lock**
- or
- **Ctrl+Shift+C**

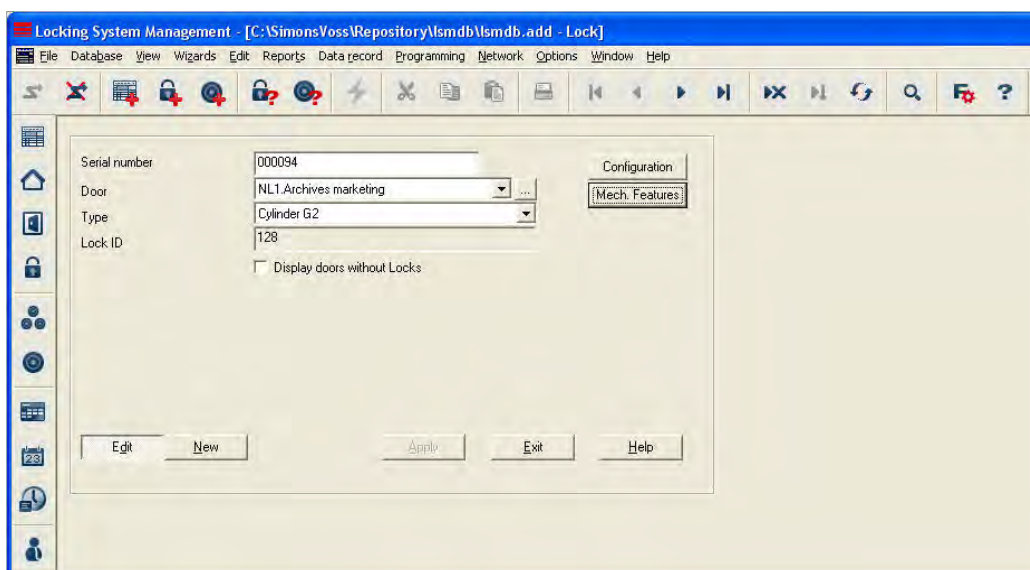

#### EXPLANATION

“Serial number”

→ This entry is created automatically the first

# MANUAL LSM – USER

Page 76

“Door”

“...”

“Type”


“Lock ID”

“Show doors without locks”

“Configuration”


time a lock is programmed

- Door to which the lock is assigned
- Links to the properties of the selected door
- Lock type (e.g. locking cylinder)
- ID with which the door is stored in the software
- If set, previously assigned doors are not shown
- Show / modify configuration

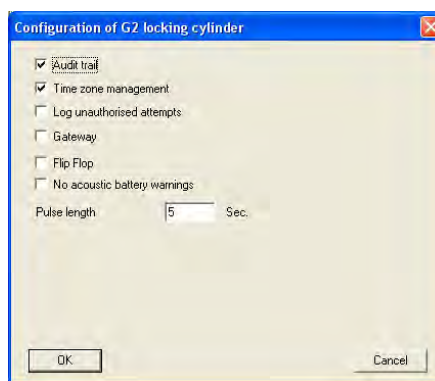

“Fittings”

- Show / modify lock fittings

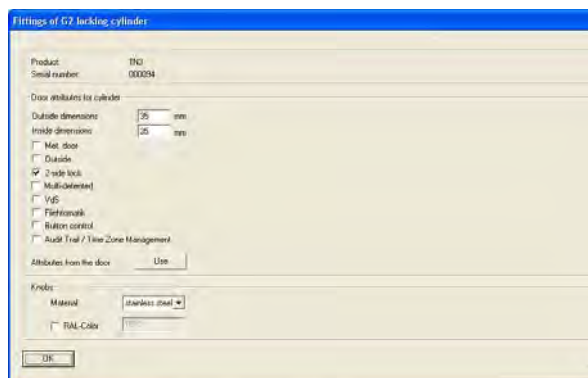







## 1.17.2 LOCK PROPERTIES

### EXPLANATION

In the lock properties you can modify or view all information relating to the lock. You can navigate to the individual property groups using the tabs at the top.


### PROCEDURE

- Select icon 
  - Select area using arrow buttons 
- or
-  Edit
  -  Lock properties
  - Select lock using arrow buttons 
- or
- Right-click on the door / lock
  -  Properties
  - **Lock**
- or
- **Ctrl+Shift+C**

# MANUAL LSM – USER

Page 78

## LOCK PROPERTIES – NAME

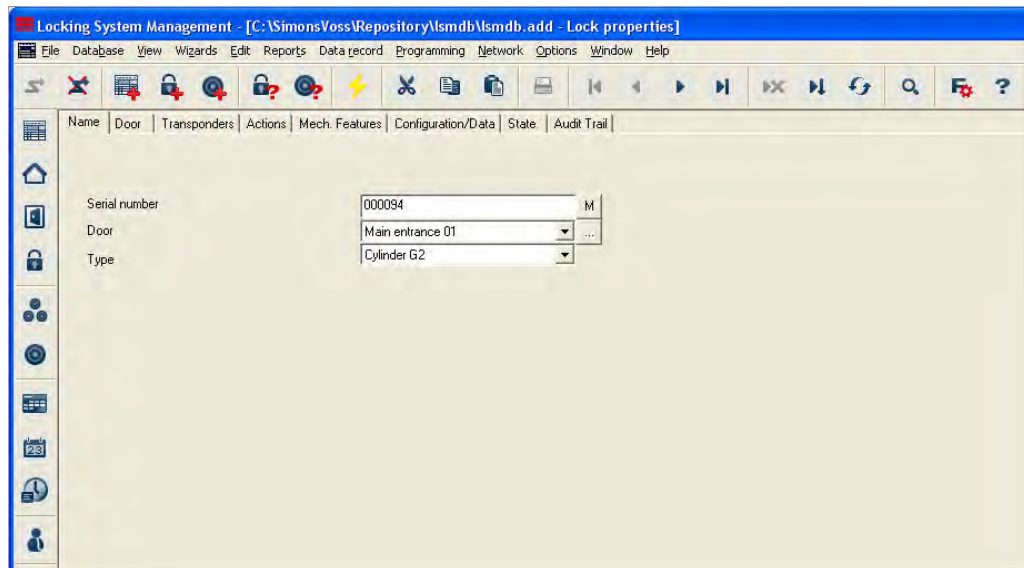

## EXPLANATION

“Serial number”

→ Entry created automatically from the lock data the first time a lock is programmed

“M”

→ Opens the lock in the matrix

“Door”

→ Door to which the lock is assigned

“...”

→ Links to the properties of the selected door

“Type”

→ Lock type (e.g. locking cylinder)

# MANUAL LSM – USER

Page 79

## LOCK PROPERTIES – DOOR


## EXPLANATION

- |  |  |
|--|--|
| "Door designation"                     | → Name of door   |
| "Location"                             | → Location where door can be found (must be created first)                                       |
| "Building"                             | → Building in which door is located (must be created first)                                      |
| "Floor"                                | → Floor on which door is located (can be created by inputting text)                              |
| "Room number"                          | → Room number of door (can be created by inputting text)   |
| "Description"                          | → Free field for describing the door   |
| "Locks"                                | → Locks assigned to the door   |
| <b>Manage</b>                          | → Option of removing a door or assigning it to a particular area                                 |
| "Type"                                 | → Selection of programming device type   |
| "Device"                               | → Selection of a particular programming device, mainly required for LON and WaveNet              |
| "Unassigned devices"                   | → When this option is selected, otherwise assigned LON and WaveNet nodes are no longer displayed |
| "Door attributes for mortise lock"     | → Additional data can be specified for the mortise lock  |
| "Door attributes for locking cylinder" | → Additional data can be specified for the locking cylinder                                      |

# MANUAL LSM – USER

Page 80

## LOCK PROPERTIES– TRANSPONDER

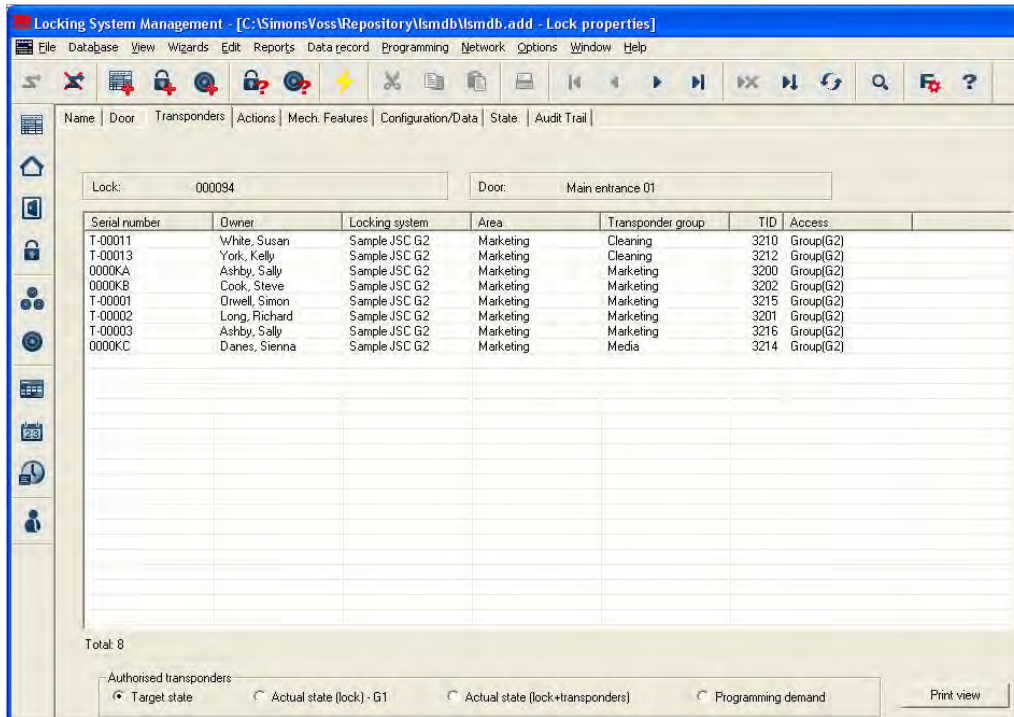

## EXPLANATION

Table

→ Overview of all transponders authorised for the lock

“List with transponders”

→ List of transponders authorised for the lock

“Authorised doors”

→ Selectable display information for the table

Target status:

Displays the intended authorised transponders

**Actual status (lock - G1):**

Displays the programmed G1 authorisations

**Actual status (lock+transponder):**

Displays the programmed authorisations for transponders

**Programming requirement**

Display of authorisations and changes that have not yet been programmed

“Print view”


→ Converts table to print-friendly view



**MANUAL LSM – USER**

**Page 81**

## LOCK PROPERTIES – ACTIONS

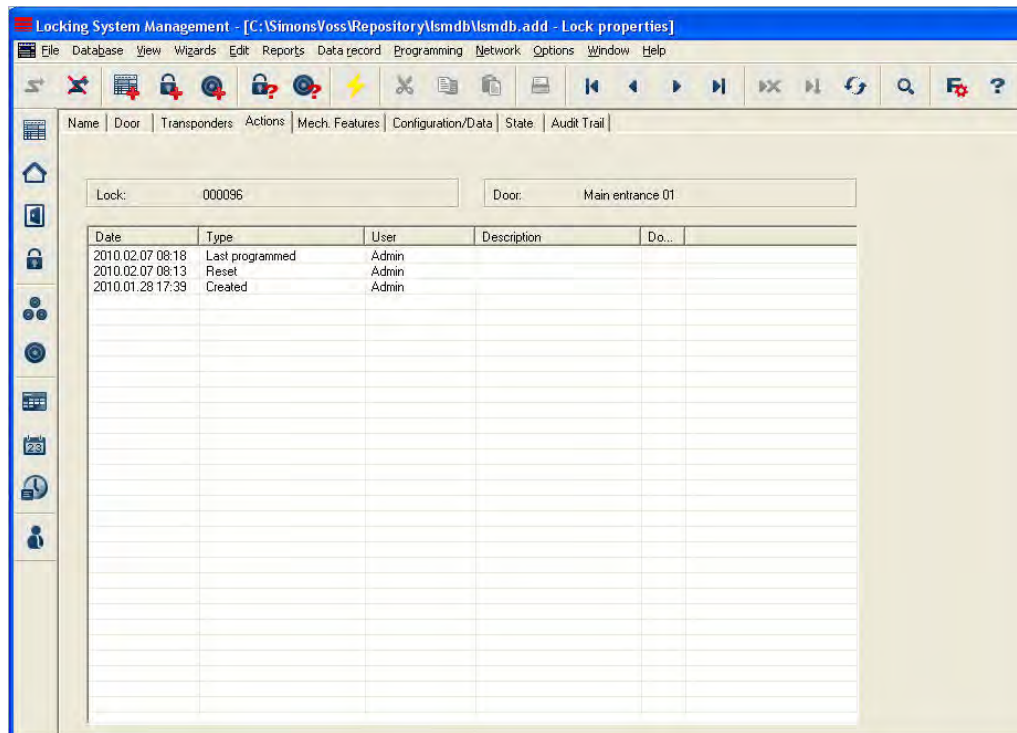

### EXPLANATION

“Lock”

“Door”


Add

## Table with actions

- Serial number of lock
- Door to which lock is assigned
- Add can be used to create manual entries
- Overview of activities undertaken with the lock. Entries are automatically created, but additional actions can also be entered and documents stored here

## Possible actions

- Dismantled
- Replaced
- Installed
- Last battery change
- Scheduled battery change

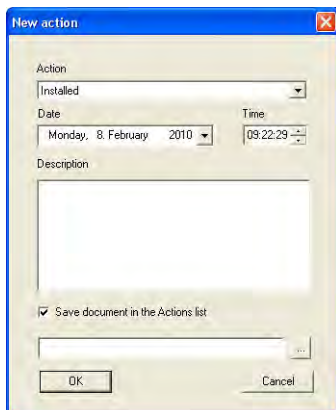

# MANUAL LSM – USER

Page 82

## LOCK PROPERTIES – G1 FITTINGS

Locking System Management - [lsmdb - Lock properties]

File Database View Wizards Edit Reports Data record Programming Network Options Window Help

Name Door Transponders Actions Mech. Features Configuration/Data State Audit Trail

Lock: L-00022 Door: Main entrance foyer 2

Product: TN4 (FD)  
Serial number: 12-04070006981

Attributes for cylinder

Outside dimensions: 35 mm  
Inside dimensions: 35 mm

☐ Metal Door  
☐ Outside  
☒ Both sides free spinning  
☐ Multi-detented  
☐ VDS / SKG  
☐ Fliehmomatik  
☐ Button control  
☒ Audit Trail / Time Zone Management

Knobs

Material: stainless steel  
☐ RAL-Color: 1600

idle VIRTUALXP-72976 : COM(\*) TCP port:6000 Admin NUM

## EXPLANATION

“Lock”

→ Serial number of lock

“Door”

→ Door to which lock is assigned

“Product”

→ Product group

“Serial number”

→ Serial number read during programming

Attributes for locking cylinders

→ Are automatically read and entered into a workstation the first time a lock is programmed

Use

→ The attributes that were entered manually in the door are adopted

“Knobs”

→ Information on type of knobs

Data

Device class

→ Product class of lock

PHI

→ Public Hardware Identifier, hardware identification

Profile release

→ Internal counter to manage the programming processes

# MANUAL LSM – USER

Page 83

## LOCK PROPERTIES – G2 FITTINGS

The screenshot shows the 'Locking System Management - [lsmdb - Lock properties]' window. The interface includes a menu bar (File, Database, View, Wizards, Edit, Reports, Data record, Programming, Network, Options, Window, Help) and a toolbar with various icons. Below the menu bar is a tabbed interface with tabs for Name, Door, Transponders, Actions, Mech. Features, Configuration/Data, State, and Audit Trail. The 'Configuration/Data' tab is active, showing the following fields:

- Lock: 000099
- Door: Office 02
- Product: Cylinder G2 (FD)
- Serial number: 000099
- Attributes for cylinder:
  - Order data: Z4.61-39.FD.G2
  - Outside dimensions: 0 mm
  - Inside dimensions: 0 mm
- Data:
  - Device class: Cylinder G2
  - PHI: 000099
  - Profile release: 79

## EXPLANATION

“Lock”

→ Serial number of lock

“Door”

→ Door to which lock is assigned

“Product”

→ Product group

“Serial number”

→ Serial number read during programming

Attributes for locking cylinders

→ Are automatically read and entered into a workstation the first time a lock is programmed

Use

→ The attributes that were entered manually in the door are adopted

“Knobs”

→ Information on type of knobs

Data

Device class

→ Product class of lock

PHI

→ Public Hardware Identifier, hardware identification

Profile release

→ Internal counter to manage the programming processes

# MANUAL LSM – USER

Page 84

## LOCK PROPERTIES – G1 CONFIGURATIONS / DATA

## EXPLANATION

- “Lock” → Serial number of lock
- “Door” → Door to which lock is assigned
- “Target” → Desired lock configuration
- “Actual” → Configuration of programmed lock
- “Locking system ID” → Internal locking system ID to distinguish the system
- “Lock ID” → Internal number of lock
- “Access control” → Option of logging access instances
- “Time zone control” → Option of restricting the access times for transponders
- “Overlay” → Storing reserve IDs in the locks to respond to losing transponders
- “Long triggering” → Longer engagement / switching of lock
- “OMRON” → All product versions can be operated in OMRON mode. If you would like the SmartRelais to transfer the transponder data to an external system and a remote opening command to be sent to the cylinder when transfer is activated from the SmartRelais by the external system, select this option on both the SmartRelais and the cylinder. Please note: If you use this

# MANUAL LSM – USER

Page 85


“No acoustic programming acknowledgement”

“Log unauthorised access instances”

“Time conversion”

configuration, it is no longer possible to open the cylinder using the transponder! Please refer to the SmartRelais Manual for an exact description.

- During programming, the lock does not confirm the process by blips
- Logging of unauthorised access instances, only in conjunction with “access control”
- The lock automatically changes the status at set times according to the settings under **Extended configuration**

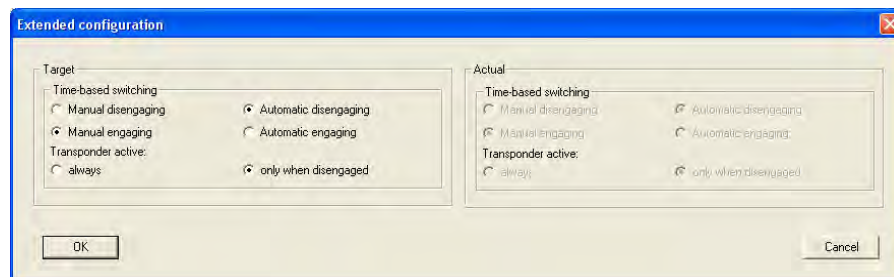

“Flip flop”

“Last change”

Public holiday list valid until  
“Last programming”

**Extended configuration**

**Software reset**

- The lock changes the status when an authorised transponder is activated
- Last not yet programmed change to settings for
  - Time zones
  - Public holiday lists
- Validity list of the used public holiday list
- Last programmed change to settings for
  - time zones
  - public holiday lists
- Target / actual settings for time-controlled conversion (only for appropriate products)
- For resetting the actual values in the software, please refer to **10.5 Procedure for replacing a defective lock**



# MANUAL LSM – USER

Page 86

## LOCK PROPERTIES – G2 CONFIGURATIONS / DATA

## EXPLANATION


- |                                     |   |
|-------------------------------------|---|
| “Lock”                              | → Serial number of lock   |
| “Door”                              | → Door to which lock is assigned  |
| “Target”                            | → Desired lock configuration  |
| “Actual”                            | → Configuration of programmed lock  |
| “Locking system ID”                 | → Internal locking system ID to distinguish the system                                  |
| “Lock ID”                           | → Internal number of lock   |
| “Pulse length”                      | → Duration of signal for activating the lock (max. 25 seconds)                          |
| “Access control”                    | → Option of logging access instances  |
| “Time zone control”                 | → Option of restricting the access times for transponders                               |
| “Log unauthorised access instances” | → Logging of unauthorised access instances, only in conjunction with “access control” → |
| “Gateway”                           | --> Not allowed with locking cylinders!   |
| “Flip flop”                         | → The lock changes the status when an authorised transponder is activated               |
| “No acoustic battery warnings”      | → When this function is activated, there are no acoustic warnings for the status of the |

- |                                 |   |
|---------------------------------|---|
| "Last change"                   | → battery in the components   |
|                                 | → Last not yet programmed change to settings for  |
|                                 | • Time zones  |
|                                 | • Public holiday lists  |
| Public holiday list valid until | → Validity list of the used public holiday list   |
| "Last programming"              | → Last programmed change to settings for  |
|                                 | • time zones  |
|                                 | • public holiday lists  |
| Software reset                  | → For resetting the actual values in the software, please refer to <u>10.5 Procedure for replacing a defective lock</u> ) |

# MANUAL LSM – USER

Page 88

## LOCK PROPERTIES – G1 STATUS

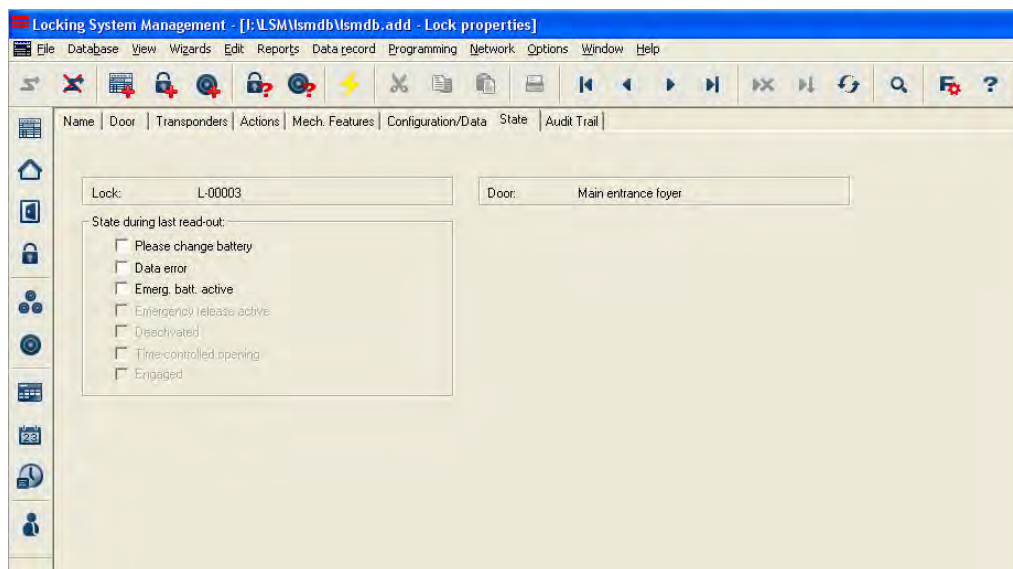

## EXPLANATION

“Lock”

“Door”

“Status”


- Serial number of lock
- Door to which lock is assigned
- The last read status of the lock is shown, and when the lock is read, the status is updated
  - Critical battery status
  - Data error
  - Emergency battery active
  - Emergency activation active
  - Deactivated
  - Time-controlled opening running
  - Coupled



# MANUAL LSM – USER

Page 89

## LOCK PROPERTIES – G2 STATUS

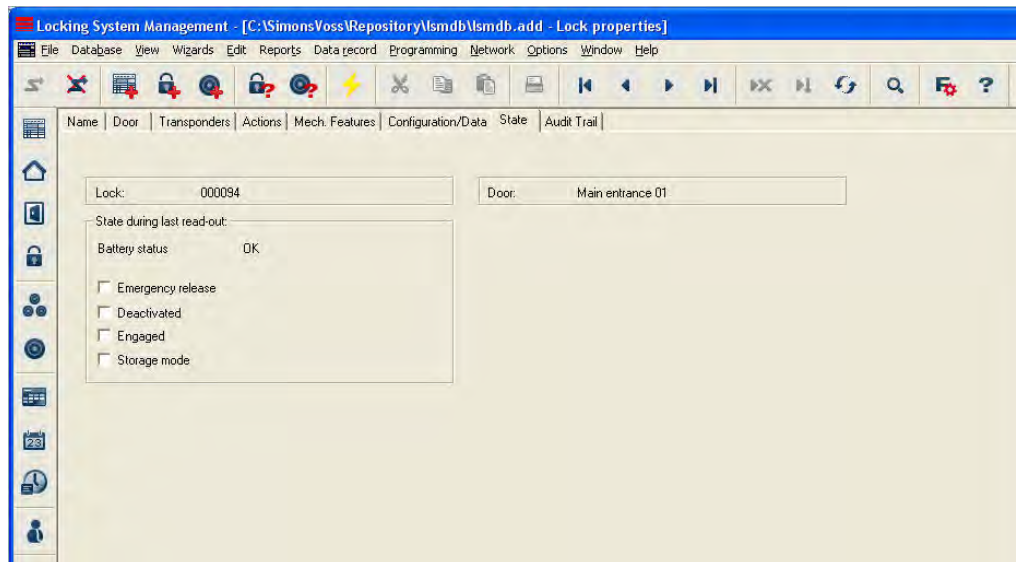

## EXPLANATION

“Lock”

“Door”


“Status”

- Serial number of lock
- Door to which lock is assigned
- The last read status of the lock is shown, and when the lock is read, the status is updated
  - Emergency activation
  - Deactivated
  - Coupled
  - Storage mode

# MANUAL LSM – USER

Page 90

## LOCK PROPERTIES – ACCESS LIST

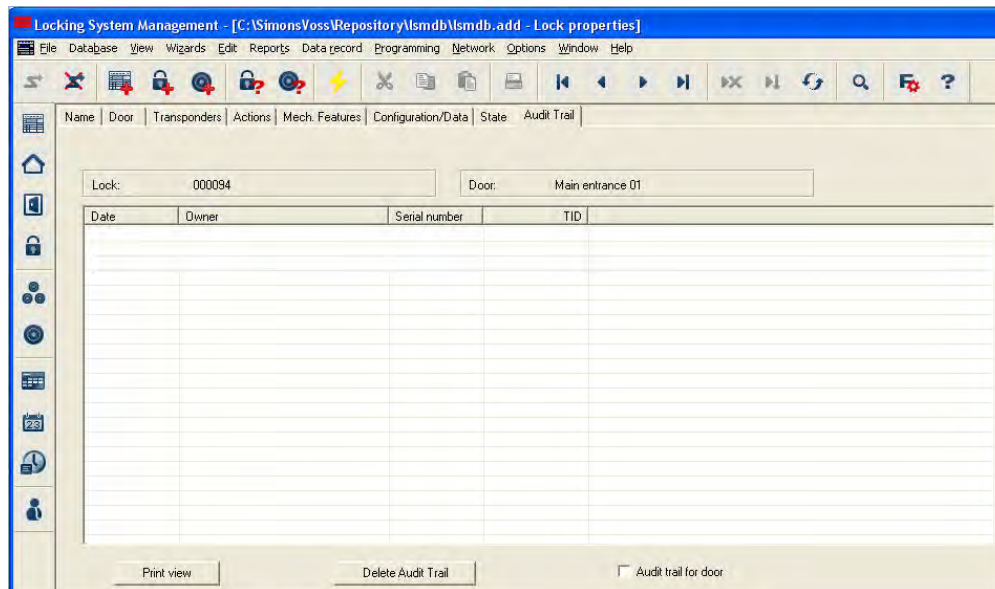

## EXPLANATION

“Lock”

“Door”

Table

Print view

“Delete access list”


“Access list for door”

- Serial number of lock
- Door to which lock is assigned
- Overview of all instances of access that have been read on the lock
- Converts table to print-friendly view
- All entries in the table are deleted
- When this option is selected all instances of access for the door are displayed, not just those for the selected lock. All instances of access for the locks installed on the door are therefore displayed

MANUAL LSM – USER

Page 91

## LOCK PROPERTIES – LOCK COMPONENTS

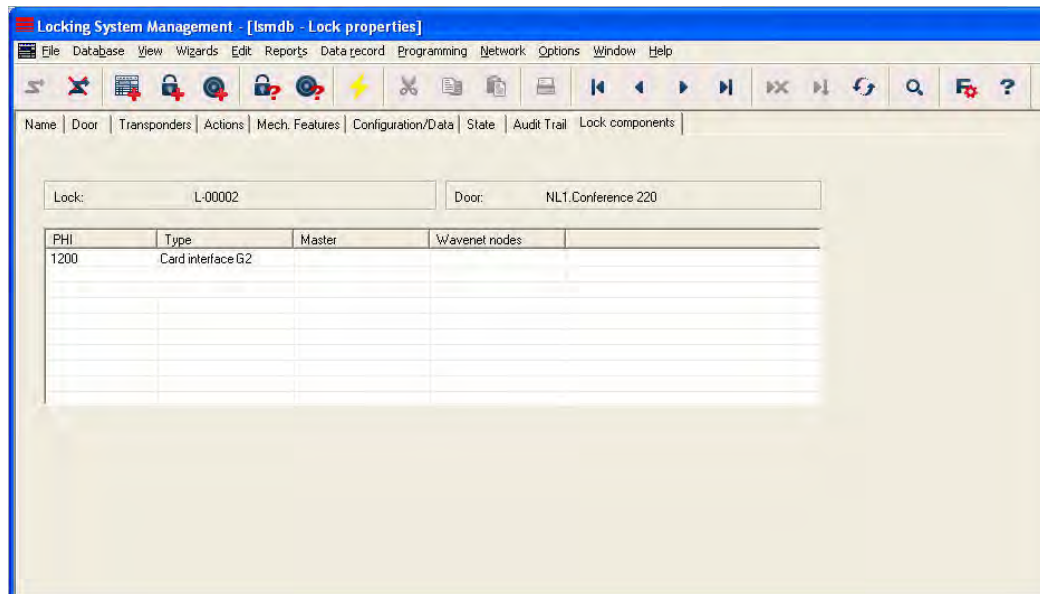

### EXPLANATION

“Lock”

“Door”

Table

“PHI”

“Type”






„Master“


## WaveNet node

- Serial number of lock
- Door to which lock is assigned
- Overview of all instances of access that have been read on the lock
- Public Hardware Identifier, distinguishing feature for hardware
- Explanation of the type
- This entry lists the relevant master components for remote components
- This entry lists the WaveNet address of the relevant node for networked components

## 1.17.3 CREATING A LOCK

### PROCEDURE

- Select icon 
- or
  -  Edit
  -  Lock
  - **New**
- or
  - Right-click on Door / Lock
  - Left-click on  New 
- or
  - **Ctrl+Shift+C**
  - **New**
- then
  - Enter details of door and area
  - **Apply**

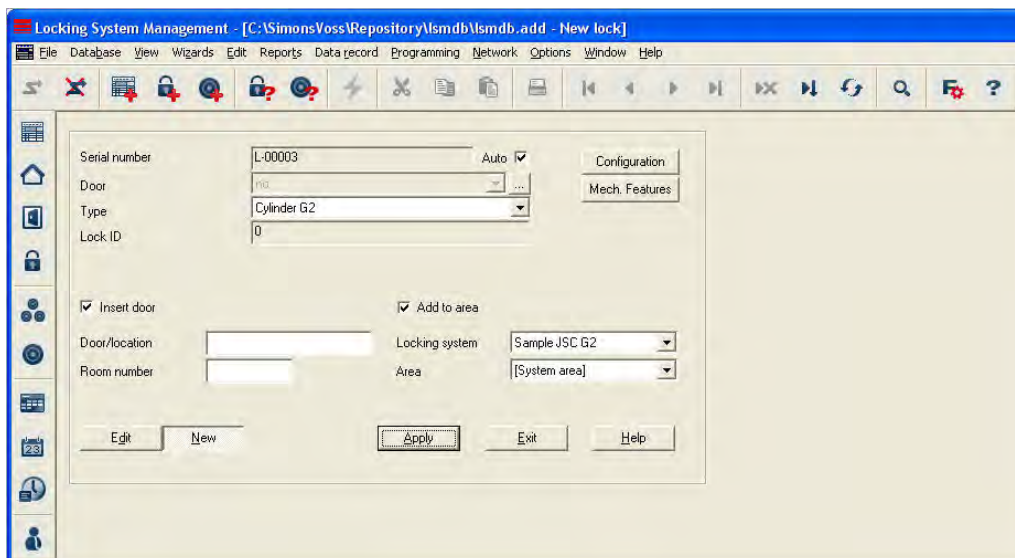

The screenshot shows the 'Locking System Management' software interface. The title bar reads 'Locking System Management - [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - New lock]'. The menu bar includes File, Database, View, Wizards, Edit, Reports, Data record, Programming, Network, Options, Window, and Help. The toolbar contains various icons for file operations and lock management. The main window displays a form for creating a new lock. The form includes fields for Serial number (L-00003), Door (no), Type (Cylinder G2), and Lock ID (0). There are checkboxes for 'Insert door' and 'Add to area', both of which are checked. Below these are fields for Door/location, Room number, Locking system (Sample JSC G2), and Area ([System area]). At the bottom of the form are buttons for Edit, New, Apply, Exit, and Help. The 'New' button is highlighted.

### EXPLANATION

“Serial number”

Determines the unique number in the system according to the preset designation, the product serial number is stored during programming.

“Auto”

→ When this option is selected, serial numbers are automatically numbered consecutively

“Door”

→ Option of selecting an existing door, the field is deactivated if “Insert door” is selected

# MANUAL LSM – USER

Page 93


“...”

“Type”

“Lock ID”


Configuration

- Links to the door properties (if already present)
- Selects the lock type
- Internal lock management number, use **Apply** to enter
- Configuration data for new lock

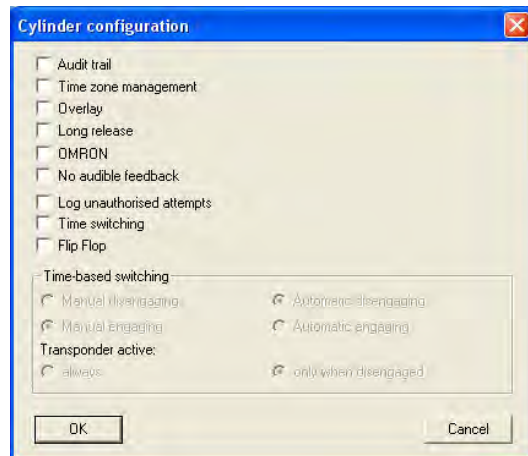

Fittings

- Selects the fittings

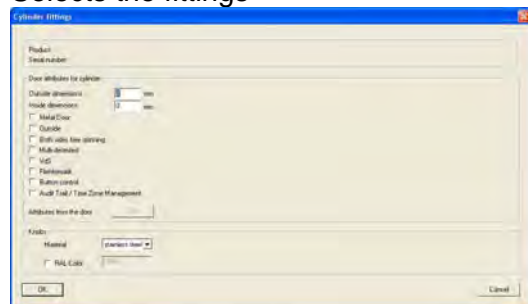

“Insert door”

- When this option is selected you can create a new door to which the lock will be assigned

“Door / Location”

“Room number”

“Add to area”

- Designation of door to be inserted
- Identifying number of room
- Area to which the new door and lock are assigned. If nothing is selected here, you can undertake the assignment at a later date using “Unassigned objects”

“Locking system”

“Area”

- Selects the locking system
- Assigns to an existing area

## 1.17.4 EDITING A LOCK

### PROCEDURE

#### ICON



#### EXPLANATION

SimonsVoss describes as “locks” all products that can be operated with a transponder. This includes SmartRelais, activation units and locking cylinders, for example.

### PROCEDURE

or

- Select icon
- Select area using arrow buttons

or

- ➡ Edit
- ➡ Lock properties
- Select lock using arrow buttons

or

- Select the lock you want to modify in the matrix
- Right-click on the door / lock
- ➡ Properties
- **Lock**
- Right-click on any lock in the matrix
- ➡ Search
- Select object
- Enter designation or part of designation you want to search for
- **Search**
- Highlight the data record you want in the result set
- Select properties in “Navigation to view”
- Click on **Execute** to go to the lock overview

or

- Right-click on the door / lock
- ➡ Properties
- ➡ Lock

then

- Modify data
- **Apply**

## 1.18. DOORS

### 1.18.1 GENERAL CORRECTIONS FOR DOORS







#### ICON



#### EXPLANATION

A door is the assigned installation site for one or more locks. It is possible to store additional parameters such as description of lock, floor and building.

#### PROCEDURE

- Select icon 
  - Select area using arrow buttons 
- or
-  Edit
  -  Door
  - Select door using arrow buttons 
- or
- Right-click on the door / lock
  -  Properties
  - Door
- or
- **Ctrl+Shift+D**

# MANUAL LSM – USER

Page 96

## EXPLANATION

“Door designation”

→ Name of door

“Location”

→ Location in which the building can be found (must be created first)

“Building”

→ Building in which door is located (must be created first)

“Floor”

→ Floor on which door is located (can be created by inputting text)

“Room number”

→ Room number of door

“Description”

→ Free field for describing the door

“Locks”

→ Locks assigned to the door

Assignment to areas

Manage

→ Option of removing a door or assigning it to a particular area

Programming device

“Type”

→ Selection of programming device type (config device, LockNode, WaveNet node)

“Device”

→ Selection of a particular device, mainly required for LON and WaveNet

“Unassigned devices”

→ When this option is selected, otherwise assigned LON and WaveNet nodes are no longer displayed

“Door attributes for mortise lock”

→ Additional data is shown for the mortise lock










“Door attributes for locking cylinder”

→ Additional data can be specified for the locking cylinder



## 1.18.2 EDIT DOOR

### PROCEDURE

- Select icon 
- Select area using arrow buttons 
- or
-  Edit
-  Door
- Select door using arrow buttons 
- or
- Select the door you want to modify in the matrix
- Right-click on Door
-  Properties
- Door
- or
- Right-click on any door in the matrix
-  Search
- Select object
- Enter designation or part of designation you want to search for
- Search
- Highlight the data record you want in the result set
- Select properties in “Navigation to view”
- Click on Execute to go to the door overview
- or
- Right-click on the door
-  Properties
-  Door
- then
- Modify data
- Apply

## 1.19. LOCATION

### 1.19.1 GENERAL INFORMATION ABOUT LOCATIONS

#### EXPLANATION

Locations are created to allow better assignment of the various buildings. This is a simple element that makes things easier to follow visually and provides additional subdivision within the locking system.

#### PROCEDURE

- ↻ Edit
- ↻ Location

The screenshot shows the 'Locking System Management' application window. The title bar reads 'Locking System Management - [C:\SimonsVoss\Repository\lsmdb\lsmdb.add - Location]'. The menu bar includes File, Database, View, Wizards, Edit, Reports, Data record, Programming, Network, Options, Window, and Help. The toolbar contains various icons for file operations, editing, and navigation. The main window is divided into two panes. The left pane contains form fields for 'Name' (Branch Manchester), 'Abbreviation' (MAN), 'Local time zone' (no), and 'Description' (empty text area). The right pane, titled 'Building administration', contains a table with two columns: 'Abbreviation' and 'Name'. The table has one row with 'NL1' in both columns. Below the table, it says 'Selected: 0'. At the bottom of the right pane, there is a dropdown menu showing 'LON' and a button labeled 'Execute'. At the bottom of the main window, there are buttons for 'Edit', 'New', 'Apply', 'Exit', and 'Help'.

Abbreviation	Name
NL1	NL1


#### EXPLANATION

- |                         |   |
|-------------------------|---|
| "Name"                  | → Designation for the location  |
| "Abbreviation"          | → Abbreviation for the location   |
| "Local time zone"       | → Assigned time zone, acts as a time base for the components of the locking systems |
| "Description"           | → Free field for describing the location  |
| Building administration | → Overview of the buildings found in this location                                  |
| "Abbreviation"          | → Abbreviation of the building  |
| "Name"                  | → Name of the building  |
| Execute                 | → The selected building can be assigned to another location                         |

## 1.19.2 CREATE LOCATION

- ↻ Edit
- ↻ Location
- New
- Enter data
- Apply

## 1.19.3 EDIT LOCATION

- ↻ Edit
- ↻ Location
- Select location using arrow buttons 
- Modify data
- Apply

## NOTE

When exported to the pocket PC and in the matrix, building structures are shown using the additional columns (see 1.5.2 Additional columns in label bars).

## 1.20. 5.9 BUILDING


### 1.20.1 5.9.1 GENERAL INFORMATION ABOUT BUILDINGS

#### EXPLANATION

Buildings are created in order to better spatially map the property and the doors located in it. This is a simple element that makes things easier to follow visually and provides additional subdivision within the locking system.

#### PROCEDURE

- ↻ Edit
- ↻ Building

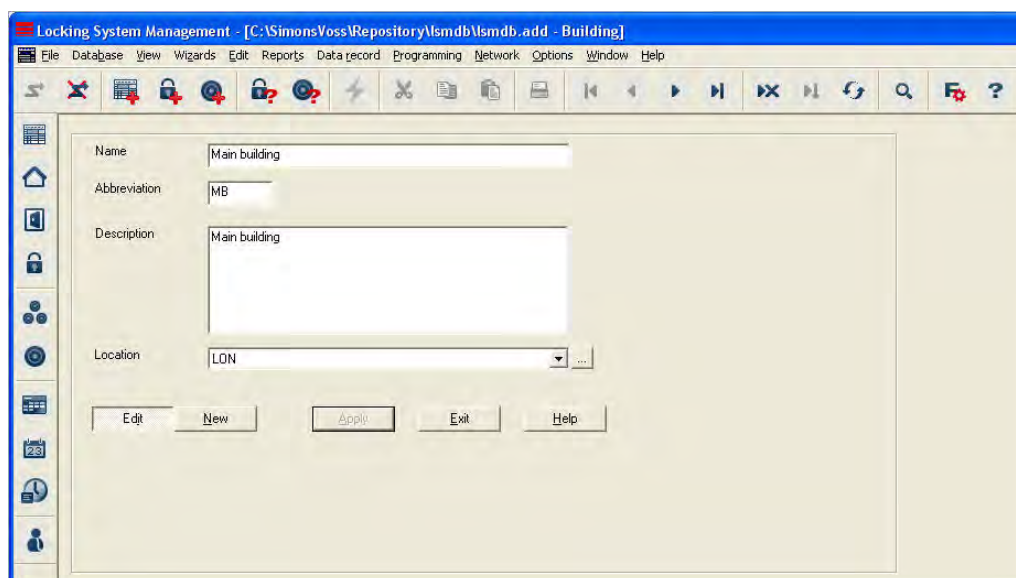

#### EXPLANATION

- |                |  |
|----------------|--|
| "Name"         | → Designation of the building                  |
| "Abbreviation" | → Abbreviation for the building                |
| "Description"  | → Free field for describing the building       |
| "Location"     | → Assigned location of the building            |
| „...“          | → Displays the characteristics of the location |

## 1.20.2 5.9.2 CREATE BUILDING

- ➡ Edit
- ➡ Building
- New
- Enter data
- Apply

## 1.20.3 5.9.3 EDIT BUILDING

- ➡ Edit
- ➡ Building
- Modify data
- Apply


### NOTE

When exported to the pocket PC and in the matrix, building structures are shown using the additional columns (see [1.5.2 Additional columns in label bars](#)).

## 10.0 WIZARDS

The wizards available in the system guide the user through the process of creating doors with locks and persons with transponders. All the information which is relevant to the system is queried as you work through the various input screens so that the components can be created properly.

This assists inexperienced users as they become familiar with the system in order to learn about the information that is relevant to the system. Professionals too will value this as a tool which allows them to create new components quickly and without forgetting important information even when under pressure.

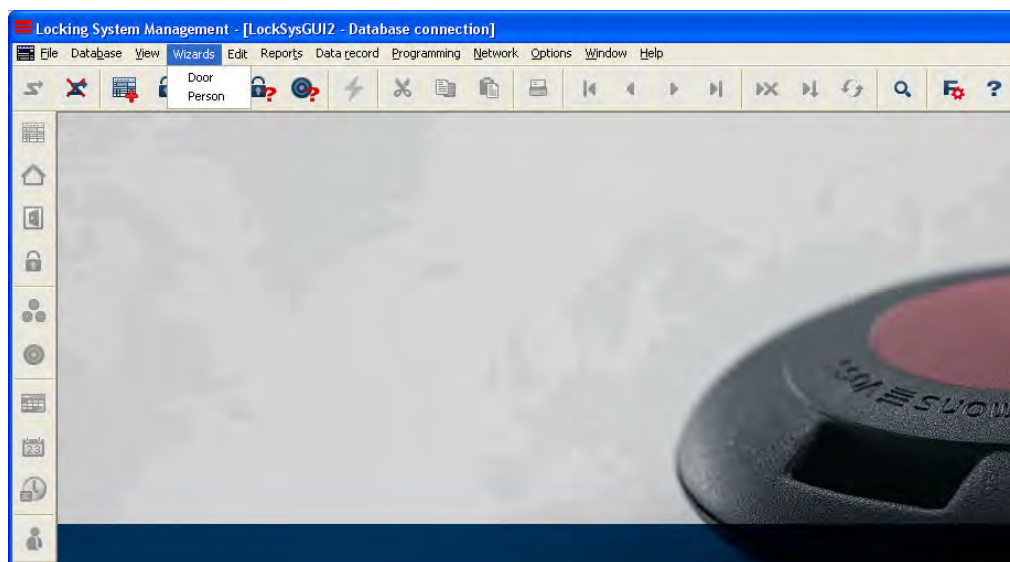

### EXPLANATION

A door is the assigned installation site for one or more locks. It is possible to store additional parameters such as description of lock, floor and building. The locks are stored on the doors. SimonsVoss describes as “locks” all products that can be operated with a transponder. This includes SmartRelais, activation units and locking cylinders, for example. It is also possible to create the associated lock when using the door wizard.

## 1.21. DOOR WIZARD

### PROCEDURE

- ➞ Wizards
- ➞ Door

### STEP 1

Create door - step 1 of 4

Please enter relevant data for the new door in the corresponding boxes:

Door designation:	Main entrance foyer		
Location:	LON	Floor:	gf
Building:	MB	Room number:	foyer
Description:	Entrance to foyer on ground floor		
Lock type:	Cylinder G1		
Serial number:	L-00003	Auto:	<input checked="" type="checkbox"/>

Back Continue > Finish Cancel Help

### EXPLANATION

“Door designation”

➔ Name of door

“Location”

➔ Location in which the building can be found (must be created first)

“Building”

➔ Building in which door is located (must be created first)

“Floor”

➔ Floor on which door is located (can be created by inputting text)

“Room number”

➔ Room number of door

“Description”

➔ Free field for describing the door

“Lock type”

➔ Type of locks

“Serial number”

➔ Determines the unique number in the system according to the preset designation, the product serial number is stored during programming.

- Continue

## STEP 2

Create door - step 2 of 5 - assignments

Please assign the door to the corresponding areas and change the assignment to the programming device if necessary

Areas

Level	Locking system	Area
Standard	Sample JSC G1	Main entrance
Green	no	no
Blue	no	no
Red	no	no

Programming device

Type: Config Device

Device: Default

☒ Non-allocated devices

< Back Continue > Finish Cancel Help

## EXPLANATION

Areas  
“Level”

- Determines the level to which the new door should be assigned:
- standard (black)
  - green (superordinate locking level)
  - blue (superordinate locking level)
  - red (superordinate locking level)

“Locking system”

- Selection of locking system to which a door is assigned

“Area”

- Selection of an area in the selected locking system

Programming device  
“Type”

- Determines the programming for the components in the door:
- config device
  - LockNode
  - WaveNet node

“Device”

- Selection of the device which is to communicate with the components

“Unassigned devices”

- If this option is ticked, only the devices which are currently still not assigned to a door will be shown.

- Continue



## STEP 3

Create door - step 3 of 5 - door attributes

Please enter door fittings.

Outside dimensions 35 mm

Inside dimensions 35 mm

☐ Met. door

☒ Outside

☒ 2-side lock

< Back Continue > Finish Cancel Help

## EXPLANATION

Fittings of door

“Outer dimensions”

“Inner dimensions”

“Fire-retardant door”


“Outside”

“Freely rotating”

- Outer dimensions of cylinder
- Inner dimensions of cylinder
- Classification of door as fire-retardant door, the production hall cylinder with improved range should be used for these doors
- If the door is located outside, a WP cylinder or additional measures are required
- A cylinder which is freely rotating on both sides is required

- Continue

## STEP 4 G1

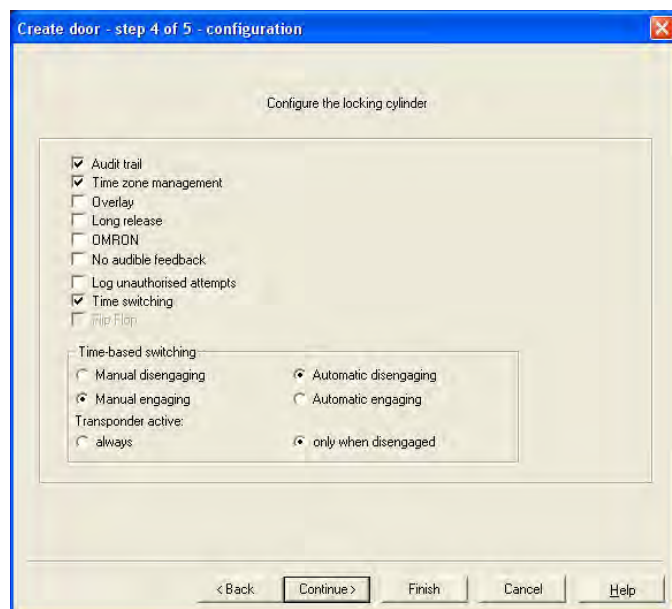

## EXPLANATION

Locking cylinder configuration

“Access control”

“Time zone control”

“Overlay”

“Long triggering”

“OMRON”

“No acoustic programming acknowledgement”

“Log unauthorised access instances”

“Time changeover”

“Flip-flop”

Time-controlled changeover

“Manual disengagement”


“Automatic disengagement”

“Manual engagement”

- Activate logging of access instances
- Control the physical access times for transponders
- Store transponder IDs in the locks to respond to losing transponders (always applies to an entire locking system)
- The lock is engaged for longer
- Activation of OMRON mode
- There is no acoustic programming acknowledgement by the cylinder during programming
- Unauthorised physical access instances are also stored
- Activates the controlled times for engagement and disengagement
- The lock changes its status each time a transponder is booked
- At the end of the time changeover the lock waits for an authorised transponder before it disengages
- The lock disengages automatically once the time changeover has ended
- At the start of the time changeover the lock waits for an authorised transponder before it

- |                        |  |
|------------------------|--|
| “Automatic engagement” | → engages  |
| “Transponder active”   | → The lock engages automatically once the time changeover has started  |
| “Always”               | → The transponder can always change the status of the lock   |
| “Only when disengaged” | → The transponder can only change the status of the lock when it is not permanently engaged (normal physical access) |
- [Continue](#)

## STEP 4 G2

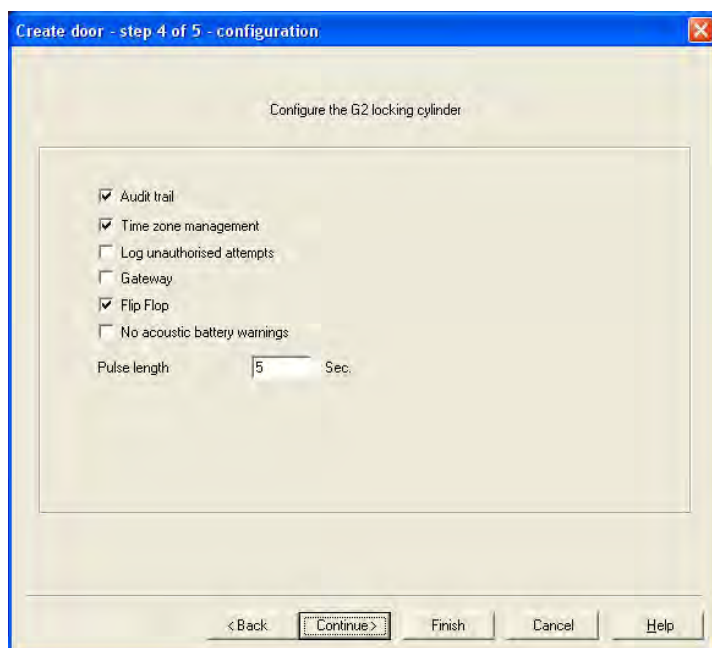

## EXPLANATION

Locking cylinder configuration

“Access control”

“Time zone control”

“Log unauthorised access instances”

“Gateway”

“Flip-flop”

“No acoustic battery alerts”

“Pulse length”


- Activate logging of access instances
- Control the physical access times for transponders
- Unauthorised physical access instances are also stored
- Not allowed with locking cylinders!

transponder

- The lock changes its status each time a transponder is booked
- A possible battery alert is not indicated acoustically on the cylinder, the battery status can only be viewed during programming
- Duration of the engagement procedure

- Continue

## STEP 5

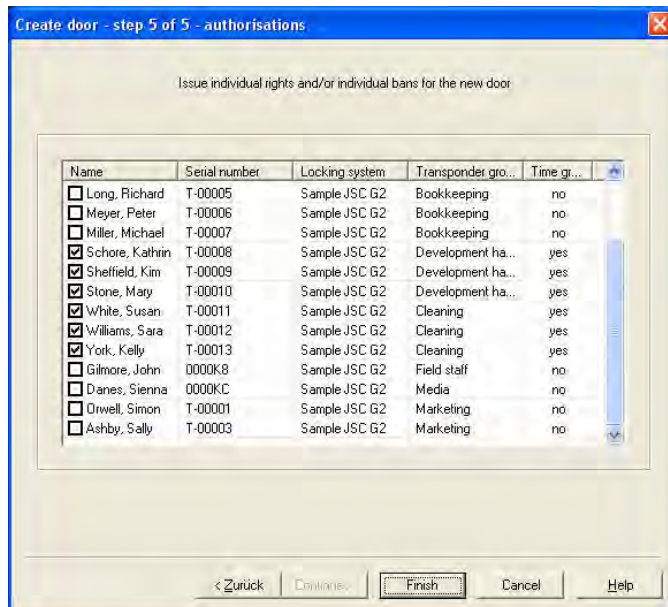

## EXPLANATION

Issuing authorisations  
"Name"

→ Displays the transponder owner, changing the option allows you to adjust the authorisations to a new door

"Serial number"

→ Serial number of the transponder assigned to the person

"Locking system"

→ Assigned locking system

"Transponder group"


→ Transponder group to which transponder is assigned

"Time group"

→ Time group to which transponder is assigned

- **Finish**

## STEP 6 CLOSING

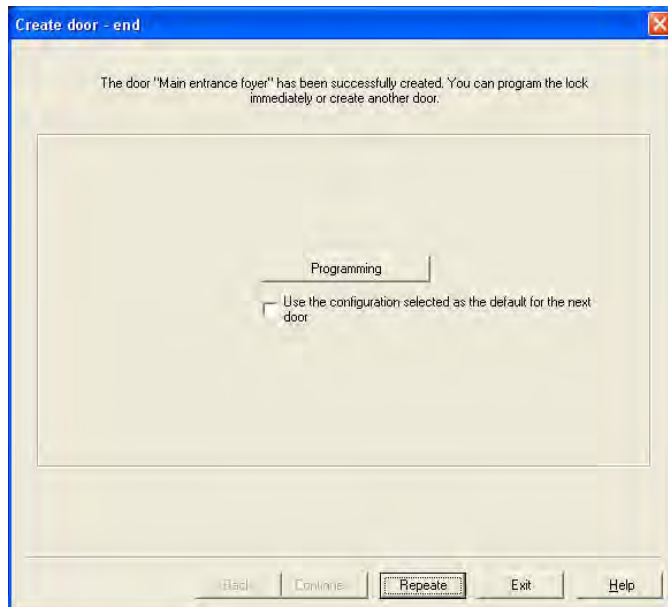

## EXPLANATION

Closing the wizard  
**Program**

“Use the configuration selected  
for the next door”

- The newly created lock can be directly programmed from the wizard
- Once the wizard is restarted, the universally valid values are adopted

or

- **Repeat**
- **Close**

## 1.22. 6.2 PERSON WIZARD

### PROCEDURE

- ➞ Wizards
- ➞ Person

### STEP 1

Create person - step 1 of 3

Please enter relevant data for the new person in the corresponding boxes:

First name	Will
Last name	Sing
Title	Pr. Eng.
Personnel number	P-00017 Auto <input checked="" type="checkbox"/>
Department	Development
Address	Malet Street 17, W1A 1AE London
Telefon	+44 (0)20 12345678
Transponder type	Transponder G1
Serial number	T-00014 Auto <input checked="" type="checkbox"/>

Continue Continue > Finish Cancel Help

### EXPLANATION

- |                    |   |
|--------------------|---|
| "First name"       | ➔ First name of new person  |
| "Surname"          | ➔ Surname of new person   |
| "Title"            | ➔ Title of new person   |
| "Employee number"  | ➔ Employee number of new person   |
| "Auto"             | ➔ If this option is selected, the employee number is issued by the system |
| "Department"       | ➔ Department of new person  |
| "Address"          | ➔ Address of new person   |
| "Tel"              | ➔ Phone number of new person  |
| "Transponder type" | ➔ Type of transponder to be created                                       |
| "Serial number"    | ➔ Serial number of new transponder  |
| "Auto"             | ➔ If this option is selected, the serial number is issued by the system   |

- Continue

## STEP 2

Create person - step 2 of 3 : additional information

Please enter additional information about the person

email	info@simons-voss.de
Location/Building	London, Head office
Entry date:	01.01.2010 <input type="checkbox"/> not relevant
Quitting date:	31.12.2010 <input checked="" type="checkbox"/> not relevant
Date of birth	06.07.1966 <input type="checkbox"/> not relevant
Cost Centre	4711
Note	Development hardware

< Back **Continue** Finish Cancel Help

## EXPLANATION

“E-mail”

→ E-mail address of new person

“Site/Building”

→ Workplace of new person

“Not relevant”

→ If this option is deselected, a date can be stored by selecting a calendar

“Employed from:”

→ Starting date of new person

“Not relevant”

→ If this option is deselected, a date can be stored by selecting a calendar

“Employed until:”

→ Leaving date of new person

“Not relevant”

→ If this option is deselected, a date can be stored by selecting a calendar

“Date of birth”

→ Date of birth of new person

“Cost centre”

→ Cost centre of new person

“Comments”

→ Additional information about new person

- **Continue**

For information on G2 components, see page 15.



## STEP 3 G1

## EXPLANATION

Transponder groups  
“Locking system”

- Selection of locking system, up to three G1 data records (locking systems) can be programmed on a G1 transponder. These locking systems must all be located in the open locking plan. If there is a time limit, this number is reduced to one data record.

“Transponder group”  
“Manual assignment of G1 TIDs (if needed)”

- Selection of transponder group
- The system manages the TID (as standard), otherwise this can also be done manually

Period of validity  
Activation date

- A start date is entered here if there is a time limit

“Immediately”

- The transponder is valid immediately after programming

“Date”

- Enter the date if there is a time limit

“Time”

- Enter the time if there is a time limit

Expiry date

- An end date is entered here if there is a time limit

“No expiry date”

- The transponder is valid for an unlimited period of time

“Date”

- Enter the date if there is a time limit


“Time”

- Enter the time if there is a time limit

- **Continue**

## STEP 4 G1

This step only appears if “Manual assignment of G1 TIDs (if needed)” was highlighted in step 3.

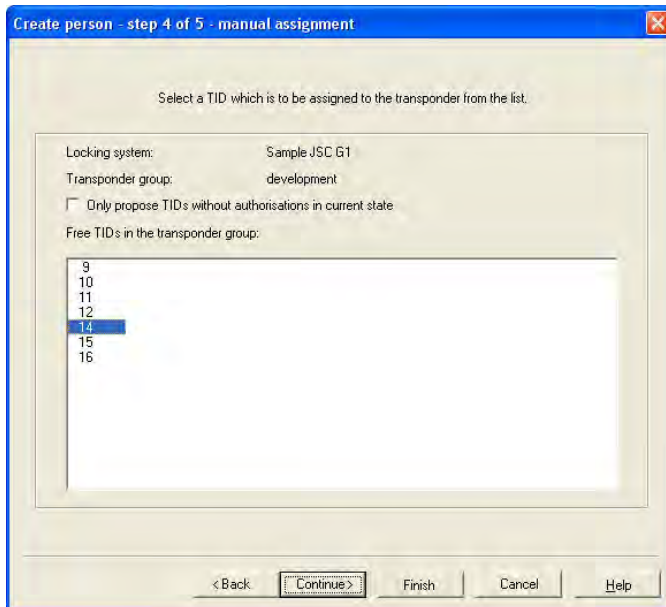

## EXPLANATION

Locking system  
Transponder group  
“Only propose TIDs without  
authorisation in current  
condition”  
Free TIDs in the transponder  
group

→ Selected G1 locking system  
Selected transponder group  
Only TIDs which have not yet been  
programmed into locks with authorisations  
are shown  
Displays the free TIDs from the reserve in  
the transponder group

- Continue

## STEP 5 G1

Name	Area	Locking system	Group
<input checked="" type="checkbox"/> Main entrance...	Main entrance	Sample JSC G1	yes

## EXPLANATION

Issuing authorisations  
“Name”

→ Displays the door, changing the option allows you to adjust the authorisations of the new transponder

“Area”

→ Area in which the displayed door is located  
Assigned locking system


“Locking system”

“Group”

Displays whether the transponder already has an authorisation from its group assignment

- **Continue**

## STEP CLOSING G1

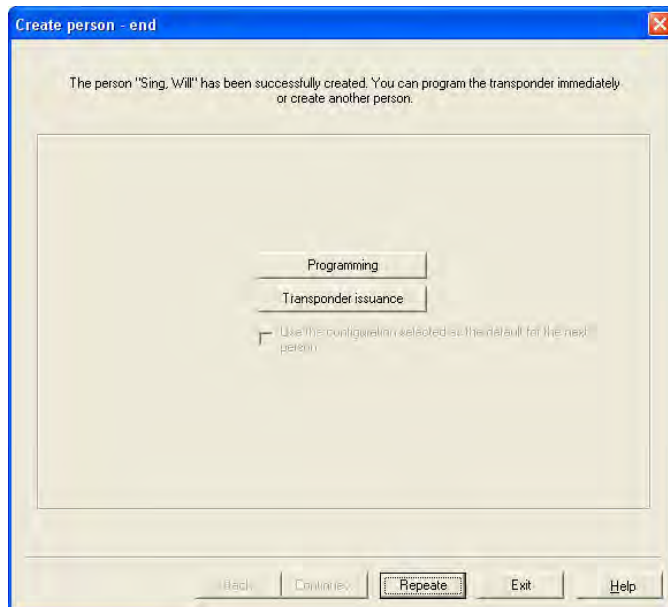

## EXPLANATION

Closing the wizard

**Program**

- The newly created transponder can be directly programmed from the wizard  
The form for issuing transponders can be printed out directly (only if LSM Report module is available)

**Transponder issue**

“Use the configuration selected as the default for the next person”

- Once the wizard is restarted, the selection made previously is used again

- **Continue**

## STEP 3 G2

Create person - step 3 of 5 - G2 assignments

Please enter assignments to transponder groups

Transponder groups:

G2/G2+G1

	Locking system	Transponder group
<input type="checkbox"/> G1	Sample JSC G2	Development hardware
<input checked="" type="checkbox"/> G1	no	no
<input checked="" type="checkbox"/> G1	no	no
<input checked="" type="checkbox"/> G1	no	no

☐ manual assignment of G1 TIDs (if needed)

G1

	Locking system	Transponder group
	Sample JSC G1	Development
	no	no
	no	no

< Back   Continue >   Finish   Cancel   Help

## EXPLANATION

Transponder groups

G2/G2+G1

“Locking system”

→ Selection of locking system, up to four G2 data records (locking systems) can be programmed on a G2 transponder. These locking systems must however all be located in the open locking plan.

“Transponder group”

“G1”

→ Selection of transponder group

→ In a mixed locking system (G2+G1), TIDs from the lower 8000 block can also be used in compatibility with G1 locks by ticking the option

“Manual assignment of G1 TIDs (if needed)”

→ The system manages the TID used for G1 otherwise issuing can take place manually

G1

“Locking system”

→ Selection of locking system, up to three G1 data records (locking systems) can be programmed on a G1 transponder. These locking systems must however all be located in the open locking plan.

“Transponder group”

→ Selection of transponder group

- Continue

## STEP 4 G2

Create person - step 4 of 6 - G2 configuration

Please enter configuration, activation and expiry dates for each locking system

Configuration

Locking system: Sample JSC G2

☐ Long opening  
☐ No acoustic opening signal

Dynamic time window

☒ Do not change time window on gateway  
☐ until a particular time of (next) day  
☐ Number of hours since last complete hour of booking

Validation date

☐ from now  
01.01.10  
Time: 06

Expiry date

☒ without expiry date

< Back Continue > Finish Cancel Help

## EXPLANATION

Configuration

Locking system

- Selected locking system. If several G2 locking systems were selected in step 3, this step is undertaken for as many times as there are locking systems selected.

“Long opening”

- The lock is triggered for longer

“No acoustic opening signal”

- The lock doesn't emit an acoustic signal when triggered

Dynamic time window

- The validity of the transponder on the gateway can be changed in G2 systems and virtual networks

“Do not change time window on gateway”

- The validity of the transponder is determined by a date

Dynamic time window

☒ Do not change time window on gateway  
☐ until a particular time of (next) day  
☐ Number of hours since last complete hour of booking

Validation date

☐ from now  
01.01.10  
Time: 06

Expiry date

☒ without expiry date

Activation date

- A start date is entered here if there is a time limit


“Immediately”

- The transponder is valid immediately after programming


“Date”  
“Time”  
Expiry date

“No expiry date”

“Date”  
“Time”  
“Until a particular time of (next) day”

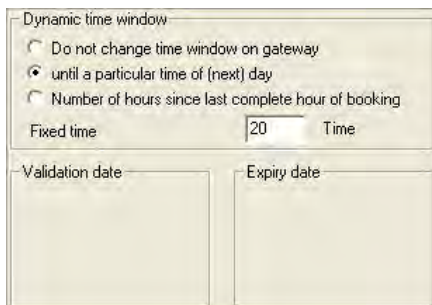

“Number of hours since last complete hour of booking”

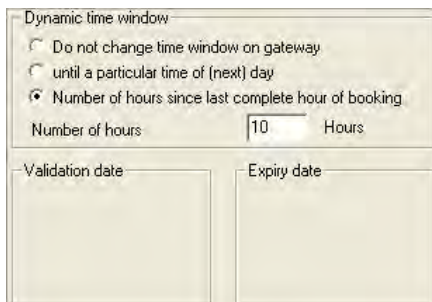


- Enter the date if there is a time limit
- Enter the time if there is a time limit
- An end date is entered here if there is a time limit
- The transponder is valid for an unlimited period of time
- Enter the date if there is a time limit
- Enter the time if there is a time limit
- The validity of the transponder is extended to a certain time in the future on the gateway. If the set time has already passed on the booking day, the transponder is valid until the same time on the next day

- The validity of the transponder is extended by a certain number of hours (max. 24 hours) on the gateway

- **Continue**

## STEP 5 G2

This step only appears if “Manual assignment of G1 TIDs (if needed)” was ticked in step 3.

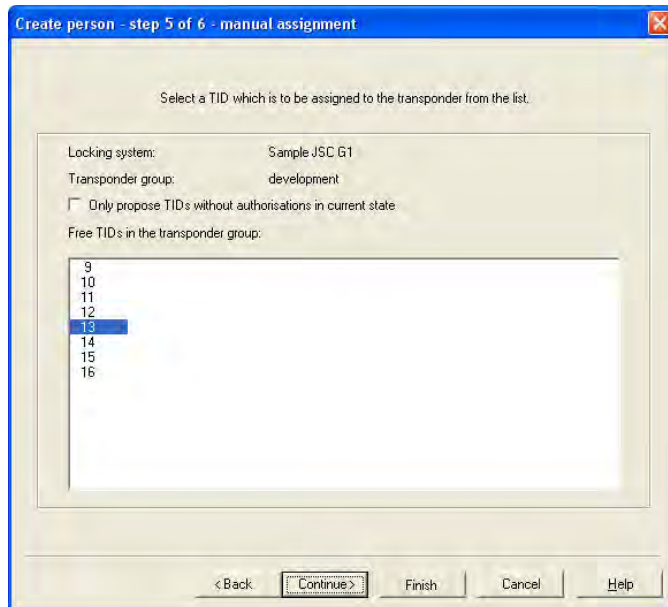

## EXPLANATION


Locking system  
Transponder group  
“Only propose TIDs without  
authorisation in current  
condition”  
Free TIDs in the transponder  
group



Selected G1 locking system  
Selected transponder group  
Only TIDs which have not yet been  
programmed into locks with authorisations  
are shown  
Displays the free TIDs from the reserve in  
the transponder group



## STEP 6 G2

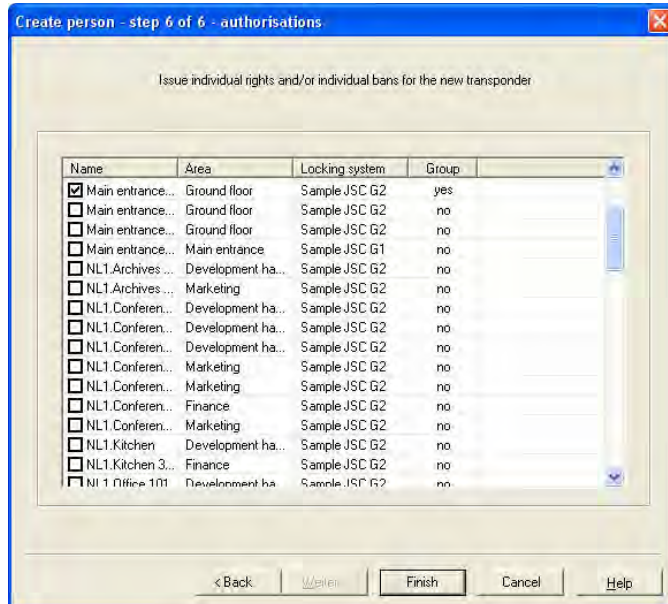

## EXPLANATION

Issuing authorisations

“Name”

→ Displays the door, changing the option allows you to adjust the authorisations of the new transponder

“Area”


→ Area in which the displayed door is located  
Assigned locking system

“Locking system”

“Group”

Displays whether the transponder already has an authorisation from its group assignment

## STEP CLOSING G2

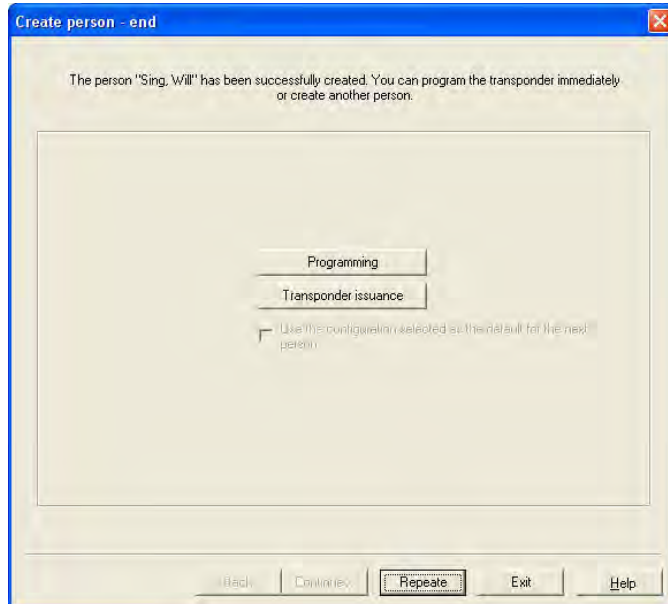

## EXPLANATION

Closing the wizard

**Program**

- The newly created transponder can be directly programmed from the wizard  
The form for issuing transponders can be printed out directly (only if LSM Report module is available)

**Transponder issue**

“Use the configuration selected as the default for the next person”

- Once the wizard is restarted, the selection made previously is used again

- **Continue**

## 11.0 ALERTS


### 1.23. GENERAL INFORMATION ABOUT ALERTS

### EXPLANATION

The alert function is a useful aid to everyday working with LSM. You can tell the system to alert you to particular situations (e.g. when a transponder is due to be returned) or events (lock battery alert). Alerts are shown in the alert monitor when you start up LSM.

## PROCEDURE

- ➡ Edit
- ➡ Alerts

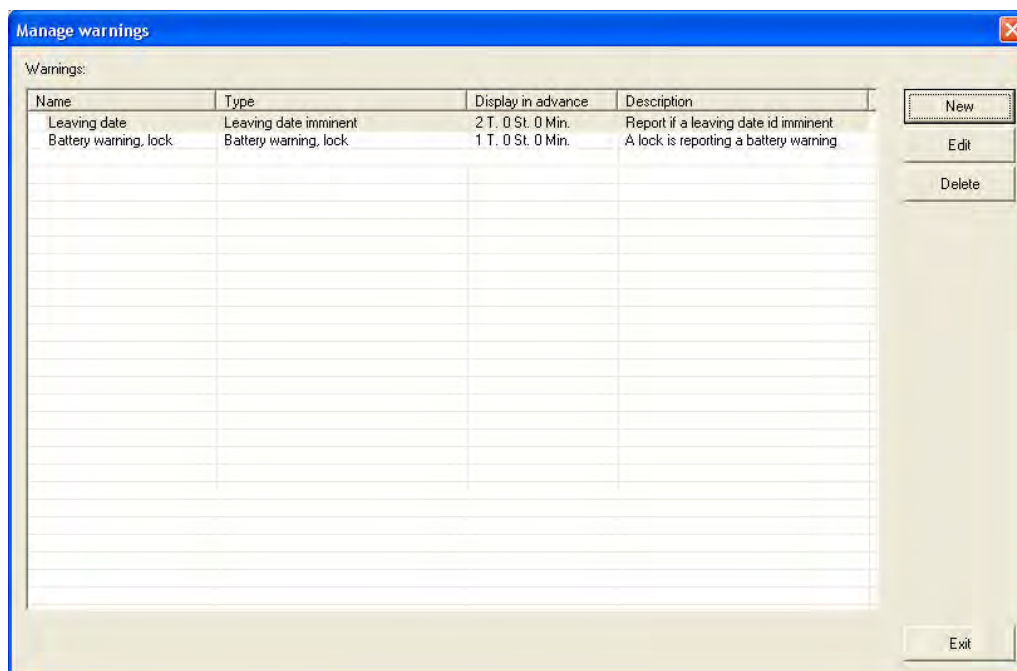

### EXPLANATION

Table

New

Edit

Delete

- Overview of alerts in place
- Create a new alert
- Once the alert has been selected, the settings can be edited
- Once the alert has been selected, it can be deleted

## 1.24. CREATE ALERTS

### PROCEDURE

- ➡ Edit
- ➡ Alerts
- **New**

The screenshot shows the 'New warning' dialog box. The 'Name' field is set to 'Leaving date'. The 'Type' dropdown is set to 'Leaving date imminent'. The 'Attributes' field contains the text 'An employee's leaving date is imminent'. The 'Display in advance' field is set to '24' hours. The 'Description' field contains the text 'Report if a leaving date is imminent'. The 'Block transponder on day of return' checkbox is checked. The 'Activated' checkbox is checked. The 'People' list includes: Ashby, Sally; Brown, Charles; Cook, Steve; Danes, Sienna; Gilmore, John; King, Wolfgang; Long, Richard; Meyer, Peter; Miller, Michael; Orwell, Simon. The 'Manage' button is next to the list. The 'OK' and 'Cancel' buttons are at the bottom.

### EXPLANATION

“Name”

“Type”

“Properties”

“Advance”

“Description”

“Block transponder on due return date”

“Activated”

**Manage**

Table

- ➔ Name of alert
- ➔ Type of alert, e.g. lock battery alert
- ➔ Results from the type of alert
- ➔ Time window between issuing of alert and occurrence of actual event
- ➔ Free field for describing the alert
- ➔ On the due return day, authorisations are withdrawn from the transponders in the locking plan -> programming requirement
- ➔ If selected, the alert is applied
- ➔ Select objects to be monitored
- ➔ Displays the selected components

## POSSIBLE ALERTS

- Leaving date reached
- Lock battery alert
- Transponder battery alert
- Export to handheld PDA
- Scheduled battery change
- Transponder due to be returned
- Transponder expiry date

### 1.25. EDIT ALERTS

#### PROCEDURE

- ➡ Edit
- ➡ Alerts
- Select alert
- **Edit**

### 1.26. DELETE ALERTS

#### PROCEDURE

- ➡ Edit
- ➡ Alerts
- Select alert
- **Delete**


## 1.27. ALERT MONITOR

### EXPLANATION

The alert monitor displays alerts that have been set up and activated. The alert monitor starts up automatically after you log on and shows all the accumulated alerts. By selecting the status display you can also view previously accepted or expired alerts.

### PROCEDURE

- ➡ Edit
- ➡ Alert monitor

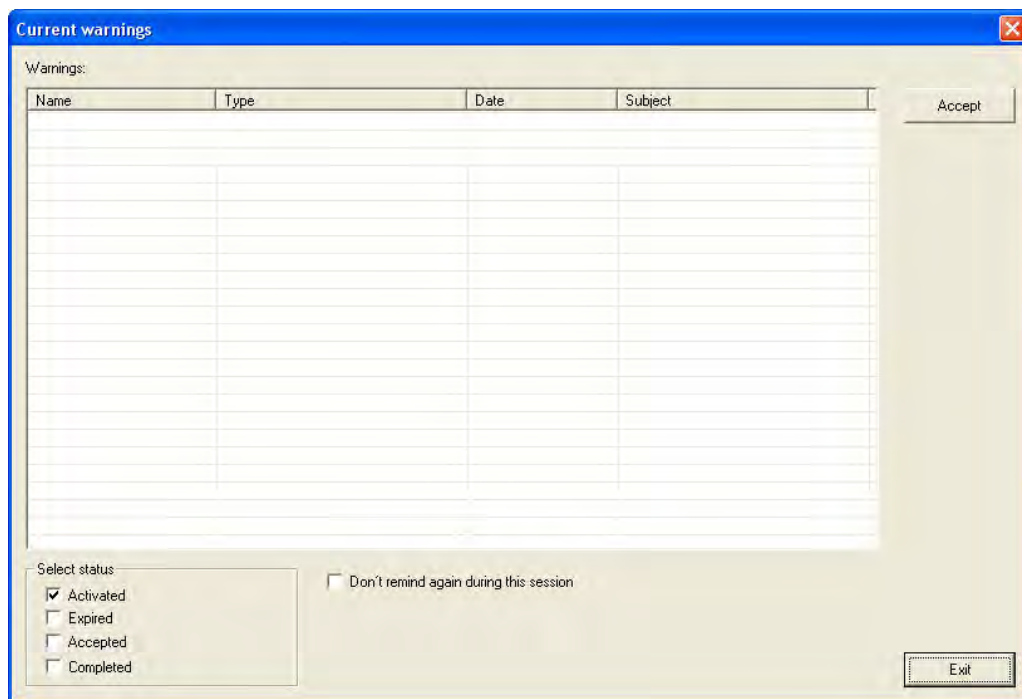

### EXPLANATION

Table

Accept

"Activated"

"Expired"

"Accepted"

"Processed"


"Don't remember during current session"

- ➔ Overview of accumulated alerts
- ➔ You can accept and therefore hide individual alerts
- ➔ Only current alerts are displayed
- ➔ Expired alerts are those for which the set time has already elapsed
- ➔ Previously accepted alerts are displayed
- ➔ Processed alerts are those which have been dealt with by performing the appropriate task (e.g. "Block transponder" has been implemented)
- ➔ If selected, the alert monitor will not start up. Otherwise the alert monitor will continue to

start up at regular intervals

**NOTE**

In addition to the alert monitor, a message appears in the bottom right-hand corner of the screen.



## 12.0 REPORTS

### 1.28. GENERAL INFORMATION ABOUT REPORTS

#### EXPLANATION

You have the option of generating reports in order to present locking system data analytically or to evaluate it. This information can be printed out or presented in a variety of different formats.

### 1.29. BASIC SETTINGS FOR REPORTS

- ➞ Options
- ➞ Reports

The screenshot shows the 'Reports' dialog box with the following details:

- Address:**
  - Company: SimonsVoss Technologies AG
  - Street: Feringastr. 4
  - Postal code: 85774
  - City: Unterföhring
  - Tel: +49 (89) 99228 - 0
  - Fax: +49 (89) 99228 - 222
  - E-Mail: marketing@simons-voss.de
- Logos:**
  - Header: C:\Programme\SimonsVoss\LockSysMgr\_Basic\_3\_0\Reports\SV\_lo...
  - Footer: C:\Programme\SimonsVoss\LockSysMgr\_Basic\_3\_0\Reports\SV\_log...
- User defined reports:**
  - Select directory... (button)
  - Reset to default (button)
- Transponder issuance:**
  - Extra text: C:\Programme\SimonsVoss\LockSys.txt
  - User-defined report: no (dropdown)
- Buttons:** OK, Update database reports, Cancel

In this view, all the basic settings can be activated. These then apply for the registered user for all reports. Users can therefore make their own settings (name, phone number, ...). It is possible to create and add additional user-defined reports. This is an additional service from SimonsVoss for which a charge applies.


### 1.30. SELECT REPORT

#### PROCEDURE

- ➞ Reports
- ➞ Select report
- Select report
- **Display**



## 8.1.1 LOCKING SYSTEM

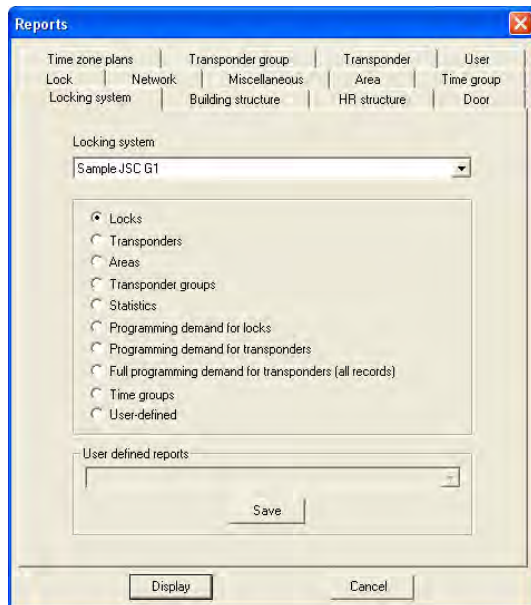

### EXPLANATION

Locking system  
"Locks"

- Selection of locking system
- Displays locks

Grouped by: Area

Sorted by: Serial number

"Transponder"

- Displays transponders
- Grouped by: Transponder group
- Sorted by: Transponder owner

"Areas"

- Displays areas
- Sorted by: Area

"Transponder groups"

- Displays transponder groups
- Sorted by: Transponder group

"Statistics"

- Displays components
- Grouped by: Type

"Programming requirement for locks"

- Displays locks with programming requirement
- Grouped by: Building structure
- Sorted by: Door

"Programming requirement for transponders"

- Displays transponders with programming requirement
- Grouped by: Transponder group
- Sorted by: Transponder owner

"Programming requirement for complete transponders"

- Displays transponders with programming requirement
- Grouped by: Transponder group
- Sorted by: Transponder owner


"Time groups"

- Displays time groups
- Grouped by: Group number
- Sorted by: Transponder group

“User-defined”

→ Selection of customer-specific reports

## 8.3.2 AREA

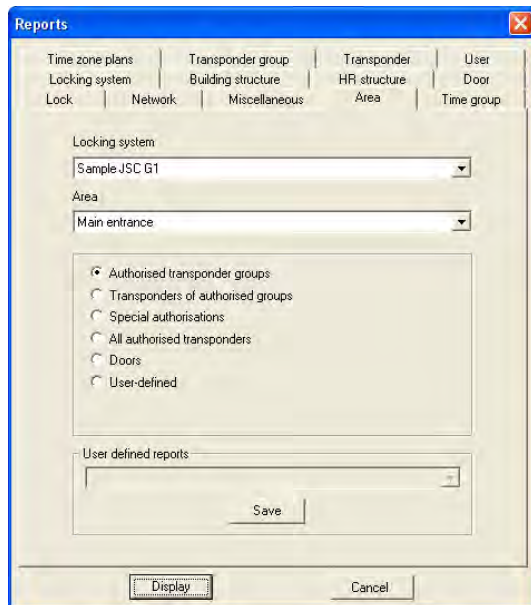

### EXPLANATION

Locking system

→ Selection of locking system

Area

→ Selection of area

“Authorised transponder groups”

→ Displays the deviating group rights

Sorted by: Transponder group

“Transponders of authorised group”

→ Displays the transponders of the authorised groups

Grouped by: Transponder group

Sorted by: Transponder owner

“Exceptions to authorisation”

→ Displays the deviating authorisations

Grouped by: Door

Sorted by: Transponder owner

“All assigned transponders”

→ Displays assigned transponders

Grouped by: Door

Sorted by: Transponder owner

“Doors”

→ Displays doors in the selected area

Grouped by: Building structure

Sorted by: Door

“User-defined”

→ Selection of customer-specific reports

## 8.1.2 TRANSPONDER GROUP

Reports

Locking system | Building structure | HR structure | Door

Lock | Network | Miscellaneous | Area | Time group

Time zone plans | Transponder group | Transponder | User

Locking system  
Sample JSC G1

Transponder group  
[System group]

☒ Authorisations at doors  
☐ Transponders  
☐ User-defined

User defined reports  
Save

Display Cancel

### EXPLANATION


Locking system  
Transponder group  
"Authorisations on doors"

"Transponder"

"User-defined"

- Selection of locking system
- Selection of transponder group
- Displays the authorisations on doors  
Grouped by: Transponder owner  
Sorted by: Door
- Displays transponders  
Sorted by: Transponder owner
- Selection of customer-specific reports

## 8.1.3 DOOR

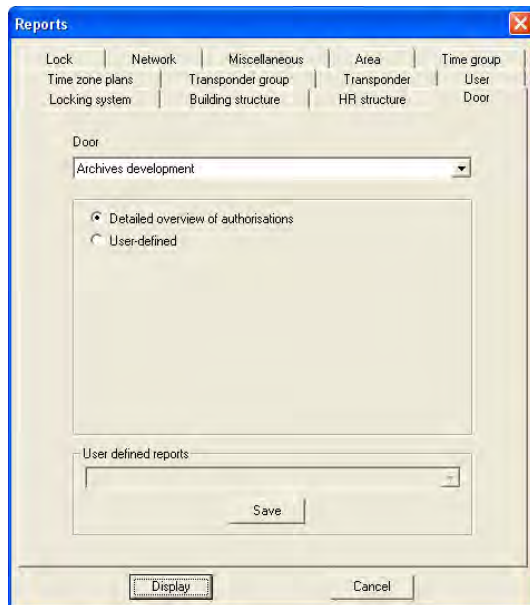

### EXPLANATION


Door

"Detailed overview of  
authorisations"

"User-defined"

- Selection of door
- Displays authorised transponders  
Sorted by: Transponder owner
- Selection of customer-specific reports

## 8.1.4 LOCK

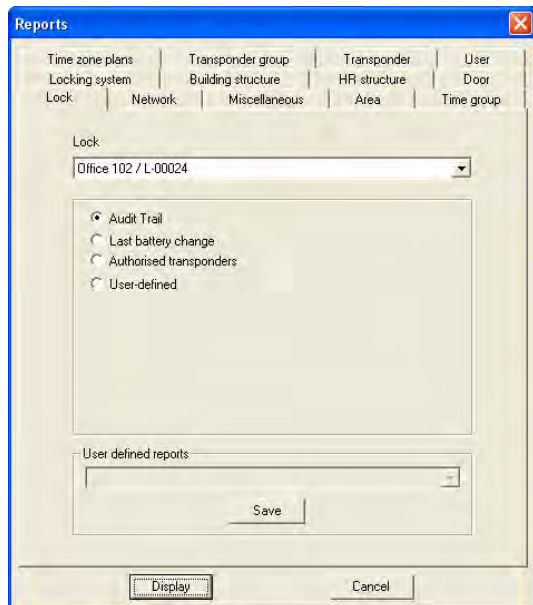

### EXPLANATION

Lock

“Access list”


“Last battery change”

“Permitted transponders”

“User-defined”

- Selection of lock
- Displays the logged access instances  
Sorted by: Date
- Displays the last battery change  
Sorted by: Date
- Displays permitted transponders  
Sorted by: Transponder owner
- Selection of customer-specific reports

## 8.1.5 TRANSPONDER

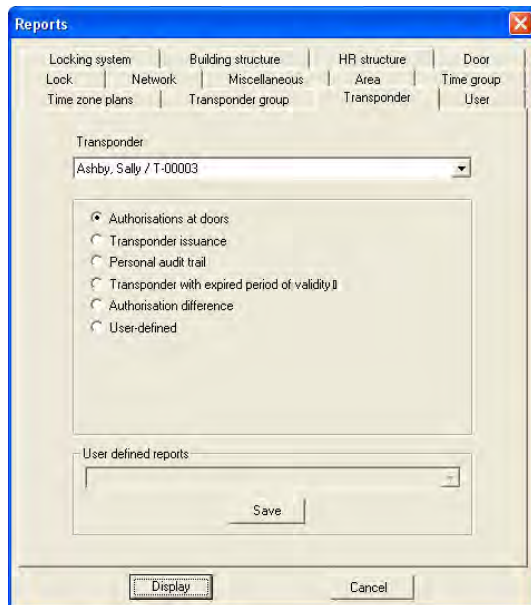

### EXPLANATION

Transponder  
“Authorisations on doors”

“Transponder issue”



“Physical access list”  
for G2 transponders  
“Last battery change”

“Transponders with expired  
validity”

“Comparison of authorisations”

“User-defined”

- Selection of transponder
- Displays the authorisations
  - Grouped by: Locking system
  - Sorted by: Door
- Displays the transponder issue log
  - Other options can also be selected here:
    - Scheduled return date
    - Print out with overview of authorisations
    - Enter actions for the transponder
    - Save issue document, can be found in the transponder properties
- Displays physical access instances on locks
  - Sorted by: Date
- Displays battery change
  - Sorted by: Date
- Displays expired transponders
  - Grouped by: Locking system,  
Transponder group
  - Sorted by: Transponder owner
- Compares the authorisations of two transponders in a transponder group
- Selection of customer-specific reports

## 8.1.6 TIME GROUP

Reports

Time zone plans | Transponder group | Transponder | User  
Locking system | Building structure | HRI structure | Door  
Lock | Network | Miscellaneous | Area | Time group

Locking system  
Sample JSC G2

Time group number  
1 [001 Employee]

☒ Transponders  
☐ User-defined

User defined reports  
Save

Display Cancel


### EXPLANATION

Locking system  
Time group number  
"Transponder"

"User-defined"

- Selection of locking system
- Selection of time group number
- Displays the transponders in a time group  
Grouped by: Transponder group  
Sorted by: Transponder owner
- Selection of customer-specific reports

## 8.1.7 TIME ZONE PLAN

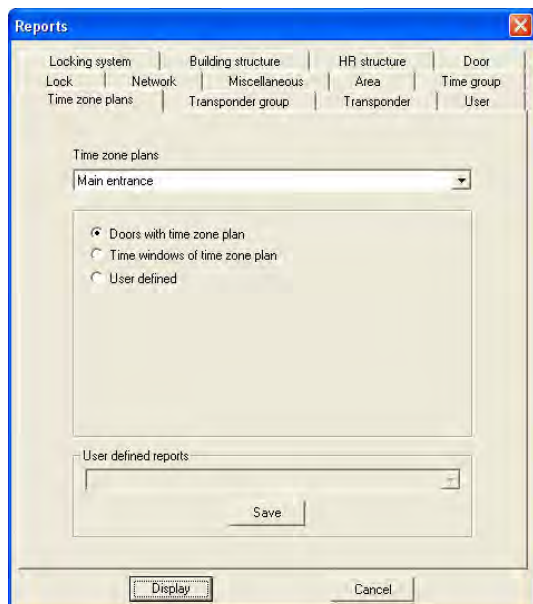

### EXPLANATION

Time zone plans

“The doors for the time zone plan”


“The time windows for the time zone plan”

“User-defined”

- Selection of time zone plan
- Displays the doors of the time zone plan  
Grouped by: Area  
Sorted by: Door
- Displays the time windows of the time zone plan  
Grouped by: Time zone group  
Sorted by: Weekday
- Selection of customer-specific reports




## 8.1.8 NETWORK

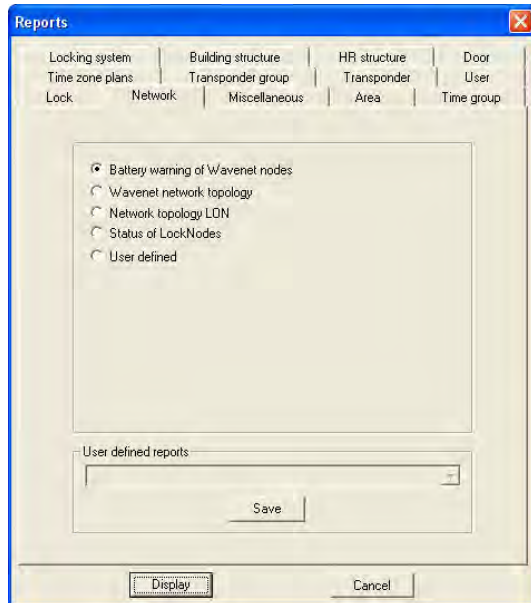

### EXPLANATION

- |                                  |  |
|----------------------------------|--|
| "Battery alert for WaveNet node" | → Displays battery alerts for the node<br>Grouped by: Building structure<br>Sorted by: Room number |
| "WaveNet network topology"       | → Displays network topology<br>Grouped by: CentralNode,<br>Segment<br>Sorted by: Address           |
| "Network topology LON"           | → Displays network topology<br>Grouped by: CentralNode,<br>Segment<br>Sorted by: Address           |
| "Status of LockNodes"            | → Displays LockNode status in the WaveNet<br>Grouped by: Building structure<br>Sorted by: Door     |
| "User-defined"                   | → Selection of customer-specific reports   |

## 8.1.9 HR STRUCTURE

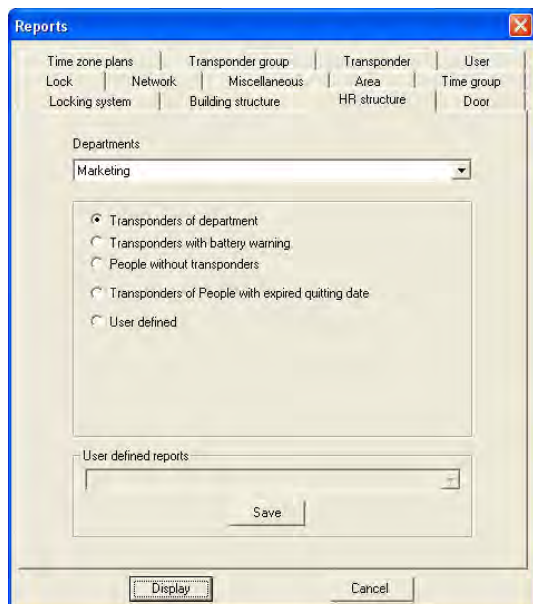

### EXPLANATION

- |   |   |   |
|---|---|---|
| Department  | → | Selection of department   |
| “Transponders of department”                                      | → | Displays transponders of department<br>Sorted by: Surname                             |
| “Transponders with battery alert”                                 | → | Displays transponders with battery alert<br>Sorted by: Transponder owner              |
| “Persons without transponders”                                    | → | Displays persons without transponders<br>Sorted by: Surname                           |
| “Transponders of persons<br>whose leaving date is in the<br>past” | → | Displays persons whose leaving date is in<br>the past<br>Sorted by: Transponder owner |
| “User-defined”  | → | Selection of customer-specific reports  |

## 8.1.10 BUILDING STRUCTURE

### EXPLANATION

Location

→ Selection of location

Building

→ Selection of building

“Locks”

→ Displays locks

Grouped by: Floor

Sorted by: Room number

“Locks with battery alert”

→ Displays locks with battery alert

Grouped by: Floor

Sorted by: Room number

“Fittings of locking cylinder”

→ Displays fittings of locking cylinder

Grouped by: Floor

Sorted by: Room number

“Doors without locks”

→ Displays doors without locks

Grouped by: Floor

Sorted by: Door

“Need for programming on locks”

→ Displays need for programming on locks


Grouped by: Floor

Sorted by: Room number

“User-defined”

→ Selection of customer-specific reports

## 8.1.11 USER

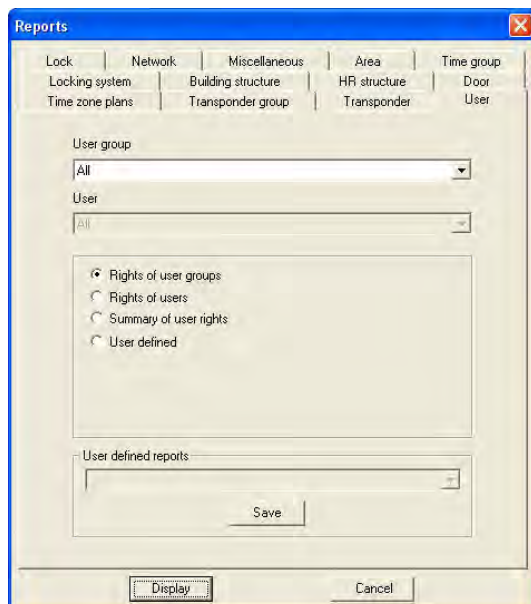

### EXPLANATION

User group

User

“Rights of user group”

“Rights of users”

“Summary of user rights”

“User-defined”

→ Selection of user group

→ Selection of user

→ Displays rights of user groups

Grouped by: User group,  
Role,  
User,  
Areas,  
Transponder groups

→ Displays rights of an individual user

Grouped by: User

Sorted by: Role


→ Displays rights of all users

Grouped by: User

Sorted by: Role

→ Selection of customer-specific reports

## 8.1.12 VARIOUS

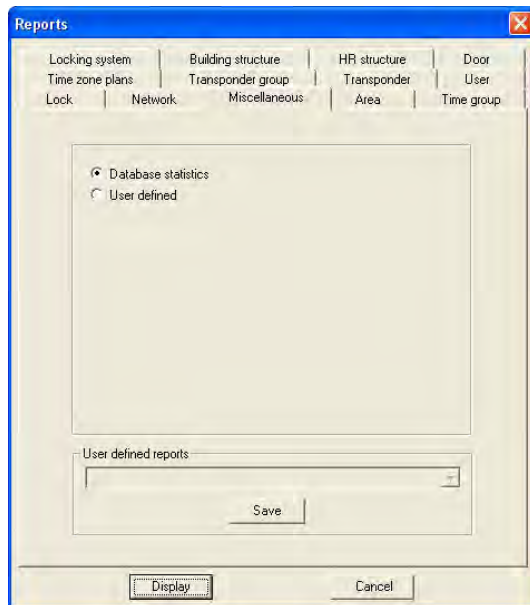

### EXPLANATION

“Database statistics”

→ Displays data in database  
Grouped by: Type  
Sorted by: Number

“User-defined”

→ Selection of customer-specific reports

## 1.31. PRINT REPORT

### ICON



### EXPLANATION

After displaying a report you have the option of printing it.

### PROCEDURE

- ➡ Reports
- ➡ Select report
- Select report
- Display
- Click on icon

## 1.32. EXPORT REPORT

### ICON



### EXPLANATION

A report displayed on screen can be converted into a special data format and saved in this format.

### PROCEDURE

- ➡ Reports
- ➡ Select area
- Select report
- Display
- Click on icon

### POSSIBLE EXPORT FORMATS

- 
- Adobe Acrobat PDF
- Report definition TXT
- Crystal Reports RPT
- Data record REC
- Comma-separated CSV
- Tab-separated TTX
- HTML 3.2
- HTML 4.0
- Excel 97-2000 XLS
- Excel 97-2000 data XLS
- Word RTF
- Editable Word RTF
- ODBC
- Rich Text Format RTF
- Text TXT
- XML


## 1.33. REPORTS FOR ASSEMBLY PREPARATION

### EXPLANATION

For easier labelling of the programmed components, the program offers the option of printing out labels to stick on the packaging.


### LABELS FOR LOCKS

- ➡ Reports
- ➡ Print labels for locks
- Selection of locks

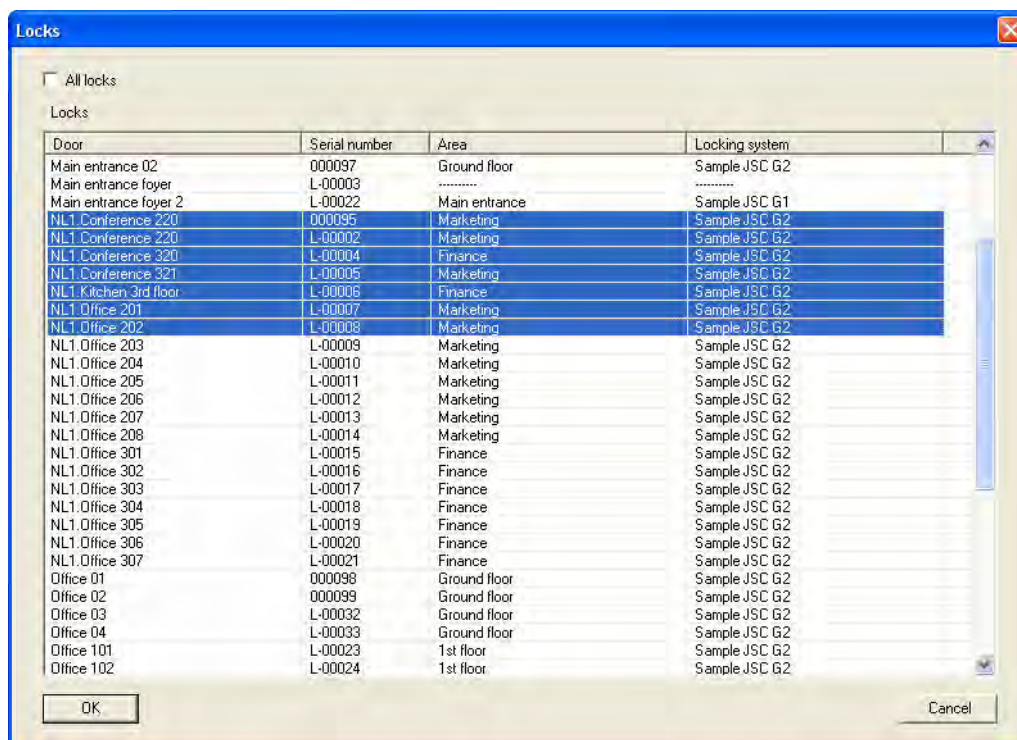

### EXPLANATION

"Label format"

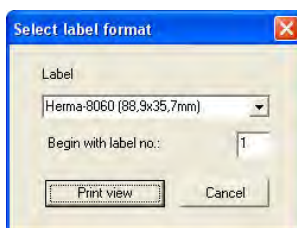


➔ Selection of label template:

- Hema-8060 (89.9x35.7mm)
- Zweckform-3658 (64.6x33.8mm)
- Zweckform-4780 (48.5x25.4mm)

Selection of start label

## LABELS FOR TRANSPONDERS

- ➡ Reports
- ➡ Print labels for transponders
- Selection of transponders

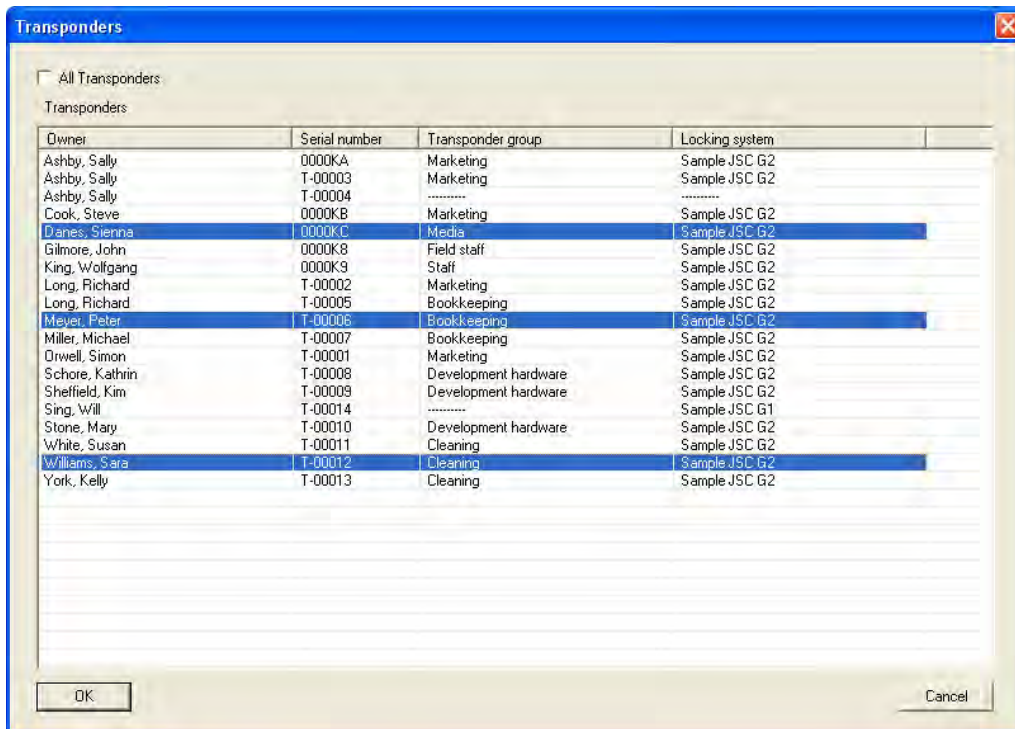

Owner	Serial number	Transponder group	Locking system
Ashby, Sally	0000KA	Marketing	Sample JSC G2
Ashby, Sally	T-00003	Marketing	Sample JSC G2
Ashby, Sally	T-00004	.....	.....
Cook, Steve	0000KB	Marketing	Sample JSC G2
Danes, Sienna	T-0000C	Media	Sample JSC G2
Gilmore, John	0000K8	Field staff	Sample JSC G2
King, Wolfgang	0000K9	Staff	Sample JSC G2
Long, Richard	T-00002	Marketing	Sample JSC G2
Long, Richard	T-00005	Bookkeeping	Sample JSC G2
Meyer, Peter	T-00006	Bookkeeping	Sample JSC G2
Miller, Michael	T-00007	Bookkeeping	Sample JSC G2
Orwell, Simon	T-00001	Marketing	Sample JSC G2
Schore, Kathrin	T-00008	Development hardware	Sample JSC G2
Sheffield, Kim	T-00009	Development hardware	Sample JSC G2
Sing, Will	T-00014	.....	Sample JSC G1
Stone, Mary	T-00010	Development hardware	Sample JSC G2
White, Susan	T-00011	Cleaning	Sample JSC G2
Williams, Sara	T-00012	Cleaning	Sample JSC G2
York, Kelly	T-00013	Cleaning	Sample JSC G2

## EXPLANATION

“Label format”



➔ Selection of label template:

- Hema-8060 (89.9x35.7mm)
- Zweckform-3658 (64.6x33.8mm)
- Zweckform-4780 (48.5x25.4mm)

Selection of start label




## 13.0 PROGRAMMING PROCESSES

### 1.34. GENERAL

#### EXPLANATION

A programming requirement applies when a right is modified and a component has not yet been programmed, or if the software detects a difference between the actual and target status (change in configuration).

- Before programming it is important to ensure that the view is up to date and the data has been backed up.



#### PROCEDURE


(To display the programming requirement in the matrix)

- ➡ Options
- ➡ Extra columns
- Select object
- Programming requirement

### 1.35. POSITION COMPONENTS

#### EXPLANATION

To achieve optimum results and avoid programming errors, a defined distance should be maintained between the programming device and the components you want to program.

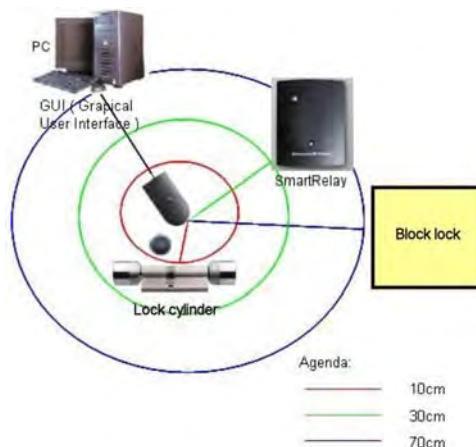

#### NOTE

If the distance is too little or too great, errors may occur.

## 1.36. PROGRAM

A programming device (config device) is needed to write data to the components. Please refer to the “LSM Administration Manual” for installation and configuration information.

### 9.3.1 PROGRAM LOCK

#### EXPLANATION

When a lock is programmed, locking system data is programmed into it. In the case of G1 locks, data can be programmed via the authorisations of the transponder IDs or the time zone plan that was assigned to the lock. You also program configuration settings, IDs and passwords.

#### ICON




#### PROCEDURE

- Position lock (see [9.2 Position components](#))
- Select lock in the matrix
- ⤷ Programming
- ⤷ Lock
- Program


or

- Position lock (see [9.2 Position components](#))
- Select lock in the matrix

- Click on icon 
- Program

or

- **Ctrl+Shift+L**

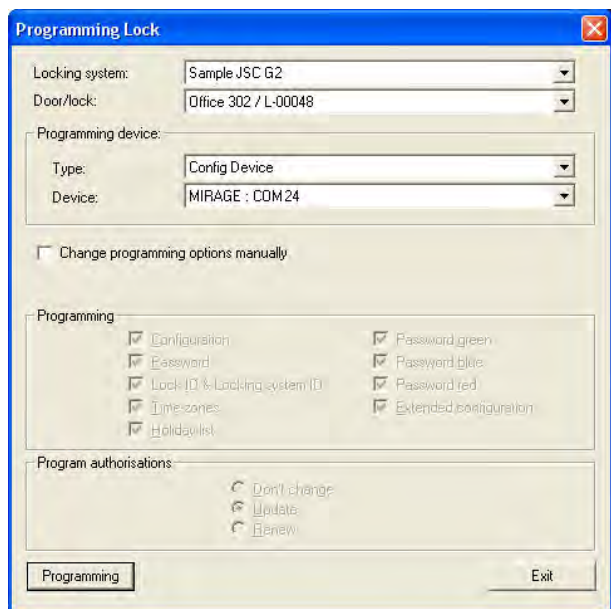

## EXPLANATION

- |                                       |   |
|---------------------------------------|---|
| "Locking system"                      | → Selected locking system   |
| "Door/Lock"                           | → Selected lock with associated door and serial number  |
| Programming device                    |   |
| "Type"                                | → Type of programming device: (config device, LockNode, WaveNet node)   |
| "Device"                              | → Assigned device   |
| "Modify programming options manually" | → Adjustment in lower area only possible if option is selected, the necessary updates are already highlighted |
| Program                               |   |
| "Configuration"                       | → Lock configuration is programmed  |
| "Password"                            | → Locking system password is programmed   |
| "Lock ID & locking system ID"         | → Lock ID and locking system ID are programmed  |
| "Time zones"                          | → Time zone is reprogrammed   |
| "Password"                            | → The password for the superordinate locking levels are all reprogrammed                                      |
| "(Gr, Bl, R)"                         |   |
| "Extended configuration"              | → Extended configuration, e.g. time conversion, is reprogrammed   |
| Program authorisations                |   |
| "Do not change"                       | → Authorisations are not changed  |
| "Update"                              | → Only changes are programmed   |
| "Refresh"                             | → All authorisations are reprogrammed   |

## 9.3.2 PROGRAM TRANSPONDER

### EXPLANATION

When you program a transponder you tell the transponder what its transponder ID is, which locking system it belongs to, what the password for the locking system is and which time group it belongs to. It is also possible to program in a time-based validity.

### ICON




### PROCEDURE

- Position transponder (see [9.2 Position components](#))
- Select transponder in matrix
- ⤴ Programming
- ⤴ Transponder
- Program


or

- Position transponder (see Position components)
- Select transponder in matrix

- Click on icon 
- Program

or

- **Ctrl+Shift+T**

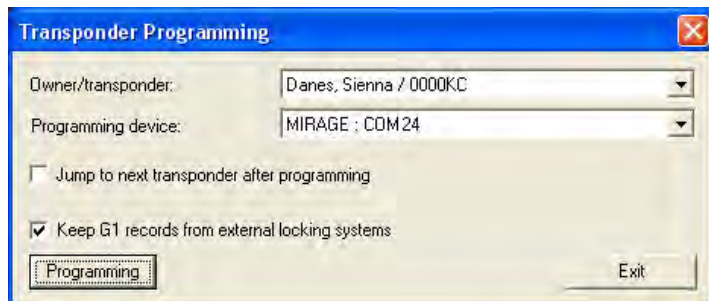

## EXPLANATION

- |  |  |
|--|--|
| “Owner / Transponder”                            | → The owner and the serial number of the transponder are displayed and can be selected   |
| “Programming device”                             | → You can select the programming device for programming  |
| “Jump to next transponder after programming”     | → When this option is selected, you jump to the next unprogrammed transponder (in alphabetical order) and the window stays open  |
| “Retain data records from other locking systems” | → When this option is selected, data records from other locking systems are not overwritten. An additional data record is written when you program the transponder, assuming that there is another free data record available. |
| <b>Program</b>                                   | → The data is programmed to the transponder  |

## 1.37. READ

### 9.4.1 READ LOCK

#### EXPLANATION

- A lock with a lock ID which is known to the locking system can be read directly.
- A lock with a lock ID that is not known to the locking system is described as an unknown lock.

#### ICON



#### PROCEDURE

- Position lock (see [9.2 Position components](#))

- Icon



or

- ➡ Programming
- ➡ Read lock / set time


or

- ➡ Read unknown lock

#### NOTE

Different views may appear depending on the read lock.

## G1 LOCKING CYLINDER

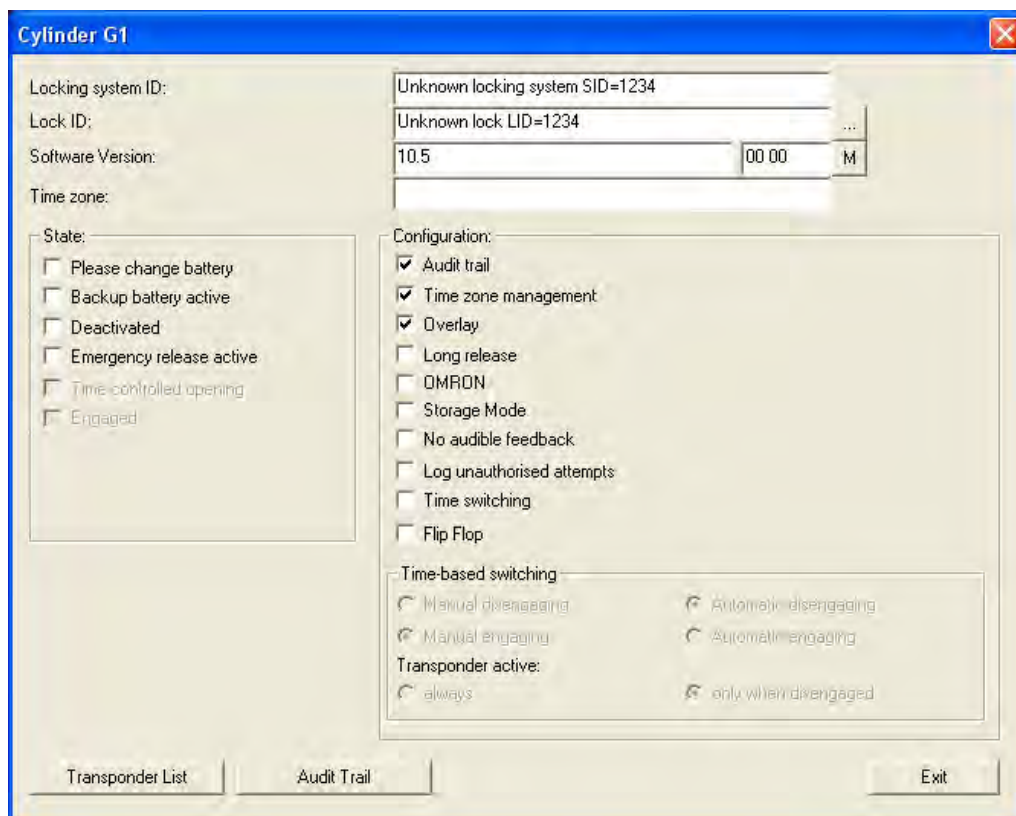

## EXPLANATION

- |                                   |   |
|-----------------------------------|---|
| "Locking system"                  | → Name of locking system  |
| "Lock"                            | → Name and serial number of lock  |
| "Software version"                | → Software version of lock  |
| "Time zone"                       | → Assigned time zone  |
| ...                               | → Displays the lock properties  |
| M                                 | → Jumps to lock in matrix view  |
| Status                            |   |
| "Battery status critical"         | → Status of batteries   |
| "Emergency battery active"        | → Emergency battery activated   |
| "Deactivated"                     | → Lock deactivated  |
| "Emergency activation active"     | → Active emergency activation   |
| "Time-controlled opening running" | → The lock is in storage mode, i.e. programming has not yet taken place |
| "Engaged"                         | → Lock triggered  |
| Configuration                     |   |
| "Access control"                  | → Option of logging access instances                                    |
| "Time zone control"               | → Option of controlling the access times for transponders               |
| "Overlay"                         | → Store reserve IDs in the locks to respond to losing transponders      |

- |   |   |   |
|---|---|---|
| "Long triggering"                         | → | Longer engagement / switching of lock   |
| "OMRON"                                   | → | Use of OMRON mode active  |
| "No acoustic programming acknowledgement" | → | During programming, the lock does not confirm the process by blips  |
| "Log unauthorised access instances"       | → | Logging of unauthorised access instances, only in conjunction with "access control"                               |
| "Time changeover"                         | → | The lock automatically changes the status at set times according to the settings under Time-controlled changeover |
| "Flip flop"                               | → | The lock changes the status when an authorised transponder is activated   |
| Transponder list                          | → | Displays authorised transponders  |
| Access list                               | → | Read access list  |



## G1 SMART RELAIS

**Smart Relay G1 data**

Locking system ID: Unknown locking system SID=1234

Lock ID: Unknown lock LID=1234

Software Version: 4.0 00 00 M

Time zone:

**State:**

- ☐ Please change battery
- ☐ Flip-Flop on
- ☐ Emergency release active
- ☐ Deactivated
- ☐ Time-controlled opening

**Configuration:**

- ☐ Audit trail
- ☐ Time zone management
- ☐ Flip Flop
- ☐ Time switching
- ☐ Overlay
- ☐ QMRON
- ☐ Repeater
- ☐ Advanced

**Extended properties**

Pulse length: 0 Sec.

**Time-controlled relay switching**

- ☐ Manual locking ☒ Automatic locking
- ☒ Manual unlocking ☐ Automatic unlocking

**Transponder active:**

- ☐ always ☒ only if locked

☐ Restricted range (only for internal antenna)

☐ Log unauthorised attempts

**Advanced functions**

Number of expansion modules: 0

**Interface**

- ☐ Extra signal: CLS

☐ No audible feedback

- ☒ External LED ☐ External beeper

**Internal/external antenna:**

- ☒ Autodetection ☐ both active

Transponder List Audit Trail Advanced Exit

## EXPLANATION

- |                                   |   |
|-----------------------------------|---|
| "Locking system"                  | → Name of locking system  |
| "Lock"                            | → Name and serial number of lock  |
| "Software version"                | → Software version of lock  |
| "Time zone"                       | → Assigned time zone  |
| ...                               | → Displays the lock properties  |
| M                                 | → Jumps to lock in matrix view  |
| Status                            |   |
| "Battery status critical"         | → Status of batteries   |
| "Flip-flop on"                    | → Lock triggered  |
| "Emergency activation active"     | → Active emergency activation   |
| "Deactivated"                     | → Lock deactivated  |
| "Time-controlled opening running" | → The lock is in storage mode, i.e. programming has not yet taken place |
| "Engaged"                         | → Lock triggered  |
| Configuration                     |   |
| "Access control"                  | → Option of logging access instances                                    |
| "Time zone control"               | → Option of controlling the access times for                            |

	transponders
"Flip flop"	→ The lock changes the status when an authorised transponder is activated
"Time changeover"	→ The lock automatically changes the status at set times according to the settings under Time-controlled changeover
"Overlay"	→ Store reserve IDs in the locks to respond to losing transponders
"OMRON"	→ Displays whether use of OMRON mode is active
"Repeater"	→ The lock increases the range and forwards transponder bookings
"Advanced"	→ Advanced version with extended functions
Extended properties	
"Pulse length"	→ Duration of triggering procedure in seconds
"Limited range (only for internal antennas)"	→ The range of the internal antenna is reduced
"Log unauthorised access instances"	→ Logging of unauthorised access instances, only in conjunction with "access control"
Advanced functions	
"Number of extension modules"	→ Use of extension modules (SOM)
"Interface"	→ Lock forwards data to another system
"No acoustic programming acknowledgement"	→ During programming, the lock does not confirm the process by blips
"External LED"	→ Visual outside signal
"External blipper"	→ Acoustic outside signal
"Internal / external antennas"	→ Displays the antennas used
Transponder list	→ Displays authorised transponders
Access list	→ Read access list
Advanced	→ Read extended configuration

## G2 LOCK

Cylinder G2

Locking system: Sample JSC G2

Lock: Main entrance 01 / 000094

Software Version: 2.0.05

Time zone:

State:

Battery status: OK

☐ Emergency release

☐ Deactivated

☐ Engaged

☐ Storage mode

Data:

Device class: Cylinder G2

PHI: 000094

Time: 10/02/22 00:56

Last access attempt: Successful

Authorisations Audit Trail Reset Exit

## EXPLANATION

"Locking system"	→ Name of locking system
"Lock"	→ Name and serial number of lock
"Software version"	→ Software version of lock
"Time zone"	→ Assigned time zone
...	→ Displays the lock properties
M	→ Jumps to lock in matrix view
Status	
"Battery status"	→ Status of batteries
"Emergency activation"	→ Active emergency activation
"Deactivated"	→ Lock deactivated
"Engaged"	→ Lock triggered
"Storage mode"	→ The lock is in storage mode, i.e. programming has not yet taken place
Data	
"Device class"	→ Class of read lock
"PHI"	→ Public Hardware Identifier (PHI) for unique identification of G2 components
"Time"	→ Current time of lock
"Last attempt at access"	→ Result of last access instance
Authorisations	→ Displays the authorisations
Access list	→ Read authorisations

Reset

→ Reset lock

## NOTE

Whenever you read a known lock, it is simultaneously highlighted in the locking plan.

## NOTE

The access list function is only available for components with integrated access logging. It is also possible to analyse unauthorised access attempts. This must be defined prior to programming in the lock's properties. (Lock configuration / data)

## 9.4.2 READ TRANSPONDER

### EXPLANATION

When you read the transponder, the data stored on the transponder is read and if possible assigned to an owner.


ICON



### PROCEDURE

- Position transponder (see [9.2 Position components](#))
- ➡ Programming
- ➡ Read / reset transponder
- Press transponder button when prompted

## G1 TRANSPONDERS

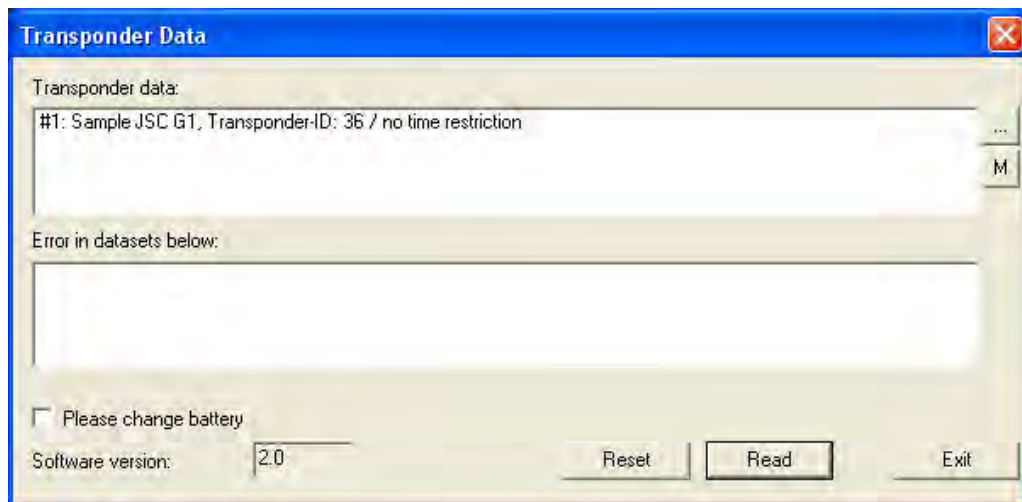

### EXPLANATION

“Transponder data”

→ All details of the transponder are shown, programmed data records, locking system ID, transponder ID and time group

“The following data records contained errors”

→ Indicates any defective data records

“Battery must be replaced”

→ Status of transponder battery. If the battery is low, a tick appears in the box

“Software version”

→ Transponder’s firmware status



→ Indicates the properties of the read transponder

**M**

→ Indicates the read transponder in the matrix

## NOTE

Whenever you read the transponder it is simultaneously highlighted in the locking plan.  
Transponders with a validity period have additional information:

- Activation date → if defined, date as of which transponder is valid
- Expiry date → if defined, date until which transponder is valid

## ATTENTION

Transponders with a validity period can only be authorised in one single locking system.

## G2 TRANSPONDERS

Transponder G2

Holder: King, Wolfgang

Serial number: 0000K9

Software Version: 0.0.00

M

G2

SId	SIdExt	Locking system	TId	Validation date	Expiry date
<input checked="" type="checkbox"/> 11328	14513345	Sample JSC G2	3203	present	present

G1

SId	Locking system	TId
<input checked="" type="checkbox"/> 3345	14513345 Sample JSC G1	13

State: ☐ Please change battery

Data

Device class: 00

PHI: 0000K9

Time: 10/02/22 11:03

Locks Reset Personal audit trail Time configuration Read Exit

## EXPLANATION

“Owner”

“Serial number”

“Software version”

...

M

G2

Transponder data

G1

Transponder data

- Name of transponder owner
- Serial number of transponder
- Transponder’s firmware status
- Indicates the properties of the read transponder
- Indicates the read transponder in the matrix
- - Locking system ID
  - Extended locking system ID
  - Locking system
  - TID
  - Activation date
  - Expiry date
- - Locking system ID

Status	
“Battery status critical”	→ This component requires the battery to be changed
“Battery status critical”	
“Device class”	→ Class of read lock
“PHI”	→ Public Hardware Identifier (PHI) for unique identification of G2 components
“Time”	→ Current time of transponder
Authorisations	→ Displays the authorisations
Reset	→ The highlighted transponder data record is reset
Physical access list	→ Read physical access list
Read	→ Read (another) transponder

## NOTE

Whenever you read the transponder it is simultaneously highlighted in the locking plan.



## 1.38. RESET

### 1.38.1 RESET LOCK

#### EXPLANATION

When a lock is reset the data on the lock is removed and the lock's actual status is deleted in the software.

#### PROCEDURE

- Position lock (see [9.2 Position components](#))
- Select lock in matrix
- ➡ Programming
- ➡ Reset lock

or

- Position lock (see [9.2 Position components](#))
- Select lock in matrix
- **Ctrl+Shift+N**

### 1.38.2 RESET TRANSPONDER

#### EXPLANATION

When a transponder is reset the data on the transponder is removed and the transponder's actual status is deleted in the software.

#### PROCEDURE

- Position transponder (see [9.2 Position components](#))
- Select transponder in matrix
- ➡ Programming
- ➡ Reset transponder

or

- Position transponder (see [9.2 Position components](#))
- Select transponder in matrix
- **Ctrl+Shift+R**

#### NOTE

If a component is deleted in the software before being reset, you will need the password for the locking system in order to reset the component later.

## 1.39. MOBILE PROGRAMMING

### 1.39.1 GENERAL

#### EXPLANATION

In LSM, you have the option of configuring the export of locking plan data to a mobile end device (a PocketPC by default) such that certain employees can perform particular tasks on particular locks. These employees must also log on to the software on the PocketPC, allowing only authorised employees access to data.

#### NOTE

The software access data should be kept safe according to the valid IT guidelines and not made accessible to unauthorised persons.

#### SCENARIO 1 (STANDARD)

#### EXPLANATION

The data is immediately transferred to the PocketPC and can be run immediately.

#### PROCEDURE

- ➡ File
- ➡ Export to PDA
- ➡ LSM Mobile
- Select PDA user
- Select locking systems
- Select locks
- Configure tasks
- Select transponders
- Export

## SCENARIO 2 (DATA NOT IMMEDIATELY TRANSFERRED TO POCKET PC)


### EXPLANATION

If exporting is to be performed at a later time, the data and tasks to be transferred can be stored in the database. If the user now logs on to the system and wants to perform an export, a message will appear stating that the tasks are ready and the user can then decide whether to accept the request or not.

### PROCEDURE

- ➡ File
- ➡ Export to PDA
- ➡ Prepare task
- Select LSM user
- Select locking systems
- Select locks
- Configure tasks
  
- ➡ File
- ➡ Export to PDA
- ➡ LSM Mobile
- Confirm query

### QUERY

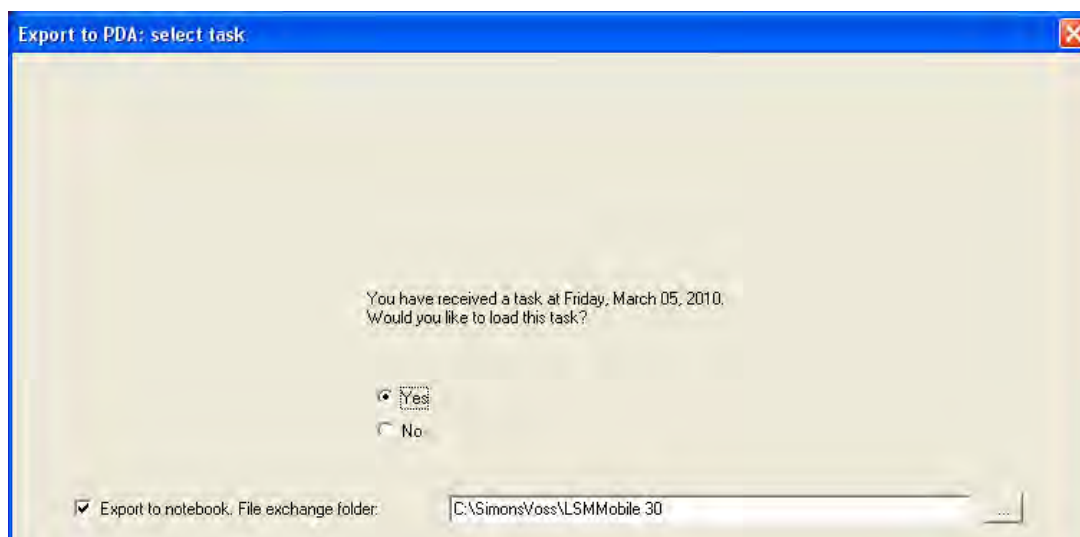

## SCENARIO 3 (LOCKING PLAN FROM ANOTHER USER TO POCKET PC)

### EXPLANATION

The software is capable of recognising when it needs to import old data that has not yet been re-imported prior to re-exporting it for another user.

### PROCEDURE

- ➡ File
- ➡ Export to PDA
- ➡ LSM Mobile
- Select LSM user
- Acknowledge query
- Select locking systems
- Select locks
- Configure tasks
- Select transponders
- Export

### QUERY



### SOLUTION

The indicated user must log in and import the data.  
The data can then be exported again without the risk of data being lost.

## SCENARIO 4 (PART OF LOCKING PLAN ALREADY EXPORTED)

### EXPLANATION

You can work with multiple Pocket PCs at the same time. To avoid duplicating any work, locks that have already been exported should not be exported again.

### PROCEDURE

- ➡ File
- ➡ Export to PDA
- ➡ LSM Mobile
- Select LSM user
- Select locking systems
- Select locks
- Tick "Previously exported locks ..."
- Configure tasks
- Select transponders
- Export

## 1.39.2 EXPORT


### EXPLANATION

When data is exported, the locking plan is transferred to the Pocket PC in accordance with the defined restrictions in order to be able to program the locks in situ.

### NOTE

- Only users who have been assigned the "handheld" role are listed.
- With LSM you have the option of managing more than one locking plan at the same time on your PocketPC.

## 1.39.2.1 SELECT LOCKING SYSTEMS

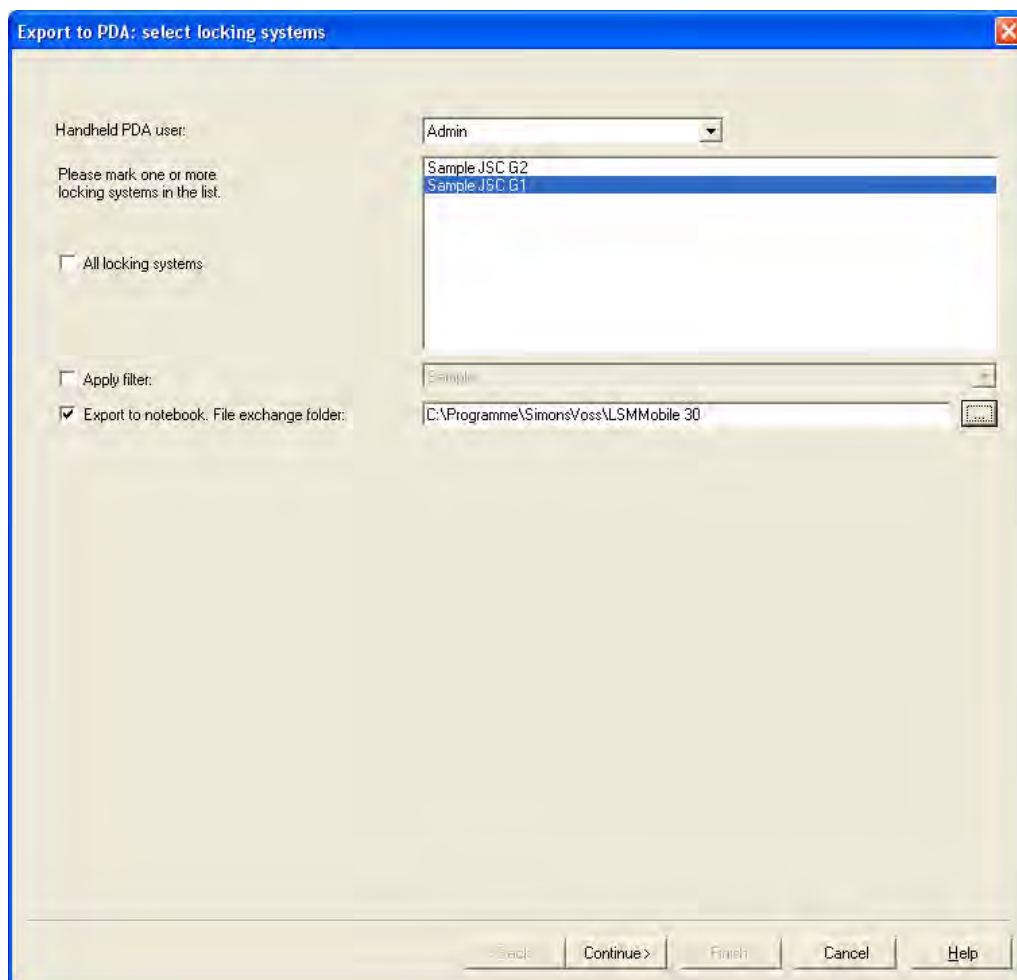

### EXPLANATION

“Handheld PDA user”

→ User with the right to perform mobile programming

“Locking systems”

→ Selection of the locking systems to be taken into account

“All locking systems”

All locking systems are taken into account

“Use filters”

→ The existing filters can also be used here

“Export to notebook. File exchange folder”

→ Data can also be exported to a local data carrier and the locks programmed using a Notebook or Netbook

## 1.39.2.2 SELECT LOCKS

Export to PDA: select locks

☒ All Locks  
☐ Locks with programming demand  
☒ Transmit complete list of authorisations  
☐ Hide locks already exported

Filter: no

Select locks: Selected: 1 of 1

Door	Area	Locking system
MB.gl.foyer Main entrance foyer 2 / L-00022	Main entrance	Sample JSC G1

< Back Continue > Finish Cancel Help

### EXPLANATION

- “All locks” → Highlight all locks at once
- “Locks with programming requirement” → Only locks with a programming requirement are displayed.
- “Transfer complete list of authorisations” → All authorisations are exported and made available on-site
- “Hide locks that have already been exported” → Previously exported locks are not displayed
- “Filter” → An active filter is visible here
- Select locks → If the first option is not selected, there is an overview of all the locks from which the necessary ones can be selected.

- Highlighted locks must be processed. All locks are highlighted by default. Settings are always modified for the highlighted locks
- Under “Tasks” you must select the tasks to be performed
- Under “Permitted”, the tasks to be performed are automatically selected. You can also permit additional tasks.
- Under “Settings” you define the maximum number of times the task can be executed and the time by which the tasks must be performed, and apply these settings
- Under Presettings you can save a frequently used basic setting relating to the tasks permitted for certain locks and reload it the next time



- For an emergency opening with LSM Mobile, you do not need to know the original locking system password. Under “Password for emergency opening” you can issue an 8-digit password of your own choice with which the user can open the lock in an emergency.

## 1.39.3.1 SELECT TRANSPONDERS

Export to PDA: select transponder

☒ All Transponders

Choose transponder: Selected: 18 of 18

Person	Transponder group	Locking system
Schore, Kathrin/T-00008	Development hardware	Sample JSC G2
Sheffield, Kim/T-00009	Development hardware	Sample JSC G2
Stone, Mary/T-00010	Development hardware	Sample JSC G2
sdfg, sdfg/T-00015	Development hardware	Sample JSC G2
Long, Richard/T-00005	Bookkeeping	Sample JSC G2
Meyer, Peter/T-00006	Bookkeeping	Sample JSC G2
Miller, Michael/T-00007	Bookkeeping	Sample JSC G2
Ashby, Sally/0000KA	Marketing	Sample JSC G2
Long, Richard/T-00002	Marketing	Sample JSC G2
Cook, Steve/0000KB	Marketing	Sample JSC G2
Orwell, Simon/T-00001	Marketing	Sample JSC G2
Ashby, Sally/T-00003	Marketing	Sample JSC G2
Danes, Sienna/0000KC	Media	Sample JSC G2
King, Wolfgang/0000K9	Staff	Sample JSC G2
Gilmore, John/0000K8	Field staff	Sample JSC G2
White, Susan/T-00011	Cleaning	Sample JSC G2
Williams, Sara/T-00012	Cleaning	Sample JSC G2
York, Kelly/T-00013	Cleaning	Sample JSC G2


< Back Continue > Finish Cancel Help

### EXPLANATION

“All transponders”

→ Highlight all transponders at once. If only individual transponders are exported, not all TIDs can be assigned by name when transponders or access lists are read.

## 1.39.3.2 FINISHING THE EXPORT

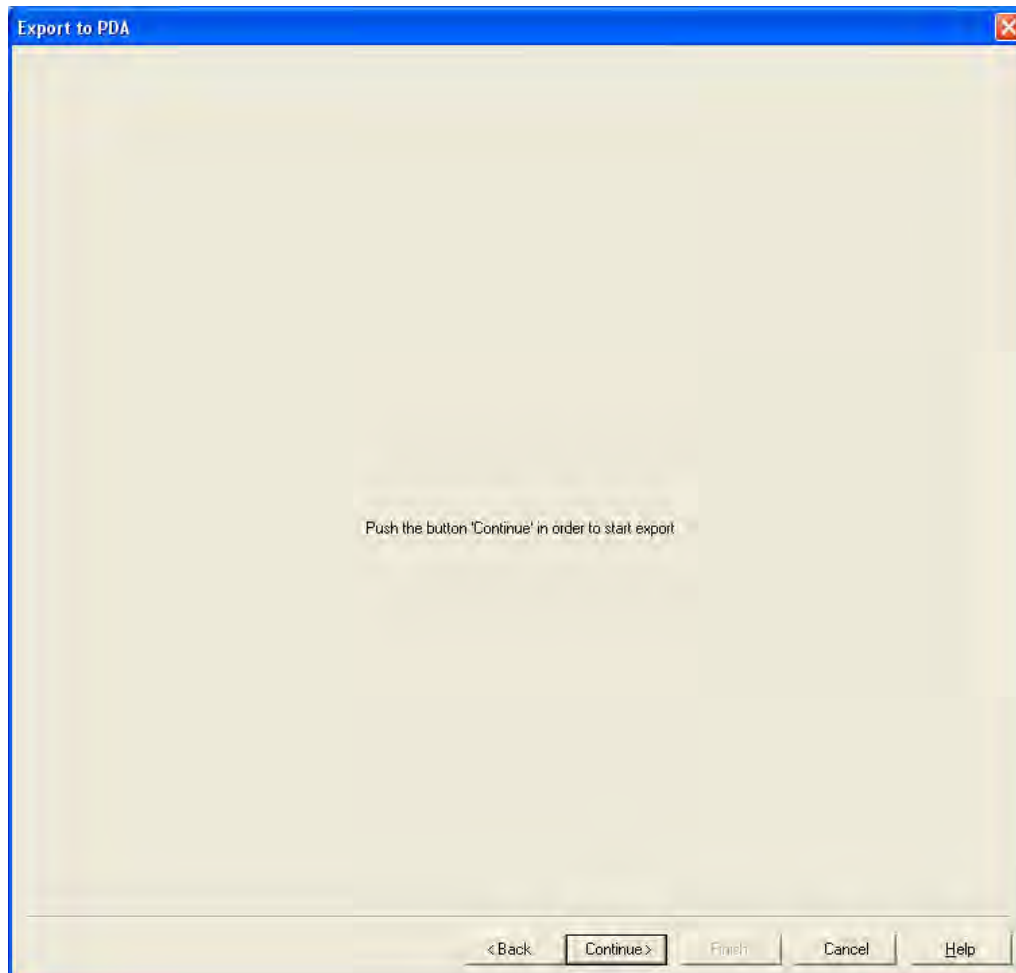

## 1.39.4 IMPORT

### EXPLANATION

Once the exported tasks have been completed, the data must be re-imported from the Pocket PC after processing in order to inform the locking plan of the modified data.

**If this does not happen you will see a query the next time you try to export and different authorisations may apply in the software and in the locks!!**

### PROCEDURE

- ➡ File
- ➡ Import to PDA
- ➡ LSM Mobile

### NOTE

- In the export task list you can select whether all tasks should be imported or just those that have already been processed
- If the software detects differences between the handheld and the computer, it will show you these. You can then decide which data you want to accept.

## 1.40. LSM MOBILE

### EXPLANATION

LSM Mobile is the SimonsVoss software module for PocketPCs. You can use this software and the mobile Pocket PC to perform tasks within a locking system without network (offline).

### DATA SYNCHRONISATION REQUIREMENT

- Microsoft ActiveSync Version 4.2 (or higher)
- LSM Mobile installed on PocketPC
- LSM Mobile must not be open

### SCENARIO 1 (EXECUTE)

#### PROCEDURE

- Start LSM Mobile
- Confirm Bluetooth query with **Yes**
- Select database
- Enter login details (user name and password)
- Confirm with **OK**
- Select locking system
- **Execute**

## PROCESS

- LSM Mobile reads unknown locks
- LSM Mobile recognises lock and performs the “tasks” stored for the lock

## SCENARIO 2 (SELECT – PROGRAM)

### PROCEDURE

- Start LSM Mobile
- Confirm Bluetooth query with **Yes**
- Select database
- Enter login details (user name and password)
- Select locking system
- **Select**
- Select lock
- **Program.**

## PROCESS

- LSM Mobile programs the nearby lock  
(you can also program locks that have not been programmed yet)

## NOTE

- After exporting the locking plan to the Pocket PC, you should avoid making any changes to the LSM locking plan software until you import it again to prevent conflicts from arising.
- More detailed information about LSM Mobile is available in a separate manual from SimonsVoss.

## 14.0 MISCELLANEOUS

### 1.41. DELETING AN EMPLOYEE WHEN TRANSPONDER IS RETURNED

Reset transponder

Disconnect transponder from person

### 1.42. DELETING AN EMPLOYEE WHEN TRANSPONDER IS NOT RETURNED

Deactivate / block transponder

### 1.43. CREATE REPLACEMENT TRANSPONDER

#### USE

This procedure should be used when a transponder has been lost.

#### EXPLANATION

When you create a replacement transponder, the original transponder is blocked and a new one is created with the same authorisations and a similar designation.

#### PROCEDURE

- Right-click on the original transponder
- ➡ New
- ➡ Replacement transponder
- Confirm query with **Yes**
- Enter additional information and confirm
- Enter new serial number

#### RESULTS


- Programming requirement on transponder
- Programming requirement on the affected locks
- TID is permanently blocked

## 1.44. PROCEDURE TO FOLLOW FOR A DEFECTIVE TRANSPONDER

### EXPLANATION

In the event of a defective transponder, before programming a new transponder you must tell the software that the old transponder no longer works.

### PROCEDURE

- Right-click on the original transponder
  - ➡ Properties
  - ➡ Transponder
- or
- ➡ Edit
  - ➡ Transponder
- then
- Select transponder using arrow buttons 
  - Software reset
  - Select reason
  - Enter additional information if required
  - Confirm twice with Yes
  - You can now start programming the new transponder

### RESULTS

- Actual status of the original transponder is reset

### NOTE

Resetting and reprogramming another transponder can lead to security issues. It is possible to create two transponders with the same data. It must be ensured that the original transponder really is defective. Otherwise a replacement transponder must be created (see 10.1 Deleting an employee when transponder is returned).



## 1.45. PROCEDURE TO FOLLOW FOR REPLACING A DEFECTIVE LOCK


### EXPLANATION

When you replace a defective lock, before programming a new lock you must tell the LSM database that the old lock no longer works.

### PROCEDURE

- Right-click on the door / lock
- ➡ Properties
- ➡ Lock

or

- ➡ Edit
- ➡ Lock
- Select lock using arrow buttons 

then

- ➡ Configuration / data
- Software reset
- Confirm query with Yes
- You can now start programming the new lock

### RESULTS

Actual status of the lock is reset

## 1.46. OVERLAY MODE

### EXPLANATION

In overlay mode 8 transponder IDs are reserved for a created transponder and programmed into the authorised locks. If the first transponder is lost, the transponder ID is deactivated in the software and the new transponder is assigned the next transponder ID from the reserve TIDs. When the transponder is used to open a lock, the system recognises that this is one of the 7 reserve TIDs and deactivates the previous transponder ID.

### ADVANTAGE

- No need to program the locks if a transponder is lost

### DISADVANTAGE

- The old TID is only deactivated on the locks the user has activated with his new TID, resulting in a security problem
- Large number of used transponder IDs  
(e.g. 1000 transponders → 8000 TIDs)

## 1.47. OVERALL LOCKING LEVELS

### EXPLANATION

To create transponders that are to be authorised for more than three locking systems, you use overall locking levels. Here you are dealing with transponders from locking systems belonging to different companies. Where a company has more than one locking system, you can use the transponder group hierarchy. A classic example of overall locking levels is the fire brigade level, as there are situations where transponders on this level need to be authorised for multiple locking systems for different buildings and companies.

## 15.0 SERVICE AND SUPPORT

### PRODUCT SUPPORT

If customers have any questions relating to products from SimonsVoss Technologies AG, the general support team will be happy to help:

Telephone +49 (0) 1805 78 3060

The product hotline does not offer support for the LSM Business and Professional software.

Software support

Support Standard

For customers with a chargeable Support Standard software agreement, the following support options are also available:

**E-MAIL** **LSM-SUPPORT@SIMONS-VOSS.DE**

**TELEPHONE +49 (0) 1805 57 3060**

Support Premium

For customers with a chargeable Support Premium software agreement, the following support options are also available:

E-mail [lsm-support@simons-voss.de](mailto:lsm-support@simons-voss.de)

Telephone +49 (0) 1805 57 3060

Online support tool

Short call to LSM hotline

Launch LSM

➔ areas,

➔ **SIMONSSVOSS ONLINE SUPPORT**