

User Manual

IP DOME CAMERA



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MISTURE.

DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

COPYRIGHT

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.

Content

I. PREFACE	4
II. PRODUCT SPECIFICATIONS.....	4
III. PRODUCT INSTALLATION.....	7
A. MONITOR SETTING	7
B. HARDWARE INSTALLATION	8
C. IP ASSIGNMENT	10
D. INSTALL ACTIVE X CONTROL:	14
IV. LIVE VIDEO	21
V. IP CAMERA CONFIGURATION	25
A. SYSTEM	26
B. NETWORK.....	31
C. A/V SETTING.....	56
D. EVENT LIST	63
VI. NETWORK CONFIGURATION.....	72
VII. I/O CONFIGURATION	74
VIII. FACTORY DEFAULT	77
IX. UNIVERSAL PASSWORD.....	78
X. PACKAGE CONTENTS.....	81
XI. MICRO SD CARD COMPATIBILITY.....	82

V1.1_20131128

I. Preface

This is a 1 / 4" Mega-Pixel CMOS sensor IP Dome Camera with a built-in web server. The user can view real-time video via IE browser. It supports H.264, and M-JPEG video compression which provides smooth and high video quality. The video can be stored in a Micro SD card and playback remotely.

With a user friendly interface, it is an easy-to-use IP camera which is designed for security application.

II. Product Specifications

- HD 720P Real Time
- 3D+2D Digital Noise Reduction
- Digital Wide Dynamic Range
- Shutter Speed Adjustable
- Sense Up Adjustable
- Manually Day & Night Switch Time Control
- Power over Ethernet
- IR LED Built in 20M or 15M Available
- H.264/ M-JPEG Compression
- Micro SD Card Backup
- Support iPhone/Android/Mac
- SDK for Software Integration
- Free Bundle 36 ch Recording Software

Specifications

Hardware		
CPU	Multimedia SoC	
RAM	128 MB	
Flash	16 MB	
Image sensor	1 / 4" Mega-Pixel CMOS sensor	
Sensitivity	Color : 0.2 Lux (AGC ON) B / W: 0.1 Lux (AGC ON)	Color : 0.1 Lux (AGC ON) B / W: 0.05 Lux (AGC ON)
Lens Type	2.8mm @ F1.8	2.8~12mm @ F1.4
View Angle	77.79°(H), 49.55°(V)	24.86~70.88°(H), 14.40~40.80°(V)
ICR	Mechanism IR cut Filter	
I/O	1 DI / 1 DO	
Audio	G.711(64K) and G.726(32K,24K) audio compression Input : External Mic in Output: External Audio out, Support 2-way audio	
Power over Ethernet	Yes	
Power Consumption	DC 12V Max: 3.72W (IR ON); 2.28W (IR Off) PoE Max: 802.3af, 4.80W (IR ON); 3.36W (IR Off)	DC 12V Max: 3.72W (IR ON); 2.28W (IR Off) PoE Max: 802.3af, 5.28W (IR ON); 3.36W (IR Off)
Operating Temperature	0°C ~ 45°C	
Dimensions	131.2mm (∅) x 94.3mm (H)	
Weight	380g	
IR LEDs		
LEDs	28 LEDs, 850nm	18 LEDs, 850nm
IR distance	20M	15M
Network		
Ethernet	10/ 100 Base-T	
Network Protocol	IPv6, IPv4, HTTP, HTTPS, SNMP, QoS/DSCP, Access list, IEEE 802.1X, RTSP, TCP/ IP, UDP, SMTP, FTP, PPPoE, DHCP, DDNS, NTP, UPnP, 3GPP, SAMBA, Bonjour	
System		
Video Resolution	1280x800@30fps,1280x720@30fps, 640x480@30fps, 320x240@30fps, 176x144@30fps	

Video Adjust	Brightness, Contrast, Hue, Saturation, Sharpness, AGC, Night Mode, WDR, Flip, Mirror, Noise reduction, Day&Night adjustable, White Balance
Triple Streaming	Yes
Image Snapshot	Yes
Full Screen Monitoring	Yes
Privacy Mask	Yes, 3 different areas
Compression Format	H.264/ M-JPEG
Video Bitrates Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered Action	Mail, FTP, Save to SD card, DO, Samba
Pre/ Post Alarm	Yes, configurable
Security	Password protection, IP address filtering, HTTPS encrypted data transmission, 802.1X port-based authentication for network protection, QoS/DSCP
Firmware Upgrade	HTTP mode, can be upgraded remotely
Simultaneous Connection	Up to 10
Micro SD card management	
Recording Trigger	Motion Detection, IP check, Network break down (wire only), Schedule, DI
Video Format	AVI, JPEG
Video Playback	Yes
Delete Files	Yes
Web browsing requirement	
OS	Windows 7, 2000, XP, 2003, Microsoft IE 6.0 or above, Chrome, Safari, Firefox.
Mobile Support	iOS 4.3 or above, Android 1.6 or above.
Hardware Suggested	Intel Dual Core 2.53G, RAM: 1024MB, Graphic card: 128MB

*SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTIFICATION.


III. Product Installation

A. Monitor Setting


- i. Right-Click on the desktop. Select “ Properties”




- ii. Change color quality to highest (32bit).

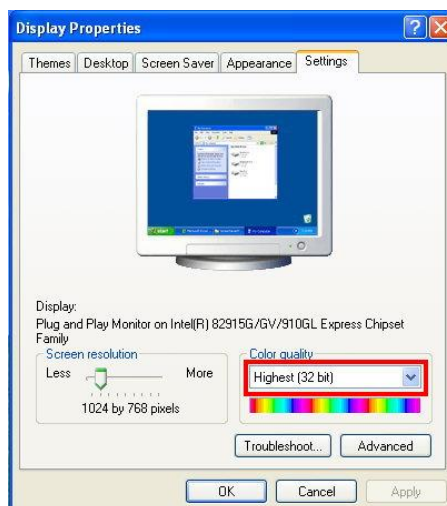

B. Hardware Installation

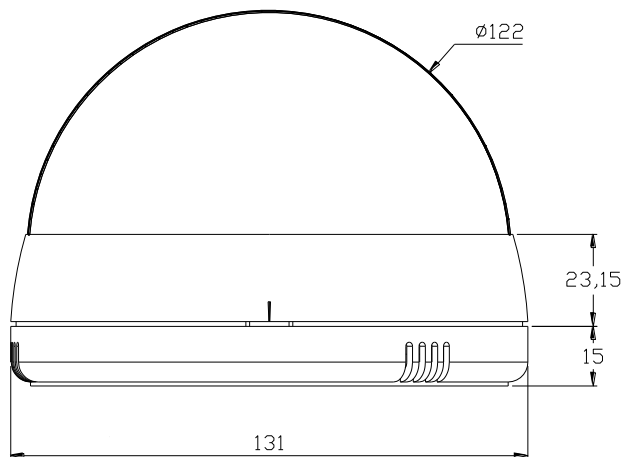


Use the screws to lock the bracket to the wall or ceiling, adjust the angle of lens, and then close the cover.

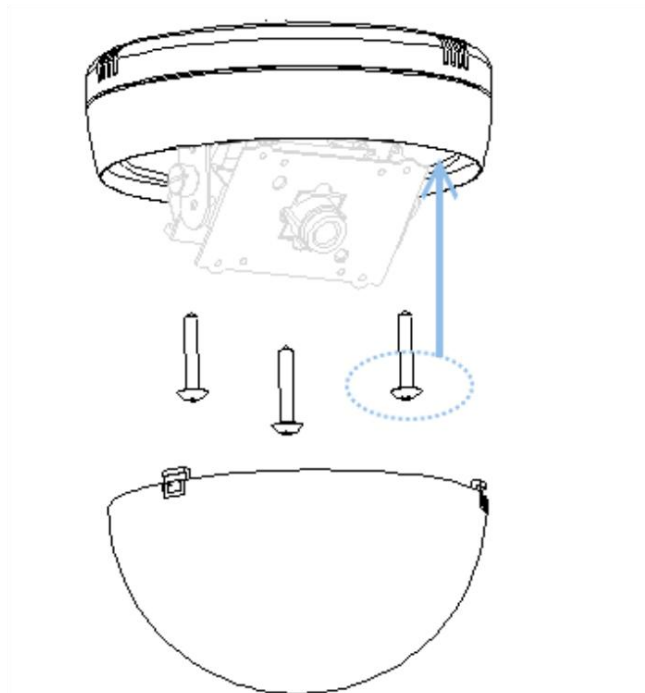


1. Connector Construction

Connect power adaptor, then connect the IP camera to PC or network. Set up the network configurations according to the network environment.

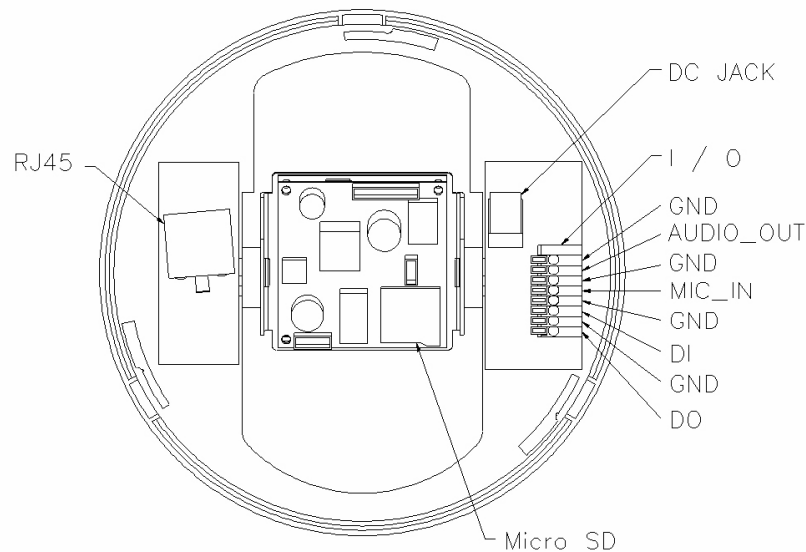

2. PoE (Power Over Ethernet)(Optional) 802.3af, 15.4W PoE Switch is recommended

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It enables power to be provided to a network device, such as an IP phone or a network camera, using the same cable as that used for network connection. It eliminates the need for power outlets at the camera locations and enables easier application of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

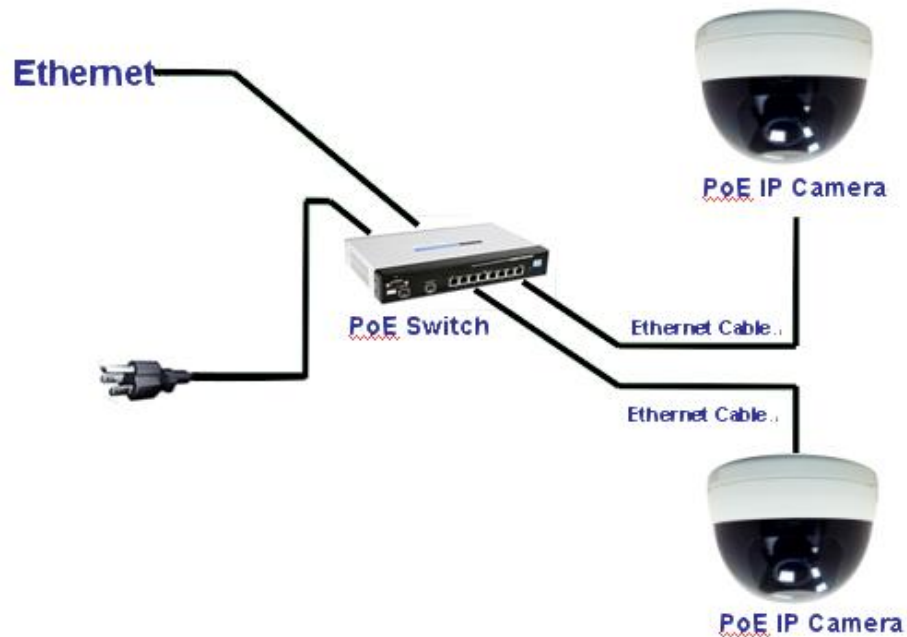


C. IP Assignment

- i. Use the software, "IP Installer" to assign the IP address of IP CAMERA. The software is in the attached software CD.
- ii. IP installer supports two languages
 - a. IPInstallerCht.exe : Chinese version
 - b. IPInstallerEng.exe : English version
- iii. There are 3 kinds of IP configuration.
 - a. Fixed IP (Public IP or Virtual IP)
 - b. DHCP (Dynamic IP)
 - c. Dial-up (PPPoE)
- iv. Execute IP Installer
- v. For Windows XP SP2 user, it may popup the following message box. Please click "Unblock".



vi. IP Installer configuration:

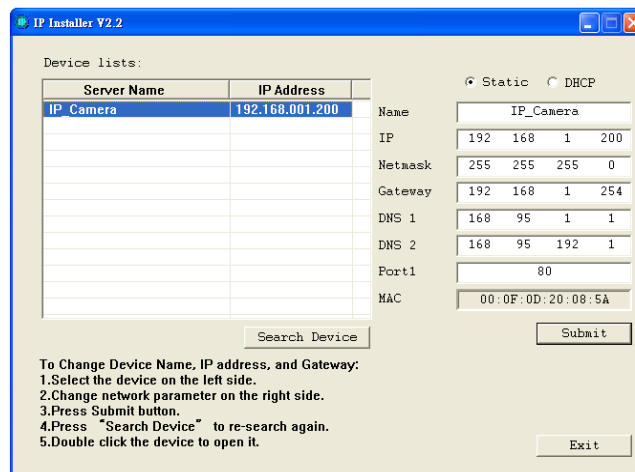

- vii. IP Installer will search all IP Cameras connected on LAN. The user can click "Search Device" to search again.
- viii. Click one of the IP Camera listed on the left side. The network configuration of this IP camera will show on the right side. You may change the "name" of the IP Camera to your preference (e.g.: Office, warehouse). Change the parameter and click "Submit" then click "OK". It will apply the change and reboot the Device.



- ix. Please make sure the subnet of PC IP address and IP CAM IP address are the same.

The same Subnet:

IP CAM IP address: 192.168.1.200

PC IP address: 192.168.1.100

Different Subnets:


IP CAM IP address: 192.168.2.200

PC IP address: 192.168.1.100


To Change the PC IP address:

Control Panel → Network Connections → Local Area Connection Properties → Internet Protocol (TCP/IP) → Properties

Make sure your IP Camera and PC have the same Subnet. If not, change the IP Camera subnet or PC IP subnet accordingly.

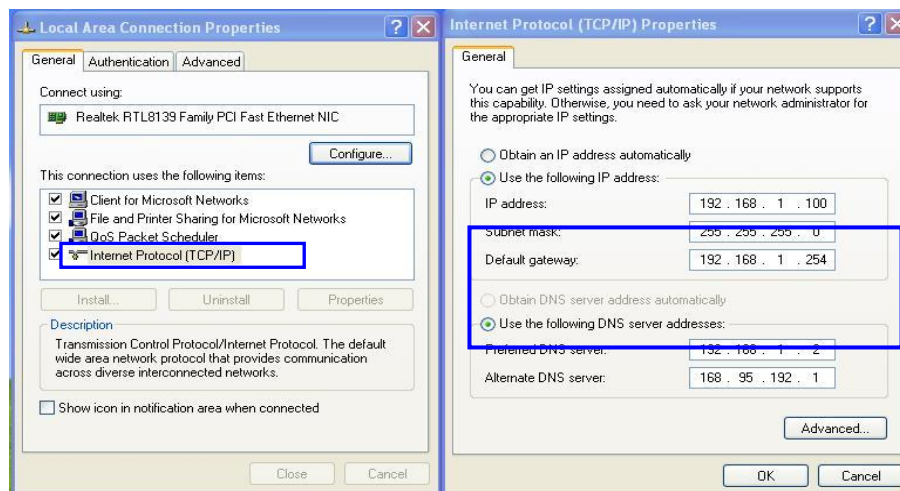

- x. A quick way to access remote monitoring is to left-click the mouse twice on a selected IP Camera listed on “Device list” of the IP Installer. An IE browser will be opened.

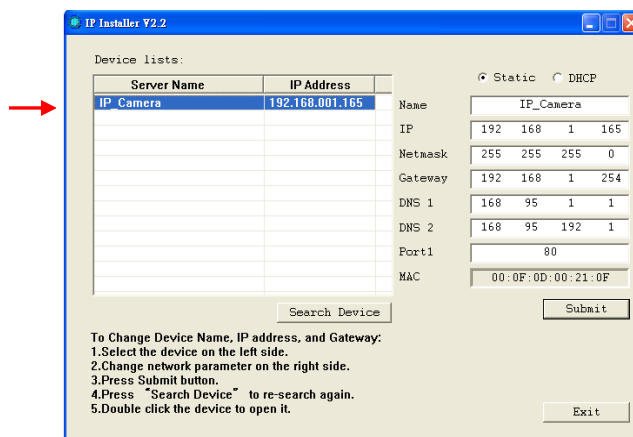


- xi. Then, please key-in the default “user name: admin” and “password: admin”.



D. Install ActiveX control:

1. To users of IE 6.0 above:

At the first time you access the camera via IE, it will ask you to install the ActiveX component. If the installation failed, please check the security setting for the IE browser.

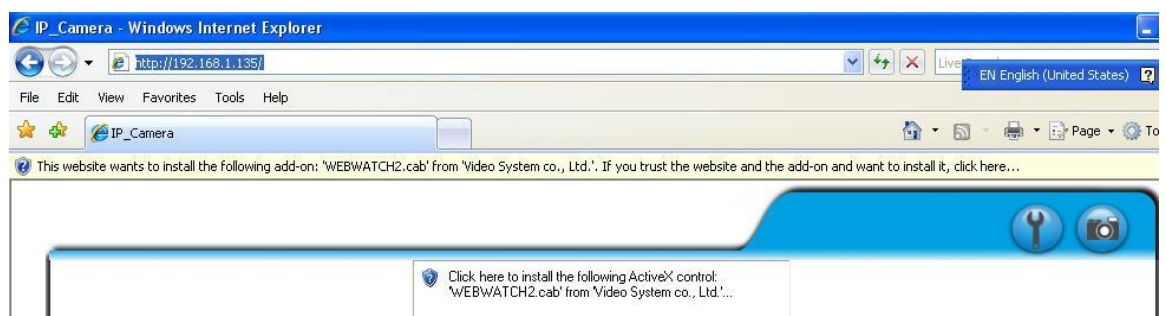


1. If the installation failed, please check the security setting for the IE browser.
 - i. IE → Tools → Internet Options... → Security Tab → Custom Level... → Security Settings → Download unsigned ActiveX controls → Select "Enable" or Prompt.

- ii. IE → Tools → Internet Options... → Security Tab → Custom Level...
 → Initialize and script ActiveX controls not marked as safe → Select
 “Enable” or Prompt.


1




2

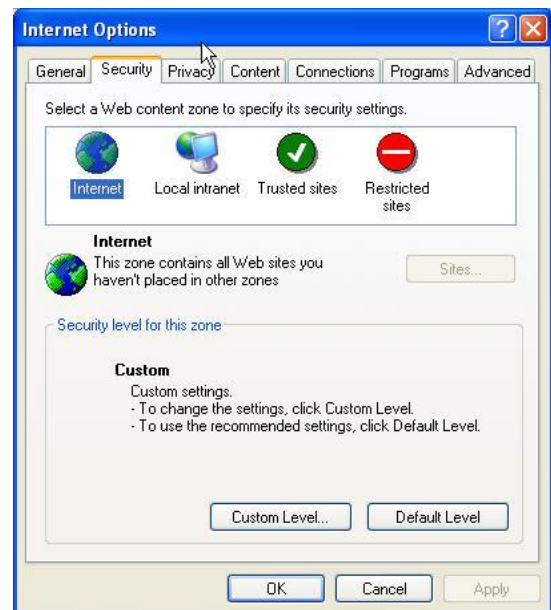


3

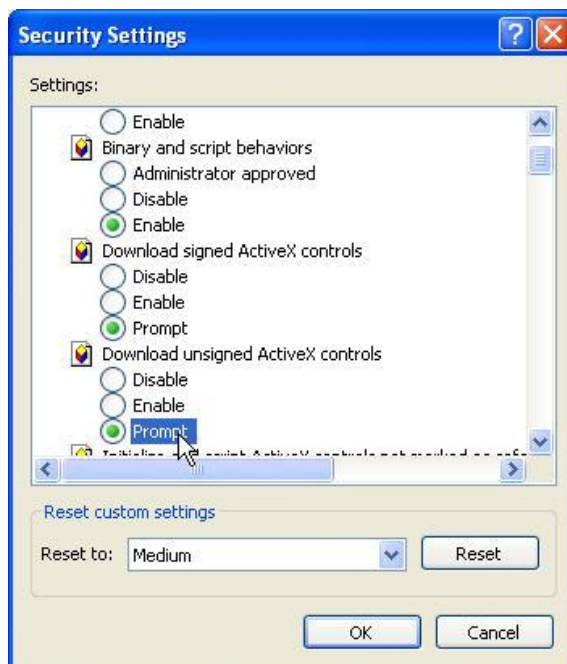

4

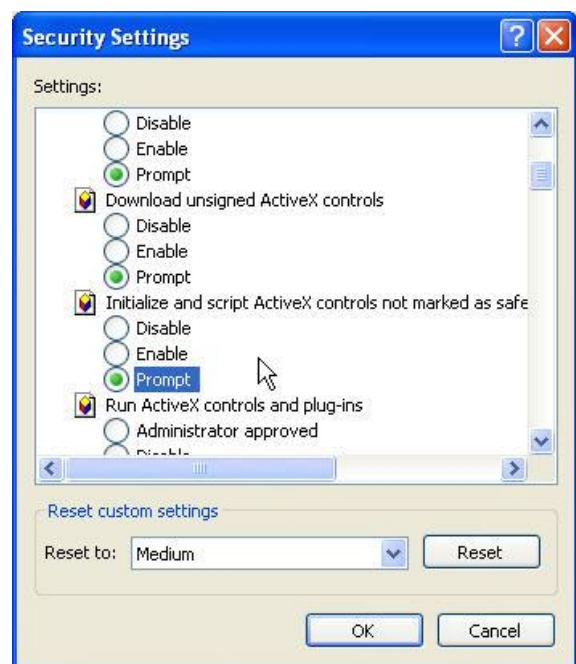


When pops up the following dialogue box, click "Yes".

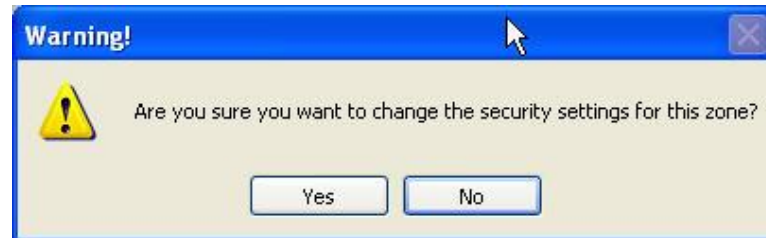

2. You can choose another way:

Go to: IE→Tools → Internet Options... → Security Tab → Trusted sites → Add the IP address and click "OK".

In the site list you can key one single IP address or a LAN address. For example, if you add "192.168.21.*", all the IP address under .21 LAN will be regarded as trusted sites.

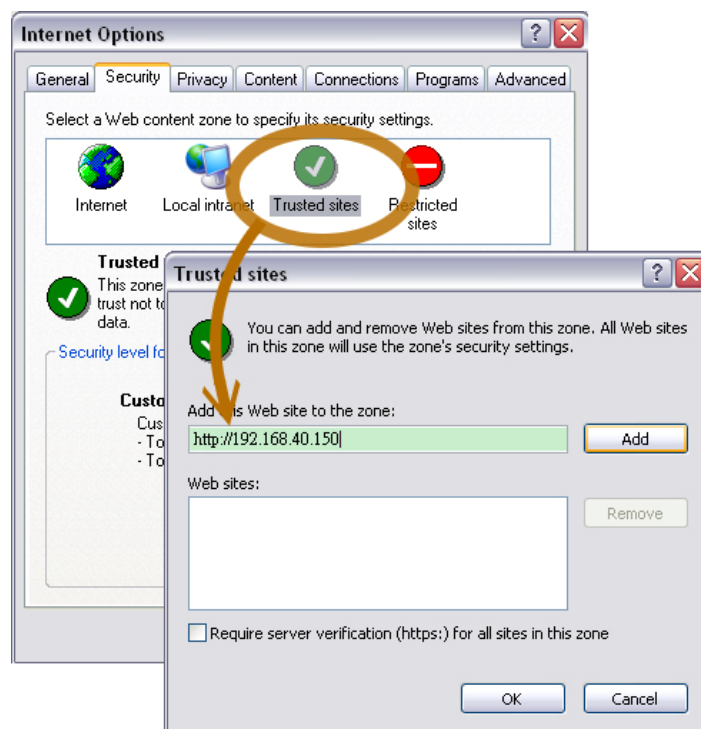


2. Use Non-IE Web Browser

If you use Firefox or Google chrome to access the IP camera but fail to watch the live video, please follow the steps to install necessary tools:


(The following pictures are based on chrome.)

a. You may see the prompt message as the picture below. First, click the link:


"Firstly, please install Microsoft Visual C++ 2010 Redistributable Package (x86)."

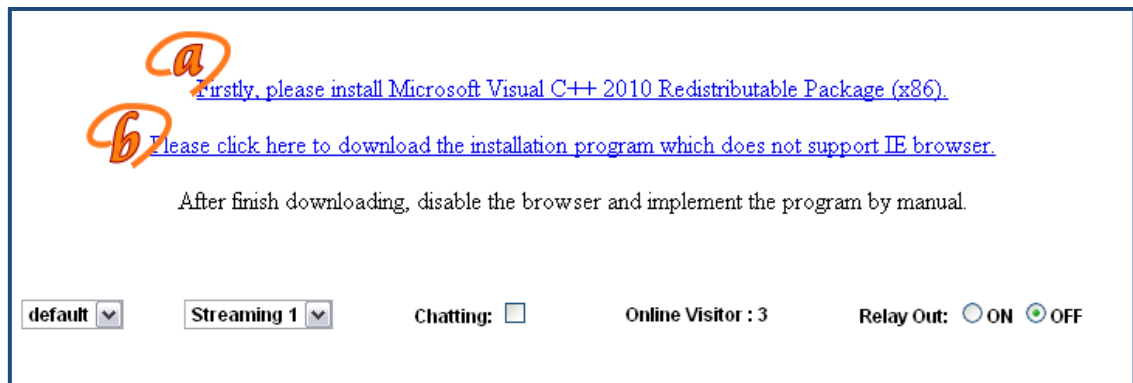

(i) The link conducts you to the Microsoft official site where you can download the tools. Please select the language and click "download".

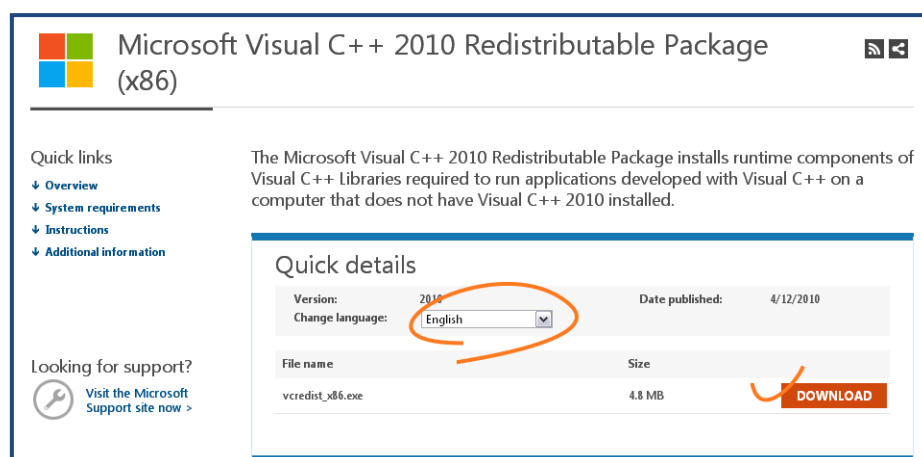


(ii) In the pop-up window, please tick the first and the third file as the picture below. Click "Next" to download both "Microsoft .NET Framework 4 Client Profile (Web Installer)" and "Microsoft Visual C++ 2010 Redistributable Package (x64)".

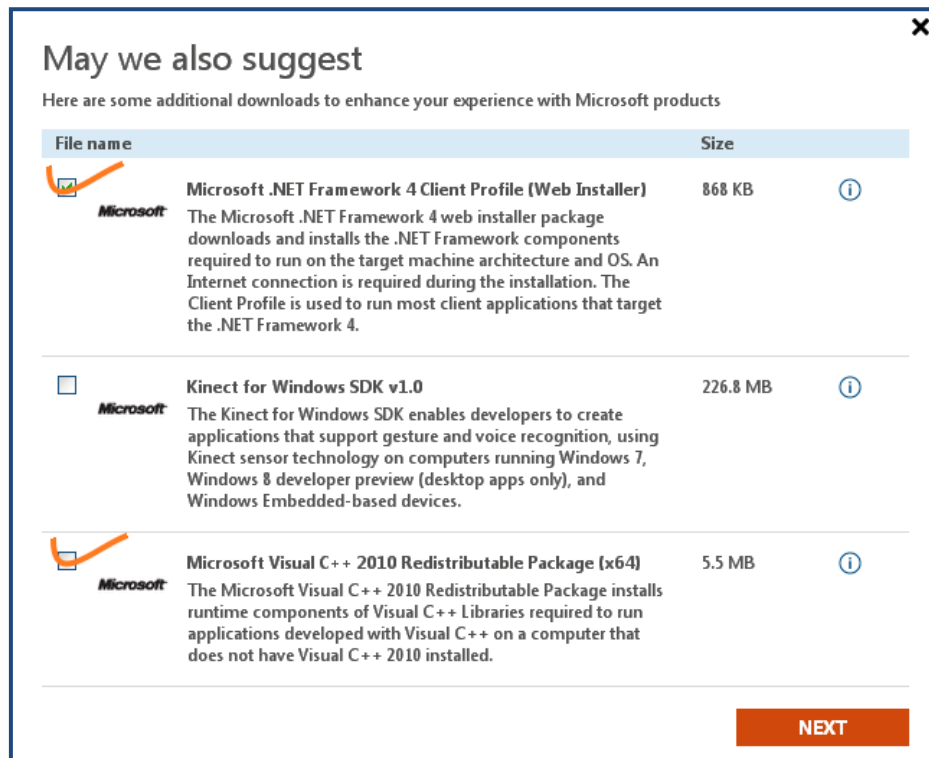

(iii) After finishing downloading, execute the two files respectively to install them. The windows may ask you to reboot the PC when the installation is finished.




b. Then, click the second link "Please click here to download the installation program which does not support IE browser." to download Setup ActiveX.

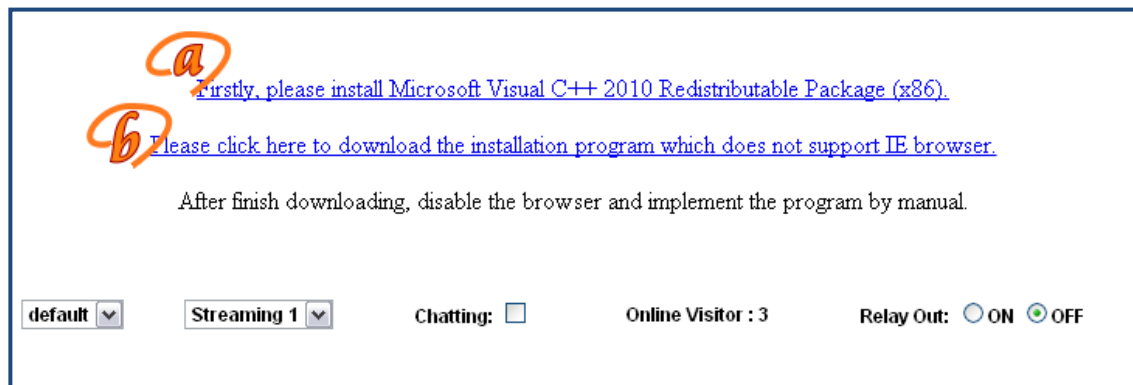


After finishing the downloading, execute the files to install ActiveX. Then restart the browser.

c. If you execute the steps above but still cannot see the live video normally, please try the solution:

(i) Search for the file "np_hoem_x.dll" in your system disk. For Windows XP users, please go to "Start" → "Search" → Search for "All files and folders" and key-in "np_hoem_x.dll". For Windows 7 users, please use the search bar on the top-right of the Windows Explorer.

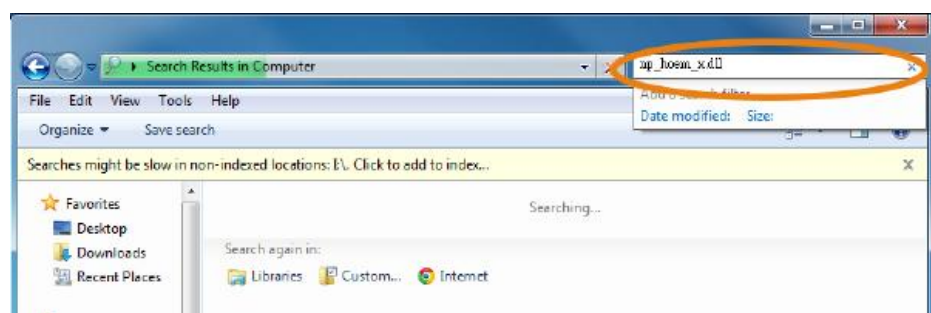

(ii) Delete all the files named "np_hoem_x.dll". They're the ActiveX control tools installed in your computer, but the old version of ActiveX might not compatible with the new version of browser. Therefore, they need to be deleted in order to install the latest ActiveX control.

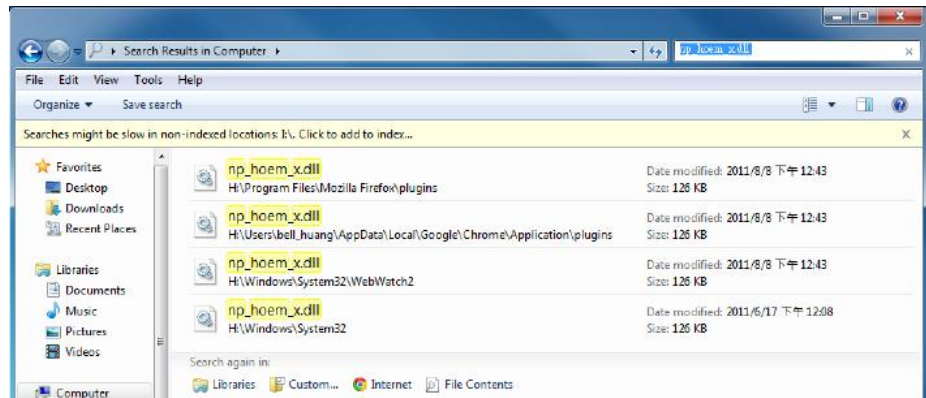

(iii) Start your web browser, and repeat the step 2-b: "Download the installation program which does not support IE browser" to download and install ActiveX.

a [Firstly, please install Microsoft Visual C++ 2010 Redistributable Package \(x86\).](#)

b [Please click here to download the installation program which does not support IE browser.](#)

After finish downloading, disable the browser and implement the program by manual.


default Streaming 1 Chatting: ☐ Online Visitor : 3 Relay Out: ☐ ON ☒ OFF

IV. Live Video

Start an IE browser, type the IP address of the IP camera in the address field. It will show the following dialogue box. Key-in the user name and password. The default user name and password are “**admin**” and “**admin**”.



When the IP Camera is connected successfully, it shows the following program interface.

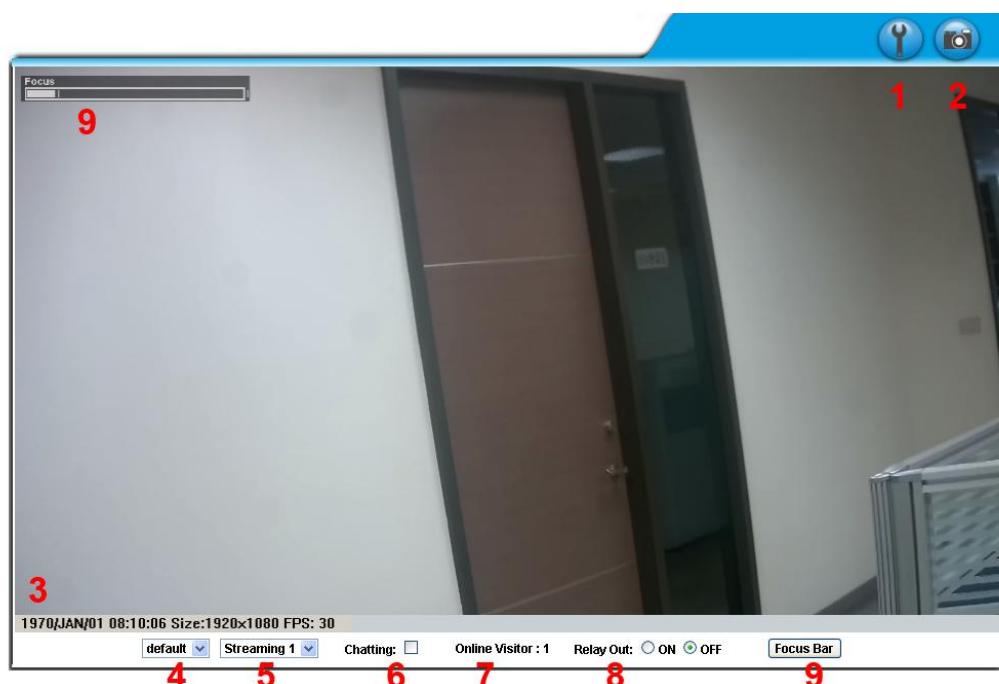


Double-click the video to switch to full screen view. Press “Esc” or double-click the video again back to normal mode.


1. Get into administration page
2. Video Snapshot
3. Show system time, video resolution, and video refreshing rate
4. Adjust image, 1/2x, 1x, 2x
5. Select video streaming source (If in “Video Setting” the streaming 2 setting is closed, this option will not appear here.)
6. IP Camera supports 2-way audio. Click the “Chatting” check box for using a microphone connected to the PC and talk to the Camera side.
7. Show how many people are connected to this IP camera.
8. Tick the Relay out “ON” box to trigger the relay output for testing. Tick “Off” to stop triggering.
9. Focus Bar: For displaying the level of focus of the camera in the top left corner of the screen. If the focus is worse the level of the bar will decrease.

Double-click the video; it will change to full screen mode. Press “Esc” or double-click the video again, it will change back to normal mode.

Right-Click the mouse on the video, it will show a pop-up menu.

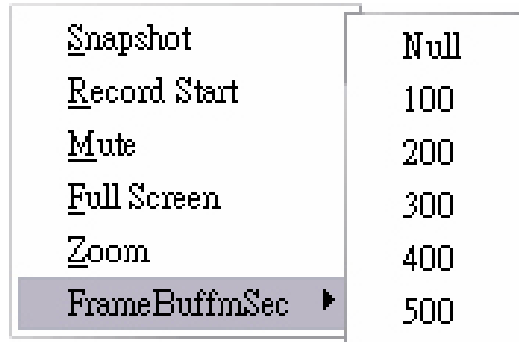

1. Snapshot : Save a JPEG picture
2. Record Start: Record video in the local PC. It will ask you where to save the video. To stop recording, right-click the mouse again. Select “Record Stop”. The video format is AVI. Use Microsoft Media Player to play the recorded file.
3. Mute: Turn off the audio. Click again to turn it on.
4. Full Screen: Full-screen mode.
5. ZOOM: Enable zoom-in and zoom-out functions. Select “Enable digital zoom” option first on the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.

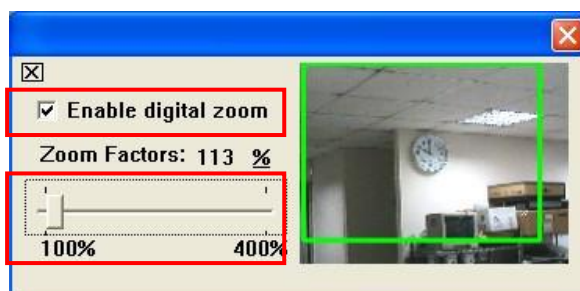

6. Frame Buffm Sec: Build a buffm to accumulate several video frames and play them at regular intervals. This function can keep the video smoothly when the Network speed is slow. If you select “100”, the interval between every frame is fixed to 100 mSec. The slower the Network is, the bigger value should be selected. The default value is null.

V. IP Camera Configuration




Click



to go back to the live

video page.

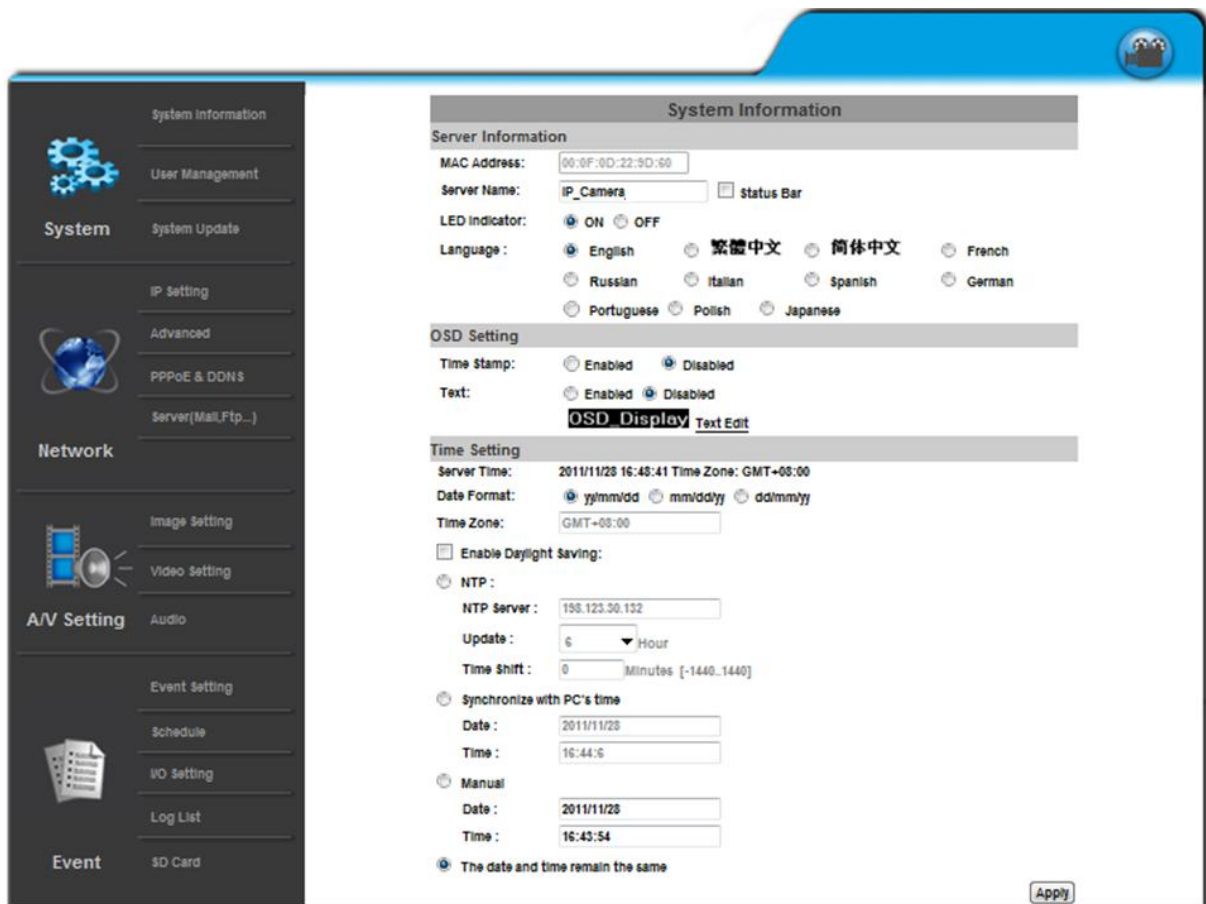

The screenshot displays the IP Camera Configuration web interface. On the left is a dark sidebar with a menu. The main content area is titled 'System Information' and contains several sections: 'Server Information', 'OSD Setting', and 'Time Setting'. The 'Server Information' section includes fields for MAC Address, Server Name, LED Indicator, and Language. The 'OSD Setting' section includes checkboxes for Time Stamp and Text, and a link for OSD Display. The 'Time Setting' section includes fields for Server Time, Date Format, Time Zone, and NTP settings. An 'Apply' button is located at the bottom right of the main content area.

System Information

Server Information

MAC Address: 00:0F:0D:22:3D:50

Server Name: IP_Camera ☐ Status Bar

LED Indicator: ☒ ON ☐ OFF

Language: ☒ English ☐ 繁體中文 ☐ 简体中文 ☐ French
☐ Russian ☐ Italian ☐ Spanish ☐ German
☐ Portuguese ☐ Polish ☐ Japanese

OSD Setting

Time Stamp: ☐ Enabled ☒ Disabled

Text: ☐ Enabled ☒ Disabled

[OSD Display](#) [Text Edit](#)

Time Setting

Server Time: 2011/11/28 16:48:41 Time Zone: GMT+08:00

Date Format: ☒ yy/mm/dd ☐ mm/dd/yy ☐ dd/mm/yy

Time Zone: GMT+08:00

☐ Enable Daylight Saving:

☒ NTP:

NTP Server: 198.123.30.132

Update: 6 Hour

Time Shift: 0 Minutes [-1440..1440]

☒ Synchronize with PC's time

Date: 2011/11/28

Time: 16:44:56

☒ Manual

Date: 2011/11/28

Time: 16:43:54

☒ The date and time remain the same

A. System

i、System Information

- a. **Server Information:** Set up the camera name, select language, and set up the camera time.


1. **Server Name:** This is the Camera name. This name will be shown on the IP Installer.
2. **Select language:** English, Traditional Chinese, and Simplified Chinese can be selected. When it changes, it will show the following dialogue box to confirm the language changing.



- b. **OSD Settings:** Select a position where the date & time stamp / text are shown on the screen.



Click 'Text Edit' to adjust the OSD text contents. Alpha means background transparency of the text. If you select 100%, the text stamp will be directly displayed on the live screen. If you select 0%, the text stamp will be displayed with a black background.

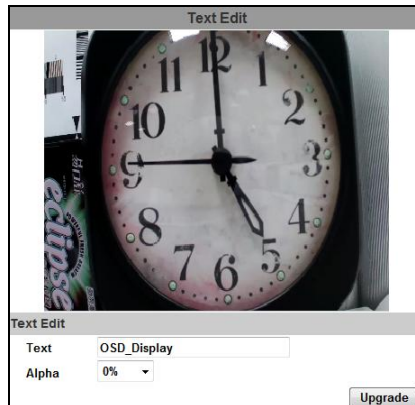

- c. Server time setting: Select options to set up time - “NTP”, “Synchronize with PC’s time”, “Manual”, “The date and time remain the same”.

Time Setting

Server Time: 2011/11/28 18:48:45 Time Zone: GMT+08:00
Date Format: ☒ yy/mm/dd ☐ mm/dd/yy ☐ dd/mm/yy
Time Zone: GMT+08:00
☒ Enable Daylight Saving:

	Month	Week	Day of Week	Time
DST Start:	Mar	2nd	Sun	12 am
DST End:	Nov	1st	Sat	12 am

☐ NTP :
NTP Server : 198.123.30.132
Update : 6 Hour
Time Shift : 0 Minutes [-1440..1440]
☐ Synchronize with PC's time
Date : 2011/11/28
Time : 18:44:11
☐ Manual
Date : 2011/11/28
Time : 18:43:47
☒ The date and time remain the same

User Management

Anonymous User Login

☐ YES ☒ NO

Universal Password (differs by IP Address)

☐ YES ☒ NO [Setting](#)

Add User

Username:

Password:

Confirm:

[Add/Set](#)

User List

Username	User Group	Modify	Remove
admin	Administrator	Edit	-----
as	Guest	Edit	Remove

ii 、 User Management

The IP Camera supports three different users: administrator, general user and anonymous user.

a. Anonymous User Login:

Select “Yes” for allowing everybody to watch live video without needing a username and password. However, if you try to enter the configuration page the camera will ask to key-in username and password.

Select "No" for requiring a username and login to access the camera.

b. Universal Password:


Select “Yes” for allowing login to this IP Cam by universal password.

Select “No” for disabling universal password.

c. Add user:


Type the user name and password, then click “Add/Set”. The guest user can only browse live video page and is not allowed to enter the configuration page.

d. Click “edit” or “delete” in the user list to modify them. The system will ask you to key-in the password in the pop-up window before you edit the user information.

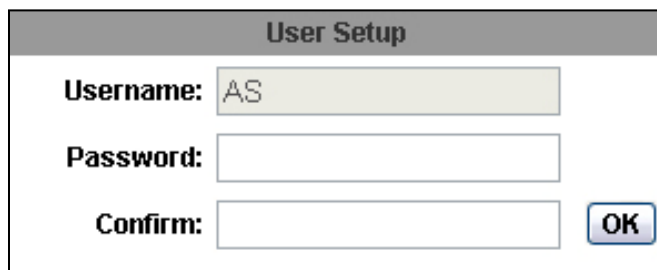

The 'User Setup' dialog box contains three input fields: 'Username' with the text 'AS', 'Password', and 'Confirm'. An 'OK' button is located to the right of the 'Confirm' field.

iii 、 System update :

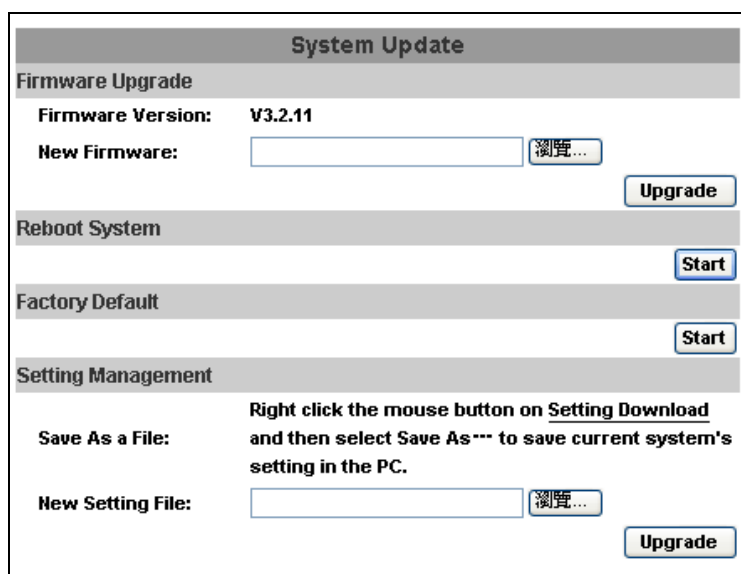

The 'System Update' dialog box is divided into four sections: 'Firmware Upgrade' with 'Firmware Version: V3.2.11' and a 'New Firmware' field with a '浏览...' button and an 'Upgrade' button; 'Reboot System' with a 'Start' button; 'Factory Default' with a 'Start' button; and 'Setting Management' with a 'Save As a File' section containing a note: 'Right click the mouse button on Setting Download and then select Save As... to save current system's setting in the PC.', a 'New Setting File' field with a '浏览...' button, and an 'Upgrade' button.

- a. To update the firmware online, click “Browse...” to select the firmware. Then click “Upgrade” to proceed.
- b. Reboot system: re-start the IP camera
- c. Factory default: delete all the settings in this IP camera.
- d. Setting Management: The user may download the current settings to PC, or upgrade from previous saved settings.

1. Settings download:

Right-click the mouse button on Setting Download → Select “Save AS...” to save current IP Camera settings in PC → Select saving directory → Save

2. Upgrade from previous settings

Browse → search previous settings → open → upgrade → Settings update confirm → click [index.html](#) for returning to main page

B. Network

i、 IP Settings

IP Assignment

The IP Camera supports DHCP and static IP.

IP Setting	
IP Assignment	
☐ DHCP	
☒ Static	
IP Address:	192.168.1.200
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.254
DNS 0:	168.95.1.1
DNS 1:	168.95.192.1

- a. DHCP: The IP Camera will get all the network parameters automatically.
- b. Static IP: Type-in the IP address subnet mask, gateway, and DNS manually.


IPv6 Assignment

IPv6 Assignment
☒ IPv6 Enabled:
☒ Manually setup the IPv6 address:
IPv6 Address/Prefix: /
IPv6 Gateway:
IPv6 DNS:
DHCPv6: ☐ Enabled ☒ Disabled
IPv6 Address:
fe80::20f:dff:fe00:284d

You can manually key in IPv6 address, enable DHCPv6, and use automatically generated IPv6 address simultaneously.

- Manually setup the IPv6 address: Key in Address, Gateway, and DNS.
- DHCPv6: If you have a DHCPv6 server, enable it to assign the IPv6 automatically. The assigned IP address will be displayed beside the column.
- Automatically generated IPv6 Address: Indicates a virtual IPv6 address generated automatically by the IP camera. This virtual IPv6 address cannot be used on WAN.

To use IPv6 address to access the IP camera, open the web browser, and key-in the [IPv6 address] in the address bar. The [] parentheses mark is necessary.

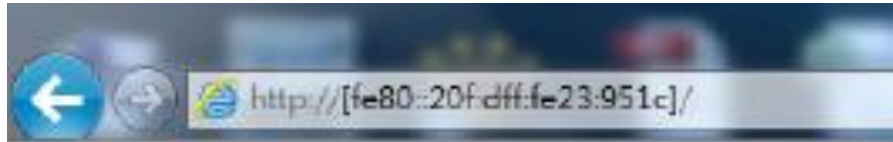

- c. Port Assignment: The user may need to assign different port to avoid conflicts when setting up the IP.

Port Assignment	
Web Page Port:	80
HTTPS Port:	443

HTTPS Setting

1. Web Page Port: setup web page connecting port and video transmitting port (Default: 80)
2. HTTPs Port: setup the https port(Default: 443)

UPnP

UPnP	
UPnP:	☒ Enabled ☐ Disabled
UPnP Port Forwarding:	☐ Enabled ☒ Disabled
External Web Port:	80
External HTTPS Port:	443
External RTSP Port:	554

This IP camera supports UPnP, if this service is enabled on your computer, the camera will automatically be detected and a new icon will be added to “My Network Places.”

UPnP Port Forwarding : Enable UPnP Port Forwarding for accessing the IP Camera from the Internet; this option allows the IP Cam to open ports on the router automatically so that video streams can be sent out from a LAN. There are three external ports for being set: Web Port, Http Port and RTSP port. To utilize of this feature, make sure that your router supports UPnP and is activated.

Note: *UPnP must be enabled on your computer.*


Please follow the procedure to activate UPnP:

<Approach 1>


1. open the **Control Panel** from the **Start Menu**
2. Select **Add/Remove Programs**
3. Select **Add/Remove Windows Components** and open **Networking Services** section
4. Click **Details** and select **UPnP** to setup the service
5. The IP device icon will be added to “MY Network Places”
6. The user may double click the IP device icon to access IE browser

<Approach 2>

1. Open "My Network Space"
2. Click "Show icons for networked UPnP devices" in the tasks column on the left of the page.
3. Windows may ask your confirmation for enabling the components. Click "Yes".

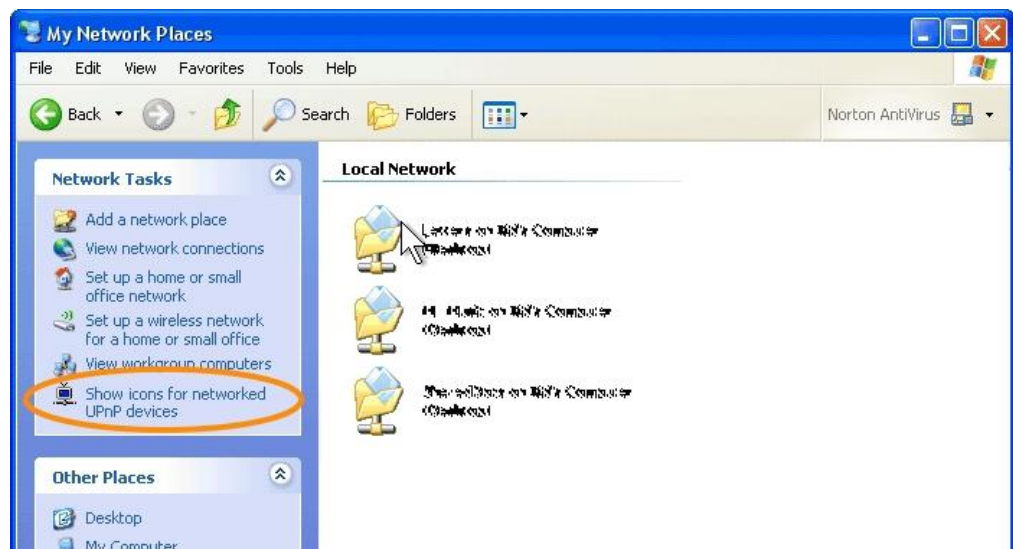

4. Now the IP device is displayed under the LAN. Double-click the icon to access the camera via web browser. To disable the UPnP, click "Hide icons for networked UPnP devices" in the tasks column.

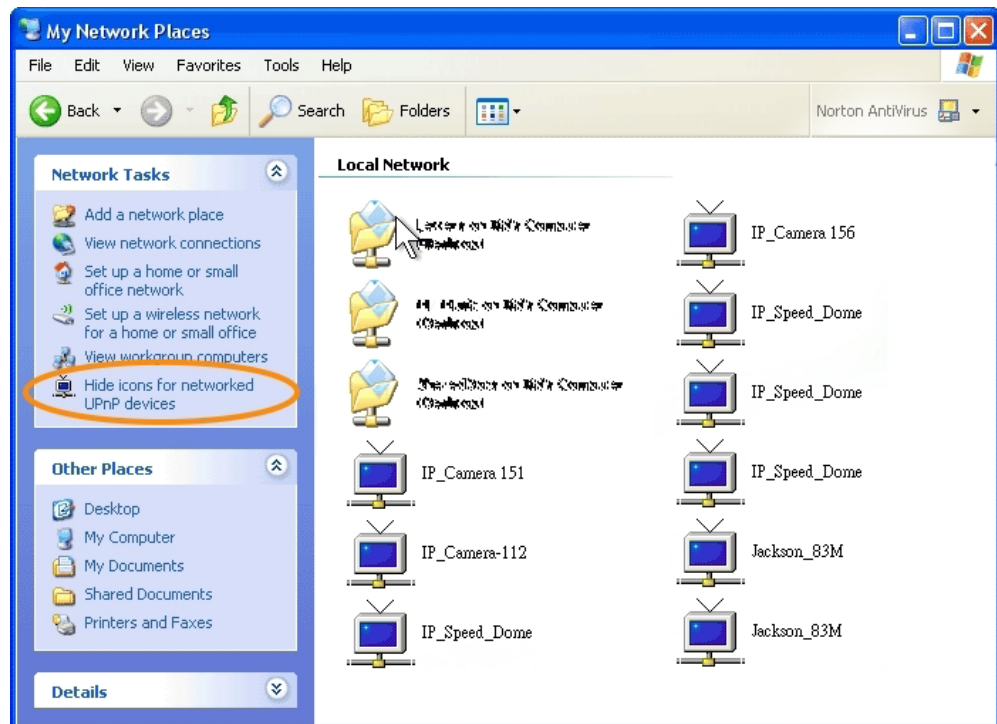

RTSP setting

RTSP Setting		
RTSP Server:	☒ Enabled ☐ Disabled	
RTSP Authentication:	Disable ▼	
RTSP Port :	554	
RTP Start Port:	5000	[1024..9997]
RTP End port:	9000	[1027..10000]

If you have a media player that supports RTSP protocol, you can use it to receive the video streaming from IP camera. The RTSP address can be set for two streamings respectively. Please jump to

1. RTSP Server: enable or disable

"Disable" means everyone who knows your camera IP Address can link to your camera via RTSP. No username and password are required.

Under "Basic" and "Digest" authentication mode, the camera asks the user to give username and password before allows access.

The password is transmitted as a clear text under basic mode, which provides a lower level of security than under "digest" mode.

Make sure your media player supports the authentication schemes.

2. RTSP Port: setup port for RTSP transmitting (Default: 554)
3. RTP Start and End Port: in RTSP mode, you may use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start and End Port.

Multicast Setting (Based on the RTSP Server)

Multicast Setting (Based on the RTSP Server)		
Streaming 1:		
IP Address:	234.5.6.78	[224.3.1.0 ~ 239.255.255.255]
Port:	6000	[1 ~ 65535]
TTL:	15	[1 ~ 255]
Streaming 2:		
IP Address:	234.5.6.79	[224.3.1.0 ~ 239.255.255.255]
Port:	6001	[1 ~ 65535]
TTL:	15	[1 ~ 255]

Multicast is a bandwidth conservation technology. This function allows several users to share the same packet sent from the IP camera.

For using Multicast, appoint here an IP Address and port. TTL means the life time of packet, the larger the value is, the more users

can receive the packet.

For using Multicast, be sure to enable the function "Force Multicast RTP via RTSP" in your media player. Then key in the RTSP path of your camera: "rtsp://(IP address)/" to receive the multicast.

ONVIF

ONVIF		
ONVIF:	☒ v2.10/v1.02	☐ v1.01 ☐ Disabled
Security:	☐ Enabled	☒ Disabled
RTSP Keepalive:	☒ Enabled	☐ Disabled

1. Choose your ONVIF version and settings.

Under ONVIF connection, the video will be transmitted by RTSP. Be sure to enable the RTSP server in IP setting, otherwise the IP Cameras will not be able to receive the video via ONVIF.

2. Security

By selecting "Disable", the username and password are not required for accessing the camera via ONVIF. By selecting "Enable" the username and password are necessary.

3. RTSP Keepalive:

When the function is enabled, the camera checks once in a while if the user who is connected to the camera via ONVIF is still connected. If the connection has been broken, the camera will stop transmitting video to the user.


Bonjour

Bonjour		
Bonjour:	☐ Enabled	☒ Disabled
Bonjour Name:	IP_Camera	@00:0F:0D:00:28:4D

This function allows MAC systems to connect to this IP camera.
On "Bonjour Name" Key-in the name here.

The web browser "Safari" also has a Bonjour function. Tick "Include Bonjour" in the bookmark setting, for the IP camera to appear under the bonjour category. Click the icon to connect to the IP camera.

So far the Bonjour function on Safari browser doesn't support HTTPS protocol. If on the camera you select "https", the camera will appear on Safari's bookmarks but it cannot be accessed.

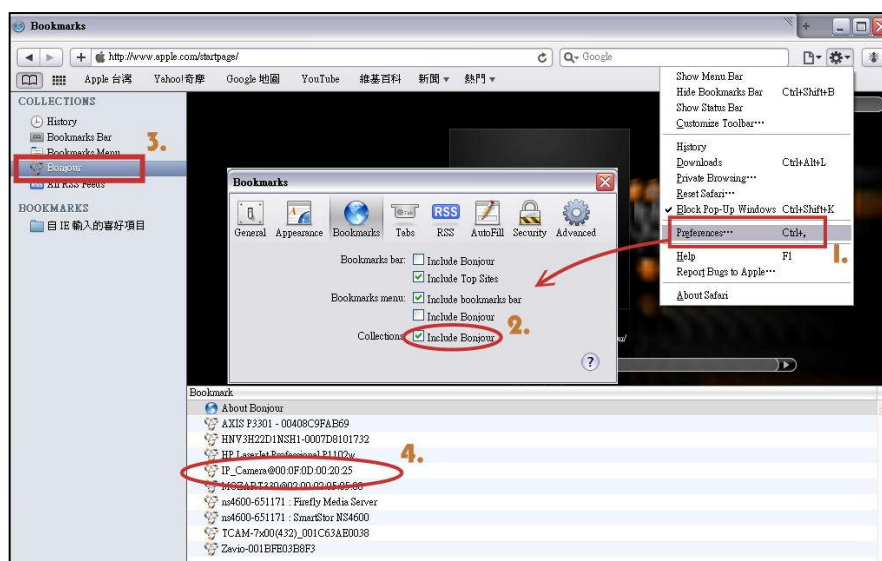


LLTD

LLTD (Link Layer Topology Discovery)	
LLTD:	☒ Enabled ☐ Disabled

If your PC supports LLTD, enable this function for allowing to check the connection status, properties, and device location (IP address) in the network map.

If the computer is running Windows Vista or Windows 7, you can find LLTD through the path:


Control Panel → Network and Internet → Network and Sharing Center → Click "See full map".

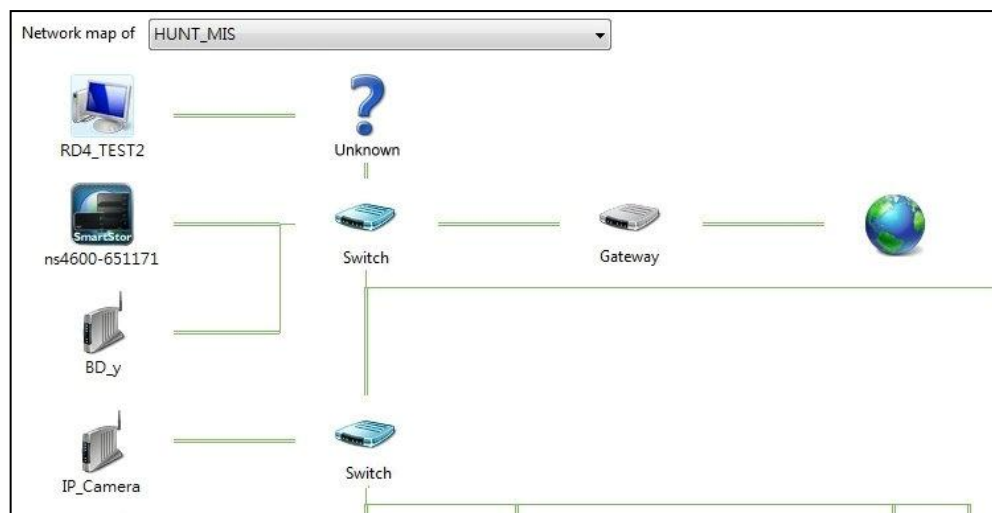

ii 、 Advanced:

a. Https (Hypertext Transfer Protocol Secure)

When the users access cameras via Https protocol, the transmitted information will be encrypted so that the security level is arisen.

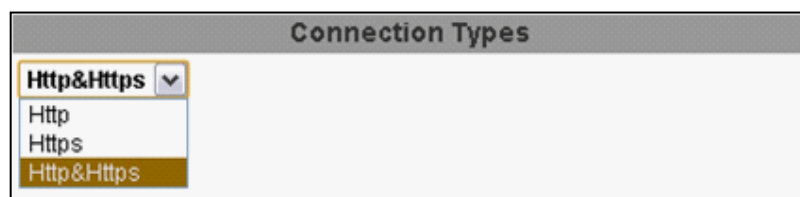


You can select the connection type.

- Http: the user can access the camera via the Http path but cannot access it via the Https path.
- Https: the user can access the camera via the Https path but cannot access it via the Http path.
- Http & Https: Both the Http and Https path can be used to access the camera. When you change the connection type settings, it may cause connection error or disconnection error if you switch the protocol directly. Therefore, Http & Https mode is necessary.

If you want to change from Http to Https, please switch to “Http & Https” mode first, and then switch to “Https” mode and vice versa.

The Https protocol has certificate verifying mechanism. When the user access a website via Https, the browser will check the certificate of that domain and verify its trustiness and secure.

Certificate generation process:

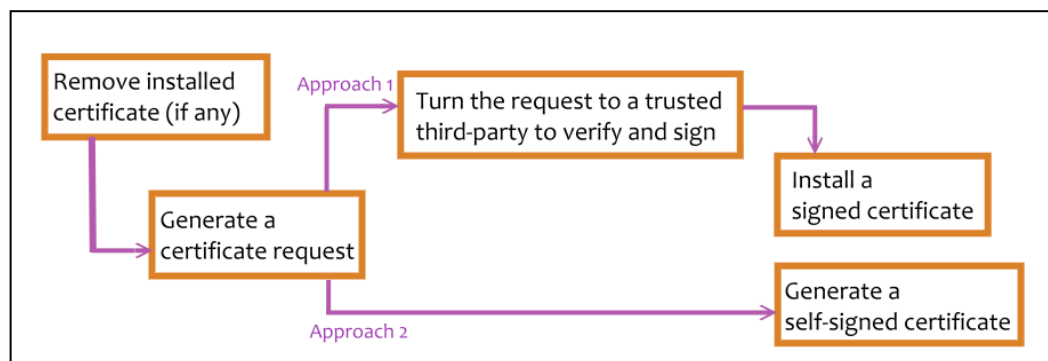

- Remove the existing certificate: Before you generate a new certificate, please remove the installed one. Select "Http" connection type and click "Remove". If a dialog box pops up to ask you to confirm, click “Yes”.

The screenshot shows the 'Https Setting' interface. It has two main sections: 'Created Request' and 'Installed Certificate'. Each section contains a 'Subject' field with the value 'C=TW , ST= , L= , O= , OU= , CN=' and a 'Date' field. Below each section are 'Content' and 'Remove' buttons. The 'Remove' buttons in both sections are highlighted with red boxes. At the bottom, there is a 'Connection Types' section with a dropdown menu currently set to 'Http'.

- Created Request: Fill-in the following form and click “apply”.

The screenshot shows the 'Https Setting' interface with the 'Create Request' section. It contains six input fields: 'Country:', 'State or province:', 'Locality:', 'Organization:', 'Organizational Unit:', and 'Common Name:'. An 'Apply' button is located at the bottom right of the form.

- After generating a certificate request, if you choose to turn it and verified by a trusted third-party, click “Content” and copy all the request content.

Created Request Subject: C=TW, ST=, L=, O=, OU=, CN= Date: 2012/Sep/25 08:49:23 Content Remove	Certificate Request: Data: Version: 0 (0x0) Subject: C=TW Subject Public Key Info: Public Key Algorithm: rsaEncryption Public-Key: (1024 bit) Modulus: 00:b8:cb:17:f7:b6:14:5d:92:99:ae:73:52:7c 09:2a:ad:a6:50:39:5a:3c:09:10:15:85:ad:30 cc:e0:b2:7c:29:3e:d1:e7:15:c4:f2:4f:de:a6 98:f8:71:53:a3:43:0b:2c:1a:20:94:32:76:b3 72:c8:bc:87:35:3f:c7:fe:17:8f:c3:1f:2d:ak 33:3c:9a:28:3b:31:46:d8:c7:26:37:af:fb:5c aa:b0:a1:75:6a:f9:02:ca:c9:be:49:c9:2a:74 cb:b0:95:1e:63:89:f6:07:6c:cf:1c:5b:38:4e 29:a8:55:82:92:95:bc:74:15 Exponent: 65537 (0x10001) Attributes: a0:00 Signature Algorithm: sha1WithRSAEncryption 9b:4c:13:01:cc:10:2a:bc:3c:22:f2:10:e7:48:19:52:98:5e c9:ae:5a:f4:76:cb:7d:f8:6c:21:e3:a5:9b:45:60:2a:ba:73 23:ce:7a:90:9c:90:b5:a7:41:36:2c:c4:f4:34:55:e5:d0:92 9d:32:d3:e4:2b:d1:04:7c:58:9c:64:4d:38:e3:a6:73:a0:a5
--	---


- According to the certificate source, there are two ways to install the certificate:

If you had sent the certificate request for signing and receiving a signed certificate, click "browse" and find the certificate file in your computer. Click "Apply" to install it.


If you choose to generate a self-signed certificate, fill-in the following forms and set the validity day, click "Apply" to finish installed it.

Install Signed Certificate	
Signed Certificate:	...
Apply	
Create Self-Signed Certificate	
Country:	
State or province:	
Locality:	
Organization:	
Organizational Unit:	
Common Name:	
Validity:	Days
Apply	

After finishing the installation, you can click “Content” to call out and check the certificate content.

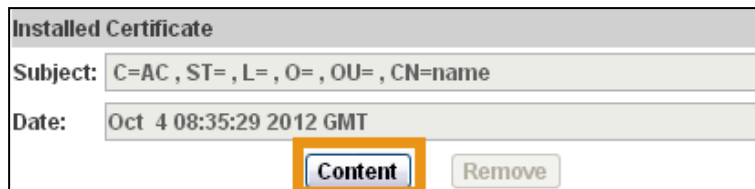

- To use Https to access the camera, open your browser, and key-in "https:// (IP address)/" in the address bar. Now your data will be transmitted via encrypted communications. The browser will check your certificate status. It might show the following warning message:

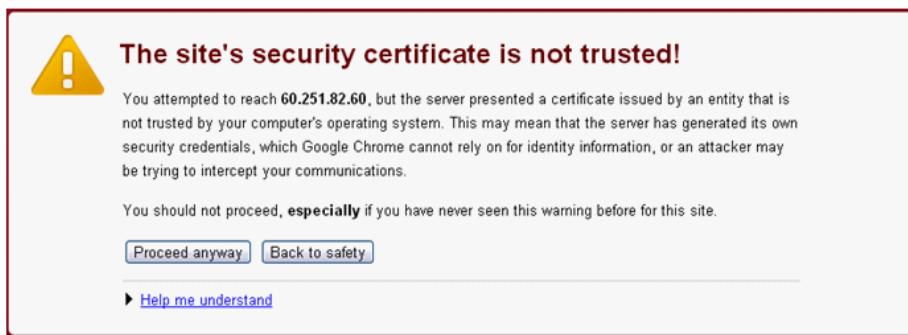

Meaning that certificate is self-signed or signed by a distrusted institution. Click “Proceed anyway” and for continuing to the camera page.

b. SNMP (Simple Network Management Protocol):

1. Enable SNMPv1 or SNMPv2 and write the name of both Write Community and Read Community.

SNMP	
SNMP Setting	
☐ SNMPv1	☒ SNMPv2c
Write Community:	write
Read Community:	public

2. Enable SNMPv3. Set Security Name, Authentication Type, Authentication Password, Encryption Type, Encryption Password of Write mode and Read mode.

☒ SNMPv3	
Write Security Name:	write
Authentication Type:	☒ MD5 ☐ SHA
Authentication Password:	
Encryption Type:	☒ DES ☐ AES
Encryption Password:	
Read Security Name:	public
Authentication Type:	☒ MD5 ☐ SHA
Authentication Password:	
Encryption Type:	☒ DES ☐ AES
Encryption Password:	

3. Enable SNMPv1/SNMPv2 Trap for detecting the Trap server.
Please set what event needs to be detected.

☐ **SNMPv1/v2c Trap**

Trap Address:

Trap Community:

Trap Event: ☐ Cold Start ☐ Warm Start ☐ Link Up
☐ Authentication Failed ☐ SD Detect

- Cold Start: The camera starts up or reboots.
- Setting changed: The SNMP settings has been changed.
- Network Disconnected: The network connection was broken down. (The camera will send trap messages after the network is connected again)
- V3 Authentication Failed: A SNMPv3 user account tries to get authentication but failed. (Due to incorrect password or community)
- SD Insert / Remove: A Micro SD card is inserted or removed.

c. Access list:

"Enable IP address filter" for setting the IP address which allows or denies this camera. There are two options, single and range.

IP FILTER

IP ADDRESS FILTER Setting

☒ Enable ip address filter

IPv4 Setting:

☒ allow ☐ deny

single
 single
 range

address:

IPv4 List:

No.	IP Address	Filter	Action
1			remove
2			remove
3			remove
4			remove
5			remove
6			remove
7			remove
8			remove
9			remove
10			remove

☐ Allow admin ip address always access this device
 Admin ip address:

b. QoS/DSCP(Quality of Server/Differentiated Services Code-point):

DSCP specifies a simple mechanism for classifying and managing network traffic and provide QoS on IP networks. DSCP is a 6-bit in the IP header for packet classification purpose. Please define it for Live Stream, Event / Alarm and Management.

QoS/DSCP

QoS/DSCP Setting

☒ Enable QoS/DSCP

Live Stream: (0~63)


Event / Alarm: (0~63)

Management: (0~63)

c. IEEE 802.1x:

IEEE 802.1x is an IEEE standard for port-based Network Access Control. It provides an authentication mechanism to a device on a LAN or WLAN.


The EAPOL protocol support service identification and optional point to point encryption over the local LAN segment.

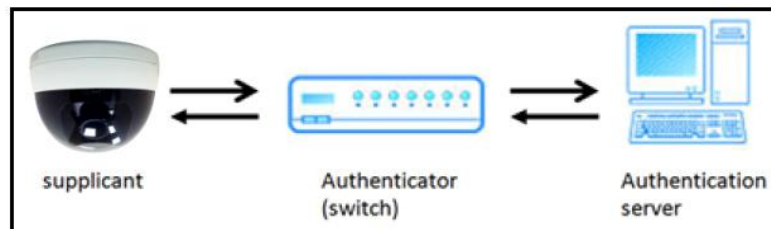

Please check what version of the authenticator and authentication server is supported. This camera supports EAP-TLS method. Please enter the ID, password issued by the CA, then upload related certificates.

IEEE 802.1x/EAP-TLS	
IEEE 802.1x Setting	
☐ Enable IEEE 802.1x	
Eapol version:	☒ v1 ☐ v2
Identity:	
Private key password:	
Apply	
CA certificate:	Upload 浏览...
Status:	Remove
Client certificate:	Upload 浏览...
Status:	Remove
Client private key:	Upload 浏览...
Status:	Remove

iii 、 PPPoE & DDNS:

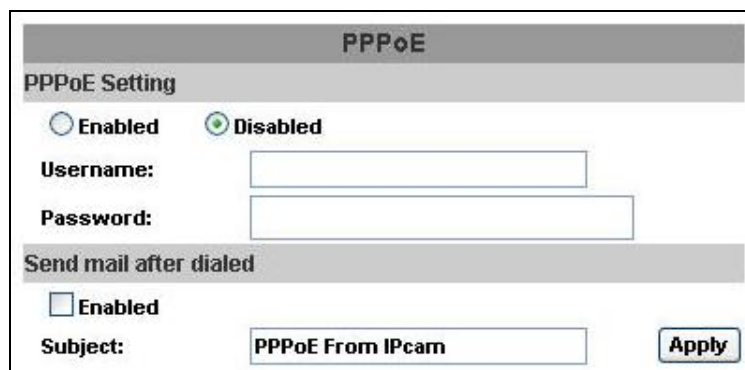

PPPoE

PPPoE Setting

☐ Enabled ☒ Disabled

Username:

Password:

Send mail after dialed

☐ Enabled


Subject:

- a. PPPoE: Select “Enabled” to use PPPoE. Key-in Username and password for ADSL connection. Send mail after dialed: When connect to the internet, it will send a mail to a specific mail account. For mail setting, please refer to “Mail and FTP” settings.

b. DDNS:

It supports DDNS (Dynamic DNS) service.

1. DynDNS:

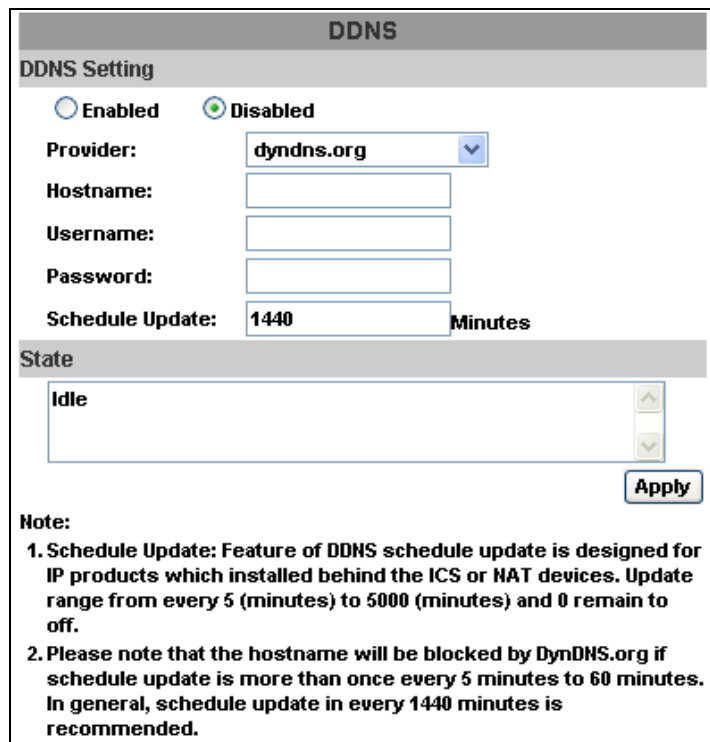

DDNS

DDNS Setting

☐ Enabled ☒ Disabled

Provider: dyndns.org

Hostname:

Username:

Password:

Schedule Update: Minutes

State

Idle

Apply

Note:

1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.

2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

- (1) Enable this service
- (2) Key-in the DynDNS server name, user name, and password.
- (3) Set up the IP Schedule update refreshing rate.
- (4) Click “Apply”
- (5) If the schedule update is too frequently, the IP may be blocked. In general, schedule update every day (1440

minutes) is recommended

2. Camddns service:

DDNS

DDNS Setting

☐ Enabled ☒ Disabled

Provider: ddns.camddns.com

Username:

Schedule Update: 1440 Minutes

State

Idle

Apply

Note:
1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.
2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

1. Please enable this service
2. Key-in user name.
3. IP schedule update default at 5 minutes
4. Click "Apply".
3. DDNS Status

(1) Updating: Information update

(2) Idle: Stop service

- (3) DDNS registration successful, can now log by <http://<username>.ddns.camddns.com>: Register successfully.
- (4) Update Failed, the name is already registered: The user name has already been used. Please change it.
- (5) Update Failed; please check your internet connection: Network connection failed.
- (6) Update Failed, please check the account information you provided: The server, user name, and password may be wrong.

iv, Server settings

There are three choices of server types available: Email, FTP and SAMBA. Select the item for display detailed configuration options. You can configure either one or all of them.

To send out the video via mail of FTP, please set up the configuration first.

Server Settings	
<u>Mail Setting</u>	
Login Method:	Account ▾
Mail Server:	
Username:	
Password:	
Sender's Mail:	
Receiver's Mail:	
Bcc Mail:	
Mail Port:	25 (Default 25)
☐ Secure Connect:	☒ TLS ☐ SSL
Test	
<u>FTP Setting</u>	
<u>Samba (Network storage)</u>	
Apply	


FTP

To send out the video via mail of FTP, please set up the configuration first.

FTP Setting	
FTP Server:	
Username:	
Password:	
Port:	21
Path:	/
Mode:	PORT ▾
Create the folder:	Yes ▾ (ex:Path/20100115/121032m.avi)
Test	

Samba

Select this option to send the media files via a neighbor network when an event is triggered.

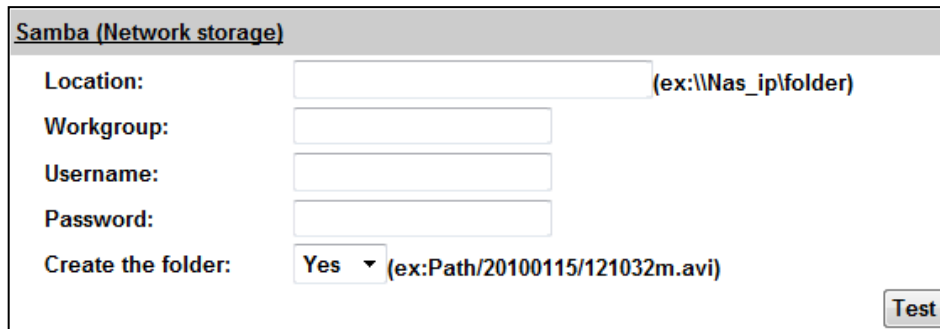

Samba (Network storage)

Location: (ex: \\Nas_ip\folder)

Workgroup:

Username:


Password:

Create the folder: ☐ Yes ☐ No (ex: Path/20100115/121032m.avi)

Test


Click “Apply” to save the setting, then use “Test” button to test the server connection. A message box will tell you “OK!” if it works, and a test document will be created in the location.

If the test failed, check the sharing setting of your location folder. The folder properties must be “shared” and the permissions must be “Full Control” as the picture.

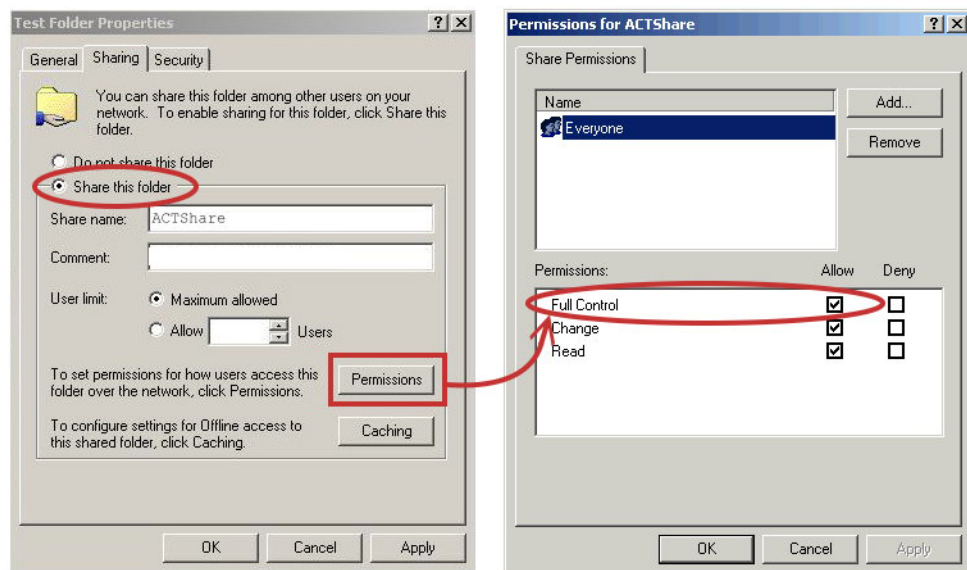

C. A/V Setting

1. Image Setting

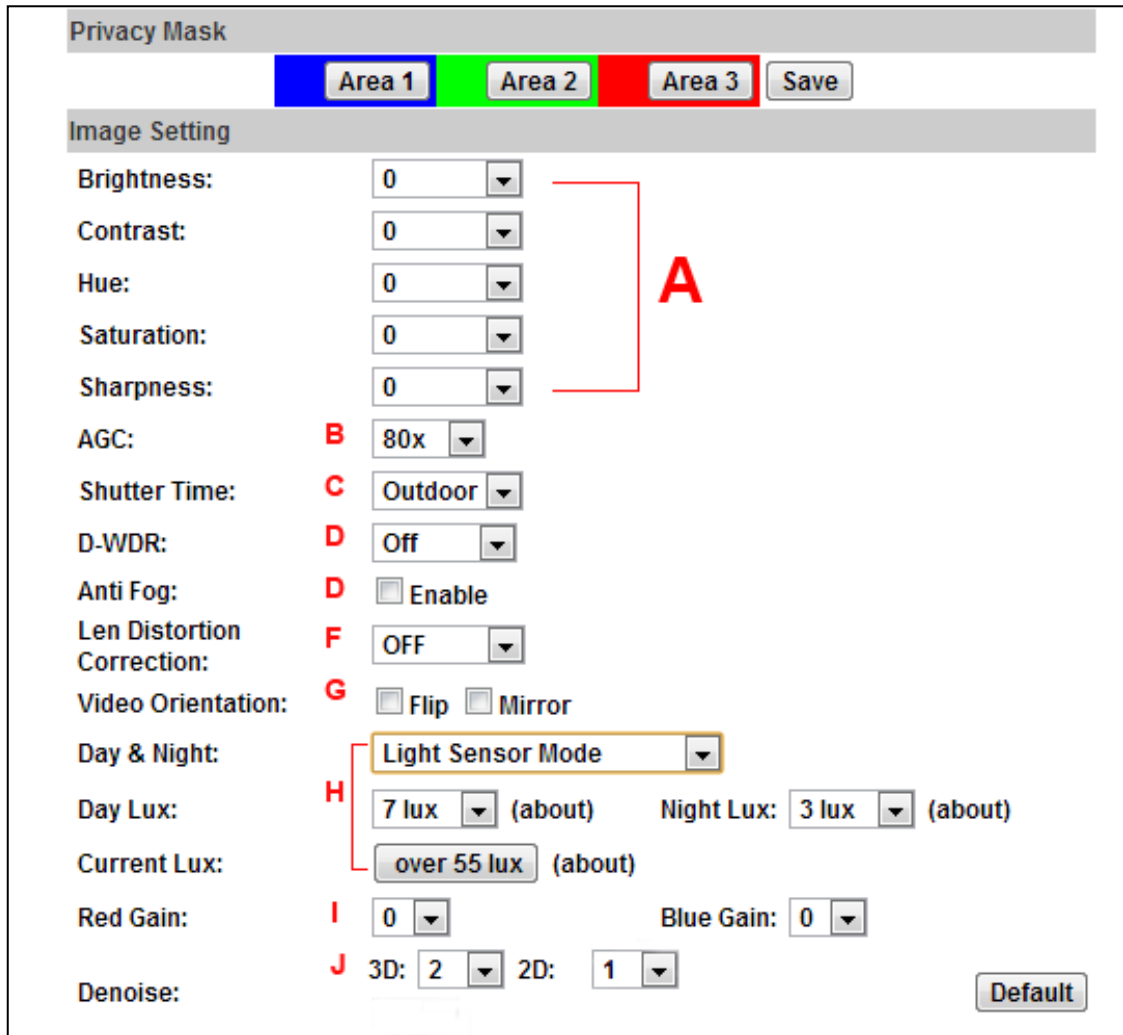

For security and privacy purposes, there are three areas that can be set up for privacy. Click the Area button first, and then drag an area on the above image. Remember to save your settings. The masked area will not shown on both live view and recording image.

Please refer to the details below for image settings:

- a. Brightness, Contrast, Hue, Saturation, Sharpness can be adjusted here.

- b. AGC: The sensitivity of the camera can be adjusted according with the environmental light. Enable this function and the brighter image can be got under dim light, but the level of noise may also increase.

- c. Shutter Time: Choose the location of your camera or fixed the shutter time. The shorter the shutter time is the less light the camera receives and the image becomes darker.

- d. D-WDR: This function enables the camera to reduce the contrast in the view to avoid the dark zones resulting from over and under exposure.

- e. Anti Fog: Clicking on "Enable" will display a clearer image in fog environments.

- f. Lens Distortion Correction: This function will correct the distortion of the image.

- g. Video Orientation: Flip or mirror the image.

- h. Day & Night: The camera can detect the light level of environment. Choosing "Light Sensor Mode" the image will be turned to black and white at night in order to keep clear. To set light sensor mode, appoint a lux standard of switching D/N here. Current lux value is provided for reference. Under "Times Mode" the switch time of Color / Black and white is according to the given time. You can also control it by choosing "Color" or "B/W".

i. Denoise: This function is able to filter the noise and blur from the image and show a clearer view. "3D" and "2D" are two different denoising approaches.

3D denoise analyzes successive pictures to detect the noise places while.
2D denoise analyzes only single picture.

2. Video Setting

User may select the camera system type




The image shows a 'Video Setting' dialog box. It has a title bar 'Video Setting'. Below the title bar, there is a label 'Video System:' followed by a dropdown menu. The dropdown menu is currently set to 'PAL' and has a small downward arrow icon to its right.

Streaming 1 Setting: Basic mode and Advanced mode

Streaming 2 Setting: Basic mode, Advanced mode, and 3GPP mode

(Max Video Frame Rate for both streaming combined is 30 FPS)

a. Streaming 1 & 2 Basic Mode:

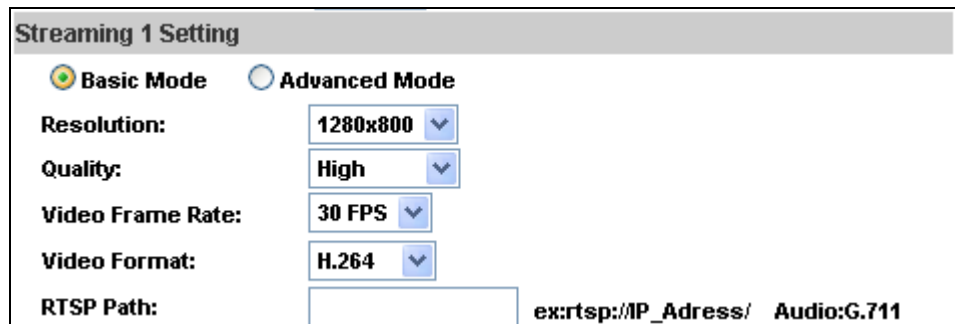

The image shows a 'Streaming 1 Setting' dialog box. It has a title bar 'Streaming 1 Setting'. Below the title bar, there are two radio buttons: 'Basic Mode' (which is selected) and 'Advanced Mode'. Below the radio buttons, there are five labels with corresponding dropdown menus: 'Resolution:' (1280x800), 'Quality:' (High), 'Video Frame Rate:' (30 FPS), and 'Video Format:' (H.264). At the bottom, there is a label 'RTSP Path:' followed by a text input field. To the right of the input field, there is a text string 'ex:rtsp://IP_Address/' and 'Audio:G.711'.

1. Resolution:

There are 5 resolutions that can be chosen.

1280x800, 1280x720, 640x480, 320x240, 176x144

2. Quality:

There are 5 levels:

Best/ High/ Standard/ Medium/ Low


The higher the quality is, the bigger the file size is. Not good for internet transmission.

3. Video Frame Rate: The video refreshing rate per second.

4. Video Format: H.264, MPEG4 or M-JPEG

5. RTSP Path: RTSP output name

b. Streaming 1 & 2 Advanced Mode:

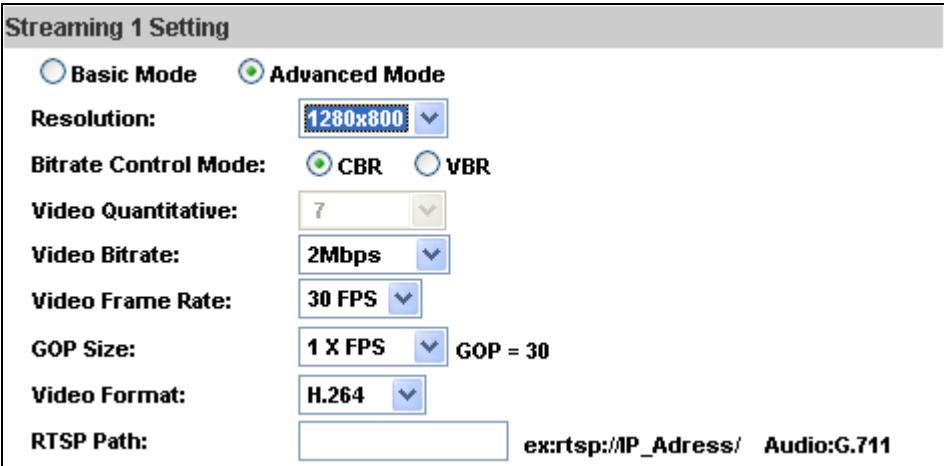

Streaming 1 Setting

☐ Basic Mode ☒ Advanced Mode

Resolution: 1280x800

Bitrate Control Mode: ☒ CBR ☐ VBR

Video Quantitative: 7

Video Bitrate: 2Mbps

Video Frame Rate: 30 FPS

GOP Size: 1 X FPS **GOP = 30**

Video Format: H.264

RTSP Path: ex:rtsp://IP_Address/ Audio:G.711

1. Resolution:

There are 5 resolutions that can be chosen:

1280x800, 1280x720, 640x480, 320x240, 176x144

2. Bitrate Control Mode

There are CBR [Constant Bit Rate] and VBR [Variable Bit Rate]

CBR: 32Kbps~8Mbps (the higher the CBR is, the better the video quality is)

VBR: 1(Low) ~10(High) – Compression rate, the higher the compression rate, the lower the picture quality is; vise versa. The balance between VBR and network bandwidth will affect picture quality. Select the VBR rate to avoid picture breaking up or lagging.

3. Video Frame Rate

The video refreshing rate per second.


4. GOP Size

It means "Group of Pictures". The higher the GOP is, the better the quality is.

5. Video Format: H.264 or JPEG

6. RTSP Path: RTSP output connecting path

c. 3GPP Streaming mode:

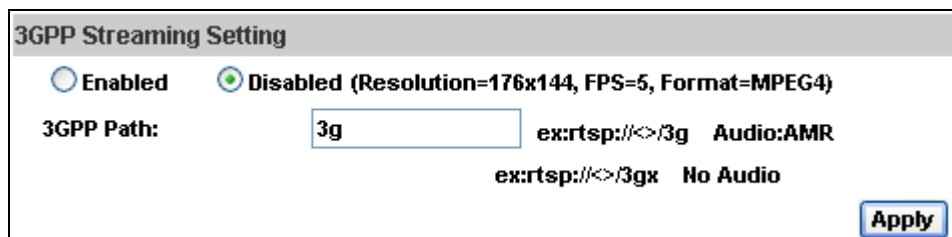

The dialog box titled "3GPP Streaming Setting" contains two radio buttons: "Enabled" and "Disabled (Resolution=176x144, FPS=5, Format=MPEG4)". The "Disabled" option is selected. Below the radio buttons, there is a label "3GPP Path:" followed by a text input field containing "3g". To the right of the input field, there are two example paths: "ex:rtsp://</>/3g Audio:AMR" and "ex:rtsp://</>/3gx No Audio". An "Apply" button is located in the bottom right corner of the dialog box.

The RTSP here is separated from the RTSP settings in the "IP

SETTINGS".


3GPP Streaming can still work even if you select "disabled" in the RTSP server option of IP Setting.

1. Enable or Disable 3GPP Streaming
2. 3GPP Path: 3GPP output connecting path. If the IP address of your camera is 192.168.40.150, and you key-in "3g" in the column, the 3GPP path will be rtsp://192.168.40.150/3g.

3. Audio


The IP CAMERA supports 2-way audio. The user can send audio from the IP Camera built-in mic to the remote PC; the user can also send audio from remote PC to IP Camera's external speaker.

- b. Audio from IP camera built-in mic to local PC: select "Enable" to start this function and also can select the audio type.

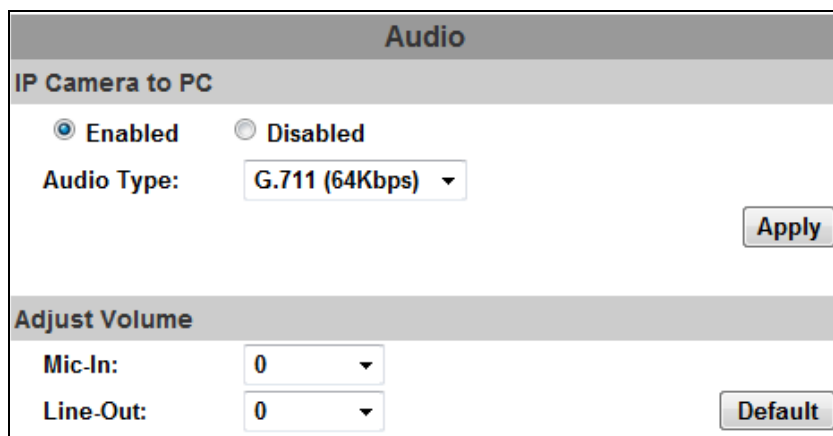

Audio	
IP Camera to PC	
☒ Enabled	☐ Disabled
Audio Type:	G.711 (64Kbps) ▼
Apply	
Adjust Volume	
Mic-In:	0 ▼
Line-Out:	0 ▼
Default	

- c. Audio from local PC to IP Camera: Check "chatting" in the browsing page.

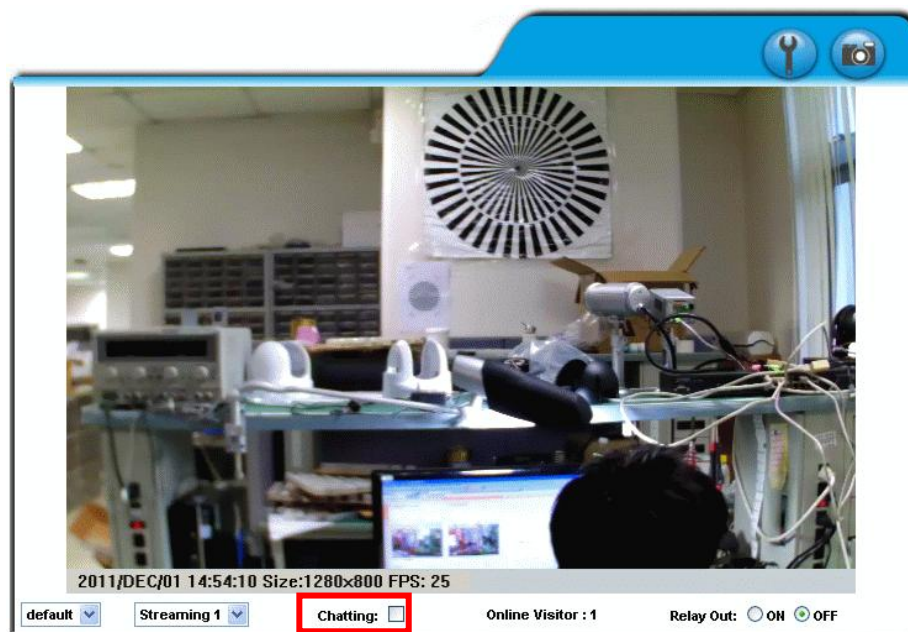

The Audio will not be smooth when the SD card is recording.

D. Event List

The IP Cam provides multiple event settings.

1. Event Setting


i. Motion Detection

The IP Cam allows 3 areas for motion detection. When motion is triggered, it can send the video to some specific mail addresses, transmit the video to a remote FTP server, trigger the relay, and save video to local SD card. To set up the motion area, click “Area Setting”, then use the mouse to drag and draw the area. The same operation is for area 2 and 3

ii. Tampering Detection

When the camera view is covered, moved, shot by strong light, or out of focus, the tampering detection will be triggered, and send snapshot or video to mail/FTP/Samba/SD card, or trigger the external alarm. Please select the alarm action.

- Interval: The tampering detecting interval. Take the diagram below as example. By setting the interval on 30 seconds, the camera lens will be covered during 10- 40 sec. At time point B, the IP camera compares the view with time point A, and sends an alarm when it found that the lens is covered. At time point C, the camera compares the view with time point B, and sends an alarm when it found that the lens view is being blocked or uncovered.

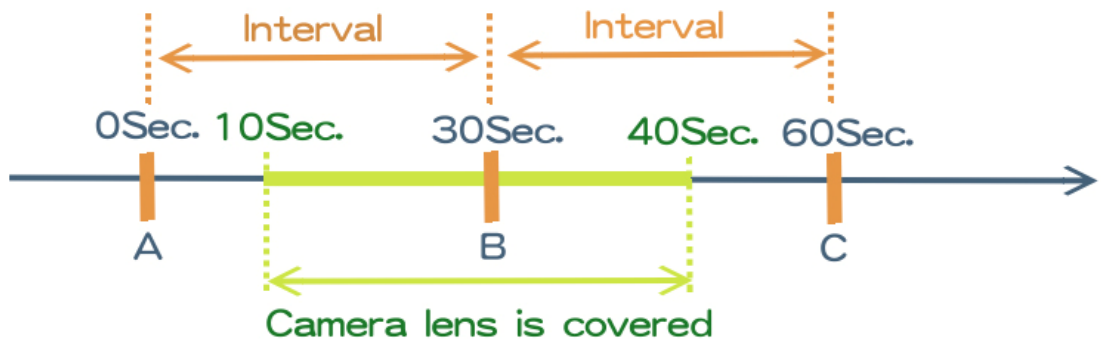

- iii. Record File Setting: The IP Cam allows 3 different types of recording file to change its record size.


When motion/alarm is triggered, there are 3 different types of recording mode.

1. AVI File (With Record File Setting)
2. Multi-JPEG (With Record File Setting), only with JPEG compression format.
3. Single JPEG (Single File with Interval Setting)

- iv. Record Time Setting:

Record Time Setting			
Pre Alarm:	5 sec	Post Alarm:	5 sec

When an event occurs, the IP camera can record a video clip or take a snapshot, and then send it via mail/ FTP/ Samba. Select the video recording length before and after the event is detected.

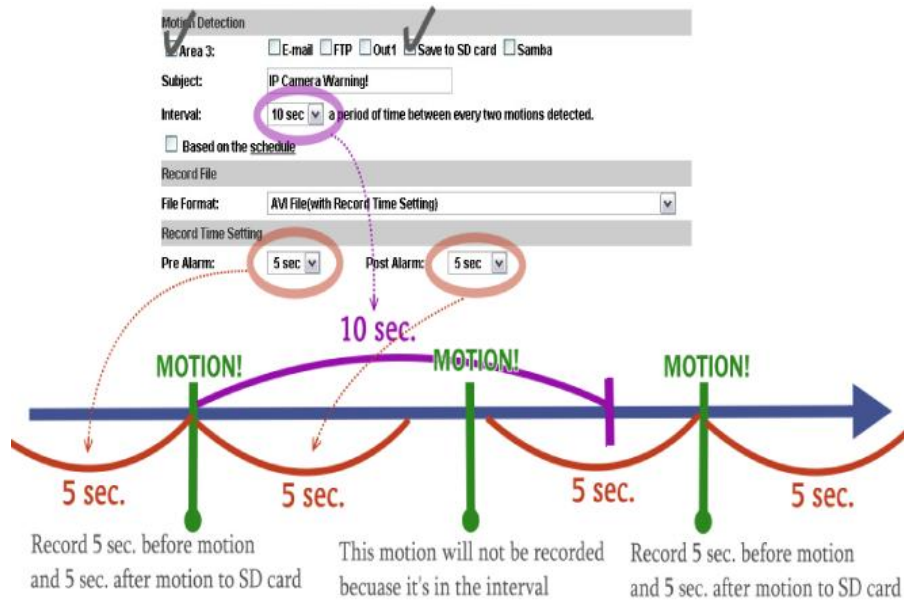

v. Network Dis-connected:

The IP Cam will scan the network. The image will be record to the SD card after the IP Camera detects network dis-connected, if set "Save to SD card".

vi. Network IP check:

After enable IP Check, the IP camera can check if the network server is connecting. If the IP camera checking failed, the image will be recorded to the SD card.

Network Dis-connected	
Dis-connected:	☐ Save to SD card
Network IP Check	
IP Check:	☒ Enabled ☐ Disabled
IP Address:	www.google.com
Interval:	30 sec
IP Check:	☐ Save to SD card
Apply	

2. Schedule

Schedule																								
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Mon.																								
Tue.																								
Wed.																								
Thu.																								
Fri.																								
Sat.																								
Sun.																								

 **With schedule setup.**

Snapshot	
☐ Enabled ☒ Disabled	
Snapshot: ☐ E-mail ☐ FTP ☐ Save to SD card ☐ Samba	
Interval: 10 Second(s) [1..50000]	
File Name: Snapshot	
Apply	

- a. Schedule: After completing the schedule setup, the camera data will be recorded according to the schedule setup.
- b. Snapshot: After enabling the snapshot function; the user can select the storage position of the snapshot file, the interval time of the snapshot and the reserved file name of the snapshot.
- c. Interval: The interval between two snapshots.

3. I/O Setting

I/O Setting	
Input Setting	
Input 1 Sensor:	N.O ▼
Input 1 Action:	☐ E-mail ☐ FTP ☐ Out1 ☐ Save to SD card ☐ Samba
Subject:	GPIO In Detected!
Interval:	10 sec ▼
☐ Based on the <u>schedule</u>	
Output Setting	
Mode Setting:	☒ OnOff Switch ☐ Time Switch
Interval:	10 sec ▼

a. Input Setting:

The IP Cam supports input and output. When the input condition is triggered, it will trigger the relay; and then send the video to mail addresses /FTP server / SAMBA.

- Interval:

For example, if you select "10 sec" here, once the motion is detected and the action is triggered, it cannot be triggered again within 10 seconds.

- Based on the schedule:

When the option box is ticked, the I/O will be enabled only during the selected schedule time.

b. Output Setting:

The output mode affects the DO or relay out duration.

(i) ON/Off Switch: The camera triggers the external device for 10 seconds. You can turn off the alarm manually by clicking "off" at the right bottom of the live video page.



(ii) Time Switch: The camera triggers the external device and lasts for a certain time according to the internal setting; the user is not allowed to break off the alarm manually.

5. Log List

Log List	
System Logs	Logs
Motion Detection Logs	Logs
I/O Logs	Logs
All Logs	Logs

Sort by

System Logs, Motion Detection Logs and I/O Logs. In addition, System Logs and I/O Logs won't lose data due to power failure.

6. Micro SD card

a. Playback

Please Insert the Micro SD card before use it. Make sure to push the Micro SD card into the slot completely.

Click the date listed on this page and it shows the list of the video. The video format is AVI. Click the video to start Microsoft Media Player to play it. To delete the video, check it, and then click "Del".

2006/04/17			Del
Time	Video	Event Type	☐
09:05:22	090522f.avi	Network Dis-connected	☐
09:05:52	090552f.avi	Network Dis-connected	☐
09:06:22	090622f.avi	Network Dis-connected	☐
09:06:52	090652f.avi	Network Dis-connected	☐
09:07:22	090722f.avi	Network Dis-connected	☐
09:07:52	090752f.avi	Network Dis-connected	☐
09:08:22	090822f.avi	Network Dis-connected	☐
09:08:51	090851f.avi	Network Dis-connected	☐
09:09:21	090921f.avi	Network Dis-connected	☐
09:09:51	090951f.avi	Network Dis-connected	☐

b. SD Management

When choosing “The 1st day “the recoding file will be kept for one day. The oldest file will be deleted if the Micro SD card is full.

Playback	
No SD card	
SD Management	
Auto Deletion:	Off Off The 1st day The 2nd day The 3rd day The 4th day The 5th day The 6th day The 7th day The 8th day The 9th day The 10th day The 15th day The 20th day The 25th day The 30th day (Keep 1/ 2/ 3/ 4...days) Apply


Note : The use of the SD card will slightly affect the operation of the IP Camera, such as frame rate of the video.

c. Copy to PC


You can insert the Micro SD card to the PC and read the files directly, or use FlashGet instead to download the files from the IP camera. (In this way you do not need to pull out the Micro SD card from the camera.)

To use FlashGet for downloading image and video data from the Micro SD card, please follow the steps:

- (i) Enter into the data list and right-click "Files link daily", select "save target as..." then save the link list to the PC.

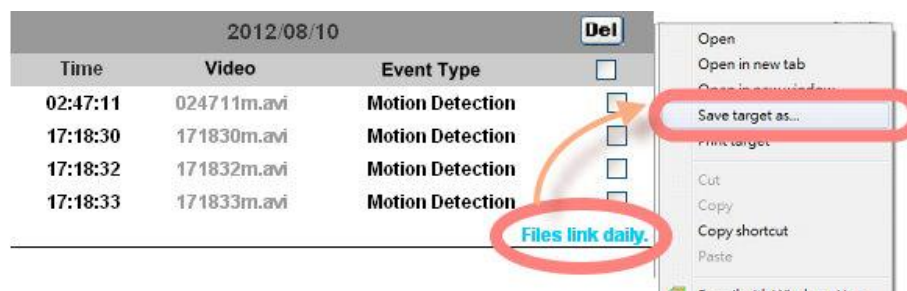


- (ii) Open FlashGet, select "File" → "Import" → "Import list", and find the link list file you just saved. The file name may be called "SD_list".

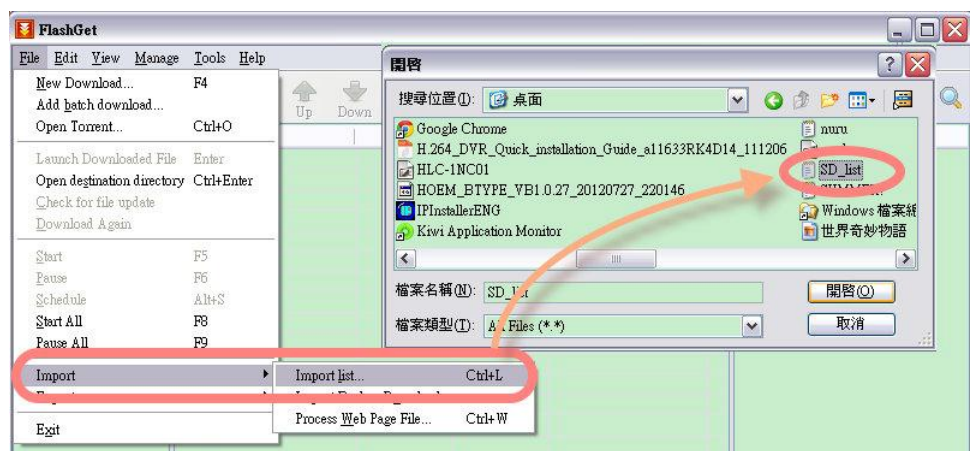


- (iii) FlashGet will show you the link list, and you can tick the files you want to copy to your PC. Provide the directory path in the new download

window, and remember to enable "Login to Server": Key-in the IP Camera username and password.

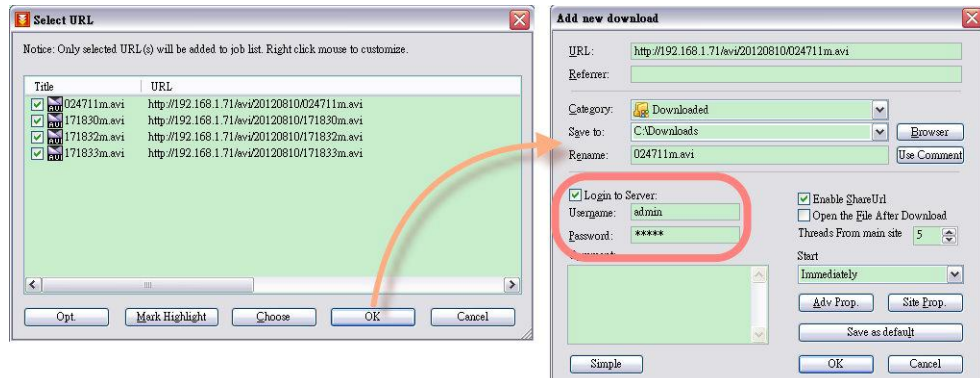


(iv) Click OK to start download.

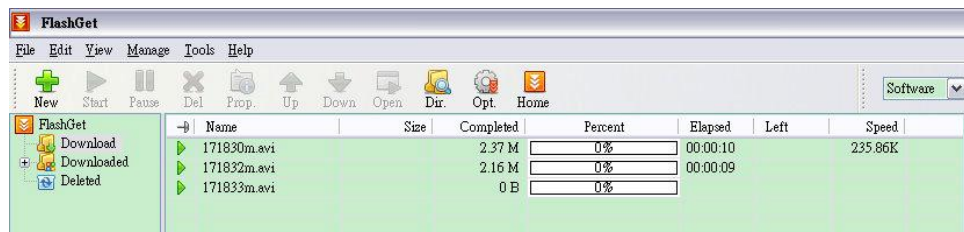

- FlashGet is a free software that can be downloaded from FlashGet official website. The example above is based on FlashGet ver.1.9.6.


VI. Network Configuration

i 、 Configuration 1:

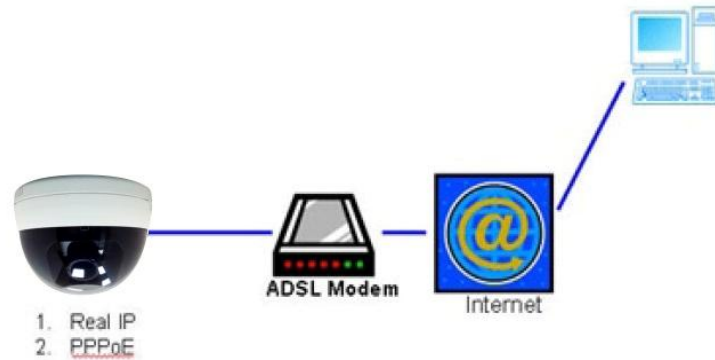

- a. Internet Access: ADSL or Cable Modem
- b. IP address: One real IP or one dynamic IP
- c. Only the IP CAMERA is connected to the internet
- d. For fixed real IP, set up the IP into IP CAMERA. For dynamic IP, start PPPoE.


ii 、 Configuration 2 :

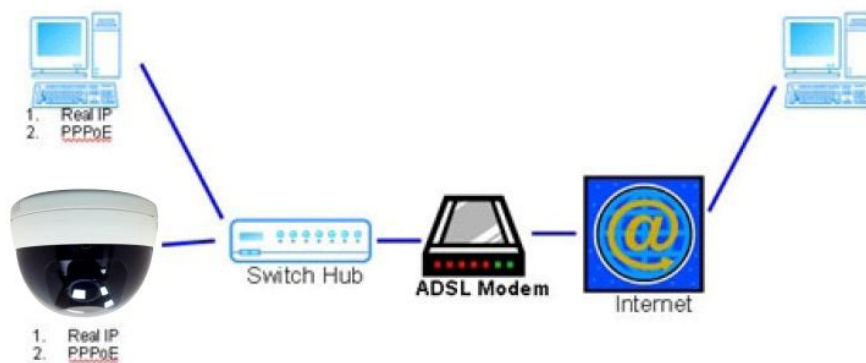

- a. Internet Access: ADSL or Cable Modem
- b. IP address: More than one real IP or one dynamic IP
- c. IP CAMERA and PC connect to the internet
- d. Device needed: Switch Hub

- e. For fixed real IP, set up the IP into IP CAMERA and PC. For dynamic IP, start PPPoE.

iii 、 Configuration 3:

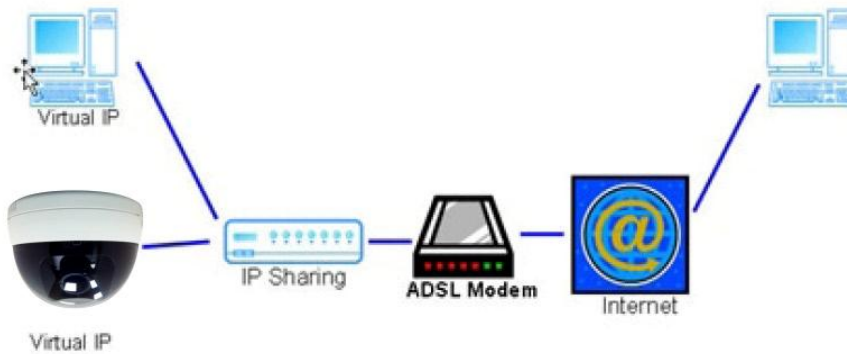


- a. Internet Access: ADSL or Cable Modem
- b. IP address: one real IP or one dynamic IP
- c. IP CAMERA and PC connect to the internet
- d. Device needed: IP sharing
- e. Use virtual IP, set up port forwarding in IP sharing.

VII. I/O Configuration

1. I/O Connection

- a. Please connect the GND & DO pin to the external relay (buzzer) device.
Please connect the GND & DI pin to the external trigger device.

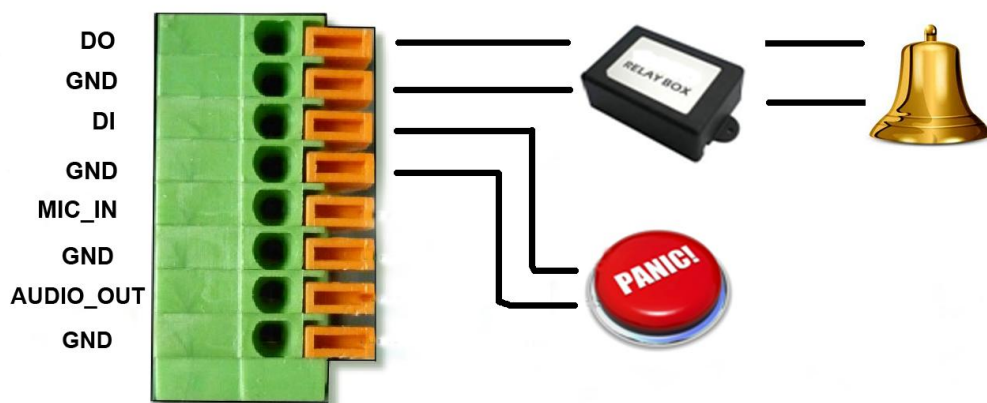

b. I/O PIN definition

- GND (Ground): Initial state is LOW
- DO (Digital Output): DC 5V
- DI (Digital Input): Max. 50mA, DC 5V

2. I/O Setup

- a. Click I/O Setting from the system setup page via IE, and check "Out1" to enable I/O signal.

I/O Setting

Input Setting

Input 1 Sensor:

N.O

Input 1 Action:

☐ E-mail

☐ FTP

☒ Out1

☐ Save to SD card

☐ Samba

Input 2 Sensor:

N.O

Input 2 Action:

☐ E-mail

☐ FTP

☒ Out1

☐ Save to SD card

☐ Samba

Subject:

GPIO In Detected!

Interval:

10 sec

☐ Based on the schedule

Output Setting

Mode Setting:

☒ OnOff Switch

☐ Time Switch

Interval:

10 sec

Apply


b.

Output Test

After the external input and output hardware is installed, you can use the "Relay Out" bottom on the live video page to test if DO / Relay Out works.

(i) On Off Switch mode:

Clicking "ON" will trigger the external output device for 10 seconds. For example, your alarm buzzer will continuously ring for 10 seconds. After 10 seconds the buzzer stops ringing, or you can manually break off the output signal by clicking "OFF".



(ii) Time Switch mode:

Click "Pulse", the camera will trigger the external output device for several seconds; the duration length is according to the "interval" setting in Output Setting.

Relay Out 1:

VIII. Factory Default

If you forget your password, please follow the steps to revert back to default value.

- Remove the power and Ethernet cable. Press and hold the button as the picture below.




- Connect power to the camera again, and do not release the button during the system booting. It will take around 30 seconds to boot the camera.
- Release the button when camera finishes proceed.
- Plug in the Ethernet cable. Re-login the camera using the default IP (<http://192.168.1.200>), and user name (admin), password (admin).

IX. Universal Password


If you forgot the password of your IP camera, you can reset the camera to factory default, or follow the procedure below to generate a universal password.

Note: Universal password will be valid only when you enable the function in “User Management”.

1. First, you need to know the IP address and MAC of your IP camera. You can use IP installer to scan the LAN, and see the IP address and MAC on the side column.

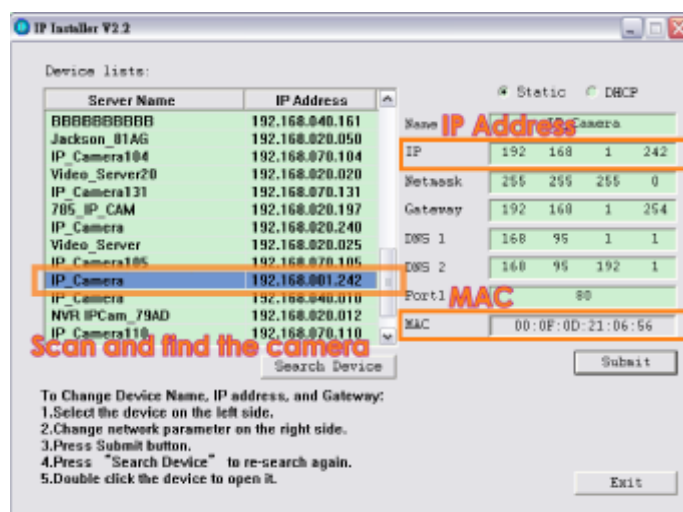


Or, if you already know the IP address of camera: Open the web browser, key in “http:// (IP address) /GetIPMAC.cgi” and press enter. The IP address and MAC will be displayed on browser.

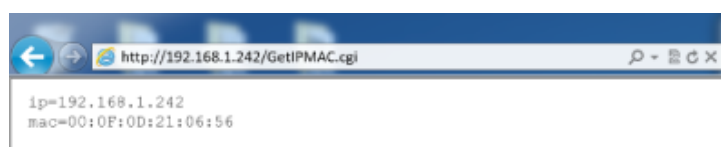

2. Find the .html file named “Universal Password” in CD-ROM. Click to open it.



3. Key in the camera IP address “IP Adder.” column and MAC in “MAC” column, and then click “encoder”. You will see a set of username and password appear, as below:

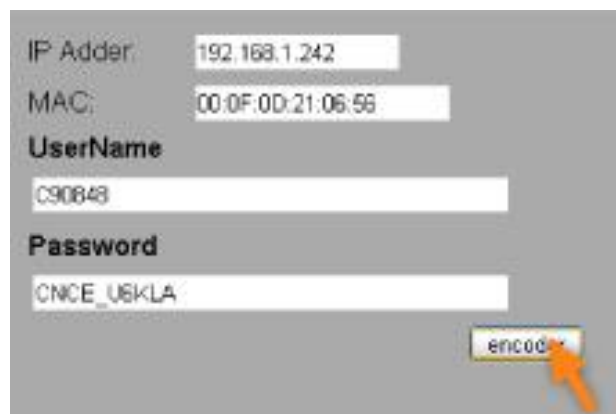
A screenshot of a web-based "Universal Password" encoder interface. It has a grey background. At the top, there are two input fields: "IP Adder:" with the value "192.168.1.242" and "MAC:" with the value "00:0F:0D:21:06:56". Below these are two more input fields: "UserName" with the value "C90848" and "Password" with the value "CNCE_U6KLA". At the bottom right, there is a button labeled "encoder" with a mouse cursor pointing at it.

The universal username and password are generated from the IP address and MAC you key in, so if you change the camera IP address the universal password changes, too.

4. Take the picture for example, the universal username is “C90848” and password is “CNCE_U6KLA”. Use them to log in the camera.










5. Now you can login as the administrator. The use of universal password does not affect the previous user settings, so the administrator account password will not change until you edit it. Please click “Edit” to give a new administrator password.

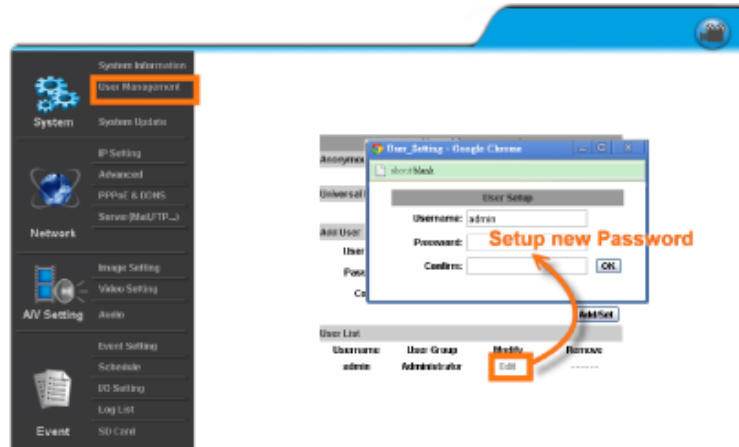

X. Package contents

- The CD includes user manual and software tools

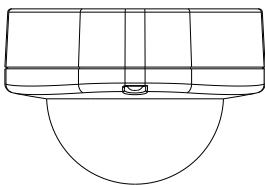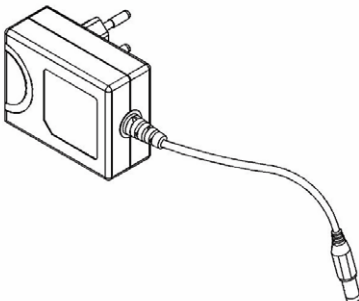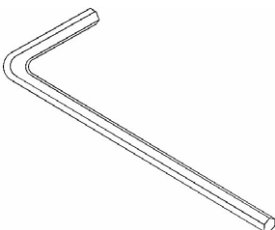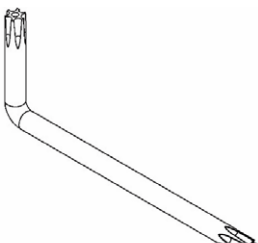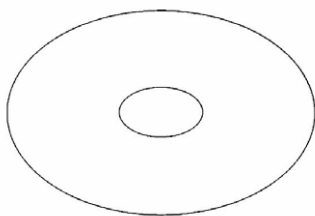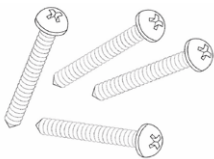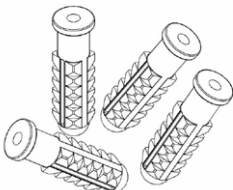IP Camera	Adapter	Quick Installation Guide
		
Hex Wrench	Star Wrench	CD
		
Screws x4	O-ring x4	Wall Plug x4
		

XI. Micro SD Card Compatibility

The following Micro SD Cards are recommended:

Transcend	SDHC	class4	16GB
	SDHC	class4	32GB
	SD	class4	16GB
	SD	class4	32GB
	SDHC	class6	4GB
	SDHC	class6	8GB
	SDHC	class6	16GB
	SD	class6	4GB
	SD	class6	8GB
	SD	class6	16GB
SanDisk	SDHC	class4	4GB
	SDHC	class4	8GB
	SDHC	class4	16GB