

TABLE OF CONTENTS

EN

General information	2
Introduction	2
Purpose of the manual	2
Identification of manufacturer and equipment	2
Safety information	3
Safety regulations	3
Safety devices	4
Safety signals	4
Technical information	5
Technical specifications	5
General description of the appliance	6
Main parts	7
Installation	8
Packing and unpacking	8
Planning of system installation	8
Setting up of the perimeter wire	9
Re-entry method to the charging station	10
Setup of the robot's quick re-entry to the charging station	10
Preparation and marking the boundaries of the work areas	11
Installation of perimeter wire	14
Installation of the charging station and power supply unit	16
Battery charging on first use	17
Adjustments	17
Adjustment recommendations	17
Adjustment of cutting height	17
Use and operation	18
Recommendations for use	18
Description of robot commands	18
Menu access	18
Navigation	18
Settings – programming mode	20
Work schedules – programming mode	21
Secondary areas – programming mode	22
Safety – programming mode	22
Operating mode – programming mode	23
Language options – programming mode	23
Initial start up – automatic mode	23
Robot safety stop	24
Automatic return to the charging station	24
Use of the robot in closed areas with no charging station	24
Starting the robot without the perimeter wire	25
Password entry	25
Visualising the display during the work phase	26
Prolonged inactivity and restarting	26
Battery charging after prolonged inactivity	27
Operating tips	27
Routine maintenance	28
Maintenance recommendations	28
Scheduled maintenance table	28
Robot cleaning	28
Troubleshooting	29
Troubleshooting guide	29
Part replacement	31
Recommendations for replacing parts	31
Battery replacement	31
Blade replacement	32
Robot disposal	32
Declaration of conformity	32

Reproduction, even partial, of this document without written permission by the manufacturer is strictly forbidden. The manufacturer assumes a policy of continual improvement and reserves the right to modify this document without prior notice on condition that the changes do not constitute health and safety risks.
 © 2008 – Text, illustrations and page layout by Tipolito La Zecca. The text may be reproduced, in whole or in part, on condition that the author is mentioned.

INTRODUCTION

EN

Congratulations on purchasing this product, which we are certain will meet your needs and expectations. This project was created by ZUCCHETTI CENTRO SISTEMI S.p.A. (UNI EN ISO 9001 certified company), a software house that since 1982 has consolidated its activities and presence on the international market.

Applying advanced IT solutions in the field of industrial automation means optimising the production activities and simplifying the work procedures. This product was created on the basis of on-going research by ZUCCHETTI's laboratories.

PURPOSE OF THE MANUAL

- This manual forms an integral part of the appliance and was produced by the Manufacturer to provide the necessary information to people authorised to interact with it during its working life.
- Operators of the appliance must adopt correct working practices and must carefully read and follow all the instructions contained in this manual.
- This manual is written by the Manufacturer in the original language of Italian and may be translated into other languages to meet legal and/or commercial requirements.
- Carefully read the instructions contained in this manual to avoid any unnecessary risks to people's health and safety, as well as economic damages.
- Keep this manual in a safe and easily accessible place for quick reference.
- Some information and illustrations contained in this manual may not perfectly correspond with the appliance in your possession; however, this does not affect its functioning.
- The Manufacturer reserves the right to make changes without any obligation to provide prior notice.
- The following symbols are used throughout this manual to highlight some particularly important information or to identify some important specifications.

**Danger - Attention**

This symbol indicates situations involving imminent danger, which, if ignored, could put people's health and safety at risk.

**Warning – Caution**

This symbol indicates situations where it is necessary to behave in a certain way in order to avoid putting people's health and safety at risk, and to protect the device.

**Important**

This symbol identifies particularly important technical information which must not be ignored.


IDENTIFICATION OF MANUFACTURER AND EQUIPMENT

The nameplate shown here is applied directly onto the appliance. It contains references and all the information essential for safely operating the device.

For any technical requirements, please contact the Manufacturer's Technical Service Centre or an authorised dealer.

For technical assistance, please indicate the data reported on the identification plate, the approximate hours of use and the type of fault detected.

- A.** Name of manufacturer
- B.** CE conformity label
- C.** Model / serial number / manufacturing year
- D.** Technical specifications

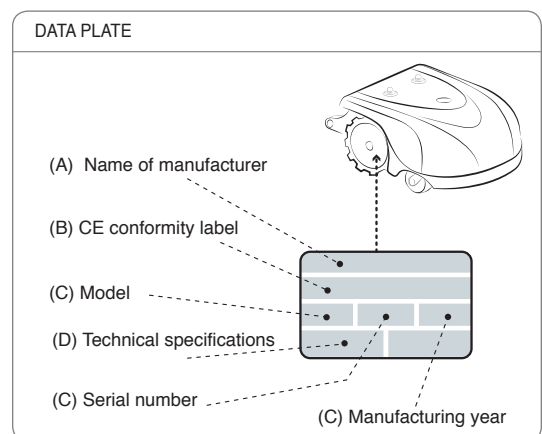

SAFETY REGULATIONS

- During design and construction, the manufacturer carefully considered the possible hazards and personal risks that may result from interacting with the equipment. In addition to observing the applicable laws in force, the manufacturer adopted all the “good manufacturing practice regulations.” The purpose of this information is to inform users on the need to use extreme caution to avoid risks.
- When using the robot for the first time, it is recommended to carefully read the whole manual and to be sure to fully understand it, especially the safety information.
- Lift and handle the equipment according to the information reported on the packaging, on the appliance and in the user instructions supplied by the Manufacturer.
- Pay attention to the symbols that appear on all the safety labels. They are coded by shape and colour for safety purposes. Keep them legible and always follow the instructions indicated.
- The lawn mower robot can only be used by people who know how to operate it and who have read and understood the instructions in this manual.
- Only use the equipment for the purposes specifically intended by the manufacturer. Improper use of the equipment may be hazardous to personal safety and health and may lead to economic losses.
- Before using the lawn mower robot, make sure there are no objects on the lawn (toys, tree branches, clothing items, etc.).
- When using the robot, make sure there are no people (especially children, the elderly or disabled people) and pets in the work area so as to prevent safety risks. To avoid this risk, it is recommended to program the robot to operate at suitable times of the day.
- Never allow people to sit on the robot.
- Never lift the robot to inspect the blade while it is running.
- Do not place hands and feet under the robot when it is in operation and moving, especially near the wheel area.
- Never remove, bypass or tamper with the safety devices installed. The failure to observe these requirements may lead to serious personal health and safety risks.
- Perform all maintenance activities recommended by the manufacturer. Proper maintenance will allow obtaining the best performances and longer operating times.
- Before maintenance or adjustments, which can also be performed by a user with minimal technical competence, disconnect the power supply. The user must ensure that all the necessary safety conditions are in place, especially when working on the lower part of the lawn mower robot, following the Manufacturer's procedures and instructions.
- Use the personal protection devices recommended by the Manufacturer, in particular, always wear protective gloves when handling the cutting blade.
- Before replacing the batteries, always remove the blade.
- Make sure the air vents of the power supply unit are free and clear of residuals.
- To avoid irreversible damage to the electric and electronic parts, do not wash the robot with water jets at a high pressure and do not immerse it in water, partially or completely, as it is not watertight.
- Operators who perform repairs during the working life of the robot must have the necessary technical expertise, skills and experience in this specific field. The lack of these requirements may be hazardous to the health and safety of people.
- Any work to be performed on the charging station must be carried out with plug of the power cord disconnected.
- Replace any worn or deteriorated parts with original spare parts to ensure proper functioning and safety.
- The robot cannot be used without the top cover. If the mechanical parts of the robot are damaged, replace them.
- Any routine or extraordinary maintenance (e.g. battery replacement) must be performed by an authorised service centre.
- The Manufacturer shall not be held liable if non-original spare parts are used.
- Never use and recharge the robot in explosive and/or flammable environments.

SAFETY DEVICES

1. Bumpers

The bumper sensor is activated if the robot strikes a solid object greater than 10 cm (3.94 ") in height, which stops the movement in that direction and moves backwards to avoid the obstacle.

2. Inclinometer

If the robot works on a slope which is steeper than the maximum limit, or tips over, the robot will stop the cutting blade.

3. Emergency stop switch

Located on the control panel with the word STOP larger than the other commands on the keypad. Pressing this button at any time during operation will immediately stop the movement of the lawnmower robot and the rotation of the blade will stop within 2 seconds.

4. Over-current protection

Each motor (blade and wheels) is monitored continuously during operation for any situation that may cause them to overheat. If this occurs in the wheel motor, the robot will attempt to move in the opposite direction. If the over-current persists, the robot will stop and signal an error. If the cutting blade motor overheats, there are two intervention ranges. If the parameters fall within the first range, the robot will perform the manoeuvres to unblock the cutting blade. If the over-current is below the protection range, the robot will stop and signal a motor error.









5. No sensor signal

If there is no signal on the perimeter cable, the robot will automatically stop.

6. Lifting sensor

If the robot is lifted from the ground by the central handle, the cutting blade will stop rotating.

SAFETY SIGNALS

Attention! Do not clean or wash the robot with water.		This product is password protected. Keep the code in a safe place.	
Carefully read the user instructions and ensure that you fully understand them before using the robot.		Keep children, pets and other people a safe distance away when the robot is in operation.	
Carefully follow the warning and safety recommendations contained in this manual to guarantee the safety and efficiency of the robot.		This product complies with the current CE directives.	
Keep hands and feet away from the cutting blade. Never place your hands or feet under the body or close to the robot when it is in operation.	 		

TECHNICAL SPECIFICATIONS

Description		Model		
		2L2DE0	2L2EV0	2L2EL0 - 2L2LL
Maximum recommended surface that can be mowed				
Robot equipped with one lithium battery	m2 (sq ')	2600 (27976)		
Robot equipped with two lithium batteries	m2 (sq ')		3000 (32280)	3500 (37660)
Characteristics				
Size (W x H x D)	mm (")	614x281x484 (24,17 x 11,06 x 19,05 ")		
Robot weight (incl. battery)	kg	13,5	14,5	
Cutting height (Min-Max)	mm (")	20-45 (0,79-1,77 ")		
Diameter of blade with 4 cutting edges	mm (")	290 (11,42 ")		
Electric motors	V	ca. (25.2V) with brushes		ca. (25.2 V) without brushes
Cutting blade speed	RPM	4000 Cut 3000 Maintenance		
Ground speed	Metres / Minute	30 (98.43 ')		
Maximum slope Recommended	%	45%. Allowable, based on the lawn conditions and accessories installed. 35%. Maximum. In regular lawn conditions. 20%. In proximity of the outside edge or perimeter wire.		
Ambient operating temperature	Max°	ROBOT -10°(14 F.) (Min) +50° (122 F.) (Max) BATTERY CHARGER -10°(14 F.) (Min) +40° (104 F.) (Max)		
Measured noise level	dB(A)	75 (Max) – 65 (Lawn maintenance)		
Water protection class	IP	IP21		
Electrical features				
Power Supply unit (for lithium battery)		Class 1(Vin 90 - 295Vac 47/63Hz) AC current (typ.) 2A/115Vac 1 A/230Vac		
Type of accumulator and charging batteries				
Rechargeable Lithium-Ion Battery	V-A	25.2V –1x6.9Ah	25.2V – 2x6.9Ah	
Battery charger	V-A	29.3 Vcc - 5.0 Ah		
Average recharging time and method		3:00 - automatic	4:00 - automatic	4:30 - automatic
Average operating time (*)	Hours	3:00	4:30	6:00
Blade safety stop				
Rollover sensor		standard		
Handle sensor		standard		
Emergency button		standard		
Equipment and accessories				
Perimeter wire	m (')	150 (492 ')		
Maximum length of perimeter wire (indicative, calculated based on a regular perimeter)	m (')	600 (1000 with upgraded transmitter, not supplied) (1968 – 3280 ')		

Fastening nails	n°	200	
Areas managed, including the primary one		4	
Sinusoid perimeter signal (patented)		standard	
Rain sensor		standard	
Blade modulation and intelligent spiral		standard	
Mowed lawn sensor - Auto Setup (patented)		Not Available	standard
Acoustic alarm		Optional	standard
Remote control/Console		Optional	
Upgraded perimeter wire transmitter		Necessary in case of long perimeter wire or in the presence of a disturbed or weak signal Optional	
Power supply safety box		External box for holding the battery charger and the signal transmitter Optional	
Battery recharging kit		Useful for recharging the batteries in winter or after prolonged inactivity Optional	

(*) Depending on the condition of the grass and lawn surface

GENERAL DESCRIPTION OF THE APPLIANCE

The appliance is a robot designed and built to automatically trim grass in gardens and house lawns at any time of the day or night. It is small, compact, silent and easy to transport.

Depending on the characteristics of the surface to be trimmed, the robot can be programmed to work on more than one area: a primary area and secondary areas (according to the specifications of the various models).

During operation, the robot trims the area marked off by the perimeter wire.



When the robot detects the perimeter wire or encounters an obstacle, it changes direction in a random manner and starts mowing again in a new direction.

According to its operating principle random, the robot automatically trims the entire delimited area of the lawn (see figure).


The robot is able to recognise the presence of higher and/or thicker grass in an area of the garden and to automatically activate, if considered necessary, the spiral movement for a perfect finish. The spiral movement can also be activated by pressing ENTER/MENU while the robot is mowing.

The lawn surface that the robot is able to trim depends on a series of factors, such as:

- model of the robot and type of batteries installed
- characteristics of the area (irregular perimeters, uneven surfaces, divided areas, etc.)
- characteristics of the lawn (type and height of the grass, moisture, etc.)
- conditions of the blade (level of sharpness, without residuals and deposits, etc.)

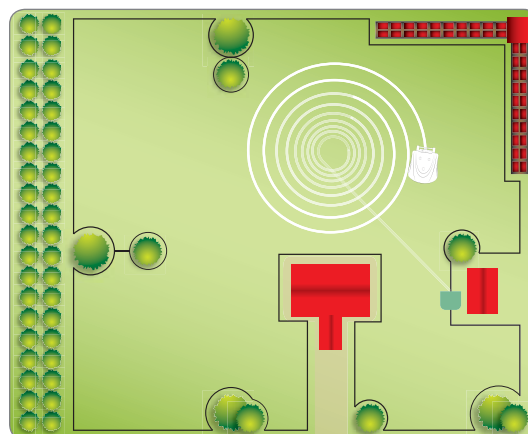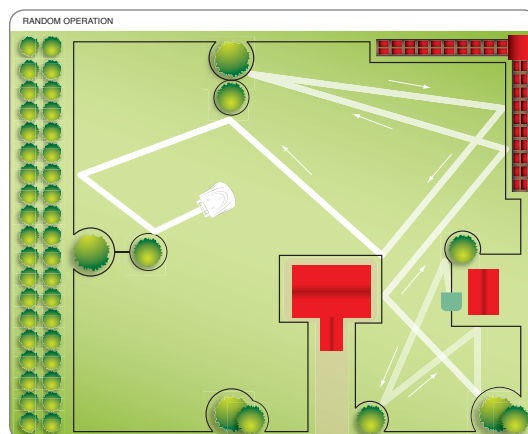

1. **Robot.**
2. **Keyboard commands:** for setting and displaying the operating modes of the robot.
3. **Rain sensor:** detects rain and commands the robot to return to the charging station.
4. **Battery:** supplies power to the motors of the blade and drives the wheels. The robot is supplied with one or more lithium batteries located under the models already assembled in some models.
5. **Handle:** for lifting and carrying the robot.
6. **Cutting blade** : cuts the grass already assembled in some models.
7. **Perimeter wire coil:** cable with special insulation and special features for carrying the signal needed to operate the robot.
8. **Pegs** : for securing the perimeter wire and the charging station.
9. **Power cord for the power supply unit.**
10. **Power Supply unit** : supplies power in low voltage to the batteries.
11. **Charging station:** for recharging or keeping the robot charged.
12. **Transmitter:** transmits the signal to the perimeter wire.
13. **User manual.**

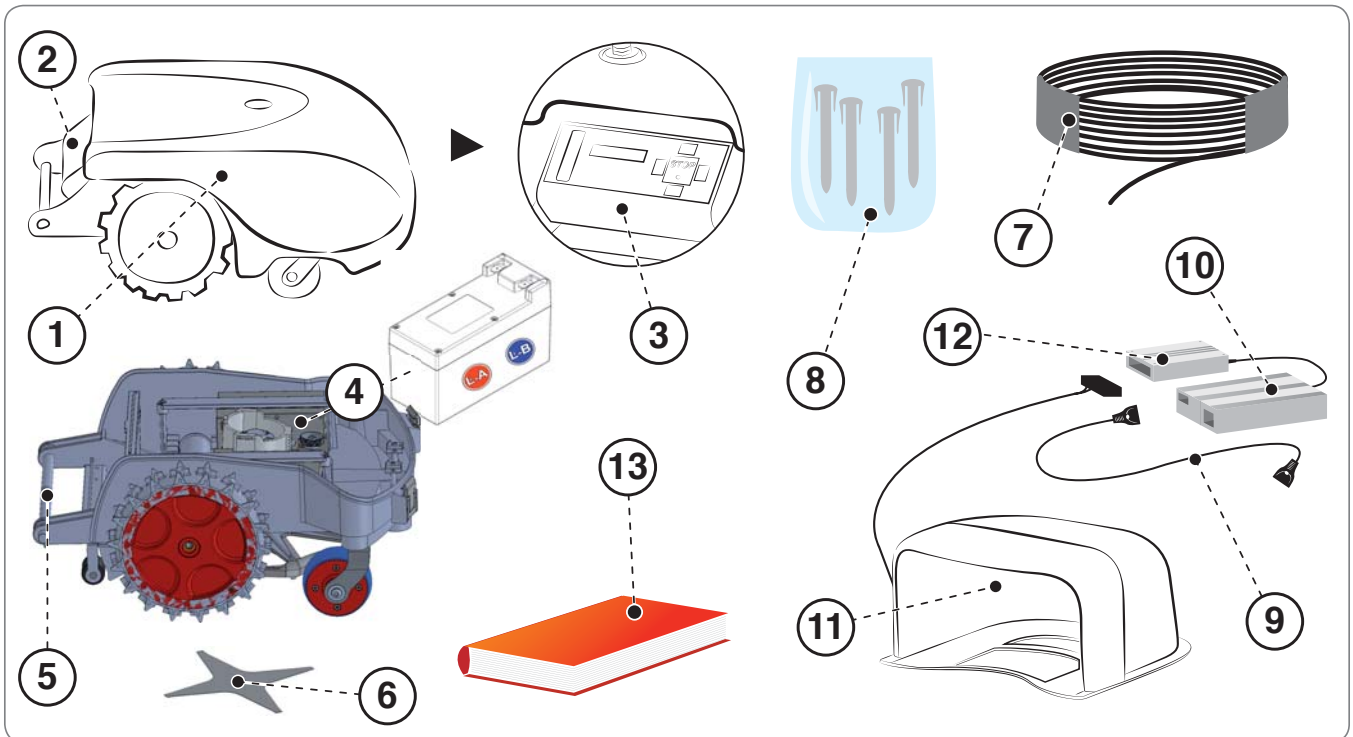

The equipment is delivered suitably packaged. When unpacking, carefully remove and check the integrity of the parts.



Important

- **Keep the packaging materials for future use.**

PLANNING OF SYSTEM INSTALLATION


The robot is not difficult to install, but requires some preliminary planning in order to find the best area for installing the charging station, power supply unit and for laying out the perimeter wire.

- The charging station must be positioned on the edge of the lawn, preferably in the largest area from which other areas of the lawn are easily accessible. The area where the charging station is installed is hereinafter referred to as the "Primary Area."



Warning – Caution

Position the power supply unit in an area that cannot be reached by children. For example, at a height above 160 cm (63 ").

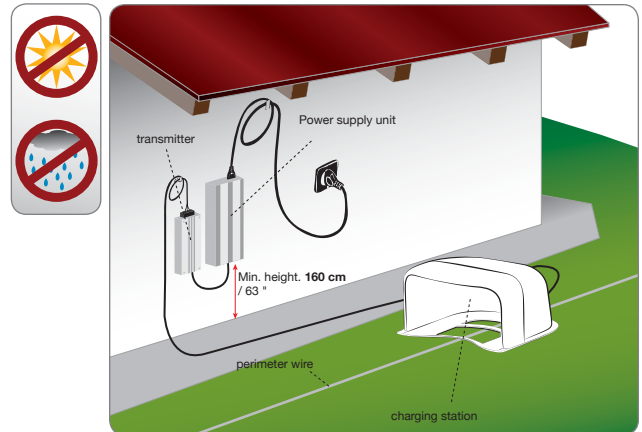

Warning – Caution

When connecting the electricity, it is necessary that a power outlet is positioned near the installation area. Make sure the connection to the mains power complies with the applicable laws. To operate in complete safety, make sure the electrical system, which is connected to the power supply unit, is equipped with a well-functioning earthing system.



Important

It is advisable to install the unit in a cabinet for electric components (for outdoor or indoor use), equipped with a key lock, and well-ventilated to maintain a correct air circulation.





Warning – Caution


Make sure only authorised people have access to the power supply.

- The robot must be able to easily find the charging station at the end of the work cycle, which will also be the starting point for a new work cycle and for reaching any other work areas, hereinafter referred to as "Secondary Areas."
- Position the charging station according to these rules:
 - On level ground
 - On compact and stable ground with good drainage
 - Preferably in the area of the longer lawn.
 - In case of sprinklers, make sure the water jets are not directed inside the charging station.
 - Make sure the entrance of the charging station is positioned as shown in the figure, so that the robot can enter it by following the perimeter wire in a clockwise direction.
 - There must be a straight area of 400 cm (157.48 ") in front of the base.
- The charging station must be well fastened to the ground. To prevent a small step from forming at the front of the base, position a small piece of fake grass at its entrance to stop this from occurring. Alternatively, remove part of the grassy surface and install the base flush with the grass.
- The charging station is connected to the power supply unit via a cord that must move away from the charging station on the outside of the cutting area.

- Position the power supply unit according to these rules:
 - In a well-ventilated area protected against atmospheric agents and direct sunlight.
 - Preferably inside your home, a garage or shed.
 - If positioned outdoors, the robot must not be exposed to direct sunlight and water. Therefore, it must be protected inside a ventilated box. Do not position in direct contact with the soil or humid environments.
 - Position it on the outside of the lawn and not inside.
 - Stretch out the excess cord going from the charging station to the power supply unit. Do not shorten or lengthen the cord.
- The incoming section of the wire must be straight and aligned perpendicularly to the charging station by at least 200 cm (78.74 ") and the outgoing section must move away from the charging station as shown in the figure; this allows the correct re-entry of the robot.

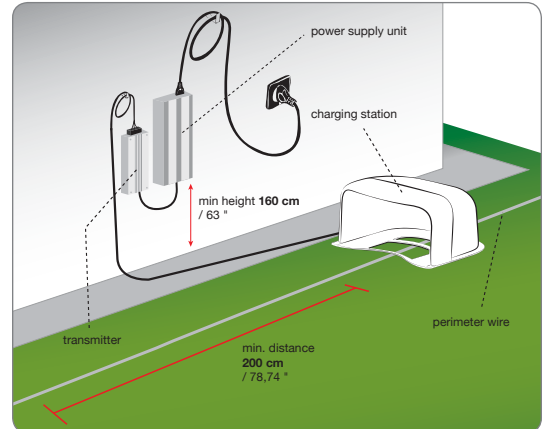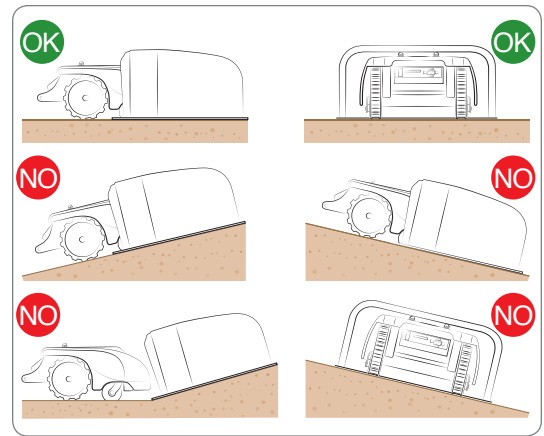


If the robot is installed near an area which has another robot (from the same or another manufacturer), then the transmitter and receiver of the robot must be modified during installation so that the frequencies of the two robots do not interfere with other.

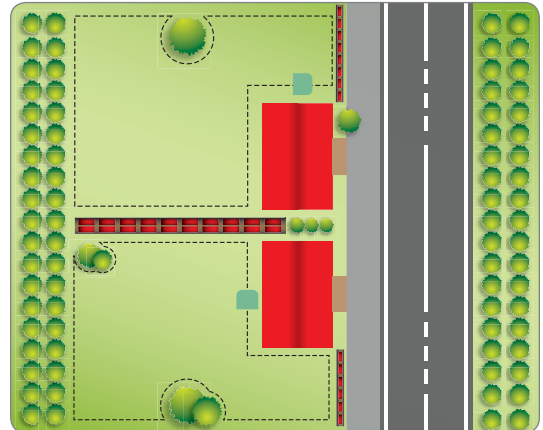

SETTING UP OF THE PERIMETER WIRE

Before installing the perimeter wire, it is necessary to check the entire surface of the lawn. Make any necessary adjustments to the grassy surface during the laying of the perimeter wire in order to allow the robot to function correctly.


- Evaluate the best method for returning to the charging station according to the instructions described in the chapter "RE-ENTRY METHOD TO THE CHARGING STATION".
- Evaluate whether a special installation of the perimeter wire is necessary according to the instructions described in the chapter "SET-UP OF THE ROBOT'S QUICK RE-ENTRY TO THE CHARGING STATION".
- Preparation and defining of the work areas.
- Installation of the perimeter wire.
- Installation of the charging station and power supply unit. When laying the perimeter wire, respect the installation direction (clockwise) and the rotation direction around the flowerbeds (counter-clockwise), As shown in the figure.

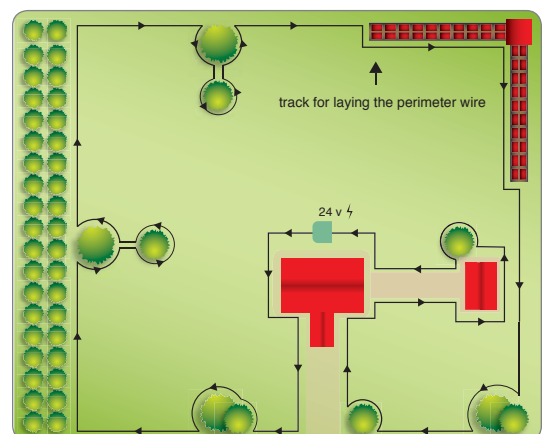

The robot can return to the charging station in two different ways based on what is set in the user menu under the field "Settings – Re-entry to Base." Use the "On the Wire" method only when there are numerous obstacles inside the garden and near the perimeter wire (within 2 meters). In all other cases it is better to use the "Bounce on wire" method for the quickest re-entry to the charging station.

"Follow wire". This method of re-entry to the charging station commands the robot to follow the perimeter wire, positioning its wheels on either side of the wire. If this method is activated, there is no need to prepare the "Recall on Wire" as described below.

"Bounce on wire". By setting this method of return to the recharging station, the robot runs alongside the perimeter wire at an indicative distance going from a few cm to 1 m (3.2 '), touching it occasionally, until it recognises the "Recall on the wire" needed to direct the robot into the recharging station correctly or to guide it along narrow stretches. Once the "Recall On the Wire" has been recognised, the robot will follow the perimeter wire, positioning its wheels on either side of the wire for a distance of around 10 meters. (33 ').

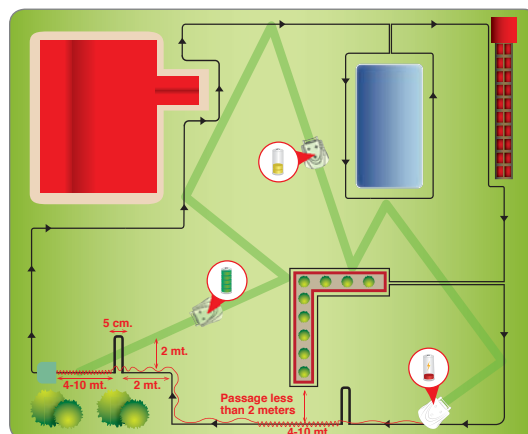

The "Recall on the wire" not only indicates to the robot that it is near the charging station, but also of a narrow passage or of an arrow for quick re-entry to the charging station.

As soon as a "Recall" is recognised, the robot will follow the perimeter wire at low speed, and with more precision for around 10 meters (33 '). It will then return to the "Bounce on wire" re-entry mode if it does not encounter the charging station or the arrow for quick re-entry.

Follow these instructions to install the "Recall."

- The "Recall" is a piece of wire that extends for around 2 m (6.6 ') with a distance of 5 cm (1.96 ") between each wire.
- The "Recall" must be positioned at a distance of 4 and 10 m. (13.2 - 33 ') in front of the charging the station.
- The "Recall" must be positioned at a distance of 2 m. (6.6 ') in front of any narrow passages.
- The "Recall" must be positioned in the section in front of the "Quick Re-entry."

NB: If the robot does not find the charging station within a certain amount of time, it will follow the perimeter wire in "Follow wire" mode.

SETUP OF THE ROBOT'S QUICK RE-ENTRY TO THE CHARGING STATION

Quick re-entry requires a special installation of the perimeter wire that allows the robot to reduce the re-entry path to the charging station. This special installation of the perimeter wire should only be used for gardens where quick re-entry significantly reduces the path and where the perimeter length is greater than 200 meters.

To setup the quick re-entry, position the perimeter wire on the ground so that it forms a triangle with one side of 50 cm (19.7 ") and the other two sides of 40 cm (15.75 ") each, as shown in the figure.

As the robot heads back to the charging station with the two wheels on either side of the wire, it intercepts this triangle and stops moving. It then turns approximately 90° towards the inside of the garden and starts moving in the new direction until running into the perimeter wire on the opposite side.

Arrange the wire for quick re-entry in a point where there is at least 200 cm (78.74 ") of straight wire in front of the station, and at least 150 cm (59.05 ") of straight wire behind it.


Do not set up the wire along the straight section immediately in front of the charging station or near any obstacles. Make sure there are no obstacles along the re-entry path that may obstruct the quick re-entry.



Important

An incorrect setup of the robot's quick re-entry may prevent the robot from returning to the charging station quickly. When the robot travels along the perimeter to reach a secondary area, it may not detect the quick re-entry setup.

The illustration provides some useful tips on how to correctly setup the robot for a quick re-entry.

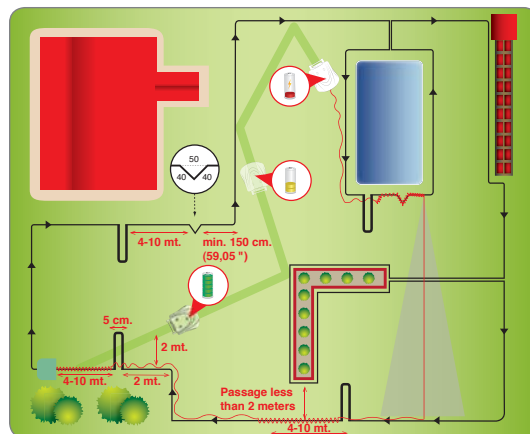

PREPARATION AND MARKING THE BOUNDARIES OF THE WORK AREAS



Preparation of the lawn to be mowed

1. Make sure the lawn to be mowed is even and does not contain holes, stones or other obstacles. If necessary, prepare the lawn by filling in any holes and removing any obstacles. If some obstacles cannot be removed, it is necessary to properly mark these areas with the perimeter wire.
2. Check that no areas of the lawn exceed the allowable slopes (see "Technical Specifications"). When working on slopes, the wheels may slip when the robot detects the wire, causing it to fall outside the perimeter.



Important

Areas with slopes greater than those allowed cannot be mowed with the robot. Therefore, position the perimeter wire in front of the slope so that it is excluded from the area to mow.

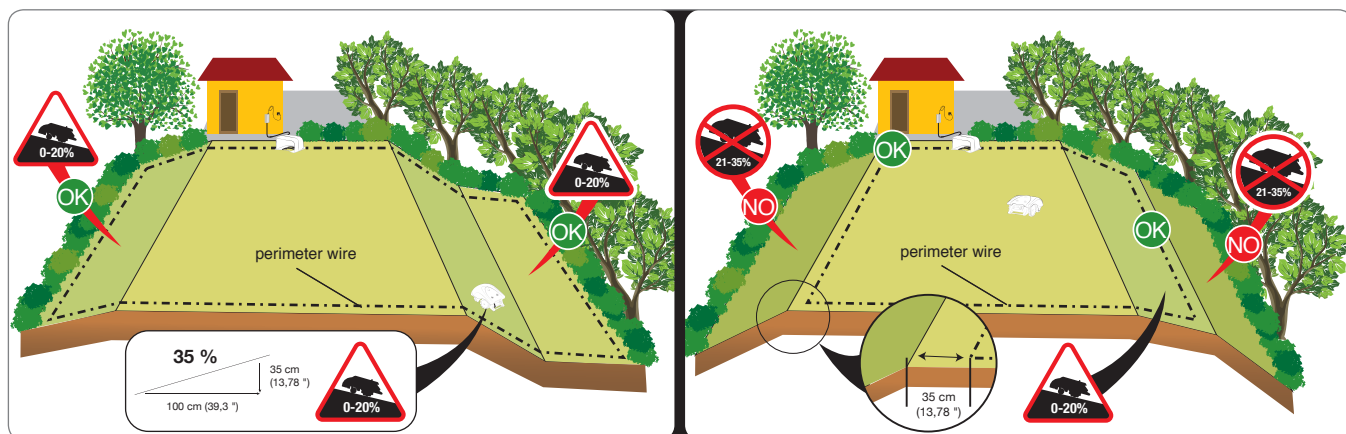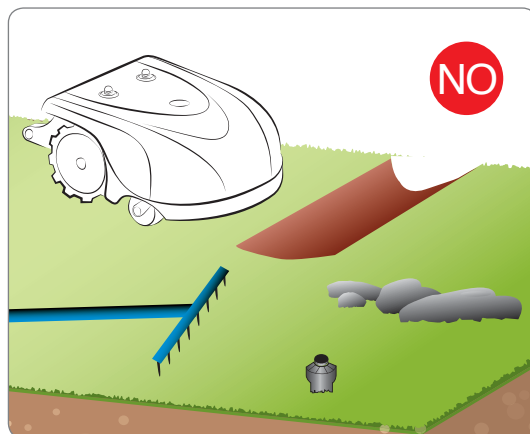

Marking the boundary of the work area

3. Check the entire lawn surface and assess whether it is necessary to divide it into separate work areas as per the rules described here below. Before installing the perimeter wire, check the entire path to make this procedure easier. The illustration shows a lawn with the track for installation of the perimeter wire.




During installation, identify any secondary areas and closed areas. A secondary area is part of a lawn connected to the primary lawn with a passage that is difficult to reach by the robot's normal movement. The area must be reachable without any rises or drops greater than those allowed. Whether a zone is to be defined a "secondary area" also depends on the size of the primary area. The larger the primary area, the harder it will be to reach narrow passages. More generally, a passage narrower than 200 cm (78.74 ") is considered a secondary area. The number of secondary areas managed depends on the characteristics of the model (See "Technical Specifications").

The minimum passage allowed is **70 cm** (27.56 ") from each edge of the perimeter wire. The perimeter wire must be positioned at a distance of (to be indicated below) from any objects outside the lawn; therefore, the total passage available should be **140 cm** (55.12 ").

If this passage is very long, the width should not be greater than **70 cm** (27.56 ").

During programming, it is necessary to configure the size of the secondary areas as a percentage of the lawn, and the quickest direction for reaching it (clockwise or counter-clockwise), as well as the number of meters of wire needed to reach the secondary area. See "Programming Mode."

If the aforesaid minimum requirements are not met i.e. an area separated by a rise or drop with characteristics that cannot be managed by the robot or a passage (corridor) narrower than **70 cm** (27.56 ") from perimeter edge to perimeter edge, then this area of the lawn is considered a "Closed Area." To mark a "Closed Area" lay the outgoing and incoming perimeter wire in the same track at a maximum distance of **1 cm** (0.40 "). In this case, the robot is unable to reach the area autonomously, and must be managed as described in the chapter "Management of Closed Areas." The management of "Closed Areas" reduces the square meters that can be managed autonomously by the robot.

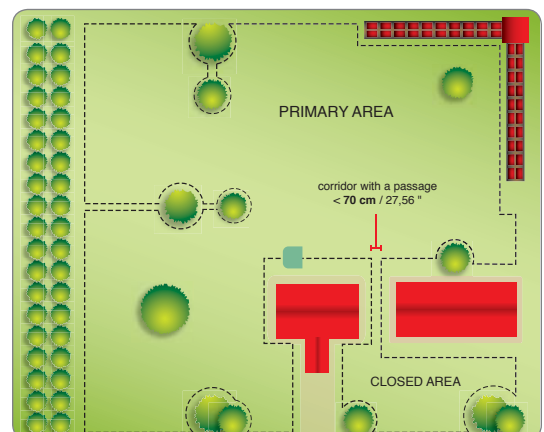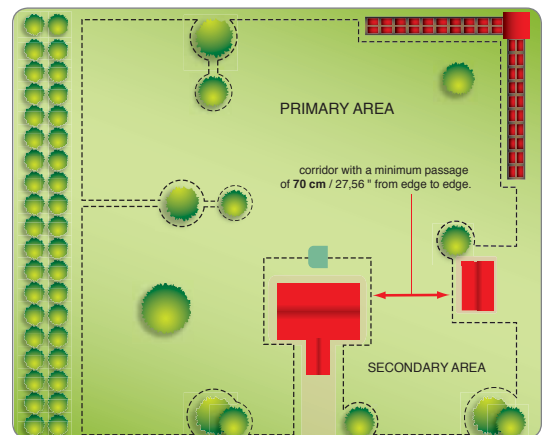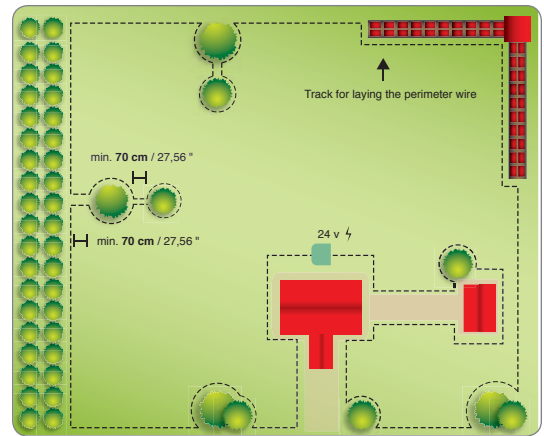

4. If there is a pavement or driveway inside or outside the work area, which is at the same level of the lawn, lay the perimeter wire at a distance of 5 cm (1.96 ") from the edge of the pavement. The robot will come out slightly from the lawn and all the grass will be mowed. If the pavement is made of metal or if there is a metal manhole cover, shower plate or electrical wires, lay the perimeter wire at least 30 cm (11.81 ") from the metal object in order to prevent malfunction of the robot and disturbances on the perimeter wire.




Important

EN


The illustration shows an example of the elements inside and on the perimeter of the work area and the distances to follow for the correct laying of the perimeter wire. Mark the boundary of elements in iron or other metals (drain covers, electric connections, etc.) to prevent any interferences to the signal of the perimeter wire.



If an obstacle is present inside or outside the work area, such as a kerb or wall, lay the perimeter wire at least 35 cm (13.78 ") from the obstacle. Increase the distance between the perimeter wire and the obstacle by at least 40 cm (14.75 ") if you want to avoid the robot from bumping into the obstacle. Any grass close to the edge and outside the defined work area can be cut with a grass trimmer or brushcutter.

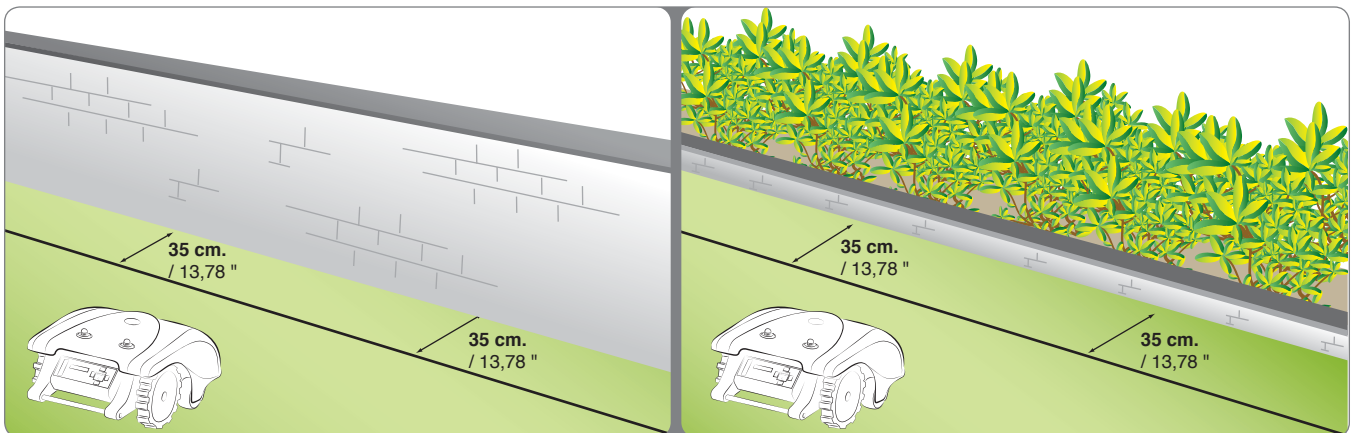

If a flower bed, hedge, plant with protruding roots, small ditch of 2-3 cm or small kerb of 2-3 cm is present inside or outside the work area, lay the perimeter wire at least 30 cm (11.81 ") from the obstacle to prevent damage being done to the robot or the obstacle. Any grass present inside the work area can be cut and finished with a grass trimmer or brushcutter.

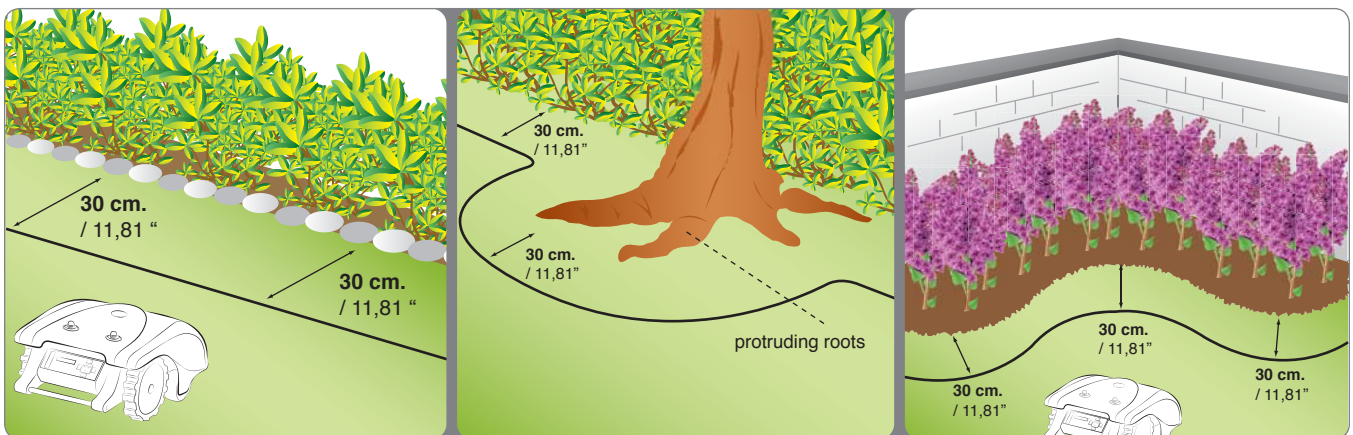


If there is a pool, pond, ravine, ditch, steps or public roads not protected by a wall inside or outside the work area, lay the perimeter wire at least 90 cm (35.43 ") from the edge. To reduce the distance of the perimeter wire for the best set-up and operation of the robot, we recommend installing an additional fence of at least 15 cm. This will allow laying the perimeter wire at the regular distances described in the previous paragraphs.



Important


Carefully follow the distances and slopes specified in the booklet to guarantee excellent installation and proper functioning of the robot. Increase the distance by at least 30 cm (11.81 ") in the presence of slopes or slippery ground.

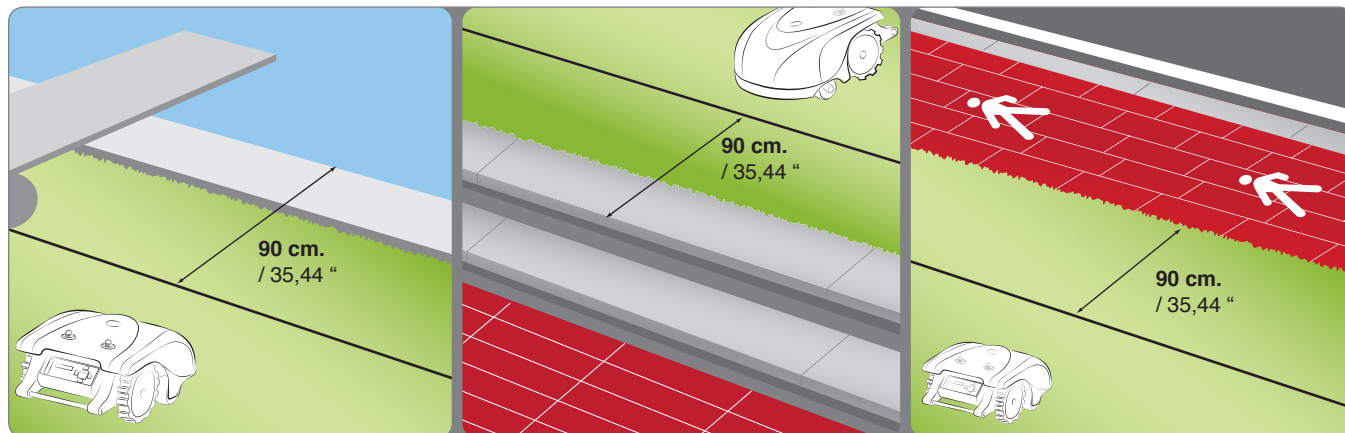

Obstacles resistant to knocks, such as trees, bushes or poles without sharp edges present inside the work area do not need to be delimited. The robot hits the obstacle and changes direction. If you don't want the robot to knock into the obstacles and for its safe and silent operation, all the fixed obstacles need to be delimited. Slightly sloping obstacles such as flower pots, stones or trees with protruding roots must be delimited to protect the cutting blade and the obstacles themselves.

To mark the boundary of the obstacle, start from the outside point of the perimeter nearest the object to delimit, arrange the perimeter wire so that it reaches the obstacle, goes around it and then travels back along the previous path, observing the regular distances described in the previous paragraphs. Overlap the outgoing wire and the incoming wire so that they pass under the same peg, this will allow the robot to go past the perimeter wire.

For the robot to function correctly, the minimum overlapping length should not be greater than 70 cm (27.56 ") in order to allow the robot to move regularly.

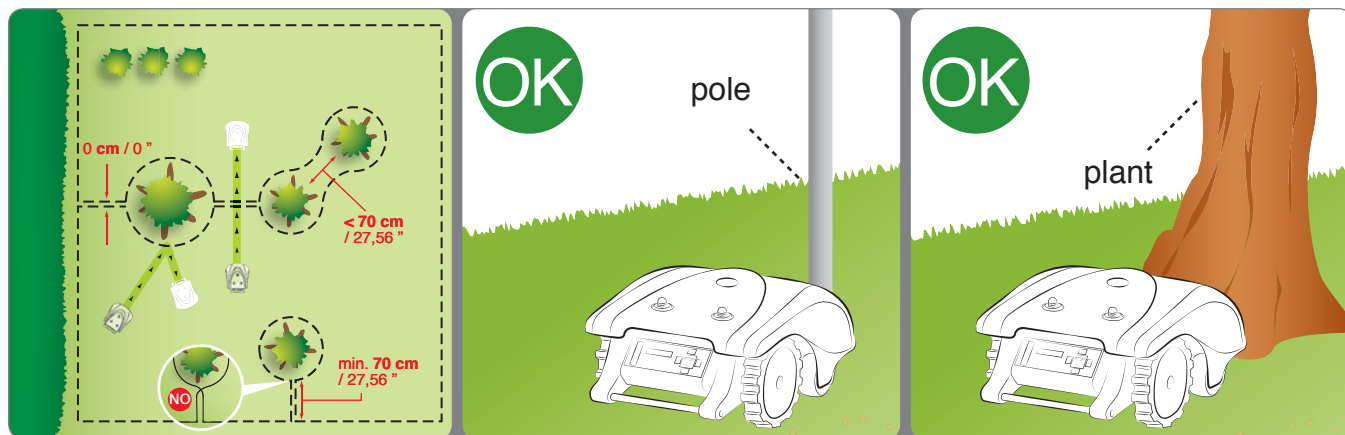


INSTALLATION OF PERIMETER WIRE

The perimeter wire can be buried or laid on the ground. If you have a wire trenching machine, it is better to bury the wire for greater protection. Otherwise, install the wire on the ground with the pegs provided as described below.



Important


Start laying the perimeter wire from the installation area of the charging station, leaving a couple of extra meters so that it can be cut down to size when connecting to the power unit during the final phase.

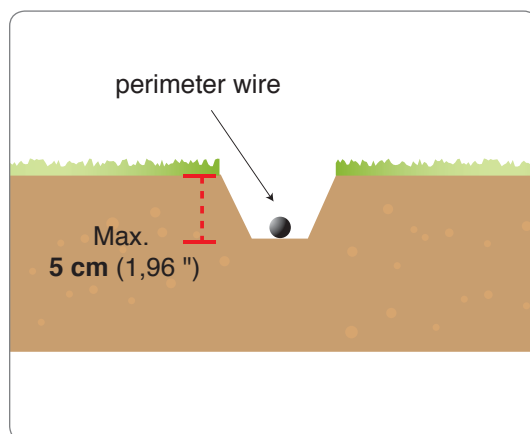

Ground wire



Cut the grass as low as possible with a traditional lawnmower or trimmer along the entire path where the cable will be laid. This will make it easier to lay the wire in contact with the ground, and to prevent it from being cut by the cutting blade, and then having to join the two ends together as described below.

1. Position the wire in a clockwise direction along the entire track and secure it with the pegs supplied (distance of 100÷200 cm (39.37÷78.74 ") between each peg).
 - When laying the perimeter wire, follow the installation direction around the flowerbeds, i.e. a counter-clockwise direction.
 - In straight stretches, secure the wire so that it is taut and remains flat against the ground.
 - In curved sections, secure the wire so that it is not twisted, but curves nicely (radius of 20 cm).

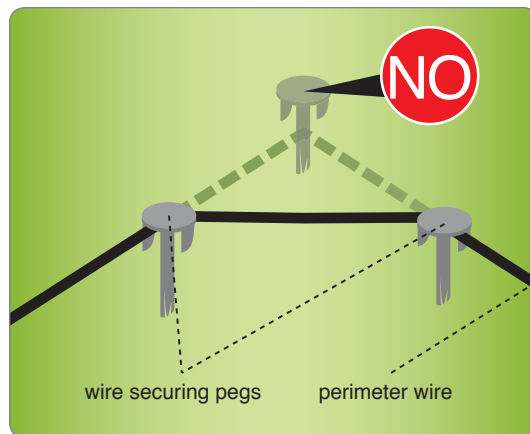

Buried wire

1. Dig the ground in a regular and symmetrical manner with respect to the line traced on the ground.
2. Position the wire in a clockwise direction along the track at a depth of a couple of centimetres (around 2÷3 cm (0.7874÷ 1.1811 ")). Do not bury the wire deeper than 5 cm, so as not to reduce the quality and intensity of the signal picked up by the robot.
3. During the laying of the wire, it may be necessary to secure it in some points with the pegs provided in order to hold it in place when covering with the ground.
4. Cover all the wire with soil and make sure it remains taut in the ground.

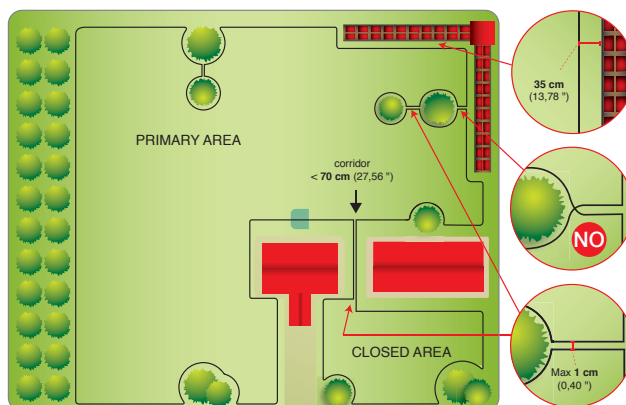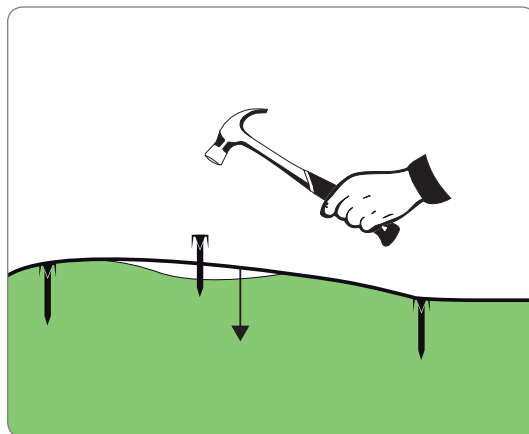


Joining of the perimeter wire



Important

A buried wire or a wire laid on the ground can be joined to other wires having the same characteristics (see figure). When joining the two wires, make sure to use self-sticking tape (for example, 3M Scotch 23). Do not use insulating tape or any other type of joining devices (wire terminals, clamps, etc.).

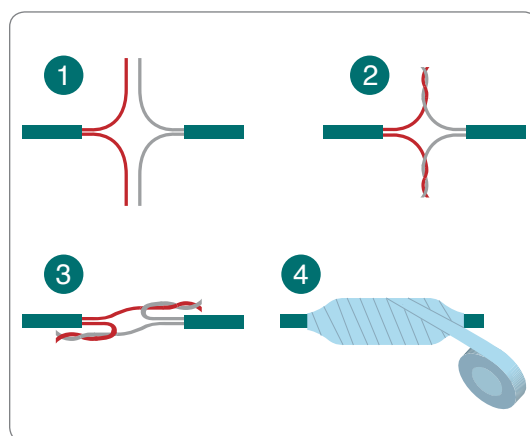



Warning – Caution





Before carrying out any operations, disconnect the robot from the mains power.

Position the power supply unit in an area that cannot be reached by children. For example, at a height above 160 cm (63 ").


1. Install the power supply unit (A)(B).
2. Remove the protection (L).
3. Position the base in the predefined area.
4. Insert the perimeter wire (M) under the base.
5. Connect the two ends of the wire to the terminals of the base.

6. Fasten the base (N) to the ground with the pegs (P). If necessary, secure the base with screw anchors (Q).

7. Connect the power cord (E) of the charging station (N) to the power supply unit (A)(B).
8. Connect the plug of the power supply unit (A) to the electrical outlet.
9. If the LED of the transmitter flashes, the connection is correct. Otherwise, find the anomaly (see "Troubleshooting Guide").
10. Replace the protection (L).

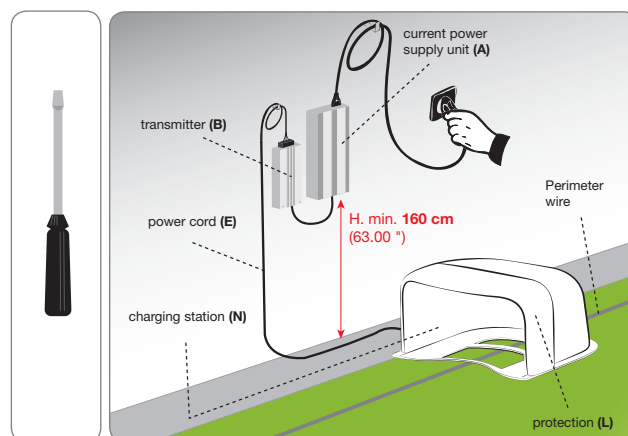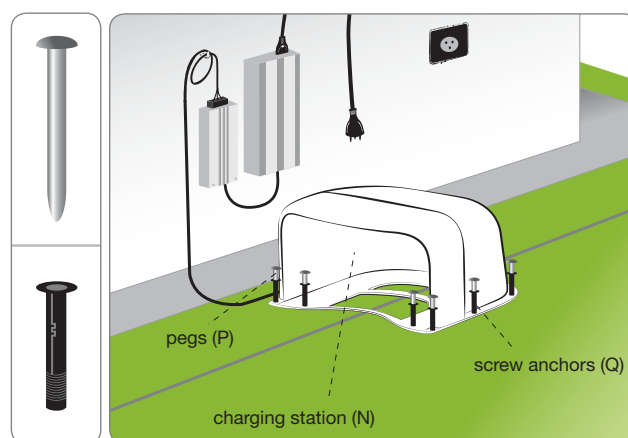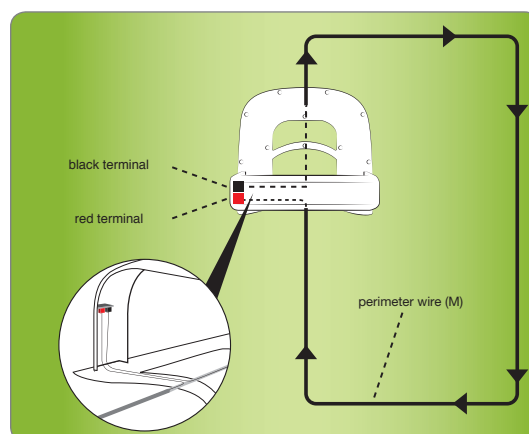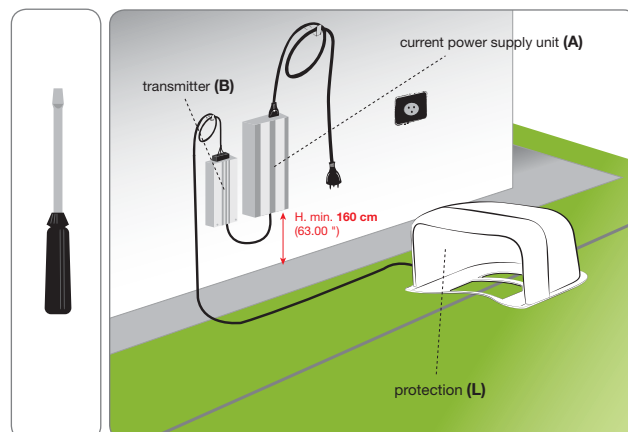

1. Place the robot inside the charging station.
2. Press the ON key.
3. After a few seconds, the "CHARGING" message will appear on the display.
4. Press the "Start/Pause" key. The "PAUSE" function appears on the display. The batteries start the charging cycle.
5. At the end of charging, the robot can be programmed for initial start-up (see "Programming Mode").

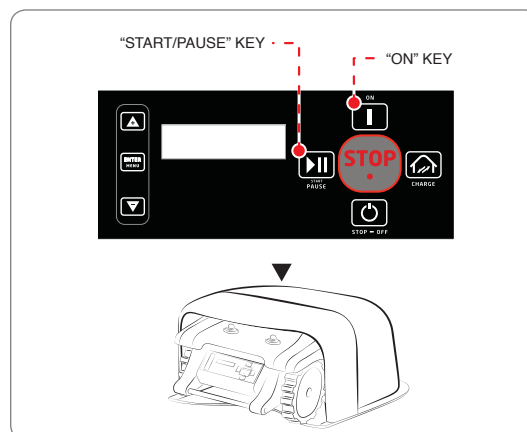

Important

On first use, always charge the batteries for at least 4 hours.

ADJUSTMENTS

ADJUSTMENT RECOMMENDATIONS



Important

The user must make any adjustments according to the procedures described in this manual. Do not make any adjustments which are not expressly indicated in this manual. Any special adjustments, not expressly indicated in this manual, must only be performed by personnel from the Manufacturer's authorised service centre.

ADJUSTMENT OF CUTTING HEIGHT


Before setting the cutting height of the blade, make sure the robot is safely off (see "Robot Safety Stop").



Important

Use protective gloves to prevent injuries to your hands.

1. In models equipped with an antitheft alarm, disable it to prevent activation. (See "Programming Mode").
2. Unfasten the lid and lift it (A).
3. Loosen the screw (C).
4. Lift or lower the cutting group (D) to define the desired height. This level can be found on the graduated scale.
5. Tighten the screw (C) until the adjustment is made.

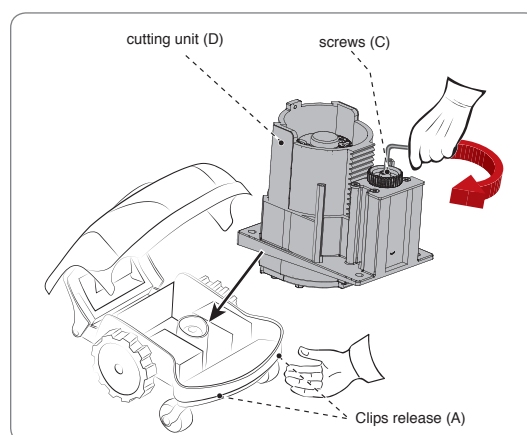

Important

Do not use the robot to mow grass which is 1 cm (0.40 ") higher than the cutting blade. Reduce the cutting height gradually. It is recommended to reduce the height by at least 1 cm (0.40 ") every 1-2 days until the ideal height is reached.

6. Lower and fasten the lid (A).

RECOMMENDATIONS FOR USE

EN



Important

- When using the robot for the first time, it is recommended to carefully read the whole manual and to fully understand it, especially the safety information.
- The product must only be used for its intended purpose as described by the Manufacturer. Do not tamper with any device to obtain different operating performances.

DESCRIPTION OF ROBOT COMMANDS

The illustration shows the position of the control functions on the machine.


A. DISPLAY: lights up to show all the functions.

B. ON: press to turn on the lawnmower.

C. OFF/STOP: press this key to stop the robot, the display turns off.

D. START/PAUSE: press to stop the mower, leaving the display on "stand-by"; in this way, the mower can be programmed. Press again to restart the mower. If the key is pressed while the mower is charging, the mower does not resume working until it is pressed again and the word "PAUSE" disappears from the display.

E. CHARGE: press this key to allow the mower to return to its station and, consequently, to start the battery charging process. If pressed while the robot is being charged, the robot interrupts the charging cycle and starts operating again.

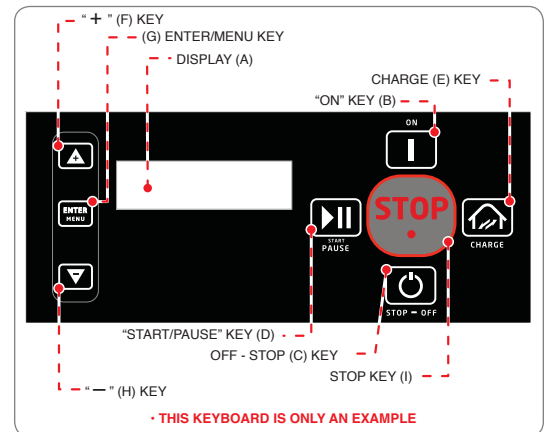

- F. "+" KEY:** during operation, press this key to restart the blade which was previously stopped. During programming, press this key to increase the values shown in the menu.
- G. ENTER/MENU:** during operation, press this key to turn on the spiral function. During programming, press to confirm and memorise the selection.
- H. "-" KEY:** during operation, press to stop the blade. During programming, press to decrease the values shown in the menu.
- I. STOP:** Press to stop the mower safely. Only use in case of imminent danger and to perform maintenance on the robot.

MENU ACCESS

The robot functions can be programmed via the different functions of each menu. The table reports the list of menus available with the relative functions.

To program the robot, proceed as follows.

1. Press the "ON" key.
2. Enter the password (if prompted) (See "Password Entry").
3. If the robot is turned on when inside the charging station, after a few seconds the message "CHARGING" appears on the display, then press the "Start/Pause" key.
4. The "PAUSE" function now appears on the display.
5. Press the "ENTER/MENU" key. This allows entering into programming menu and the "SETTINGS" function appears on the display.


NAVIGATION



Follow these instructions to navigate through the programming menu:

- "+" and "-": allows scrolling through the menu items in a cyclical manner or changing the value of the function displayed.
- "ENTER/MENU": moves to the next menu level or confirms and memorises the value shown in the display and skips to the next function.
- "START/PAUSE": goes back to the previous menu level until exiting from the programming menu.
- "OFF/STOP": turns off the robot without confirming the last function displayed.

The menu has a tree structure. Follow the introduction summarising the programming functions available. A detailed explanation of each function is found in the pages following the flow diagram.

Some functions are not available on all the models. See the "Technical Specifications".

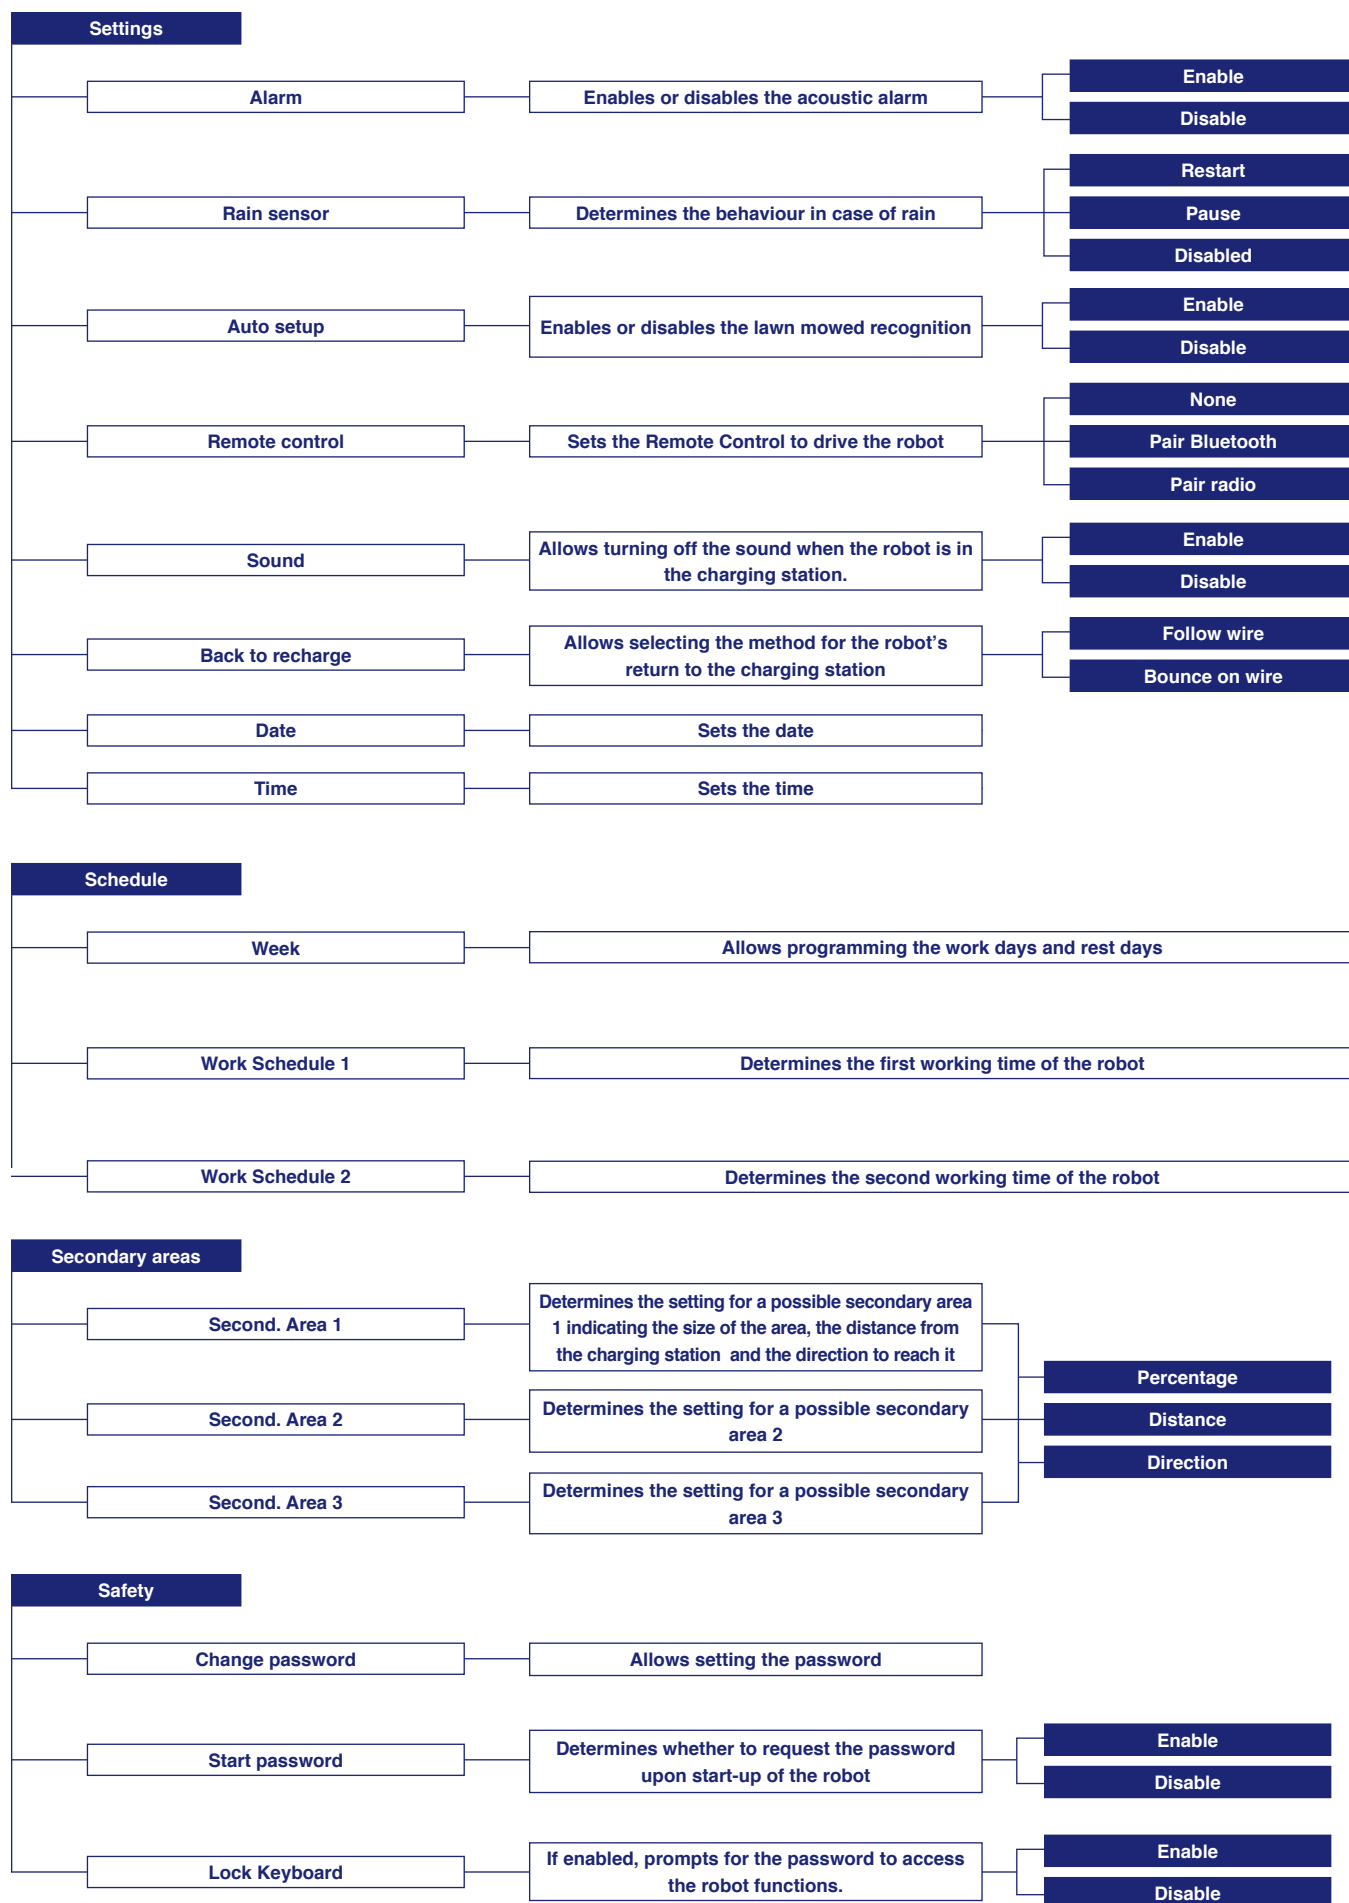

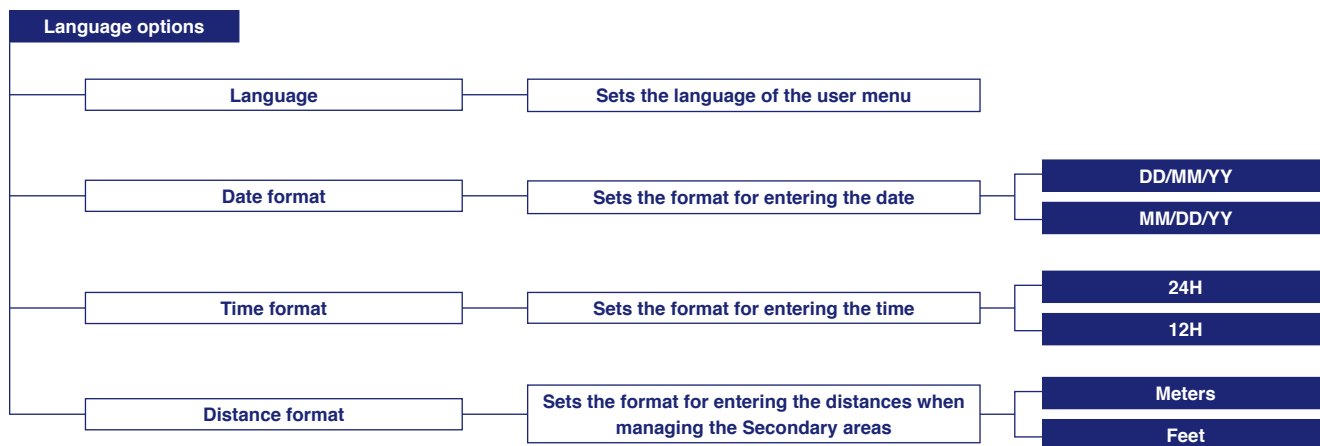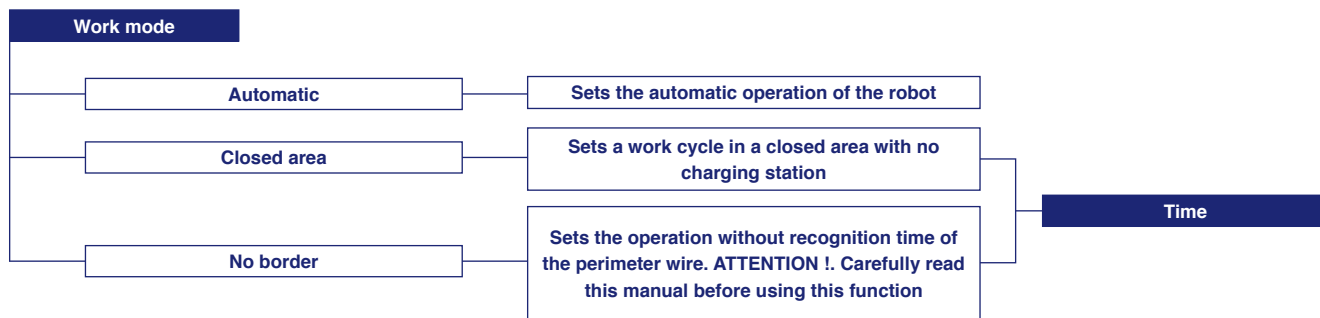

SETTINGS – PROGRAMMING MODE

ALARM: (only for some versions, see “Technical Specifications”) function for enabling or disabling the antitheft alarm. The password is required to disable the alarm (Default 0000).

- **Disable:** Disables or turns off the alarm if it is on. A continuous and descending sound signals the disabling of the alarm.
- **Enable:** Turns the alarm on. If the robot is lifted by its handle, the alarm beeps. A triple beep signals the enabling of the alarm.

RAIN SENSOR: Function for setting the robot in case of rain.

- **Restart:** in case of rain, the robot returns to the station and remains in “charging” mode. At the end of the charging cycle, the robot only starts mowing again if it has stopped raining.
- **Disabled:** in case of rain, the robot continues to mow.
- **Pause:** in case of rain, the robot returns to the station and remains there (in “charging” mode) until the “Pause” key is pressed.

AUTO SETUP: (only for some versions, see “Technical Specifications”), function for automatically reducing the robot’s mowing time based on the conditions of the lawn.

- **Enable:** The robot reduces the working time based on the conditions of the grass. When the lawn surface is mowed, the machine automatically sets a rest period which delays subsequent departures from the charging station. However, the robot will operate within the set working times.
- **Disable:** The robot will work according to the set time and until the batteries run out.



REMOTE CONTROL: (only for some versions, see “Technical Specifications”). See the instructions on the remote control / console for the pairing procedure.


SOUND: Allows disabling the acoustic signal when the robot is in the charging station.

BACK TO RECHARGE: Allows selecting the method for the robot’s return to the charging station.

1. **“Follow wire”.** The robot returns to the charging station by positioning the wheels on either side of the perimeter wire.
2. **“Bounce on wire”.** The robot runs alongside the perimeter wire at an indicative distance going from a few cm to 1 m (3.2’), touching it occasionally, until it recognises the “Recall” to the recharging station. See “Installation” chapter.

DATE: Function for setting the date.


TIME: Function for setting solar or daylight saving time.

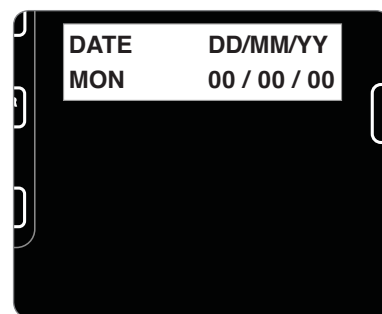

WORK SCHEDULES – PROGRAMMING MODE

WEEK: function for programming the operating days of the robot during the week. The cursor automatically positions itself under the letter **“M” (Monday)**. Setting all the days at **“111111”** means that the robot will work every day. Setting **“000000”** means that the robot will not work on any day of the week.

- Value 1 : Robot’s work day.
- Value 0 : Robot’s rest day.

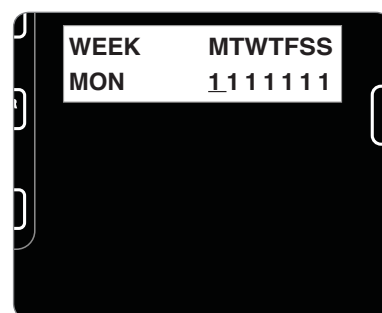


Important

To get the best out of the robot, it is recommended to program the robot to work every day.

WORK SCHEDULE 1: Function for setting the first time of the robot’s working day. The cursor automatically positions itself in the area under the first time (e.g. 10:00am to 1:00pm). Set the time for the start and end of the work. Setting the time at **“00:00 – 00:00”** means that the robot will not work during Work Schedule 1. Once entered. If the entered time is wrong such as if the time overlaps with the working time 2 or if the starting time is after the end time, the robot beeps and resets the set value.

WORK SCHEDULE 2: Function for setting the second time of the robot’s working day.

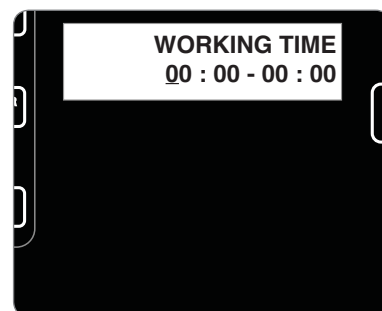

Important

If it is necessary to set secondary areas, then it is preferable to program both work schedules in order to increase the mowing frequency of the area.

The setting of the time is essential for the robot’s proper functioning. Many parameters influence the setting of the work schedules, such as the number of secondary areas, the number and the power of batteries of the robot, complexity of the lawn, type of grass, etc. Generally, the working hours must be increased slightly when mowing gardens with secondary areas, with lots of obstacles and complicated areas. Below is a table with the indicative times for configuring the robot on first use.

NB. Set all the weekdays at **“1”** – “Work Days.”

m ² (ft ²)	Time 1	Time 2
200 (2152)	10:00 11:00	
500 (5380)	10:00 12:00	
900 (9684)	10:00 11:30	16:00 17:30
1200 (12912)	10:00 12:00	16:00 18:00
1500 (16140)	10:00 12:00	16:00 19:00

2000 (21520)	09:00 13:00		17:00 20:00
	mod. 2L2DE0	09:00 21:00	
2500 (26900)	09:00 13:30		18:00 22:30
	mod. 2L2DE0	09:00 22:30	
3000 (32280)	08:00 23:00		
3500 (37660)	07:30 23:30		


SECONDARY AREAS – PROGRAMMING MODE

If the area to be mowed includes secondary areas based on the definition given in the chapter “Preparation and Marking the Boundaries of the Work Areas”, then it is necessary to program the secondary areas so the robot knows how to reach them and how many times.

SECONDARY AREA : Function for defining the automatic mowing of a secondary area.

- **Percentage:** allows setting the dimensions of the secondary area to be mowed in respect to entire lawn surface. Below is a table to use as a guide for configuring a secondary area:

- 20% indicates a very small area.
- 30% Indicates an area which is approximately one third of the entire garden.
- 50% Indicates an area which is approximately half of the entire garden.
- 80% Indicates a secondary area which is bigger than the primary area.
- 100%. The robot will follow the perimeter wire to mow the secondary area each time it exits the charging station.

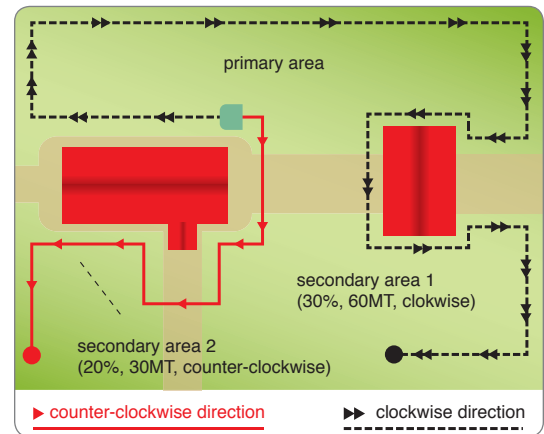

- **Distance:** This allows setting the distance necessary for the robot to reach the internal part of the secondary area following the perimeter wire. It is recommended to measure half the distance of the secondary area to ensure that the robot starts working inside that area.
- **Direction:** Indicates the shortest direction for reaching the secondary area. The direction can be clockwise or counter-clockwise. The robot exits from the charging station and follows the wire in the indicated direction to reach the secondary area.

SECONDARY AREA 2: Function for defining the automatic mowing of secondary area number 2. This setting uses the same configuration parameters as those used for secondary area 1.

SECONDARY AREA 3: (only for some versions, see “Technical Specifications”). Function for defining the automatic mowing of secondary area number 3. This setting uses the same configuration parameters as those used for secondary area 1.

SAFETY – PROGRAMMING MODE

CHANGE PASSWORD: function for setting or changing the password.

- **No:** the password entered does not need to be changed.
- **Yes:** for entering or changing the password which will be used to start the robot and disable the alarm. You will be prompted to enter the following information :
 - Password: Enter the old password (manufacturer's default 0000)
 - New password: Enter the new password.
 - Repeat password: Enter the new password again.



Important

To set or change the password, it is first necessary to enter the previous one and then enter the new one. Upon purchase, the password entered by the manufacturer consists of four numbers (0000).



Important

When entering the password, you will be prompted to re-enter the password in order to ensure that it has been set correctly. In order to not forget the password, choose a number combination that is easy to remember.

START PASSWORD: This function allows defining whether you want to enter a password each time the robot is turned on after a period of inactivity (e.g. winter storage).

- **No:** There is no need to enter a password each time the robot is turned on. The password will only be required to disable the alarm. The robot requires the password to confirm this parameter.
- **Yes:** The password will be required each time the robot is started.

OPERATING MODE – PROGRAMMING MODE

Function for setting the operating mode of the robot. The robot automatically returns to “AUTOMATIC” mode when turned off.”

- **Automatic:** Normal operating mode. The robot recognises the perimeter wire and returns to the charging station whenever necessary.
- **Closed area:** Operating mode in closed areas with no charging station. For the correct use of this mode, refer to “USE OF ROBOT IN CLOSED AREAS WITH NO CHARGING STATION.”
- **No border:** Operating mode without recognition of the perimeter wire. Use in small areas whose whole perimeter is bounded by a wall or fence at least 15 cm high, without installation of the perimeter wire and under the supervision of the user and with the remote control.

LANGUAGE OPTIONS – PROGRAMMING MODE

LANGUAGE: function for selecting the language to use for the messages and user menu. Scroll through the various options with the “+” or “-” key and confirm with “Enter”.

- DATE FORMAT
- TIME FORMAT
- DISTANCE FORMAT

These functions allow personalising the date, time and distance formats.

INITIAL START UP – AUTOMATIC MODE

The automatic cycle is started during the initial start-up or after a period of inactivity.

1. Check that the height of the lawn surface to mow is compatible with the proper functioning of the robot (see “Technical Specifications”).
2. Adjust the cutting height as desired (see “Adjustment of Cutting Height”).
3. Check that the work area has been correctly marked and that there are no impediments to the regular functioning of the robot as indicated in the section “Preparation and Marking the Boundaries of the Work Areas” and following sections.
4. Position the robot inside the charging station.
5. Press the ON key and wait a few seconds for the robot to turn on completely.
6. If starting the robot for the first time, it is necessary to program the settings. However, if starting the robot after a long period of inactivity, check that the programmed functions correspond to the actual condition of the lawn to be mowed (e.g. addition of a pool, plants, etc.) (See “Programming Mode”).
7. After a few seconds, the message “CHARGING” will appear on the display.
8. The robot starts to mow the lawn according to the modes programmed.


ROBOT SAFETY STOP

During use, it may be necessary to stop the robot. In normal conditions, the robot can be stopped with the "OFF/STOP" key. In case of danger or when performing any maintenance, it is necessary to stop the robot in safe conditions in order to prevent the blade from accidentally starting. Press the "STOP" key to stop the robot. Press the "STOP" key again to restart the robot.



Important

The robot safety stop is necessary during maintenance and repairs (for example, replacement and/or recharging of the battery, blade replacement, cleaning operations, etc.).

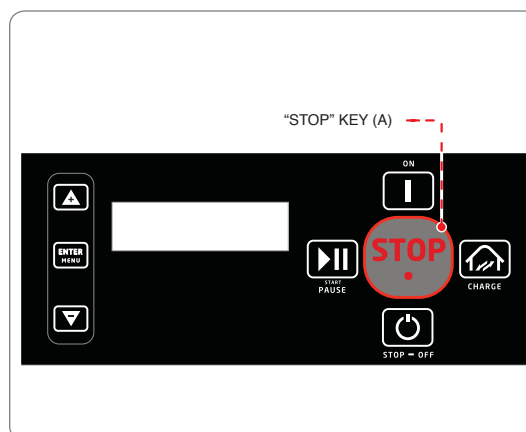

AUTOMATIC RETURN TO THE CHARGING STATION

The robot stops the work cycle if the following conditions are verified.

- **End of working time:** At the end of the working time, the robot automatically returns to the charging station and starts operating again according to what has been programmed (see "Programming Mode").
- **Rain:** In case of rain, the robot automatically returns to the charging station and starts operating again according to what has been programmed (see "Programming Mode").
- **Battery to be charged:** The robot automatically returns to the charging station.
- **Lawn mowed (only for some versions, see "Technical Specifications):** If the sensor detects that the lawn has already been mowed, it automatically returns to the charging station and starts operating again according to what has been programmed (see "Programming Mode").

USE OF THE ROBOT IN CLOSED AREAS WITH NO CHARGING STATION


The start-up of the robot in "closed area" mode is for mowing closed areas which are delimited by the perimeter wire and which have no charging station.




Warning – Caution

Carry the robot using the handle provided. Do not grab the robot by the body and always use the handle provided.

Position the robot inside the work area at a minimum distance of 100 cm (39.37 ") from the perimeter wire and from any other obstacle.

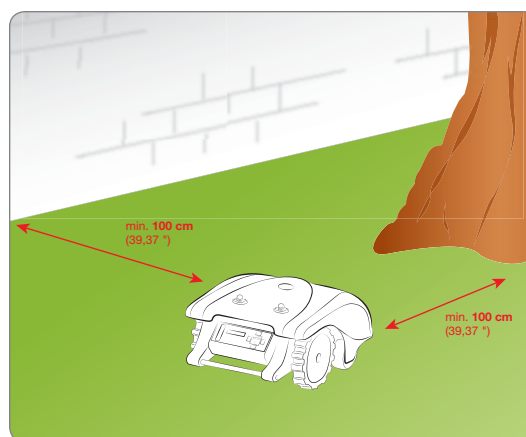

1. Press the ON key.
2. Enter the password (if prompted) (See "Password Entry").
3. The "PAUSE" function appears on the display.
4. Enter into programming mode and select "OPERATING MODE". Select "CLOSED AREA" and the words "CLOSED AREA – 60 Min" (default value) will appear on the display.
5. Press either the "+" or "-" key to set the minutes.
6. Press "Enter" to confirm.
7. Press the "Start/Pause" key to exit the programming menu and then restart the robot. After the set time, the robot safely stops next to the perimeter wire.
8. Restore the normal functioning of the robot as described in chapter "INITIAL START UP – AUTOMATIC MODE".

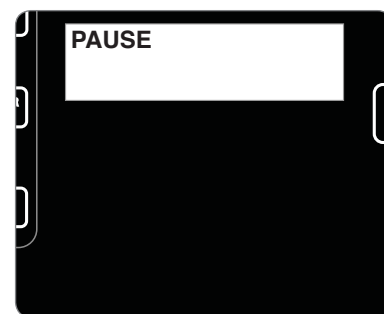

STARTING THE ROBOT WITHOUT THE PERIMETER WIRE

This mode can be executed with the remote control to mow areas with boundaries at least 15 cm high.



Important

When using the robot without the perimeter wire, make sure the robot does not run into obstacles, corners or dangerous objects.

1. Press the ON key.
2. Enter the password (if prompted) (See "Password Entry").
3. Press "Enter" to enter into programming mode. Scroll through the items until reaching "OPERATING MODE." Set the option "NO PERIMETER." Press either the "+" or "-" key to set the working minutes of the robot.
4. Press "Enter" to confirm the selection.
5. Press the "Start/Pause" key several times to exit from the menu and restart the robot.
6. Manoeuvre the robot using the remote control.
7. At the end of mowing, press the "OFF/STOP" key to safely stop the robot (see "Robot Safety Stop").



Important


It is recommended to move the robot with the remote control when mowing inside a narrow, well-visible area, and to make sure there are no people or pets next to the operating zones of the robot.

PASSWORD ENTRY

The robot can be protected by a password consisting of four numbers which can be enabled, disabled and personalised by the user (see "Programming Mode").

1. On the display appears the message:
2. Press either the “+” or “-” key to set the first number.
3. Press “Enter” to confirm. The cursor moves to the next position.
4. Repeat the procedure to set all the numbers of the password.

The robot is now ready for use.

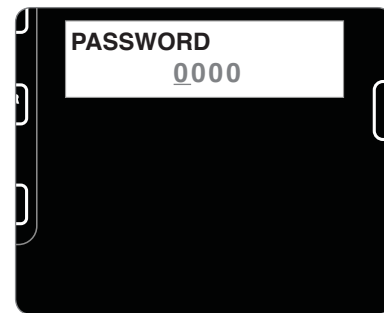


VISUALISING THE DISPLAY DURING THE WORK PHASE

While in operation, the following data appears on the display of the robot:

- left wheel motor speed
- blade motor speed
- right wheel motor speed
- battery voltage

While the robot is charging, the word “CHARGING” appears on the display.

If the robot is outside the working time, the display shows the day and time of the next scheduled start.

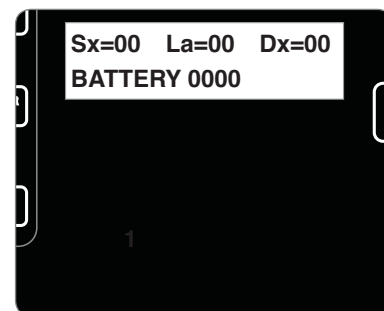

PROLONGED INACTIVITY AND RESTARTING


If the robot has not been used for a long period of time, it is necessary to perform a series of operations to guarantee the correct functioning at the time of reuse.

1. Fully charge the battery before winter storage. Recharge the battery at least once every five months.
2. Have the routine maintenance performed by an authorised dealer. This is essential for keeping the robot in good condition. The assistance service usually includes the following operations:
 - Total cleaning of the robot, the cutting blade and all the other moving parts.
 - Cleaning of the inside of the robot.
 - Checking of robot functioning.
 - Checking and, if necessary, replacement of any worn parts such as the cutting blade.
 - Checking of the battery capacity.
 - If necessary, the dealer may also load new software.
3. Accurately clean the robot and charging station (see “Robot Cleaning”).
4. Check any worn or damaged components such as the cutting blade and evaluate their replacement.
5. Store the robot in a protected and dry place with an ambient temperature between 10° and 20° C, out of reach of foreign elements (children, animals, other foreign objects, etc.). Store the robot at a temperature below 20°C in order to reduce the automatic discharge of the batteries.
6. Disconnect the power plug from the power supply unit (A).
7. Cover the charging station (C) to prevent any foreign materials from getting inside (leaves, paper, etc.) and for preserving the contact plates.

Restarting

Before restarting the robot after a long period of inactivity, proceed as follows:

1. Connect the plug of the power supply unit (A) to the electrical outlet.
2. Reconnect the main electrical power supply.
3. Position the robot inside the charging station.
4. Press the ON key.
5. Enter the password (if prompted) (See "Password Entry").
6. After a few seconds, the message "CHARGING" will appear on the display.
7. The robot is now ready to be used (see "Programming Mode").

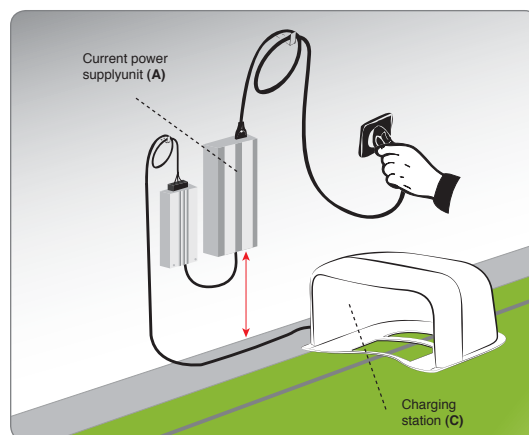


BATTERY CHARGING AFTER PROLONGED INACTIVITY



Danger - Attention

Do not recharge the robot in explosive and flammable environments.

1. Supply electricity to the charging station and make sure the plates are clean.
2. Position the robot inside the charging station.
3. Press the "ON" key (A).
4. Enter the password (if prompted) (See "Password Entry").
5. After a few seconds, the message "CHARGING" will appear on the display.
6. Press the "Start/Pause" key (B). The batteries start the charging cycle.
7. At the end of the charging cycle (approx. 6 hours), press the "OFF/STOP" key (C).
8. Store the robot in a protected and dry place with an ambient temperature between 10° and 20° C, difficult to reach by children, animals, other foreign objects, etc.

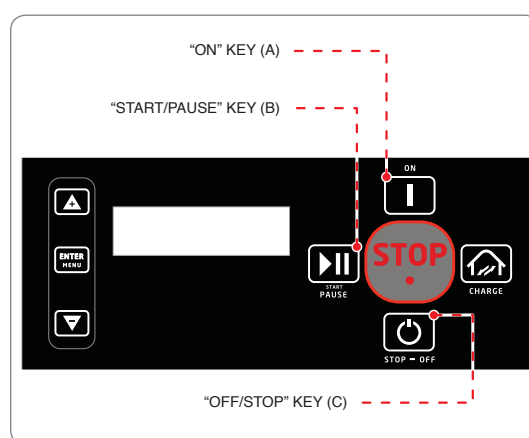

OPERATING TIPS

Below are some useful operating tips to follow when using the robot.

- Even after being suitably informed on the use of the robot, it is always a good idea to simulate some test manoeuvres on first use to identify the commands and main functions.
- Check and secure the fastening screws of the main components.
- Mow the lawn frequently to avoid excessive growth of the grass.
- Do not use the robot to mow grass which is 1 cm (0.40 ") higher than the cutting blade. In case of high grass, lift the cutting blade and then lower it gradually on the following days.
- If the lawn is equipped with an automatic sprinkler system, program the robot to return to the charging system at least one hour before the sprinklers are turned on.
- Check the slope of the ground and make sure the maximum values allowed are not exceeded in order to prevent damage to the robot and the sprinklers.
- It is recommended to program the robot so that it does not work more than is necessary, also taking into consideration the different growth rates of the grass in different seasons, so as not to subject it to unnecessary deterioration and reduction of the battery life.
- When using the robot, make sure the work area is clear of people (in particular, children, the elderly or disabled people) and pets in order to prevent safety risks. To minimise the chance of injury, program the robot so that it operates at suitable times of the day.



Important

During maintenance, use personal protection equipment indicated by the Manufacturer, especially when working on the blade. Before carrying out any type of maintenance, make sure the robot is turned off (see “Robot Safety Stop”).

SCHEDULED MAINTENANCE TABLE

Frequency	Part	Type of maintenance	Reference
Weekly	Blade	Clean and check the efficiency of the blade. If the blade is bent or very worn, replace it.	See “Robot Cleaning” See “Blade Replacement”
	Battery charging knobs	Clean and remove any rust.	See “Robot Cleaning”
	Contact plates	Clean and remove any rust.	See “Robot Cleaning”
Monthly	Robot	Clean the robot	See “Robot Cleaning”

ROBOT CLEANING

1. Stop the robot safely (see “Robot Safety Stop”).



Warning – Caution

Use protective gloves to prevent cutting your hands.

2. Clean all the outside surfaces of the robot with a sponge soaked in warm water and a mild detergent. Squeeze well to remove any excess water before use.



Warning – Caution

The use of too much water may cause water to penetrate into the device which could damage the electrical parts.


3. Do not use solvents or benzene so as not to damage the painted surfaces and plastic components.
4. Do not wash the inside parts of the robot and do not use jets of pressurised water so as not to damage the electric and electronic parts.



Warning – Caution

In order to avoid irreversible damage to the electric and electronic components, do not immerse the robot, partially or completely, in water because it is not watertight.


5. Check the lower part of the robot (cutting blade area, and wheels), use a brush suitable to remove deposits and/or residues that may impede the proper functioning of the robot.
6. Remove any grass and leaves from the gripping areas of the robot.
7. Clean the knobs of the battery charger (A), the contact plates (B) and remove any deposits or residuals caused by electric contacts with a dry cloth and, if necessary, with fine sandpaper.
8. Clean the inside of the charging station to remove any accumulated residuals.

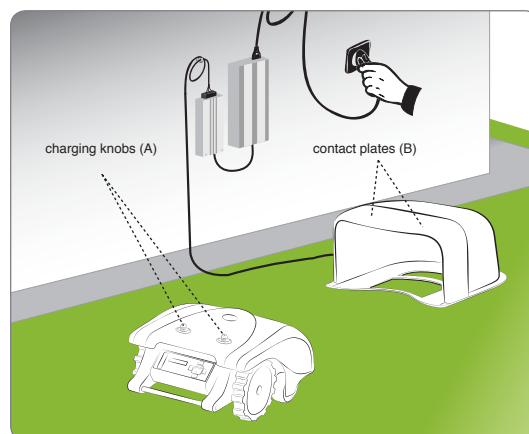




TROUBLESHOOTING

TROUBLESHOOTING GUIDE

The information below is designed to help identify and correct any faults and/or malfunctions which may occur during operation. Some faults can be fixed by the user, while others require specific technical skills or special expertise and therefore must only be fixed by qualified personnel with certified experience in the specific field of intervention.

Problem	Cause	Remedies
The antitheft alarm continues to operate	Alarm enabled	Disable the alarm (see "Programming Mode")
The antitheft alarm does not work	Alarm disabled	Enable the alarm (see "Programming Mode")
The robot is very noisy	Cutting blade damaged	Replace the blade with a new one (see "Blade Replacement")
	Cutting blade clogged by residuals (tape, cords, plastic fragments, etc.)	Safely stop the robot (see "Robot Safety Stop"). Unclog the blade  Warning – Caution Use protective gloves to prevent injuries to your hands
	The robot was started in the presence of obstacles (fallen branches, forgotten objects, etc.)	Stop the robot safely (see "Robot Safety Stop")
		Remove the obstacle and restart the robot (see "Start-up and manual stopping of the robot (in closed areas)")
	Electric motor failure	Have the motor replaced or repaired by your nearest authorised service centre
The robot does not position itself correctly inside the charging station	Incorrect positioning of the perimeter wire or power cord of the charging station	Check the connection of the charging station (see "Installation of charging station and power supply unit")
	Collapsing of ground next to the charging station	Position the charging station on a flat and stable surface (see "Planning of system installation")
The robot does not behave correctly around the flowerbeds	Perimeter wire laid incorrectly	Reposition the perimeter wire correctly (counter-clockwise direction) (see "Installation of perimeter wire")
The robot works at the wrong time	Clock was set incorrectly	Reset the clock of the robot (see "Programming Mode")
	Working time was set incorrectly	Reset the working time (see "Programming Mode")
The robot does not execute quick re-entry	Quick re-entry not setup correctly	Check the exact layout of the quick re-entry (see "Layout of the robot's quick re-entry to the charging station")

Problem	Cause	Remedies
The work area is not completely mowed	Not enough work hours	Extend the working time (see "Programming Mode")
	Cutting blade clogged with deposits and/or residuals	<p>Stop the robot safely (see "Robot Safety Stop")</p>  <p>Warning – Caution</p> <p>Use protective gloves to prevent injuries to your hands</p> <p>Clean the cutting blade</p>
	Cutting blade worn out	Replace the blade with an original spare part (see "Blade replacement")
	Work area too big compared to the actual capacity of the robot	Adjust the work area (see "Technical specifications")
	The batteries are about to run out	Replace the batteries with original spare parts (see "Battery replacement")
	The batteries do not charge completely	Clean and remove any rust from the contact points of the batteries (see "Robot Cleaning"). Recharge the batteries for at least 12 hours
Secondary area not completely mowed	Programming error	Correctly program the secondary area (see "Programming Mode")
"No Signal" appears on the display	The perimeter wire is not connected correctly (broken cable, no electrical connection, etc.)	Check the functioning of the electrical power supply, the correct connection of the power supply unit and of the charging station (see "Installation of charging station and power supply unit")
"Out of border" appears on the display	Too much slope	Delimit the area with too much slope (see "Planning of system installation")
	Perimeter wire laid incorrectly	Check that the wire has been installed correctly (too deep, next to metallic objects, distance between the wire marking the two elements less than 70 cm, etc.) (see "Planning of system installation")
	Perimeter wire marking the boundary of the inside areas (flowerbeds, bushes, etc.) laid in a counter-clockwise direction	Reposition the perimeter wire correctly (counter-clockwise direction) (see "Installation of perimeter wire")
	Overheated power supply unit	Adopt the appropriate measures to reduce the temperature of the power supply unit (ventilate or modify the installation area, etc.) (see "Planning of system installation")
	Incorrect wheel transmission	Check and, if necessary, correctly fasten the wheels
"Blackout" appears on the display	Interruption of the power supply to the transmitter	Restart the robot
	Overheated power supply unit	Adopt the appropriate measures to reduce the temperature of the power supply unit (ventilate or modify the installation area, etc.) (see "Planning of system installation")
	Presence of other installations nearby	Contact an authorised Service Centre
	Perimeter wire oxidised caused by damage to the protective sheathing	Contact your nearest authorised service centre to check the impedance (Ohm) of the perimeter wire
"Wheel error" appears on the display	Ground is uneven or contains obstacles that prevent movement	Make sure the lawn to be mowed is even and does not contain holes, stones or other obstacles. Otherwise, fill in any holes and remove any obstacles (see "Preparation and marking the boundaries of the work areas (primary and secondary areas)")
	Failure of one or both motors that operate the transmission of the wheels	Have the motor replaced or repaired by your nearest authorised service centre
"Sync error" appears on the display	The robot's receiver does not recognise the signal	Turn the robot off and then turn it back on. If the problem persists, contact your nearest authorised service centre

Problem		Cause	Remedies
"Too high grass" or "Blade Error" appears on the display		Cutting blade damaged	Replace the blade with a new one (see "Blade Replacement")
		Cutting blade clogged by residuals (tape, cords, plastic fragments, etc.)	Stop the robot safely (see "Robot Safety Stop")  Warning – Caution Use protective gloves to prevent injuries to your hands Unclog the blade
		The robot was started too close to obstacles (less than a distance of 1 m) or in the presence of obstacles (fallen branches, forgotten objects, etc.)	Stop the robot safely (see "Robot Safety Stop") Remove the obstacles and restart the robot (see "Start-up and manual stopping of the robot (in closed areas)")
		Electric motor failure	Have the motor replaced or repaired by your nearest authorised service centre
		Grass too high	Increase the cutting height (see "Adjustment of Cutting Height"). Perform a preliminary cutting of the area with a normal lawnmower
The remote control does not work		Programming error	Correctly program the remote control (see "Programming Mode")
"WatchdogError" appears on the display		The internal "software safety" system is enabled	Turn the robot off and on. If the problem persists, contact your nearest authorised service centre
"Tilt" appears on the display		The robot is located on a level that is higher than the allowed limits	Mark off the area that is too steep
		The robot is located on a level that is lower than the allowed limits	Check that the charging station is positioned on a flat surface. Turn the robot off and on while in the charging station and try again. If the problem persists, contact your nearest authorised service centre
	The led (c) does not turn on	No power supply	Make sure the power supply unit is correctly connected to the power outlet
		Interrupted fuse	Have the fuse replaced by your nearest authorised service centre
	The transmitter LED (C) is on	Interrupted perimeter wire	Stop the robot safely (see "Robot Safety Stop"). Disconnect the power plug from the power supply unit. Join the perimeter wire

PART REPLACEMENT

RECOMMENDATIONS FOR REPLACING PARTS



Important

Replace and repair any parts according to the manufacturer's instructions, or contact the service centre if these operations are not included in the manual.

BATTERY REPLACEMENT



Important

Replace the batteries at an authorised service centre.

BLADE REPLACEMENT


1. Stop the robot safely (see "Robot Safety Stop").



Important

Use protective gloves to prevent injuries to your hands.

2. Turn the robot over and position it so as not to ruin the covering hood.
3. Unscrew the screws (B) to remove the blade (A).
4. Insert a new blade and fasten the screws.
5. Turn the robot back over to its operating position.

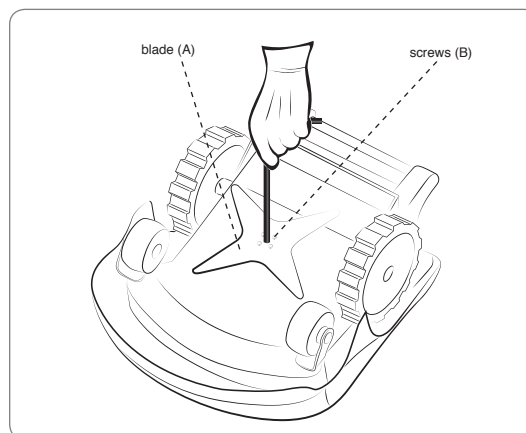

ROBOT DISPOSAL

- Do not throw any polluting materials into the environment. Please dispose of the device according to the applicable laws.
- In reference to the WEEE Directive (Waste of Electrical and Electronic Equipment), during the phasing out of the machine, the user must separate the electrical and electronic components and dispose of them in special authorised waste collection centres, or take them back to the retailer when purchasing a new one.
- All the parts, which must be collected separately or disposed of in a specific manner, are marked with a special label.
- Unauthorised disposal of Waste of Electric and Electronic Equipment (WEEE) is punishable with sanctions regulated by the laws in force in the country where the infraction took place.



Danger - Attention

Waste of Electric and Electronic Equipment may contain hazardous substances having potentially harmful effects on the environment and on the health of people. It is recommended to dispose of this waste in the correct manner.

EC DECLARATION OF CONFORMITY

ZUCCHETTI Centro Sistemi S.p.A. Via Lungarno 305/A Terranuova B.ni (AR) ITALY

Hereby declares under their full responsibility that the products, models 2L2DE0, 2L2EV0, 2L2EL0, 2L2LL conform to the following European standards:

Safety: CEI EN (50338: 2007-06) - (60335-1: 2008-07)

Electromagnetic Compatibility: CEI EN (55014-1: 2008 -01) - (55014-2: 1998 -10) - (55014-2/A1: 2002 -08) - (55014-2/A2: 2008 -12) CEI EN (61000-3-2: 2007-04) - (61000-3-3: 1997-06) - (61000-3-3/A1: 2002-05).

It meets the essential requirements of the following directives: :

Low Voltage Directive 2006/95/CE - **Electromagnetic Compatibility** 2004/108/CE – **Noise Emission according to Machinery Directive** 2006/42/CE

Bernini Fabrizio - Terranuova B.ni 01/10/2012
(CEO)