

# Liebert® IntelliSlot® Relay Card

## User Manual



---

## TABLE OF CONTENTS

|            |  |          |
|------------|--|----------|
| <b>1.0</b> | <b>INTRODUCTION . . . . .</b>            | <b>1</b> |
|            | Inspecting Shipment on Receipt . . . . . | 1        |
| <b>2.0</b> | <b>INSTALLATION . . . . .</b>            | <b>2</b> |
|            | Required Parts and Tools . . . . .       | 2        |
|            | Instructions . . . . .                   | 2        |
| <b>3.0</b> | <b>PIN CONFIGURATION . . . . .</b>       | <b>4</b> |
| <b>4.0</b> | <b>JUMPER SETUP . . . . .</b>            | <b>5</b> |

### Figures

|          |   |   |
|----------|---|---|
| Figure 1 | Pin location and numbering . . . . .    | 4 |
| Figure 2 | Jumper location and numbering . . . . . | 5 |

### Tables

|         |  |   |
|---------|--|---|
| Table 1 | Relay card pin configuration . . . . . | 4 |
| Table 2 | Jumper connections . . . . .           | 5 |

---

## **1.0 INTRODUCTION**

---

The Liebert IntelliSlot Relay Card (IS-RELAY) provides contact closure for remote monitoring of alarm conditions in your Liebert unit. The card is easy to install and integrates with other relay contact monitoring systems.

This advanced power-management device is designed to function in units with a Liebert IntelliSlot port. Some examples are:

- Liebert Nfinity™
- Liebert NX™
- Liebert UPStation GXT3™

Visit the Liebert Web site at [www.liebert.com](http://www.liebert.com) for the current list of supported products.

On supported units, the inverter shut-off command can be controlled from the computer directly connected to the UPS (via the factory-installed DB9 connector) and will conserve battery power after the workstation shutdown is completed.

The Liebert IntelliSlot Relay Card is rated for 24VAC/VDC at 1A.

### **Inspecting Shipment on Receipt**

Upon accepting shipment, inspect the packaging and product for any damaged or missing parts. If any damage is observed, report it to the shipping company and your local Emerson Network Power representative. If any components are missing, contact your local representative for replacement.

Items included with the shipment are:

- Liebert IntelliSlot Relay Card protected by an anti-static bag
- User manual

## 2.0 INSTALLATION


Make sure you have the following parts and tools before you begin.

### Required Parts and Tools

- Liebert IntelliSlot Relay Card (provided)
- #2 (medium) Phillips or small flathead screwdriver

### Instructions

1. Turning off the unit prior to installation is suggested, although not required.
2. Locate the Liebert IntelliSlot port, which is on the rear of some units, as shown in the examples below. Refer to the unit's user manual for port location and orientation.

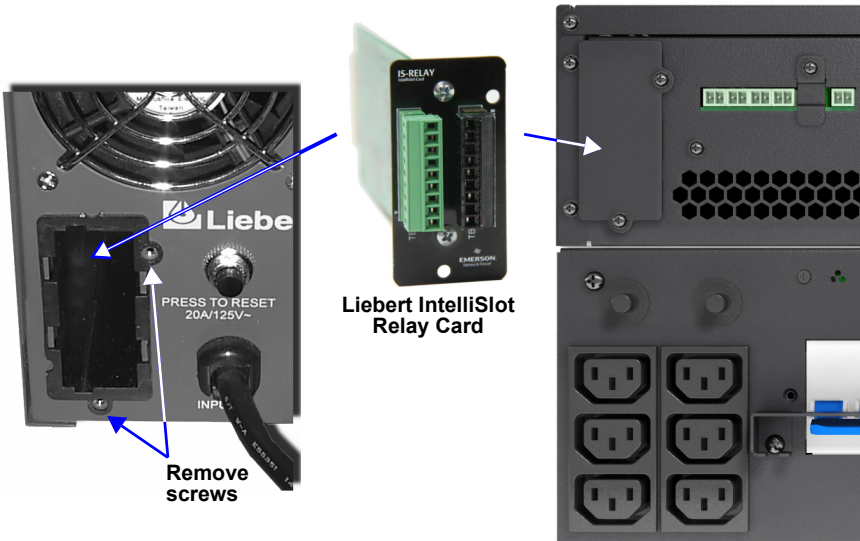

3. Remove the two retaining screws from the Liebert IntelliSlot port cover plate on the unit. Save the screws for reassembly in **Step 5**.
4. As you insert the card, make sure the holes are aligned with those on the UPS. Initially, the card should slide in freely as you carefully align screw holes. As you feel it click into place, press firmly to ensure solid seating in the slot.
5. Use the screwdriver to secure the Liebert IntelliSlot Relay Card to the UPS chassis with the two retaining screws removed in **Step 3**. Make sure the screws are snug, not tight, to avoid damage to the device.

6. Use these guidelines for terminal block specifications:

| Acceptable Wire Size | Wire Strip Length     |
|----------------------|-----------------------|
| 24-16 AWG            | 0.24-0.28 in. (6-7mm) |


Proceed to the following sections:

- **3.0 - Pin Configuration** to configure the terminal blocks.
- **4.0 - Jumper Setup** to configure the jumpers.

### 3.0 PIN CONFIGURATION

The card has two terminals blocks, TB1 (green, numbered 1-9) and TB2 (black, 10-18), as shown in **Figure 1**.

**Figure 1** Pin location and numbering

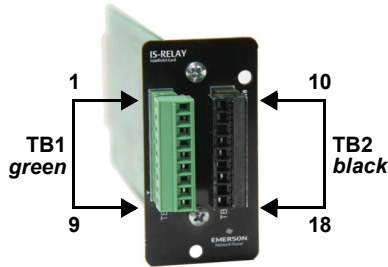

Refer to your Liebert product user manual for the pin configuration for the terminal blocks. The pin functions in **Table 1** apply only to the Liebert units listed in **Section 1.0 - Introduction**.


**Table 1** Relay card pin configuration

| Pin | Function                | Operation  |
|-----|-------------------------|--|
| 1   | Common - Low Battery    |  |
| 2   | Low Battery             | Closed if Low Battery point occurs.              |
| 3   | Low Battery             | Closed if battery is OK                          |
| 4   | Common - UPS Fault      |  |
| 5   | UPS Fault               | Closed if UPS fault occurs                       |
| 6   | UPS Fault               | Closed if no UPS failure                         |
| 7   | Common - On Battery     |  |
| 8   | On Battery              | Closed if On Battery power (Utility failure)     |
| 9   | On Battery              | Closed if not On Battery power (Utility OK)      |
| 10  | Signal Ground           | Use for UPS Any-Mode Shutdown                    |
| 11  | Signal Ground           | Use for UPS Any-Mode Shutdown                    |
| 12  | UPS Any-Mode Shutdown   | Turn UPS output Off when shorted to Pin 10 or 11 |
| 13  | Summary Alarm*          | Closed if no alarm conditions are present        |
| 14  | Summary Alarm*          | Closed if Summary Alarm occurs                   |
| 15  | Common - Summary Alarm* |  |
| 16  | On UPS                  | Closed if On UPS (inverter) power                |
| 17  | On Bypass               | Closed if On Bypass                              |
| 18  | Common - On Bypass      |  |

## 4.0 JUMPER SETUP

The card has five jumpers, P3 through P7, as shown in **Figure 2**. Each jumper connects two pins.

**Figure 2 Jumper location and numbering**

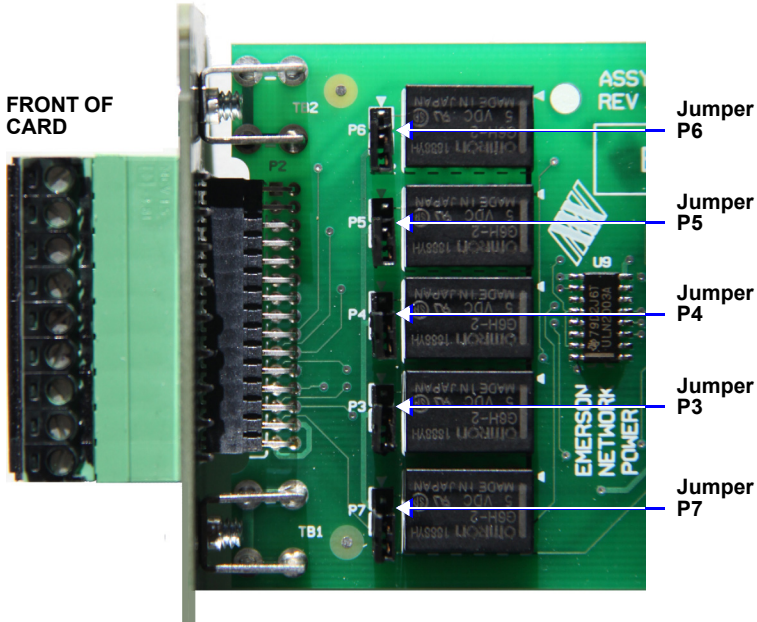

By default all five jumpers have shunts installed. The two pins are shunted together to provide the functions shown in **Table 2**, allowing relay commons to be tied together.

**NOTE:** The jumpers should be removed if there is any external voltage source that may intentionally or inadvertently be connected to the relay.

Removing the shunt from any two pins breaks the connection between the relay commons so they are not tied together.

**Table 2 Jumper connections**

| Jumper | Relay         |
|--------|---------------|
| P6     | On Battery    |
| P5     | UPS Fault     |
| P4     | Low Battery   |
| P3     | On Bypass     |
| P7     | Summary Alarm |

# Ensuring The High Availability Of Mission-Critical Data And Applications.

## Technical Support / Service

### Web Site

[www.liebert.com](http://www.liebert.com)

### Monitoring

[liebert.monitoring@emerson.com](mailto:liebert.monitoring@emerson.com)

800-222-5877

Outside North America: +00800 1155 4499

### Single-Phase UPS & Server Cabinets

[liebert.upstech@emerson.com](mailto:liebert.upstech@emerson.com)

800-222-5877

Outside North America: +00800 1155 4499

### Three-Phase UPS & Power Systems

800-543-2378

Outside North America: 614-841-6598

### Environmental Systems

800-543-2778

Outside the United States: 614-888-0246

## Locations

### United States

1050 Dearborn Drive

P.O. Box 29186

Columbus, OH 43229

### Europe

Via Leonardo Da Vinci 8

Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

+39 049 9719 111

Fax: +39 049 5841 257

### Asia

29/F, The Orient Square Building

F. Ortigas Jr. Road, Ortigas Center

Pasig City 1605

Philippines

+63 2 687 6615

Fax: +63 2 730 9572

While every precaution has been taken to ensure the accuracy and completeness of this literature, Liebert Corporation assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

© 2010 Liebert Corporation

All rights reserved throughout the world. Specifications subject to change without notice.

® Liebert is the registered trademark of Liebert Corporation.

All names referred to are trademarks or registered trademarks of their respective owners.

SL-23211\_REV0\_09-10

## Emerson Network Power.

The global leader in enabling *Business-Critical Continuity™*



AC Power



Connectivity



DC Power



Embedded Computing



Embedded Power



Infrastructure Management & Monitoring

## EmersonNetworkPower.com



Outside Plant



Power Switching & Controls



Precision Cooling



Racks & Integrated Cabinets



Services



Surge Protection

Emerson, *Business-Critical Continuity*, Emerson Network Power and the Emerson Network Power logo are trademarks and service marks of Emerson Electric Co. or one of its affiliated companies.

©2010 Emerson Electric Co.