

User Manual

Revision 1.002
English

Gateway / Adapter J1939 to Ethernet

(Order Code: HD67213 – HD67213M)

for Website information:

www.adfweb.com?Product=HD67213
www.adfweb.com?Product=HD67213M

for Price information:

www.adfweb.com?Price=HD67213
www.adfweb.com?Price=HD67213M

Benefits and Main Features:

- ▶ Mountable on Rail DIN
- ▶ TCP/UDP protocols changeable with software
- ▶ Easy to use software configuration
- ▶ Industrial temperature range:
-30 °C / 70°C (-22°F / 158°F)




HD67213



HD67213M

Similar
Products



For others Converter / Adapter:

RS232 / RS485

See also the following link:

www.adfweb.com?Product=HD67118

USB / RS485

See also the following link:

www.adfweb.com?Product=HD67119

Do you have an your customer protocol?

See the following link:

www.adfweb.com?Product=HD67003

Do you need to choose a device? do you want help?

Ask it to the following link:

www.adfweb.com?Cmd=helpme

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
CONNECTION SCHEME	3
CHARACTERISTICS	5
POWER SUPPLY	5
CONFUGURATION	6
USE OF COMPOSITOR SW67213	6
NEW PROJECT / OPEN PROJECT	7
SET COMMUNICATION	8
RECEIVE J1939	9
UPDATE VIA TCP	10
UPDATE VIA SERIAL	11
CHARACTERISTICS OF THE CABLES	12
ETHERNET PROTOCOL	13
Write Frames	13
Read Fames	14
MECHANICAL DIMENSIONS	15
ORDER CODE	15
ACCESSORIES	15
WARRANTIES AND TECHNICAL SUPPORT	16
RETURN POLICY	16
PRODUCTS AND RELATED DOCUMENTS	16

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- Updated
- Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

To obtain the updated documentation for the product that you own, note the “Document Code” (Abbreviated written "Doc. Code" on the label on the product) and download the updated from our web site www.adfweb.com/download/

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	16/10/2008	Fl	All	First release version
1.001	29/01/2009	Fl	All	Software changed
1.002	17/05/2010	Dp	All	Revision

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning. ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

CONNECTION SCHEME:

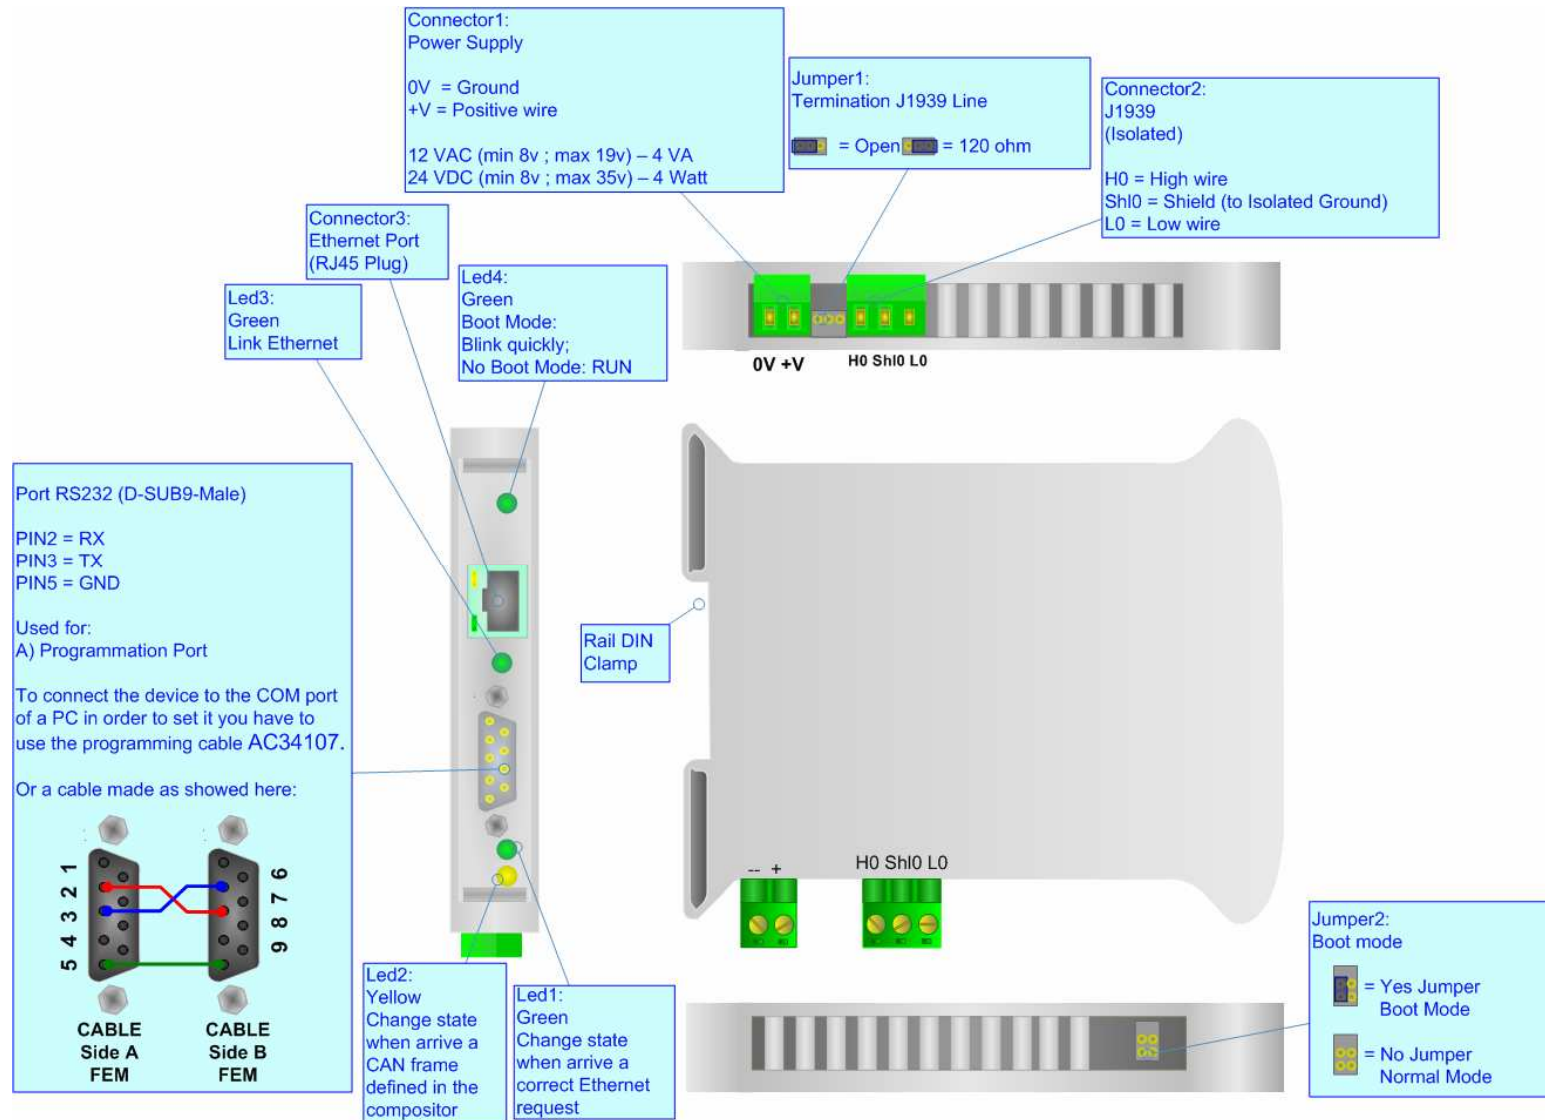


Figure 1: Connection scheme HD67213

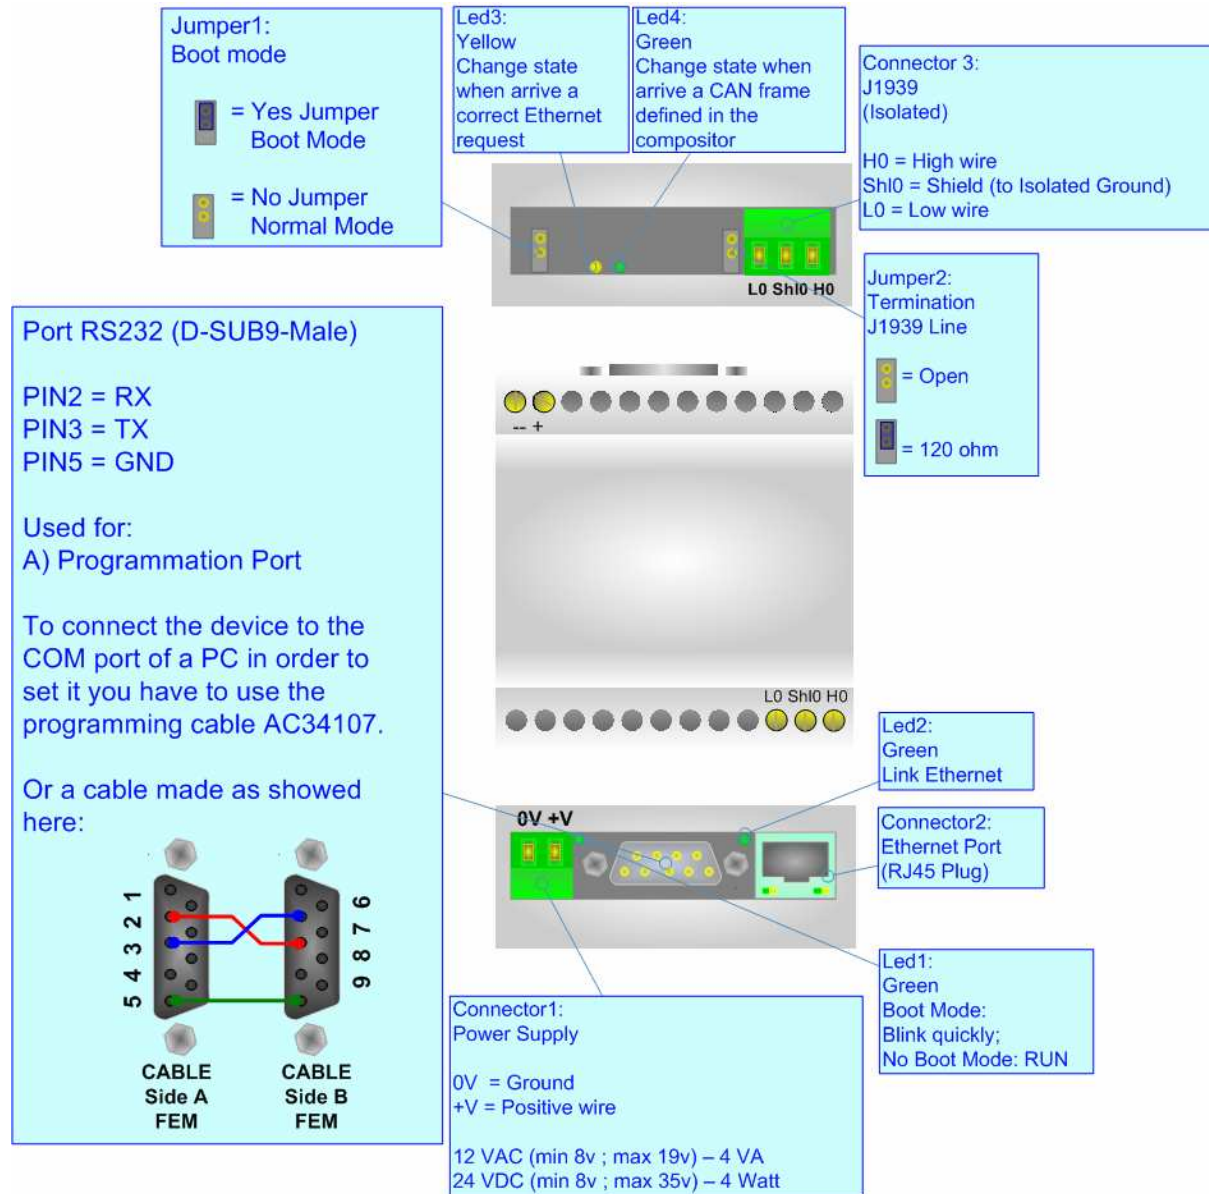


Figure 2: Connection scheme for HD67213M

CHARACTERISTICS:

The Configurable J1939 Slave to Ethernet gateway allow the following:


- TCP/UDP Ethernet protocols changeable with software;
- Mountable on Rail DIN;
- Temperature range -30°C to 70°C.

POWER SUPPLY:


Recommended Power Supply	
VDC	VAC
24v	12v

Caution: Not reverse the polarity power .

VDC		VAC	
Vmin	Vmax	Vmin	Vmax
8v	35v	8v	19v

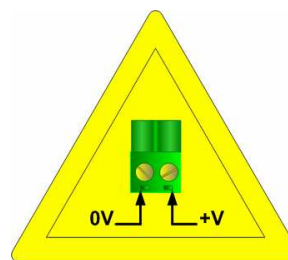

HD67213

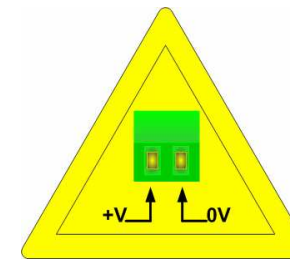

HD67213M

CONFIGURATION:

You need Compositor SW67213 software on your PC in order to perform the following:

- Define the parameter of the J1939 bus;
- Define the parameter of the Ethernet;

USE OF COMPOSITOR SW67213:

To configure the Gateway, use the available software that runs with Windows, called SW67213. It is downloadable on the site www.adfweb.com and its operation is described in this document.

When launching the SW67213 the right window appears (Fig. 3).

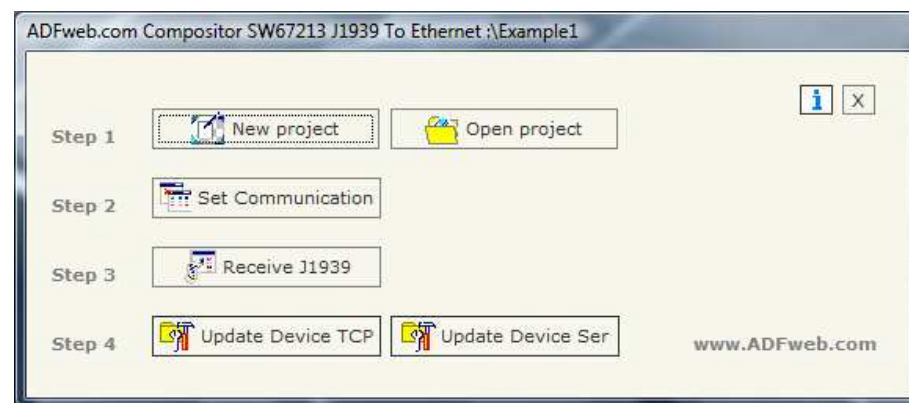


Figure 3: Main window for SW67213

NEW PROJECT / OPEN PROJECT:

The "New Project" button creates the folder which contains the entire device configuration.

A device configuration can also be imported and exported:

- To clone the configurations of a Programmable J1939 to Ethernet Gateway in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button "Open Project";
- When a new project is created or an existent project is open, it will be possible to access the various configuration section of the Software.

SET COMMUNICATION:

This section define the fundamental communication parameter of two buses, J1939 and Ethernet.

By pressing the "Set Communication" button from the main window for SW67213 (Fig. 3) the window "Set Communication" appears (Fig. 4).

The window is divided in two section, one for the J1939 and the other for the Ethernet.

The means of the fields for J1939 are:

- In the field "Baud rate" the baudrate for the J1939 is defined;
- If the field "CAN Bus 2.0A" is checked, the CAN with a CobID of 11Bit is used; otherwise if the field "CAN Bus 2.0B" is checked the CAN with a CobID of 29Bit is used;
- In the field "TimeOut Data" insert a time, when this time is elapsed the data isn't reliable, and in the Modbus register you can read "FFFF";
- If the field "Peer to Peer" is checked the gateway accept any ID that have the PGN inserted in the section "Receive J1939";
- If the field "Filter FECA" is checked there is a filter to the alarms with PGN 0xFECA. If the device send first a message with PGN 0xFECA, after it would send a Transport Protocol frame for sending the alarms. If this frame arrives within the mS write in the box, the frame with 0xFECA is discarded and the Transport Protocol frame is held. Otherwise the frame with PGN 0xFECA is hold.

The means of the fields for Ethernet are:

- In the field "IP ADDRESS" insert the IP address;
- In the field "SUBNET Mask" insert the Subnet Mask;
- In the field "Port" insert the number of port;
- If the field "TCP" is checked the Ethernet protocol used is the TCP, otherwise if the field "UDP" is checked the Ethernet protocol used is the UDP.

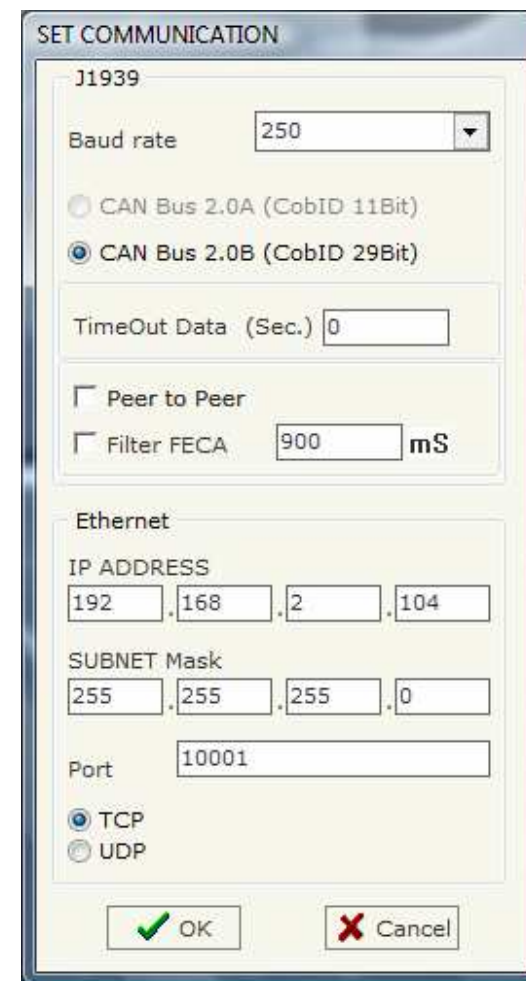



Figure 4: "Set Communication" window

RECEIVE J1939

By pressing the "Receive COB" button from the main window for SW67513 (Fig. 3) the window "Receive CAN Frame" appears (Fig. 5).

The means of the fields are:

- In the field "Data Page" insert the Data Page, in the J1939 protocol is 0 or 1;
- In the field "PGN" insert the PGN of the data you would to read from Ethernet to J1939 (it is an identifier);
- In the field "Source Address" insert the address of the device that send the frame;
- If the field "Multi Frame" is checked, the Transport Protocol is enabled for the frame otherwise is disable;
- In the field "StartByte" insert the Start Byte of the Transport Protocol. Insert a value only if the Multi Frame is enabled;
- In the field "N° Byte" insert the number of bytes that composed the Transport Protocol. Insert a value only if the Multi Frame is enabled;
- If the field "Cancel Data" is checked, the data in the frame will be erased after the "TimeOut Data" is expired;
- In the field "Mnemonic" the description for the frame is defined.

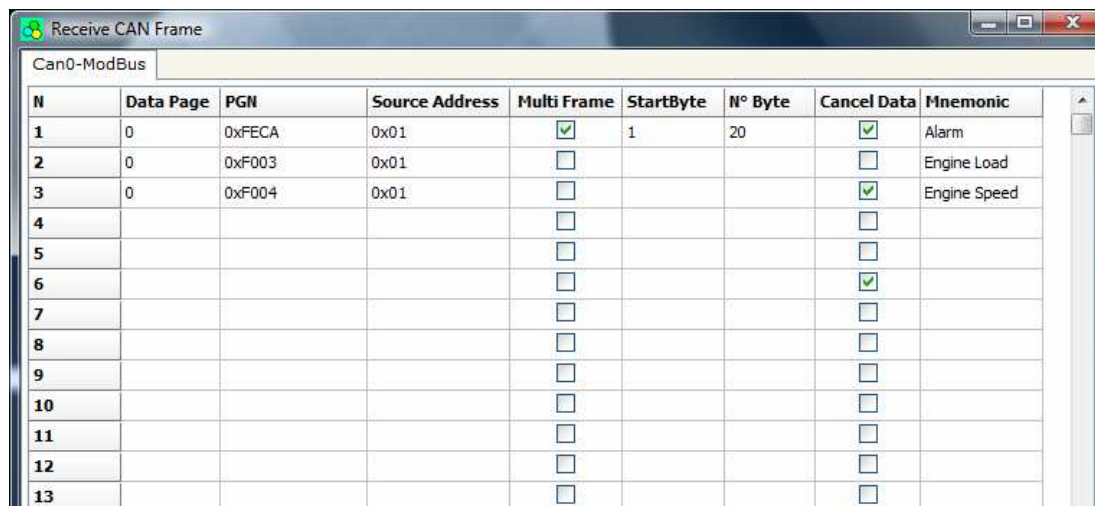

N	Data Page	PGN	Source Address	Multi Frame	StartByte	N° Byte	Cancel Data	Mnemonic
1	0	0xFECA	0x01	<input checked="" type="checkbox"/>	1	20	<input checked="" type="checkbox"/>	Alarm
2	0	0xF003	0x01	<input type="checkbox"/>			<input type="checkbox"/>	Engine Load
3	0	0xF004	0x01	<input type="checkbox"/>			<input checked="" type="checkbox"/>	Engine Speed
4				<input type="checkbox"/>			<input type="checkbox"/>	
5				<input type="checkbox"/>			<input type="checkbox"/>	
6				<input type="checkbox"/>			<input checked="" type="checkbox"/>	
7				<input type="checkbox"/>			<input type="checkbox"/>	
8				<input type="checkbox"/>			<input type="checkbox"/>	
9				<input type="checkbox"/>			<input type="checkbox"/>	
10				<input type="checkbox"/>			<input type="checkbox"/>	
11				<input type="checkbox"/>			<input type="checkbox"/>	
12				<input type="checkbox"/>			<input type="checkbox"/>	
13				<input type="checkbox"/>			<input type="checkbox"/>	

Figure 5: "Receive J1939" window

UPDATE DEVICE VIA TCP:

Section "Update Via TCP" (Fig. 6):

In order to load the parameters or update the firmware in the gateway, follow these instructions:

- Connect the Ethernet cable from your PC to the gateway;
- Insert the IP address of HD67213 and press the Ping Button;
- Press the "Next" button;
- Select operations you want to do. Can select only Firmware or only Project or both;
- Press the "Execute update firmware" to start the upload;

At this point the configuration/firmware on the device is correctly updated.

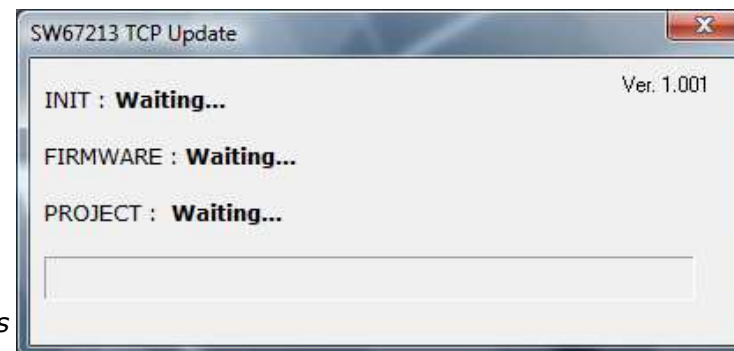
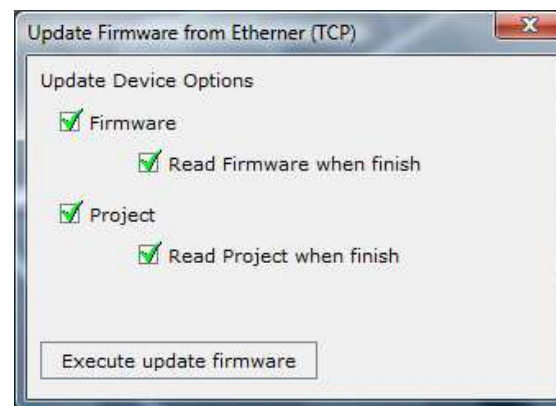
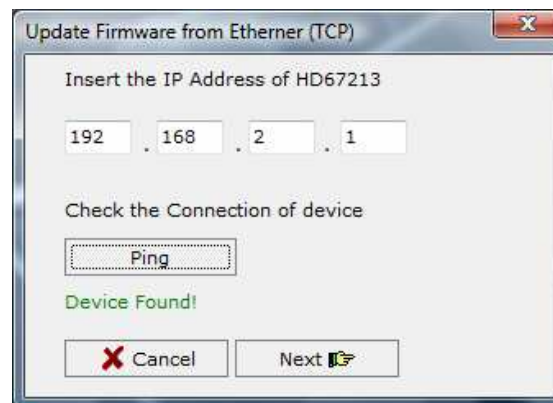


Figure 6: "Update Via TCP" windows

UPDATE DEVICE VIA SERIAL

Section "Update Via Serial" (Fig. 7):

In order to load the parameters or update the firmware in the gateway, follow these instructions:

- Turn off the device;
- Connect the Null Modem cable from your PC to the gateway;
- Insert the Boot Jumper (see the Fig. 1 for more info);
- Turn on the device;
- Check the "BOOT Led". It must to blink quickly (See the Fig. 1 for more info);
- Select COM port and press the "Connect" button;
- Press the "Next" button;
- Select operations you want to do. Can select only Firmware or only Project or both;
- Press the "Execute update firmware" to start the upload;
- When all the operations are "OK" turn off the device;
- Disconnect the Boot jumper;
- Turn on the device.

At this point the configuration/firmware on the device is correctly updated.

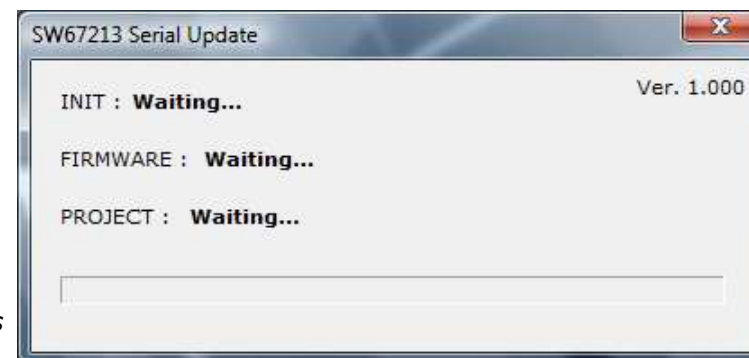
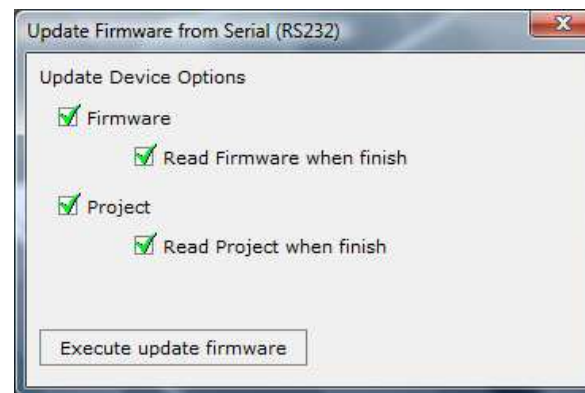



Figure 7: "Update Via Serial" windows

CHARACTERISTICS OF THE CABLES:

The connection at Ethernet socket must be with a Ethernet Cable with a RJ45 Plug

The connection from RS232 socket to a serial port (example one from a personal computer), must be made with a Null Modem cable (a serial cable where the pins 2 and 3 are crossed).

It is recommended that the RS232C Cable not exceed 15 meters.

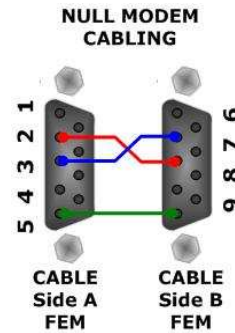

ETHERNET PROTOCOL

This protocol is able to read and write frames in the J1939 net.

Write Frames

The transmission is very simple, it require only what are the packets to send. In a single request it is possible to write at maximum 19 frames in the J1939 net. The Bytes that composed the request are these:

Byte Number	Description
1	Read / Write Identifier (Read=0x01 / Write=0x02)
2	Number of frames to send
3	Priority
4	Data Page
5	PGN Hi
6	PGN Lo
7	Source Address
8÷15	Data (Byte 8 is the higher, byte 15 is the lower)

A single frame is composed by 13 bytes (byte 3 to byte 15). Now if the "Number of frame to send" (Byte Number 2) has got a value greater than one the next frame is composed from byte 3 to byte 15 and so for all the frames.

The response is composed by only one byte. It can have two values:

- 0x00: No Errors;
- 0x01: Parameter Error.

Example:

We want to write two frames with the following characteristics:

Frame 1: Priority=6; Data Page=0; PGN=FECA; Source Address=1; Data=0x0102030405060708;

Frame 2: Priority=6; Data Page=0; PGN=FFCA; Source Address=2; Data=0x1122334455667788.

So the string of hexadecimal numbers is:

REQ:[02][01][06][00][FE][CA][01][01][02][03][04][05][06][07][08][06][00][FF][CA][02][11][22][33][44][55][66][77][88]
RES:[01]

Read Frames

For reading Data it is necessary to have a map in the RAM memory that contains the Data that passing in the bus. This map is implemented in the "Compositor SW67213" but it has some standard address given by the software. It is possible to see this map in Fig. 5.

The Bytes that composed the request are these:

Byte Number	Description
1	Read / Write Identifier (Read=0x01 / Write=0x02)
2	Starting Address Hi
3	Starting Address Lo
4	Number of Byte to read Hi
5	Number of Byte to read Lo

The Bytes that composed the respons are these:

Byte Number	Description
1	Error
2	TimeOut
3÷n+2	Data

n=Number of Byte

The Error Byte (Byte 1) can have three values:

- 0x00: No error;
- 0x01: Starting Address doesn't exist;
- 0x02: Too many Data to read.

The TimeOut Byte (Byte 2) can have three values:

- 0x00: TimeOut not used;
- 0x01: Data consistent;
- 0x02: Data not consistent.

Example:

We want to read ten frames from Starting Address 1. So the string of hexadecimal numbers is:

REQ:[01][00][00][00][10]

RES:[00][01][01][02][03][04][05][06][07][08][09][0A][0B][0C][0D][0E][0F][10]

MECHANICAL DIMENSIONS:

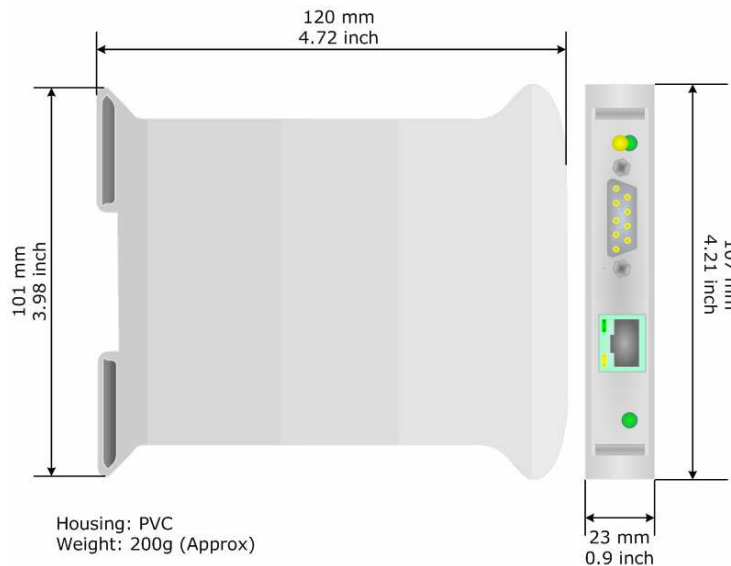


Figure 8: Mechanical dimensions scheme for HD67213

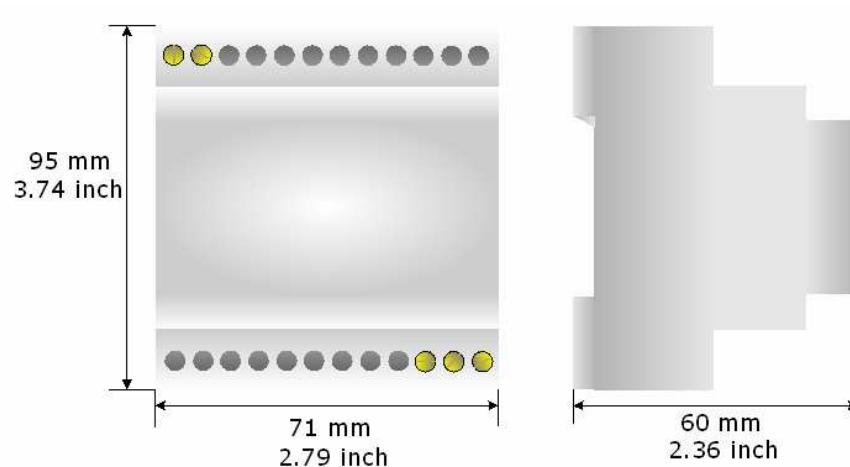


Figure 9: Mechanical dimensions scheme for HD67213M

ORDER CODE:

Order Code: **HD67213** - Gateway – J1939 to Ethernet

ACCESSORIES:

Order Code: **AC34001** - Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V AC

Order Code: **AC34002** - Rail DIN - Power Supply 110V AC 50/60Hz – 12 V AC

Order Code: **AC34104** - European Input - Power Supply 230V AC 50Hz – 12 V DC



WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com. Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- 1) Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- 2) Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.

PRODUCTS AND RELATED DOCUMENTS:

Part	Description	URL
HD67118	Converter RS232 to RS485 Isolated	www.adfweb.com?Product=HD67118
HD67119	Converter USB 2.0 to RS485 Isolated	www.adfweb.com?Product=HD67119
HD67007	Gateway Modbus TCP Server to RTU Master	www.adfweb.com?Product=HD67007
HD67010	Gateway Modbus TCP Client to RTU Slave	www.adfweb.com?Product=HD67010