

# User Manual

## Maritime emPower Line Graphic Panels

Part Number: 80860.734  
Version: 1  
Date: 27.07.2007  
Valid for: TPM057M  
TPM057S  
TPM057T  
TPM104T  
TPM121T  
TPM151T

---

<b>Version</b>	<b>Date</b>	<b>Modifications</b>
1	27.07.2007	First Edition

This manual, including all illustrations contained herein, is copyright protected. Use of this manual by any third party in departure from the copyright provision is forbidden. No part of this manual may be reproduced, translated or electronically or photographically archived or altered without the express written consent from Süttron electronic GmbH. Violations shall be cause for damage liability.

Süttron electronic reserves the right to make any changes that contribute to technical improvement.

# Overall Table of Contents

1	Important Notes .....	1-1
	1.1 Symbols .....	1-1
	1.1.1 General Symbols .....	1-1
	1.1.2 Specific Symbols .....	1-1
	1.2 Safety Notes .....	1-2
	1.3 Intended Use.....	1-2
	1.4 Target Group.....	1-2
2	Installation and Commissioning .....	2-1
	2.1 Unpacking the Device .....	2-1
	2.2 Mounting the Device .....	2-1
	2.2.1 Front Panel Dimensions .....	2-2
	2.2.2 Mounting Cutout .....	2-6
	2.2.3 Side View, Mounting Depth .....	2-10
	2.3 Connecting the Device.....	2-14
	2.3.1 Supply Voltage 24 V .....	2-14
	2.4 Switching On.....	2-16
	2.4.1 Loading Procedure on Windows CE Operating System .....	2-16
	2.4.1.1 Normal Operating Mode .....	2-16
	2.4.1.2 Setup Main Operating Mode.....	2-16
	2.4.1.3 Administration Operating Mode .....	2-23
	2.4.2 Function of the AppStarter.exe Program .....	2-23
	2.4.3 Function of the TSvisLD.exe Program.....	2-24
	2.4.4 Memory Media Used.....	2-24
	2.4.5 Important Files and Update .....	2-25
	2.5 Identification.....	2-26
	2.5.1 Version Key .....	2-26
3	Control and Display Elements .....	3-1
	3.1 Touch Screen.....	3-1
	3.2 Key "Reset" .....	3-1
	3.3 Display .....	3-1
4	Interfaces of the Device .....	4-1
	4.1 Ethernet (X5).....	4-2
	4.1.1 Pin Assignment .....	4-2
	4.1.2 Cable .....	4-2
	4.1.3 Diagnostics .....	4-3
	4.2 USB (X9, X10) .....	4-4
	4.2.1 Cable .....	4-4

## Overall Table of Contents

---

4.3	Memory Card .....	4-5
4.3.1	Inserting the Memory Card .....	4-5
4.3.2	Ejecting the Memory Card .....	4-5
5	Maintenance and Servicing .....	5-1
5.1	Maintenance Interval .....	5-1
5.2	Front Panel .....	5-1
5.3	Fuse .....	5-1
5.4	Battery (Option) .....	5-1
5.4.1	Changing the Battery .....	5-2
5.4.2	Battery Disposal .....	5-3
6	Technical Data .....	6-1
7	Ordering Data .....	7-1
A	Index .....	A-1

# 1 Important Notes

## 1.1 Symbols

The symbols in this manual are used to draw your attention on notes and dangers.

### 1.1.1 General Symbols

**Danger**

This symbol is used to refer to instructions which, if ignored or not carefully followed could result in personal injury.

**Note**

This symbol indicates application tips or supplementary notes.

**Reference to source of information**

This symbol refers to detailed sources of information on the current topic.

### 1.1.2 Specific Symbols

The following symbols indicate specific dangers which could result in damage to equipment or personal injury or even up to the death of the operator.

**Danger - Electric Shock****Danger - Corrosive****Danger - Toxic****Danger - Explosive****Danger - Fire****Danger - Infrared Light****Danger - Electrostatic Charge**

## 1.2 Safety Notes

- Read this manual carefully before using the operating device. Keep this manual in a place where it is always accessible to all users.
- Proper transportation, handling and storage, placement and installation of this product are prerequisites for its subsequent flawless and safe operation.
- This user manual contains the most important information for the safe operation of the device.
- The user manual, in particular the safety notes, must be observed by all personnel working with the device.
- Observe the accident prevention rules and regulations that apply to the operating site.
- Installation and operation must only be carried out by qualified and trained personnel.

## 1.3 Intended Use

- The device is designed for use in maritime areas.
- The device is state-of-the art and has been built to the latest standard safety requirements. However, dangerous situations or damage to the machine itself or other property can arise from the use of this device.
- The device fulfills the requirements of the EMC directives and harmonized European standards. Any modifications to the system can influence the EMC behavior.



This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

---

## 1.4 Target Group

All configuration, programming, installation, commissioning, operating and maintenance work in connection with the automation system must be performed by trained personnel only (e.g. qualified electricians, electrical engineers, etc.).

The configuration and programming personnel must be familiar with the safety concepts of automation technology.

The operating personnel must have been trained in handling the controller and be familiar with the operating instructions.

The installation, commissioning and maintenance personnel must have an education which entitles them to work on automation systems.

## 2 Installation and Commissioning

### 2.1 Unpacking the Device

Unpack all parts carefully and check the contents for any visible damage in transit. Also check whether the shipment matches the specifications on your delivery note.

If you notice damages in transit or discrepancies, please contact our sales department immediately.

### 2.2 Mounting the Device



When installing the device, leave a gap of at least 30 mm (1.181") around the device to ensure sufficient air circulation.



When the operating device is installed horizontally, please note that additional sources of heat beneath the operating device may result in heat accumulation. Make sure to allow sufficient heat dissipation! Comply with the allowable temperature range listed in the technical data for the use of the operating device!



To ensure the specified degree of protection, make sure that the seal rests flat on the mounting surface and the threaded pins of the mounting brackets are uniformly tightened.

The device can be easily and quickly mounted from the rear of the device. Ideally, the device should be installed in switch panels with a plate thickness of approx. 1 mm to 6 mm (0.039" to 0.236").

1. Insert the device in the mounting cutout from the front.

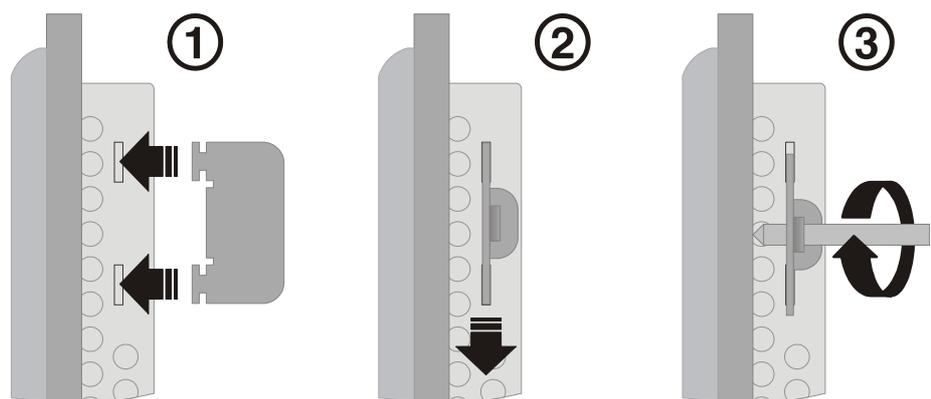


Figure 2-1 Mounting the device using a mounting bracket

2. Insert the mounting brackets into the appropriate openings (figure 1) and pull the brackets downwards until they lock in place (figure 2).
3. Fasten the device into position using the threaded pins (figure 3).

### 2.2.1 Front Panel Dimensions

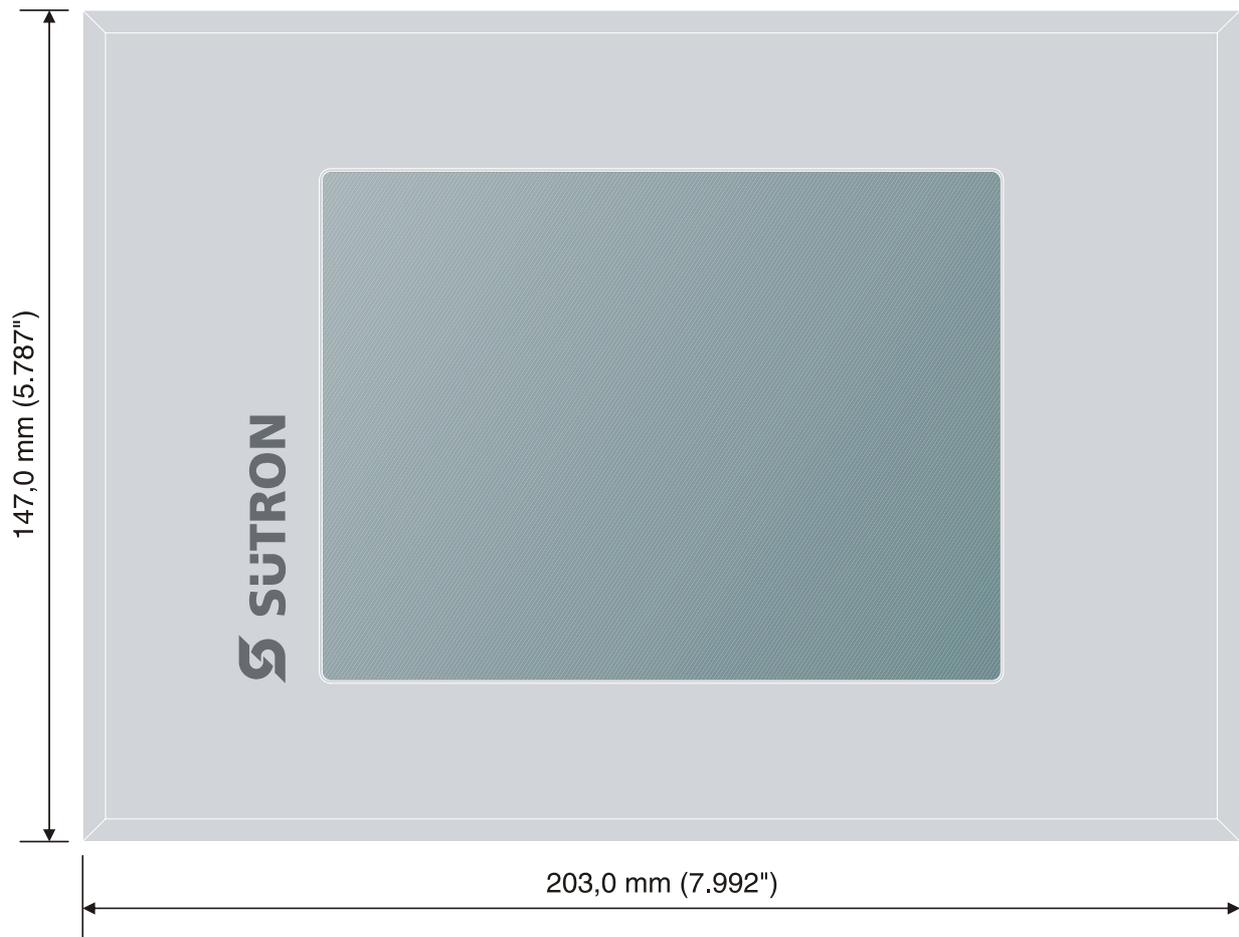


Figure 2-2 TPM057M, TPM057S, TPM057T

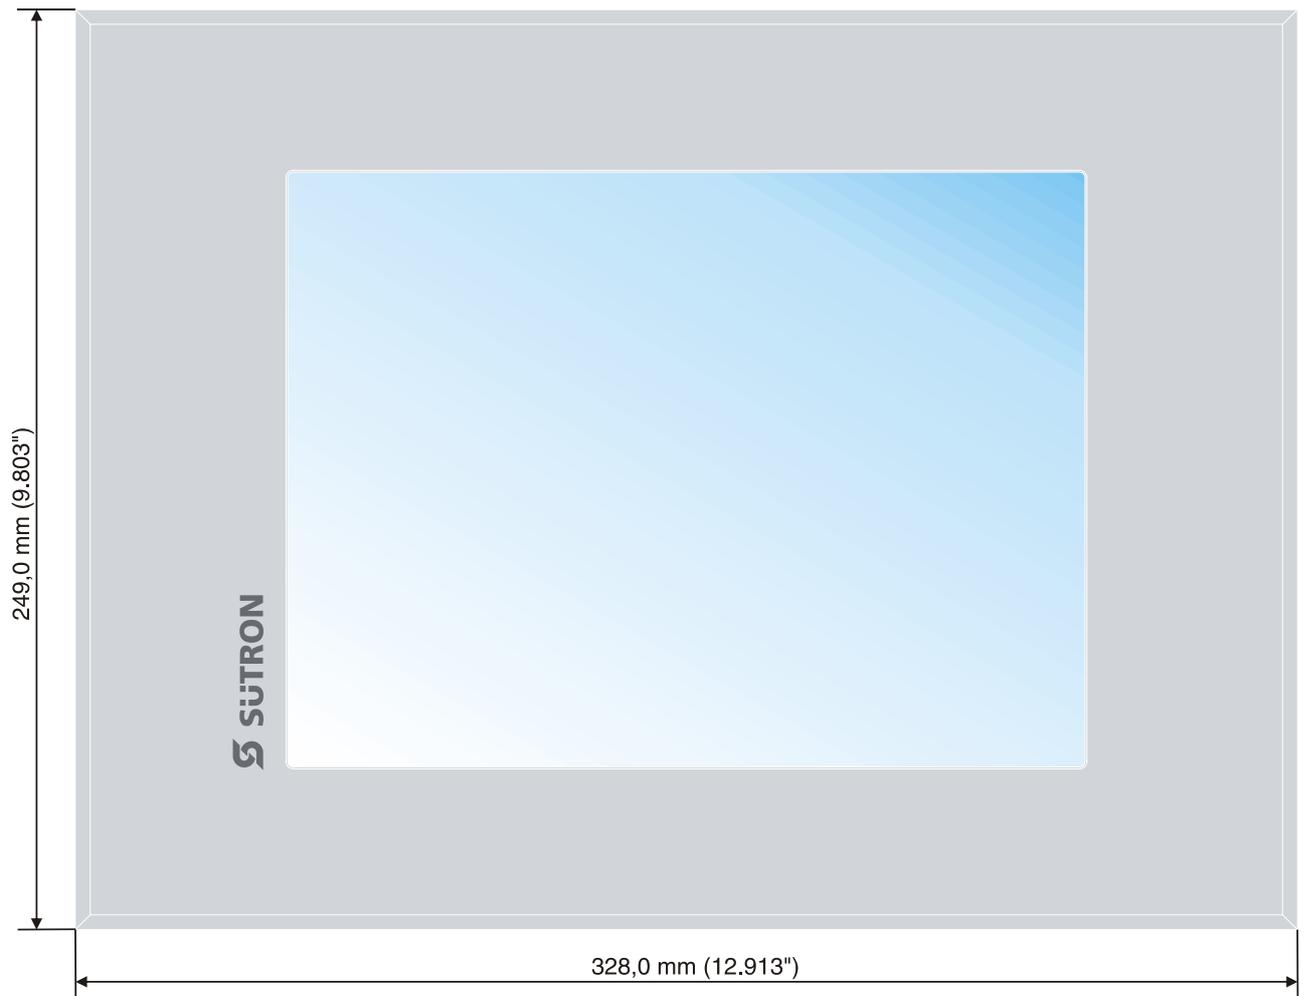


Figure 2-3 TPM104T

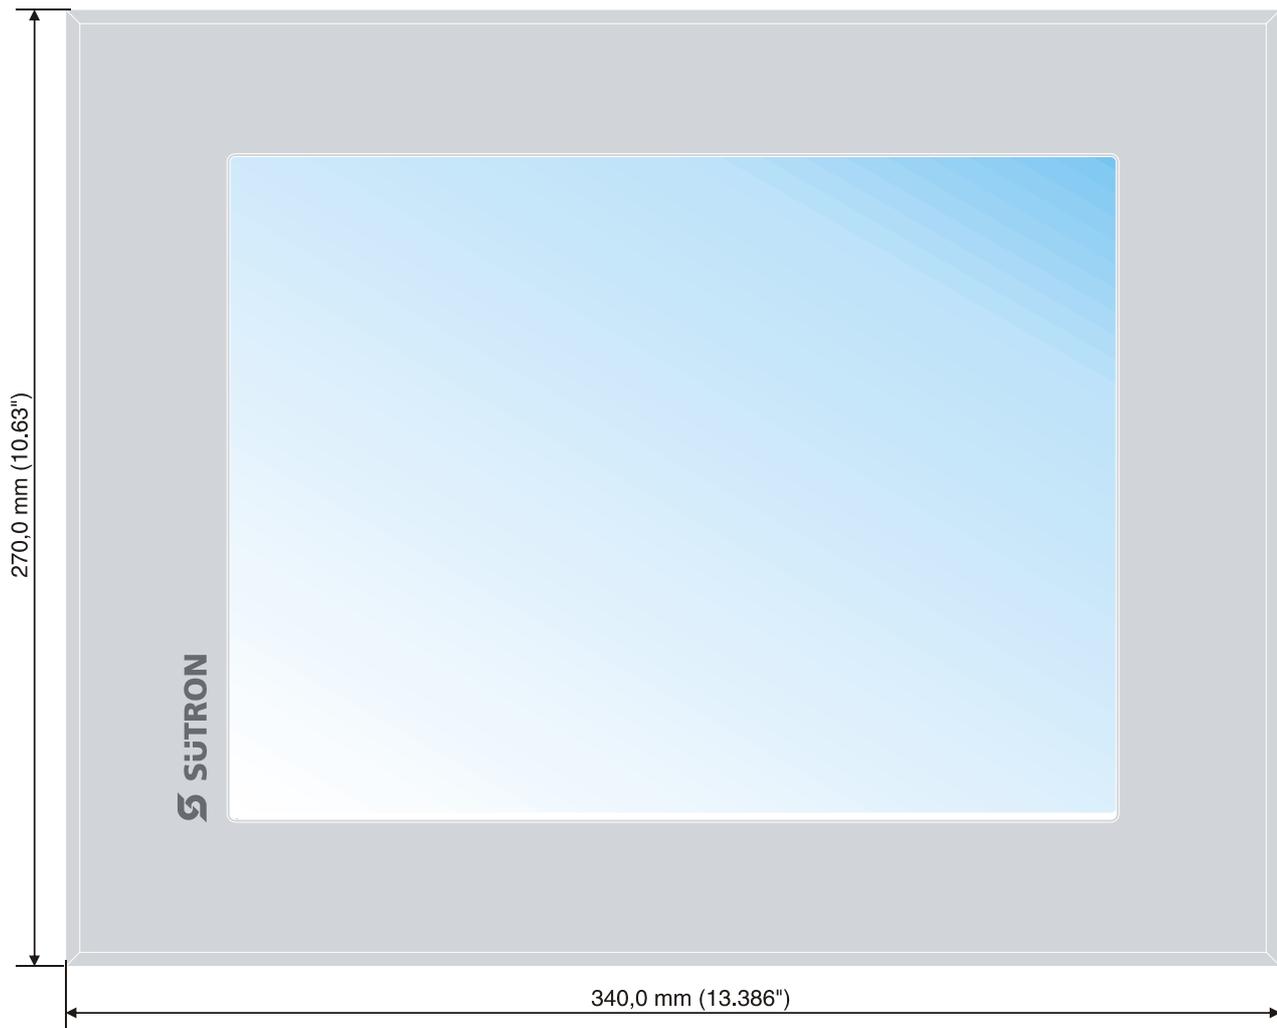


Figure 2-4 TPM121T

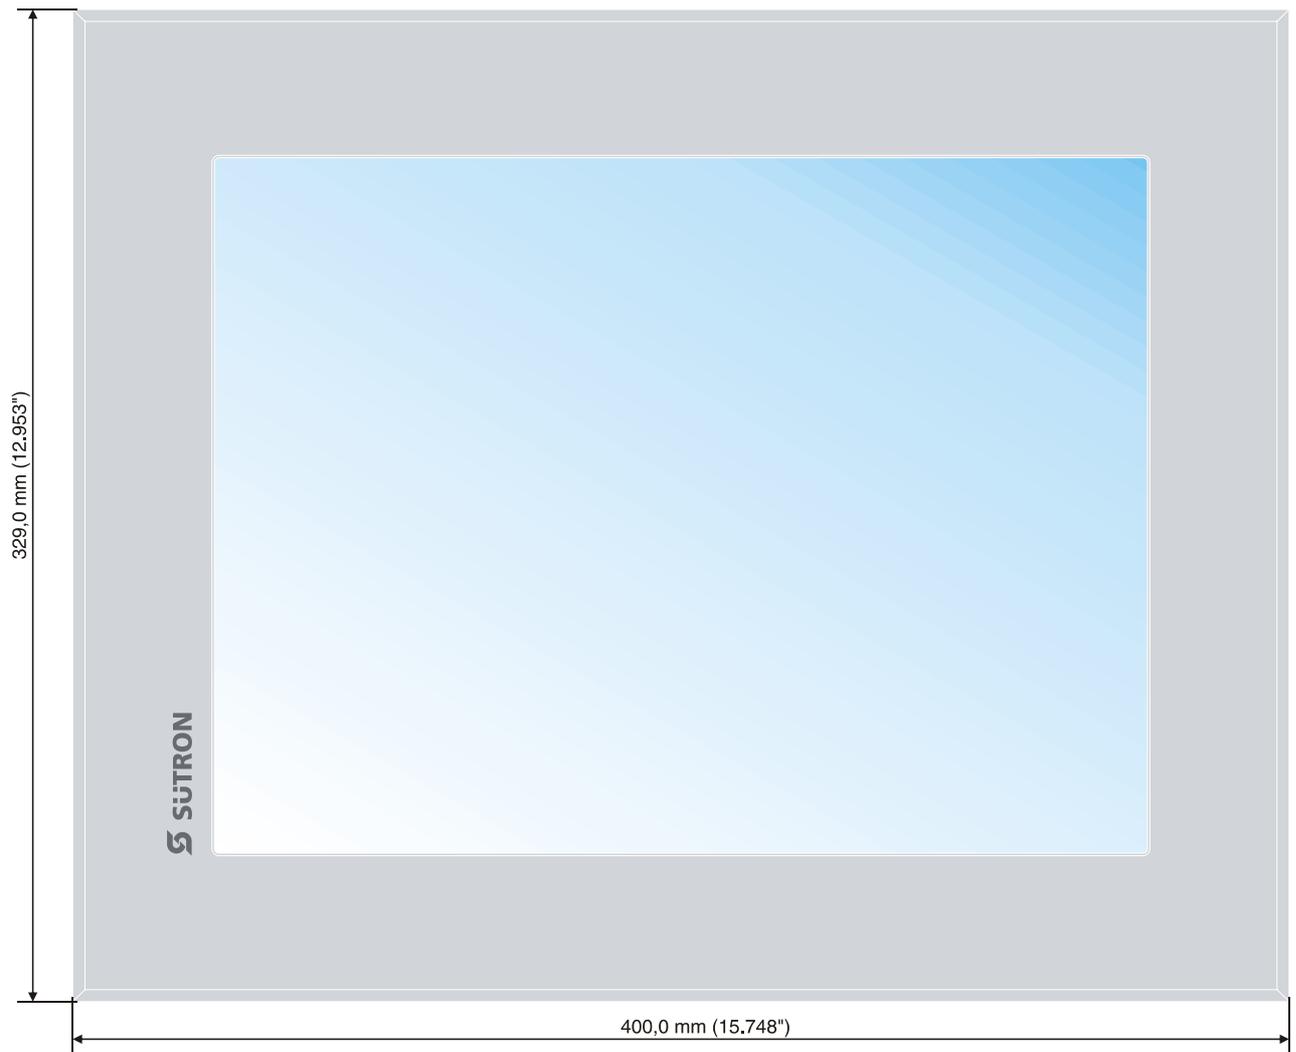


Figure 2-5 TPM151T

### 2.2.2 Mounting Cutout

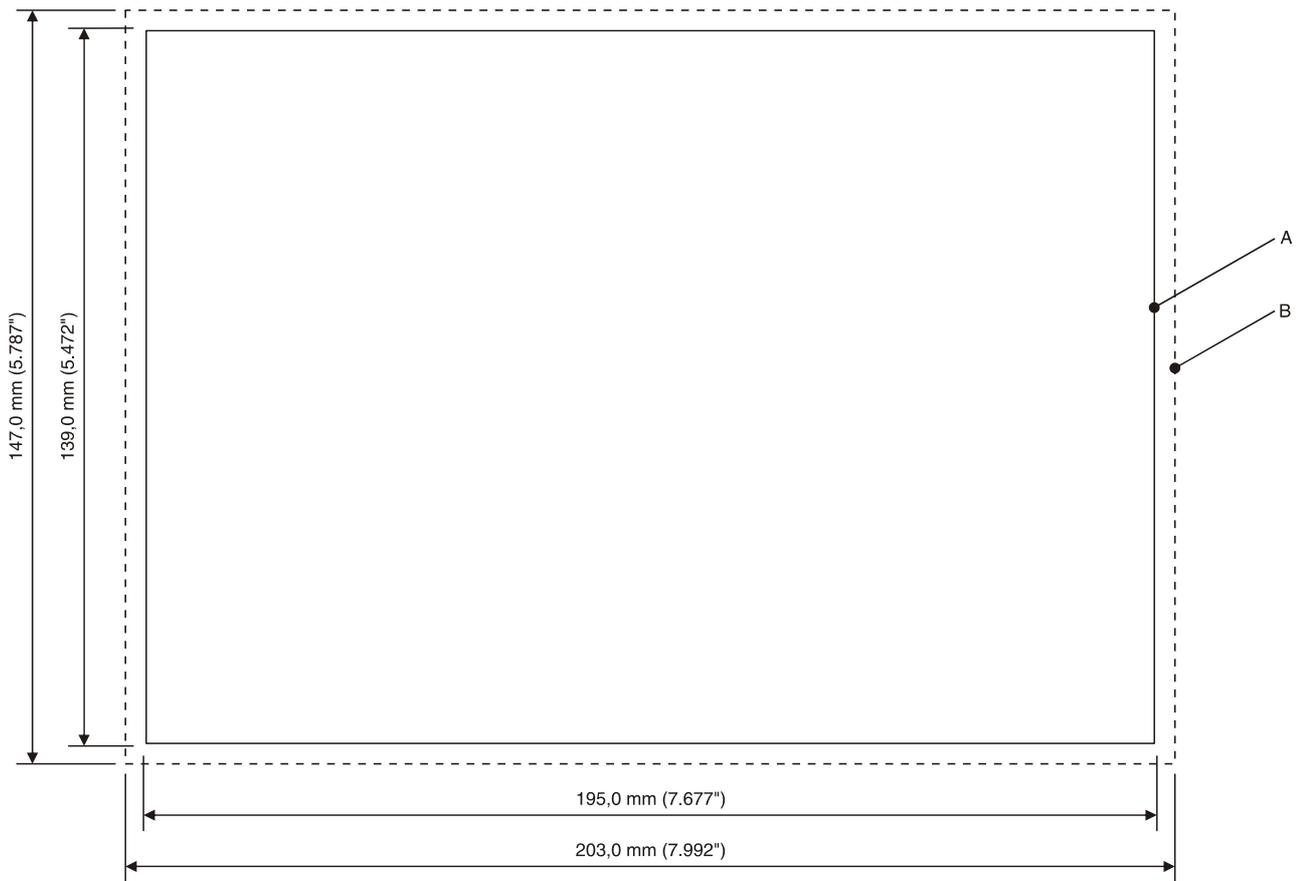


Figure 2-6 TPM057M, TPM057S, TPM057T

- A Mounting Cutout
- B Front Panel



Figure 2-7 TPM104T

- A** Mounting Cutout
- B** Front Panel

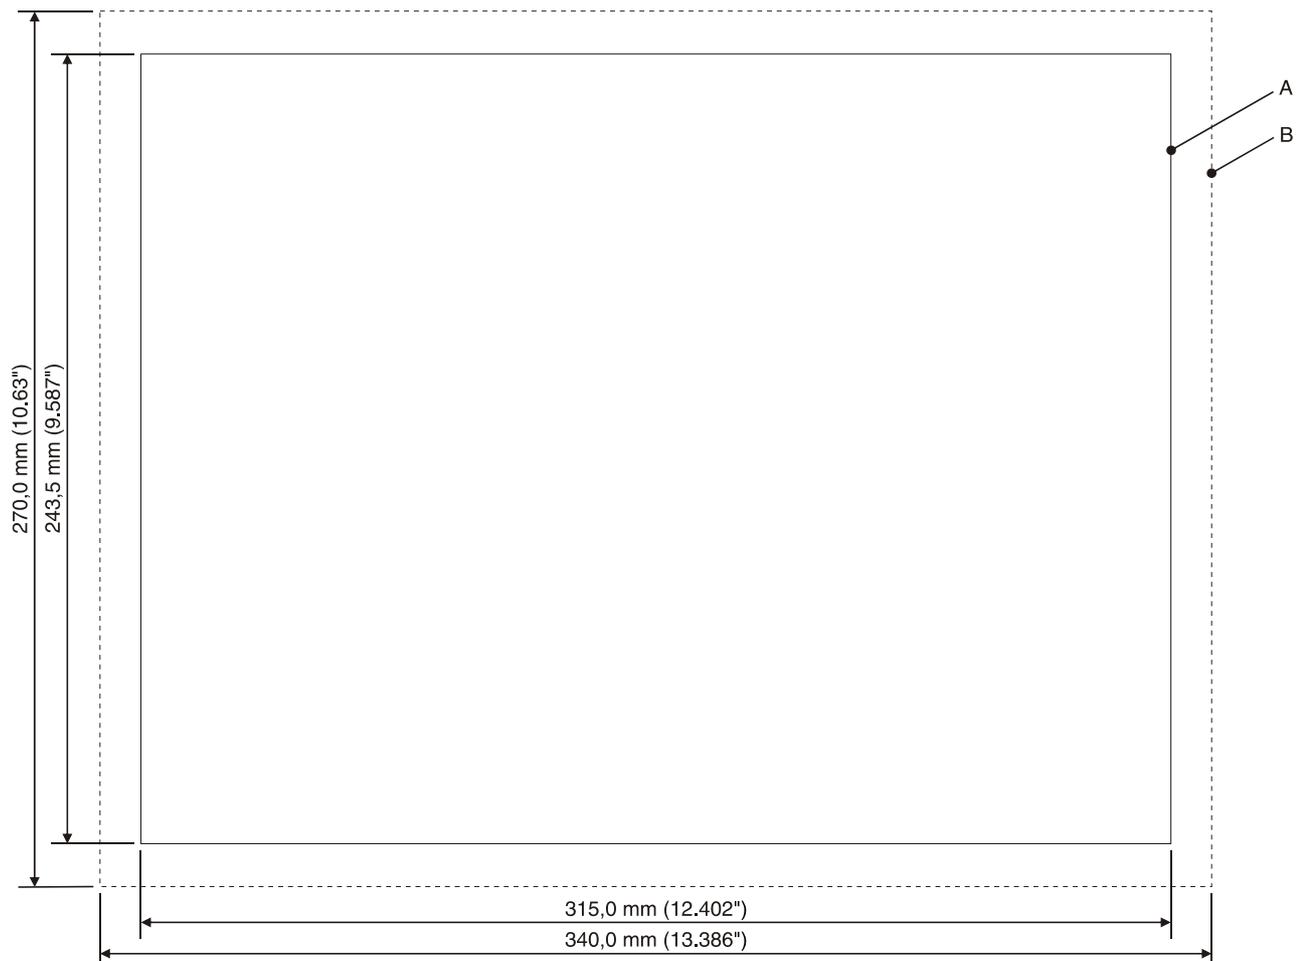


Figure 2-8 TPM121T

- A** Mounting Cutout
- B** Front Panel

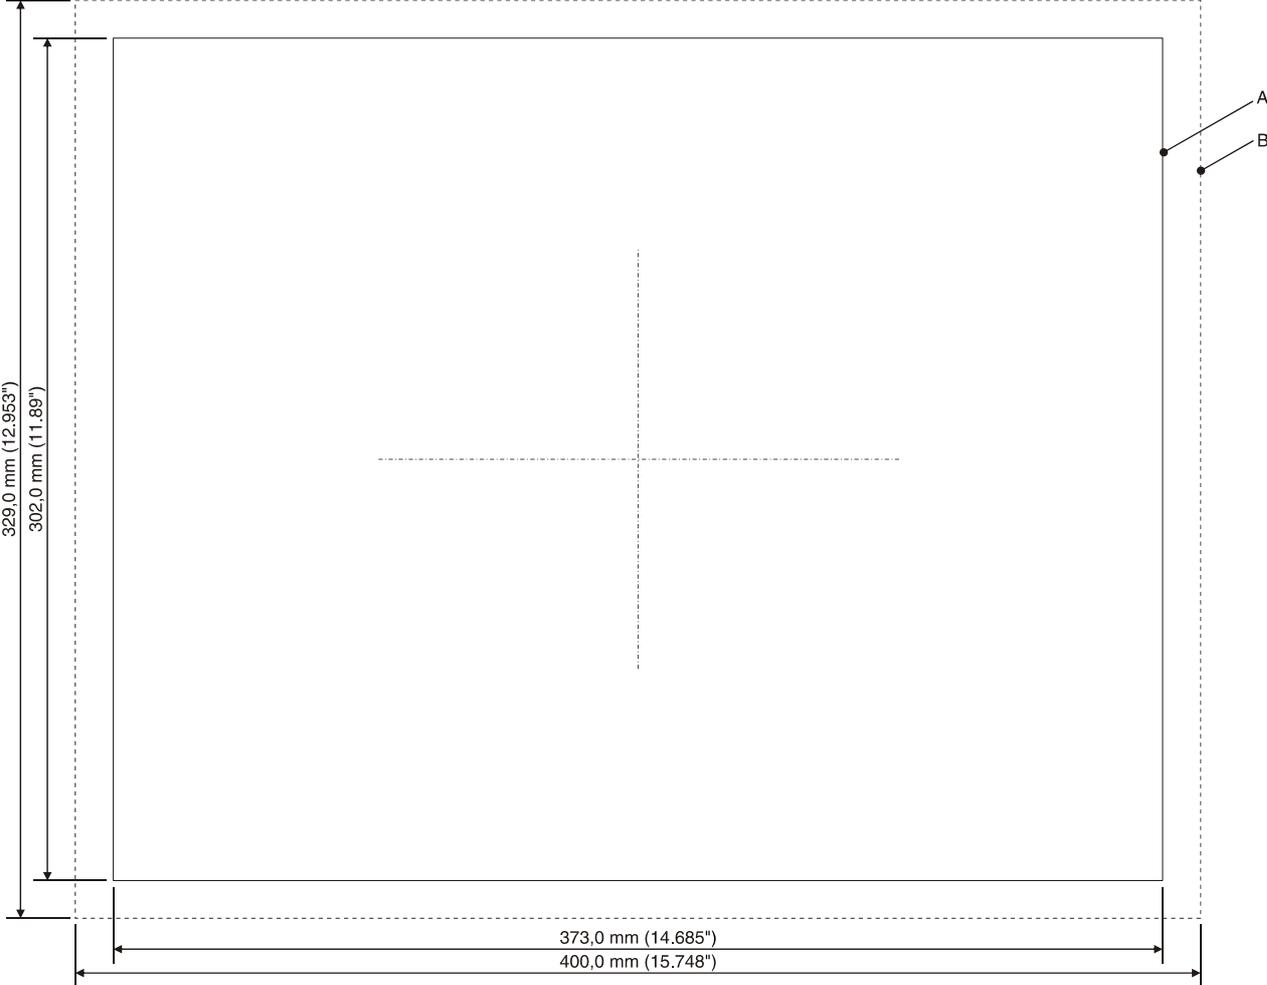


Figure 2-9 TPM151T

- A Mounting Cutout
- B Front Panel

### 2.2.3 Side View, Mounting Depth

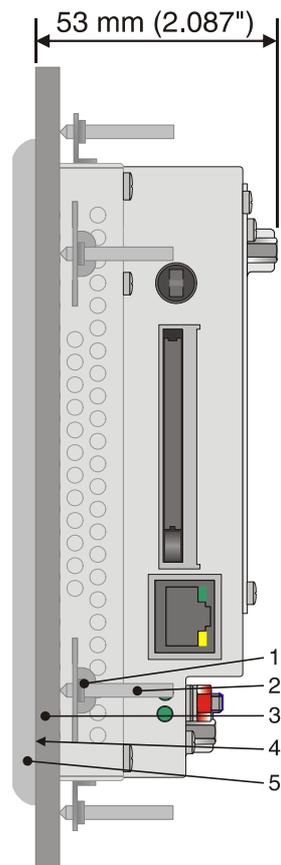


Figure 2-10 TPM057M, TPM057S, TPM057T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

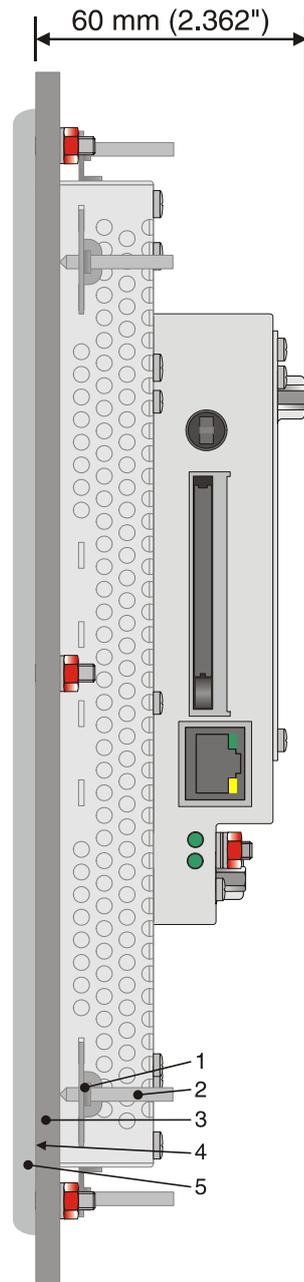


Figure 2-11 TPM104T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

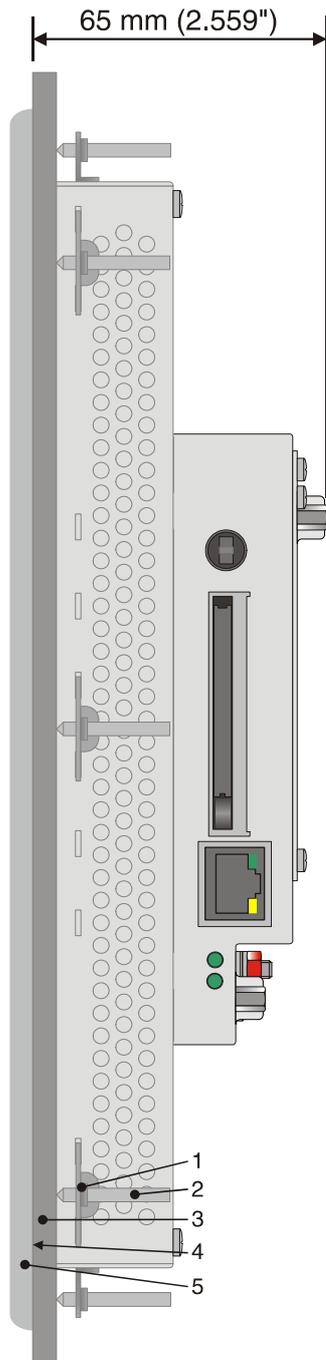


Figure 2-12 TPM121T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

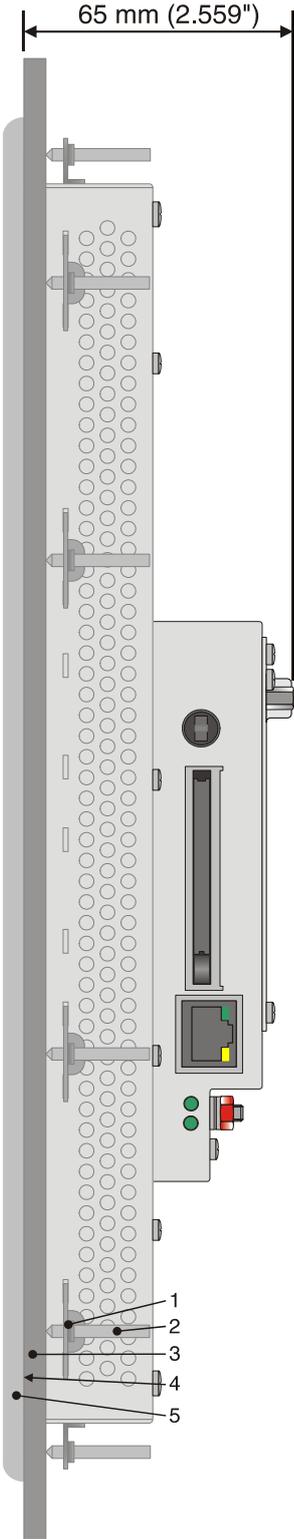


Figure 2-13 TPM151T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

## 2.3 Connecting the Device

### 2.3.1 Supply Voltage 24 V

The supply voltage is supplied via connector X1.

The device has reverse polarity protection. In case of wrong polarity, the device will not operate.

This is a protection class I device. For safe operation, safety extra-low voltage (SELV) in accordance with DIN EN 61131 must be used for the supply voltage.

Connector in the operating device: 3 pin connector Phoenix COMBICON MSTBV 2.5/3-GF

Table 2-1 Pin assignment supply voltage

Pin	Designation	Function
1		Low-Noise Ground
2	0 V	Supply Voltage 0 V
3	24 VDC	Supply Voltage 24 VDC

A suitable female connector strip of the type Phoenix COMBICON MSTB 2.5/3-STF is supplied.



Cables with finely stranded conductors with a minimum cross-section of 0.75 mm<sup>2</sup> (18 AWG) and a maximum cross-section of 2.5 mm<sup>2</sup> (14 AWG) must be used for the supply voltage.



Hazardous voltages can exist inside electrical installations that can pose a danger to humans. Coming in contact with live parts **may result in electric shock!**

Use the following procedure to connect the device to the supply voltage:

1. Strip approx. 30 mm (1.181") off the outer cable sheath and approx. 5 mm (0.197") off the wires.

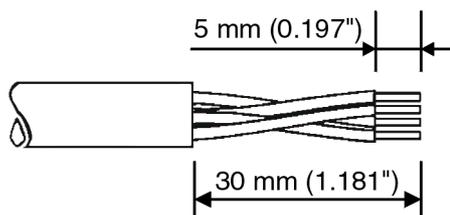


Figure 2-14 Preparing the cable

2. Fit the wires with wire end ferrules and connect the wires to the connector.

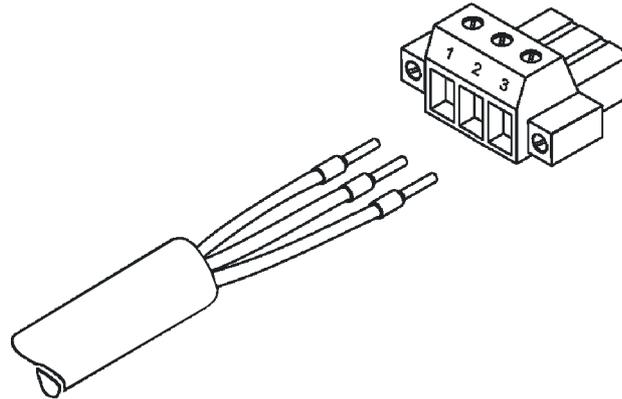


Figure 2-15 Connecting the female connector strip



If shielded connecting cables are used in the supply voltage area, the shield should be connected to pin 1.

3. Plug the female connector strip onto connector X1.

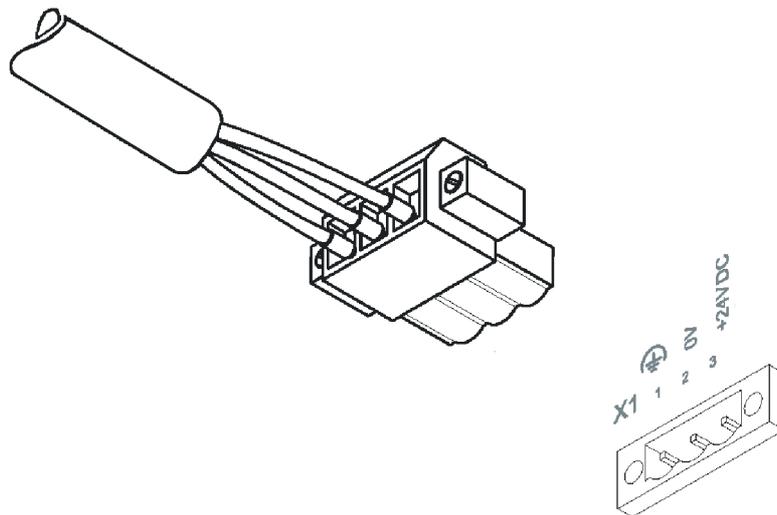


Figure 2-16 Female connector strip is plugged on

4. Secure the female connector strip in place with a screw-type locking to prevent it from slipping out.



A separate conductor must always be provided for the protective grounding at the threaded bolt. The conductor must have a minimum cross-section of 1.5 mm<sup>2</sup> (16 AWG) and must be kept as short as possible.

## 2.4 Switching On

The Windows CE operating system is installed on the operating device. Running on the operating system is the visualization runtime software TSvisRT.

### 2.4.1 Loading Procedure on Windows CE Operating System

The initialization starts the Launch.exe program.

The program allows you to use the keys **Cursor Down** and **Enter** or the buttons to make changes to the configuration.

The Launch.exe program has 3 operating modes:

- Normal (no key / button is pressed)
- Setup Main (Key **Enter** / button **Press For Setup Main Menu** was pressed)
- Administration (**Cursor Down** key followed by **Enter** / **Admin** button was pressed)

#### 2.4.1.1 Normal Operating Mode

The program AppStarter.exe starts from the internal Flash memory.

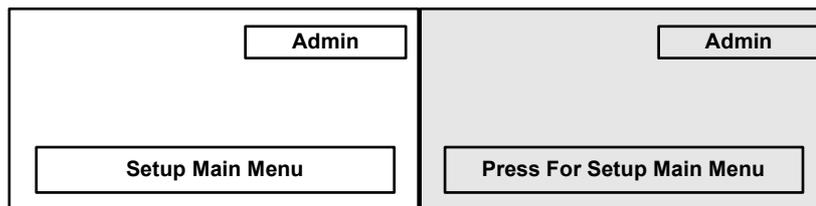


Figure 2-17 Display after startup (operating devices with keys / operating devices with touch screen)

The following message is issued if the AppStarter.exe file does not exist.

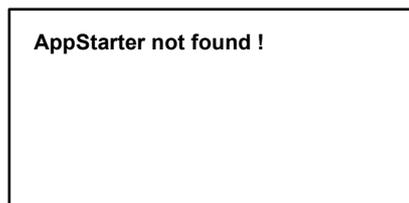


Figure 2-18 Error message after startup

#### 2.4.1.2 Setup Main Operating Mode

If you press the **Enter** key or the **Press For Setup Main Menu** button during the startup phase, the Setup Main mode starts.

The normal entries apply to operating devices with keys only. The gray entries apply to operating devices equipped with a touch screen.

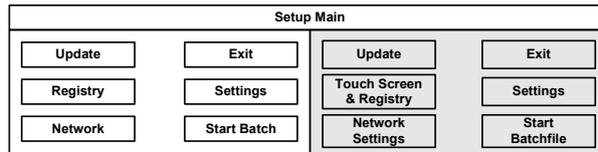


Figure 2-19 Setup Main



Some settings are password-protected. The password is "+-+-".

**Update:**

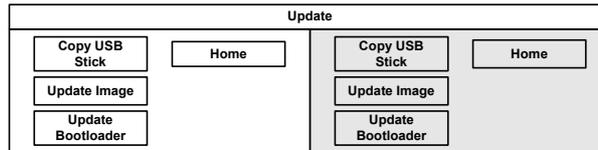


Figure 2-20 Update

**Update, Copy USB Stick:**

This function copies the data from the USB stick to the internal flash file system.

Several projects can be managed in subdirectories below the directory TSvisRT. If more than one project is in different subdirectories, a choice dialog is displayed. Only directories which contain a project file (xxxx.cb) are listed.

The entire TSvisRT directory or the corresponding subdirectory and the AppStarter.exe are copied into the target directory of the flash file system.

**Update, Update Image:**

If the Image subdirectory on the memory stick contains a xxxx.nb0 file, this file is used to perform the image update. There must only be one xxxx.nbo file in this directory.

In this case, the Flash registry is always deactivated so that the image is processed with a new default registry.

**Update, Update Bootloader:**

If the Bootloader subdirectory on the memory stick contains a xxxx.nb0 file, this file is used to perform the bootloader update. There must only be one xxxx.nbo file in this directory.

The user is informed that the update has been successfully completed.

**Registry:**

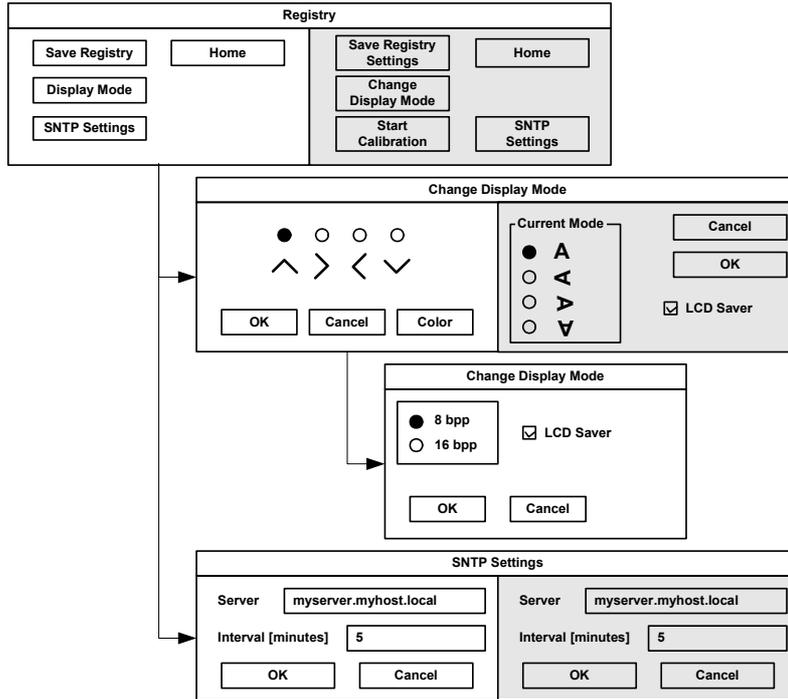


Figure 2-21 Registry

**Registry, Save Registry Settings:**

The entire registry is saved.

**Registry, Change Display Mode:**

Set-up of display adjustment.

LCD Saver switches the brightness to the lowest value, if no user operation occurs for at least one hour.

This entry is password-protected.

**Change Display Mode, Color:**

Selection of color depth for TFT displays.

LCD Saver switches the brightness to the lowest value, if no user operation occurs for at least one hour.

**Registry, Start Calibration:**

The touch screen calibration process is started. After calibration, the values are automatically saved in the Registry.

**Registry, SNTP Settings:**

The name of a time server can be entered via the Intranet or Internet. The synchronization interval is specified in minutes.

This entry is password-protected.

Network Settings:

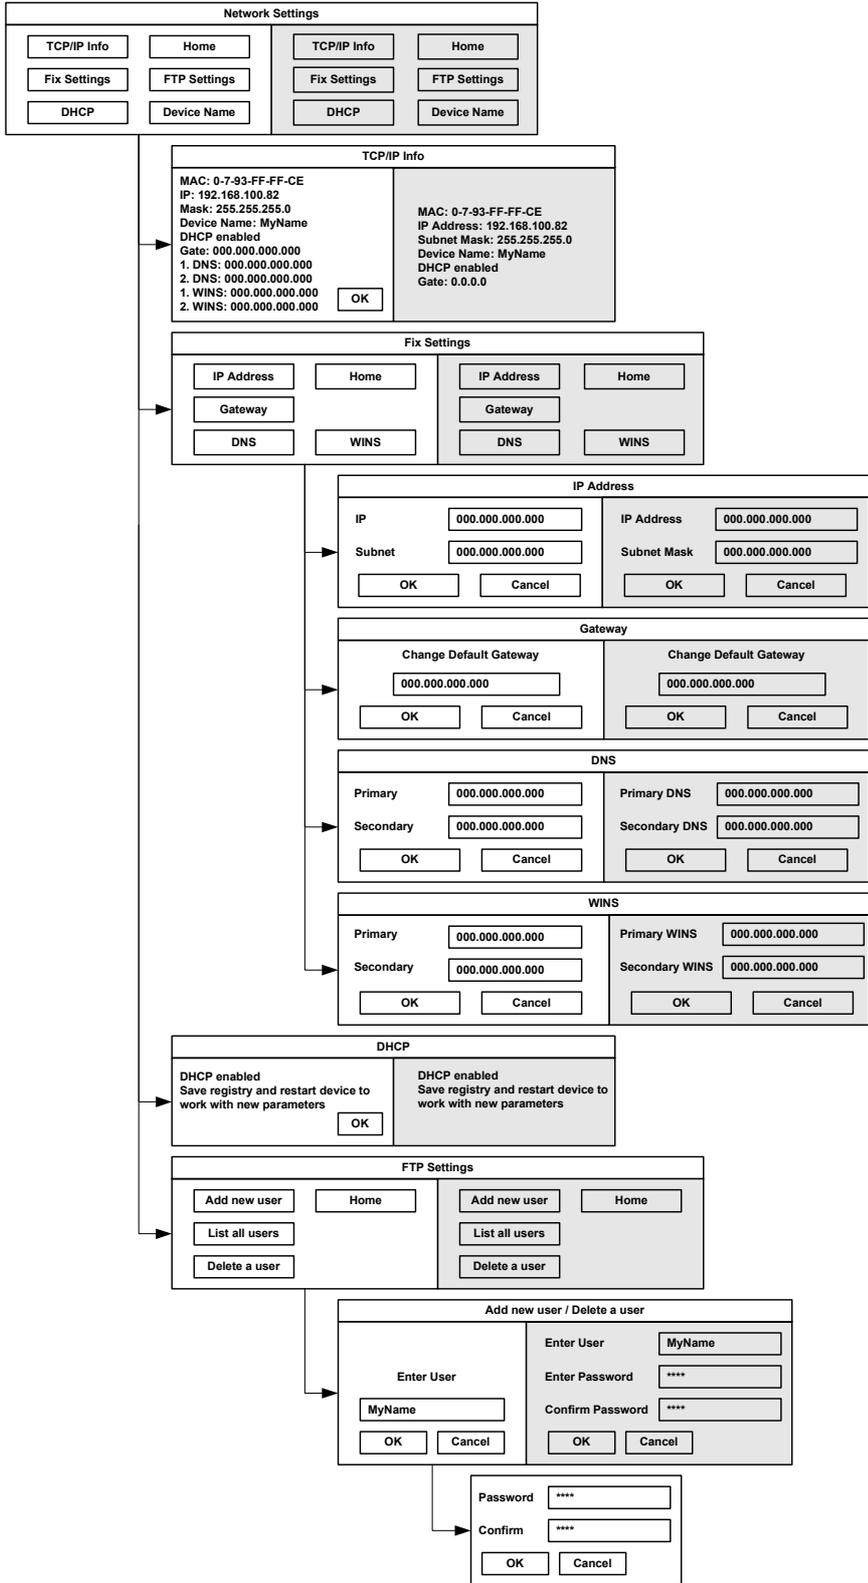


Figure 2-22 Network Settings

### Network Settings, Fix Settings, IP Address:

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
IPAddress=172.016.042.150
SubnetMask=255.255.255.000
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

### Network Settings, Fix Settings, Gateway:

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
Gateway=172.016.042.150
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

### Network Settings, Fix Settings, DNS:

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
PrimaryDNS=172.016.042.150
SecondaryDNS=172.016.042.151
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

### Network Settings, Fix Settings, WINS:

The system deselects DHCP and enters the settings from the IPSetting.ini file of the USB stick. This file must exist in the root directory of the USB stick.  
If no USB stick is connected the information is read from the registry.

This entry is password-protected.

Contents of the IPSetting.ini file:

```
[IPCONFIG]
PrimaryWINS=172.016.042.150
SecondaryWINS=172.016.042.151
```



All addresses must be given in the format "xxx.xxx.xxx.xxx".  
Numbers smaller than 100 you have to fill up with zeros.  
(Example: 192.168.42.1 -> 192.168.042.001)

**Network Settings, Current IP:**

Displays the MAC address, current IP address, subnet mask, device name, DHCP status, gateway, DNS and WINS.

**Network Settings, DHCP:**

The system enables DHCP. After enabling DHCP this setting must be saved using "Save Registry".

This entry is password-protected.

**Network Settings, FTP Settings, Add new user:**

You may enter a new user name. You have to assign a password to the user name and to confirm it.

If at least one user name is added you cannot login to the FTP server as anonymous anymore.

**Network Settings, FTP Settings, List all users:**

All users are listet within a DOS box.

**Network Settings, FTP Settings, Delete a user:**

You may enter the user name you like to delete.

This entry is password-protected.

**Network Settings, Device Name:**

You can define a device name with up to 14 characters. Via a FTP connection you can access the device with the device name instead of the IP address.

This entry is password-protected.

**Settings:**

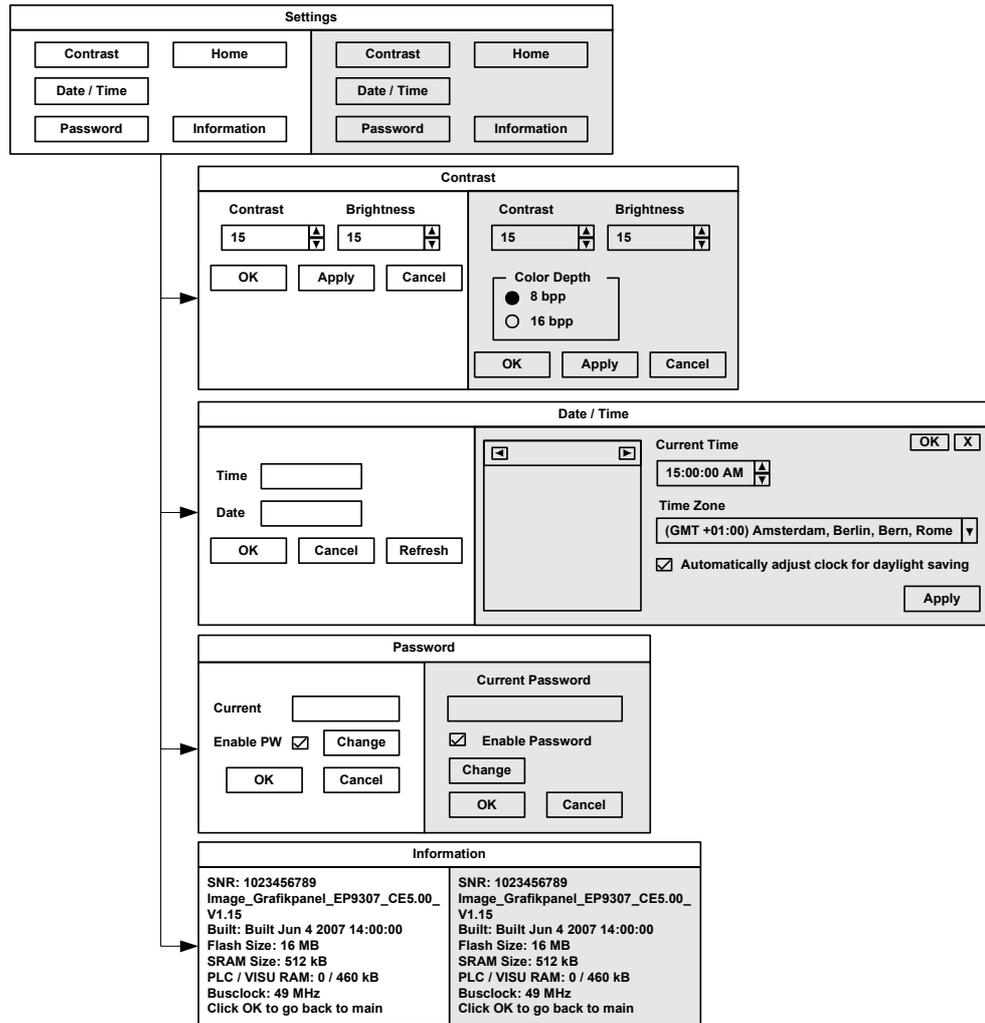


Figure 2-23 Settings

**Settings, Contrast:**

The operating mode setup main is displayed with default values for contrast and brightness to ensure reading also at faulty values. If you change a value, you have to confirm this in a dialog.

Selection of color depth for TFT displays.

**Settings, Date / Time:**

Set the date, time and time zone.

**Settings, Password:**

The password can be activated, deactivated or redefined. When the password is activated, all password-protected dialog boxes can only be accessed if the password has been entered successfully.

This entry is password-protected.

**Settings, Information:**

The following information is output: serial number, image version, image date, built version, flash size, SRAM size and PLC / Visu RAM size.

**Start Batch:**

The **project.bat** file in the **FlashDrv** directory starts, if available.

### 2.4.1.3 Administration Operating Mode

If you press the **Cursor Down** key followed by the **Enter** key / **Admin** button during the startup phase, the Administration mode of operation starts.

You can use the Admin.ini file to manage the device. This file must exist in the root directory of the USB stick.

This file is used as a dongle to prevent users from changing the device during normal operation.

Possible contents for the Admin.ini file:



Observe upper and lower case for all entries!

Explorer=Off	Deactivates the Explorer in the registry. The change becomes effective on the next device reboot.
Explorer=On	Activates the Explorer in the registry. The change becomes effective on the next device reboot.
Registry=Default	Destroys the current registry and activates the default registry of the image. The change becomes effective on the next device reboot.
Start=MyProgramm.exe	Starts the application MyProgramm.exe
StartRepllog=On	Enables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
StartRepllog=Off	Disables automatic startup of the Repllog.exe program in the registry. The change becomes effective on the next device reboot.
DeviceName=MyName	Defines the device name of the operating device
Demomode=On	Enables demo mode for TSvisRT. The change becomes effective on the next device reboot.
Demomode=Off	Disables demo mode for TSvisRT. The change becomes effective on the next device reboot.
;Demomode=Off	Comment, no impact

### 2.4.2 Function of the AppStarter.exe Program

The AppStarter.exe program creates all the necessary registry settings and can also store the registry, if desired.

If the Explorer is activated, the system shuts it down. Automatic startup of ActiveSync is also deactivated.

The AppStarter.exe file then starts the TSvisLD\_CE.exe file from the Flash File System (FFS).

### 2.4.3 Function of the TSvisLD.exe Program

The TSvisLD.exe loads the following components into the memory of the operating system in accordance with the instructions in the TSvisRT\_CE.ini file:

- User application
- Protocol driver
- TSvisRT firmware

The program then unpacks the compressed application file (\*.CB) and starts the TSvisRT Runtime component.

### 2.4.4 Memory Media Used

The following memory media are used:

Table 2-2 Memory media used

<b>Operating system memory</b> TSvisRT Runtime Protocol driver Application		<b>Flash file system (FlashDrv)</b> AppStarter.exe Subdirectory TSvisRT\Project name (with TSvisRT Runtime, protocol driver and application)		USB stick (Hard disk)
		Registry settings		Admin.ini IPSetting.ini
		Image storage in Flash		Subdirectory Image
		Bootloader storage in Flash		Subdirectory Bootloader

Legend:

-  Copying carried out by operating system
-  Copying carried out by the bootloader
-  Copying carried out by the Launch.exe

## 2.4.5 Important Files and Update

Table 2-3 Important files and update

File	Storage location	Update	Function
TSvisRT_CE.INI	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Initialization file for TSvisLD_CE.exe
SPSTtxxxxxxx.yyy.DLL	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Protocol driver
*.CB	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	Compressed application file
TSvisRT_CE.EXE	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Transfer via programming software on USB stick or FTP server	TSvisRT Runtime
EBOOT.nb0	Subdirectory <b>Bootloader</b>	Menu item "Update Bootloader" in operating mode setup main via USB stick	Windows CE Bootloader
NK.nb0	Subdirectory <b>Image</b>	Menu item "Update Image" in operating mode setup main via USB stick	Operating system Windows CE
AppStarter.EXE	<b>Root directory</b> on USB stick	Menu item "Copy USB Stick" in operating mode setup main via USB stick	Starts TSvisLD_CE.exe
TSvisLD_CE.EXE	Subdirectory <b>TSvisRT</b> or <b>TSvisRT\Projekt</b> on USB stick	Menu item "Copy USB Stick" in operating mode setup main via USB stick	TSvisRT loader
Admin.INI	<b>Root directory</b> on USB stick	-	File with administration settings
IPSetting.INI	<b>Root directory</b> on USB stick	-	File with settings for IP assignment
project.bat	<b>Root directory</b> on FlashDrv		Starts a user-defined application from within the launcher

## 2.5 Identification

The operating device can be identified using the nameplate on the rear of the device.



Figure 2-24 Nameplate (example)

- 1 Order number
- 2 Version key (at time of delivery)
- 3 MAC address
- 4 Voltage and power specification
- 5 Serial number

### 2.5.1 Version Key

The version key provides information on the version level of various components at time of delivery.

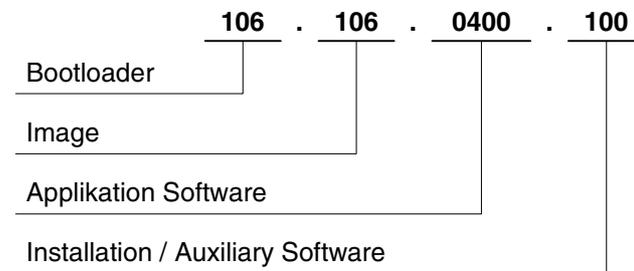


Figure 2-25 Version key (example)

## 3 Control and Display Elements

### 3.1 Touch Screen

The device is equipped with a resistive 4 wire touch screen. You operate the device using this touch screen.



Pointed or sharp objects, such as pens or fingernails, can lead to irreparable damages of the touch screen. Exclusively therefore use the fingertips or the aids indicated in the technical data for the operation.



To protect the touch screen you can use special protection foils. You receive corresponding protection foils directly from Süttron electronic.

---

### 3.2 Key "Reset"

The reset key is located on the rear of the device. You can use this key to restart the device.

### 3.3 Display



**Danger - Toxic!**

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!



**Danger - Corrosive!**

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!

---

The operating device is equipped with different displays depending on variant.



## 4 Interfaces of the Device

The following figure shows the TP057T exemplarily for all operating devices described in this manual.

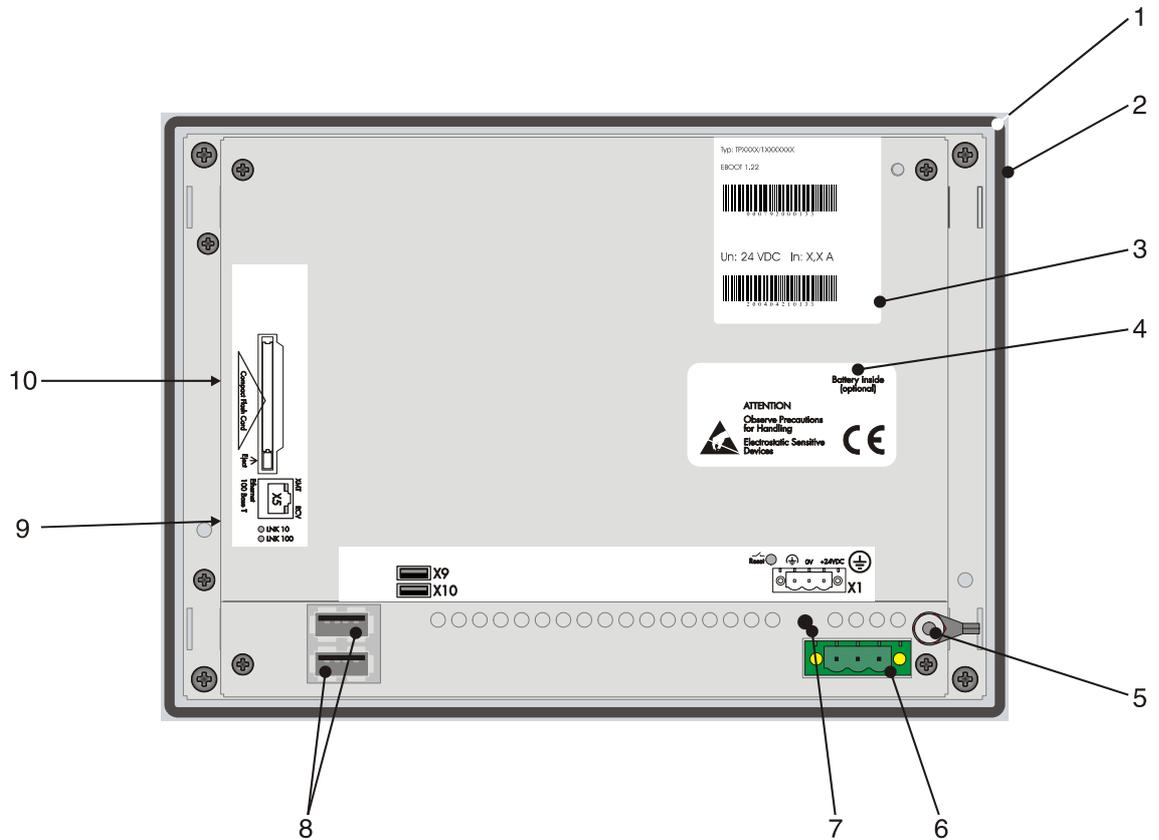


Figure 4-1 Rear view TP057T-10/1101xx

- 1 Seal
- 2 Front Panel
- 3 Nameplate
- 4 Battery Information
- 5 Threaded Bolt For Protective Grounding
- 6 Connector X1 (Supply Voltage)
- 7 Reset Key
- 8 Female Connector X9, X10 (USB Host - Type A)
- 9 Female Connector X5 (Ethernet) on the Side of the Operating Device
- 10 Compact Flash, Inserted on the Side on the Operating Device

## 4.1 Ethernet (X5)

A 10/100 Base-T Ethernet interface is located on the side of the operating device.

### 4.1.1 Pin Assignment

Connector in the operating device: RJ45 female connector.

Table 4-1 Assignment of the Ethernet interface

Pin	Designation	Function
1	Tx+	Transmitted Data, Positive Polarity
2	Tx-	Transmitted Data, Negative Polarity
3	Rx+	Received Data, Positive Polarity
4	n.c.	Not Connected
5	n.c.	Not Connected
6	Rx-	Received Data, Negative Polarity
7	n.c.	Not Connected
8	n.c.	Not Connected

### 4.1.2 Cable



A twisted pair cable of the category 5 (CAT 5) type must be used. The maximum cable length is 100 m (328.084 feet).

---



See the IEEE 802.3 standard for further information.

---

### 4.1.3 Diagnostics

Ethernet diagnostics LEDs are located at the side of the operating device.

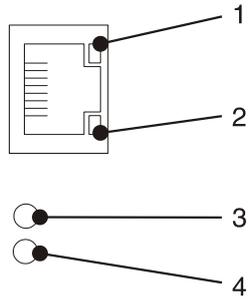


Figure 4-2 Arrangement of the Ethernet diagnostics LEDs

Table 4-2 Ethernet Diagnostics LEDs

No.	Color	Status	Designation	Function
1	Green	On	XMT	Receiving Ethernet data telegram
2	Yellow	On	RCV	Sending Ethernet data telegram
3	Green	On	LNK 10	Operation in mode 10 MBit/s and proper connection with 10BASE-T hub
4	Green	On	LNK 100	Operation in mode 100 MBit/s and proper connection with 10BASE-T hub

## 4.2 USB (X9, X10)

Two host interfaces are available on the operating device.



Using the USB interfaces while normal operating mode is not permitted for maritime applications!  
For maritime applications the use of the USB interfaces is allowed for servicing operations only!

---



Using input devices not suitable for industrial use (e.g. keyboard, mouse) may decrease safety of operation. This includes input devices intended for home and office use.

---

### 4.2.1 Cable



For the specification of a suitable cable, please refer to the „Universal Serial Bus Specification Rev. 2.0“.

---



The maximum cable length for the cable used is 2.5 m (8.202 feet).

---

### 4.3 Memory Card

You can insert a CompactFlash card on the side of your operating device. The CompactFlash card allows you to exchange projects between the PC and the operating device.

You can recognize the rear side of a CompactFlash card by the notches on each side of the card.

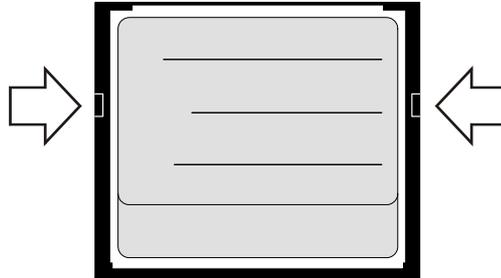


Figure 4-3 Rear view of the memory card

#### 4.3.1 Inserting the Memory Card

When you insert the card from the rear side of the operating device, make sure the front side of the card is visible. Insert the card until it snaps into place.

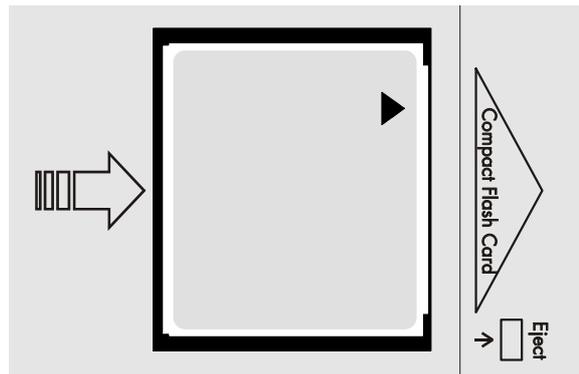


Figure 4-4 Inserting the memory card

#### 4.3.2 Ejecting the Memory Card

To remove the card, press the ejection button on the operating device.

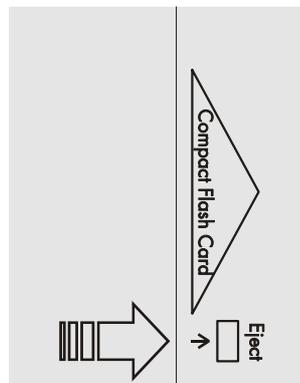


Figure 4-5 Ejecting the memory card



## 5 Maintenance and Servicing

### 5.1 Maintenance Interval

The following maintenance intervals are recommended for this operating device:

Tabelle 5-1

Maintenance work	Interval
Changing the Battery	4 Years

### 5.2 Front Panel

Only use a damp cloth to remove any dirt from the front panel.

### 5.3 Fuse



The semiconductor fuse cannot be replaced!

A semiconductor fuse is used to protect the device. Once the fuse has been tripped, the device must be disconnected from the supply voltage to allow the semiconductor fuse to regenerate. At an ambient temperature of 20 °C (68 °F), the regeneration takes approximately 20 seconds. The higher the ambient temperature, the longer the regeneration takes.

### 5.4 Battery (Option)

The built-in battery supplies the real-time clock. The minimum battery life is 5 years, even under unfavorable operating conditions.

We recommend to change the battery approximately every 4 years as part of the regular maintenance work. A prepared battery including connector can be obtained directly from Süttron electronic.

Carry out the following to check the battery status:

1. Press the Servicetool button on your operating device.
2. Open Systeminfo by double-clicking (double-tapping) the appropriate icon.
3. Select the Battery tab.

You can display the following statuses:

Battery OK	Battery is ready for operation
No battery found	Battery is empty or there is no battery at all

### 5.4.1 Changing the Battery



Batteries must only be changed by authorized and trained experts!



For changing the battery you may only use replacement batteries of Süttron electronic.



Electrostatic discharge can damage electronic components! **Observe the ESD protective measures!**



Do not throw lithium batteries into fire, do not heat to 100 °C or higher and do not recharge. **Danger - Explosive!**



Do not open lithium batteries. **Danger - Toxic!**

To ensure the the time is preserved, it is possible to change the battery under operating voltage. Observe the safety notes!

1. Disconnect the connector strip of the supply voltage.
2. Remove the screws (see figure) on the rear panel of the device.
3. Remove the interface plate if necessary (foursquare).
4. Lift off the enclosure.
5. Plug in the connector strip of the supply voltage.
6. Disconnect the connector strip of the battery an remove the dead battery.
7. Clean the inside of the enclosure to remove rests of glue if necessary.
8. Plug in the cable for the new battery.
9. Remove the liner from the adhesive pad of the battery.
10. Fasten the new battery on the inside of the enclosure.
11. Disconnect the connector strip of the supply voltage.
12. Place the enclosure back onto the device.
13. Place the interface plate onto the enclosure if necessary.



While mounting the enclosure observe that all nibs are fitting into the corresponding notches of the underneath enclosure.

14. Carefully tighten the screws of the enclosure and then the screws of the interface plate.

15. Plug in the connector strip of the supply voltage.

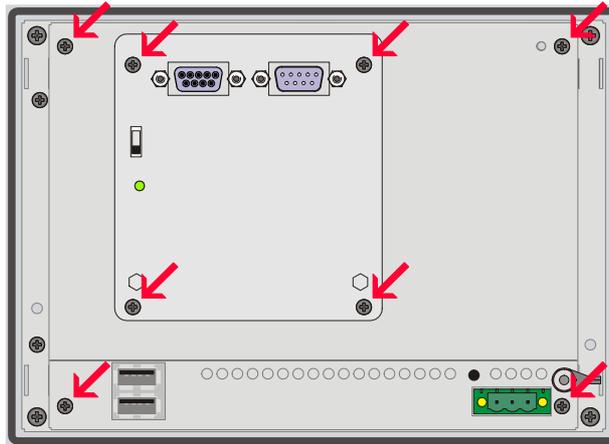


Bild 5-1 Screws on the operating device

## 5.4.2 Battery Disposal



To prevent short circuiting in the collection boxes, insulate the poles of each battery with insulation tape or put each single battery into a plastic bag.

You must always return old batteries to a dealer or to a returns depot set up for this purpose by the public waste disposal body or a licensed battery dealer for recycling. Only dispose of dead batteries in public or commercial collection boxes. The battery is drained when the message „Change battery“ appears on the display of the device.



## 6 Technical Data

Display	TPM057M	TPM057S	TPM057T
Type	STN (mono)	C-STN (color)	TFT (color)
Resolution (pixels)	320 x 240		
Colors	15 Shades of gray (4 gray scales should be programmed for a clear graduation)	256	65536
Reading angle	90°	60°	130°
Contrast setting	Temperature compensated	Temperature compensated	-
Half-life backlighting	20,000 h	25,000 h	50,000 h
Brightness in cd/m <sup>2</sup>	120	160	400
Display area (H x W) in mm (Inch)	90 x 120 (3.543 x 4.724)	90 x 120 (3.543 x 4.724)	90 x 120 (3.543 x 4.724)

Display	TPM104T	TPM121T	TPM151T
Type	TFT (color)		
Resolution (pixels)	640 x 480	800 x 600	1024 x 768
Colors	65535	65535	256
Reading angle	100°	120°	160°
Contrast setting	-		
Half-life backlighting	50,000 h		
Brightness in cd/m <sup>2</sup>	280	240	480
Display area (H x W) in mm (Inch)	162 x 215 (6.378 x 8.465)	187 x 248 (7.362 x 9.764)	231 x 306 (9.094 x 12.047)

Touch Screen	
Type	Analog resistive, 4 wire technology
Activation force	15 g (Standard) With R8 HS60 silicon rubber
Durability	No damages or malfunctions after 3 million keystrokes as the following: Keystroke element: R8, HS40 silicon rubber Keystroke load: 150 g Keystroke frequency: 3 Hz

## Technical Data

Electrical Data	TPM057M	TPM057S	TPM057T
Supply voltage	24 V DC (SELV in accordance with DIN EN 61131)		
Residual ripple	10 % maximum		
Minimum voltage	18 V		
Maximum voltage	30 V		
Power consumption (typical at 24 V)	0.5 A	0.6 A	0.7 A
Connected load	12 W	14.5 W	17 W
Fuse	Semiconductor fuse, self-resetting		
Protection against polarity reversal	Integrated		

Electrical Data	TPM104T	TPM121T	TPM151T
Supply voltage	24 V DC (SELV in accordance with DIN EN 61131)		
Residual ripple	10 % maximum		
Minimum voltage	18 V		
Maximum voltage	30 V		
Power consumption (typical at 24 V)	0.8 A	0.8 A	1.2 A
Connected load	19 W	19 W	29 W
Fuse	Semiconductor fuse, self-resetting		
Protection against polarity reversal	Integrated		

Ethernet	
X5 Ethernet	10/100 Base-T

USB	
Corresponds to the "Universal serial bus specification Rev. 2.0"	
X9, X10 Host	Min.: 1.5 Mbit/s Max.: 12 Mbit/s Max. output current 100 mA per output

<b>Central Processing Unit</b>	
Central processing unit	Intel® XScale™ PXA255
Clock frequency	400 MHz

<b>Memory</b>	
Flash (Internal)	32 MByte
SDRAM	64 MByte
SRAM	1 MByte
CompactFlash interface for CompactFlash type I and II	

<b>Connection System</b>	
Female and male connector strips Phoenix COMBICON, 3 pin	
RJ45 female connector	
USB female connector A	

<b>Environmental Conditions</b>	
Temperature during operation	0 °C to 50 °C (32 °F to 122 °F)
Temperature during storage, transport	- 25 °C to + 70 °C (-13°F to + 158°F)
Relative air humidity for operation and storage	10 % to 95 %, no condensation
Application area	Degree of pollution 1, overvoltage category II

<b>Approvals</b>	
CE, UL, cUL, GL	

Standards and Guidelines	
Interference immunity	EN 61000-4-2 EN 61000-4-3 EN 61000-4-4 EN 61000-4-5 EN 61000-4-6 EN 61000-6-2
Emitted interference	EN 50011 limit class value A
Equipment requirements	EN 61131
Storage and transportation	EN 61131 part 2
Power supply	EN 61131 part 2
Electromagnetic compatibility	89/336/EEC (Including all applicable amendments)
Degree of protection	EN 60529
Impact load, shocks	EN 60068 part 2-27
Sinusoidal vibrations	EN 60068 part 2-6
Corrosion protection	IEC 60068



This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

Front Panel and Enclosure	TPM057M, TPM057S, TPM057T	TPM104T	TPM121T	TPM151T
Enclosure	Steel sheet, galvanized			
Front panel material	Aluminium, anodized natural finish			
Front panel (H x W x D) in mm (Inch)	147 x 203 x 5 (5.787 x 7.992 x 0.197)	249 x 328 x 5 (9.803 x 12.913 x 0.197)	270 x 340 x 5 (10.63 x 13.386 x 0.197)	329 x 400 x 5 (12.953 x 15.748 x 0.197)
Seal	Circumferential rubber seal on the rear			
Mounting cutout (H x W) in mm (Inch)	139 x 195 (5.7472 x 7.677)	222 x 303 (8.740 x 11.929)	243,5 x 315 (9.587 x 12.402)	302 x 373 (11.89 x 14.685)
Mounting depth (without connectors)	About 53 mm (2.087")	About 60 mm (2.362")	About 65 mm (2.559")	About 65 mm (2.559")
Degree of protection	Front: IP65 Rear: IP20			
Total weight	About 1100 g	About 2100 g	About 2700 g	About 3700 g

## 7 Ordering Data

Table 7-1 Accessories

Description	Part No.
CompactFlash card 16 MB	81152.000
CompactFlash card 32 MB	81152.032
CompactFlash adaptor for laptops	81166.000
CompactFlash adaptor for PC	81167.000
USB 2.0 memory stick 512 MB	81152.512
Battery, assembled with cable and connector (Type: CR2450)	66779.000
Protective foil for touch screen 5,7" (Set with 10 protective foils, scraper and instructions)	81251.057
Protective foil for touch screen 10,4" (Set with 10 protective foils, scraper and instructions)	81251.104
Protective foil for touch screen 12,1" (Set with 10 protective foils, scraper and instructions)	81251.121
Protective foil for touch screen 15" (Set with 10 protective foils, scraper and instructions)	81251.150



# A Index

## A

Accessories.....	7-1
Administration operating mode .....	2-23

## B

Batteriewechsel.....	5-2
Battery.....	5-1
Battery disposal .....	5-3

## C

Cable	
Ethernet .....	4-2
USB .....	4-4
Connecting.....	2-14

## D

Diagnose	
Ethernet .....	4-3
Dimensions	
Cutout .....	2-6
Front panel.....	2-2
Display .....	3-1

## F

Function of the AppStarter.exe program .....	2-23
Function of the TSvisLD.exe program .....	2-24
Fuse .....	5-1

## I

Identification.....	2-26
Important files and update .....	2-25
Intended use .....	1-2
Interface	
Ethernet .....	4-2
USB .....	4-4

## L

Loading procedure on Windows CE operating system .....	2-16
--	------

## M

Maintenance.....	5-1
Maintenance interval .....	5-1
Memory card .....	4-5
Memory media used.....	2-24
Mounting .....	2-1

## N

Nameplate.....	2-26
Normal operating mode.....	2-16

## O

Ordering data .....	7-1
---------------------	-----

## P

Pin assignment	
Ethernet .....	4-2

## R

Reset.....	3-1
------------	-----

## S

Safety notes .....	1-2
Servicing .....	5-1
Setup Main operating mode .....	2-16
Standards.....	6-4
Supply voltage 24 V .....	2-14
Switching on.....	2-16
Symbols	
General .....	1-1
Specific .....	1-1

## T

Target group.....	1-2
Technical data.....	6-1
Touch screen .....	3-1

## U

Unpacking .....	2-1
-----------------	-----

## V

Version key .....	2-26
-------------------	------





