

# ROTARY ACTUATOR

## TYPES

### RM 50 TO

### RM 410



Dear Customer,

Congratulations on choosing a SCHUNK product. By choosing SCHUNK, you have opted for the highest precision, top quality and best service.

**You are going to increase the process reliability of your production and achieve best machining results – to the customer's complete satisfaction.**

**SCHUNK products are inspiring.**

Our detailed assembly and operation manual will support you.

Do you have further questions? You may contact us at any time – even after purchase. You can reach us directly at the mentioned addresses in the last chapter of these instructions.

Kindest Regards,

Your SCHUNK GmbH & Co. KG  
Precision Workholding Systems  
Bahnhofstr. 106 - 134  
D-74348 Lauffen/ Neckar

Tel. +49-7133-103-2503  
Fax +49-7133-103-2189  
[automation@de.schunk.com](mailto:automation@de.schunk.com)  
[www.schunk.com](http://www.schunk.com)

Document last update: 18.02.2008



## Contents

<b>1</b>	<b>SAFETY</b>	<b>3</b>
1.1	SYMBOL KEY	3
1.2	APPROPRIATE USE	3
1.3	SAFETY NOTES	3
1.4	INDICATIONS TO THE OPERATING MANUAL	4
<b>2</b>	<b>WARRANTY</b>	<b>4</b>
<b>3</b>	<b>SCOPE OF DELIVERY</b>	<b>5</b>
<b>4</b>	<b>TECHNICAL DATA</b>	<b>5</b>
<b>5</b>	<b>OPERATING AND ENVIRONMENTAL CONDITIONS</b>	<b>5</b>
<b>6</b>	<b>ASSEMBLY AND INSTALLATION</b>	<b>5</b>
6.1	DESIGN PRECAUTIONS	5
6.2	COMPRESSED AIR SUPPLY	6
6.3	SPECIAL CONNECTING MEASURES	6
6.4	ASSEMBLY MEASURES	6
6.5	MEASURES FOR THE INITIAL OPERATION	6
<b>7</b>	<b>HANDLING</b>	<b>7</b>
7.1	FINE ADJUSTMENT OF ROTATION ANGLE	7
7.2	DAMPING ADJUSTMENT	8
7.3	END POSITION INTERROGATION	8
<b>8</b>	<b>REPAIRS</b>	<b>9</b>
<b>9</b>	<b>RESPONSE TO MALFUNCTIONS</b>	<b>9</b>
<b>10</b>	<b>MAINTENANCE AND CARE</b>	<b>10</b>
<b>11</b>	<b>REPLACEMENT PARTS</b>	<b>11</b>
<b>12</b>	<b>EC DECLARATION OF INCORPORATION</b>	<b>12</b>
<b>13</b>	<b>CONTACT</b>	<b>13</b>

## 1 Safety

### 1.1 Symbol key



You will find this symbol wherever **hazards for persons** or **damage to the product** are possible.



This symbol indicates **important information** on the product or its handling.

### 1.2 Appropriate Use

The rotary actuators are manufactured in accordance with the current level of technology and with recognised safety regulations. During their use, however, there may occur risks to life and limb of the user or impairment of the rotary actuator and other material assets.

The rotary actuators are intended exclusively for the swivelling movement of service loads in any position that do not react in their manipulation with any risk to persons, property or the environment.

The maximum permissible service loads and forces are given in our standard catalogue. Any usage beyond these definitions is inappropriate.

The manufacturer cannot be held liable for loss or damage arising therefrom. The risk is borne exclusively by the user.

Usage in accordance with directions includes observation of the user manual as well as adherence to the maintenance and repair specifications prescribed by the manufacturer. The rotary actuator must only be operated by persons that are familiar therewith and that have been instructed in the associated hazards. The relevant accident prevention regulations and the other generally recognised safety and occupational health regulations must be complied with.

### 1.3 Safety Notes

1. **Responsibility for the compatibility of pneumatic equipment lies with the person who designs the pneumatic system or takes the decision on its specifications.**
  - Since the products specified herein can be used under various operating conditions, their compatibility with the appropriate pneumatic system must be based on specifications and/or tests in order to conform to their requirements.

**2. Machines and equipment operated by pneumatic means may only be used by trained personnel.**



- Compressed air can be hazardous if an operator is not familiar with its use. The assembly, handling or repair of pneumatic systems is to be undertaken by trained and experienced personnel.

**3. Do not carry out maintenance work on machines and equipment and do not attempt to remove components until it has been confirmed that it is safe to do so.**



- Inspection and maintenance of machines and equipment may only be carried out after it has been confirmed that the devices that must be switched off are in a securely deactivated condition.
- If machine parts must be removed, carry out safety precautions as mentioned above. Deactivate the compressed air supply to this machine and release any remaining compressed air from the system.
- Before machines and equipment are switched on again, take measures to ensure that cylinder rods etc. are not pushed outwards. Allow compressed air to enter the system slowly so that counterpressure builds up gradually.

**4. Contact SCHUNK (see chapter 12 page 12) if the product is to be used under one of the following conditions:**

- Conditions and environments that lie outside the stated specifications, or where the product is to be used outdoors.
- Installation in equipment in conjunction with nuclear power, railways, aerospace, vehicles, medical equipment, food and drink, leisure equipment, emergency shutdown circuits, applications in presses or safety equipment.
- Any application that may possibly have negative influences on persons, animals or property and that requires a special safety analysis.

**5. This user manual should always be easily accessible**

## **1.4 Indications to the operating manual**

This user manual describes gripper actuators of series RM 50, RM 110, RM 200, RM 310 and RM 410.

All statements in this user manual refer to the types stated above.

## **2 Warranty**

The warranty period is 24 months or 40 million load cycles after delivery date from the factory, assuming use in single-shift operation and that the recommended maintenance and lubrication intervals are respected. Components that come into contact with workpieces, wearing parts, shock absorbers, stop screws and proximity switches are never included in the warranty. The warranty covers the replacement or repair of defective parts in the manufacturing plant. Further claims are hereby excluded. In this context, please also see our General Terms and Conditions.

### 3 Scope of Delivery

The scope of delivery comprises:

- Rotary actuator type RM, depending on the version ordered

### 4 Technical Data

Please consult our catalogue for further technical details. The last version is valid in each case.  
(in accordance with Chapter 2.3 General Terms and Conditions)

The airborne sound emitted from the unit is  $\leq 70\text{dB(A)}$

### 5 Operating and environmental conditions

- Do not use the product in environments comprising corrosive gases, salt water, water or vapours.
- For use in an atmosphere where water drops, oil, sprays etc, occur take appropriate countermeasures in order to ensure protection.
- If electronic end switches are to be used, these should not be used in the presence of strong magnetic fields. Please contact SCHUNK (see chapter 12 page 12) if the product is to be used in the presence of strong magnetic fields.
- Do not use the rotary actuator in an atmosphere in which it could come into contact with fluids such as oil or water.
- Do not use the rotary actuator in an atmosphere in which it could come into direct contact with substances such as powder dust, dust, sprays etc.
- Do not use the rotary actuator in an atmosphere in which sources of heat are present.
- Do not subject the rotary actuator to excessive vibrations and/or shocks.

### 6 Assembly and Installation

#### 6.1 Design precautions

- A protective guard is recommended in order to minimise the risk of injury.
- Ensure that loose, fixed and/or connected parts are tightened securely.
- Operation without the shock absorbers included as standard in the scope of delivery is not permissible.
- Take account of the possibility that the operating pressure may decrease as a result of power failures etc.
- Pay attention to the possibility of the failure of power supplies.
- Mount the compressed air supply in such a way as to prevent a gripping action.
- Pay attention to emergency shutdown facilities.
- Pay attention to what will happen after an emergency stop or abnormal stoppage. Ensure that nobody can be placed at risk or be injured when equipment is restarted.

## 6.2 Compressed air supply

- Use clean compressed air and insert a filter between the supply and the pneumatic system.
- Install a water separator in the pneumatic system.
- Use the product only within the range specified for the medium temperature and ambient temperature.

### Air specification

- dry (free from condensation)
- filtered to 10 microns
- oiled or oil-free

## 6.3 Special connecting measures

- Use connecting pipes of a cross-section that is larger than or identical to that of the connector thread.
- Blow air through the connecting pipes before fitting the devices in order to remove any dust, contaminant or particles.
- Avoid the ingress of sealing material into the pipe network.
- Do not remove pneumatic components from their packaging until shortly before fitting.

## 6.4 Assembly measures

- During the mounting of loads, do not allow the system to be subjected to impermissible forces or moments.
- The flatness of the mounting surfaces must be less than 0.02mm.
- Select the correct means of connection with a load that has its own guidance mechanism and ensure that this is adequately aligned.
- Avoid contact with the rotary actuator during operation.
- Select a suitable screw tightening torque for mounting of the rotary actuator or loads on the rotary actuator in accordance with the generally valid guidelines for screw connections.

## 6.5 Measures for the initial operation



Please read this user manual carefully. Knowledge of this user manual is essential in order to prevent errors and ensure problem-free operation.



**Under no circumstances may rotary actuators be operated with oiled air if they are subsequently to be operated with oil-free air.**

- Check the technical specifications.
- Do not use the device until you have checked that it functions correctly taking account of all permissible operating parameters.
- Regulate the operating speed of the cylinder by means of throttle type non-return valves. Increase from the low speed to higher speeds until the required operating speed is reached.

### **Selection and dimensioning**

- Do not subject the units to loads that exceed the limits of their operating range. If excessive loads are applied, the gripper jaw guidance system and closing mechanism could suffer damage or inaccuracies. The maximum permissible loads are given in our standard catalogue.
- Do not allow the system to experience impermissible forces or shocks.

## **7 Handling**

### **7.1 Fine adjustment of rotation angle**

For fine adjustment of the rotation angle and matching of the end damping to the mass moment of inertia occurring in operation, the following parts are included in the scope of delivery of each rotary actuator.


- Locknut (Pos. 10)
- Stop collar (Pos. 13)
- Ram (Pos. 14)
- Shock absorber (Pos. 22)
- Locknut (Pos. 23)

Once the locknut (Pos. 11) has been loosened, the rotation angle can be adjusted in both end positions by  $\pm 5$  degrees from the nominal rotation angle by turning the stop collar (Pos. 13) with the integral ram (Pos. 14) and shock absorber (Pos. 22).

The nominal rotation angle must be indicated when ordering and be selected for any angle between 5 and 180 degrees.

#### **Example nominal rotation angle 90 degrees**

- The rotation angle to be achieved can be between 80 and 100 degrees.

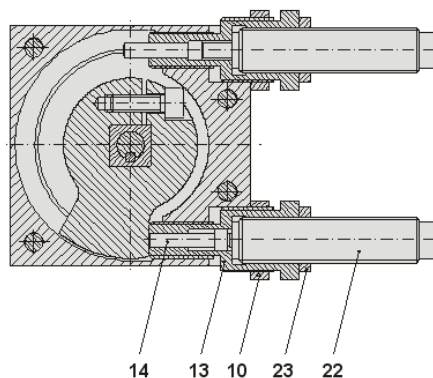

**Figure 1: Fine adjustment of rotation angle**

## 7.2 Damping adjustment



Operation without the shock absorbers included as standard in the scope of delivery is not permissible.  
Please note the maximum permissible mass moment of inertia stated in our standard catalogue.

After the locknut (Pos. 23) has been loosened, the stroke length of the shock absorber (Pos. 22) and thus the damping curve can be matched to the mass moment of inertia occurring in operation by rotating the shock absorber (Pos. 22) inwards or outwards. This does not affect the rotation angle set previously.


## 7.3 End position interrogation

Standardised interrogation sets for direct mounting are available for interrogation of end positions.

### Proximity switch - complete GMNS-...

The scope of delivery includes:

- 1x retaining plate
- 1x proximity switch
- 1x connection cable

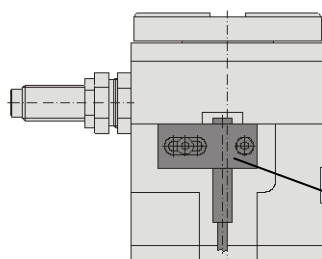

proximity switch GMNS-...  
(fitted both sides)

**Figure 2: position of proximity switch**



After the clamping screw has been loosened, the proximity switch can be set by means of the retaining plate. Interrogation is carried out on the stop lever integrated in the rotary actuator. The interrogation set can be installed on both sides of the actuator, so that both end positions can be interrogated.

## 8 Repairs



The repair or elimination of defects on our products by the customer may only be carried out with our explicit written agreement. Any failure to adhere to this principle renders invalid our warranty and liability for any resulting warranty or secondary losses.

Following receipt and examination, all linear actuators of series RM can be repaired by SCHUNK.

## 9 Response to malfunctions



**Malfunctions that are caused by defective components may only be remedied by replacement of these components.**

Defective components may only be replaced by SCHUNK genuine replacement parts.

Malfunction	Cause	Remedy
<b>Actuator does not rotate</b>	(1) No compressed air (2) Incorrect pneumatic connections	(1) Check compressed air (2) Check pneumatic elements
<b>End position signal not present</b>	(1) Initiator incorrectly set in relation to stop (2) Initiator defective (3) Broken cable	(1) Readjust initiator (2) Replace initiator (3) Replace initiator cable
<b>Actuator impacts on end positions</b>	(1) Damping incorrectly adjusted (2) Shock absorber defective (3) Ventilation valve defective (4) Rotation speed too high	(1) Adjust stop screw (2) Change shock absorber (3) Check ventilation valve (4) Set ventilation valve
<b>Service load vibrates in end position</b>	(1) Rotation speed too high (2) Inadequate damping (3) Unfavourable installation (4) Unfavourable RM type	(1) Set ventilation valve (2) Optimise damper stroke (3) Check design (4) Use larger RM type

## 10 Maintenance and Care



**Under no circumstances may rotary actuators be operated with oiled air if they are subsequently to be operated with oil-free air.**

- The integral cylinders are lubricated for life and do not require relubrication. Operation with oiled or oil-free compressed air is permissible without restrictions.
- The bearing arrangements of the turntable and of the toothed rack pinion unit are already lubricated. It is not therefore necessary to lubricate these again before operation. Lubrication or relubrication of the toothed rack pinion unit with rolling bearing grease is recommended after approx. 4 million cycles.
- All rotary actuators of series RM are maintenance-free. In order to achieve the maximum operating life, this chapter and chapter 6.2 (at page 6) of this user manual should be observed.
- Apart from normal cleaning of machines, no further maintenance measures are necessary.

## 11 Replacement parts

As standardised wear part sets, seal sets are available. The scope of delivery includes all seals.


### Ordering numbers of seal sets:

- RMDI 50 for rotary actuator RM 50
- RMDI 110 for rotary actuator RM 110
- RMDI 200 for rotary actuator RM 200
- RMDI 310 for rotary actuator RM 310
- RMDI 410 for rotary actuator RM 410

In accordance with the section drawing below, all other wear parts and individual parts are available as single items.

### Ordering numbers are as indicated in the following example

- Part No. 1 RM 110-01 (for rotary actuator RM 110)

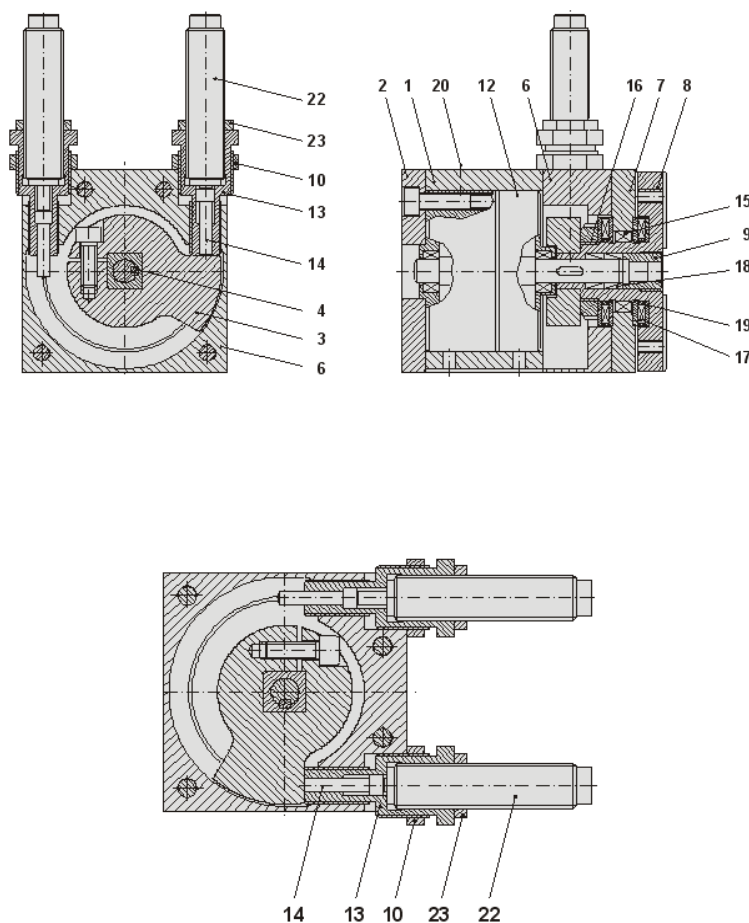

**Figure 3: section drawing RM**

## 12 EC declaration of incorporation

In terms of the EC Machinery Directive 2006/42/EC, annex II B

Manufacturer/  
distributor SCHUNK GmbH & Co. KG.  
Spann- und Greiftechnik  
Bahnhofstr. 106 – 134  
74348 Lauffen/Neckar, Germany

We hereby declare that the following product:

**Product designation:** Rotary modules pneumatic, rotor  
**Type designation:** RM 50...RM 410  
**ID number:** 0313003...0313999

meets the applicable basic requirements of the Directive **Machinery (2006/42/EC)**.

The incomplete machine may not be put into operation until conformity of the machine into which the incomplete machine is to be installed with the provisions of the Machinery Directive (2006/42/EC) is confirmed.

Applied harmonized standards, especially:

EN ISO 12100-1	Safety of machines - Basic concepts, general principles for design -- Part 1: Basic terminology, methodology
EN ISO 12100-2	Safety of machines - Basic concepts, general principles for design -- Part 2: Technical principles

The manufacturer agrees to forward on demand the special technical documents for the incomplete machine to state offices.

The special technical documents according to Annex VII, Part B, belonging to the incomplete machine have been created.

Person responsible for documentation: Mr. Michael Eckert, Tel.: +49(0)7133/103-2204

Location, date/signature:

Lauffen, Germany,  
January 2010

p.p.



Title of the signatory

Director for Development

## 13 Contact



### GERMANY – HEAD OFFICE

SCHUNK GmbH & Co. KG  
Spann- und Greiftechnik  
Bahnhofstrasse 106 – 134  
D-Lauffen/Neckar  
Tel. +49-7133-103-0  
Fax +49-7133-103-2399  
info@de.schunk.com  
www.schunk.com



### CANADA

SCHUNK Intec Corp.  
190 Britannia Road East,  
Units 23-24  
Mississauga, ON L4Z 1W6  
Tel. +1-905-712-2200  
Fax +1-905-712-2210  
info@ca.schunk.com  
www.ca.schunk.com



### DENMARK

SCHUNK Intec A/S  
Storhaven 7  
7100 Vejle  
Tel. +45-43601339  
Fax +45-43601492  
info@dk.schunk.com  
www.dk.schunk.com



### HUNGARY

SCHUNK Intec Kft.  
Széchenyi út. 70.  
3530 Miskolc  
Tel. +36-46-50900-7  
Fax +36-46-50900-6  
info@hu.schunk.com  
www.hu.schunk.com



### AUSTRIA

SCHUNK Intec GmbH  
Holzbauernstr. 20  
4050 Traun  
Tel. +43-7229-65770-0  
Fax +43-7229-65770-14  
info@at.schunk.com  
www.at.schunk.com



### CHINA

SCHUNK GmbH & Co.KG  
Shanghai  
Representative Office  
777 Zhao Jia Bang Road  
Pine City Hotel, Room 923  
Xuhui District  
Shanghai 200032  
Tel. +86-21-64433177  
Fax +86-21-64431922  
info@cn.schunk.com  
www.cn.schunk.com



### FRANCE

SCHUNK Intec SARL  
Parc d'Activités des Trois  
Noyers 15, Avenue James de  
Rothschild  
Ferrières-en-Brie  
77614 Marne-la-Vallée  
Cedex 3  
Tel. +33-1-64 66 38 24  
Fax +33-1-64 66 38 23  
info@fr.schunk.com  
www.fr.schunk.com



### INDIA

SCHUNK India Branch Office  
# 80 B, Yeswanthpur  
Industrial Suburbs,  
Bangalore 560 022  
Tel. +91-80-41277361  
Fax +91-80-41277363  
info@in.schunk.com  
www.in.schunk.com



### BELGIUM, LUXEMBOURG

SCHUNK Intec N.V./S.A.  
Bedrijvencentrum Regio Aalst  
Industrielaan 4, Zuid III  
9320 Aalst-Erembodegem  
Tel. +32-53-853504  
Fax +32-53-836022  
info@be.schunk.com  
www.be.schunk.com



### CZECH REPUBLIC

SCHUNK Intec s.r.o.  
Ernsta Macha 1  
643 00 Brno  
Tel. +420-545 229 095  
Fax +420-545 220 508  
info@cz.schunk.com  
www.cz.schunk.com




### GREAT BRITAIN, IRELAND

SCHUNK Intec Ltd.  
Cromwell Business Centre  
10 Howard Way,  
Interchange Park  
Newport Pagnell MK16 9QS  
Tel. +44-1908-611127  
Fax +44-1908-615525  
info@gb.schunk.com  
www.gb.schunk.com



### ITALY

SCHUNK Intec S.r.l.  
Via Barozzo  
22075 Lurate Caccivio (CO)  
Tel. +39-031-4951311  
Fax +39-031-4951301  
info@it.schunk.com  
www.it.schunk.com



**JAPAN**

SCHUNK Intec K.K.  
45-28 3-Chome Sanno  
Ohta-Ku Tokyo 143-0023  
Tel. +81-33-7743731  
Fax +81-33-7766500  
s-takano@tbk-hand.co.jp  
www.tbk-hand.co.jp



**POLAND**

SCHUNK Intec Sp.z o.o.  
Stara Iwiczna,  
ul. Słoneczna 116 A  
05-500 Piaseczno  
Tel. +48-22-7262500  
Fax +48-22-7262525  
info@pl.schunk.com  
www.pl.schunk.com



**SOUTH KOREA**

SCHUNK Intec Korea Ltd.  
# 907 Joongang  
Induspia 2 Bldg.,  
144-5 Sangdaewon-dong  
Jungwon-gu, Seongnam-si  
Kyunggi-do, 462-722  
Tel. +82-31-7376141  
Fax +82-31-7376142  
info@kr.schunk.com  
www.kr.schunk.com



**SWITZERLAND,  
LIECHTENSTEIN**

SCHUNK Intec AG  
Soodring 19  
8134 Adliswil 2  
Tel. +41-44-7102171  
Fax +41-44-7102279  
info@ch.schunk.com  
www.ch.schunk.com



**MEXICO, VENEZUELA**

SCHUNK Intec S.A. de C.V.  
Av. Luis Vega y Monroy # 332  
Fracc. Plazas de Sol  
Santiago de Querétaro,  
Qro. 76099  
Tel. +52-442-223-6525  
Fax +52-442-223-7665  
info@mx.schunk.com  
www.mx.schunk.com



**PORTUGAL**

Sales Representative  
Victor Marques  
Tel. +34-937-556 020  
Fax +34-937-908 692  
Mobil +351-963-786 445  
info@pt.schunk.com  
www.pt.schunk.com



**SPAIN**

SCHUNK Intec S.L.  
Foneria, 27  
08304 Mataró (Barcelona)  
Tel. +34-937 556 020  
Fax +34-937 908 692  
info@es.schunk.com  
www.es.schunk.com



**TURKEY**

SCHUNK Intec  
Bağlama Sistemleri ve  
Otomasyon San. ve Tic. Ltd. Şti.  
Küçükyalı İş Merkezi  
Girne Mahallesi  
Irmak Sodak, A Blok, No: 9  
34852 Maltepe, İstanbul  
Tel. +90-216-366-2111  
Fax +90-216-366-2277  
info@tr.schunk.com  
www.tr.schunk.com



**NETHERLANDS**

SCHUNK Intec B.V.  
Speldenmakerstraat 3d  
5232 BH 's-Hertogenbosch  
Tel. +31-73-6441779  
Fax +31-73-6448025  
info@nl.schunk.com  
www.nl.schunk.com



**SLOVAKIA**

SCHUNK Intec s.r.o.  
Mostná 62  
919 01 Nitra  
Tel. +421-37-3260610  
Fax +421-37-6421906  
info@sk.schunk.com  
www.sk.schunk.com



**SWEDEN**

SCHUNK Intec AB  
Morabergsvägen 28  
152 42 Södertälje  
Tel. +46-8 554 421 00  
Fax +46-8 554 421 01  
info@se.schunk.com  
www.se.schunk.com



**USA**

SCHUNK Intec Inc.  
211 Kitty Hawk Drive  
Morrisville, NC 27560  
Tel. +1-919-572-2705  
Fax +1-919-572-2818  
info@us.schunk.com  
www.us.schunk.com