

PROMISE[®]
TECHNOLOGY, INC.

SmartStor[™]

NS6700/NS4700

 **USER MANUAL**

Contents

Chapter 1: Introduction	5
1.1 About This Manual	5
1.2 Protocol Support	6
1.3 Hardware Specifications	6
1.4 Client Utility OS Support	7
1.5 Browser Support	7
 Chapter 2: Quick Setting-up	 9
2.1 Unpacking the SmartStor NAS	9
2.2 Installing Disk Drives	11
2.3 Connecting the Ethernet cable	14
2.4 Connecting the Power	14
2.5 Shutting Down the SmartStor NAS	14
2.6 Using LCD	16
2.7 Setup Wizard	17
2.8 GNU General Public License	19
2.9 SmartStor Product Support	19
2.10 Replaceable batteries	19
 Chapter 3: WebPAM PROe	 20
3.1 Quick Start	20
3.2 Dashboard Tab	22
3.2.1 System Status	22
3.2.2 Event Information	23
3.2.3 Storage Overview	23
3.3 Device Tab	24
3.3.1 Front View	24
3.3.2 Back View	25
3.3.3 Component List	26
3.3.4 Physical Drive	29
3.3.5 iSCSI	30
3.3.6 Network	32
3.3.7 UPS	35

3.3.8	External Drive.....	35
3.4	Storage Tab.....	37
3.4.1	Create Disk Array.....	38
3.4.2	Disk Array Management.....	41
3.4.3	Logical Drive Management.....	43
3.4.4	Spare Drive Management.....	46
3.5	AdminTool Tab.....	47
3.5.1	System settings and clearing statistics.....	47
3.5.2	Service.....	48
3.5.3	Runtime and NVRAM event logs.....	49
3.5.4	Background activity, settings and schedules.....	51
3.5.5	Firmware updates.....	58
3.5.6	Performance monitor.....	59
3.5.7	Restore factory default settings.....	60
3.5.8	Import/Export a system configuration file.....	61
3.5.9	LUNMap Management.....	62
3.5.10	Power Option.....	63
3.5.11	Message Alert.....	63
3.5.12	Network Security.....	64
3.6	NAS Tab.....	66
3.6.1	Setup Wizard.....	66
3.6.2	User account management.....	68
3.6.3	Protocol Control and Setting.....	70
3.6.4	File System Management.....	70
3.6.5	File Sharing Setting.....	71
3.6.6	Backup.....	76
3.6.7	Plug-in Management.....	83

Chapter 4: SmartNAVI..... 85

4.1	Working with SmartNAVI.....	85
4.1.1	Opening the Main Window.....	85
4.1.2	Choosing a SmartNAVI Language.....	87
4.1.3	Starting the Advanced Storage Manager (PASM).....	87
4.1.4	Viewing SmartNAVI Information.....	89
4.1.5	Closing SmartNAVI.....	91
4.2	Managing Backups.....	93
4.2.1	Doing a Backup Now.....	93
4.2.2	Scheduling a Backup.....	98
4.2.3	Viewing Backup Schedules.....	103
4.2.4	Changing a Scheduled Backup.....	103

4.2.5	Deleting a Scheduled Backup	106
4.2.6	Restoring Backed-up Files	107
4.2.7	Viewing the Backup Event Log	110
4.2.8	Saving the Event Log	111
4.2.9	Clearing the Event Log	113
4.2.10	Setting the Port	114
4.3	Managing Share Folders	114
4.3.1	Opening a Share Folder.....	114
4.3.2	Viewing a List of Share Folders	116
4.3.3	Mounting a Share Folder /Creating a Network Drive ...	118
4.3.4	Un-mounting a Share Folder /Disconnecting a Network Drive	119
4.3.5	Setting up a Share Folder for Time Machine	120
4.4	Making Management Settings	122
4.4.1	Configuring a NAS System	122
4.4.2	Locating the SmartStor	127
4.4.3	Wake-on-LAN.....	128
4.4.4	Choosing a Default NAS System	128
4.4.5	Viewing the System Event Log	129
4.4.6	Viewing a List of Plug-ins	132
4.4.7	Viewing Plug-in Version Numbers.....	133
4.4.8	Enabling and Disabling Plug-ins	134
4.4.9	Removing Plug-ins	137
4.4.10	Rebooting the SmartStor.....	139
4.4.11	Shutting Down the SmartStor.....	141
Chapter 5:	Troubleshooting	144
5.1	LCD	144
5.2	WebPASM PROe system event log.....	145
5.3	How to use Promise USB Retrieval to export system information	156

Chapter 1: Introduction

1.1 *About This Manual*

This Product Manual describes how to setup, use, and maintain the SmartStor NSx700. It also describes how to use:

- SmartNAVI software that you install and run on your Windows or Mac
- Promise Advanced Manager **WEBPAM PROe** software that runs on the SmartStor by browser.

This manual includes a full table of contents, chapter task lists, and numerous cross-references to help you find the specific information you are looking for.

Also included are four levels of notices:

Note

A Note provides helpful information such as hints or alternative ways of doing a task.

Important

An Important calls attention to an essential step or point required to complete a task. Important items include things often missed.

Caution

A Caution informs you of possible equipment damage or loss of data and how to avoid them.

Warning

A Warning notifies you of probable equipment damage or loss of data, or the possibility of physical injury, and how to avoid them.

1.2 Protocol Support

SmartStor NSx700 series supports:

- SMB/CIFS for Microsoft Windows
- NFS for Linux/Unix
- AFP for Mac
- FTP
- WebDAV for the file transform over the Internet
- iSCSI Target model and Initiator model
- DLNA and UPnP for media stream

1.3 Hardware Specifications

Model Name	SmartStor NS4700/6700	
CPU	1.8 GHz	
FLASH	256 MB	
SDRAM	1GB DDRII (up to 2 GB)	
Smart Fan	Yes	
Gigabit Ethernet	2	
USB 2.0 Host port	5 (Front x 1/ Back x 4)	
LCD Display	Yes	
Internal HDD Support	3.5" 3 Gb/s SATAII	
Hot Plug	Yes	
# of Bays	4/6	
Power Supply	250W (80 PLUS)	
Dimension	NS6700	243(L)*188(W) *251(H)mm
	NS4700	243(L)*188(W) *191(H)mm

Please visit Promise website for more detail.

1.4 *Client Utility OS Support*

The following operating systems support SmartNAVI:

- Windows XP 32/64 Bit
- Windows Vista 32/64 Bit
- Windows Server 2003 32/64 Bit
- Windows Server 2008 32/64 Bit
- Windows Server 2008 R2
- Windows 7 32/64 Bit
- Mac OS 10.5 and above
- Mac OS 10.6 XServer

1.5 *Browser Support*

Choose one of the following browsers to use with WEBPAM PROe:

- Internet Explorer 7 and above
- Firefox 3 and above
- Safari 5 and above
- Google Chrome 8 and above



Warning

The electronic components within the SmartStor are sensitive to damage from Electro-Static Discharge (ESD). Observe appropriate precautions at all times when handling the SmartStor or its subassemblies.



Important

To configure the SmartStor, you are advised to install SmartNAVI. Please refer to the User's Manual.



Warning

The fan contains hazardous moving parts. Keep fingers and other body parts away.



Caution

**RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO
THE INSTRUCTIONS.**

VCCI

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Chapter 2: Quick Setting-up

2.1 Unpacking the SmartStor NAS

The SmartStor NSx700 series box contains the following items:

- SmartStor NAS Unit
- *Quick Start Guide*
- Screws for disk drives
- Ethernet cable
- Power cord
- CD for client utility and reference document

Figure 1. SmartStor NSx700 Front View


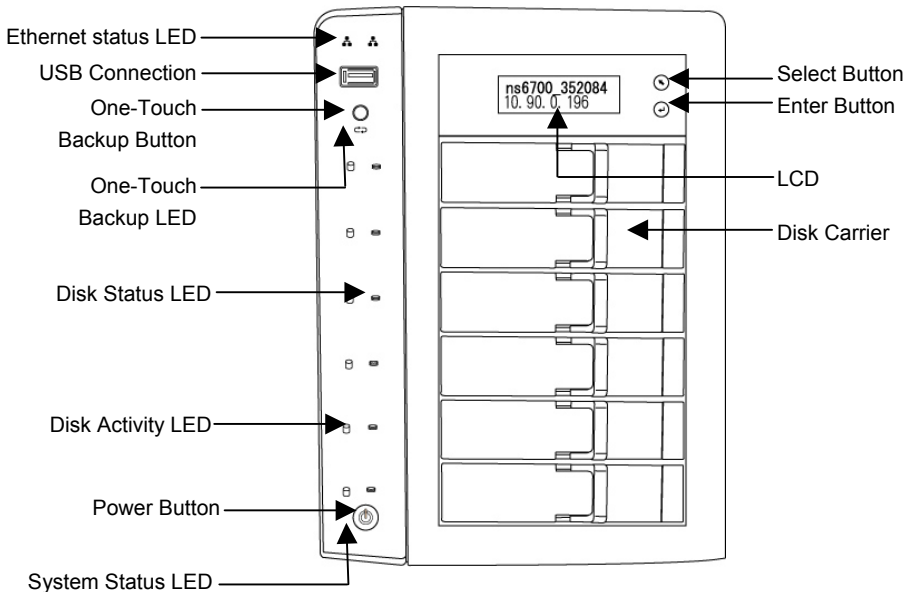


Figure 2. SmartStor NSx700 Rear View

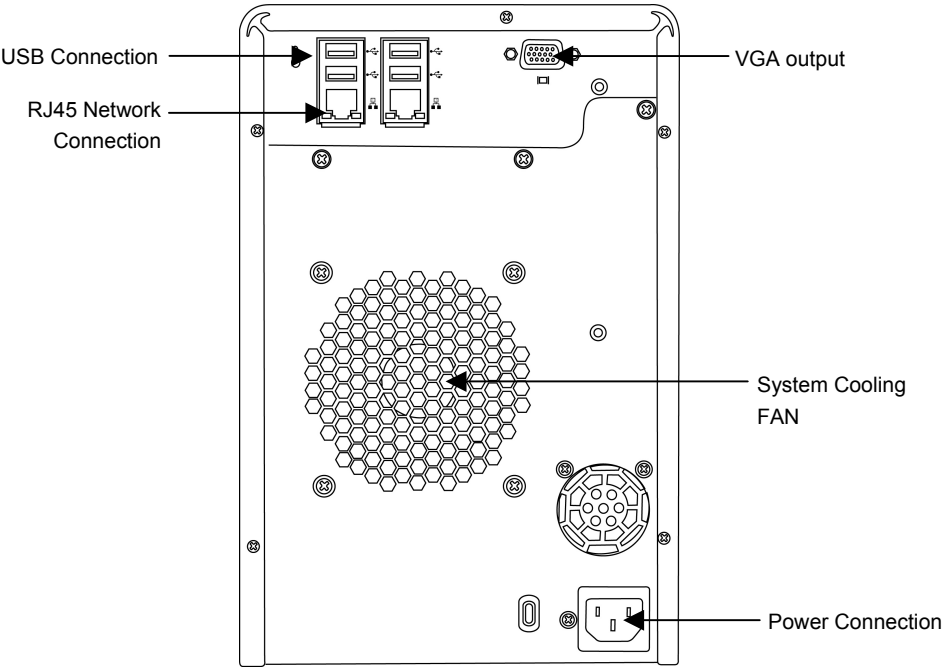


2.2 Installing Disk Drives

Note: You are highly recommended to select Enterprise Level HDD to achieve the best data protection.



You can populate the SmartStor NSx700 series NAS with SATA 1.5 Gb/s or 3.0 Gb/s disk drives. For optimal performance, install disk drives of the same model and capacity. Your disk drives will become a RAID Volume on the SmartStor.

To install disk drives:


1. Remove the disk tray from the device by the following steps:
 - a. Slide the latch leftwards.
 - b. Press the button next to the latch.
 - c. Pull the latch out to open the door of disk tray, then you can pull the disk tray out from the enclosure.

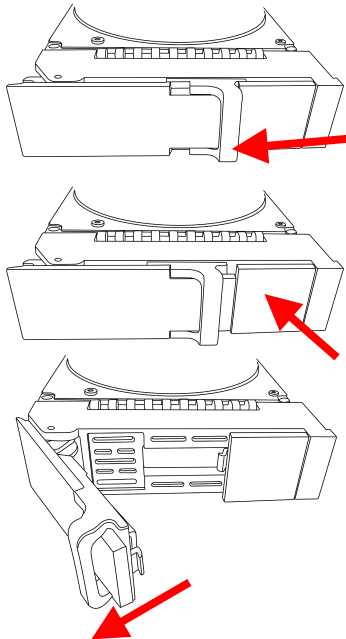

2. Carefully lay the disk drive into the drive tray, so that the screw holes on the sides of the carrier align with the screw holes in the drive.

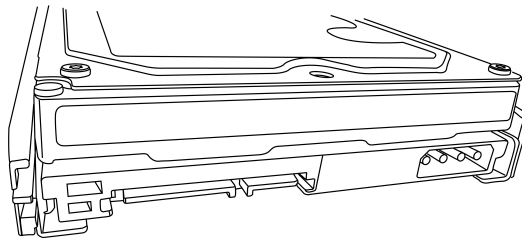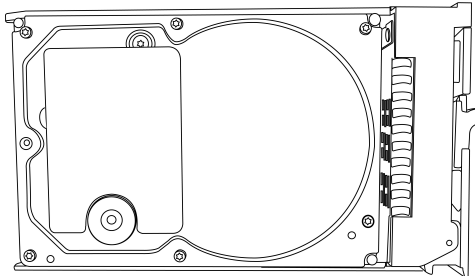

3. Insert the screws through the holes in the drive carrier and into the sides of the disk drive.
 - Install only the counter-sink screws supplied with the SmartStor.
 - Install four screws per drive.
 - Snug each screw. Be careful not to over-tighten.

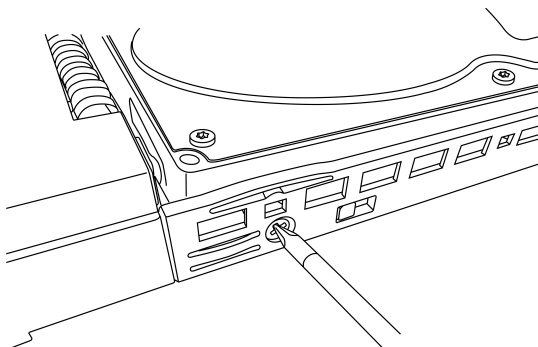

-
4. Reinstall the drive tray into the SmartStor enclosure.

Tip: Repeat steps 1 through 4 until all of your disk drives are installed.



Caution

Support disk drive hot-swapping. To avoid hand contact with an electrical hazard, remove only one drive carrier a time.

2.3 Connecting the Ethernet cable

To connect the SmartStor NAS to your network:

1. Attach one end of the network cable to the RJ45 network connection.
Please refer to Figure 2.
2. Attach the other end of the network cable to your Ethernet hub or switch.

2.4 Connecting the Power

To power the SmartStor NAS:

1. Attach the power cord on the back of the SmartStor enclosure and plug the other end into the power source. See Figure 2.
2. On the front of the SmartStor NAS, press the power button. See Figure 1. It takes about a minute to boot the SmartStor. When fully booted:
 - The System Status LED turns blue. See Figure 1.
 - The buzzer beeps one time.

2.5 Shutting Down the SmartStor NAS

To shut down the SmartStor NAS, press and hold the power button until the power LED indicator turns red.

Figure 3. Press and hold the Power button about 5 seconds


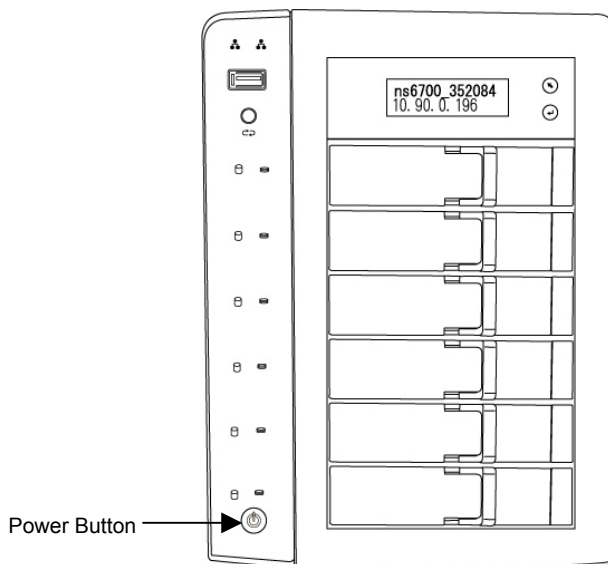


Figure 4. System status LED turns red, and then goes dark

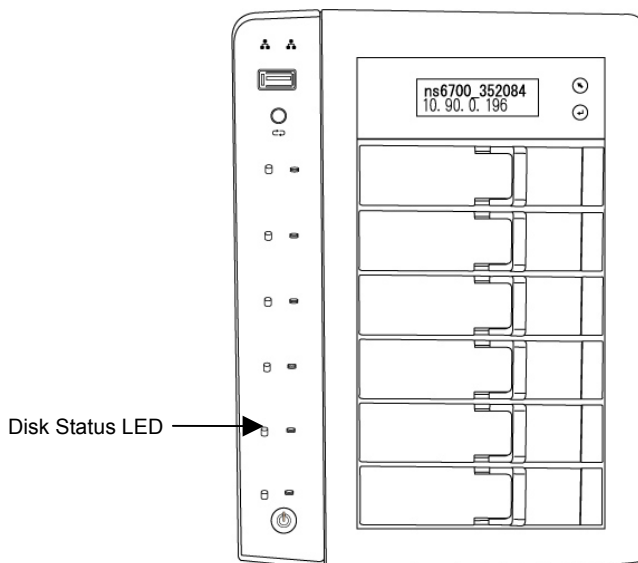

To restart the SmartStor, press the power button again.

2.6 Using LCD

The SmartStor provides you with a LCD on the front panel that allows you to easily monitor the system status, and configure the network.

Figure 5. LCD panel




- To monitor the system status, press the Select button repeatedly. The system status will be displayed on the LCD panel sequentially, including the system temperature, voltage, ventilator status, firmware & BIOS version, etc.
- To configure the networking settings:
 1. Press the Enter button to display the Network Setup option on the LCD.
 2. Press the Select Button to select the options and then press the Enter button to change the setting values.
 3. When done, select OK and press the Enter button to apply the networking configuration.

2.7 Setup Wizard

The system's Wizard lets you configure your disk array(s) easily and quickly. The Wizard will guide you through the required settings step by step. You can choose to configure automatically by using **One-Click Setup**, or configure manually by using **Advance Setup**.

Using Automatic Configuration Wizard

1. Click **NAS** tab > **Wizard**.
2. Click the One-Click Setup button. The Automatic Configuration box displays:

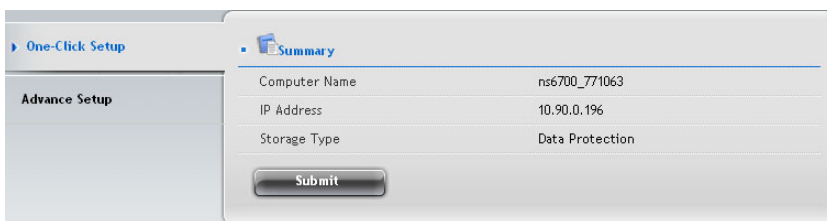

The screenshot shows a web-based configuration interface. On the left, there is a sidebar with two tabs: 'One-Click Setup' (selected) and 'Advance Setup'. The main area displays a 'Summary' window with a blue header and a list of configuration details. Below the details is a 'Submit' button.

Summary	
Computer Name	ns6700_771063
IP Address	10.90.0.196
Storage Type	Data Protection


Submit

3. The Summary window displays the general information of the system, including:
 - Computer Name
 - IP Address
 - Storage Type
4. To accept the proposed configuration, click the **Submit** button.

If you disagree with the proposed configuration, click the **Advance Setup** button to directly specify all parameters for a new disk array, logical drives, and spare drives.

Using Advanced Configuration Wizard

1. Click **NAS** tab > **Wizard**.
2. Click the **Advance Setup** button. The Advanced Configuration box displays:

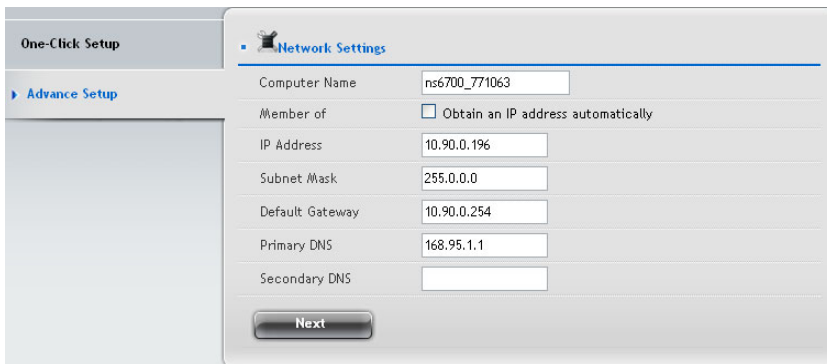

The screenshot shows the 'Network Settings' window. On the left, there is a sidebar with 'One-Click Setup' and 'Advance Setup' (selected). The main area is titled 'Network Settings' and contains the following fields:

Computer Name	ns6700_771063
Member of	<input type="checkbox"/> Obtain an IP address automatically
IP Address	10.90.0.196
Subnet Mask	255.0.0.0
Default Gateway	10.90.0.254
Primary DNS	168.95.1.1
Secondary DNS	

At the bottom of the window is a 'Next' button.

3. Complete the required settings in the Network Settings window, including:
 - Computer Name
 - Obtain an IP address automatically
 - IP Address
 - Subnet Mask
 - Default Gateway
 - Primary DNS
 - Secondary DNS

When done, click the **Next** button.

4. Select Storage Type: Data Protection or Maximum Capacity, and then click the **Next** button.
5. The Summary window displays the general information of the system, including:
 - Computer Name
 - IP Address
 - Storage Type

To accept the proposed configuration, click the **Submit** button.

2.8 GNU General Public License

This product includes copyrighted third-party software licensed under the terms of the GNU General Public License. Please see the GNU General Public License (“GPL”) for the exact terms and conditions of this license at www.gnu.org. The GPL source code incorporated into the product is available for free download at our web site http://www.promise.com/support/download/download_eng.asp. Subject to GPL, you may re-use, re-distribute and modify the GPL source code. Note that with respect solely to the GPL Software, no warranty is provided, we do not offer direct support for the distribution.

2.9 SmartStor Product Support

If you experience problems with setup and or use of your new SmartStor NAS, PLEASE contact technical support BEFORE attempting to return SmartStor NAS. Our experienced support staff will assist you with any issue or question you may have regarding SmartStor NAS.

Promise Online Support: <https://support.promise.com>

2.10 Replaceable batteries

If an equipment is provided with a replaceable battery, and if replacement by an incorrect type could result in an explosion (for example, with some lithium batteries), the following applies:

- if the battery is placed in an OPERATOR ACCESS AREA, there shall be a marking close to the battery or a statement in the servicing instructions.
- if the battery is placed elsewhere in the equipment, there shall be a marking close to the battery or a statement in the servicing instructions.

This marking or statement shall include the following or similar text:

Chapter 3: WebPAM PROe

3.1 Quick Start

The WebPAM PROe is factory-installed on the SmartStor system. WebPAM PROe runs in the browser on your PC/Mac. You can access WebPAM PROe by browser.

Browser Support

Choose one of the following browsers to use with WebPAM PROe:

- Internet Explorer 7 or above
- Firefox 3 and above
- Safari 5 and above
- Google Chrome

Connecting to WebPAM PROe


To log into WebPAM PROe in your browser:

1. Start your browser.
2. In the URL address bar, type in the IP address of the SmartStor. (You can get the SmartStor NAS Ip information from LCD)

The WebPAM PROe login screen displays.



-
3. The default user name is “administrator” and default password is “password”
(The user name and password are case sensitive).
 4. Choose the language you prefer by clicking the **Language** menu on the login screen.



5. To log out of WebPAM PROe, you can do any of the following:
 - Close your browser window.
 - Click Logout in the WebPAM PROe Header.



Clicking **Logout** brings you back to the Login Screen. After logging out, you must enter your user name and password in order to log in again.

Navigating in WebPAM PROe

The five tabs displayed on the screen are the primary navigation tool in WebPAM PROe. Categories of functions listed with icons for different topics.




Icons for specific functions are listed above the tabs. Click the tab to show the functions.

Click the function icons to display their information on the screen. Each function has one or more tabs in its screen.

3.2 Dashboard Tab

The **Dashboard** tab is the default screen of WebPAM PROe.

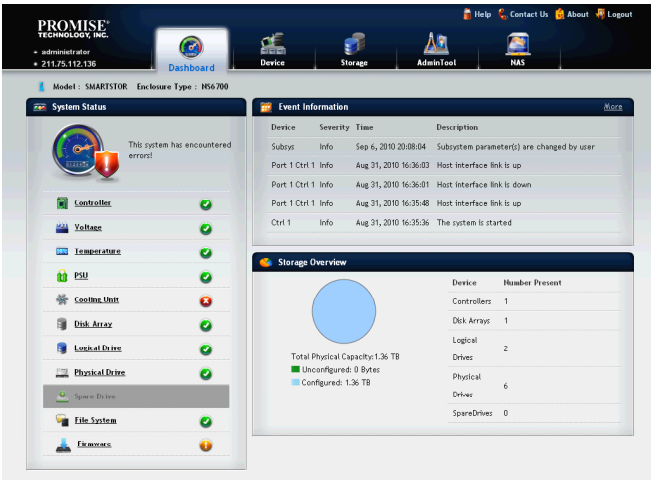

The System Status icon indicates the top-level status of NAS by displaying:



system is OK



system has errors

3.2.1 System Status

The System Status field displays the high-level of the NAS components by the following status icons:



the component is OK



the component needs attention



the component has failed

-
- **Controller.** RAID controllers. Click to display the **Device** tab > **Component List** screen.
 - **Voltage.** Click to display the **Device** tab > **Component List** screen.
 - **Temperature.** RAID and JBOD enclosures only. Click to display the **Device** tab > **Component List** screen.
 - **PSU.** Power supply unit. RAID and JBOD enclosures only. Click to display the **Device** tab > **Component List** screen.
 - **Cooling Unit.** RAID and JBOD enclosures only. Click to display the **Device** tab > **Component List** screen.
 - **Disk Array.** Click to display the **Storage** tab > **Disk Array** screen.
 - **Logical Drive.** Click to display the **Storage** tab > **Logical Drive** screen.
 - **Physical Drive.** Click to display the **Device** tab > **Physical Drive List** screen.
 - **Spare Drive.** Click to display the **Storage** tab > **Spare Drive** screen.
 - **File System.** Click to display the **NAS** tab > **File System** screen.
 - **Firmware.** Click to display the **AdminTool** tab > **Firmware Update** screen.

3.2.2 Event Information

The Event Information field displays six of the most recent Runtime events. Click **More** to display the **AdminTool** tab > **Runtime Events** screen, allowing you to view all Runtime and NVRAM events.

3.2.3 Storage Overview


The Storage Overview field displays the general information of the current storage status, including:

- **Total Physical Capacity.** Display the total storage space of the system.
 - **Unconfigured** – not assigned to a logical drive.
 - **Configured** – assigned to a logical drive.
- **Device Number.** Display the current number of devices in the system.

3.3 Device Tab


The **Device** tab displays the information of all device status of the NAS, including physical drives, disk arrays, logical drives, power supply units, blowers, and backplanes.

In the **Device** tab, you can make settings for the enclosure and physical drives.

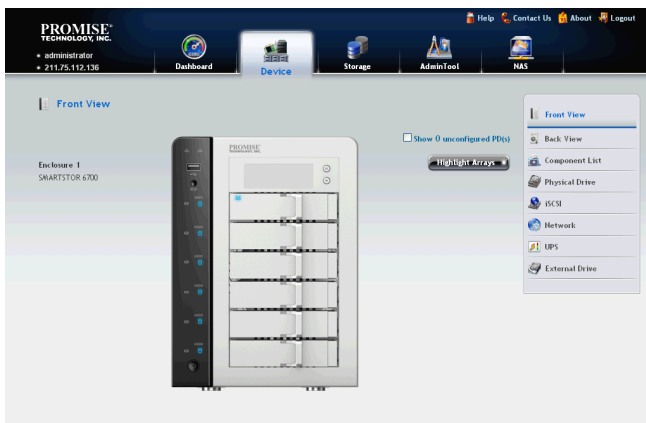

3.3.1 Front View

Click **Device** tab > **Front View** to view all of the enclosures in the NAS. Move your mouse over the drive carrier to display the information of the installed physical drive (as show below), including the device ID, physical capacity, operational status, etc. Click on the drive to bring up the Physical Drive Information, displaying the detailed information of the device.

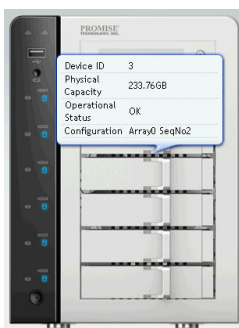

Identifying Unconfigured Physical Drives

Click the **Show unconfigured PD(s)** box to identify the unconfigured physical drives in the NAS.

Identifying Physical Drives Assigned to a Disk Array

Click the **Highlight Arrays** button to identify the physical drives assigned to a disk array.

Click on of the following items in the dropdown menu:

- **All DA** – all disk arrays
- **DA0 (DA1, DA2, etc.)** – a specific disk array
- **Close** – click to close the menu and return to normal view.

The carriers containing drives that do not belong to the chosen disk array will be highlighted.

3.3.2 Back View

Click **Device** tab > **Back View** to display the back view of all enclosures in the NAS. Move your mouse over the power supply and I/O units to view the PSU status and the operational status of the devices through the I/O units. Click **Show Internal Components** to display the virtual view of the internal components (as shown below).


Move your mouse over the component and the related information will be displayed:

- **CPU** – CPU usage
- **Controller thermometer** – temperature of the controller board
- **Temperature of the system**
- **RAM** – memory usage
- **Enclosure information**



3.3.3 Component List

Click **Device** tab > **Component List** to display the device ID, operational status, enclosure type, and status description of all enclosures.

ID	Type			
Enclosure 1 N56700				
Enclosure	ID	Status	Type	Status Description
	1		N56700	1 blower(s) critical
Controller	ID	Status	Alias	Operational Status Readiness Status
	1		OK	Active
Buzzer	ID	Enable	Status	
	1	Enabled	Silent	
LED	ID	Status		
	1	Always ON		

- **Enclosure**
 - **View:** Move your mouse over the enclosure you want and click the **View** button to display the enclosure information list.
 - **Setting:** Set the system critical warning/critical temperature.
 - **Locate:** The system will have the Bee sound.
 - **FRU VPD:**
- **Controller**
 - **View:** Move your mouse over the controller you want and click the **View** button to display the controller information list.
 - **Setting:**
 1. Move your mouse over the controller you want and click the **Settings** button.
 2. Make setting changes as required:
 - Enter, change or delete the alias in the Alias field
 - Enable SMART Log – Check the box to enable or uncheck to disable
 - SMART Polling Interval – Enter a value into the field, 1 to 1440 minutes
 - HDD Power Levels
 - Level 0: Disabled
 - Level 1: Park R/W heads
 - Level 2: Slow down (need to be supported by hard drive)

-
- Level 3: Spin down
 - Spin Down Type
 - Power Saving Idle Time
 - Power Saving Standby Time
 - Power Saving Stopped Time
 - Enable Coercion:**
 - This feature is designed for fault-tolerant logical drives (RAID 1, 5, 6, 10, 50, and 60). It is generally recommended to use physical drives of the same size in your disk arrays. When this is not possible, physical drives of different sizes will work but the system must adjust for the size differences by reducing or coercing the capacity of the larger drives to match the smaller ones. You can choose to enable Capacity Coercion and any one of four methods.
 - Capacity Coercion also affects a replacement drive used in a disk array. Normally, when a physical drive fails, the replacement drive must be the same capacity or larger. However, the Capacity Coercion feature permits the installation of a replacement drive that is slightly smaller (within 1 gigabyte) than the remaining working drive. For example, the remaining working drives can be 80.5GB and the replacement drive can be 80.3, since all are rounded down to 80GB. This permits the smaller drive to be used.
 - Without Capacity Coercion, the controller will not permit the use of a replacement physical drive that is slightly smaller than the remaining working drives.
 - Coercion Method** – Choose a method from the dropdown menu:
 - **GB Truncate** – (Default) Reduce the useful capacity to the nearest 1,000,000,000 byte boundary.
 - **10GB Truncate** – Reduces the useful capacity to the nearest 10,000,000,000 byte boundary.
 - **Group Rounding** – Uses an algorithm to determine how much to truncate. Results in the maximum amount

of usable drive capacity.

- **Table Rounding** – Applies a predefined table to determine how much to truncate.

- Write Back Cache Flush Interval – Enter a value into the field, 1 to 12 seconds
- Phydrv Driver Temperature Threshold
- Enclosure Polling Interval
- Adaptive Writeback Cache:
 - UPS power good: write back
 - UPS power fail: write through
 - No UPS: write through
- Host Cache Flushing
- Forced Read Ahead (cache) – Check the box to enable or uncheck to disable

3. Click the **Save** button.

- **Buzzer**

- Click the **Sound** button to unmute the buzzer; or click the **Mute** button to mute the buzzer.
- Click the **Settings** button to enable or disable the buzzer. To enable the buzzer for the system, select the **Enable Buzzer** option and click the **Save** button. To mute the buzzer for all events, you must clear the **Enable Buzzer** option.

- **LED**. Move your mouse over the LED and click the **Settings** button, which allows you to set the LED by selecting:

- **Always ON**
- **Always OFF**
- **Daily**

When done, click the **Save** button.


3.3.4 Physical Drive

Click **Device** tab > **Physical Drive** to display the list of physical drives in the NAS. Physical drive information includes:


- ID – ID number of the physical drive
- Status – Green, yellow, and red icons
- Model – Make and model of the drive
- Type – SATA HDD
- Location – Enclosure number and slot number
- Configuration – Array number and sequence number, spare number, unconfigured, or stale configuration
- Capacity – The capacity of drive

Viewing Physical Drive Information

1. Click **Device** tab > **Physical Drive**.
2. Move you mouse over the physical drive you want and click the **View** button.

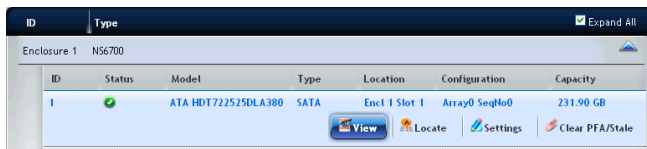

The screenshot shows a web interface for viewing physical drive information. At the top, there's a header with 'ID' and 'Type' tabs, and an 'Expand All' checkbox. Below this, a table lists drive details for 'Enclosure 1 N56700'. The table has columns for ID, Status, Model, Type, Location, Configuration, and Capacity. One drive is listed with ID '1', a green status icon, model 'ATA HDT722525DLA380', type 'SATA', location 'Encl 1 Slot 1', configuration 'Array0 SeqNo0', and capacity '231.90 GB'. Below the table, there are buttons for 'View', 'Locate', 'Settings', and 'Clear PFA/Stale'.

ID	Status	Model	Type	Location	Configuration	Capacity
1		ATA HDT722525DLA380	SATA	Encl 1 Slot 1	Array0 SeqNo0	231.90 GB

Display all Physical drive information.

To locate the physical drive:

1. Click **Device** tab > **Physical Drive**.
2. Move your mouse over the physical drive you want and click the Locate button.
3. The drive carrier LEDs blink for one minute.

To change the global physical drive settings:



1. Click **Device** tab > **Physical Drive**.
2. Click the **Global Physical Drive Settings** button.
3. In the Global Physical Drive Settings window, check the boxes to enable or uncheck to disable.
 - Enable Write Cache
 - Enable Read Look Ahead Cache

■ Enable Command Queuing

To change the individual physical drive settings:

1. Click **Device** tab > **Physical Drive**.
2. Move your mouse over the physical drive you want and click the **Settings** button.
3. Make setting changes as required: enter, change, or delete the alias in the Alias field.
4. Click the **Save** button.


Physical Drive Problems:

Physical drives are the foundation of data storage. A physical drive problem can affect your entire NAS. When a yellow  icon or a red  icon appears beside a physical drive, check the drive's operational status:

1. Click **Device** tab > **Physical Drive**.
2. Move your mouse over the physical drive you want and click the **View** button.
3. Check the status of the Operational Status item.

3.3.5 iSCSI

Click **Device** tab > **iSCSI** to display the iSCSI (Internet Small Computer System Interface) information in the system. iSCSI information includes the following tabs:

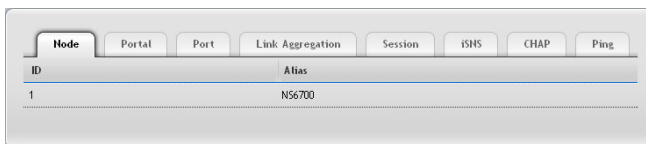


- Node
- Portal
- Port
- Session
- iSNS
- CHAP
- Ping

Setting up CHAP

1. Click **Device** tab > **iSCSI** > **CHAP** tab.
2. Move your mouse over the item you want and click the **Setting** button.

The screenshot shows a network management interface with a top navigation bar containing tabs: Node, Portal, Port, Link Aggregation, Session, iSHS, CHAP, and Ping. The CHAP tab is selected. Below the navigation bar is a table with columns ID, Type, and Name. A 'Chap Settings' dialog box is open, featuring a close button (X) in the top right corner. The dialog contains the following fields and options:

- User Name: Text input field containing 'TestInitiator'.
- Current Secret: Text input field.
- Secret (The length of the secret is 12 to 16 characters): Text input field.
- Retype Secret: Text input field.
- Type: Radio button group with 'Peer' selected and 'Local' unselected.
- Buttons: 'Submit' and 'Cancel' at the bottom.

3. Complete the required settings in the **Chap Settings** window, and then click the **Submit** button.
 - User Name
 - Current Secret
 - password
 - Retype password
 - Type – Choose **Peer** or **Local** as the CHAP type.Click the  button to close the dialog window.


3.3.6 Network

Click **Device** tab > **Network** to display the networking information of the system. Networking information includes:

- ID
- DHCP
- IP Address
- Gateway IP Address
- Speed
- MTU
- Link

Changing Networking Configuration

1. Click **Device** tab > **Network**.
2. Move your mouse over the network you want and click the **TCP/IP** (or **IPV6**) button.
3. Complete the required settings in the dialog window, and then click the **Submit** button.
 - Network Speed – Select the networking speed from the menu.
 - IP Properties
 - IP Address
 - Subnet Mask
 - Gateway IP Address
 - DNS Server IP Address
 - Secondary DNS Server IP Address

Click the  button to close the dialog window.

Advanced Networking Configuration

1. Click **Device** tab > **Network**.
2. Click the **Setup** button.

The screenshot shows the 'Network' configuration window with the 'Setup' button highlighted. Below it, the 'Setup' dialog box is open, showing fields for 'Computer Name' (ns6700_771063), 'Enable Network Binding' (checked), and 'Network Binding' (Balance-alb (Adaptive Load Balancing)). There are 'Submit' and 'Cancel' buttons at the bottom of the dialog. Below the dialog, a table shows network configuration details:

ID	DHCP	IP Address	Gateway IP Address	Speed	MTU	Link
2	No	10.90.0.196	10.90.0.254	100 Mps	1500byte(s)	Yes

3. Complete the required settings in the **Setup** window, and then click the **Submit** button.
 - Computer Name
 - Enable Network Binding – Choose to enable or disable a biding.
 - Networking Binding – From the dropdown menu, choose a proper biding type.

Click the button to close the dialog window.


Setting up DHCP Server

1. Click **Device** tab > **Network**.
2. Click the **DHCP Server** button.

The screenshot shows the 'Network' configuration window with the 'DHCP Server' button highlighted. Below it, the 'DHCP Server Settings' dialog box is open, showing fields for 'Enable DHCP Server' (unchecked), 'IP Range' (10.90.0.() ~ ()), and 'Lease Time' (). There are 'Submit' and 'Cancel' buttons at the bottom of the dialog. Below the dialog, a table shows network configuration details:


ID	DHCP	IP Address	Gateway IP Address	Speed	MTU	Link
2	No	10.90.0.196	10.90.0.254	100 Mps	1500byte(s)	Yes

3. Complete the required settings in the **DHCP Server Settings** window, and then click the **Submit** button.
 - Enable DHCP Server – Choose to enable or disable the function.
 - IP range – Assign the IP range in the text boxes.
 - Lease Time

Click the  button to close the dialog window.

Setting up DDNS

1. Click **Device** tab > **Network**.
2. Click the **DDNS** button.

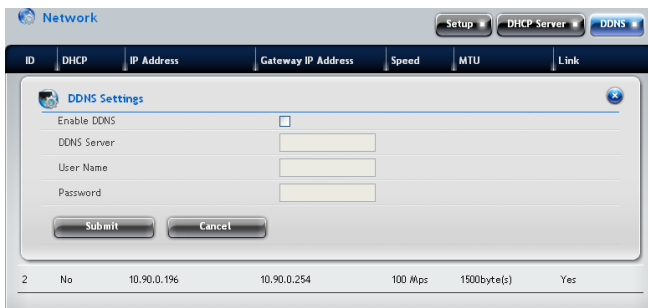


The screenshot shows the 'Network' configuration window with tabs for 'Setup', 'DHCP Server', and 'DDNS'. The 'DDNS' tab is active, displaying the 'DDNS Settings' dialog box. The dialog box has a title bar with a close button. It contains the following fields:

- Enable DDNS**: A checkbox that is currently unchecked.
- DDNS Server**: A text input field.
- User Name**: A text input field.
- Password**: A text input field.

At the bottom of the dialog box are 'Submit' and 'Cancel' buttons. Below the dialog box, a table shows the current network configuration:

ID	DHCP	IP Address	Gateway IP Address	Speed	MTU	Link
2	No	10.90.0.196	10.90.0.254	100 Mbps	1500byte(s)	Yes

3. Complete the required settings in the **DDNS Settings** window, and then click the **Submit** button.
 - Enable DDNS – Choose to enable or disable the function.
 - DDNS Server – Enter the address of the DDNS server.
 - User Name – Enter the user name to login the DDNS server.
 - Password – Enter the password to login the DDNS server.


Click the  button to close the dialog window.


3.3.7 UPS

Click **Device** tab > **UPS** to display the information of the connected UPS in the system.

Setting up UPS

1. Click **Device** tab > **UPS**.
2. Click the **Setup** button to bring up the Setup window.
3. Select the option you want and complete the required settings, and then click the **Submit** button.

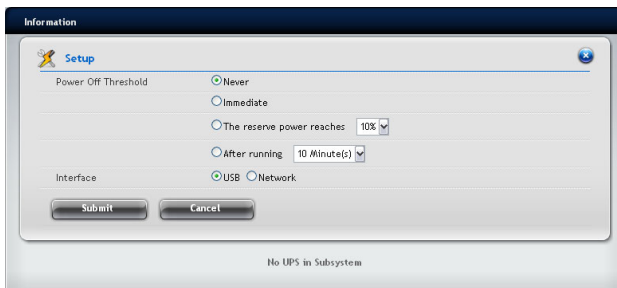

Click the  button to close the dialog window.

3.3.8 External Drive

Click **Device** tab > **External Drive** to display the information of the connected external drive in the system. External drive information includes:

- ID
- Status
- Model
- Type
- Location
- Capacity
- Cache

SmartStor NSx700 can support external file system as below:
EXT3, XFS, FAT32, NTFS, HFS+

Warning!


To remove the connected USB drive safely, you **MUST** click the **Remove** button before disconnect the USB drive.

Managing the External Drive

1. Click **Device** tab > **External Drive**.
2. Move your mouse over the external drive you want, and then you can do one of the following:


ID	Status	Model	Type	Location	Capacity	Cache
1	Connect	000000000204	USB	Port 3	1.86 GB	Write Through
<div>SettingsFormatRemove</div>						

- Click the **Settings** button and select the Write Policy (Write Through or Write Back), and then click the **Save** button to configure the external drive.
- Click the **Format** button and select the format type (FAT32, ntfs, or xfs), and then click the **Format** button to format the external drive.
- Click the **Remove** button and click the **Confirm** button to remove the external drive.

Click the  button to close the dialog window.

3.4 Storage Tab

The **Storage** tab enables you to create, manage, and delete disk arrays, logical drives, and spare drives.

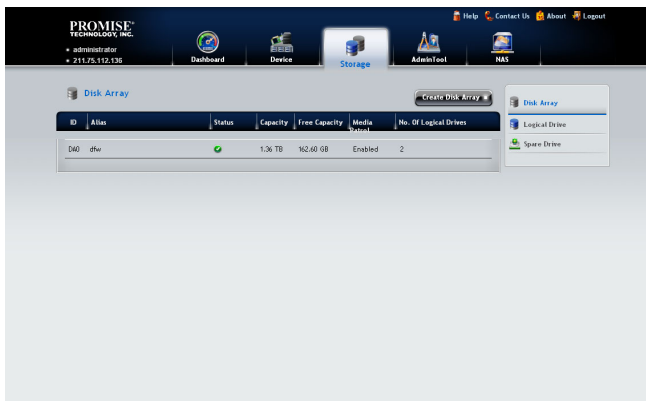

The list of Disk Array provides the information of the disk array, including:

- ID – DA0, DA1, DA2, etc.
- Alias – If assigned.
- Status – Green, yellow or red icon.
- Capacity – Data capacity of the disk array.
- Free Capacity – Unconfigured or unused capacity on the physical drives.
- Media Patrol – Enabled or disabled on this disk array.
- No. Of Logical Drives – The number of logical drives on this disk array.

To initialize the Dsk Array:

Initialization is normally done to logical drives after they are created from a disk array. Initialization sets all data bits in the logical drive to zero. The action is useful because there may be residual data on the logical drives left behind from earlier configurations. For this reason, Initialization is recommended whenever you create a logical drive.

Step 1. Create Disk Array. Refer to the instructions in section 3.4.1.

Step 2. Create Logical Drive. Refer to the instructions in section 3.4.4.

Step 3. Create File System.

Warning!


When you initialize a logical drive, all the data on the logical drive is lost. Backup any important data before you initialize a logical drive.

3.4.1 Create Disk Array

You can also use the Wizard to create a disk array with logical drives and spare drives at the same time.

To create a disk array:

1. Click **Storage** tab > **Disk Array**.
2. Click the **Create Disk Array** button.
3. In the Create Disk Array window, complete the required settings:

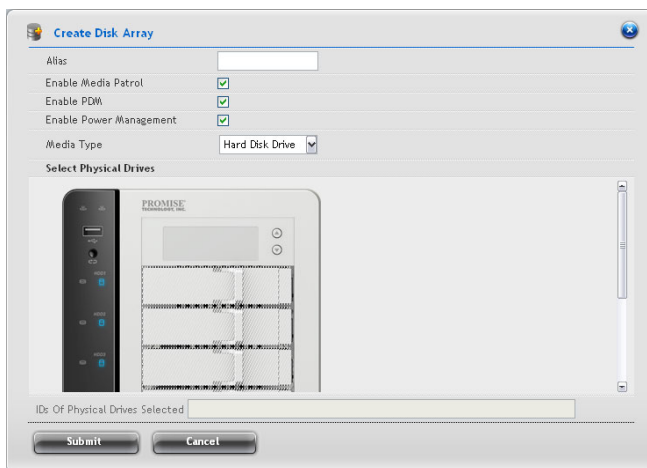


- In the **Alias** field, enter an alias at a maximum of 32 characters (includes letters, numbers, space between characters, and underline).
- Select the **Enable Media Patrol** option to enable the function on this disk array; otherwise, clear this option to disable.
- Select the **Enable PDM** option to enable the function on this disk array; otherwise, clear this option to disable.
- Select the **Enable Power Management** option to enable the function on this disk array; otherwise, clear this option to disable.


4. In the **Select Physical Drives** diagram, click the drives to add them to your disk array. The ID numbers of the selected drives will appear in the field below the diagram.
5. When done, click the **Submit** button. The new disk array appears in the list.
6. Do one of the following:
 - To create additional disk arrays, click the **Create More** button.
 - If you are done creating disk arrays, click the **Finish** button.

After creating a disk array, you need to create a logical drive on it. Follow the steps below to create a logical drive:

1. Click **Storage** tab > **Logical Drive**.
2. Click the **Create Logical Drive** button.
3. Select the disk array you want to use and click the Next button.

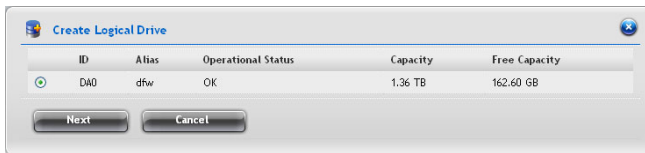

4. In the Create Logical Drive window, complete the required settings:

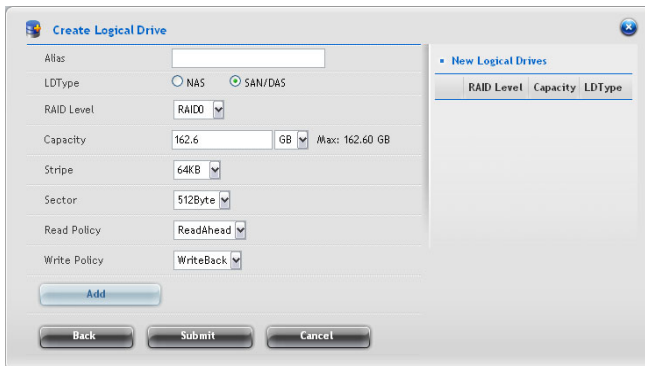

- In the **Alias** field, enter an alias at a maximum of 32 characters (includes letters, numbers, space between characters, and underline).
- Set the **LDType** as **NAS** or **SAN/DAS**.

- Select a **RAID Level** from the dropdown menu, depending on the number of physical drives in the disk array.
Support RAID type with drive number



	1	2	3	4	5	6
RAID0	●	●	●	●	●	●
RAID1		●				
RAID10				●		
RAID1E		●	●	●	●	●
RAID3			●	●	●	●
RAID30						●
RAID5			●	●	●	●
RAID50						●
RAID6				●	●	●



- In the **Capacity** field, accept the default maximum capacity or enter a lesser capacity (size in MB, GB or TB). Any remaining capacity is available for an additional logical drive.
 - Choose the **Stripe** size: 64 KB, 128 KB, 256 KB, 512 KB, or 1 MB.
 - Choose the **Sector** size: 512 B, 1 KB, 2 KB, or 4 KB.
 - Choose the **Read Policy**: Read Cache, Read Ahead, or No Cache
 - Choose the **Write Policy**: Write Back or Write Through.
5. Click the **Add** button. The new logical drive appears in the **New Logical Drives** list.
If there is capacity remaining, you can create an additional logical drive.
 6. When done, click the **Submit** button. The new logical drive(s) will appear in the **Logical Drive** list.

New logical drives are automatically synchronized. You can access the logical drive during synchronization.

Disk Array Problems:

Disk array problems typically result from a physical drive failure. The most common problem is a degraded disk array. The RAID controller can rebuild a degraded disk array.

A more serious, but far less common problem is an Incomplete Array. An incomplete array results from a physical drive that fails or becomes missing during:

- RAID level migration
- Disk array transport

Disk Array Degraded:

Disk arrays are made up of physical drives. Logical drives are created on the disk array. When one of the physical drives in a disk array fails:

- The operational status of disk array becomes Degraded.
- The operational status of logical drives becomes Critical.
- The operational status of physical drive becomes Dead or Offline.


Disk Array Offline:

Disk arrays are made up of physical drives. Logical drives are created on the disk array. When a disk array and its logical drives go **Offline**, the data stored in the logical drives is no longer accessible.

- Logical drives based on fault-tolerant disk arrays — RAID 1, 5, 6 and 10,— go Offline when two physical drives are removed or fail.
- Logical drives based on non-fault tolerant disk arrays — RAID 0 — go Offline when a one physical drive is removed or fails.

3.4.2 Disk Array Management

1. Click **Storage** tab > **Disk Array**. The list of disk arrays appears.
2. Move your mouse over the disk array you want to display the options of the disk array, including:

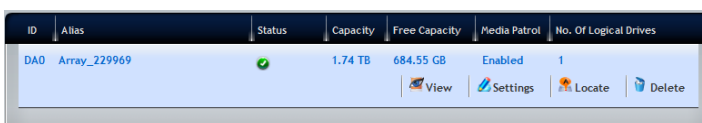

ID	Alias	Status	Capacity	Free Capacity	Media Patrol	No. Of Logical Drives
DA0	Array_229969		1.74 TB	684.55 GB	Enabled	1

View Settings Locate Delete

- **View** – Select to view disk array status in the Information tab:
 - Disk Array ID – DA0, DA1, DA2, etc.
 - Alias – If assigned
 - Operational Status – OK is normal
 - Media Patrol – Enabled or disabled on this array
 - PDM – Enabled or disabled on this array
 - Power Management
 - Total Capacity – Data capacity of the array
 - Configurable Capacity – Maximum usable capacity of the array
 - Free Capacity – Unconfigured or unused capacity on the physical drives
 - Max Contiguous Free Capacity – Unconfigured or unused capacity in contiguous sectors on the physical drives
 - Number of Physical Drives – The number of physical drives in this array
 - Number of Logical Drives – The number of logical drives on this array
- **Settings** – Select to change or delete the alias in the Alias field. Also, you can enable or disable Media Patrol, PDM, and Power Management. When done, click the **Save** button.
- **Locate** – This feature causes the drive carrier's LED to blink for one minute to assist you in locating the physical drives that make up this disk array.
- **Delete** – Select and click the **Confirm** button to delete a disk array.

CAUTION: IF YOU DELETE A DISK ARRAY, YOU ALSO DELETE ANY LOGICAL DRIVES THAT BELONG TO IT, ALONG WITH THE DATA IN THOSE LOGICAL DRIVES. BACK UP ANY IMPORTANT DATA BEFORE DELETING A DISK ARRAY.

3.4.3 Logical Drive Management

1. Click **Storage** tab > **Logical Drive**. The list of logical drives appears.
2. Move your mouse over the logical drive you want to display the options of the logical drive, including:

ID	Alias	Status	Capacity	RAID Level	Stripe	Cache Policy	Array ID	LD Type
LD0	NASLD0		732 GB	RAID6	64 KB	ReadAhead/WriteBack	DA0	NAS
View Settings Check Table Locate Delete								

- **View** – Select to view logical drive status:
 - Disk Array ID – LD0, LD1, LD2, etc.
 - Alias – If assigned
 - Array ID – ID number of the disk array where this logical drive was created
 - RAID Level – Set when the logical drive was created
 - Operational Status – OK means normal
 - Capacity – Data capacity of the logical drive
 - Number of Axles – For RAID 10, 2 axles. For RAID 50 and 60, 2 or more axles
 - Physical Capacity – Data capacity of the physical drives
 - Number of Physical Drives – The number of physical drives in the disk array
 - Stripe size – Set at logical drive creation
 - Read Policy – Adjustable
 - Sector size – Set at logical drive creation
 - Write Policy – Adjustable
 - Tolerable Number of Dead Drives – Number of physical drives that can fail without the logical drive going offline
 - Synchronized – A new logical drive shows "No" until synchronizing is completed
 - Parity Pace – Pertains to some RAID levels
 - WWN – World Wide Number, a unique identifier assigned to this logical drive
 - Codec Scheme – Pertains to some RAID levels
 - Serial Number – Assigned to this logical drive
 - ALUAAccessStateForCtrl1

- **ALUAAccessStateForCtrl2**
- **LDType** – Displays the LD type of the logical drive.
- **Settings** – Select to change or delete the alias in the Alias field. Also, you can configure the Read Policy (ReadCache, ReadAhead, or NoCache) and Write Policy (WriteThru or WriteBack). When done, click the **Save** button.
- **Check Table** – Displays the error tables. Use this information to evaluate the integrity of the logical drive and to determine whether corrective action is needed.

Choose an option:

- **All** – All errors. The default choice.
- **Read Check** – Read errors for this logical drive.
- **Write Check** – Write errors for this logical drive.
- **Inconsistent Block** – Inconsistent blocks for this logical drive. Mirror data for RAID Levels 1, 1E and 10 or Parity data for RAID Levels 5, 6, 50, and 60. Identified by the Redundancy Check.


The Check Table lists:

- **Entry Number** – A number assigned to each block of entry.
- **Table Type** – Read Check, Write Check or Inconsistent Block.
- **Starting Logical Block Address** – LBA of the first block for this entry.
- **Count** – Number of errors or continuous blocks starting from this LBA.
- **Locate** – This feature causes the drive carrier's LED to blink for one minute to assist you in locating the physical drives that make up this disk array.
- **Delete** – Select and click the **Confirm** button to delete a logical.

CAUTION: IF YOU DELETE A LOGICAL DRIVE, YOU ALSO DELETE ALL THE DATA IN THE LOGICAL DRIVE. BACK UP ANY IMPORTANT DATA BEFORE DELETING A LOGICAL DRIVE.

To run Redundancy Check on a logical drive:

1. Click **AdminTool** tab > **Background Activity**. The list of background activities appears.
2. Move your mouse over the Redundancy Check item and click the **Start** button.

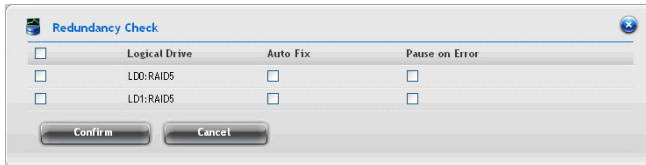

3. Check the boxes to the left of the logical drives you want to run.
4. Check the options you want:
 - Auto Fix – Attempts to repair the problem when it finds an error
 - Pause on Error – The process stops when it finds a non-repairable error
5. Click the **Confirm** button.

To change the Synchronization settings:

1. Click **AdminTool** tab > **Background Activity**.
2. Click the **Settings** button.
3. Click the Background Synchronization Rate dropdown menu and choose a rate:
 - Low – Fewer system resources to Synchronization, more to data read/write operations.
 - Medium – Balances system resources between Synchronization and data read/write operations.
 - High – More system resources to Synchronization, fewer to data read/write operations.
4. Click the **Confirm** button.

Logical Drive Problems:

Logical drive problems typically result from a physical drive failure. The most common problem is a critical logical drive. The RAID controller can rebuild a critical logical drive.

A more serious but far less common problem is an Incomplete Array. An incomplete disk array results from a physical drive that fails or becomes missing during:

- RAID level migration
- Physical drive transport

3.4.4 Spare Drive Management

If you have an unassigned disk drive, you can assign it as a spare drive. A spare is a disk drive that has been designated to replace a failed disk drive in a RAID Volume. In the event of the failure of a disk drive within a RAID 1 or three drive RAID 5 Volume, the spare drive is activated as a member of the RAID Volume to replace a disk drive that has failed.

A spare drive cannot replace the failed drive in a RAID 0 Volume because of the way in which data is written to the disk drives under RAID 0. A spare drive is not available for a RAID 10 Volume because RAID 10 requires all four disk drives in the SmartStor enclosure. However, when you replace the failed disk drive, the SmartStor will automatically rebuild the RAID Volume using the new disk drive.

To assign a spare drive:


1. Click **Storage** tab > **Spare Drive**. The list of spare drives appears.
2. Move your mouse over the spare drive you want to display the options of the spare drive, including:

ID	Status	Capacity	Physical Drive ID	Revertible	Type	Dedicated to Array
No configured spare drive in the subsystem.						

- ID
 - Status – Green, yellow or red icon.
 - Capacity – Data capacity of the spare drive.
 - Physical Drive ID
 - Revertible
 - Type
 - Dedicated to Array
3. When done, click the **Confirm** button.

3.5 AdminTool Tab

The **AdminTool** tab enables you to manage the Subsystem NAS system or virtual enclosure, monitor events, manage background activities, perform firmware updates, restore factory default settings, and save a NAS configuration report.

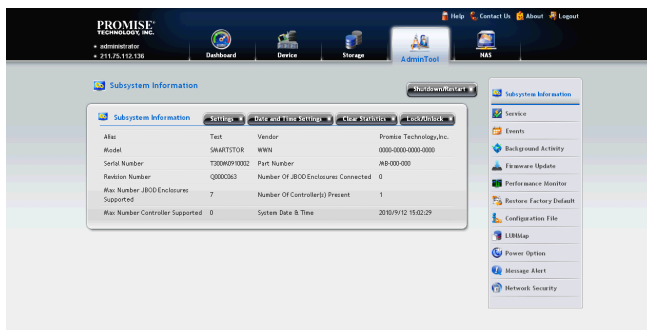

3.5.1 System settings and clearing statistics

The list of NAS system information, including:

- Alias, if assigned
- Vendor
- Model
- WWN – World Wide Name
- Serial Number
- Part Number
- Revision Number
- System Date & Time

To change the Subsystem settings;

1. Click **AdminTool** tab > **Subsystem Information**. The list of system information
2. Click the **Settings** button.
3. In the Alias field, enter an alias or change the existing alias.
4. When done, click the **Save** button.

To restart/shutdown the Subsystem:

1. Click **AdminTool** tab > **Subsystem Information**.
2. Click the **Shutdown/Restart** button.
3. In the Shutdown/Restart window, you can:
 - Click the **Shutdown** button to stop I/Os and shuts down the subsystem. After subsystem shutdown, you must manually switch off the power at both power supplies.
 - Click the **Restart** button to stop I/Os, shuts down and restarts the subsystem.
 - Click the **Power Off** button to turn off the system power. After power off, the power core has to be removed then plugged in to get Redundant PSU working again.


You can clear the physical drive, logical drive, and controller statistics by following the steps below:

1. Click the **AdminTool** tab > **Subsystem Information**. The list of system information.
2. Click the **Clear Statistics** button.
3. When done, click the **Confirm** button.

3.5.2 Service

To start the service of the SmartStor:

1. Click the **AdminTool** tab > **Service**. The list of service displays.
2. Move your mouse over the service you want and click the **Start** button.

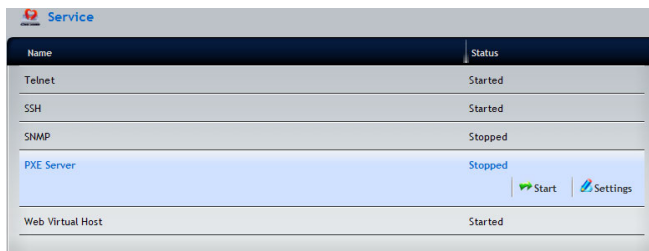

3. Click the **Confirm** button.

3.5.3 Runtime and NVRAM event logs

Runtime events are the 1023 most recent events since the last NAS startup. To view runtime events, click the **AdminTool** tab > **Events**. The list of Runtime Events displays the information, including:

- Index – A number assigned to this specific event. Highest number is most recent.
- Device – Identifies the device involved.
- Event ID – Identifies the action that occurred.
- Severity – Displays the Severity Level: Info, Minor, Major, Warning, Critical, or Fatal.
 - Fatal – Non-Recoverable error or failure has occurred.
 - Critical – Action is needed now and the implications of the condition are serious.
 - Major – Action is needed now.
 - Minor – Action is needed but the condition is not a serious at this time.
 - Warning – User can decide whether or not action is required.
 - Info – Information only, no action is required.
- Time – Date and time the event occurred.
- Description – Plain language description of the event.

The device also provides NVRAM event logs. NVRAM events are the most important events over NAS startups.

To view NVRAM events:

1. Click the **AdminTool** tab > **Events**.
2. Click the **NVRAM Events** button. The list of NVRAM Events displays the information, including:
 - Index – A number assigned to this specific event. Highest number is most recent.
 - Device – Identifies the device involved
 - Event ID – Identifies the action that occurred
 - Severity – Displays the Severity Level: Info, Minor, Major, Warning, Critical, or Fatal.
 - Fatal – Non-Recoverable error or failure has occurred.

- Critical – Action is needed now and the implications of the condition are serious.
- Major – Action is needed now.
- Minor – Action is needed but the condition is not a serious at this time.
- Warning – User can decide whether or not action is required.
- Info – Information only, no action is required.
- Time – Date and time the event occurred
- Description – Plain language description of the event

To view Runtime events:

1. Click the **AdminTool** tab > **Events**.
2. Click the **Runtime Events** button. The list of Runtime Events displays the information, including:
 - Index – A number assigned to this specific event. Highest number is most recent.
 - Device – Identifies the device involved
 - Event ID – Identifies the action that occurred
 - Severity – Displays the Severity Level: Info, Minor, Major, Warning, Critical, or Fatal.
 - Fatal – Non-Recoverable error or failure has occurred.
 - Critical – Action is needed now and the implications of the condition are serious.
 - Major – Action is needed now.
 - Minor – Action is needed but the condition is not a serious at this time.
 - Warning – User can decide whether or not action is required.
 - Info – Information only, no action is required.
 - Time – Date and time the event occurred
 - Description – Plain language description of the event

To clear the NVRAM/Runtime event log:

1. Click the **AdminTool** tab > **Events**.
2. Click the **NVRAM Events/Runtime Events** button. The list of NVRAM Events/Runtime Events displays the information.
3. Click the **Clear** button.
4. Click the **Confirm** button.

To save the NVRAM/Runtime event log:

1. Click the **AdminTool** tab > **Events**.
2. Click the **NVRAM Events/Runtime Events** button. The list of NVRAM Events/Runtime Events displays the information.
3. Click the **Save** button.
4. Your browser saves a text file containing the NVRAM/Runtime event log to its designated download folder.

3.5.4 Background activity, settings and schedules

Each background activity has its own set of parameters. The most important parameters are: Status and Progress. The Status displays:

- Running – Now in progress.
- Paused – Waiting for a higher priority activity to finish or waiting for you to click the **Resume** button.

To view current background activity, click **AdminTool** tab > **Background Activity**. The list of Background Activities displays information, including:

- **Media Patrol:**
 - Media Patrol is a routine maintenance procedure that checks the magnetic media on each disk drive. Media Patrol checks all physical drives assigned to disk arrays and spare drives. Media Patrol does not check un-configured drives.
 - Media Patrol checks are enabled by default on all disk arrays and spare drives. You can disable Media Patrol in the disk array and spare drive settings, however that action is not recommended.
 - Unlike Synchronization and Redundancy Check, Media

Patrol is concerned with the condition of the media itself, not the data recorded on the media. If Media Patrol encounters a critical error, it triggers PDM if PDM is enabled on the disk array.

- Media Patrol has three status conditions:
- Running – Normal. You can access your logical drives at any time.
- Yield – Temporary pause while a read/write operation takes place.
- Paused– Temporary pause while another background runs. Or a pause initiated by the user.

– **Redundancy Check:**

- Redundancy Check is a routine maintenance procedure for fault-tolerant disk arrays (those with redundancy) that ensures all the data matches exactly. Redundancy Check can also correct inconsistencies.

– **Rebuild:**

- When you rebuild a disk array, you are actually rebuilding the data on one physical drive.
- When a physical drive in a disk array fails and a spare drive of adequate capacity is available, the disk array begins to rebuild automatically using the spare drive.
- If there is no spare drive of adequate capacity, but the Auto Rebuild function is ENABLED, the disk array begins to rebuild automatically as soon as you remove the failed physical drive and install an un-configured physical drive in the same slot.
- If there is no spare drive of adequate capacity and the Auto Rebuild function is DISABLED, you must replace the failed drive with an un-configured physical drive, then perform a Manual Rebuild. See below.

IMPORTANT: IF YOUR REPLACEMENT DISK DRIVE WAS FORMERLY PART OF A DIFFERENT DISK ARRAY OR LOGICAL DRIVE, YOU MUST CLEAR THE CONFIGURATION DATA ON THE REPLACEMENT DRIVE BEFORE YOU USE IT.

- **Migration:**
 - The term "Migration" means either or both of the following
 - Change the RAID level of a logical drive
 - Expand the storage capacity of a logical drive
 - Before you begin a migration, examine your current disk array to determine whether:
 - The physical drives in your array can support the target RAID level
 - There is sufficient capacity to accommodate the target logical drive size
 - If you need to add physical drives to your array, be sure there are unassigned .physical drives are installed in your RAID system before you begin migration.
 - Supported RAID level

Target Source	RAID0	RAID1	RAID1E	RAID5	RAID6	RAID10	RAID50
RAID0	●	●	●	●	●	●	●
RAID1	●		●	●		●	●
RAID1E	●		●	●		●	●
RAID5	●		●	●	●	●	●
RAID6					●		
RAID10	●		●	●	●	●	●
RAID50	●		●	●	●	●	●

– **PDM:**

- Predictive Data Migration (PDM) is the migration of data from the suspect disk drive to a spare disk drive, similar to rebuilding a logical drive. But unlike Rebuilding, PDM constantly monitors your disk drives and automatically copies your data to a spare disk drive BEFORE the disk drive fails and your logical drive goes Critical.
- The following actions trigger PDM:
 - A disk drive with unhealthy status (see below)
 - Media Patrol finds a disk critical error
 - You initiate PDM manually
- PDM also counts the number of media errors reported by Media Patrol.
- A disk drive becomes unhealthy when:
 - A SMART error is reported
 - The bad sector remapping table fills to the specified level.
- You can specify the maximum levels for the reassigned and error blocks in PDM settings. When the table fills to a specified value, PDM triggers a migration of data from the suspect drive (the disk drive with the bad sectors) to a replacement physical drive.
- During data migration, you will have access to your logical drives but they will respond more slowly to read/write tasks because of the additional operation. The time required for data migration depends on the size of the disk drives.
- PDM is enabled on all disk arrays by default. You can disable PDM in the disk array settings, however that action is not recommended.

– **Transition:**

- Transition is the process of replacing a revertible spare drive that is currently part of a disk array with an un-configured physical drive or a non-revertible spare. The revertible spare drive returns to its original status. In order to run the Transition function, the spare drive must be revertible.
- In addition, you must specify an un-configured physical drive of the same or larger capacity and same media type as the revertible spare drive.


– **Synchronization:**

- Synchronization is automatically applied to logical drives when they are created. Synchronization recalculates the redundancy data to ensure that the working data on the physical drives is properly in sync.
- Mouse-over on the logical drive, click the **View** button, and look under Logical Drive Information beside the line that says Synchronized. A **Yes** means the logical drive was synchronized.

Select the item you want (e.g. Media Patrol, PDM, Rebuild, etc.) from the list and click the **Start** button to run the background activity.

To add a scheduled background activity:

1. Click **AdminTool** tab > **Background Activity**.
2. Click the **Scheduler** button.
3. Click the **Add Schedule** button and complete the required settings:

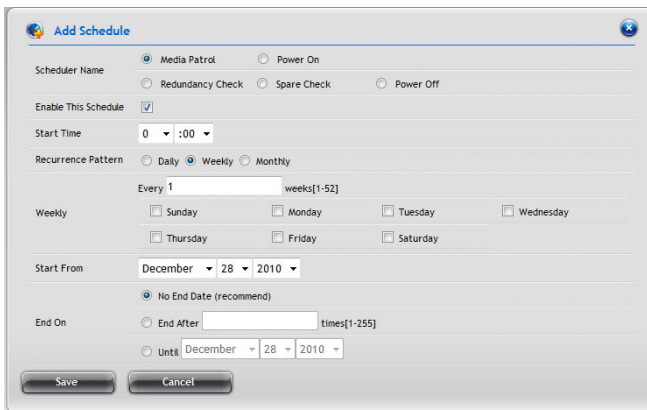

- Scheduler Name – Select Media Patrol, Battery Recondition, Power On, Redundancy Check, Spare Check, or Power Off.

If you select Redundancy Check, the following settings need to be completed:

- Auto Fix – Attempts to repair the problem when it finds an error.
- Pause on Error – The process stops when it finds a non-repairable error.
- Select LD – Select at least one logical drive on which Redundancy Check will run.

- Enable This Schedule – Select to enable this function.
- Start Time – Choose a start time.
- Recurrence Pattern – Select a Recurrence Pattern as Daily, Weekly, or Monthly.
- Start From – Select a start date.
- End On – Select an end option.


4. When done, click the **Save** button.

To view scheduled background activity:

1. Click **AdminTool** tab > **Background Activity**.
2. Click the **Scheduler** button. The list of Scheduled Background Activities displays, including:
 - Type – Media Patrol, Redundancy Check, or Spare Check.
 - Recurrence – Daily, weekly, monthly.
 - Start Time – Date and time.
 - Operational Status – Enabled or disabled.

To change a scheduled background activity:

1. Click **AdminTool** tab > **Background Activity**.
2. Click the **Settings** button. In the Background Activity Settings, you can change the following settings for the background activity:

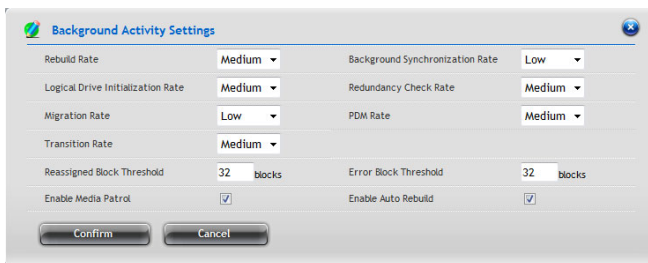

The image shows a 'Background Activity Settings' dialog box. It contains two columns of settings. The left column includes: 'Rebuild Rate' (Medium), 'Logical Drive Initialization Rate' (Medium), 'Migration Rate' (Low), 'Transition Rate' (Medium), 'Reassigned Block Threshold' (32 blocks), and 'Enable Media Patrol' (checked). The right column includes: 'Background Synchronization Rate' (Low), 'Redundancy Check Rate' (Medium), 'PDM Rate' (Medium), 'Error Block Threshold' (32 blocks), and 'Enable Auto Rebuild' (checked). At the bottom are 'Confirm' and 'Cancel' buttons.

Rebuild Rate	Medium	Background Synchronization Rate	Low
Logical Drive Initialization Rate	Medium	Redundancy Check Rate	Medium
Migration Rate	Low	PDM Rate	Medium
Transition Rate	Medium		
Reassigned Block Threshold	32 blocks	Error Block Threshold	32 blocks
Enable Media Patrol	<input checked="" type="checkbox"/>	Enable Auto Rebuild	<input checked="" type="checkbox"/>

- Rebuild Rate
- Background Synchronization Rate
- Logical Drive Initialization Rate
- Redundancy Check Rate
- Migration Rate
- PDM Rate
- Transition Rate
- Reassigned Block Threshold
- Error Block Threshold
- Enable Media Patrol
- Enable Auto Rebuild


For example, to change the Rebuild settings:

1. Click the Rebuild Rate dropdown menu and choose a rate:
 - Low – Fewer system resources to the Rebuild, more to data read/write operations.
 - Medium – Balances system resources between the Rebuild and data read/write operations.
 - High – More system resources to the Rebuild, fewer to data read/write operations.
2. Check the **Enable Auto Rebuild** box to enable Auto Rebuild (rebuilds when you swap out the failed drive with a new one).
3. Click the **Confirm** button.

3.5.5 Firmware updates

Before you update the firmware, download the latest firmware image file to your PC/Mac

1. Click **AdminTool** tab > **Firmware Update**. The NAS Firmware Update window screen appears showing the current Image Version Number.

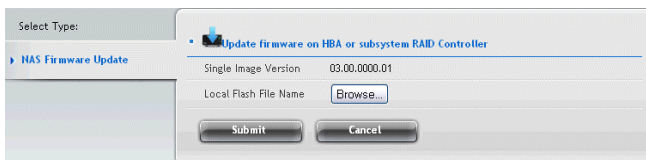

2. Click the **Browse** button to locate the firmware image file, and then click the **Open** button.
3. The firmware image file appears in the in the field.
4. Click the **Submit** button.
5. When the update is completed a message tells you to reboot the subsystem. Click the **OK** button to restart the system.

Warning: Do NOT power off the system during the update!

3.5.6 Performance monitor


The Performance Monitor screen allows you to monitor the performance of NAS using the analyzed illustrations.

Support Table:

	Logical Drive	Physical Drive	Port
Bandwidth	●	●	●
Cache Usage	●		
Dirty Cache	●		
Maximum Latency	●	●	●
Average Latency	●	●	●
Minimum Latency	●	●	●
IO request	●	●	●


To view the Logical Drive performance:

1. Click **AdminTool** tab > **Performance Monitor**.
2. In the Logical Drive field, click the Select Logical Drives button to select the logical drive you want and select a performance type from the dropdown menu. When done, the performance of selected logical drive will be shown in the illustration below.

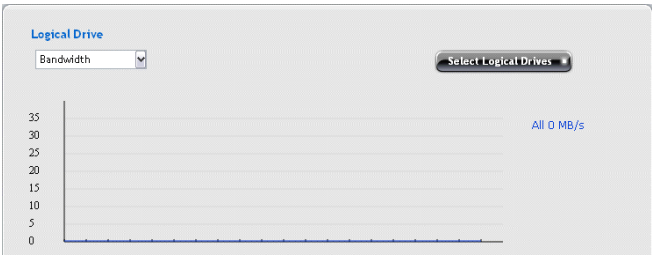


To view the Physical Drive performance:

1. Click **AdminTool** tab > **Performance Monitor**.
2. In the Physical Drive field, click the Select Physical Drives button to select the physical drive you want and select a performance type from the dropdown menu. When done, the performance of selected physical drive will be shown in the illustration below.

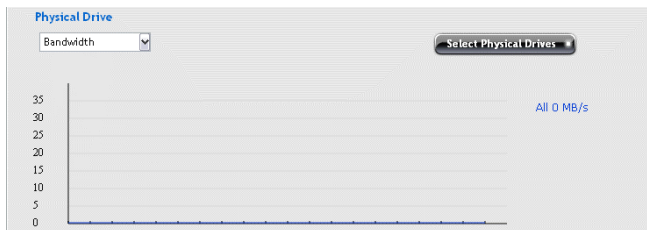

To view the Port performance:

1. Click **AdminTool** tab > **Performance Monitor**.
2. In the Port field, click the **Select Ports** button to select the port you want and select a performance type from the dropdown menu. When done, the performance of selected port will be shown in the illustration below.

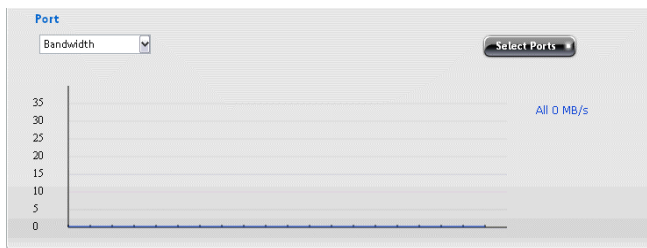

3.5.7 Restore factory default settings

The Restore Factory Default function allows you to restores settings (any or all) to their default values for the NAS.

The screenshot shows the 'Restore factory default settings' dialog box. It has a title bar with a small icon and the text 'Restore factory default settings'. Below the title bar, there is a section titled 'Software Factory Default Settings'. This section contains a list of settings with checkboxes next to them: CIP Settings, FTP Settings, AFP Settings, SNMP Settings, NFS Settings, WebDAV Settings, and Network Settings. At the bottom of the dialog box, there are two buttons: 'Submit' and 'Reset'.

The settings include:

- CIP Settings
- FTP Settings
- AFP Settings

- SNMP Settings
- NFS Settings
- WebDAV Settings
- Network Settings

Caution: Use this feature only when required and only on the settings that you must reset to default in order to set them correctly.


To restore the factory default settings:

1. Click **AdminTool** tab > **Restore Factory Default**.
2. In the Restore factory default settings screen, check the boxes beside the settings you want to reset to default value.
3. Click the **Submit** button.
4. Click the **OK** button in the confirmation box.

3.5.8 Import/Export a system configuration file

The import the configuration file to the NAS:


1. Click **AdminTool** tab > **Configuration File**.
2. Click the **Import** button.

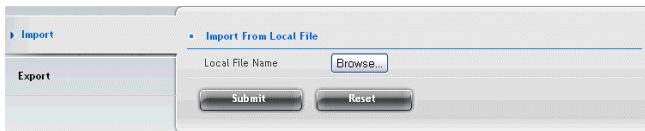

3. Click the **Browse** button to locate the configuration file (.bcf), and then click the **Open** button.
4. Click the submit button
5. The NAS system will reboot

To export the current configuration file:

1. Click **AdminTool** tab > **Configuration File**.
2. Click the **Export** button.

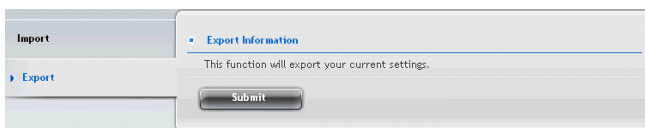


3. Click the **Submit** button. The current configuration will be saved as a .bcf file in your Host PC.

3.5.9 LUNMap Management

The LUN Mapping function allows you to control what storage arrays are visible to which computers.

To add initiator:


1. Click **AdminTool** tab > **LUNMap**.
2. Click the **Add Initiator** button.

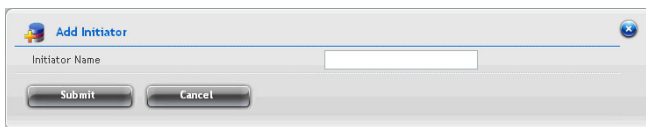

3. Enter a name in the Initiator Name field and click the **Submit** button. The initiator will be added in the LUNMap list.

To define the LUN Mapping

1. Click **AdminTool** tab > **LUNMap**.
2. Click the **LUN Mapping** button.

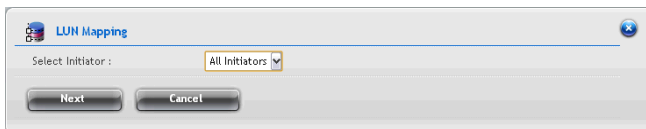

3. Select the initiator you want from the dropdown menu and click the **Next** button.
4. In the LUN Mapping field, indicate the arrays you wish to make visible by putting a unique number in the LUN field.
5. When done, click the **Assign** button.
6. Click the **Submit** button.
7. Check the **Enable LUN Masking** option to enable the LUN Mapping and Masking function of the NAS.

3.5.10 Power Option

The Power Option screen displays the power management of the NAS. You can change the following power settings from the screen by moving the mouse over the setting item and clicking the **Settings** button:


- Power On LAN
 - When system shutdown, accept magic packet to power ON.
 - SmartNAVI can be the utility to power on NAS by LAN.
- Power On Automatically

3.5.11 Message Alert

The Message Alert function allows the user to receive an e-mail alert for the events of the NAS.

To set up the e-mail service for the NAS:

1. Click **AdminTool** tab > **Message Alert**.
2. Click the **Setup** button to setup the mail server complete the required settings in the Setup E-Mail Alert field.

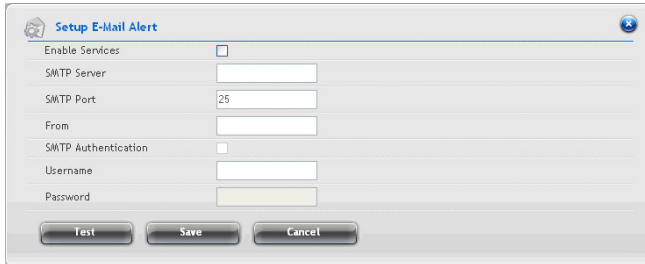

- Enable Services – Check to enable message alert service.
- SMTP Server – Enter the IP address of SMTP server.
- SMTP Port – Enter the port number of SMTP server
- From – The sender of the notification message.
- SMTP Authentication
- Username – Enter the username to log in the SMTP server.
- Password – Enter the password to log in the SMTP server.

To set up the e-mail account:

1. Click **AdminTool** tab > **Message Alert**.

2. Click the **Create** button.
3. Enter your e-mail address and click the **Save** button.


To edit the e-mail account:

1. Click **AdminTool** tab > **Message Alert**.
2. Move your mouse over the e-mail account in the list, and you can:
 - Change the address of the account by clicking the **Settings** button.
 - Remove the selected account by clicking the **Delete** button.

3.5.12 Network Security

To set up Security Policy:


1. Click **AdminTool** tab > **Network Policy**.
2. Click the **Security Policy** button and complete the required settings.

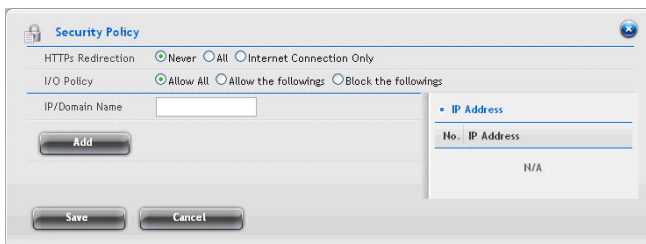

- HTTPs Redirection
 - I/O Policy
 - IP/Domain Name
3. When done, click the **Save** button.

To set up Access Protection:

1. Click **AdminTool** tab > **Network Policy**.
2. Click the **Access Protection** button and complete the required settings.

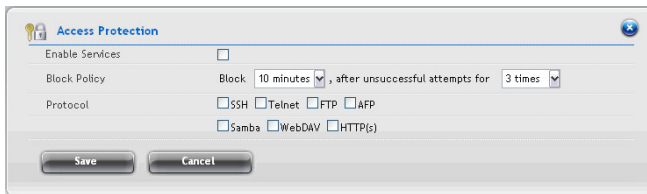


- Enable Services – Check to enable the function.
- Block Policy
- Protocol

3. When done, click the **Save** button.

To set up SSL Certificate:

1. Click **AdminTool** tab > **Network Policy**.
2. Click the **SSL Certificate** button and complete the required settings.

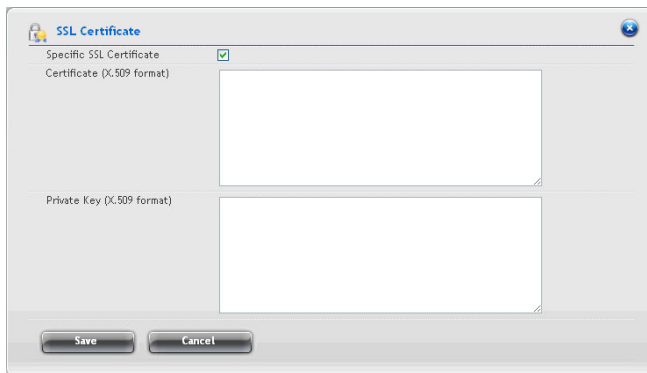

- Specific SSL Certificate – Check to enable the function.
- Certificate (X.509 format)
- Private Key (X.509 format)

3. When done, click the **Save** button.


3.6 NAS Tab

3.6.1 Setup Wizard

The system's Wizard lets you configure your disk array(s) easily and quickly. The Wizard will guide you through the required settings step by step. You can choose to configure automatically by using **One-Click Setup**, or configure manually by using **Advance Setup**.

Using Automatic Configuration Wizard

1. Click **NAS** tab > **Wizard**.
2. Click the One-Click Setup button. The Automatic Configuration box displays:

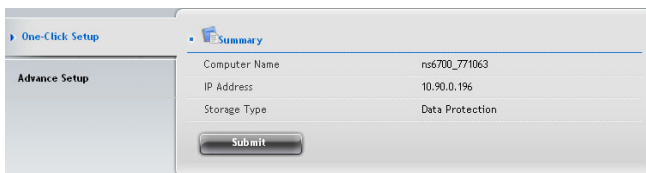

3. The Summary window displays the general information of the system, including:
 - Computer Name
 - IP Address
 - Storage Type
4. To accept the proposed configuration, click the **Submit** button.


Note: The system will create the RAID automatically based on the number of the disk

Disk number	1	2	3	4	5	6
RAID type	RAID0	RAID1	RAID5	RAID5	RAID5	RAID6

If you disagree with the proposed configuration, click the **Advance Setup** button to directly specify all parameters for a new disk array, logical drives, and spare drives.

Using Advanced Configuration Wizard

1. Click **NAS** tab > **Wizard**.
2. Click the **Advance Setup** button. The Advanced Configuration box displays:

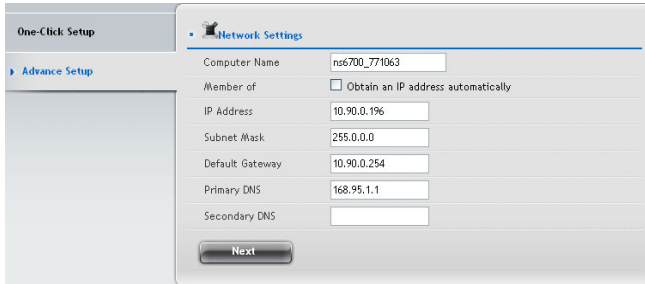

The screenshot shows a window titled "One-Click Setup" with a sidebar containing "Advance Setup" and "Network Settings". The "Network Settings" tab is active, displaying a form with the following fields and values:

Field	Value
Computer Name	ns6700_771063
Member of	<input type="checkbox"/> Obtain an IP address automatically
IP Address	10.90.0.196
Subnet Mask	255.0.0.0
Default Gateway	10.90.0.254
Primary DNS	168.95.1.1
Secondary DNS	

At the bottom of the form is a "Next" button.

3. Complete the required settings in the Network Settings window, including:
 - Computer Name
 - Obtain an IP address automatically
 - IP Address
 - Subnet Mask
 - Default Gateway
 - Primary DNS
 - Secondary DNS

When done, click the **Next** button.


4. Select Storage Type: Data Protection or Maximum Capacity, and then click the **Next** button.
5. The Summary window displays the general information of the system, including:
 - Computer Name
 - IP Address
 - Storage Type

To accept the proposed configuration, click the **Submit** button.

3.6.2 User account management

To add users for the NAS:

1. Click **NAS** tab > **NAS User**.
2. Click the **Create User** button.
3. In the Create User window, complete the required settings.

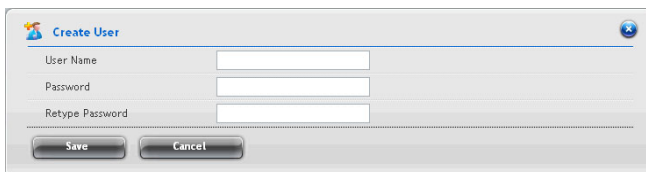A screenshot of the 'Create User' dialog box. The dialog has a title bar with a blue icon and the text 'Create User'. Inside, there are three input fields: 'User Name', 'Password', and 'Retype Password'. Below the fields are two buttons: 'Save' and 'Cancel'.

- User Name
 - Password
 - Retype Password
4. When done, click the **Save** button.

To view/edit the user information:

1. Click **NAS** tab > **NAS User**. The list of users displays.
2. Move your mouse over the user in the list, and you can:
 - Change the password for the user to log in the NAS by clicking the **Change Password** button.
 - Remove the selected user by clicking the **Delete** button.


To group the users:

1. Click **NAS** tab > **NAS User**.
2. Click the **Group** button.
3. Click the **Create Group** button to add a group for the system:
 - a. Enter the Group Name, and click the **Next** button.
 - b. Select the user(s) you want to add to the group from the NAS User field.
 - c. When done, click the **Submit** button.

-
4. In the NAS Group list, move your mouse over the group item and then you can:
 - Add/remove the users for the group by clicking the **Group Settings** button.
 - Remove the selected group by clicking the **Delete** button.

When the new user/group is added, you have to complete the permission settings for each user/group to access the system. Follow the steps below to complete the settings:

1. Click **NAS** tab > **File Sharing**.
2. From the File Sharing list, move your mouse over the folder you want and click the **Share Settings** button.
3. Select the user/group you want and set one of the access options: Deny-Access, Read-Only, or Read-Write

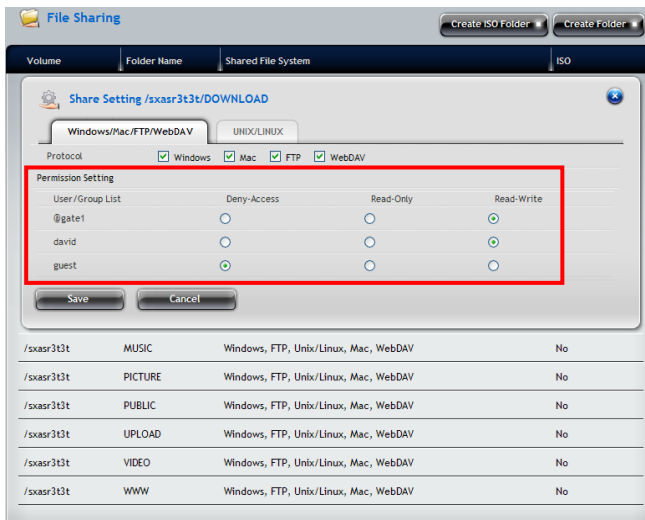

4. When done, click the **Save** button.

3.6.3 Protocol Control and Setting

1. Click **NAS** tab > **Protocol Control**.
2. In the Protocol Control list, move your mouse over the protocol option you want and click the **Enable/Disable** button to turn the feature ON/OFF. The protocols include:

Protocol	Status
Windows (CIFS)	ON
FTP Sharing	ON
UNIX/Linux	ON
Mac AFP	ON
Printer Server	OFF
WebDAV	ON

- Windows (CIFS)
 - FTP Sharing
 - UNIX/Linux
 - Mac AFP
 - Printer Server
 - WebDAV
3. To change the protocol settings, move your mouse over the protocol option and click the **Settings** button to configure the advanced settings.

3.6.4 File System Management

1. Click **NAS** tab > **File System**.
2. In the File System list, move your mouse over the item you want and you can:


Volume	Device ID	RAID Level	Capacity	Operational Status	File System	Mounted
NASL00	0	RAID6	657.79 GB		Yes	Yes
Quota Defragmentation View Delete						

- View the volume information by clicking the **View** button.
- Change the quota setting of the file system by clicking the **Quota** button.
- Remove the selected item by clicking the **Delete** button.

3.6.5 File Sharing Setting

Creating ISO Folder

1. Click **NAS** tab > **File Sharing**.
2. Click the **Create ISO Folder** button to add a folder for ISO file sharing:

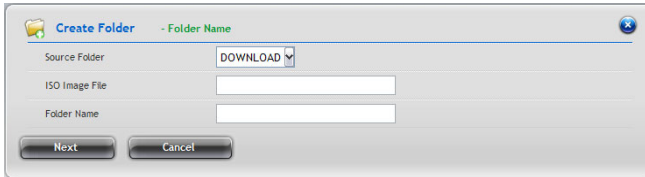A dialog box titled "Create Folder" with a subtitle "- Folder Name". It contains three input fields: "Source Folder" with a dropdown menu showing "DOWNLOAD", "ISO Image File" with an empty text box, and "Folder Name" with an empty text box. At the bottom are "Next" and "Cancel" buttons.

Field	Value
Source Folder	DOWNLOAD
ISO Image File	
Folder Name	

- a. Enter the Source Folder, ISO Image File and Folder Name, and then click the **Next** button.
 - b. Select the protocol as Windows/FTP or UNIX/LINUX, and then click the **Next** button.
 - c. In the Permission Setting field, set the privilege for the users to access the folder by selecting: Deny-Access, Read-Only, or Read-Write. Click the **Next** button.
 - d. When done, click the **Submit** button.
3. In the File Sharing list, move your mouse over the item and clicking the **Share Setting** button to change the sharing settings.


Volume	Folder Name	Shared File System
/sxasr3t3t	DOWNLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	MUSIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PICTURE	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PUBLIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	UPLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	VIDEO	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	WWW	Windows, FTP, Unix/Linux, Mac, WebDAV

- Windows/Mac/FTP/WebDAV: Select the Protocol for your networking configuration, and set up the Permission Setting for each user/group.
- UNIX/LINUX: Assing the IP address in the New IP Addrss box then click the **Add** button for sharing. Enter *.*.* if all IP addresses are allowed fo sharing.

When done, click the **Save** button.

Creating Folder

1. Click **NAS** tab > **File Sharing**.
2. Click the **Create Folder** button to add a folder for sharing:

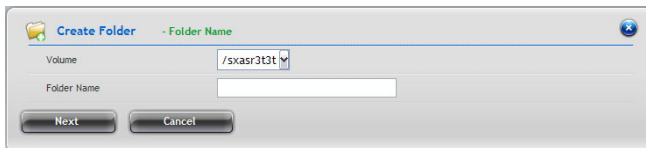

- a. Enter the Volume and Folder Name, and then click the **Next** button.
 - b. Select the protocol as Windows/FTP or UNIX/LINUX, and then click the **Next** button.
 - c. In the Permission Setting field, set the privilege for the users to access the folder by selecting: Deny-Access, Read-Only, or Read-Write. Click the **Next** button.
 - d. When done, click the **Submit** button.
3. In the File Sharing list, move your mouse over the item and clicking the **Share Setting** button to change the sharing settings.

Volume	Folder Name	Shared File System
/sxasr3t3t	DOWNLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	MUSIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PICTURE	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PUBLIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	UPLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	VIDEO	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	WWW	Windows, FTP, Unix/Linux, Mac, WebDAV

- Windows/Mac/FTP/WebDAV: Select the Protocol for your networking configuration, and set up the Permission Setting for each user/group.
- UNIX/LINUX: Assigning the IP address in the New IP Address box then click the **Add** button for sharing. Enter *.*.* if all IP addresses are allowed for sharing.

When done, click the **Save** button.

1. Click **NAS** tab > **File Sharing**.
2. Click the **Create Folder** button to add a folder for sharing:
 - a. Enter the Volume and Folder Name, and then click the **Next** button.
 - b. Select the protocol as Windows/FTP or UNIX/LINUX, and then click the **Next** button.
 - c. In the Permission Setting field, set the privilege for the users to access the folder by selecting: Deny-Access, Read-Only, or Read-Write. Click the **Next** button.
 - d. When done, click the **Submit** button.
3. In the File Sharing list, move your mouse over the item and clicking the **Share Setting** button to change the sharing settings.

Volume	Folder Name	Shared File System
/sxasr3t3t	DOWNLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	MUSIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PICTURE	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	PUBLIC	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	UPLOAD	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	VIDEO	Windows, FTP, Unix/Linux, Mac, WebDAV
/sxasr3t3t	WWW	Windows, FTP, Unix/Linux, Mac, WebDAV

- Windows/Mac/FTP/WebDAV: Select the Protocol for your networking configuration, and set up the Permission Setting for each user/group.
- Windows (CIFS)

Group	Member	Result
Deny-Access	Deny-Access	Deny-Access
	Read-Only	Deny-Access
	Read-Write	Deny-Access
Read-Only	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Write
Read-Write	Deny-Access	Deny-Access
	Read-Only	Read-Write

	Read-Write	Read-Write
--	------------	------------

● Mac AFP

Group	Member	Result
Deny-Access	Deny-Access	Deny-Access
	Read-Only	Deny-Access
	Read-Write	Deny-Access
Read-Only	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Only
Read-Write	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Write

● FTP

Group	Member	Result
Deny-Access	Deny-Access	Deny-Access
	Read-Only	Deny-Access
	Read-Write	Deny-Access
Read-Only	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Write
Read-Write	Deny-Access	Deny-Access
	Read-Only	Read-Write
	Read-Write	Read-Write

- WebDAV


Group	Member	Result
Deny-Access	Deny-Access	Deny-Access
	Read-Only	Deny-Access
	Read-Write	Deny-Access
Read-Only	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Only
Read-Write	Deny-Access	Deny-Access
	Read-Only	Read-Only
	Read-Write	Read-Write

- UNIX/LINUX: Assing the IP address in the New IP Addrss box then click the **Add** button for sharing. Enter *.*.* if all IP addresses are allowed fo sharing.

When done, click the **Save** button.


3.6.6 Backup

1. Click **NAS tab > Backup**.
2. Select the Backup solution you want by clicking the tab: **Snapshot Backup**, **Remote Backup**, **Local Backup**, **Client Backup**, and **Amazon S3**.

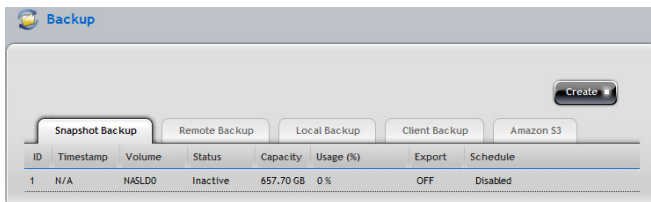

• Snapshot Backup

1. Click **NAS tab > Backup > Snapshot Backup** tab.
2. Click the **Create** button and complete the required settings in the Create Snapshot window.

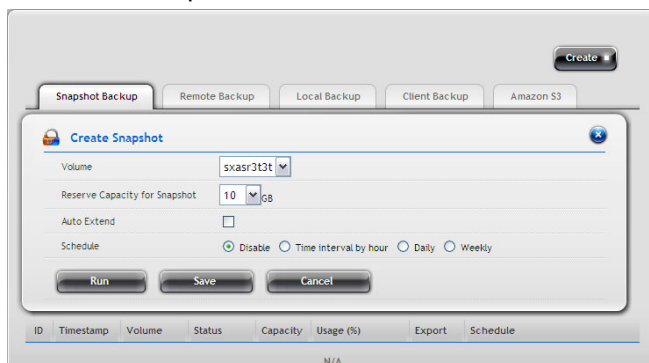

- Volume: Select the desired setting from the dropdown menu.
- Reserve Capacity for Snapshot: From the dropdown menu, assign the reserved capacity for the backup solution.
- Auto Extend: Click to checkbox to enable or disable the function.

-
- Schedule: Select one of the schedule types you want for the backup solution.
 - Disable – no snapshots will be taken.
 - Time interval by hour – snapshots will be taken at the hourly interval you choose from the dropdown menu.
 - Daily – snapshots will be taken at the time of day you choose from the dropdown menus.
 - Weekly – snapshots will be taken on the day of the week, at the time of day you choose from the dropdown menus.
 - 3. When done, click the **Run** button. The new backup schedule is applied.
 - 4. To change the settings of the backup solution, move you mouse over the item you want and click the option button.
 - Recovery: Click to restore the data volume using the Snapshot.
 - Export: Click to export the Snapshot to the share folder.
 - Settings: Click to change the settings of the backup solution.
 - Delete: Click to delete the backup solution.

• Remote Backup


1. Click **NAS tab > Backup > Remote Backup** tab.
2. Click the **Create** button and complete the required settings in the Create Remote Backup window.

ID	Source Path	Backup Server	SSH	Snapshot	Schedule
0	DOWNLOAD	10.90.0.123	No	Yes	No

- Source Path
- Backup Server: Enter the IP address of the remote backup server.
- Port: Enter the port number for the remote backup server.
- User Name: Enter the user name to login the remote backup server.
- Password: Enter the password to login the remote backup server.
- Enable SSL: Select this option if the server requires SSL.
- Snapshot: Select this option if you want to upload snapshot of backup to the server.
- Schedule: Select one of the schedule types you want for the backup solution.
 - Disable – no snapshots will be taken.
 - Time interval by hour – snapshots will be taken at the hourly interval you choose from the dropdown menu.
 - Daily – snapshots will be taken at the time of day you

choose from the dropdown menus.

- Weekly – snapshots will be taken on the day of the week, at the time of day you choose from the dropdown menus.
3. When done, click the **Run** button. The new backup schedule is applied.
- You can click the **Test** button to test the server before applying the settings.
4. To change the settings of the backup solution, move you mouse over the item you want and click the option button.

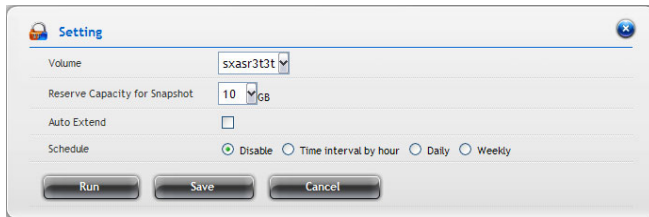


- Volume: Select the desired setting from the dropdown menu.
- Reserve Capacity for Snapshot: From the dropdown menu, assign the reserved capacity for the backup solution.
- Auto Extend: Click to checkbox to enable or disable the function.
- Schedule: Select one of the schedule types you want for the backup solution.
 - Disable – no snapshots will be taken.
 - Time interval by hour – snapshots will be taken at the hourly interval you choose from the dropdown menu.
 - Daily – snapshots will be taken at the time of day you choose from the dropdown menus.

Weekly – snapshots will be taken on the day of the week, at the time of day you choose from the dropdown menus.

- **Local Backup** enables you to change the backup services of the SmartStor and the USB storage device. To set the Local Backup settings:


Notes:

- The USB port on the front panel of the device supports Flash drive, which **ONLY** allows you to backup the data/file from the Flash drive to the SmartStor.
 - The four USB ports on the back panel **ONLY** allows you to backup the data/file from the SmartStor to the Flash drive.
 - Accessible
 - MBR partition (Maximum 2TB)
 - GPT partition
 - File system: FAT(32), NTFS, XFS, EXT3, HFS+
 - Format
 - MBR partition (Maximum 2TB)
 - File system: FAT32, NTFS, XFS
1. Click **NAS tab > Backup > Local Backup** tab.
 2. Move you mouse over the USB device you want and click the **Settings** button.

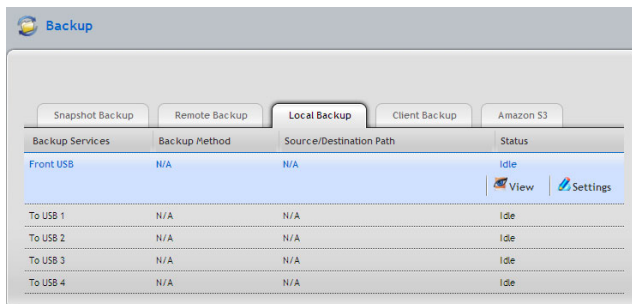


3. Complete the required settings in the Setting window.
 - Select the **Enable Services** checkbox to enable the backup solution.
 - Select a **Backup Method** you want from the dropdown menu: Add Directory, Copy, or Synchronize.
 - Select a **Folder Name** you want from the list.

-
4. When done, you can:
- click the **Save** button to apply the settings.
 - click the **Run** button to backup immediately.
 - set the backup schedule by selecting one of the schedule types you want for the backup solution.

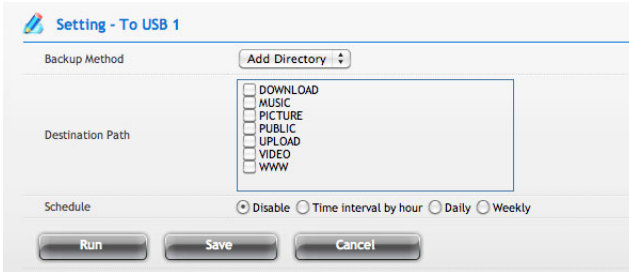

5. To change the settings of the backup solution, move you mouse over the item you want and click the **Settings** button.
- **Client Backup** allows you to enable One-Touch Backup function.
 1. Click **NAS** tab > **Backup** > **Client Backup** tab.
 2. Select the **One Touch Backup** checkbox to enable the backup solution.
 3. Click the **Save** button.


4. Now you can backup specified folders from your PC to the SmartStor by simply pressing a button on the front of the SmartStor.

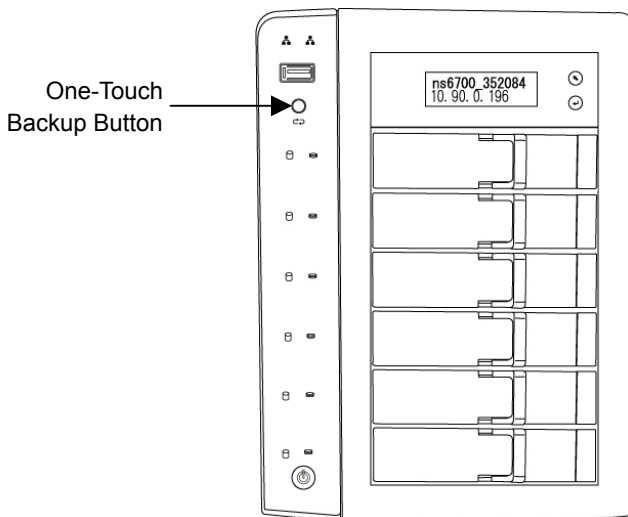

5. To disable One Touch Backup, uncheck **One Touch Backup** and then click the **Save** button.

- **Amazon S3** allows you to upload backup files to Amazon S3 server.

1. Click **NAS** tab > **Backup** > **Amazon S3** tab.
2. Click the **Create** button and complete the required settings in the Create Amazon S3 Backup window.

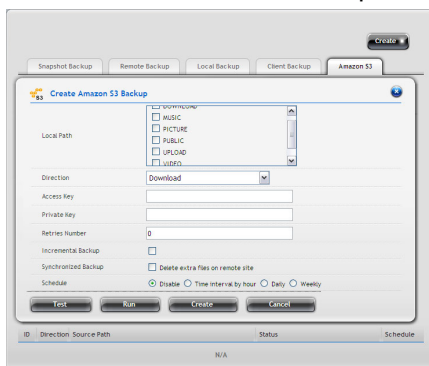

-
- Local Path
 - Direction: Select Download (from Amazon S3 to device) or Upload (from device to Amazon S3).
 - Access Key: Enter the Access key for the Amazon S3 server.
 - Private key: Enter the Private key for the Amazon S3 server.
 - Retries Number
 - Increment Backup: Select this option and the backup will add the updated files only.
 - Synchronized Backup: Select this option and the backup will delete the extra files while synchronizing.
 - Schedule: Select one of the schedule types you want for the backup solution.
 - Disable – no snapshots will be taken.
 - Time interval by hour – snapshots will be taken at the hourly interval you choose from the dropdown menu.
 - Daily – snapshots will be taken at the time of day you choose from the dropdown menus.
 - Weekly – snapshots will be taken on the day of the week, at the time of day you choose from the dropdown menus.
3. When done, click the **Run** button. The new backup schedule is applied.

You can click the **Test** button to test the server before applying the settings.
 4. To change the settings of the backup solution, move your mouse over the item you want and click the option button.

3.6.7 Plug-in Management


1. Click **NAS** tab > **Plug-in**.
2. Click the **Add** button to add a plug-in for the NAS:
 - a. Click the **“Choose File”** button to locate the plug-in file.
 - b. Click the **Install** button to start installing the plug-in.

3. In the Plug-in list, move your mouse over the item and you can:

No	Name	Status
1	BT Server	Stoped  Open  Stop  Re-Install
2	DLNA Server	Started
3	Firefly Media Server	Started
4	MySQL Server	Started
5	Web File Manager	Started

- Display the plug-in application in a new window by clicking the **Open** button.
- Stop the plug-in application by clicking the **Stop** button.
- Re-install the plug-in application by clicking the **Re-Install** button.

1. Click **NAS** tab > **iSCSI Initiator**.
2. Click the **Create** and complete the required settings in the Create Snapshot window.

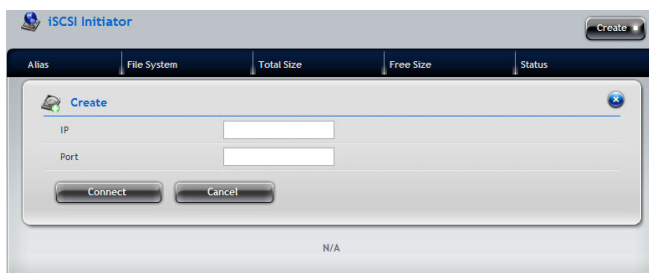

- IP
 - Port
3. When done, click the **Connect** button. After successful login, you can start to use the disk volume on SmartS as a virtual drive on your computer.

Chapter 4: SmartNAVI

4.1 Working with SmartNAVI

The SmartNAVI software connects your PC to the SmartStor, performs backups, changes the network settings, create RAID volumes, add and mounts folders, and manages file downloads from the Internet.

4.1.1 Opening the Main Window


1. To open the Main Window, do the following actions:
 - If neither Window is open -
Double-click the **SmartNAVI** icon in the Windows application tray or Mac Dock (right).
 - If the **SmartNAVI** Window is open -
Double-click a system in the Device List.



2. When the SmartNAVI Window opens, double-click a system in the Device List.




3. When the login window appears, enter the user name and password. Click **Login** then **Yes** to login the system.
The default user name is "administrator" and default password is "password". The user name and password are case sensitive.

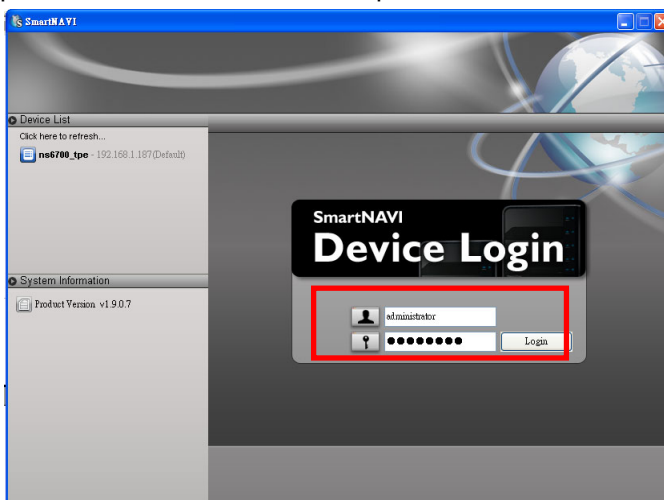

4. The Main Window opens, which contains the management

features of SmartNAVI.

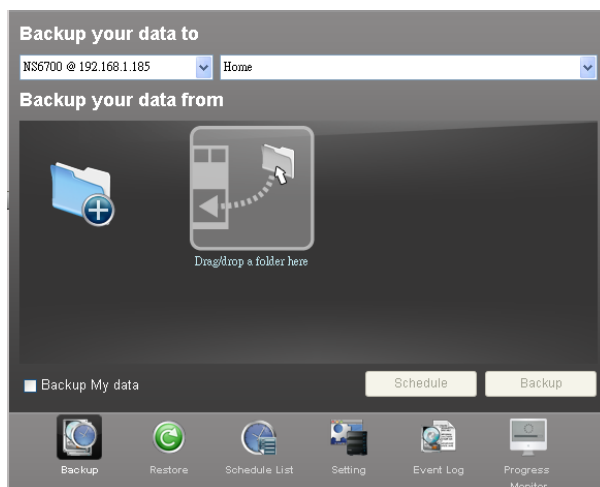


4.1.2 Choosing a SmartNAVI Language

On Windows PCs, SmartNAVI chooses the display language automatically based on your OS language setting. On Macs, you choose the display language.

To choose a language:

1. Open the **SmartNAVI Window**.
2. From the dropdown menus, choose **Function > Language**, then choose the the language you prefer.

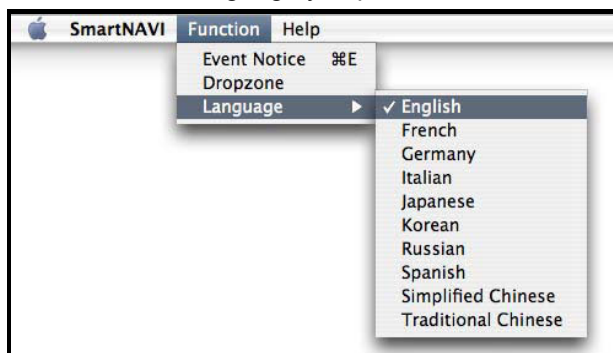


4.1.3 Starting the Advanced Storage Manager (PASM)

This feature opens Promise Advanced Storage Manager (PASM) in your default browser. See the PASM online help or “Chapter 5: PASM” on page 193 for more information.

Main Window

1. Right-click the system in the **Device List** that you want to open in PASM.

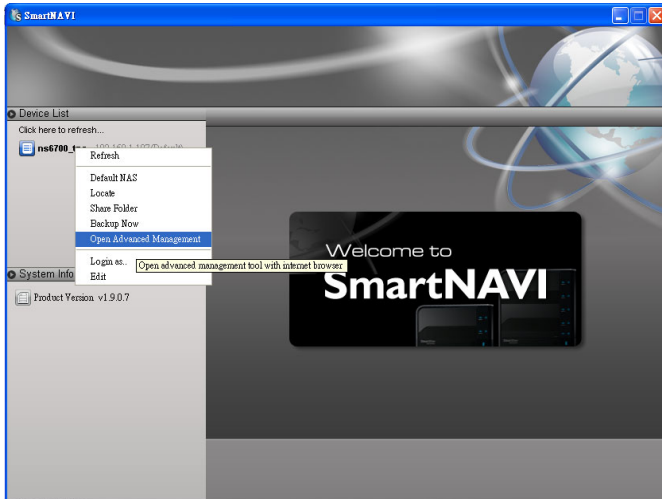

-
2. Choose the **Open Advanced Management** item. The PASM login screen appears in your browser.




4.1.4 Viewing SmartNAVI Information

SmartNAVI is the software application that connects your PC with the SmartStor

NAS system.


To view information about SmartNAVI on Windows:

1. Right-click the **SmartNAVI** icon in the application tray.
2. Choose **About** from the popup menu.

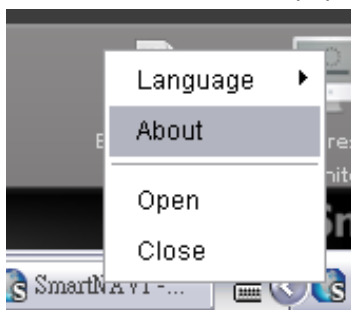

To view information about SmartNAVI on Mac:

From the dropdown menus at the top of the screen, choose **Help > About**.

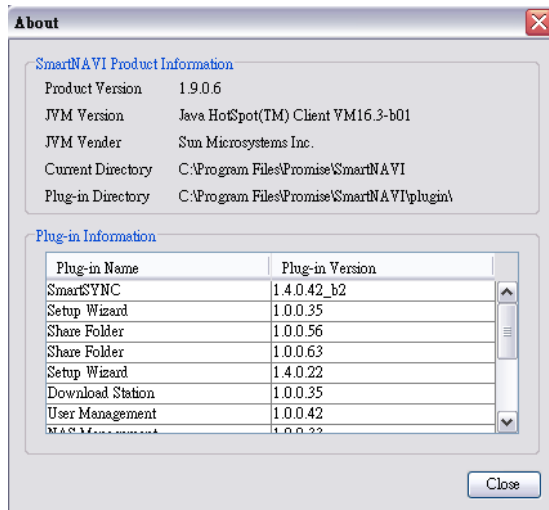

The About window appears and lists the following information:



- SmartNAVI Version number
- Java Virtual Machine (JVM) Version number
- JVM Vendor name
- SmartNAVI installation directory on your PC
- SmartNAVI Plug-in directory on your PC
- Names of installed Plug-ins
- Version numbers of installed Plug-ins

When you are done with the **About** window, click the **Close** button.

4.1.5 Closing SmartNAVI


To close SmartNAVI:

Click the close icon on the Main Window.

- Windows  icon in the top right corner
- Mac  icon in the top left corner

For Windows PCs, if you close SmartNAVI this way, you can open it from the application tray icon.


On Macs, you can always open SmartNAVI from the Dock icon.

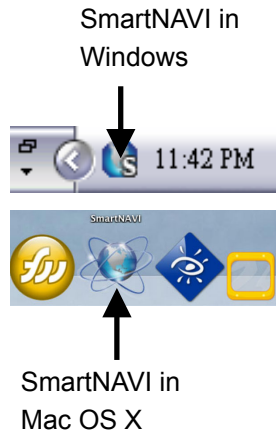


Alternative Method for Windows

To close SmartNAVI:

1. Right-click the SmartNAVI icon in the application tray.
2. Choose Close from the popup menu.

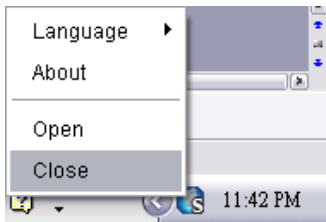

If you close SmartNAVI this way, you must open it from the Start menu.

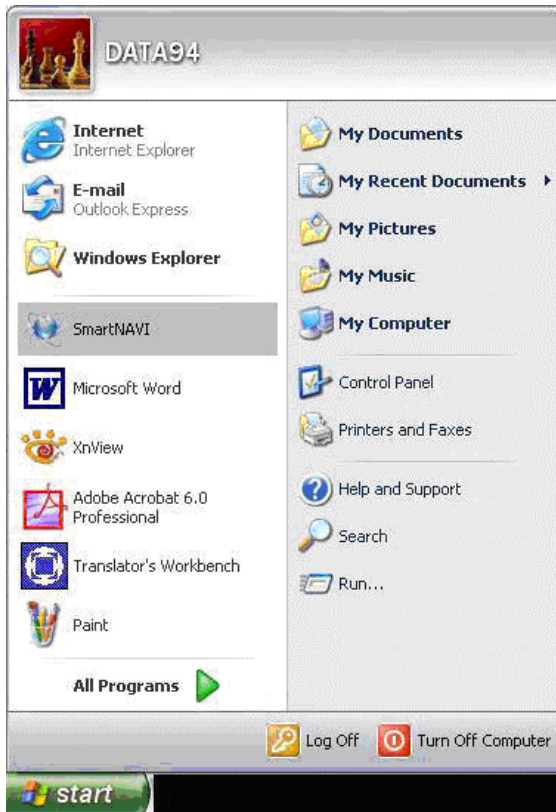

4.2 Managing Backups



Caution

Please do not close the SmartNAVI or logout the MS Windows system while you are setting a scheduled backup or running the backup process. It will discontinue backup process.

4.2.1 Doing a Backup Now

This feature enables you to perform an immediate schedule backup of your files from your Windows or Mac to the NAS system (SmartNAVI).

You can perform an immediate backup of your files from:


- SmartNAVI Main Window
- SmartNAVI Device List
- SmartNAVI tray icon (Windows PCs only)
- One Touch Button

Main Window

If you do not have a backup schedule for your PC, start your backup from the SmartNAVI Main Window.


1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon.
3. Click the **Backup** button.
4. Under Backup your data to, choose:


- The NAS or Local drive (your PC or MAC) from the first dropdown menu.
- The letter designation of your PC or MAC drive under the second dropdown menu.

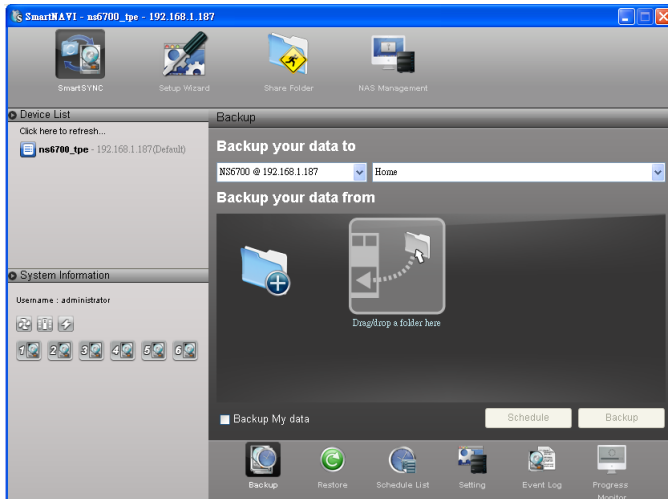


5. Do any of the following actions to select your backup folders:

- Check the **Backup My Data** box – Selects the My Documents, Favorites, and Desktop folders with all their contents.

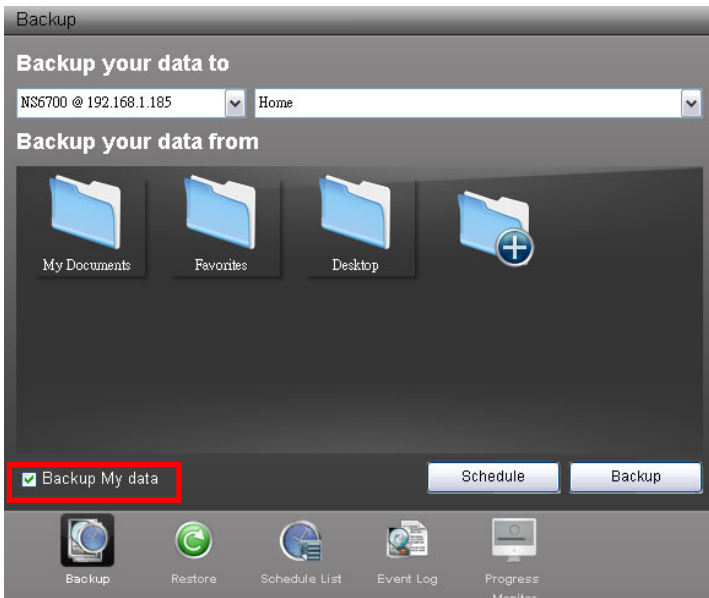

- Click the **Add to Backup**  icon – Opens the My Documents folder. Click a folder you want to backup, and then click the **Choose** button. Repeat for additional folders.

- Drag and drop the folders you want to backup to the **Backup your data from** window.

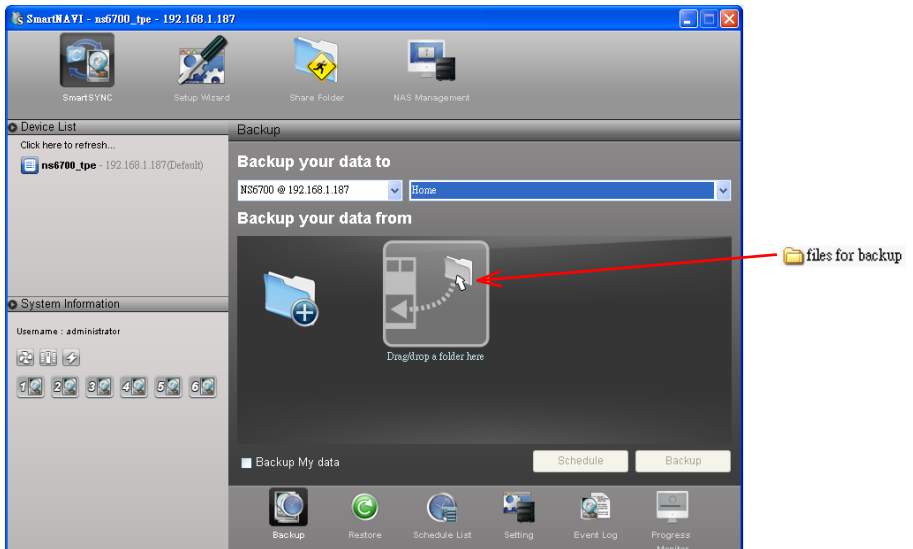

6. Click the **Backup** button.
The backup begins immediately.

Device List

Before you can do a backup from the SmartNAVI Main Window, you must create a backup schedule.

1. Go to the **Main Window**.
2. Right-click the system in the **Device List** whose backup you want to run.
3. Choose the **Backup Now** item.

The backup begins immediately.



Tray Icon

Before you can do a backup from the SmartNAVI tray icon, you must create a backup schedule and setup default NAS first. This feature applies to Windows PCs only.

1. Right-click the **SmartNAVI** icon in the application tray.
2. Choose **Backup Now** in the popup menu.

The backup begins immediately.

The amount of time required depends on the size and number of files being backed up.

The backed up files will appear on the NAS system (SmartNAVI) in a folder named **BACKUPDATA_ your username**.

You can restore the backup files to your PC at any time.


See “Restoring Backed-up Files” on page 109.

4.2.2 Scheduling a Backup

You can schedule backups by the hour, day, or week.


To set a schedule for backing up files from your PC to the NAS system (SmartNAVI):


1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon.
3. Click the **Backup** button.
4. Under Backup your data to, choose:
 - The NAS or Local drive (your PC or MAC) from the first dropdown menu.
 - The letter designation of your PC or MAC drive under the second dropdown menu.

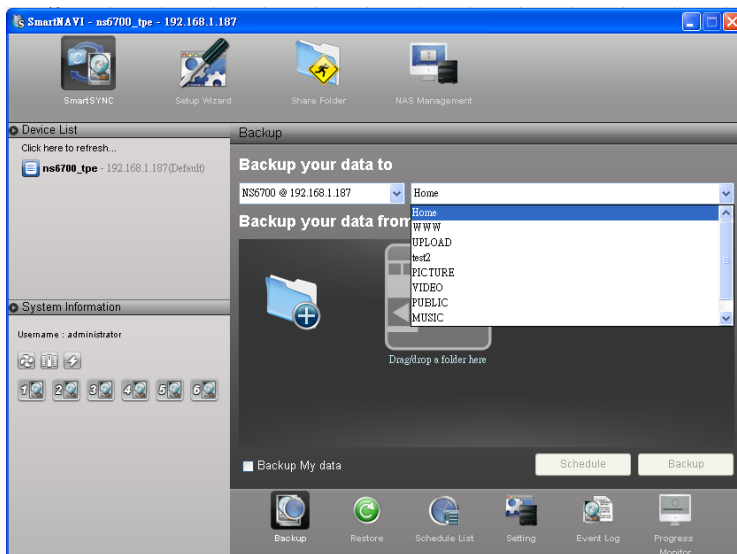


5. Do any of the following actions to select your backup folders:

-
- Check the **Backup My Data** box – Selects the My Documents, Favorites, and Desktop folders with all their contents.

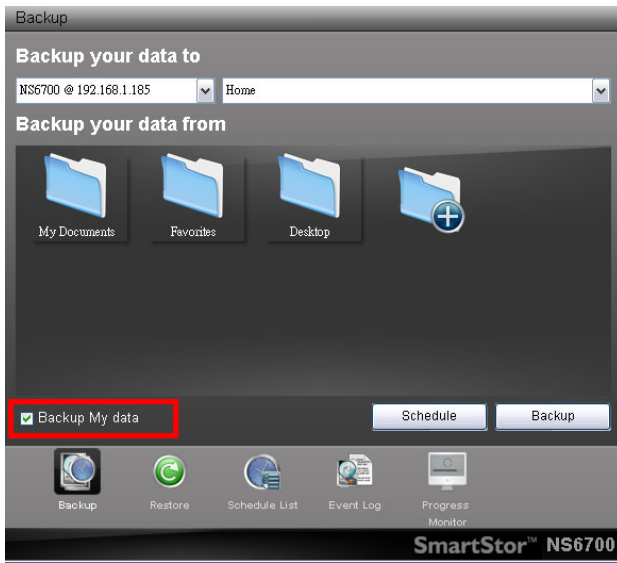


- Click the **Add to Backup**  icon – Opens the My Documents folder. Click a folder you want to backup, and then click the **Choose** button. Repeat for additional folders.

- Drag and drop the folders you want to backup to the **Backup your data from** window.

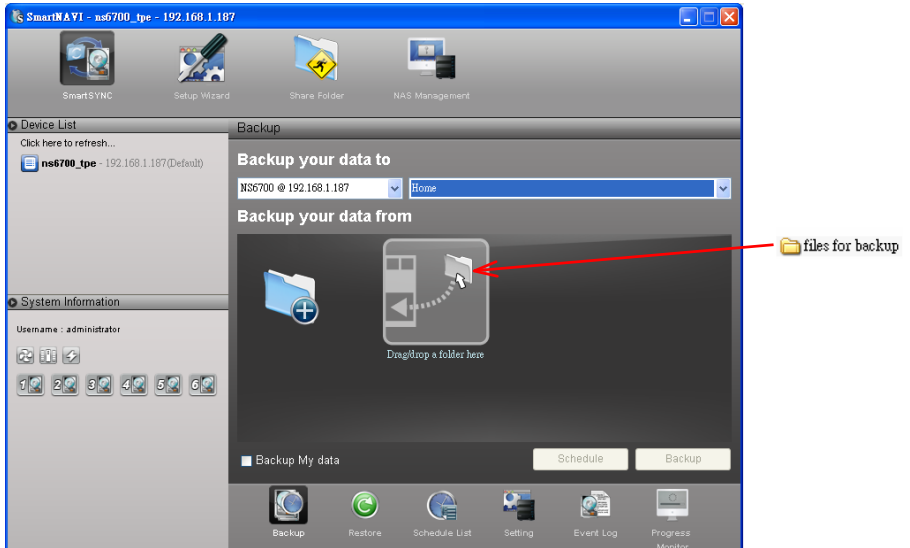


-
6. Click the **Schedule** button.

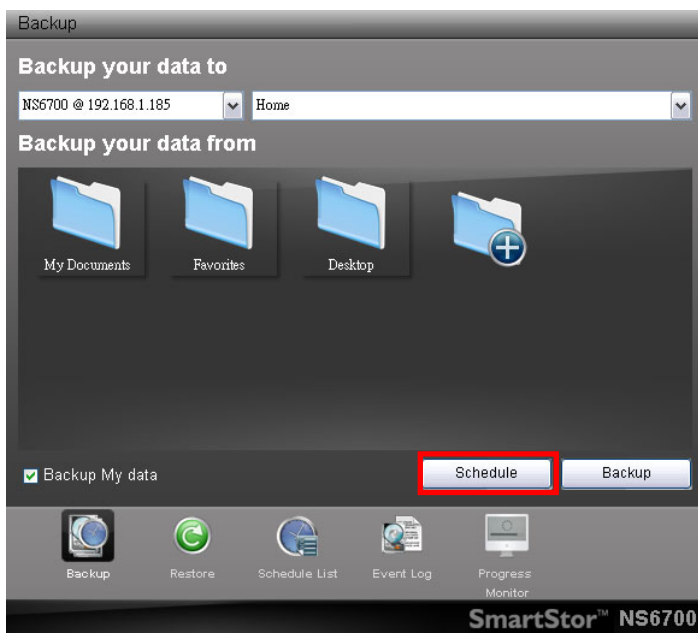


7. Click an option button for:
- Hour
 - Day
 - Day of the week
8. Choose the corresponding values from the dropdown menus:
- Number of hours
 - Time of day in hours and minutes
 - Time of day and day of the week

9. Click the **Add** button.

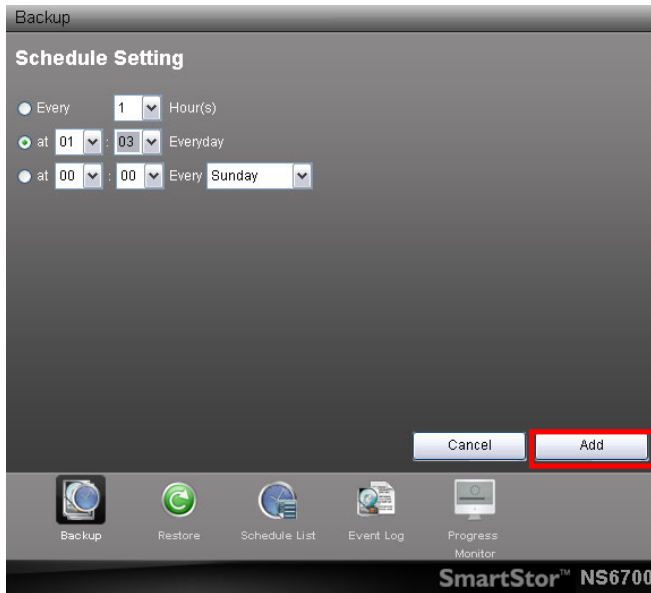

The newly created schedule appears in the **Schedule List**.

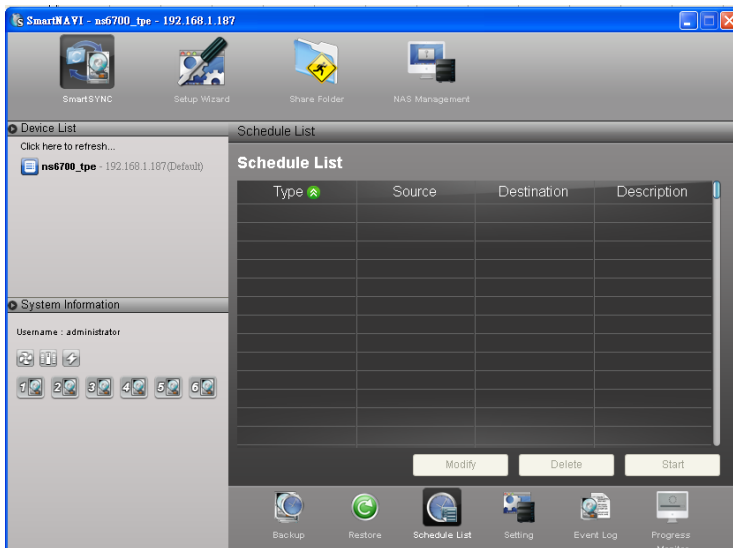

The backed up files will appear on the NAS in a folder named **BACKUPDATA_**your username.


You can also click the **Start** button to run a scheduled backup immediately.

4.2.3 Viewing Backup Schedules

To view the list of current schedules:

1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon.
3. Click the **Schedule List** button.

The list of all backup schedules appears.

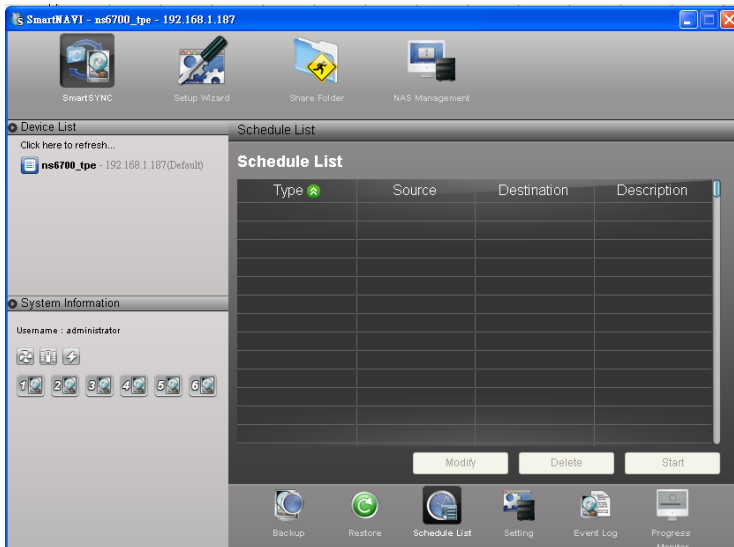


4.2.4 Changing a Scheduled Backup

You can schedule backups by the hour, day, or week.

To change the scheduled backup of files from your PC to the NAS system (SmartNAVI):


1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon. (A)

3. Click the **Schedule List** button. (B)
4. Click the schedule you want to change. (C)
5. Click the **Modify** button. (D)

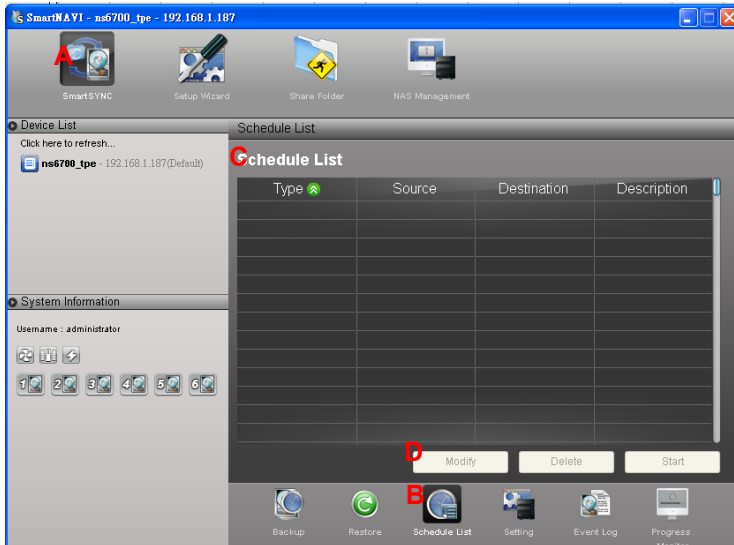


6. Click the folder whose contents you want to backup.




Click the **Add to Backup**  icon to expand the tree and narrow your choices.

7. Click the **Schedule** button.
8. Click an option button for:
 - Hour
 - Day
 - Day of the week
9. Choose the corresponding values from the dropdown menus:
 - Number of hours
 - Time of day in hours and minutes
 - Time of day and day of the week
10. Click the **Add** button.

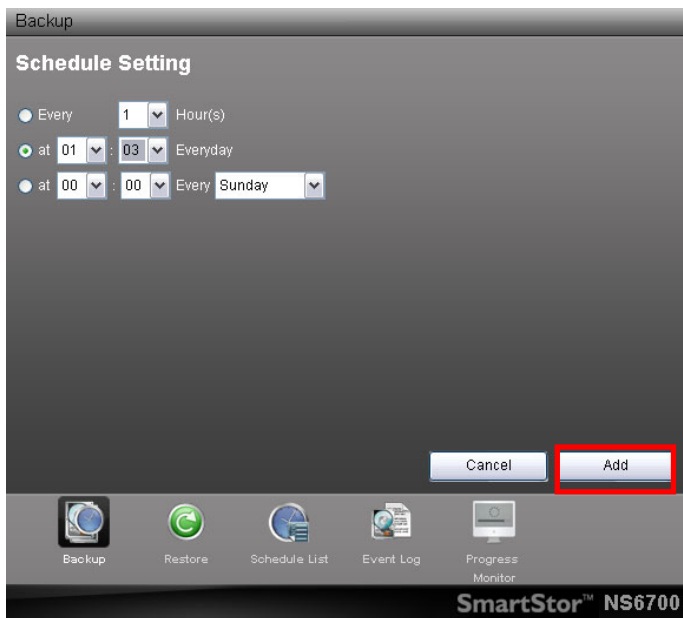

The modified schedule appears in the **Schedule List**.

You can also click the **Start** button to run a scheduled backup immediately.

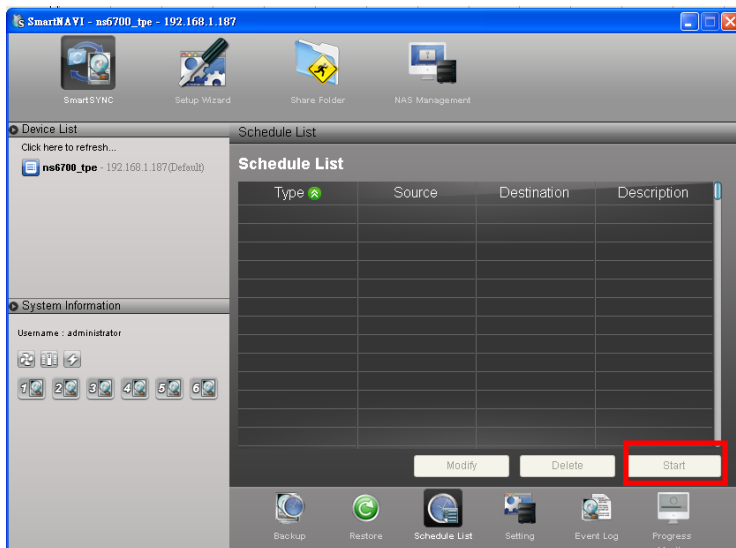


4.2.5 Deleting a Scheduled Backup

Deleting a scheduled backup has no effect upon any files previously backed-up to the NAS system (SmartNAVI).


To delete a scheduled backup:

1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon. (A)
3. Click the **Schedule List** button. (B)
4. Click the schedule you want to delete. (C)

5. Click the **Delete** button. (D)

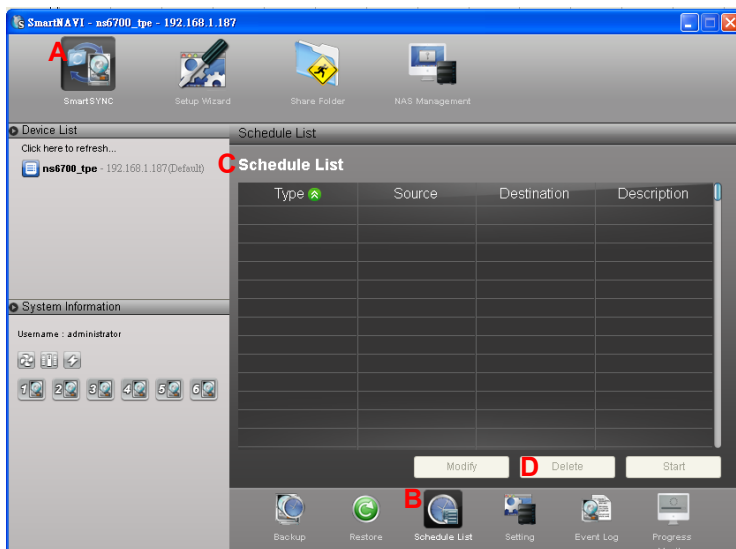

6. Click the **Yes** button in the confirmation box.

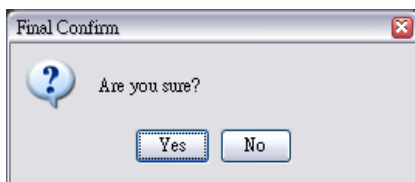

4.2.6 Restoring Backed-up Files

You can restore all or any portion of the files in the **BACKUPDATA_your username** folder on the NAS system (SmartNAVI).

You can choose to restore the files to:

- Their original location on your PC or MAC
- An alternative location on your PC or MAC

The original file structure is maintained during backup and restoration.


Caution



If you restore to the original folders on your PC, the restore function will overwrite the files in those folders. Be careful which files you restore and where on your PC you direct the backup files.

To restore your backed-up files from the NAS system to your PC:


1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon. (A)
3. Click the **Restore** button. (B)
4. Click the folder whose contents you want to restore. (C)
Click the arrow icons to expand the tree and narrow your choices. (D)
5. Click an option button for:
 - Restore to original folder - The backup files will overwrite the files on your PC (E)
 - Restore to a specific folder - No files are overwritten on your PC (E)

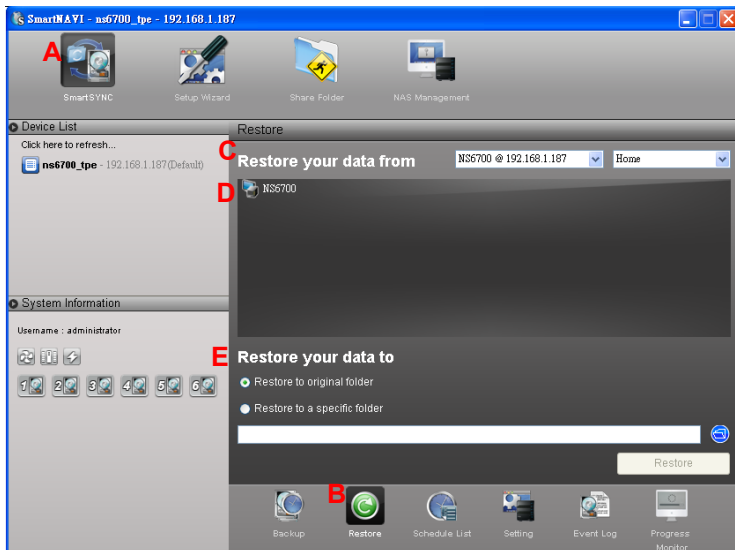

6. If you chose **Restore to a specific folder**, do one of the following actions:


- Type the name of an existing folder in the field provided
- Type the name of an new folder in the field provided
- Click the Folder icon - Opens the My Documents folder. (F)

Click a folder you want to use for a target, then click the **Open** button (G)

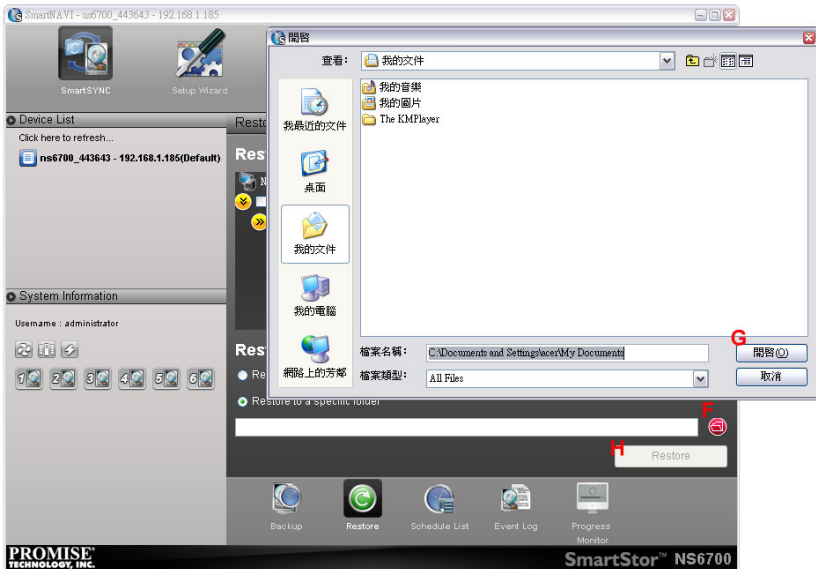

7. Click the **Restore** button. (H)

8. Click the **Yes** button in the confirmation box.

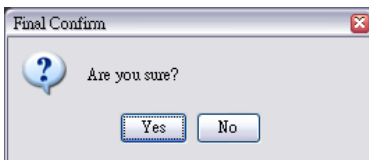

The restoration begins immediately.

The amount of time required depends on the size and number of files being restored.

4.2.7 Viewing the Backup Event Log


Backup events report on backups, schedules, and file transfers.

Events are reported by date, time, severity (information or error) and description.

To view Backup Event Log:

1. Go to the Main Window.
2. Click the SmartSYNC icon. (A)
3. Click the Event Log button. (B)
4. Optional. Set the Event Filter dropdown menu to display: (C)
 - All events
 - Information events only
 - Error events only

-
5. Optional. Click the arrow on the **Date/Time** header to reverse the chronological order. (D)

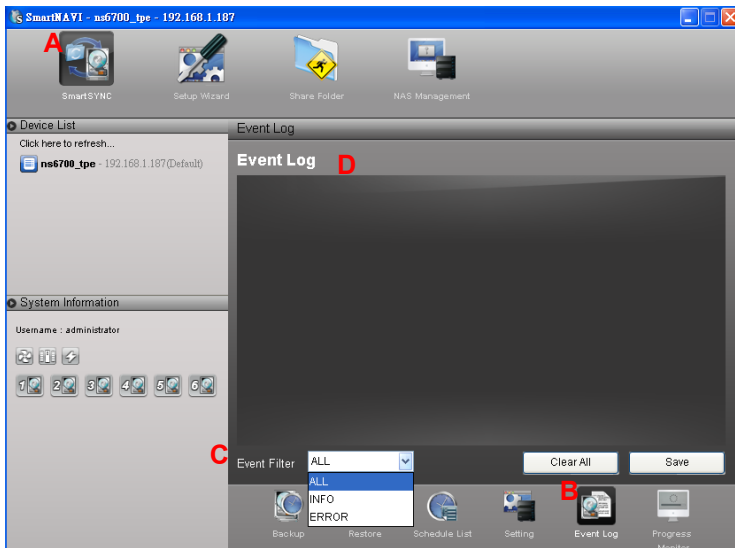

Note

For NAS system events, see “Viewing the System Event Log” on page 143.

4.2.8 Saving the Event Log

This function saves a copy of the Backup Event Log as a text file onto your PC.

The text file records the events displayed in the Event Log window.


Set the Event Filter dropdown menu to display:

- All events
- Information events only
- Error events only

Click the arrow on the **Date/Time** header to reverse the chronological order.

To save a copy of the Backup Event Log as a text file:

1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon.
3. Click the **Event Log** button.
4. Click the **Save** button.

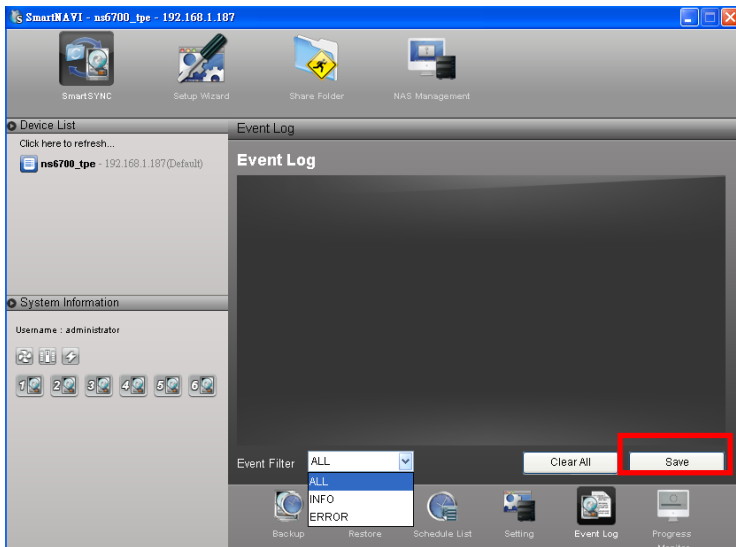

5. Optional. Change the file name or save to a different location.
6. Click the **Save** button in the Save dialog box.

4.2.9 Clearing the Event Log




Note


Before you clear the Backup Event Log, consider saving a copy for future reference. See “Saving the Event Log” on page 113 .

To clear the Backup Event Log:

1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon.
3. Click the **Event Log** button.
4. Click the **Clear All** button.

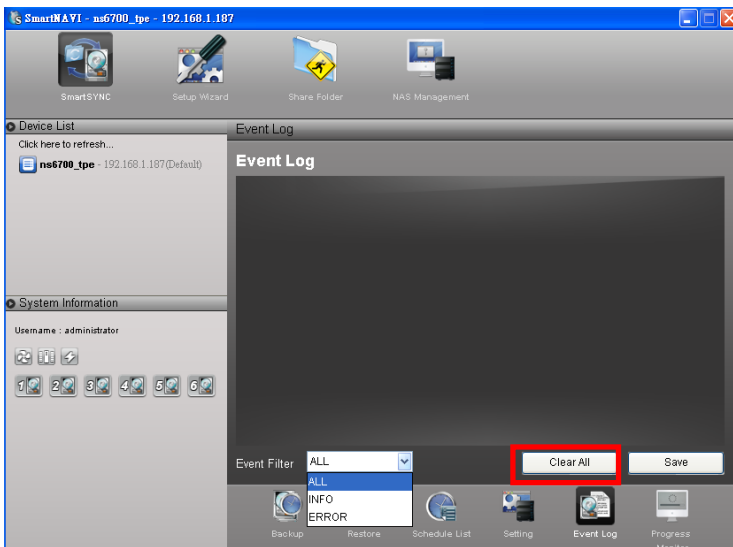

5. Click the **Yes** button in the confirmation box.

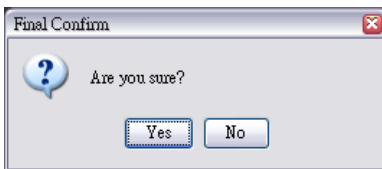

4.2.10 Setting the Port

By using port setting, the public services like a WWW server or an FTP server, and others running on your private network may become accessible from the Internet.

To set the Port:

1. Go to the **Main Window**.
2. Click the **SmartSYNC** icon. (A)
3. Click the **Setting** button. (B)
4. Type the Port number in the field provided. The default number is 873. (C)
5. Click the **OK** button. (D)

The setting begins immediately.

6. Click the **OK** button in the confirmation box. The Setting is successful.

4.3 Managing Share Folders

4.3.1 Opening a Share Folder

This feature opens share folders in the file browser.

From the **Device List**:

1. Right-click the system in the **Device List** whose share folders you want to open.


2. Choose the **Share Folders** item.



All share folders open in your PC's file browser.

From the **Main Window**:

1. Click the **Share Folder** icon.

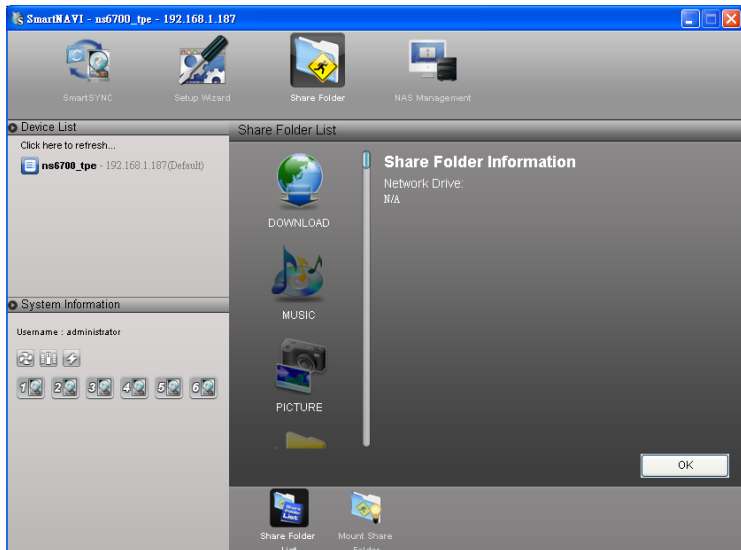

2. Double-click the folder in the **Share Folder List** that you want to open.
The share folder opens in your PC's file browser.

From the Tray Icon:


1. Right-click the **SmartNAVI** icon in the application tray.
 2. Choose **Share Folder** in the popup menu.
- All share folders open in your PC's file browser.

4.3.2 Viewing a List of Share Folders


To view a list of Share Folders:

1. Go to the **Main Window**.
2. Click the **Share Folder** icon.
3. Click the **Share Folder List** button.

The Share Folder List appears.

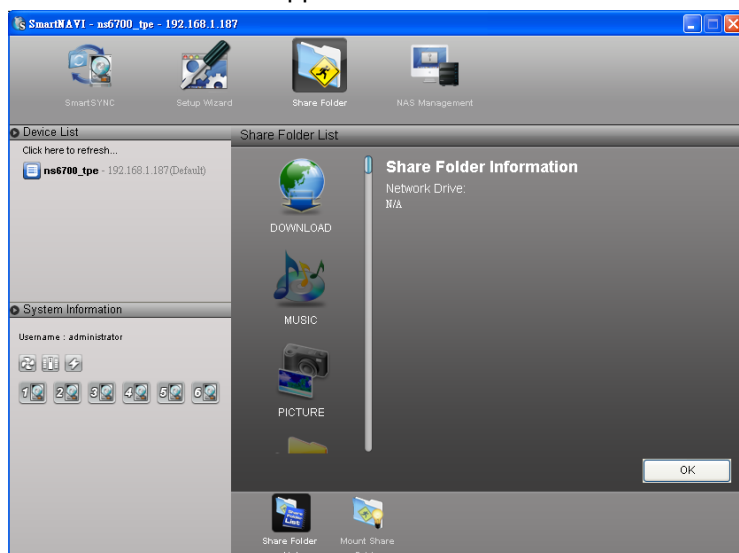


4. Double-click the individual share folder to view its contents.

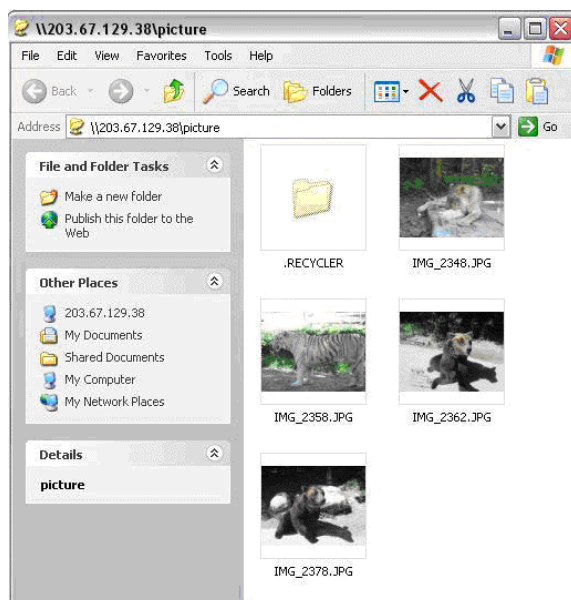

4.3.3 Mounting a Share Folder /Creating a Network Drive

To mount a share folder or create a network drive (Windows):

1. Go to the **Main Window**.
2. Click the **Share Folder** icon. (A)
3. Click the **Mount Share Folder** button. (B)
Click the share folder you want to mount or make a network drive.
(C)
4. The folder name will become highlighted.
5. Choose a device name (drive letter) from the dropdown menu. (D)
6. Click the **Mount** button. (E)

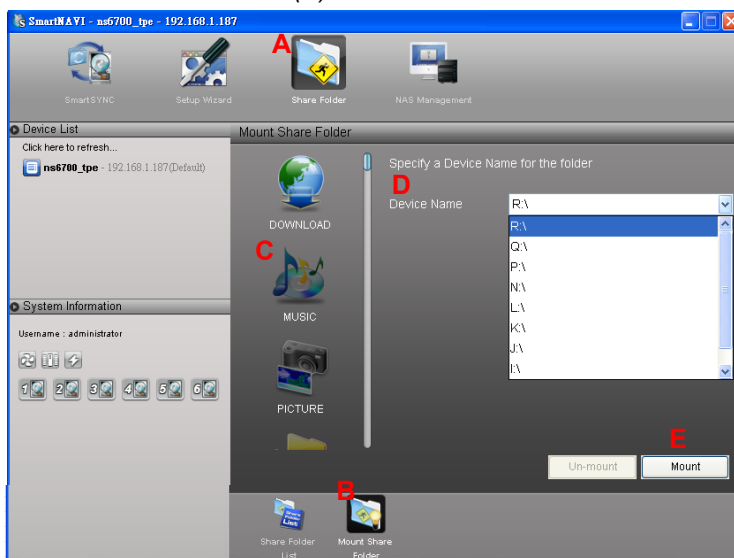


The share folder appears on your PC as a mounted or network drive.


4.3.4 Un-mounting a Share Folder /Disconnecting a Network Drive

To un-mount a share folder or disconnect a network drive (Windows):

1. Go to the **Main Window**.
2. Click the **Share Folder** icon. (A)
3. Click the **Mount Share Folder** button. (B)
4. Click the share folder you want to un-mount or delete as a network drive. (C)
The folder name will become highlighted.
5. Click the **Un-Mount** button. (D)

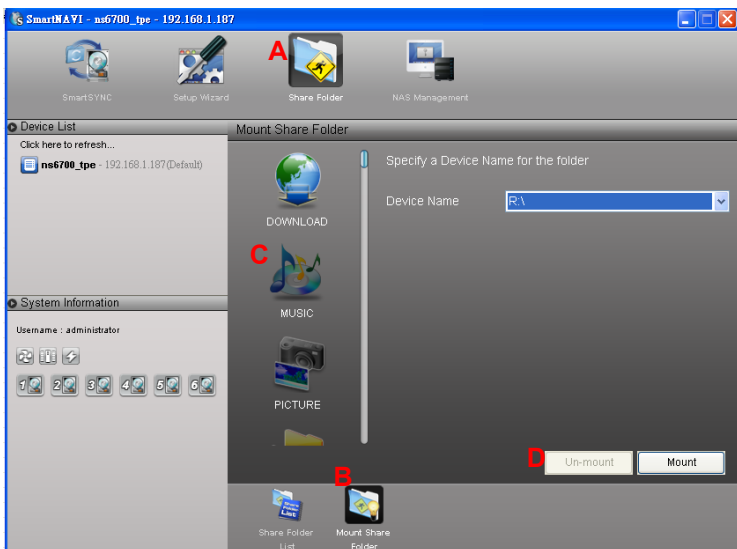

6. Click the **Yes** button in the confirmation box.

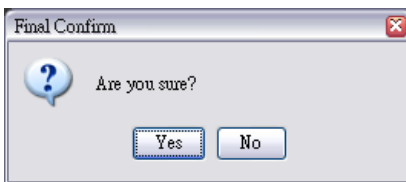

The share folder is un-mounted or disconnected but the link remains (Windows).

4.3.5 Setting up a Share Folder for Time Machine

Time Machine is a backup utility included with Mac OS X 10.5 “Leopard” or more.

Before you begin, be sure your Mac is running and connected to the same network as the SmartStor.

On SmartNAVI

To set up a SmartStor folder for Time Machine backups:

1. Go to the **Main Window**.
2. Click the **Share Folder** icon.
3. Click the **Mount Share Folder** button.
4. Click the share folder you want to use for Time Machine backups.
5. Check the **Support TimeMachine** box.
6. Click the **Mount** button.

If the process goes correctly, the following message appears:

This folder has been set to a network drive.

On the Mac

Follow this procedure if you have not set up Time Machine.

To set up the Mac for backups with SmartStor:

1. On the desktop, go to the Dock and click the **Time Machine** icon. A popup message informs you that no storage location is set up.
2. In the popup message, click the **Set Up Time Machine** button. The Time Machine dialog box appears.
3. In the Time Machine dialog box, click the **Choose Backup Disk...** button.
4. In the list of external drives, choose the share folder that you mounted on the SmartStor and click the **Use for Backup** button. A Name and Password dialog box appears.
5. In the dialog box, enter your username and password of NAS authentication, then click the **Connect** button.

Pre-existing Time Machine Configuration on the Mac

Follow this procedure if you currently have a Time Machine configuration.

To set up the Mac for backups with SmartStor:

1. On the desktop, go to the Dock and click the **Time Machine** icon. The Time Machine dialog box appears.
2. In the Time Machine dialog box, click the **Change Disk...** button.
3. In the list of external drives, choose the share folder that you mounted on the SmartStor and click the **Use for Backup** button. A Name and Password dialog box appears.
4. In the dialog box, enter your username and password, then click the **Connect** button.

4.4 *Making Management Settings*

4.4.1 **Configuring a NAS System**

The Setup Wizard has two modes:

- **One Click Setup** - Loads a collection of default settings.
Recommended for most users.
- **Advanced Setup** - Enables you to make your own settings.
Recommended for advanced users.



Caution


Do NOT run the Setup Wizard on a NAS system that is already configured! That action will delete your data and network drives!

One Click Setup


To configure your NAS system using One Click Setup:

1. Go to the **Main Window**.
2. Click the **Setup Wizard** icon.
3. Click the **One Click Setup** button.

4. Click the **OK** button to continue.

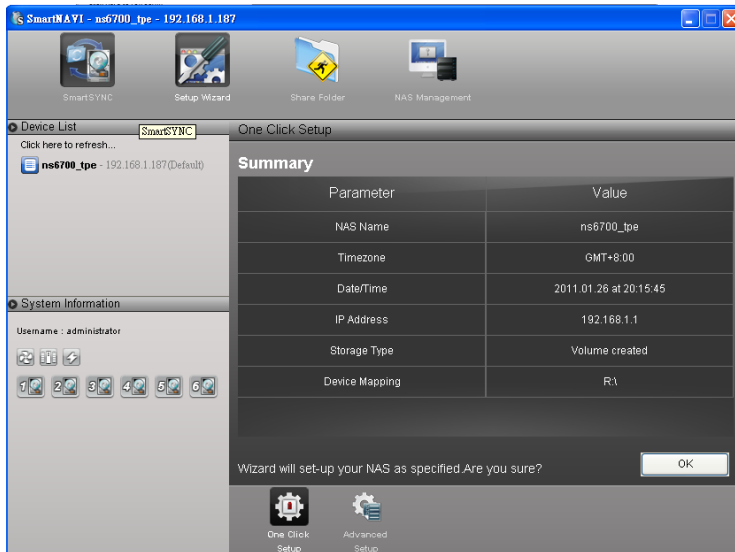

5. Click the **Yes** button in the confirmation box.

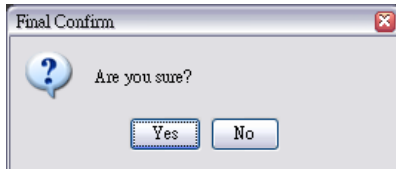

The NAS reboots. Then your RAID volume is ready.

Advanced Setup

To configure your NAS system using Advanced Setup:

1. Go to the **Main Window**.
2. Click the **Setup Wizard** icon. (A)
3. Click the **Advanced Setup** button. (B)
4. Choose **Automatic** (DHCP) or **Manual** network settings. (C)

If you chose **Manual** settings, type entries for each of the following parameters in the fields provided: (D)

- Computer (NAS system) Name
- IP Address

- Subnet Mask
- Gateway
- Primary and Secondary DNS – optional


Click the **Next** button to continue. (E)



5. Choose the following values from their respective dropdown menus:

- Timezone
- Year
- Month
- Day
- Time in Hours, Minutes, and Seconds

Click the **Next** button to continue.

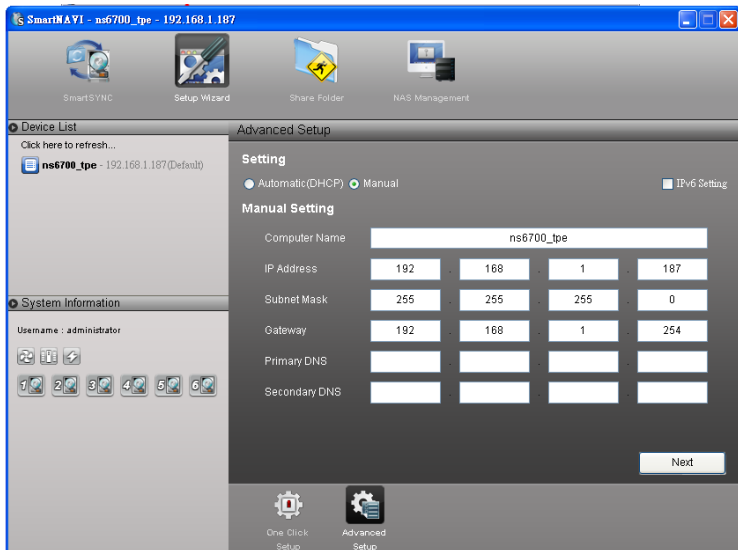


6. Choose Automatic or Manual RAID Volume creation.
If you chose Manual, choose the type of RAID Volume you want:
 - Maximum Capacity and performance - RAID 0, using all disk drives
 - Data Protection - RAID 5, using all disk drivesClick the **Next** button to continue.
7. Choose a network drive letter from the dropdown menu.
This drive will be mapped as a network drive on your PC.
The list begins with S and goes in reverse alphabetical order.

Click the **Next** button to continue.


8. Review your parameters.

To make changes, click the **Previous** button.


To accept the parameters and configure your NAS system, click the **OK** button.

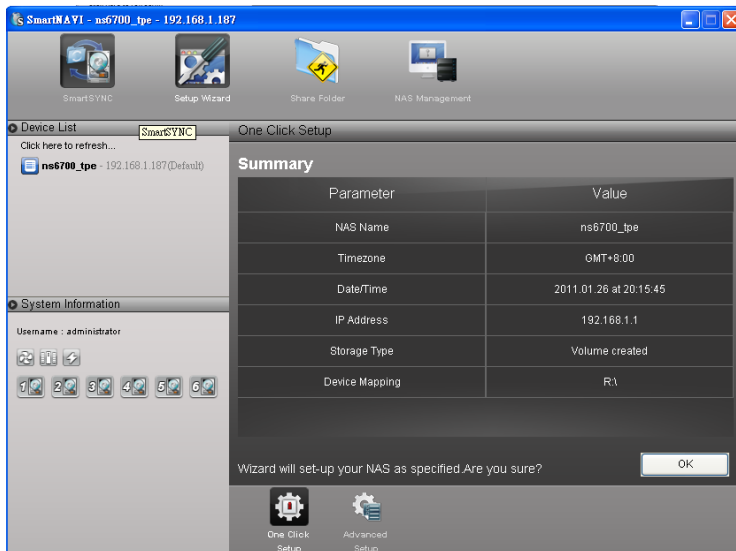

9. Click the **Yes** button in the confirmation box.

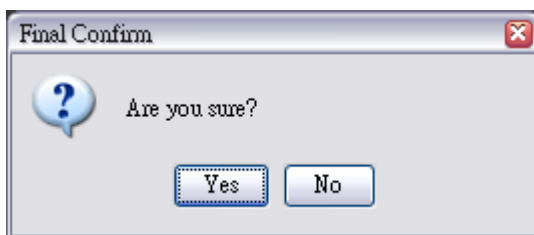

10. The NAS reboots. Then your RAID volume is ready.

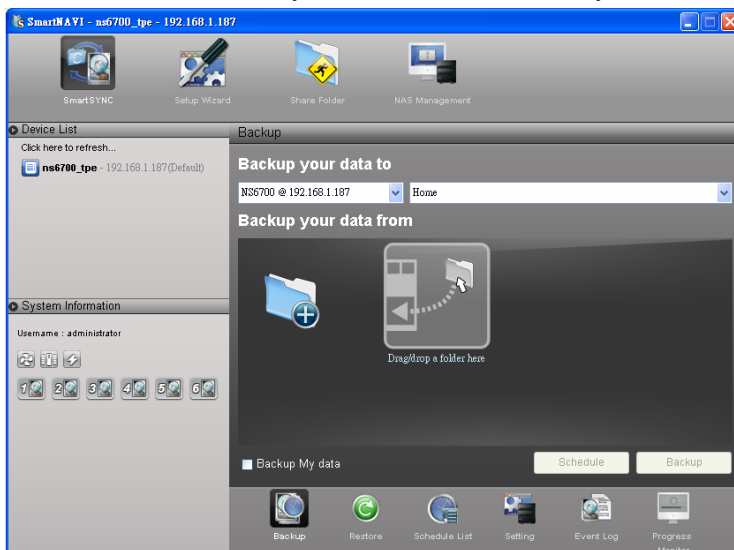

4.4.2 Locating the SmartStor

This feature helps you to physically locate a NAS system.

To locate a SmartStor:

1. Go to the **Main Window**.
2. Right-click the system in the **Device List** that you want to locate.
3. Choose the **Locate NAS** item.

On the NAS system you chose:

- The buzzer sounds three times
- The Status LED blinks RED three times

System Status LED



4.4.3 Wake-on-LAN

This feature allows you to turn on or wake up the SmartStor by locate a NAS system.

To wake up a SmartStor:

1. Go to the **Main Window**.
2. Right-click the system in the **Device List** that you want to wake up.
3. Choose the **Locate NAS** item.

It takes about a minute to boot the SmartStor. When fully booted:

- The System Status LED turns blue.
- The buzzer beeps one time.

4.4.4 Choosing a Default NAS System

This feature sets the default NAS system (SmartStor) for the Main Window and SmartNAVI tray icon. A default NAS activates several important functions, including:

- Share Folder: Opening a Share Folder
- Backup Now: Performing an Immediate Backup
- Open Advanced Management: Starting the Advanced Storage Manager
- Event Notice: Enabling Event Notification

If you do not choose a default NAS, SmartNAVI sets the default NAS after you first log on.

To set a default NAS:

1. Go to the **Main Window**.
2. Right-click the system in the **Device List** that you want to make the default.
3. Choose the **Default NAS** item.

The default NAS is highlighted in the Device List.



4.4.5 Viewing the System Event Log


NAS events report functions and status of the NAS system. The Event Log displays the 20 most recent events.

Events are reported by date, time, severity (information or warning) and description.

To view the NAS systemis Event Log:

1. Go to the **Main Window**.
2. Click the **Smart SYNC** icon.
3. Click the **Event Log** button.

Click the arrow on the **Date/Time** header to reverse the chronological order.

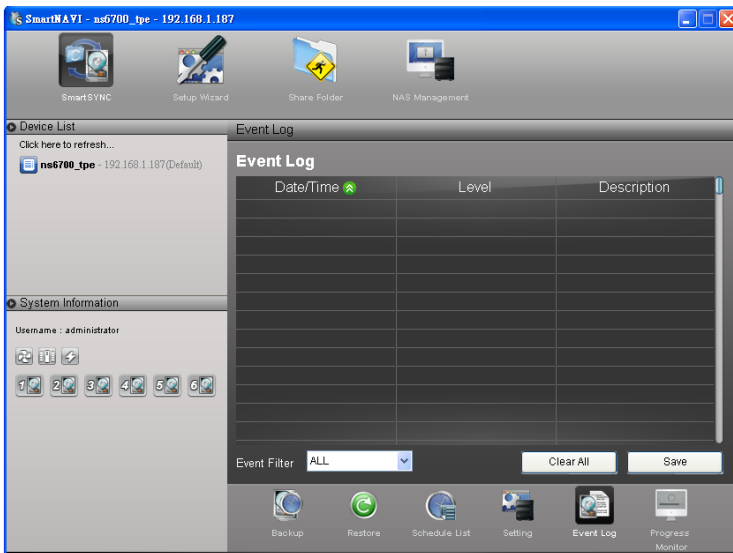

Note

For backup system events, see “Viewing the Backup Event Log” on page 112.




Warning

Do not disconnect the power or shut down the SmartStor while the plug-in installation is running!


4. Click the **Configure Plugin** button.
The newly added plug-in appears in the list. Its Service Status is OFF.
5. Click the plug-in to choose it.
The plug-in's name will become highlighted.

-
6. Click the **Enable** button.

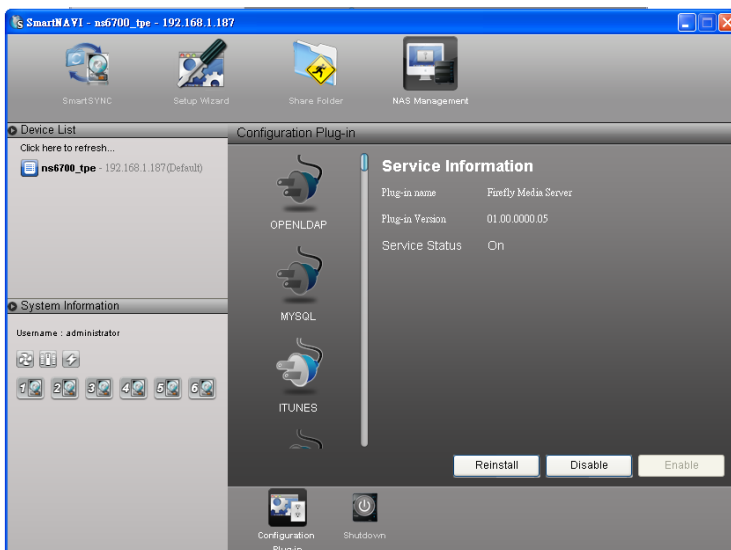

After a moment, the Service Status changes to ON.

The plug-in is now installed SmartStor.

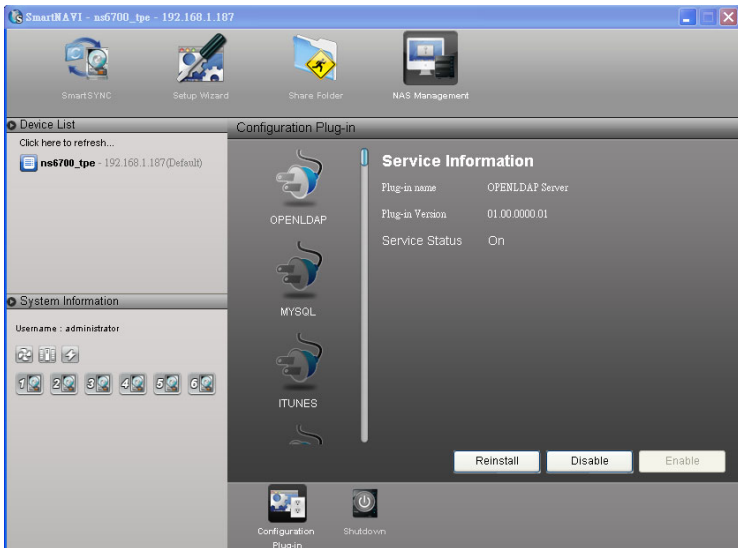


4.4.6 Viewing a List of Plug-ins

To view a list of installed plug-ins:

1. Go to the **Main Window**.
2. Click the **NAS Management** icon.
3. Click the **Configuration Plugin** button.


Currently installed plug-ins appear in the **Configuration Plugin** list.

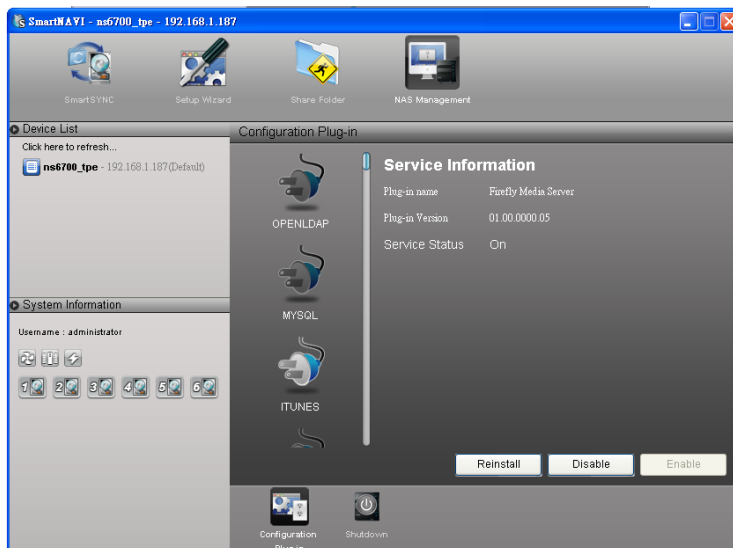

4.4.7 Viewing Plug-in Version Numbers

To view plug-in version numbers:


1. Right-click the **SmartNAVI** icon in the application tray.

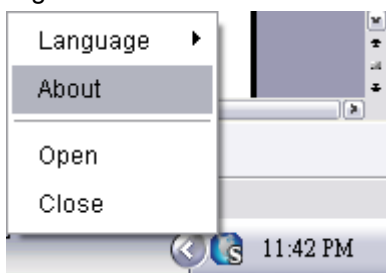

2. Choose **About** from the popup menu.

The About window appears. The About window includes a list of installed plug-ins and their version numbers.

When you are done with the About window, click the **Close** button.

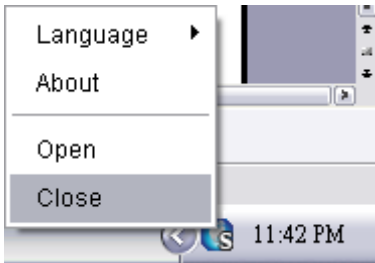

4.4.8 Enabling and Disabling Plug-ins

Enabling Plug-ins


You must add a plug-in to SmartStor before you can use this function.

To enable a plug-in:

1. Go to the **Main Window**.
2. Click the **NAS Management** icon. (A)
3. Click the **Configuration Plugin** button. (B)
4. Click the Plug-in you want to enable. (C)


The plug-in's name will become highlighted.

5. Click the **Enable** button. (D)

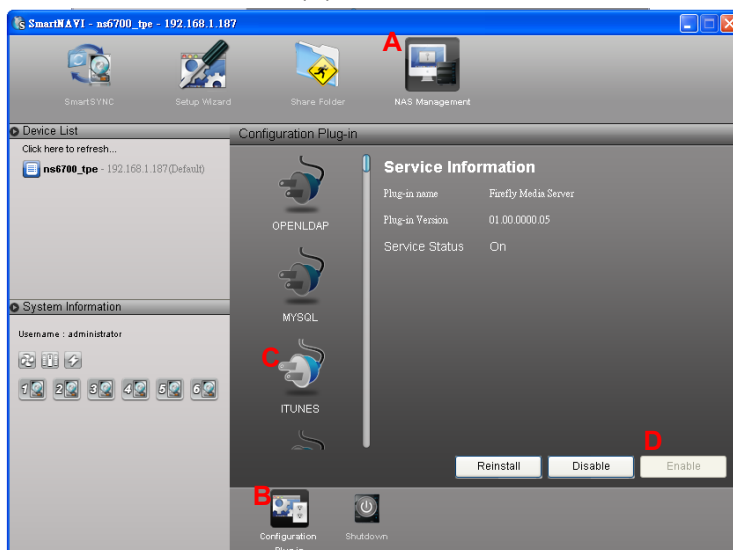

After a moment, the Service Status changes to ON.

The plug-in is now enabled on SmartStor.

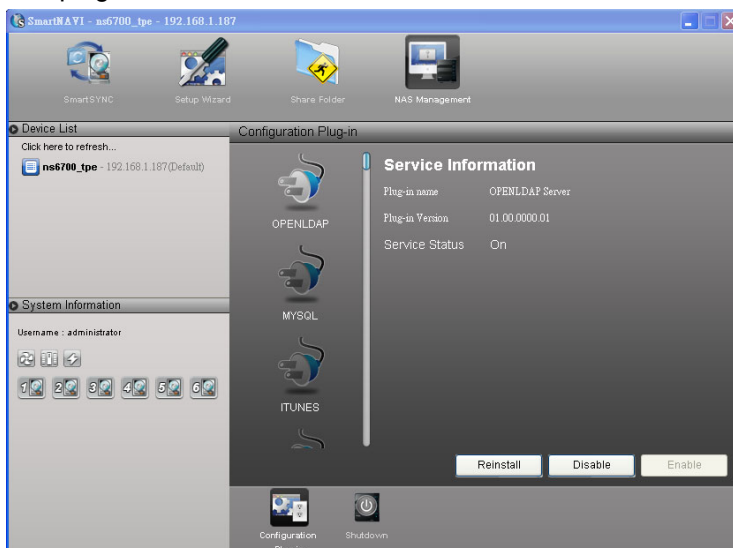

Disabling Plug-ins


Disabling a plug-in saves memory space and processing time on the SmartStor. If you do not use a feature, consider disabling its plug-in.

To disable a plug-in:

1. Go to the **Main Window**.
2. Click the **NAS Management** icon (A).
3. Click the **Configuration Plugin** button (B).
4. Click the Plug-in you want to disable (C).


The plug-in's name will become highlighted.

5. Click the **Disable** button (D).

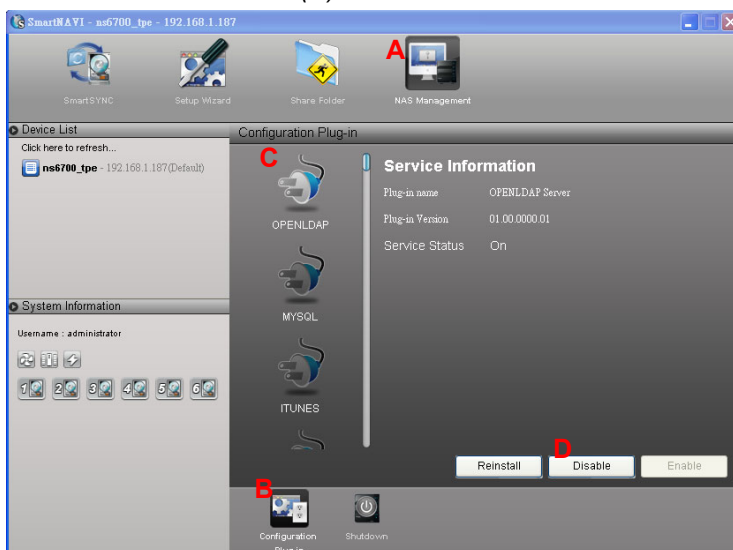

After a moment, the Service Status changes to OFF.

The plug-in is now disabled.

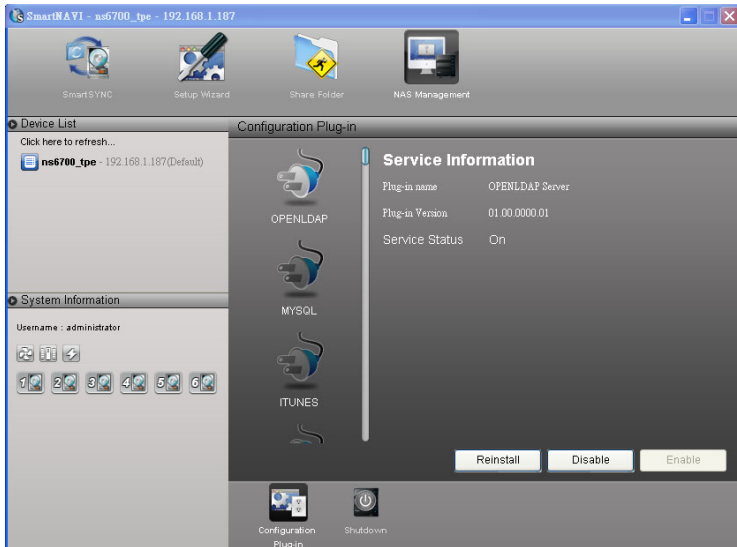

4.4.9 Removing Plug-ins

There are two reasons to remove a plug-in:


- To replace the old plug-in with a new one
- You know that you will never use the plug-in

Before you remove a plug-in, consider disabling it, instead. See “Enabling and Disabling Plug-ins” on page 150.


To remove a plug-in:

1. Go to the **Main Window**.
2. Click the **NAS Management** icon. (A)
3. Click the **Configuration Plugin** button. (B)
4. Click the Plug-in you want to remove. (C)
The plug-in's name will become highlighted.

5. Click the **Remove** button. (D)

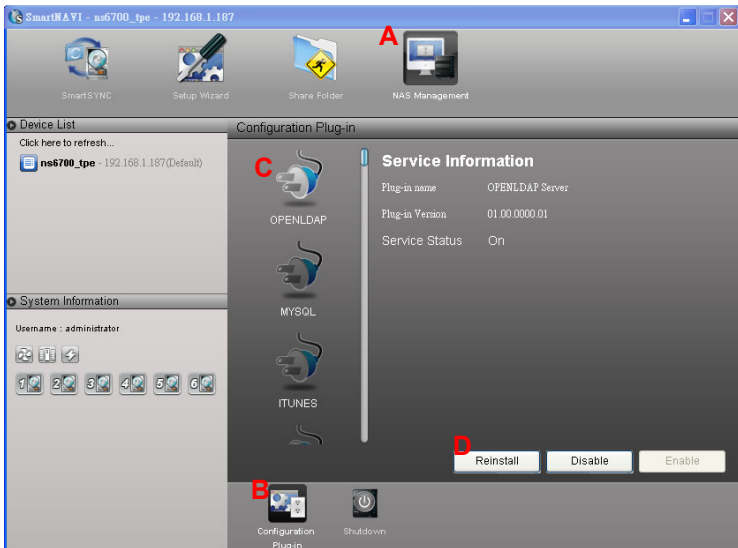

6. Click the **Yes** button in the confirmation box.

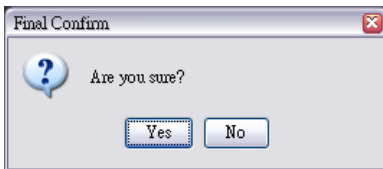

The plug-in is removed from SmartNAVI.


If you need the plug-in later, you can reinstall it. See “Adding Application Plug-ins” on page XX

4.4.10 Rebooting the SmartStor

Normally you will only need to reboot the SmartStor is after a firmware upgrade or a plug-in installation. During the reboot, none of your folders will be accessible from your networked PCs.

To reboot the SmartStor:

1. Go to the **Main Window**.
2. Click the **NAS Management** icon. (A)
3. Click the **Shutdown** button. (B)
4. Click the **Restart** option (C)
5. Click the **OK** button. (D)

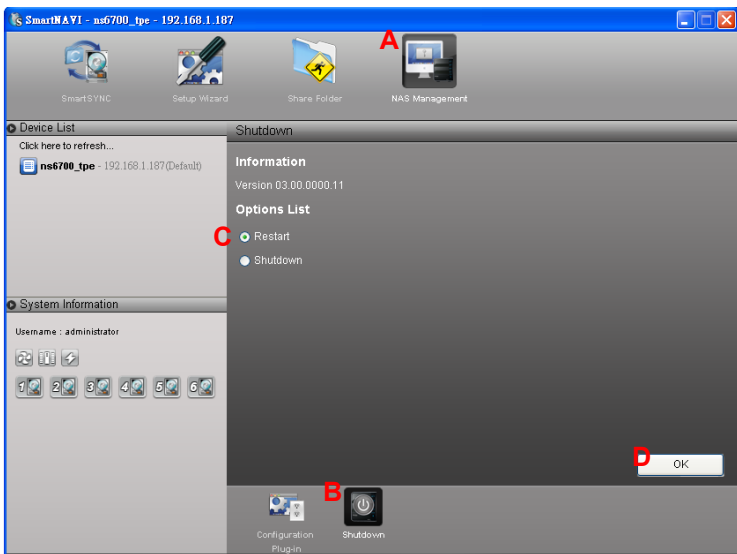


6. The reboot runs automatically.



When the SmartStor is fully booted:

- The system status LED turns blue
- The buzzer beeps one time (if the buzzer is enabled)

See “Enabling and Disabling the Buzzer” on page XX

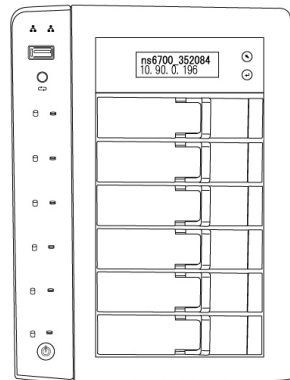

4.4.11 Shutting Down the SmartStor


The only time you need to shut down the SmartStor is to replace the disk drive cooling fan or the power supply. See “Appendix A: Maintenance” on page 337.

During and after the shutdown, none of your folders will be accessible from your networked PCs.


Using SmartNAVI

To shut down the SmartStor:


1. Go to the **Main Window**.
2. Click the **NAS Management** icon. (A)
3. Click the **Shutdown** button. (B)
4. Click the **Shutdown** option. (C)
5. Click the **OK** button. (D)

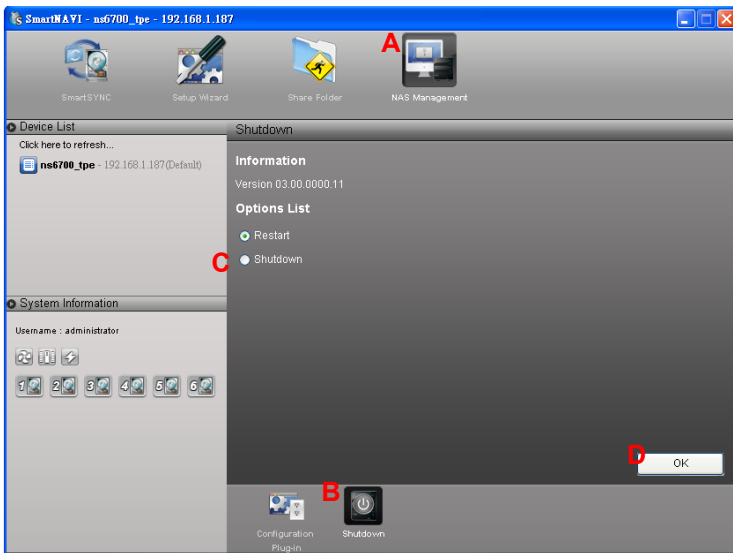

6. The shutdown runs automatically.

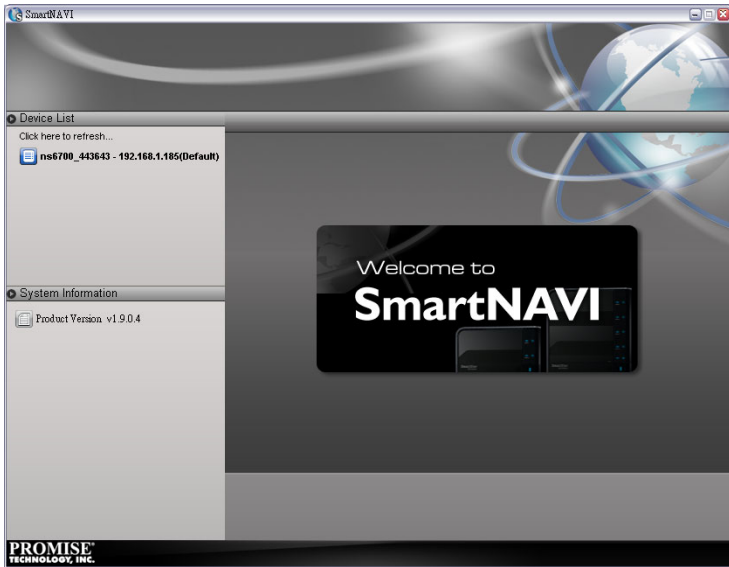

Directly

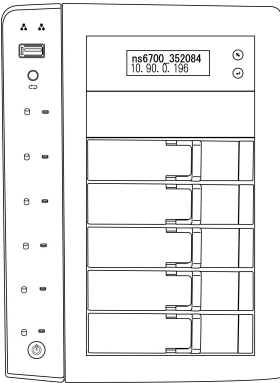

To shut down the SmartStor, press and hold the power button on the back of the SmartStor enclosure for five seconds (top, right). The system status LED turns red, then goes dark (bottom, right).

Restarting the SmartStor

To restart the SmartStor after a shutdown, press the power button on the back of the SmartStor enclosure (top, right).

When the SmartStor is fully booted:

- The system status LED turns blue (bottom, right)
- The buzzer beeps one time (if the buzzer is enabled)

See “Enabling and Disabling the Buzzer” on page 262.

Chapter 5: Troubleshooting

5.1 LCD

Error ID	LCD Message	Corrective action
0	Reserved	
1	Disk Array [ID] Degraded	RAID is degraded. User need to insert a new drive for rebuilding.
2	Disk Array [ID] Offline	RAID is offline. Data may be loss. Delete the offline RAID and create a new one.
3	CPU Overheat [Degree] C/ [Degree] F	Check the airflow and fan. If it repeats, please call technical support.
4	Sys. Overheat [Degree] C/ [Degree] F	Check the airflow and fan. If it repeats, please call technical support.
5	Sys. Fan Failed [speed] RPM	Check fan. If it repeats, reboot NAS to rescan fan. If it still failed, call technical support.
6	HDD Failed Port [Port ID]	Replace the failed drive.

5.2 WebPASM PROe system event log

Controller	Corrective Action
The controller parameter(s) changed by user	The user successfully changed controller settings.
The controller has new crash information	Check the event logs.
Controller temperature is above the warning threshold	The controller is overheating. Check for airflow around and through the controller, and verify that all fans are working. Replace fans as needed.
Controller temperature is above the critical threshold	The controller is seriously overheating. Check for airflow around and through the controller, and verify that all fans are working. Replace fans as needed.
Controller temperature is within the warning threshold	Normal.

Disk Array	Corrective Action
New disk array has been created	Result of settings or user action. Normal.
Disk array has been deleted	Result of settings or user action. Normal.
Disk array has been added	Result of settings or user action. Normal.
Disk array has been removed	The physical drives of the disk array were removed from the enclosure.
Disk array settings have been changed	The user successfully disk array settings.

Enclosure	Corrective Action
Enclosure temperature is above the warning threshold	The chassis is overheating. Check for airflow around and through the chassis, and verify that all fans are working. Replace fans as needed.
Enclosure temperature is above the critical threshold	The chassis is seriously overheating. Check for airflow around and through the chassis, and verify that all fans are working. Replace fans as needed.
Enclosure temperature is within the normal range	Normal.

Event Log	Corrective Action
Event log buffer is cleared in RAM	The event log was cleared.
Event log buffer is cleared in NVRAM	The non-volatile RAM event log was cleared.

Front End Driver	Corrective Action
Host interface link is up	Normal.
Host interface link is down	Check network cable/switch.
Host interface controller settings have changed	Result of settings or user action. Normal.

Host Interface Controller	Corrective Action
Host-interface controller has detected bus reset	The initiator sent a reset command. If this message appears repeatedly, contact Technical Support.
Host-interface controller has encountered an unrecoverable error	Restart the NAS.
Host-interface controller has received an abort task/abort task set/clear task set command.	Result of user action. Normal.
Host-interface controller has received a clear ACA command.	Result of clearing an auto contingent alliance condition. If this message appears repeatedly, contact Technical Support.
Host-interface controller has received a LUN reset command.	Result of user action. Normal.
Host-interface controller has received a bus reboot	The NAS rebooted itself. If this message appears repeatedly, contact Technical Support.
Host-interface controller has encountered an unknown error	An unidentified error occurred. If this message appears repeatedly, contact Technical Support.
Host-interface controller has encountered a system error	A NAS system error occurred. If this message appears repeatedly, contact Technical Support.
Host-interface controller has encountered a fatal error	Restart the NAS. If this message appears repeatedly, contact Technical Support.
Host-interface controller settings have changed	Result of user action. Normal.

Logical Drive	Corrective Action
Logical drive initialization has started	Result of user action. Normal.
Logical drive initialization has completed	Logical drive is ready to use. Normal.
Logical drive initialization has paused	Initialization paused because of user intervention, schedule or a higher priority background activity.
Logical drive initialization has resumed	Initialization has resumed again after a pause.
Logical drive initialization has stopped	Initialization stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Logical drive initialization marks the logical drive offline	Initialization failure due to a failed disk drive. Replace the disk drive, delete and recreate the logical drive.
Logical drive initialization is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
Logical drive initialization is queued	Initialization has been set manually or by schedule.
A new logical drive has been created	Result of user action. Normal.
Logical drive has been deleted	Result of user action. Normal.
Logical drive has been placed online	The physical drives of the array are restored to online status.
Logical drive has been placed offline. Possible data loss	One or more physical drives in the array went offline.
Logical drive has been set to critical.	One or more physical drives in the array went offline.
Logical drive axle has been placed online	RAID 50 and 60. One of the axles (RAID 5 or 6 arrays) returned on online status.

Media Patrol	Corrective Action
Media patrol is started	Result of settings or user action. Normal.
Media patrol is completed	Normal.
Media patrol is paused	Media patrol paused because of user intervention, schedule or a higher priority background activity.
Media patrol is resumed	Media patrol has resumed again after a pause.

Media patrol is stopped	Media patrol stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Media patrol is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
Media patrol is queued	Media patrol has been set manually or by schedule.
Media patrol is stopped internally	Media patrol stopped because the disk array was deleted or removed.

Online Capacity Expansion	Corrective Action
Online capacity expansion has started	Result of settings or user action. Normal.
Online capacity expansion has completed	Normal.
Online capacity expansion has paused	Expansion paused because of user intervention, schedule or higher priority background activity.
Online capacity expansion has resumed	Expansion has resumed again after a pause or a reboot.
Online capacity expansion has stopped	Expansion stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Online capacity expansion has encountered a physical disk error	Bad block found on a disk drive. Migration will finish. Check the disk drive check table after migration and replace disk drive as needed.
Online capacity expansion is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
Online capacity expansion is queued	Synchronization has been set manually or by schedule.

PDM	Corrective Action
PDM is started	Result of settings or user action. Normal.
PDM is completed	Normal.
PDM is paused	PDM paused because of user intervention, schedule or a higher priority background activity.
PDM is resumed	PDM has resumed again after a pause.
PDM is stopped	PDM stopped because of user

	intervention, schedule or the logical drive was deleted or went critical or offline.
PDM is switched to rebuild.	PDM changed to rebuild because the logical drive went critical
PDM is stopped internally	The destination drive was removed or used for a rebuild.

Physical Disk	Corrective Action
Physical disk is marked online	Disk drive restored to normal operation.
Physical disk is marked as dead.	Disk drive failure. Replace the disk drive.
Physical disk is marked as dead after it was removed and reinserted by the user.	Try forcing the disk online.
Physical disk has been reset	Disk drive reset after error and should function normally.
Physical disk assigned as global spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as global spare	Result of settings or user action. Normal.
Physical disk assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk has been inserted	A disk drive has been inserted into the NAS system.
Physical disk has been removed	A disk drive has been removed from the NAS system.
Bad sector is found on physical disk	Disk drive has a bad sector. The drive should remap around the bad sector. If this message appears repeatedly, replace the disk drive.
Error is detected in remap sectors	Disk drive has a bad remap sectors. If this message appears repeatedly, replace the disk drive.
Command times out on physical drive	Disk drive not responding to commands. If this message appears repeatedly, replace the disk drive.
Physical disk negotiation speed is decreased.	Disk drive had to reduce its data rate. If this message appears repeatedly, replace the disk drive.
Previously configured disk is	Disk drive may have failed or was

no longer found	removed from the enclosure. Replace or reinstall the disk drive as needed.
A physical disk has encountered an unknown (non-ECC) media error.	Disk drive experienced an unknown error. If this message appears repeatedly, replace the disk drive.
A physical disk has encountered PFA condition	A potentially faulty address or bad sector was found.
A configured dead physical drive has been inserted	The disk drive inserted into the VessRAID was marked as dead and will not work on the VessRAID. Replace the disk drive.
A physical drive page 0/1 settings have been changed	Result of settings or user action. Normal.
Physical disk is marked as dead due to removal/failure of reassign sectors/PFA condition/forced offline state	Replace the disk drive.

RAID Level Migration	Corrective Action
RAID Level migration is started	Result of settings or user action. Normal.
RAID Level migration is completed	Normal.
RAID Level migration is paused	Migration paused because of user intervention, schedule or a higher priority background activity.
RAID Level migration is resumed	Migration has resumed again after a pause.
RAID Level migration is stopped	Migration stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
RAID Level migration has encountered a physical disk error	Bad block found on a disk drive. Migration will finish. Check the disk drive check table after migration and replace disk drive as needed.
RAID Level migration is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
RAID Level migration is queued	Migration has been set manually or by schedule.
Migration has detected/cleared stale NV Watermark	Watermarks are progress markers left as the result of interrupted RAID migrations. If the watermark was cleared, migration

	should finish.
Array was incomplete due to missing NV Watermark	RAID migration was interrupted by a shutdown. If array is online, try migration again. If array is offline, delete and recreate array.

Rebuild	Corrective Action
Rebuild is started	Result of settings or user action. Normal.
Rebuild is completed	Normal.
Rebuild is paused	Rebuild paused because of user intervention, schedule or a higher priority background activity.
Rebuild is resumed	Rebuild has resumed again after a pause.
Rebuild is stopped	Rebuild stopped because of user intervention, schedule or the logical drive was deleted or the target disk drive encountered an error. If rebuild stopped by the user, restart the rebuild.
Rebuild stopped internally	The logical drive is offline.
Rebuild is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
Rebuild is queued	Rebuild has been set manually or by schedule.
Rebuild marks logical drive synchronized upon rebuild completion	Result of successful rebuild. Normal.

Redundancy Check	Corrective Action
Redundancy Check is started	Redundancy Check has started manually or by schedule.
Redundancy Check is completed	Redundancy Check has finished.
Redundancy Check is paused	Redundancy Check paused because of user intervention, schedule or a higher priority background activity.
Redundancy Check is resumed	Redundancy Check has resumed again after a pause.
Redundancy Check is stopped	Redundancy Check stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.

Redundancy Check is aborted due to internal error	System resources are low. Reduce system load or restart the NAS.
Redundancy Check encountered inconsistent block(s)	Check the logical drive's inconsistent block table. Rebuild the disk array if necessary.
Redundancy Check task is queued	Redundancy Check has been set manually or by schedule.
Redundancy Check task is stopped internally	The logical drive is offline.

Spare Check	Corrective Action
Spare check started on the given spare drive	Result of settings or user action. Normal.
Spare check completed successfully on the given spare drive	Normal.

Spare Drives	Corrective Action
Physical disk assigned as global spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as global spare	Result of settings or user action. Normal.
Global Spare has been deleted	Result of settings or user action. Normal.
Physical disk assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as dedicated spare	Result of settings or user action. Normal.
Dedicated Spare has been deleted	Result of settings or user action. Normal.

SMART	Corrective Action
SMART error is received	A disk drive reported a SMART error. If this message appears repeatedly, replace the disk drive.

Synchronization	Corrective Action
Synchronization is started	Result of settings or user action.
Synchronization is completed	Normal.
Synchronization is paused	Synchronization paused because of user intervention, schedule or higher priority background activity.

Synchronization is resumed	Synchronization has resumed again after a pause or a reboot.
Synchronization is stopped	Synchronization stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Synchronization is aborted due to an internal error.	System resources are low. Reduce system load or restart the NAS.
Synchronization is queued	Synchronization is already running on another logical drive in the same array.
Synchronization is stopped internally	Synchronization stopped because the disk array was deleted or removed.

System (NAS)	Corrective Action
The system is started	The NAS has been started. Normal.
The system is stopped	The NAS was shut down. Normal.
A nas user has been added	Result of settings or user action. Normal.
A nas user has been deleted	Result of settings or user action. Normal.
A nas user password has been changed	Result of settings or user action. Normal.
A nas group has been added	Result of settings or user action. Normal.
A nas group has been removed	Result of settings or user action. Normal.
The members has been changed in a NAS group Windows/CIFS file service start	Result of settings or user action. Normal.
FTP service start	Result of settings or user action. Normal.
NFS for Linux start	Result of settings or user action. Normal.
Fail to start CIFS protocol	Check the file system status.
Fail to start FTP protocol	Check the file system status.
Fail to start NFS protocol	Check the file system status.
Windows/CIFS file service has been stopped	Result of settings or user action. Normal.
FTP protocol has been stopped	Result of settings or user action. Normal.
NFS protocol has been stopped	Result of settings or user action. Normal.
NAS settings for windows client has been changed	Result of settings or user action. Normal.
FTP settings has been changed	Result of settings or user action. Normal.
A NAS sharing folder has been	Result of settings or user action. Normal.

created	
A NAS sharing folder has been removed	Result of settings or user action. Normal.
A NAS sharing folder has been modified	Result of settings or user action. Normal.
NFS setting has been changed	Result of settings or user action. Normal.
CIFS setting has been changed	Result of settings or user action. Normal.
FTP setting has been changed	Result of settings or user action. Normal.
A NAS volume has been created	Result of settings or user action. Normal.
A NAS volume has been deleted	Result of settings or user action. Normal.
File system expansion Start	Result of settings or user action. Normal.
File system expansion Failure	Confirm free capacity. If capacity is enough, restart the NAS. If this message appears repeatedly, contact Technical Support.
File system expansion Done	Normal.
Remote synchronization start	Normal.
Remote synchronization complete	Normal.
Remote synchronization failure	Close all opened file and try again.
Remote synchronization configuration changed	Result of settings or user action. Normal.
NAS mounting points conflict during array transportation	
Create a Snapshot	Result of settings or user action. Normal.
Delete a Snapshot	Result of settings or user action. Normal.
Create Snapshot Fail	Space is not enough to create snapshot. Reduce created snapshot size.
Recover from Snapshot success	Normal.
Recover from Snapshot Fail	The snapshot is over size.

Transition	Corrective Action
Transition is started	Result of settings or user action. Normal.
Transition is completed	Normal.
Transition is paused	Transition paused because of user intervention, schedule or a higher priority background activity

Transition is resumed	Transition has resumed again after a pause.
Transition is stopped	Transition stopped because of user intervention or the logical drive was deleted.
Transition was switched to rebuild	Transition changed to rebuild because the logical drive went critical.

Watermark	Corrective Action
Migration has detected stale NV Watermark	Watermarks are progress markers left as the result of interrupted RAID migrations.
Migration has cleared stale NV Watermark	If the watermark was cleared, migration should finish.

5.3 How to use Promise USB Retrieval to export system information

With the Promise USB Retrieval application, you can easily export the system information to the log file.

1. Download the SmartStor USB Retrieval application from Promise's Website.
2. Copy "OPAS_general.zip" to your USB Pen Drive.
3. Insert the USB Pen Drive into the USB port on the front panel of NAS.
4. The message displayed on the LCD to indicate that USB Retrieval is progress.

When done, you will be prompted by the message displayed on the LCD, or a "beep" sound by the system.

5. Remove the USB Pen Drive. The log file that contains the detailed system information will be saved automatically in the "OPAS_OUTPUT" folder of USB Pen drive.



Simple · Smooth · Smart