




**INSPIRE**

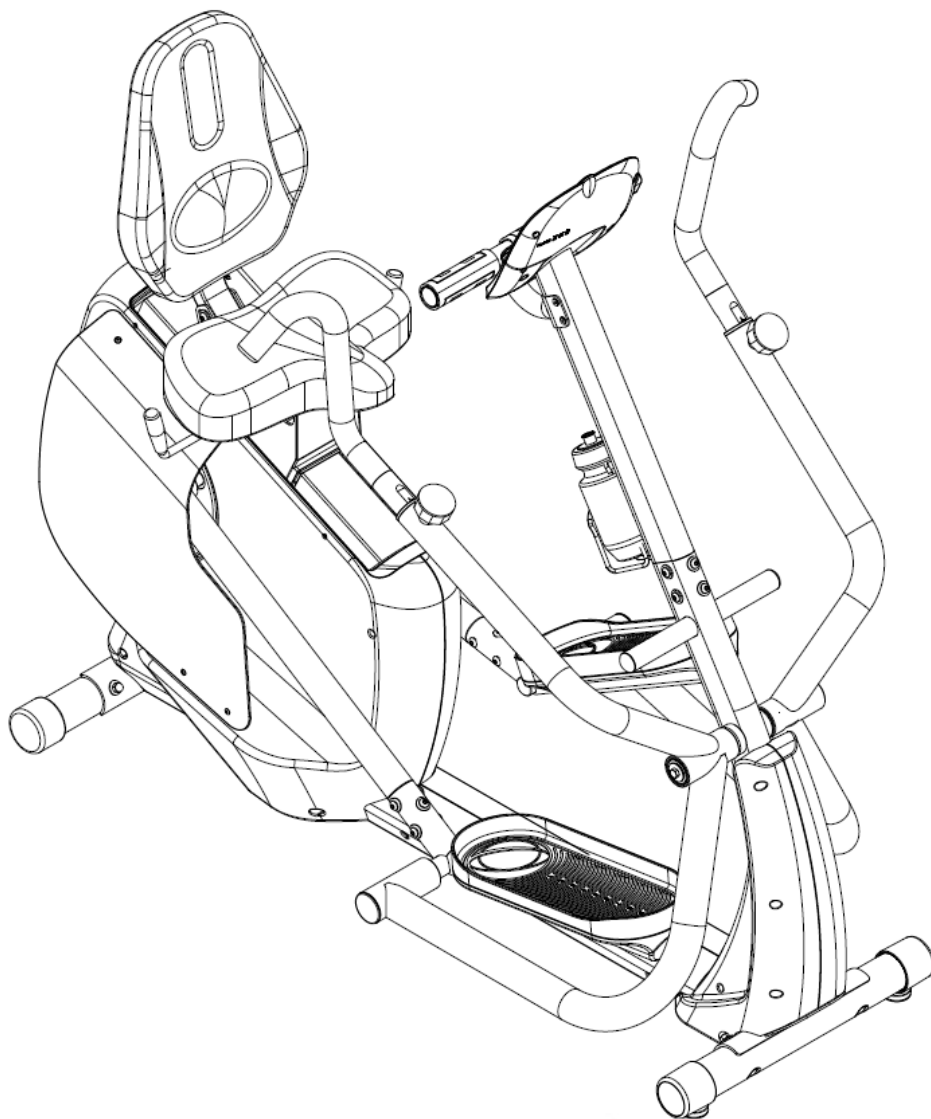

**CS2 CARDIOSTRIDER  
USER MANUAL (rev.2013)**

## TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	2
CONTENTS OF PACKAGING	3
WARNING LABEL PLACEMENT	4
HARDWARE PACK	5
ASSEMBLY INSTRUCTIONS	6-17
COMPUTER OPERATION GUIDELINE	18-27
PARTS LIST	28-30
ALTERNATE PLUG PART NUMBERS	30
EXPLODED DIAGRAMS	31-33
WARRANTY	34-35

## BEFORE YOU BEGIN

Thank you for selecting the INSPIRE CS2 CARDIOSTRIDER. For your safety and benefit, read this manual carefully before using the machine. As a manufacturer, we are committed to providing you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, *please call our TOLL-FREE customer service number*. Our Customer Service Agents will provide immediate assistance to you.

**HEALTH IN MOTION, LLC.**  
**4945 EAST HUNTER AVE.**  
**ANAHEIM, CA 92807**  
**Toll-Free Customer Service Number**  
**1-877-738-1729**  
**Mon. - Fri. 8 a.m. - 5 p.m. PST**  
**[www.inspirefitness.net](http://www.inspirefitness.net)**

# IMPORTANT SAFETY NOTICE

## **PRECAUTIONS**

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:










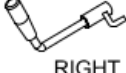




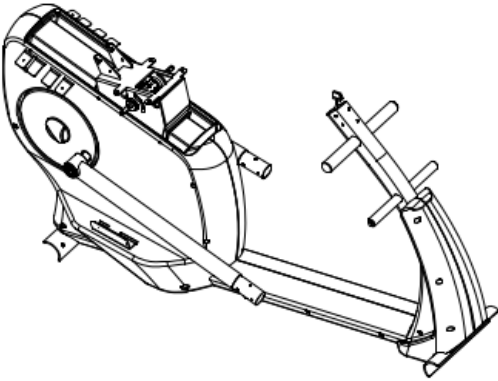

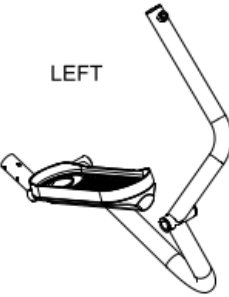


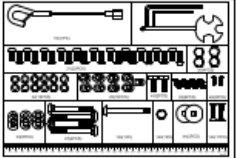
- **Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine. The linkages on this machine can cause serious injury or death if used improperly.**
- Never place your hands or feet in the path of the linkages because injury may occur to you or damage may occur to the equipment. Never allow children to come near or approach the moving linkages while in use.
- If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
- Keep hands away from all moving parts.
- Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- Do not place any sharp object around the machine.
- Disabled persons should not use the machine without a qualified person or physician in attendance.
- Before using the machine to exercise, always do stretching exercises to properly warm up.
- Never operate the machine if the machine is not functioning properly.
- Maximum user weight 300 lbs.
- Allow 24" (61 cm) of space on each side of the unit. Never place body parts under pivot area (directly behind pedal).

## **CARE AND MAINTENANCE**

1. Keep seat slider clean
2. Inspect and tighten all parts before using the machine.
3. The Frame and Seat Pad of the machine can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.

**WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. NEITHER HEALTH IN MOTION, LLC. NOR FG1, LLC. ASSUMES ANY RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.**

## CONTENTS OF PACKAGING

			1	
RIGHT 	1		1	
LEFT 	1		1	
			1	
	1		1	
LEFT 	1	RIGHT 	1	
			1	
			1	
RIGHT 			1	
LEFT 			1	
			1	
			1	
			1	
			1	
			1	
			1	

## WARNING/PATENT LABEL PLACEMENT

Manufactured Under Patents/  
Patents Pending as follows:

US Patents: 7,815,551 and 8,562,491

US Patent Pending: 2013/14048302


Canada: Application 2696901

Europe: Application 08830164.3

China (Utility): ZL 201220191127.2

China (Design): ZL 201233139551.8


International: PCT/US2008/076264

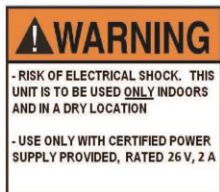

The warning and patent labels have been placed on the unit in location shown. If the labels are missing or illegible, please call customer service at 1-877-738-1729 for replacements. Apply the labels in location shown.

# CARDIOSTRIDER HARDWARE PACK


**NOTE: The following parts are not drawn to scale. Please use your own ruler or scale to measure the size.**

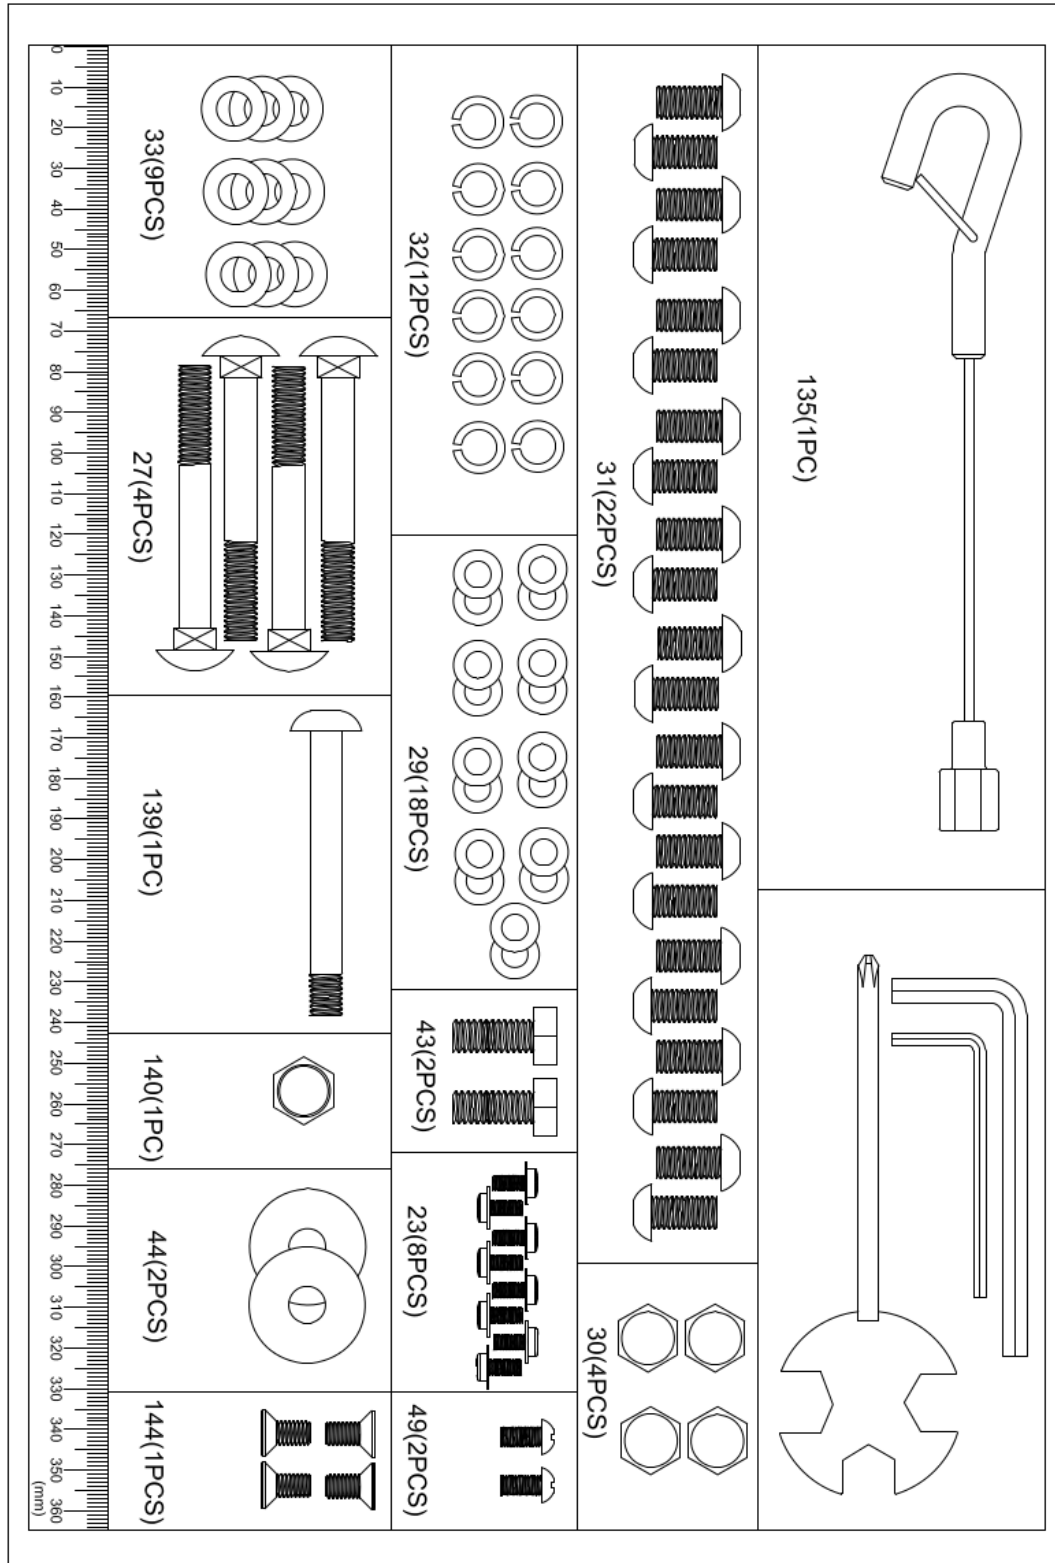

# CARDIOSTRIDER ASSEMBLY INSTRUCTION

## STEP 1: FRAME STABILIZER ASSEMBLY (See FIGURE 1)


- A.) Carefully unpack contents of box leaving the 3 large styrofoam frame support blocks in place. Inside the packaging locate the Styrofoam block (with Red Sticker) packed near the Console Assembly. Place aside for use in STEP 2.
- B.) Remove large styrofoam frame support from REAR portion of frame. The Rear Stabilizer mounting bracket should now be exposed.
- C.) Place Rear Stabilizer Tube Assembly (#28) underneath the Rear Mounting Bracket. **Ensure that the transport wheels are facing backwards.**
- D.) Attach the Rear Stabilizer Tube to the frame as shown in FIGURE 1 with qty 2 M8x70 carriage bolts (#27), qty 2 M8 curved washers (#29) and qty 2 M8 acorn nuts (#30).
- E.) Remove large styrofoam frame support from FRONT portion of frame. The front mounting bracket should now be exposed.
- F.) Place Front Stabilizer Tube (#62) underneath the front mounting bracket.  
Attach the Front Stabilizer Tube (#62) to the front mounting bracket as shown in FIGURE 1. Secure the right side with qty 1 M8x70 carriage bolt (#27), qty 1 M8 curved washer (#29) and qty 1 M8 acorn nut (#30). Secure the left side with qty 1 M8x70 carriage bolt (#27), qty 1 M8 curved washer (#29) and qty 1 Child Safety Lock (#135).

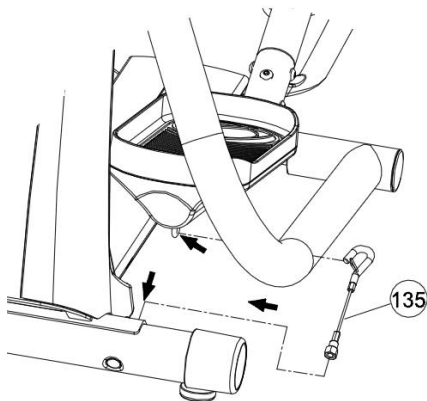





**NOTE: The Child Safety lock should always be engaged when machine is not in use. For instructions on how to engage the lock, see sheet 15 of this user manual.**

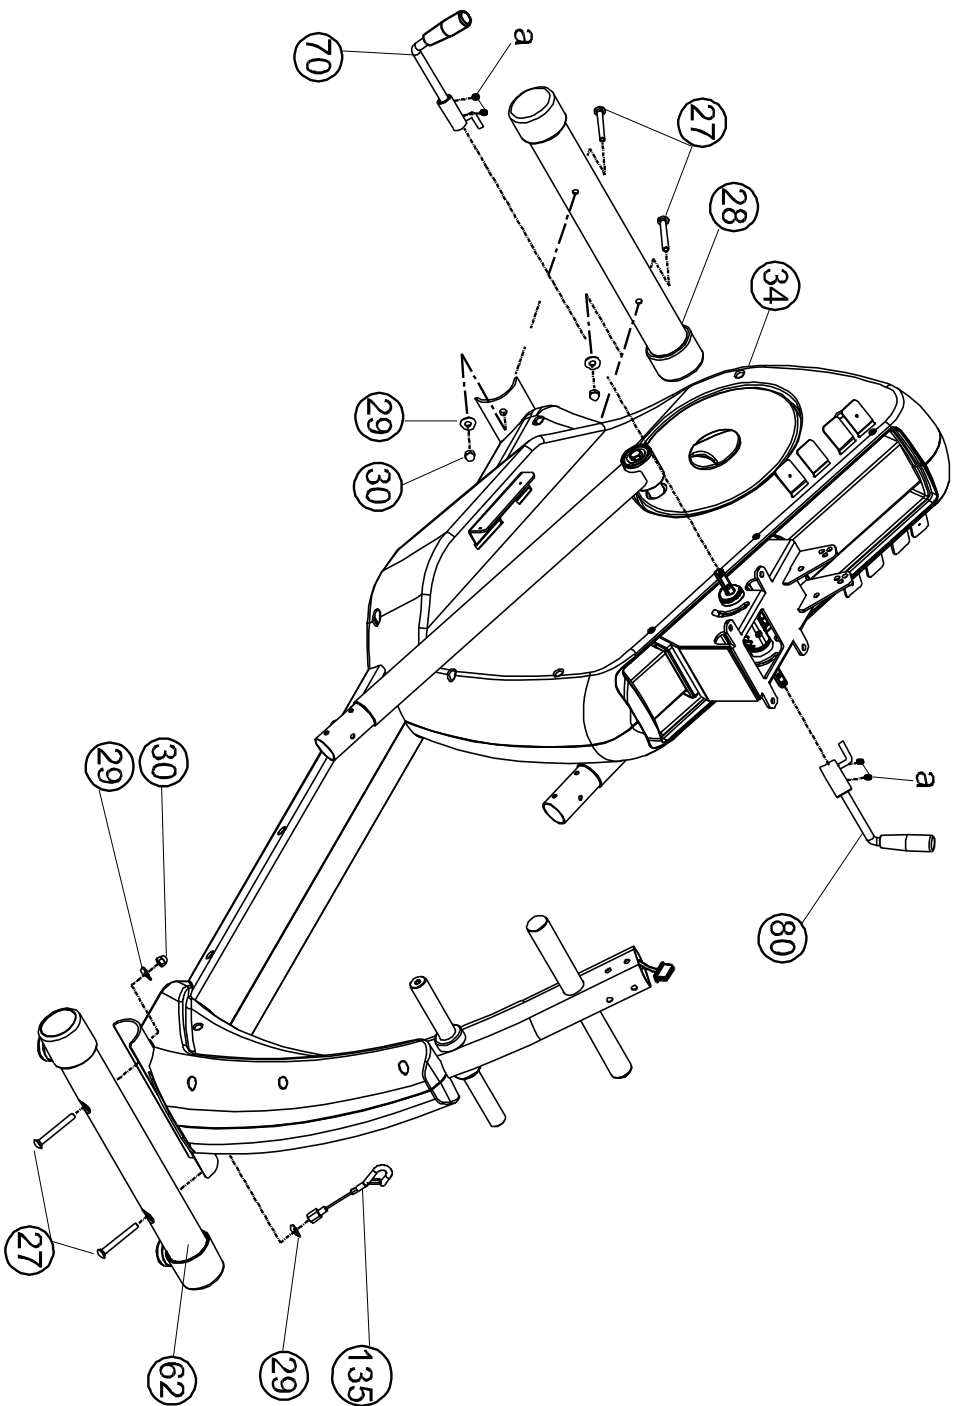- G.) Attach Right Cam Lock Handle (#70) and tighten qty 2 socket screws (a). **NOTE: Ensure that the Right Cam Lock Handle has an “R” sticker on it.**
- H.) Attach Left Cam Lock Handle (#80) using qty 2 socket screws (a). **NOTE: Ensure that the Left Cam Lock Handle has an “L” sticker on it.**

# Fig1




4PCS		(27)
4PCS		(29)
	Ø8	

1PC		(135)
3PCS		(30)
	M8	




## STEP 2: SWING ARM ASSEMBLY (See FIGURE 2)



- A.) Place Right Swing Arm Assembly (#47) on Front Pivot Shaft of main frame. Secure using qty 1 Oversized Flat Washer (#44) and qty 1 M8x20 Hex Bolt (#43). **NOTE: When assembling Swing Arm put finger inside the Bearing Pivot to ensure spacer is centered. Without the Spacer centered you will not be able to place the Swing Arm on the Shaft.**
- B.) Place the Right Swing Arm Assembly (#47) on top of the Styrofoam Support Block (with Red Dot) so the ball bearing connection assembly sits on top of the Styrofoam Support Block.
- C.) Secure the right Pedal/Crank Arm Assembly (#142) to the Right Swing Arm Assembly (#47) as shown below using qty 6 Curved Washers (#29), and qty 6 M8x16 socket screws (#31).

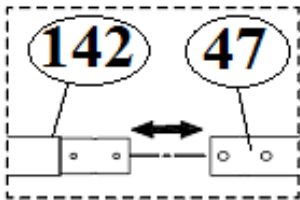

- D.) Place Left Swing Arm Assembly (#54) on Front Pivot Shaft of main frame. Secure using, qty 1 Oversized Flat washer (#44) and qty 1 M8x20 Hex Bolt (#43). **NOTE: When assembling Swing Arm put finger inside the Bearing Pivot to ensure spacer is centered. Without the Spacer centered you will not be able to place the Pedal Arm on the Shaft.**
- E.) Place the left Pedal/Crank Arm Assembly (#142) on top of the Styrofoam Support Block (with Red Dot) so the ball bearing connection assembly sits on top of the Styrofoam Support Block.
- F.) Secure the right Pedal/Crank Arm Assembly (#142) to the Right Swing Arm Assembly (#54) as shown below using qty 6 Curved Washers (#29), qty 6 Lock Washers (#32) and qty 6 M8x16 socket screws (#31).

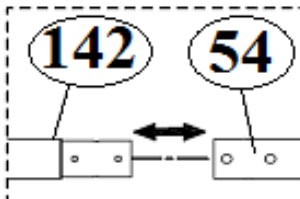

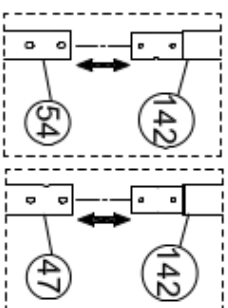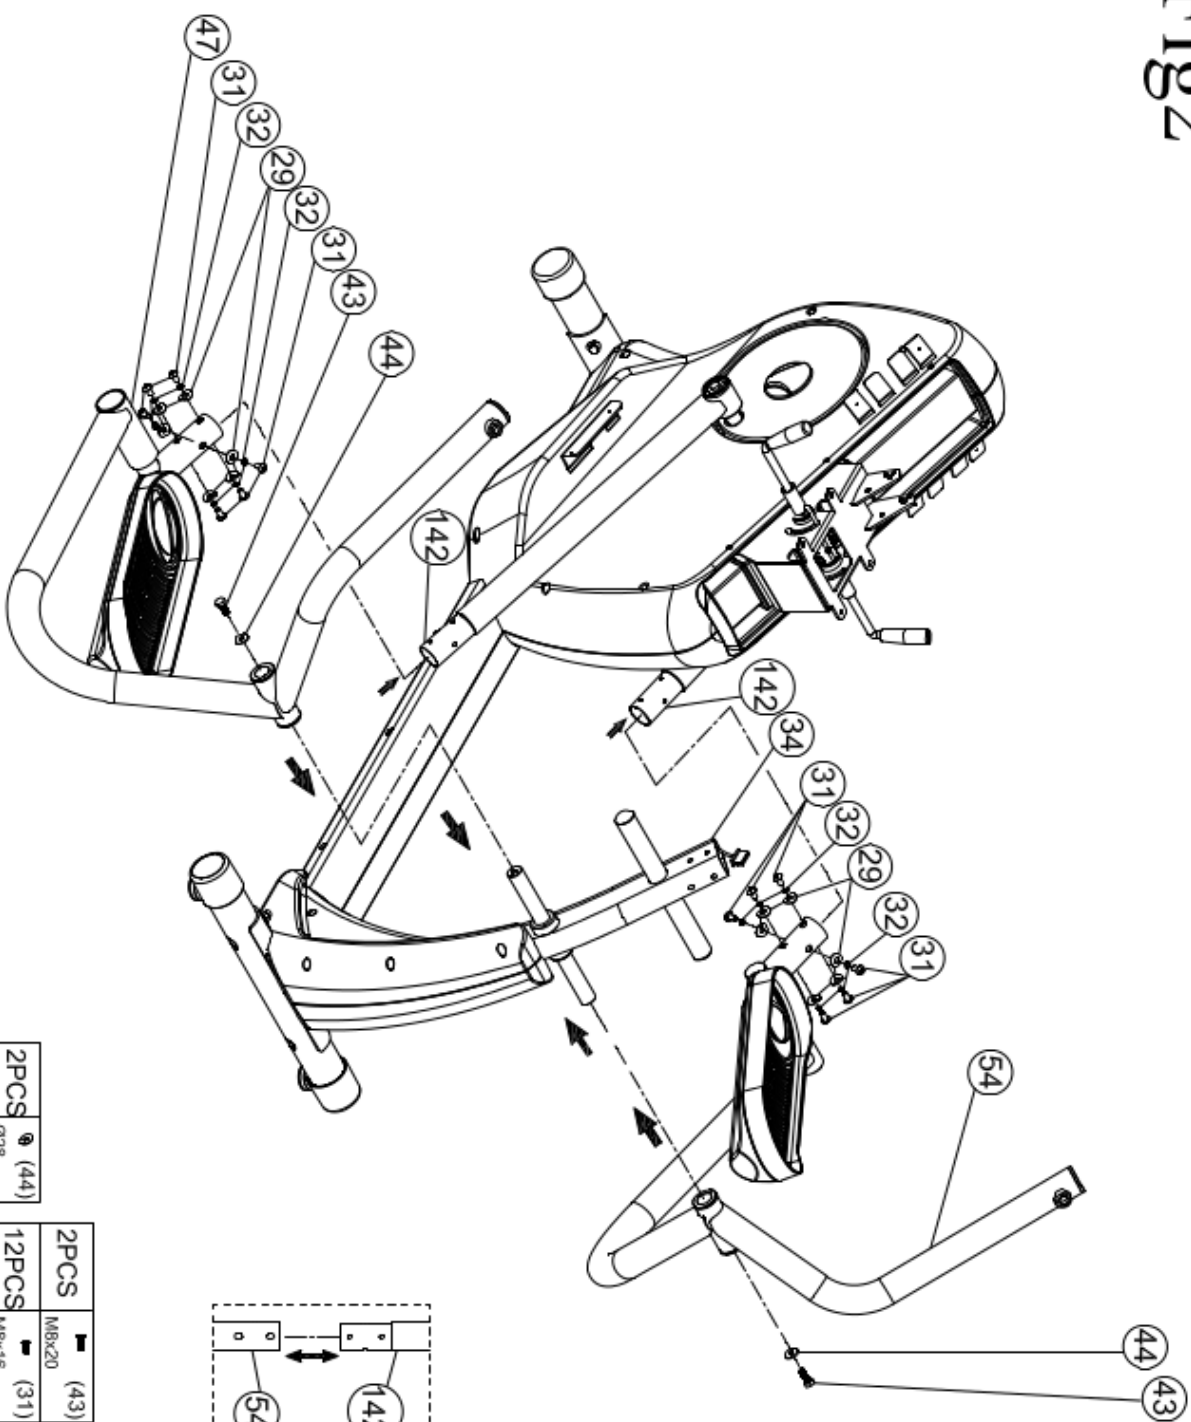

# Fig2



2PCS  (44)  
Ø28

2PCS  (43)  
12PCS MBx20  
12PCS MBx16 (31)


12PCS  (29)  
Ø8  
12PCS  (32)  
Ø8

### STEP 3 (See FIGURE 3)

A.) Assemble Seatback (#8) onto Seat Slider Assembly. Align lower holes and secure using qty 1 cap nylon nut (#140), qty 1 M8 Flat Washers (#33), and qty 1 M8 x 70mm Socket Screws (#139).


#### **Choose a preferred Seatback Recline Angle.**

The seatback (#8) may be installed in 3 different Recline Angles (UPPER, MIDDLE, LOWER) based on the users' preferred position. Align upper seatback tube hole with preferred hole based on the below figure. Secure using the pin (b) as shown in Figure 3.

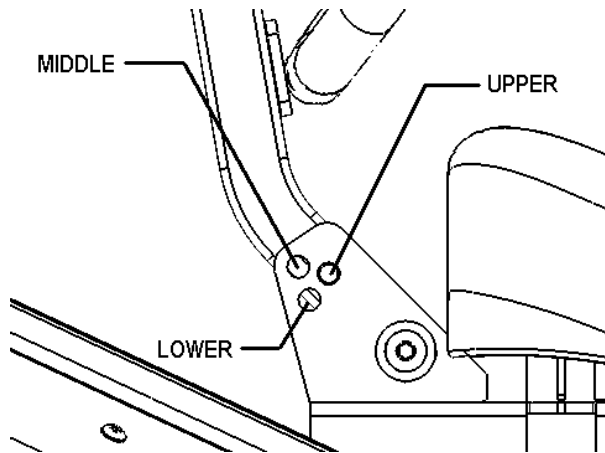

B.) Secure seat bottom pad (#35) to Seat Slider Assembly using qty 4 Flat Washers (#33) and qty 4 M8x16mm Socket Screws (#31).

# Fig3

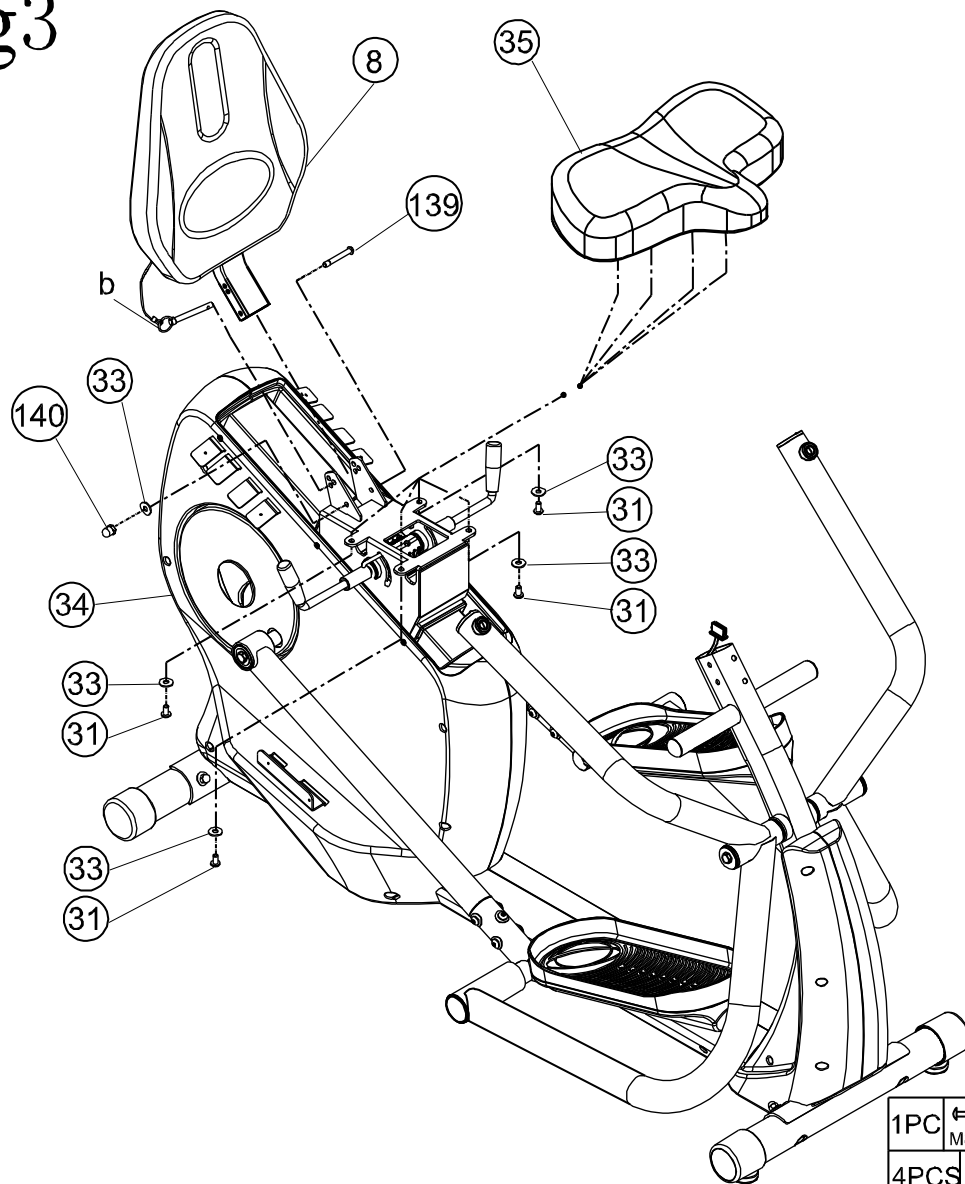


1PC	(139) M8x70	1PC	(140) M8
4PCS	(31) M8x16	5PCS	(33) Ø8

**STEP 4: SIDE COVERS (see FIGURE 4)**

**A.)** Attach Right Side Cover (#24) using qty 4 Phillips Head Washer Screws (#23). Make sure crank can spin freely with no side cover interference.

**B.)** Attach Left Side Cover (#36) using qty 4 Phillips Head Washer Screws (#23). Make sure crank can spin freely with no side cover interference.

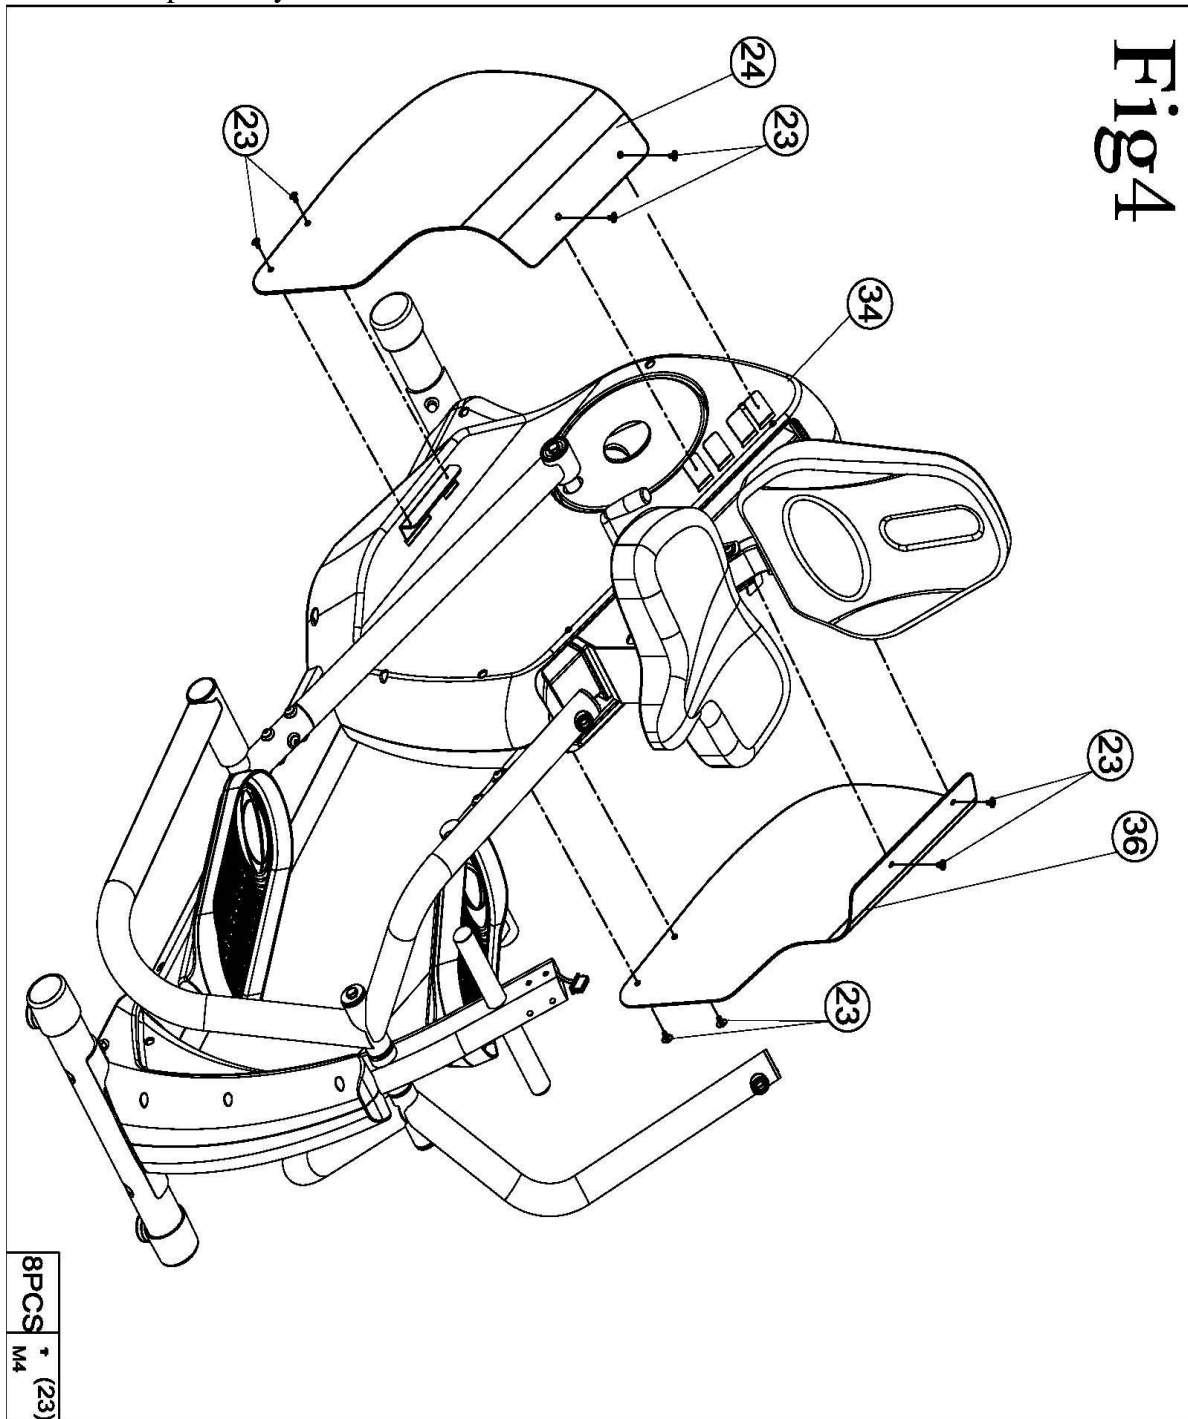


**STEP 5: HANDLE ASSEMBLY (See FIGURE 5)**

A.) Slide Right Handle Assembly (#21) into the Right Swing Arm Sleeve (#47). Make sure the pop pin (#51) is fully engaged

**WARNING: Check to make sure the Right Handle Assembly has an “R” Sticker on it. Accidental switching of the Right and Left Handle Assemblies can result in serious injury.**

B.) Slide Left Handle Assembly (#42) into the Left Swing Arm Sleeve (#51). Make sure the pop pin (#51) is fully engaged

**WARNING: Check to make sure the Left Handle Assembly has an “L” Sticker on it. Accidental switching of the Right and Left Handle Assemblies can result in serious injury.**

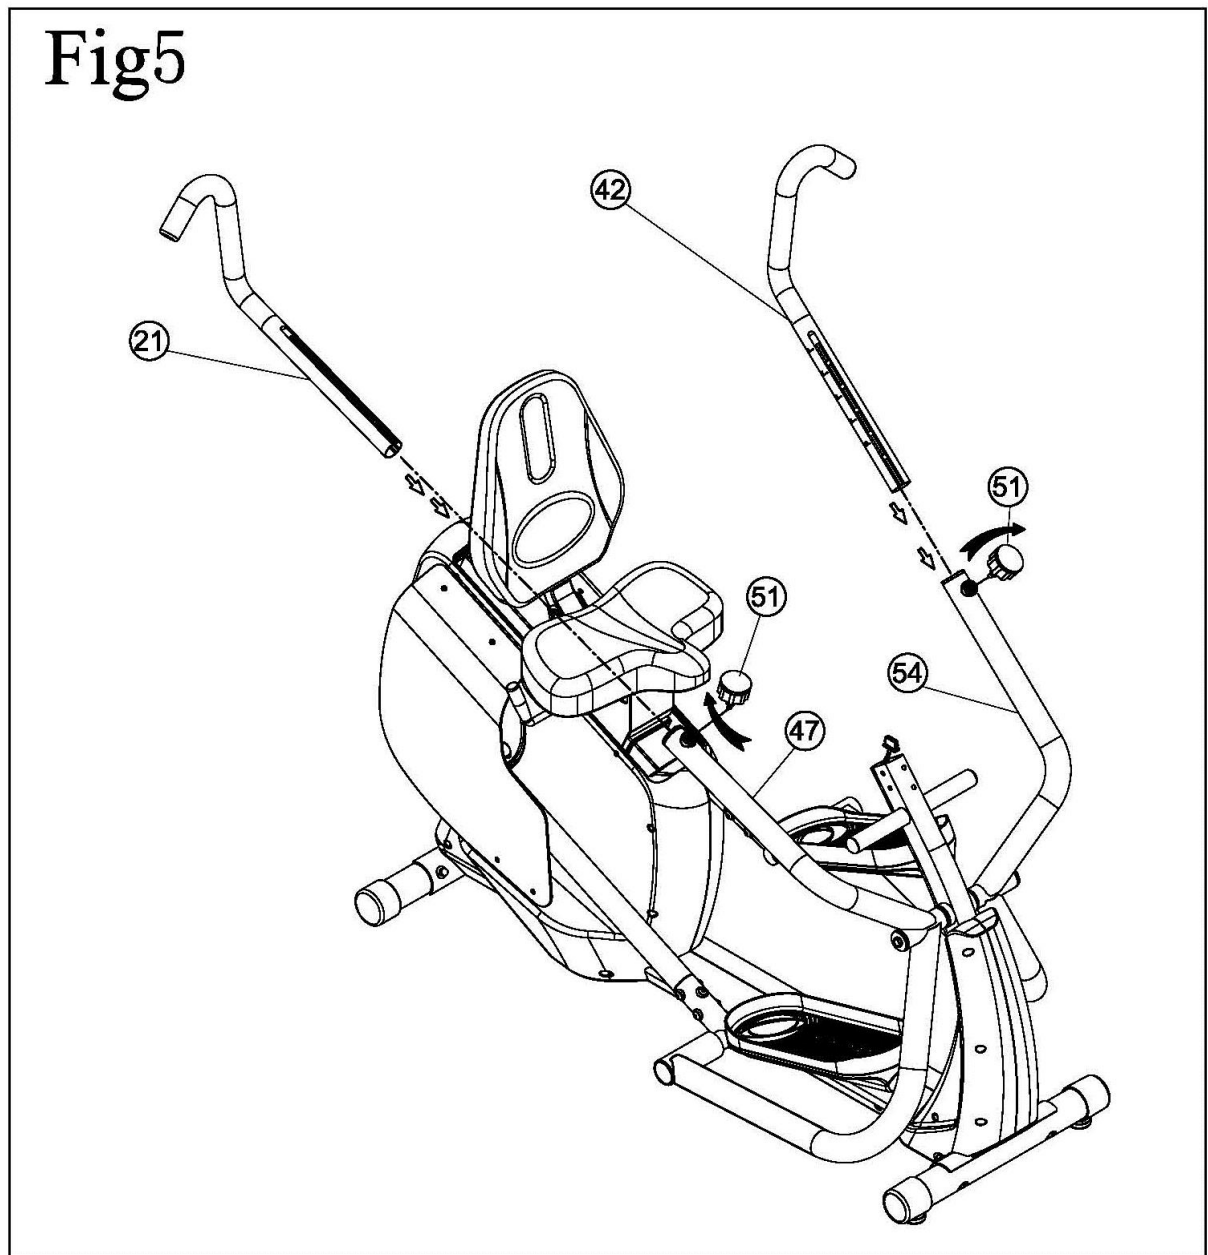

## STEP 6: CONSOLE ASSEMBLY (See FIGURE 6)


- A.) **Wash Water Bottle (#9) thoroughly with warm soapy water.**
- B.) Attach Water Bottle Cage (#9) to Console Mast (#39) using qty 2 Phillips Head Screws (#49). Slide on Water Bottle.
- C.) Pull Grip Heart Rate wires (#145) through front hole in Console Mast (#39) and pull up through top hole. Attach Grip Heart Rate Assembly (#143) to Console Mast (#39) using qty 4 Flat Head Screws (#144)
- D.) Connect console connectors (A,B) to connectors (#37,#144)
- E.) Attach Computer Console (#19) to Console Mast (#39) using qty 4 screws (#17).  
*NOTE: Screws (#17) are pre-installed in the Computer Console (#19) NOT in the hardware pack.*
- F.) Connect Console Mast connector (#37) to Main Frame Cable Connector (#85) as shown in Figure 6,A.
- G.) Slide Console Mast (#39) onto the Main Frame (#34). **NOTE: Make sure not to pinch the cable assembly when assembling the console onto the mounting bracket.**
- H.) Secure Console Mast (#39) onto the Main Frame (#34) using qty 4 Flat Washers (#33) – flat sides of tube, qty 2 Curved Washers (#29) – curved front of tube, and qty 6 M8x16mm Screws (#31).
- I.) Remove protective films from Console button overlay (both top and bottom).
- J.) Insert the Power Adapter (#130) into the Rear Power Input Connector on Main Frame as shown in FIGURE B. Plug Power Adapter into power source. **Computer LCD should turn on and sound a long beep.**

## FINAL STEP

Unscrew levelers on Front Stabilizer Assembly (#62) so that both sit flat on the ground.

Unscrew center leveler (located under the center point of the unit) so that it touches the ground. Failure to do so could cause damage to your unit.


# Fig6

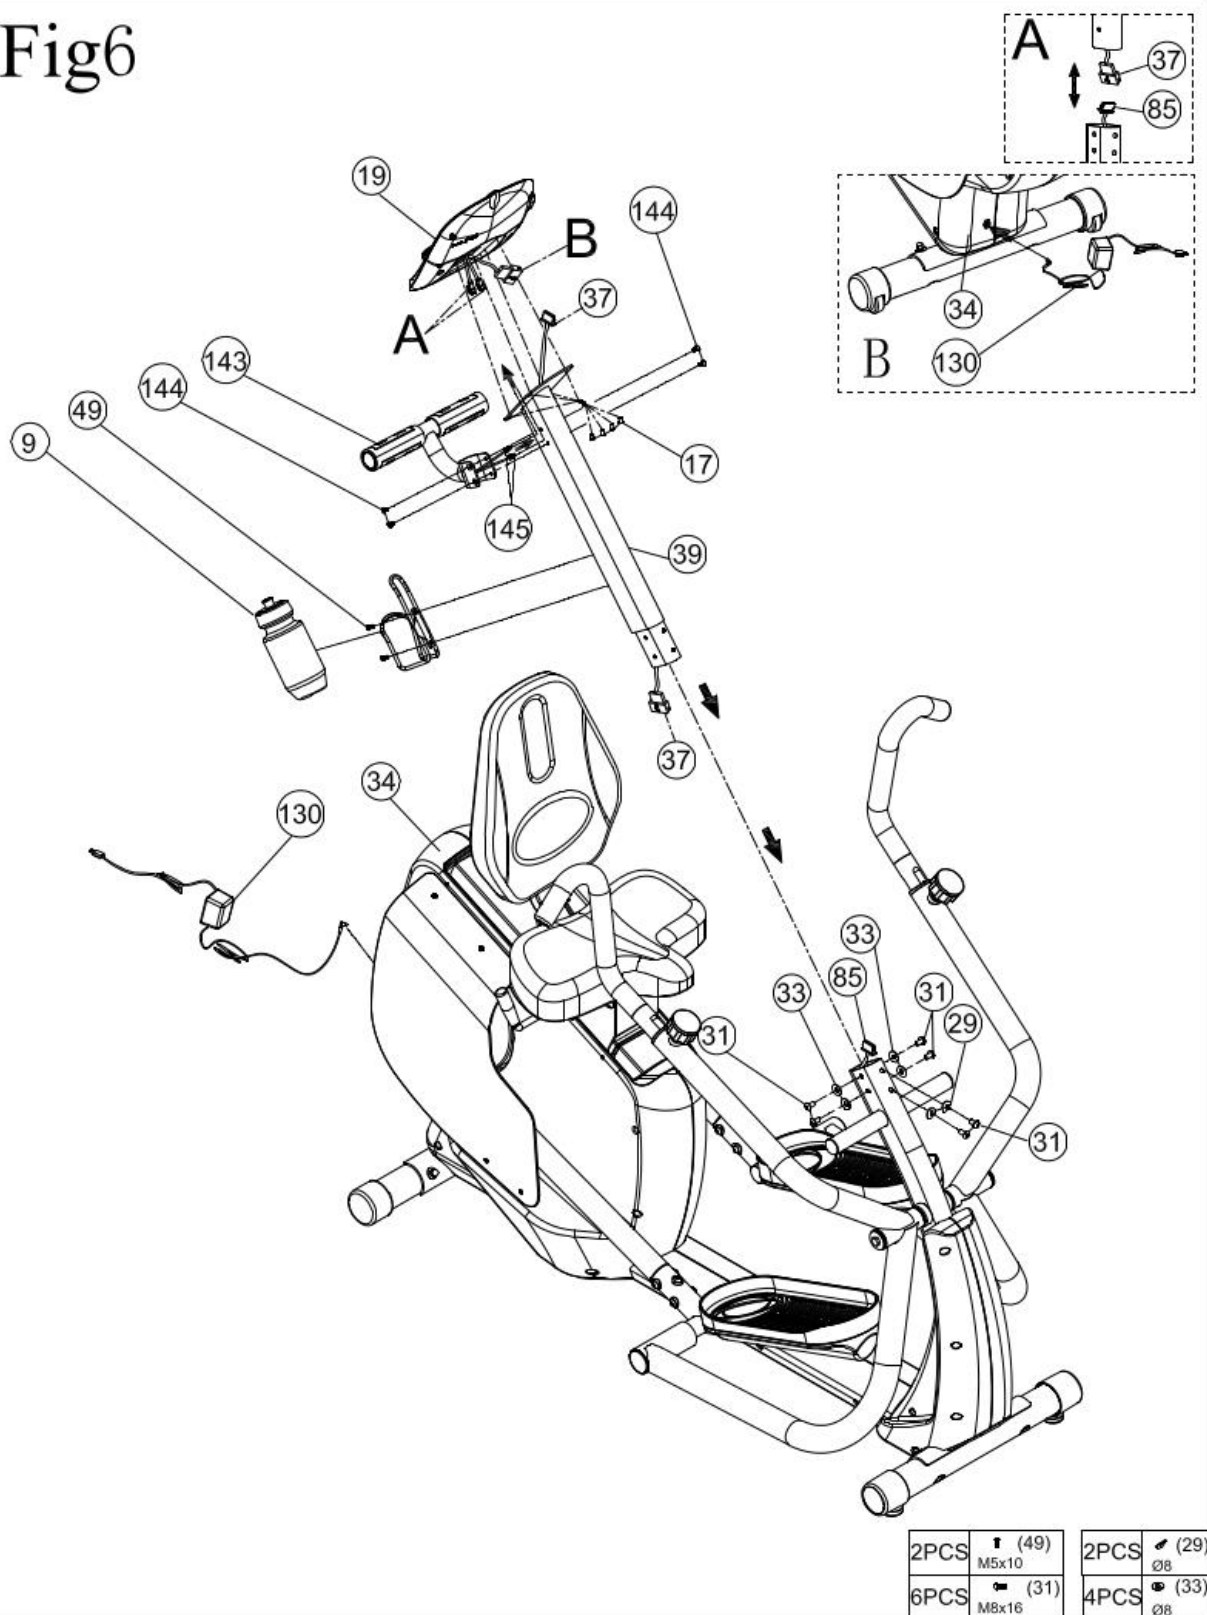



## ENGAGING THE CHILD SAFETY LOCK ASSEMBLY


1. ALWAYS engage the CHILD SAFETY LOCK ASSEMBLY after each use by clipping the hook onto the loop located UNDERNEATH the LEFT PEDAL ASSEMBLY. (see FIGURE B below).
2. Before each workout, disengage the hook from the loop. The CHILD SAFETY LOCK ASSEMBLY can hang freely during your workout and will not interfere with the mechanism.

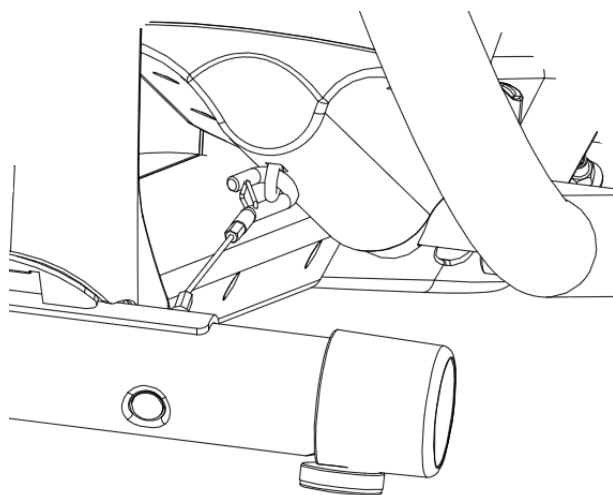

## COMPUTER OPERATION AND FEATURES


This unit is equipped with a Telemetric Heart Rate transmitter that allows the user to monitor their heart rate while wearing a Chest Strap. A *Chest Strap* may be purchased from Inspire by calling (877) 738-1729.

In addition, this computer is equipped to mount and power a tablet computer (*as shown below*). During use your tablet may mount on the rubberized tablet rack. A USB located on the left side of the computer can supply up to 1A of current for recharging.

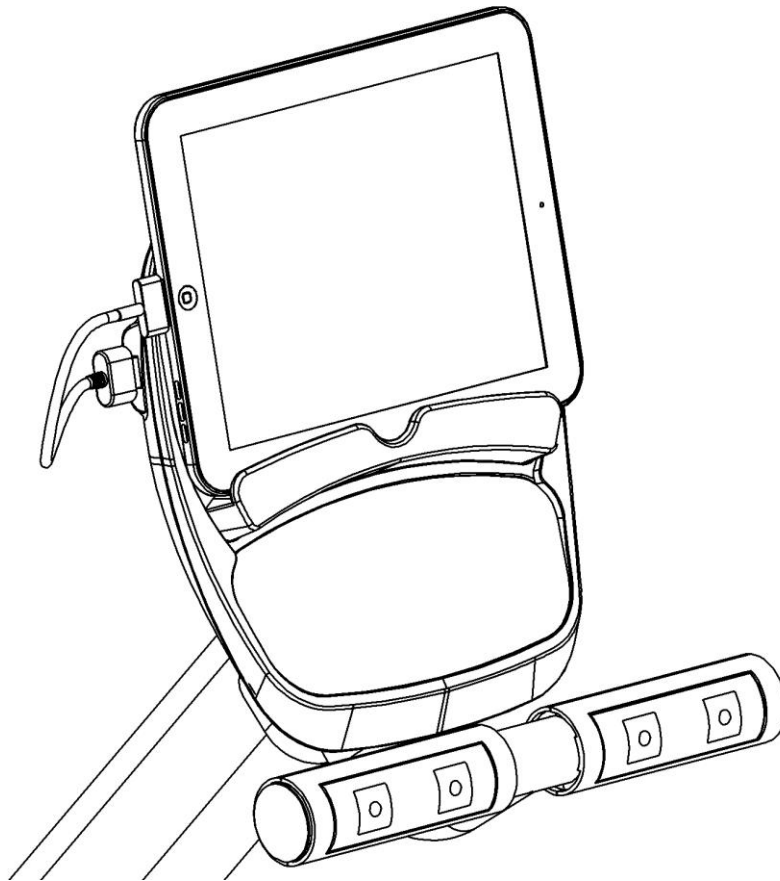

## BASIC OPERATION


- Press QUICK START to immediately begin workout in Manual Mode.
- Press the STOP/RESET key at any time to PAUSE the workout. Press ENTER to resume exercise. (Press STOP/RESET twice to reset program).
- Press and hold the STOP/RESET key for 2 seconds to RESET the computer.
- RESISTANCE: Press the UP or DOWN key to change the Resistance Level during a workout. The Resistance may be adjusted from LEVEL 1 (Lowest) to LEVEL 20 (Highest). The Resistance level is displayed in the top center of the LCD.

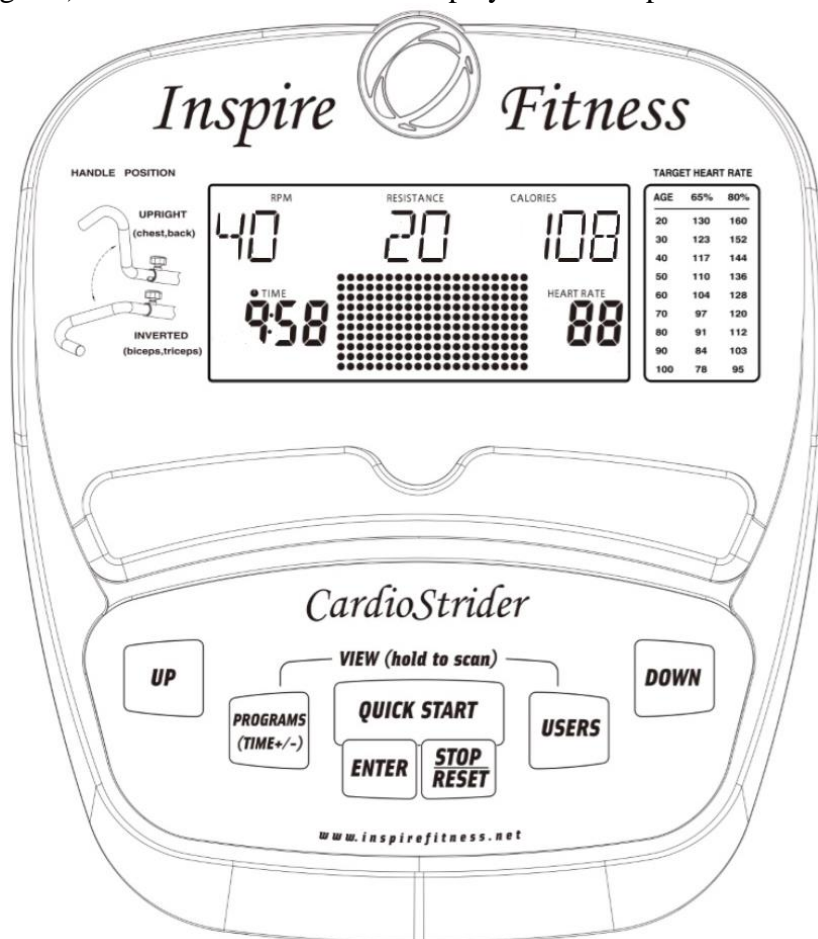

- VIEWING WORKOUT DATA: During a workout RPM and CALORIES are displayed on the scrolling text bar. Press the "PROGRAMS" and "USERS" buttons at the same time to display WATTS and DISTANCE. Press and hold the "PROGRAMS" AND "USERS" buttons for 2 seconds to turn on Autoscan (the computer will switch between RPM/CALORIES and WATTS/DISTANCE every 10 seconds).

## STANDARD PROGRAMS:

The CS2 CardioStrider has 6 Standard workout programs that will automatically adjust the resistance.

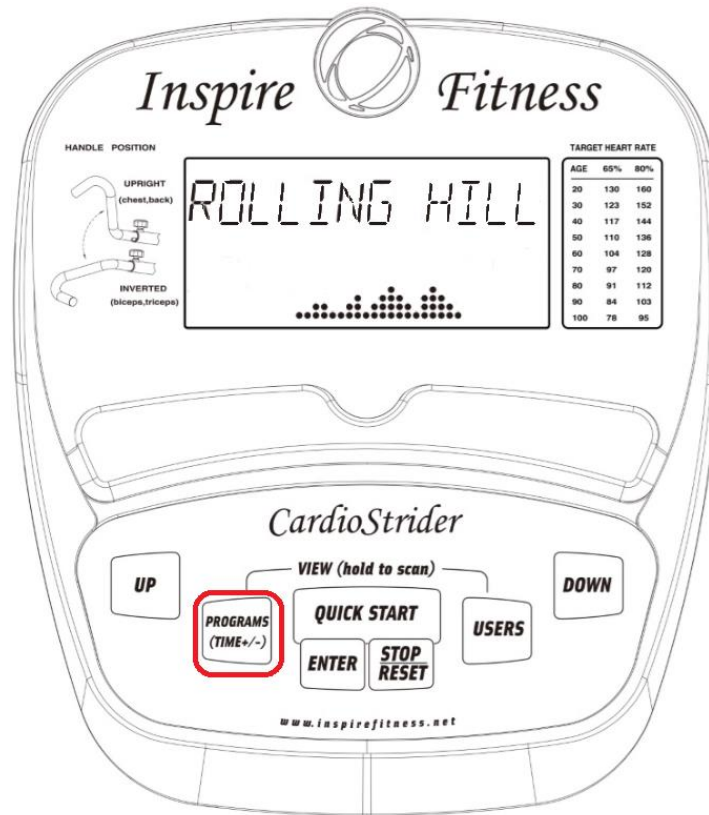

- At startup, press PROGRAMS. Press UP or DOWN to scroll through the PROGRAMS.



- ROLLING HILL
  - PEAK
  - PLATEAU
  - MOUNTAIN CLIMB
  - HILL INTERVAL
  - STRENGTH INTERVAL
- After selecting your program press ENTER

- **LEVEL:** Press UP or DOWN to set maximum resistance level. The resistance will not go above this level during the workout. You may adjust the maximum resistance during your workout. Press ENTER to accept maximum resistance level. Press STOP/RESET to go back to PROGRAM selection.



- **WORKOUT TIME:** Press UP or DOWN to set total workout time. Press ENTER to accept workout time and begin. Press STOP/RESET to go back to LEVEL.  
NOTE: The WORKOUT TIME may be changed during a workout by pressing the "TIME +/-" key. Press UP/DOWN to modify the WORKOUT TIME. Press ENTER to begin workout.



### **FOCUS PROGRAMS:**




The CS2 CardioStrider has 2 programs to focus workout on your upper body (Upper Body Focus, Arms Focus). During the workout, the computer will beep and a scrolling message will give you instructions.



A list of messages and their definitions are described below:

**INVERTED HANDLES:** Place handles in inverted position. This will focus on your biceps and triceps muscles.

**UPRIGHT HANDLES:** Place handles in upright position. This will focus on your chest and back muscles.

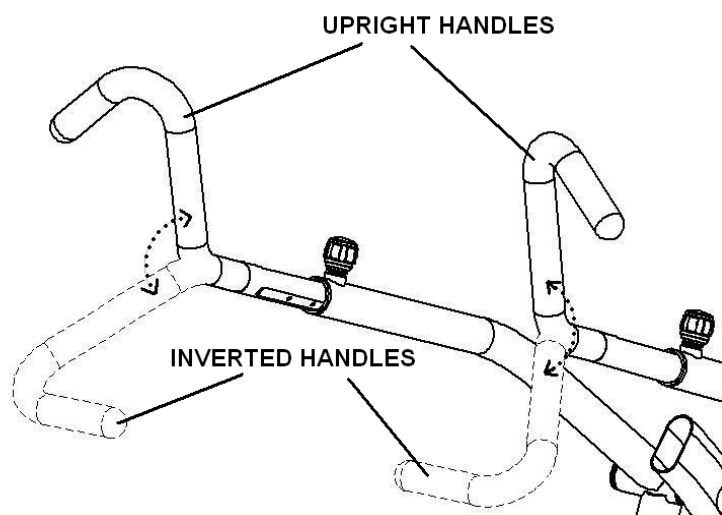

**FEET ON PEDALS:** Place feet on the moving pedals.

**FEET ON PEGS:** Place feet on the pegs. Round tube located at the front of the unit.

**PALMS UP:** In INVERTED MODE, keep palms facing upward to focus workout on the biceps muscle.

**PALMS DOWN:** In INVERTED MODE, keep palms facing downward to focus workout on the triceps muscle.

### **HEART RATE PROGRAMS:**

Heart Rate control programs allow the user to keep their heart rate in a range during a workout. The computer will automatically adjust the RESISTANCE to keep the user heart within the selected range. There are two available Heart Rate control programs.

**FAT BURN:** Keeps your heart rate at 65% of maximum recommended for your AGE.

**CARDIO:** Keeps your heart rate at 80% of maximum recommended for your AGE.

Refer to the table located in the middle of the console for your recommended Heart Rate. The approximate value is based on the users AGE, however, you should always consult with a physician before beginning heart rate programs.



NOTE: Heart Rate Control Programs should only be performed using a Heart Rate Chest Belt for accuracy.

*To order a Heart Rate Chest Belt, call Inspire Fitness at (877) 738-1729.*

#### HEART RATE PROGRAM SETUP

- Press PROGRAMS and press UP or DOWN to find HEART RATE. Press ENTER.
- Press UP or DOWN to toggle between FAT BURN and CARDIO. Press ENTER to select.
- AGE: Press the UP/DOWN key to select your AGE. Press ENTER to accept AGE and move to WORKOUT TIME.
- WORKOUT TIME: Press UP/DOWN to select WORKOUT TIME. Press ENTER to accept WORKOUT TIME and begin 3 minute warmup.

Every Heart Rate Control Workout includes a 3:00 Warmup and a 5:00 Cooldown period in addition to the selected workout time.

NOTE: During a Heart Rate Control Workout press UP/DOWN to adjust your Target Heart Rate. The RESISTANCE cannot be directly controlled during a Heart Rate Control Program.

#### FOCUS PROGRAM SETUP:

- Press PROGRAMS. Press UP or DOWN to scroll through the PROGRAMS.
  - UPPER BODY FOCUS: Focusing on upper body workout, including the chest, back and arms. Also includes lower body workout.
  - ARMS FOCUS: Focusing on upper body workout only. Feet remain on pegs.
- After selecting your FOCUS program press START

- **LEVEL:** Press UP or DOWN to set maximum resistance level. This resistance will not go above this level during the workout. You may adjust the maximum resistance during your workout. Press ENTER to accept maximum resistance level. Press STOP/RESET to go back to PROGRAM selection.



- **WORKOUT TIME:** Press UP or DOWN to set total workout time. Press ENTER to accept workout time and begin workout. Press STOP/RESET to go back to LEVEL.





## USERS

Allows up to 4 different users to enter personal information and save a preferred workout. Computer will save each user workout totals to keep track of accumulated user data (Total Workout Time, Total Distance, Total Calories).



- Press the USER button at startup
- Press the UP and DOWN key to toggle through USER 1 – USER 4



- Press QUICK START to immediately begin workout for that user. (If no data exists for user the computer will prompt you to CHANGE USER SETTINGS)
- Press STOP/RESET to go back to MAIN DISPLAY
- Press ENTER to go to CHANGE USER SETTINGS (SHEET 23)

- Press and *hold* ENTER for 2 seconds to go to USER DATA (SHEET 24)

### CHANGE USER SETTINGS


- GENDER: Scrolling message reads “GENDER” 1 time, then displays “FEMALE”. Press the UP or DOWN buttons to toggle between FEMALE and MALE. Press ENTER to accept setting and move to AGE. Press RESET to go back to CHANGE USER SETTINGS.



- AGE: Scrolling message reads “AGE 40”. Press the UP or DOWN key to adjust the AGE value in 1 year increments. Press ENTER to accept setting and move to WEIGHT. Press STOP/RESET to go back GENDER.



- WEIGHT: Scrolling message reads “WEIGHT 175”. Press the UP or DOWN key to adjust the WEIGHT value in 5 lb increments. Press ENTER to accept WEIGHT and go to PROGRAM SELECTION. Press STOP/RESET to go back to AGE.

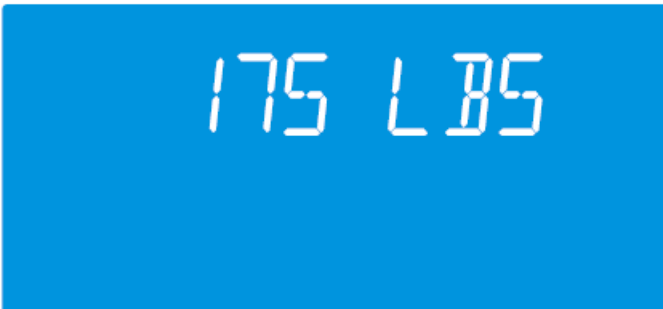

- PROGRAM SELECTION:  
*See Program Selection on page 17.*

**USER DATA:**

A scrolling message reads “USER DATA” 1 time. Press the UP/DOWN to toggle between “ACCUMULATED” and “CHANGE NAME”. Press ENTER.



‘CHANGE NAME’: USER 1-4 may be changed to a CUSTOM user name.

- Press the UP or DOWN key to select letter (or number).
- Press ENTER to accept letter (or number) and move to next location
- Press the RESET key to move back to the previous location.
- A blinking underscore (“\_”) is used to show the current location.
- A Maximum of 8 alpha-numeric characters may be used.
- After pressing START past at 8<sup>th</sup> space, USER NAME is set.

‘ACCUMULATED’: USER workout data is saved in the computer memory after each workout and added to the totals for that user. User may view the workout totals for TOTAL WORKOUT TIME (minutes), TOTAL DISTANCE (miles), TOTAL CALORIES

- Press the UP and DOWN key to scroll through accumulated data (WORKOUT TIME(*minutes*), DISTANCE(*miles*), CALORIES(*calories*)).
- Press RESET to go back to USER DATA
- Press the ENTER to reset accumulated data. A scrolling message reads “RESET DATA” 1 time.
- A scrolling message reads “NO”. Press the UP or DOWN key to toggle between NO and YES.
- Press ENTER on YES to reset data to 0 and go back to USER DATA.
- Press START on NO to cancel data reset and go back to USER DATA.
- Press RESET to go back to USER DATA.

## PARTS LIST


F/N	PART NUMBER	DESCRIPTION	DETAILED DESCRIPTION	QTY	U/M
1	RC800-360-002	Backrest support tube		1	PCS
8	RC800-401-002	Backrest frame		1	SET
9	BC830-881-006J	Water bottle/ Cage Assembly	LMBG Qualified	1	PCS
16	0116-706-002	Lock Washer	φ6 Black Zinc Plating	4	PCS
17	RC802-630-001/E	Bolt	M5*10	4	PCS
19	RC802-630-001	Console	Rev.2013	1	PCS
21	RC800-330-004	Handlebar-R Assembly		1	PCS
23	TR511-561-038	Philips washer head screw	M4*8, Black Zinc	8	PCS
24	RC800-801-002	Outer Cover R		1	PCS
27	0111-408-718	Carriage Bolt	M8*70	4	PCS
28	RC800-341-002	Rear Stabilizer		1	PCS
29	0116-608-008	Arc Washer	φ8,	18	PCS
30	0110-308-008	Cap Nut	M8,	4	PCS
31	0113-008-168	Allen head bolt	M8*16	33	PCS
32	0116-308-010	Spring washer	φ8	24	PCS
33	0116-008-010	Flat Washer	φ8	19	PCS
34	RC802-200-001	Main Frame	Rev.2013	1	PCS
35	RC800-401-001	Seat		1	PCS
36	RC800-801-001	Outer Cover L		1	PCS
37	RC802-630-001/F	Lower sensor wire	Rev.2013	1	PCS
39	RC800-350-001	Computer Post With Heart Rate		1	PCS
42	RC800-330-003	Handlebar-L Assembly		1	PCS
43	0111-008-208A	Allen Head screw	M8*20	4	PCS
44	0116-208-508A	Large Flat Washer	φ8*φ28	4	PCS
47	RC800-300-002	Swing Arm R		1	PCS
48	RC800-801-015	Philips screw	M6*12	2	PCS
49	0113-105-108	Cross recessed pan head screws	M5*10	6	PCS
51	RC800-801-202	Spring Knob	Black	2	PCS
52	0110-412-599	Flange Nut	M12*1.25	2	PCS
53	RC800-801-010	Upper Pedal L		1	PCS
54	RC800-300-001	Swing Arm L		1	PCS
55	RC800-310-002	Pedal Tube R		1	PCS
56	0114-742-198	Philips self-tapping screw	ST4.2*19	30	PCS
57	0114-142-088	Philips Self-tapping Screw	ST4.2*8, F Type	24	PCS
58	RC800-801-013	Lower Pedal Cover R		1	SET
59	RC800-801-012	Upper Pedal Cover R		1	SET


61	RC800-801-020	Adjusting Foot Pad	M10	1	PCS
62	RC800-340-001	Front Stabilizer		1	PCS
63	RC800-301-009	Bushing	φ48*18	2	PCS
64	RC800-801-011	Lower Pedal Cover L		1	SET
65	RC800-310-001	Pedal tube L		1	PCS
70	RC800-380-002	Seat adjusting handle R		1	PCS
75	RC800-370-001	Seat support frame		1	PCS
80	RC800-380-001	Seat adjusting handle L		1	PCS
81	RM610-881-101	Buffer pad	30*30*15	1	PCS
82	RC800-201-019	Rail	Chrome	1	PCS
84	0114-129-068	Phillips self-tapping screw	ST2.9*6	6	PCS
85	RC802-630-001/I	Data Cable, Main	Rev.2013	1	PCS
86	RC800-801-009	Rail cover		1	PCS
91	RC800-801-004	Main Cover R		1	PCS
92	RC802-391-002	Upper mounting bracket R	δ 2.0 (rev.2013)	1	PCS
93	BE760-881-001B	Disc Cover	φ80	2	PCS
96	RC800-221-005	Hex Nut	M16*1.0	1	PCS
97	RC800-221-004	Spacer 3		1	PCS
98	0200-310-53	Bearing	6004ZZ	2	PCS
99	RC800-221-002	Spacer 1		1	PCS
100	BC770-801-011	Sensor Bracket		1	PCS
101	RC802-630-001/J	Speed Sensor Cable		1	PCS
104	RC802-220-002	Pulley Assembly, Aluminum	φ260,J6,rev.2013	1	PCS
106	0249-200-46	Belt	460, J6	1	PCS
109	RC802-630-001/K	Power Input Receptacle Cable	rev.2013	1	PCS
110	RC802-391-001	Upper Mounting Bracket L	δ 2.0 , rev.2013	1	PCS
111	RC800-801-003	Main Cover L		1	PCS
112	RC800-391-004	Lower mounting bracket R	δ 2.0 , rev.2013	1	PCS
113	0114-142-198	Phillips self-tapping screw	ST4.2*19	3	PCS
115	RC802-630-001/L	Lower Control Board	Rev.2013	1	PCS
116	RC800-801-005	Base tube Cover L		1	PCS
117	RC800-801-007	Front Cover L		1	PCS
118	BC680-801-010A	End cap		2	PCS
119	0113-706-162	Allen Head Screw	M6*16 , rev.2013	4	PCS
120	CE-S05-000/RC800-230-001	EMS Fly Wheel /Idler Assembly	9 kg, rev.2013	1	SET
127	RC802-391-003	Lower Mounting bracket L	δ 2.0 , rev.2013	1	PCS
128	RC800-801-008	Front Cover R		1	PCS
129	RC800-801-006	Base tube Cover R		1	PCS

130	RC802-630-001/M	Transformer	type A plug, 110/220 VAC	1	PCS
131	RC800-391-007	Plastic sleeve	Φ10*41.5	1	PCS
132	0114-142-558	Phillips self-tapping screw	ST4.2*55	1	PCS
134	0114-742-068	Philips washer head screw	ST4.2*6, F Type	6	PCS
135	RC800-561-005	Child safety lock	Φ2.5*Φ8*156	1	SET
137	RC802-891-002	Hardware Pack	rev.2013	1	SET
138		Crank Removal Tool	S19	1	SET
139	0113-208-708	Allen head bolt	M8*70	1	PC
140	0110-808-008	Cap Nylon-nut	M8	1	PCS
141	BTBRCCP00114	INSPIRE CS2 STICKER	190*18mm	2	PCS
142	RC802-240-002	Crank/Pedal Tube Assembly		2	SET
143	RC802-350-002	Heart Rate Handlebar Assembly		1	SET
144	0113-306-128	Flat head screw	M6*12/Black Zinc	4	PCS
145	RC802-630-001	Pulse sensor wire		2	PCS
146	0110-406-003	Flange Nut	M6	4	PCS
147	0113-104-108	Cross recessed pan head screws	M4*10	4	PCS


**ALTERNATE PLUG OPTIONS (to be ordered separately)**

TYPE	PART NUMBER	COUNTRIES	PHOTO
A-type	RC802-631-002 (included with Transformer)	United States, Japan, Phillipines, Canada, Columbia, Ecuador, Honduras, Mexico, Panama, Peru, Taiwan	
I-type	RC802-631-003	Australia, New Zealand, China	
C-type	RC802-631-004	Europe, Argentina, Russia, Brazil, Egypt, India, Indonesia, Israel, Pakistan, South Korea, South Africa	
G-type	RC802-631-005	United Kingdom, Hong Kong, Singapore	

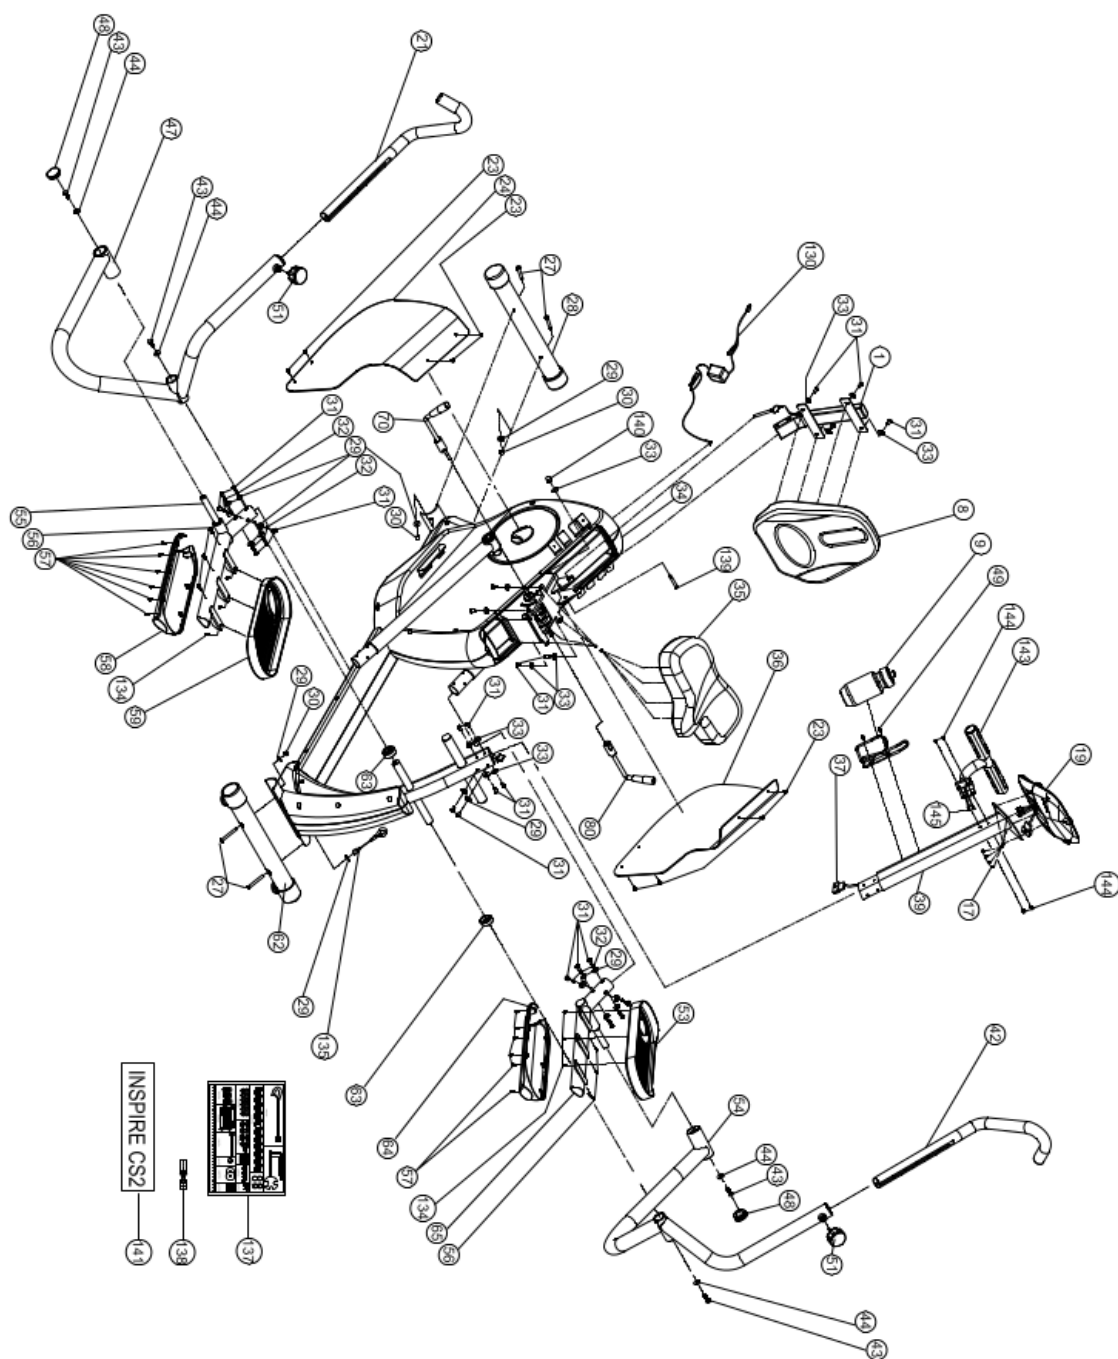

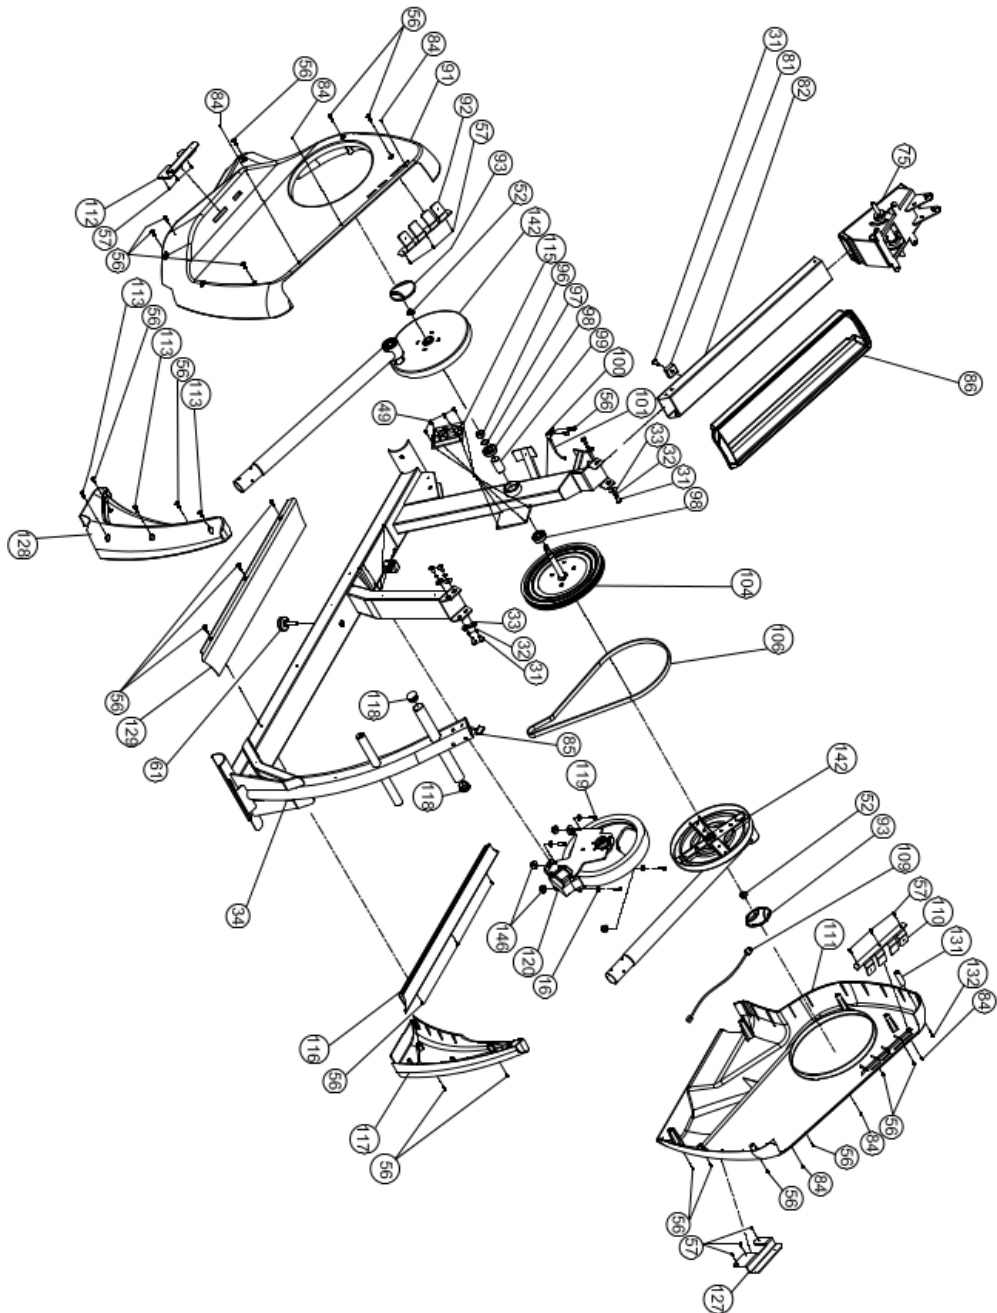



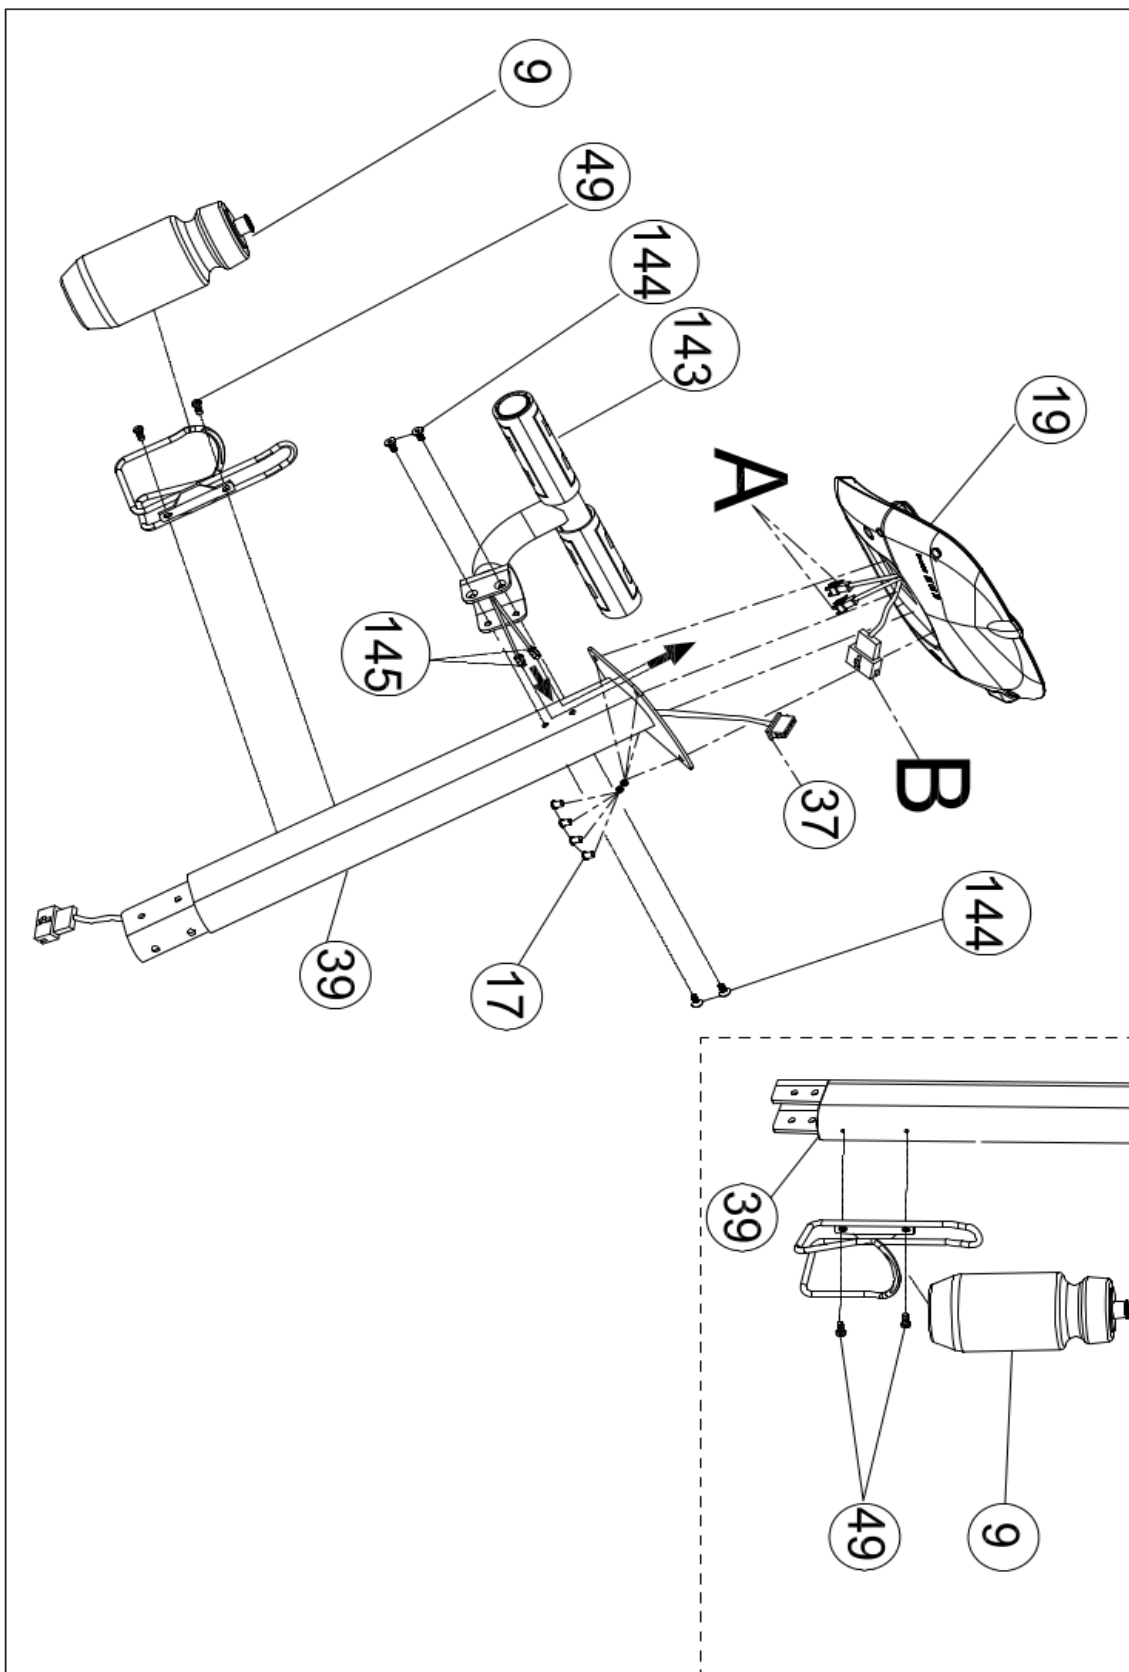

# Warranty

This Warranty applies to Inspire **Cardio** products manufactured or distributed by Health In Motion LLC.

## **RESIDENTIAL WARRANTY:**

### **10 YEAR FRAME (CS2)**

Includes Main Frame and Welds

### **3 YEAR PARTS (all cardio units):**

Excluding Paint and Finish (unless defective out of box)

### **1 YEAR LABOR (all cardio units)**

## **LIGHT COMMERCIAL WARRANTY**

### **10 YEAR FRAME**

Includes Main Frame and Welds

### **1 YEAR PARTS:**

Excluding Paint and Finish (unless defective out of box)

### **1 YEAR LABOR**

Inspire Fitness warrants that the Product you have purchased from Health In Motion or from an authorized Inspire reseller is free from defects in materials or workmanship under normal use during the warranty period. Your sales receipt, showing the date of purchase of the Product, is your proof of the date of purchase. You must demonstrate proof of purchase to obtain a warranty. This warranty extends only to you, the original purchaser. It is not transferable to anyone who subsequently purchases the product from you. It excludes expendable parts such as paint and finish and cosmetic items, including, but not limited to the following: grips, seats and labels. This Warranty becomes VALID ONLY if the Product is assembled / installed following the instructions / directions included with the Product.

## **Replacement and repair of parts**

During the warranty period Inspire will, at no additional charge, repair or replace the product if it becomes defective, malfunctions, or otherwise fails to conform with this warranty under normal personal, family, or household use. In repairing the product, Inspire Fitness may replace defective parts with, at the option of Inspire Fitness, serviceable used parts that are equivalent to new parts in performance, or new parts. All exchanged parts and products replaced under this warranty will become the property of Inspire Fitness. Inspire Fitness reserves the right to change manufacturers and or specification of any part to cover any existing warranty.

## **Service procedures**

To obtain warranty parts, you must return the parts to Inspire Fitness or an authorized Inspire Fitness retailer in its original container (or equivalent). You must pre-pay any shipping charges, taxes, or any other charges associated with transportation of the product. In addition, you are responsible for insuring any product shipped or returned. You assume the risk of loss during shipment. You must present Inspire Fitness with proof-of-purchase documents (including the date of purchase, Model, and Serial Number). Any evidence of alteration, erasing or forgery of proof -of-purchase documents will be cause to void this warranty. You may be charged a trip charge if you are outside a reseller's service area. Register your warranty online visit [www.inspirefitness.net](http://www.inspirefitness.net)

## **Conditions and Exceptions**

This warranty does not extend to any product not purchased from Inspire Fitness or from an authorized Inspire Fitness reseller. Labor claims must be authorized prior to performing service or they may be denied. This warranty does not extend to any product missing a serial number or with a serial tag that has been altered or defaced. This warranty does not extend to service calls to correct installation of the equipment or instruct owners on how to use the equipment. This warranty does not extend to any product that has been damaged or rendered defective; (a) as a result of accident, misuse, or abuse; (b) by the use of parts not manufactured or sold by Inspire Fitness; (c) by modification of the product; (d) as a result of service by anyone other than Inspire Fitness, or an authorized Inspire Fitness warranty service provider; (e) product that has not been properly maintained (follow maintenance schedule found on product); (f) as a result of neglect. Should any product submitted for warranty service be found to be ineligible, an estimate of repair cost will be furnished and the repair will be made if requested by you upon Inspire Fitness receipt of payment or acceptable arrangement of payment.

**Disclaimer**

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY INSPIRE FITNESS MAKES NO OTHER WARRANTIES; EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. INSPIRE FITNESS EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS WARRANTY. NEITHER INSPIRE FITNESS NOR ANY OF ITS AFFILIATES SHALL BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. INSPIRE FITNESS IS NOT RESPONSIBLE FOR THE REPAIR OR REPLACEMENT OF ANY PARTS THAT INSPIRE FITNESS DETERMINES HAVE BEEN SUBJECTED AFTER THE DATE OF MANUFACTURE TO ALTERATION, NEGLECT, ABUSE, MISUSE, NORMAL WEAR & TEAR, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, OR ANY ACT OF GOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may also have other rights that may vary from state to state. This is the only express warranty applicable to Inspire Fitness' "Inspire" branded cardio products. Inspire Fitness neither assumes nor authorizes anyone to assume for it any other express warranty.