

FW-1173-MM User's Manual

Part 1

(Product Overview)

Version 4.0

Seyeon Technology Co., Ltd

www.seyeon.co.kr

www.flexwatch.com

Contents

- 1. Product Overview3
 - 1.1. FlexWATCH®3
 - 1.2. FW-1173-MM3
 - 1.3. Key Functions of FW-1173-MM4
 - 1.4. Technical Specification of FW-1173-MM5
 - 1.5. FW-1173-MM Packing List7
- 2. Hardware Description8
 - 2.1. FW-1173-MM Front Panel View8
 - 2.2. FW-1173-MM Rear Panel View9
 - 2.2.1. CTL Port Description9
- 3. FW-1173-MM HW installation and basic setup11
 - 3.1. Before installation11
 - 3.2. Factory Default Condition11
 - 3.3. FW-1173-MM Hardware installation11

1. Product Overview

1.1. FlexWATCH®

FlexWATCH® is a device which digitizes analog Video from CCD Camera as digital stream and transmits over Internet.

Users can monitor Video at any places in real time by MS Internet Explorer or Netscape Communicator without any additional software, if Internet access is possible.

1.2. FW-1173-MM

FlexWATCH® 1173MM is a stand-alone device transmitting Video from built-in Analog Camera over IP(Internet Protocol) Network.

It can transmit up to 15fps at 1.3M over the existing network such as LAN, leased line, DSL and Cable modem. You can monitor Video of FW-1173-MM through either web browser(MS IE or Netscape Communicator), if FW-1173-MM is connected to Network. FW-1173-MM supports Video compression both Motion-JPEG and H.264 simultaneously so that user can choose appropriate Video compression for the purpose.

FW-1173-MM supports NTSC/PAL and 4 different size and 6 levels of Video quality.



Picture 1 : FW-1173-MM

1.3. Key Functions of FW-1173-MM

- Standalone device built-in web server
- 10M/100M Auto Sensing Ethernet
- Configure and control device through Web browser
- Max 30 fps transmission speed on TCP/IP network
- Effective Bandwidth & Bit-rate Control (VBR/CBR) by H.264
- Supports Dual Stream (Motion JPEG & H.264)
- 1ch Voice Encoding / 1ch Voice Decoding
- Support Dynamic IP users by IPCCTVDNS server
- Support Various PTZ (Pan/Tilt/Zoom) Devices
- Support Sensor Input, Digital Output
- Support Transparent mode
- Built-in 2 way Audio transmission (1ch A-in, 1 A-out)
- Encryption function by user authentication
- Support Modem (Dial-in, Dial-out)
- Image transmission function via FTP, Email

1.4. Technical Specification of FW-1173-MM

Model Name	FW-1173-MM
Hardware	32bit Embedded CPU Flash 8Mbytes /SDRAM: 128Mbytes Linux version 2. 6.xx operating system Battery backed up real-time clock
Image sensor	Optical format 1/3-inch (5:4) Active imager size 4.6mm(H) x 3.7mm(V), 5.9mm diagonal Active pixels 1280H x 1024V Pixel size 3.6 x 3.6 μ m Color filter array RGB Bayer pattern Shutter type Electronic rolling shutter (ERS) Frame rate QSXGA(2048 x 1536) 15 fps VGA (640 x 480) 30 fps Responsivity 1.0 V/lux-sec (550nm) SNR MAX 44dB
Lens	Shipped without lens CS mount No Iris Control For 1.3 Mega Pixel Sensor
Minimum illumination	2-10000 lux, F1.8
Video compression	Motion JPEG H.264
Resolution	SXGA(1280x1024), VGA(640x480), CIF(320x240), QCIF(160x112)
Frame rate (each channel)	Motion JPEG: Up to 15 fps at SXGA(1280x1024) (Secondary Stream at QCIF) H.264: Up to 15 fps at SXGA(1280x1024) (Primary Stream at QCIF)
Video Streaming	Motion JPEG and H.264 Dual Streaming (Simultaneously) Controllable frame rate and bandwidth
Image setting	Compression levels: 6 (Motion JPEG) / 6 (H.264)
Voice	APCM 4bit IMA Sampling rates 8KHz Audio 1ch in & 1ch out
LAN interface	10/100BaseT Ethernet auto sensing
Alarm I/O Interface	1 Photo-coupled inputs and 1 Relay output
Power Over Ethernet	Option
Serial Interface	One serial port for console, modem(PSTN & GSM), serial input/output device, PTZ CTL Port is RS-232, RS-485 Max Baudrate: 115200 bit/s
Security features	Multi user level protection for camera access, PTZ, Alarm I/O
Advanced Service	Up to 15.5M memory for Pre/Post alarm buffer e-mail, FTP, alarm Buffer by event or schedule IP notification, Alarm Notification to e-mail, CGI Call by event or schedule
Built-in Motion detections	Accuracy: 12x12=144 blocks Motion Sensitivity : -100 ~ 100 : 100 is hypersensitive

PTZ & UART Control Support	PTZ and UART device control through serial interface Up to 35 PTZ protocols from Pelco “ P” & “ D” protocol, Vicon V1311RB, Samsung, Honeywell and Etc.,X10 device control Dial in/out via PSTN or GSM modem
Others	Transmit Serial input data transfer with Video IP notification by e-mail
Management	Configurable by serial, web or telnet Remote system update via telnet, FTP OR web browser.
Developer support	Provides HTTP CGI API ActiveX control development kit
PWR Supply	SMPS input: 100~240VAC, 300mA Output: DC 12 Volt, 800mA
PWR Consumption	DC 12Volt 600 mA
Operating Environment	Temperature : 32° ~ 122°F (0° ~ 50°C) Humidity : 20 ~ 80% RH(non-condensing)
Accessories	Test LAN cable CD for User Guide, Installation wizard Quick Installation guide
Miscellaneous	Freely downloadable NDVR Software AVI conversion tool support by FW-voyager. Work with FW-Manager(NDVR S/W) Dynamic IP support through IPCCTVDNS
Users	32 simultaneous users
Installation, management and maintenance	Installation CD and web-based configuration Firmware upgrades over HTTP or FTP , firmware available at www.flexwatch.com
Video access from Web browser	Video access from Web browser
Minimum Web browsing requirements	Pentium III CPU 500 MHz or higher Windows XP, 2000, NT4.0*, Internet Explorer 6.x or later
System integration support	Powerful API for software integration available at http://www.flexwatch.com , including Simple Viewer API, FlexWATCH Control SDK, event trigger data in video stream, embedded scripting and access to serial port peripherals over HTTP/TCP User can be installed user program daemon for event notification or sending image. Embedded operating system: Linux 2.6
Supported protocols	HTTP, TCP/IP, FTP, Telnet, RARP, PPP, PAP, CHAP, DHCP, SMTP client(e- mail), NTP, RTP/RTSP
Applications	FlexWATCH Manager 16/25/32/64/128/256 (not included)
Approvals	KCC, FCC : Class A, CE : Class A, RoHS
Dimensions (HxWxD) and weight	Size : 116 mm(L) x 70 mm(W)X 52 mm(H) Weight : 285 g without lens & power supply

Table 1 : FW-1173-MM Specification

1.5. FW-1173-MM Packing List

FW-1173-MM's packing box includes the following items





FW-1173-MM	1ea	
Power Supply Unit (Power Cable & SMPS DC12V 0.8A Adapter)	1ea	
Direct Cable	1ea	
CD (User's Manual, installation wizard and Pictures)	1ea	

Table 2 : FW-1173-MM Packing List



Please check all the listed items are included in your package. For any missing items, please contact your local distributor.

2. Hardware Description

2.1. FW-1173-MM Front Panel View

Picture 2 : FW-1173-MM Front Panel




	Name	Description
B	LENS	CS-MOUNT1.3 Mega Pixel LENS, Only with Lens option separately sold (IRIS LENS can't be mounted)

Table 3 : FW-1173-MM Front Panel Description

2.2. FW-1173-MM Rear Panel View

Picture 3 : FW-1173-MM Rear Panel View

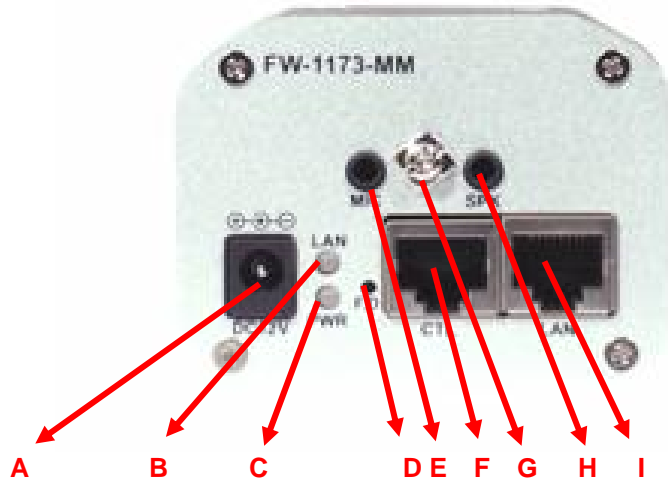

	Name	Description
A	Power Conn.	12V DC Power Input port
B	LAN(Tx/Rx) LED (RED/GREEN)	RED LED – LAN TX/RX(Light blinks when there is data transmission at the connected LAN. GREEN LED – LAN LINK(Light blinks when LAN is physically connected.)
C	POWER LED (RED/GREEN)	RED LED - Light blinks when power is provided.) GREEN LED – Light blinks when IP setup is done.
D	Factory Default	This button can reset the factory default settings at the system. Especially when a user lost his/her admin-password, or when it got any uncertain faulty operation. - After reboot the system, wait until hearing two times of beep sound. - Keep pressing FD button for 5~10 seconds until hearing three times short beep sound. ACT LED blinks during the process. The system will reboot automatically when it's completed.
E	MIC Conn.	1ch Audio Input Port
F	CTL Conn.	CTL Port (RS-485, RS-232, DI, DO)
G	Grounding Connector	Grounding Connector
H	SPEAKER Conn.	1ch Audio Output Port
I	LAN	LAN Connector



Table 4 : FW-1173-MM Rear panel Description

2.2.1. CTL Port Description

The following is Pin-out information of CTL Port to connect PTZ or Sensor (DI/DO). Pin number starts

from the left.

For RS-232 connection for Serial input device, Modem or Console (Hyperterminal.connection), RXD,TXD and GND are used. For connection to PC, RXD and TXD are used. RXD and TXD should be cross to communicate properly

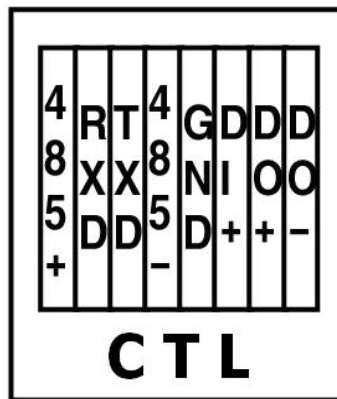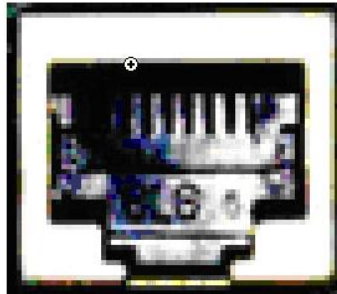

Picture 4 : CTL Port Description

3. FW-1173-MM HW installation and basic setup

3.1. Before installation

- Read carefully User's Manual
- Check User's Network (IP Address, Network Mask and default gateway)
- Secure IP address for FW-1173-MM

3.2. Factory Default Condition

The following table shows the factory default condition. Please refer to this when you need to change the values on admin menu.

	Factory Default Condition
Admin ID	root
Admin password	root
IP address	10.20.30.40
Network mask	255.255.255.0
Gateway	10.20.30.1
Wireless LAN (Option)	Disabled

Table 5 : Factory Default Condition



Factory default Admin ID and Password are all lower case letters. You can change the password with Capital letters.

3.3. FW-1173-MM Hardware Installation

Following steps are the physical installation process for FW-1173-MM.

1. Connect cable to LAN port of FW-1173-MM.
2. Connect power cable and turn on power of FW-1173-MM (Await until booting is finished)

After that, you need to follow the steps below.

- First, Network Configuration by FW-installer.
- Second, Camera Configuration by FW-installer or admin-menu.
- Third, Service Configuration by FW-installer or admin-menu.

You can configure most settings on Admin menu by Web Browser so you have to configure Network first.