

TOTALIFT® TL-Series AEMVC



User Manual

TOTALIFT®

Index

1. Introduction.....	3
Responsibility disclaimer.....	3
2. Safety Instructions and Warnings.....	4
General.....	4
Shock prevention.....	4
Burn and bodily injury prevention.....	4
Fire and explosion prevention.....	5
Arcing and burning of connector.....	5
Medical and first aid treatment.....	5
Equipment warning labels.....	5
3. Description of the Charger.....	5
Technical data.....	7
4. Installation of the Charger.....	8
AC input connection of the charger.....	8
How to move the charger.....	9
5. How to Use the Charger.....	10
How to connect the battery and start the charge	10
How to stop the charger and disconnect the battery	11
Thermal protection.....	12

1. INTRODUCTION

Before using your *MVC* battery charger, please take the time to read these instructions carefully.

The owner's manual is an important part of the charger. It's recommended to keep it in good condition for the lifetime of the charger. It should be kept in a dry and clean place, always available to the users.


To indicate important instructions, the following pictures are used:



“Caution: ” *This operation can be dangerous for the user.*



“Attention: ” *This operation is important for the good working of the charger.*



On the charger, this picture is placed near devices having dangerous high voltages.

The charger is marked with a technical label, reporting the following data:

- C CSA US mark;
- CE mark;
- Model;
- Serial number;
- Weight;
- Input voltage;
- Maximum input current (A);
- Maximum power consumption (KVA);
- Input frequency;
- Maximum voltage of the battery (output voltage);
- Maximum charge current (output current).

RESPONSIBILITY DISCLAIMER

The manufacturer of the *MVC* battery charger will not be responsible for damages and/or injuries caused by the charger in these situations:

- The charger is not installed properly by a qualified electrician;
- Maintenance operations are not done by a qualified electrician;
- The charger is not used according to the instructions included in this manual;
- The charger is not connected to the correct input supply (see data label on the box);
- The battery is damaged during the charge;
- The charger has been modified without the authorization of the manufacturer;
- Non-original spare parts are used in the charger;
- Wrong spare parts are used in the charger.

2. SAFETY INSTRUCTIONS AND WARNINGS

GENERAL

Battery charging products can cause serious injury or death, or damage to other equipment and property, if the operator does not strictly observe all safety rules and take precautionary actions.

Safe practices must be learned through study and training before using this equipment. Only qualified personnel should install, use, or service this equipment.

SHOCK PREVENTION

Bare conductors or terminals in the output circuit, or ungrounded, electrically-live equipment can fatally shock a person. To protect against shock, have a certified electrician verify that the equipment is adequately grounded and identify what terminals and parts are electrically HOT.

The body's electrical resistance is decreased when wet, permitting dangerous current to flow through the body. Do not work in a damp area without being extremely careful. Stand on a dry rubber mat or dry wood and use insulating gloves when dampness or sweat cannot be avoided. Keep clothing dry.

INSTALLATION AND GROUNDING - A power disconnect switch must be located at the equipment. Check the data label for voltage and phase requirements. If only 3-phase power is available, connect single-phase equipment to **ONLY TWO WIRES** of the 3-phase line.

DO NOT CONNECT the equipment grounding conductor to the third live wire of the 3-phase line as this makes the equipment frame electrically HOT, which can cause a fatal shock.

If a grounding conductor is part of the power supply cable, be sure to connect it to a properly grounded switch box or building ground. If not part of the supply cable, use a separate grounding conductor. Don't remove a ground prong from any plug. Use correct mating receptacles. Check ground for electrical continuity before using equipment. The grounding conductor must be of a size equal to or larger than the size of the line conductors.

CHARGING LEADS – Inspect leads often for damage to the insulation. Replace or repair cracked or worn leads immediately. Use leads having sufficient capacity to carry the operating current without overheating.

BATTERY TERMINALS – Do not touch battery terminals while equipment is operating.

SERVICE AND MAINTENANCE – Shut OFF all power at the disconnect switch or line breaker BEFORE inspecting, adjusting, or servicing the equipment. Lock switch OPEN (or remove line fuses) so that the power cannot be turned ON accidentally.

Disconnect power to equipment if it is to be left unattended or out of service.

Disconnect battery from charger.

Measure voltage on capacitors and, if there is any voltage reading, wait 5 minutes before to proceed.

Keep inside parts clean and dry. Dirt and/or moisture can cause insulation failure. This failure can result in high voltage at the charger output.

BURN AND BODILY INJURY PREVENTION

The battery produces very high currents when short circuited, and will burn the skin severely if in contact with any metal conductor that is carrying this current.

Do not permit rings on fingers to come in contact with battery terminals or the cell connectors on top of the battery.

Battery acid is very corrosive. Always wear correct eye and body protection when near batteries.

FIRE AND EXPLOSION PREVENTION

When batteries are being recharged, they generate hydrogen gas that is explosive in certain concentrations in air (the flammability or explosive limits are 4.1% to 72% hydrogen in air). The spark-retarding vents help slow the rate of release of hydrogen, but the escaping hydrogen may form an explosive atmosphere around the battery if ventilation is poor.

The ventilation system should be designed to provide an adequate amount of fresh air for the number of batteries being charged. This is essential to prevent an explosion.

Always keep sparks, flames, burning cigarettes, and other sources of ignition away from the battery recharging area. Do not break "live" circuits at the terminals of batteries. Do not lay tools or anything that is metallic on top of any battery.

ARCING AND BURNING OF CONNECTOR

To prevent arcing and burning of the connector contacts, be sure the charger is OFF before connecting or disconnecting the battery. The ammeter should NOT indicate current flow.

MEDICAL AND FIRST AID TREATMENT

First aid facilities and a qualified first aid person should be available for each shift for immediate treatment of electrical shock victims.

EMERGENCY FIRST AID: Call physician and ambulance immediately and use First Aid techniques recommended by the American Red Cross.

DANGER: ELECTRICAL SHOCK CAN BE FATAL.

If a person is unconscious and electric shock is suspected, do not touch the person if he or she is in contact with charging equipment, battery, charging leads, or other live electrical parts. Disconnect power at wall switch and then use First Aid.

Dry wood, wooden broom, and other insulating material can be used to move cables, if necessary, away from person.

IF BREATHING IS DIFFICULT, give oxygen.

IF NOT BREATHING, BEGIN ARTIFICIAL BREATHING, such as mouth-to-mouth.

IF PULSE IS ABSENT, BEGIN ARTIFICIAL CIRCULATION, such as external heart massage.

In case of acid in the eyes, flush very well with clean water and obtain professional medical attention immediately.

EQUIPMENT WARNING LABELS

Inspect all precautionary labels on the equipment.

Order and replace all labels that cannot be easily read.

3. DESCRIPTION OF THE CHARGER



Caution:

This charger should be used by qualified personnel only.




Caution:

This charger has been designed for professional use. All the charge parameters must be set by the user at every charge cycle, therefore it's not suitable as a replacement for traditional chargers. (TS, TL, ETC.)



Attention:

This charger does not have protection devices for the battery and it's not automatic, therefore it's necessary to set the charger parameters properly before every charge cycle.



Attention:

If the charger is not configured properly, the battery can be damaged! Read the technical documentation of the charger and the battery before using them and keep the temperature of the battery under control as long as it is connected with the charger.


The AEMVC Multi voltage battery chargers have been designed to charge Pb batteries. This equipment can convert the AC main supply in a DC output at the correct voltage, in order to charge the battery cells.

This charger is controlled by a high frequency switch mode regulator therefore it can charge batteries of any type, any voltage and ampere-hour size.

Refer to the data label on the charger for the maximum output DC voltage and the maximum output DC current.

Two operating modes can be chosen:

- Current generator.
- IUa battery charger.

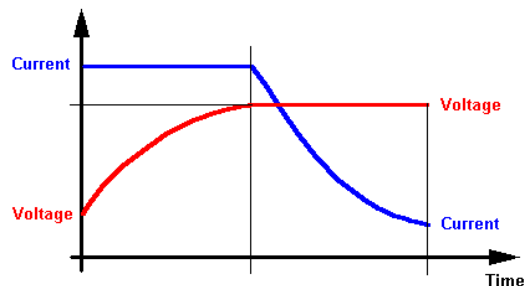

In "Current generator" mode, it's possible to connect any type of battery or other loads to the charger. The output current is regulated from zero to the maximum value with the appropriate potentiometer and the timer is used to set the total time of charger (at constant current). This feature is useful to recover old sulphated batteries or to charge stacks of cells.

In "IUa battery charger" mode it's possible to select the voltage threshold with the appropriate knob and selector.

The current can be regulated with the appropriate potentiometer from zero to the required value, and the time of charge can be set with the timer.

When the voltage of the battery reaches the threshold value, the charger keeps this voltage constant, while the current decreases.

TECHNICAL DATA

External size:	500 x 440 x 900 mm
Weight:	90-150 kg (see data label)

These are the principal devices included in the charger, available to the user:

- LED Control panel;
- Amp-meter (Analog or Digital);
- Volt-meter (Analog or Digital);
- Timer (Mechanical or Digital);
- Knob + Selector for battery voltage setting;
- Potentiometer for output current setting;
- No.2 Cables for battery connection;
- No.1 Cable for main supply connection;

Inside the charger there are the following devices, not available to the user:


- AC and DC power contactors;
- Power transformer;
- Rectifier;
- DC link Capacitors;
- Cooling system (heatsink + fan);
- High Frequency Power Module ;
- Main driver board;
- Auxiliary board for reverse polarity protection;
- Auxiliary board for voltage control;
- Output inductor;
- Output fuse.

Please refer to the "MVC SERVICE MANUAL" for a detailed description of the internal parts and circuits.

4. INSTALLATION OF THE CHARGER

Conditions of use:

- Operating temperature: 5°C to 40°C
- Storage temperature: -20°C to 60°C
- Relative humidity: less than 75%



Caution:

The charger should be installed by qualified personnel only.



Attention:


Check that the unit's maximum input power is available from your power supply. Check that the unit's operating voltage is identical to your local power supply.



Attention:


To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not use the unit in presence of flammable gas, because it can generate sparks.



Caution:

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



Attention:

Allow adequate air circulation to prevent internal heat build-up. Do not place the unit near materials that may block the ventilation slots.


Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.

AC INPUT CONNECTION OF THE CHARGER

- Check the quality of the input building circuitry.
- Connect the charger to the mains using an adequate plug, with switch and fuses;
- Use an adequate wire and plug to connect the charger to the battery.
Refer to the data label on the charger for maximum input power (KVA) and current (AMPS).
- The charger doesn't need AC input voltage adjustments, however it's recommended to check with an adequate AC-voltmeter that the input voltage is within the specified range.

HOW TO MOVE THE CHARGER**Caution:**

Before moving the charger, disconnect it from the main supply and from the battery. To protect the charger while moving, use the original package or equivalent.

**Caution:**

Don't use hooks to lift a charger.


**Caution:**

Don't rotate the charger while moving it must be kept in a vertical position.

**Caution:**

If the charger is moved using a forklift or a transpallet, the cables should be fixed to the top of the charger with adhesive tape.

5. HOW TO USE THE CHARGER

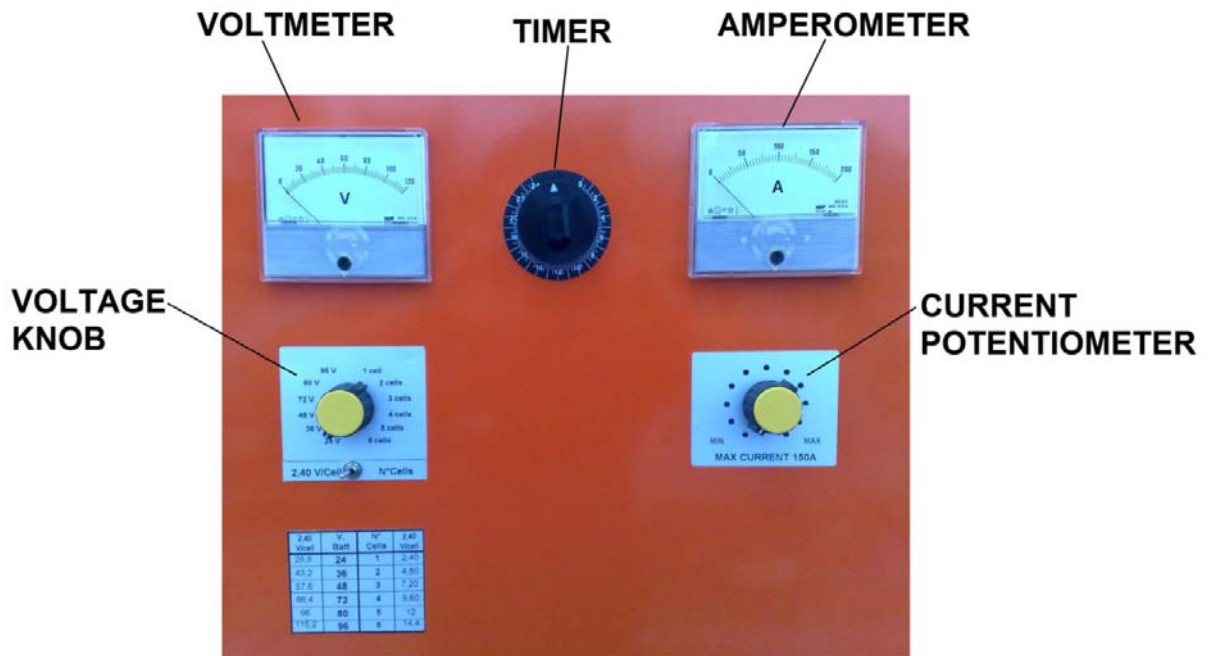

HOW TO CONNECT THE BATTERY AND START THE CHARGE



Caution:

Before using this charger take the time to read all this manual carefully!



Caution:

For a safe operation, follow these instructions carefully, in the exact sequence!

A) THE CHARGER MUST BE SWITCHED OFF BEFORE CONNECTING IT TO THE BATTERY.

Check that both the Volt-Meter and the Amp-meter indicate ZERO.

Check that the Current Potentiometer is in position ZERO.

B) CONNECT THE BATTERY.

The charger is protected against the polarity reversal, however, check the battery polarity when connecting the battery leads.

When the battery is connected, read its voltage on the Volt-Meter.

C) SWITCH ON THE CHARGER BY PROGRAMMING THE TIME OF CHARGE ON THE TIMER.

The control circuits and the cooling system of the charger are powered.

D) WHILE THE CURRENT POTENTIOMETER IS STILL IN POSITION ZERO, SELECT THE REQUIRED BATTERY VOLTAGE WITH THE APPROPRIATE KNOB.

The current remains ZERO.

Please look and understand how the voltage selector works: there are two sectors which can be selected with the small switch, and the knob can move on six nominal voltages (2-4-6-8-10-12 V or 24-36-48-72-80-96 V).

The table below the selector indicates the actual regulated voltages.

To use the MVC as Current Generator, set the voltage Knob to 96V and the small switch to 2,4V/cell.

The maximum output voltage provided by the MVC in this configuration is 115,2V.

The MVC can provide the maximum output current shown on the technical label with a maximum output voltage of 115,2V.

E) ADJUST THE OUTPUT CURRENT TO THE DESIRED VALUE, USING THE CURRENT POTENTIOMETER.

While you increase the current, be sure the battery connectors are making 100% contact to avoid the risk of sparks and/or fire.

During the charge, the current and the voltage can be modified directly with the appropriate knob and potentiometer.

HOW TO STOP THE CHARGER AND DISCONNECT THE BATTERY

Caution:

Before using the charger, take the time to read all this manual carefully!



Caution:

For a safe operation, follow these instructions carefully, in the exact sequence!

A) SET THE CURRENT POTENTIOMETER TO ZERO.

Check on the AMP-METER that the current is now ZERO.

B) SET THE VOLTAGE SELECTION KNOB TO 24V.**C) MOVE THE TIMER TO POSITION ZERO.****D) DISCONNECT THE BATTERY.**

THERMAL PROTECTION

If the cooling system fails and/or the electronic components of the charger reach a temperature higher than a maximum value, the current is automatically set to ZERO until the temperature decreases below the limit and the red status LED "THERMAL PROTECTION" is activated.

- END OF MANUAL -