

WI-PI

**A WLAN USB module based on IEEE802.11n standards and offers transfer rate
up to 150Mbps**



User Guide

Version updates records:

Rev	Date	Description
1.0	2012.7.17	Initial version

Content

Chapter 1 Overview	4
1.1 Product Features	4
1.2 Specifications.....	5
Chapter 2 Steps for using Wi-Pi	6
2.1 Software Environment	6
2.2 Hardware Environment.....	6
2.3 Wireless Installation.....	7
2.4 Wireless Setup.....	9
2.5 Connect to the Internet	10
Customer Service & Technical support.....	11
Customer Service	11
Technical Support.....	11
Notes.....	11

Chapter 1 Overview

1.1 Product Features

Wi-Pi is a high performance and cost effective WLAN USB module which connects Raspberry Pi to a Wi-Fi network. Wi-Pi uses the latest 802.11n Wireless Technology, and can support data rates up to 150Mbps, as compared to older 54Mbps 11g products. It also has a higher wireless LAN bandwidth, making data transmission more efficient, whilst also supporting wireless roaming, ensuring consistent wireless connection. Wi-Pi uses the latest international wireless CCA air channel detection technology, enhancing wireless performance.

1.2 Specifications

Hardware Features	
Connector	USB2.0
Antenna	Built - in smart antenna
Use of the environment	Work Temperature: 0°C~40°C
	Storage Temperature: -40°C~70°C
Wireless Features	
Standards	IEEE 802.11n; backward compatible with IEEE 802.11g and IEEE 802.11b
Transmission speed	11b: 1/2/5.5/11Mbps
	11g: 6/9/12/18/24/36/48/54Mbps
	11n: up to 150Mbps
Frequency range	2.4 ~ 2.4835GHz
Working channel	1 ~ 13
Transmit power	20dBm(max)
Software function	
Security features	WPA-PSK/WPA2-PSK
	WPA/WPA2
	64/128/152 bit WEP encryption
Operating Systems	Debian 6.0 Linux distribution

Chapter 2 Steps for using Wi-Pi

2.1 Software Environment

a) Before using the Wi-Pi, the **Debian6.0 “squeeze”** operating system for Raspberry Pi need to be installed, please refer to the below URLs for help:

- <http://www.raspberrypi.org/downloads>
- http://elinux.org/RPi_Easy_SD_Card_Setup

b) Download the Wi-Pi Firmware **Wi_Pi.Driver.Zip** from the below URL:


- <http://www.element14.com/community/docs/DOC-48541>

c) Decompress **Wi_Pi.Driver.Zip** on the Windows PC and copy the **rt2870.bin** file to the Raspberry Pi SD card (pre-installed with Debian6.0 “squeeze” operating system) with the help of card reader.

Notes: Currently WI -PI can only be used with the Debian 6.0 operating system

2.2 Hardware Environment

In order to use Wi-Pi module, setup the Raspberry Pi as shown in the figure below:

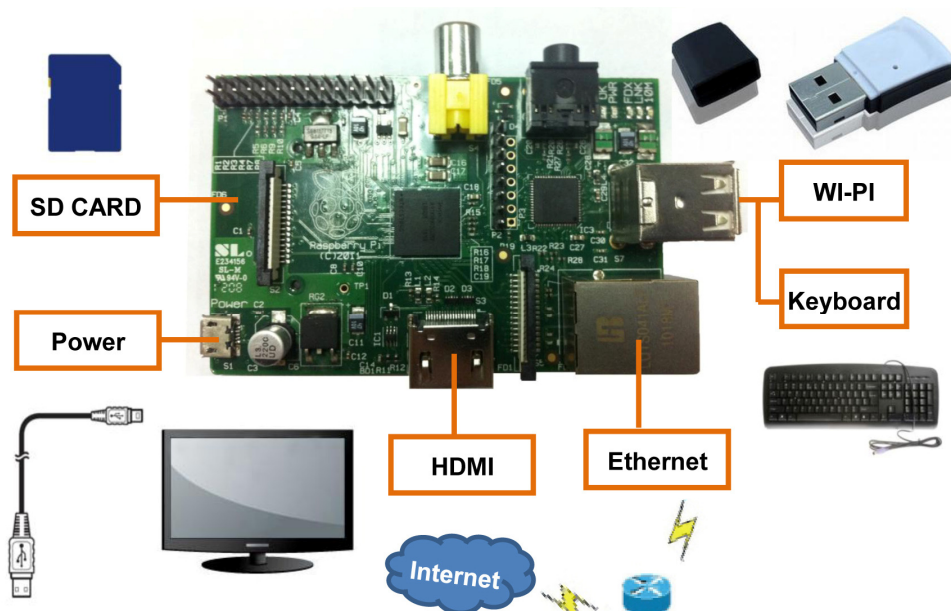

Notes:

USB host devices are limited to maximal 500mA current output to USB interface. So if too many USB accessories are connected to the Raspberry Pi simultaneously, WI-Pi Adapter may fail to function due to this USB host current limitation. To overcome such current limitation please remove all the unused USB accessories from the Raspberry Pi, or power the Raspberry Pi using high power USB power adapter.

2.3 Wireless Installation

Power up the board, and use a crossover cable to connect to the network through a local modem/router, and follow the below steps to install Wi-Pi driver:

1) Modify sources.list

```
pi@raspberrypi:~$ sudo su
root@raspberrypi:~# vim.tiny /etc/apt/sources.list
modify the file like this:
deb http://ftp.uk.debian.org/debian/ squeeze main
deb http://ftp.uk.debian.org/debian/ squeeze main non-free
deb http://ftp.us.debian.org/debian squeeze main contrib non-free

# Nokia Qt5 development
deb http://archive.qmh-project.org/rpi/debian/ unstable main
```



Adding the “**deb http://ftp.us.debian.org/debian squeeze main contrib non-free**” for installing the Wi-Pi driver.

2) Install wireless

```
root @raspberrypi:~# aptitude update
Ign http://archive.qmh-project.org unstable Release.gpg
Ign http://archive.qmh-project.org/rpi/debian/ unstable/main Translation-en
Ign http://archive.qmh-project.org/rpi/debian/ unstable/main Translation-en_GB
Hit http://ftp.us.debian.org squeeze Release.gpg
Ign http://ftp.us.debian.org/debian/ squeeze/contrib Translation-en
Ign http://ftp.us.debian.org/debian/ squeeze/contrib Translation-en_GB
Ign http://ftp.us.debian.org/debian/ squeeze/main Translation-en
Ign http://ftp.us.debian.org/debian/ squeeze/main Translation-en_GB
Ign http://ftp.us.debian.org/debian/ squeeze/non-free Translation-en
Ign http://ftp.us.debian.org/debian/ squeeze/non-free Translation-en_GB
Get:1 http://ftp.uk.debian.org squeeze Release.gpg [1,672 B]
```

```

Ign http://ftp.uk.debian.org/debian/ squeeze/main Translation-en
Ign http://ftp.uk.debian.org/debian/ squeeze/main Translation-en_GB
Ign http://ftp.uk.debian.org/debian/ squeeze/non-free Translation-en
Ign http://archive.qmh-project.org unstable Release
Hit http://ftp.us.debian.org squeeze Release
Ign http://ftp.uk.debian.org/debian/ squeeze/non-free Translation-en_GB
Get:2 http://ftp.uk.debian.org squeeze Release [111 kB]
Ign http://archive.qmh-project.org unstable/main armel Packages/DiffIndex
Ign http://archive.qmh-project.org unstable/main armel Packages
Hit http://ftp.us.debian.org squeeze/main armel Packages
Hit http://archive.qmh-project.org unstable/main armel Packages
Hit http://ftp.us.debian.org squeeze/contrib armel Packages
Hit http://ftp.us.debian.org squeeze/non-free armel Packages
Get:3 http://ftp.uk.debian.org squeeze/main armel Packages [6,424 kB]
Get:4 http://ftp.uk.debian.org squeeze/non-free armel Packages [83.1 kB]
Fetched 6,620 kB in 1 min 41s (65.3 kB/s)
W: Duplicate sources.list entry http://ftp.uk.debian.org/debian/ squeeze/main armel Packages
(/var/lib/apt/lists/ftp.uk.debian.org_debian_dists_squeeze_main_binary-armel_Packages)
W: You may want to run apt-get update to correct these problems
root @raspberrypi:~# aptitude install firmware-ralink
The following NEW packages will be installed:
  firmware-ralink
0 packages upgraded, 1 newly installed, 0 to remove and 42 not upgraded.
Need to get 21.5 kB of archives. After unpacking 111 kB will be used.
Get:1 http://ftp.uk.debian.org/debian/ squeeze/non-free firmware-ralink all 0.28+squeeze1 [21.5
kB]
Fetched 21.5 kB in 3s (6,636 B/s)
Selecting previously deselected package firmware-ralink.
(Reading database ... 46441 files and directories currently installed.)
Unpacking firmware-ralink (from ../firmware-ralink_0.28+squeeze1_all.deb) ...
Setting up firmware-ralink (0.28+squeeze1) ...
root @raspberrypi:~# aptitude install wireless-tools
No packages will be installed, upgraded, or removed.
0 packages upgraded, 0 newly installed, 0 to remove and 42 not upgraded.
Need to get 0 B of archives. After unpacking 0 B will be used.
root @raspberrypi:~# cp /boot/rt2870.bin /lib/firmware/rt2870.bin

```



.....

The firmware rt2870.bin provided with Debian operating system is out of date and need to be updated with the provided newer version of firmware [section-2.1(b)], use the above command “**cp /boot/rt2870.bin /lib/firmware/rt2870.bin**” to update the firmware.

.....

2.4 Wireless Setup

Remove the crossover cable, and then, connect to a wireless network by following below steps:

```
root @raspberrypi:~# vim.tiny /etc/network/interfaces
```

WI-PI module supports variety of encryption modes, modify the file as per your wireless router encryption settings.

1) WPA/WPA2

【DHCP】

```
auto wlan0
iface wlan0 inet dhcp
    wpa-ssid mynetworkname
    wpa-psk mysecretpassphrase
```

2) WEP(ASCII string key)

【DHCP】

```
auto wlan0
iface wlan0 inet dhcp
    wireless-essid mynetworkname
    wireless-key s: mysecretpassphrase
```

3) WEP(binary key)

【DHCP】

```
auto wlan0
iface wlan0 inet dhcp
    wireless-essid mynetworkname
    wireless-key mysecretpassphrase
```



.....
mynetworkname is the name of the wireless router,

mysecretpassphrase is the password for it.

2.5 Connect to the Internet

```

root @raspberrypi:~# /etc/init.d/networking restart
Running /etc/init.d/networking restart is deprecated because it may not enable again some
interfaces ... (warning).
Reconfiguring network interfaces...Internet Systems Consortium DHCP Client 4.1.1-P1
Copyright 2004-2010 Internet Systems Consortium.
All rights reserved.
For info, please visit https://www.isc.org/software/dhcp/

Listening on LPF/wlan0/00:0f:12:48:0b:9c
Sending on   LPF/wlan0/00:0f:12:48:0b:9c
Sending on   Socket/fallback
DHCPDISCOVER on wlan0 to 255.255.255.255 port 67 interval 7
DHCPDISCOVER on wlan0 to 255.255.255.255 port 67 interval 14
DHCPOFFER from 192.168.1.254
DHCPREQUEST on wlan0 to 255.255.255.255 port 67
DHCPACK from 192.168.1.254
bound to 192.168.1.101 -- renewal in 3509 seconds.
done.
root @raspberrypi:~# iwconfig
lo          no wireless extensions.

eth0       no wireless extensions.

wlan0      IEEE 802.11bgn  ESSID:"Pi"
          Mode:Managed  Frequency:2.412 GHz  Access Point: 94:0C:6D:17:0A:BC
          Bit Rate=5.5 Mb/s   Tx-Power=20 dBm
          Retry  long limit:7   RTS thr:off   Fragment thr:off
          Encryption key:off
          Power Management:on
          Link Quality=57/70  Signal level=-53 dBm
          Rx invalid nwid:0  Rx invalid crypt:0  Rx invalid frag:0
          Tx excessive retries:0  Invalid misc:25  Missed beacon:0

```

It takes some time for the WI-PI to connect the internet, when the LED on Wi-Pi flicker, try to ping the internet.

```

root @raspberrypi:~# ping www.google.com
Pinging www.l.google.com[74.125.71.99] with 32 bytes of data:
Reply from 74.125.71.99: bytes=32 time=152ms TTL=52
Reply from 74.125.71.99: bytes=32 time=120ms TTL=52
Reply from 74.125.71.99: bytes=32 time=106ms TTL=52

```

Customer Service & Technical support

Customer Service

Please contact Premier Farnell local sales and customer services staffs for the help.

Website: <http://www.farnell.com/>

Technical Support

Please contact Premier Farnell local technical support team for any technical issues through the telephone, live chat & email, or post your questions on the below micro site, we will reply to you as soon as possible.

Centralized technical support mail box: knode_tech@element14.com

Community: <http://www.element14.com/community/groups/raspberry-pi>

Notes

This board was designed by element14's design partner- Embest, you can contact them to get the technical support as well.

Marketing Department:

Tel: +86-755-25635656 / 25636285

Fax: +86-755-25616057

E-mail: market@embedinfo.com

Technical Support:

Tel: +86-755-25503401

E-mail: support@embedinfo.com

URL: <http://www.armkits.com>