

HUNTER

A stylized graphic illustration featuring a white arrow pointing upwards from the bottom left towards the top center. The word "HUNTER" is written in a decorative, white, serif font with flourishes, positioned at the tip of the arrow. The background is composed of various geometric shapes in shades of green, black, and light blue, creating a layered, abstract landscape effect. The overall style is reminiscent of mid-century modern graphic design.

Table of Contents

INTRODUCTION	Read This Before Installing Thermostat	5
	What You Need	8
	Remove Old Thermostat	8
INSTALLATION	Wire Labeling	9
	Mount Wallplate and Thermostat	10
	Connect Wires and Mount Thermostat to Wallplate	11
	Option Menu	12
	Remote Sensor Channel Set-Up (does not apply to thermostat model 44660)	14
PROGRAMMING	Setting Time and Day	16
	12 Hr. / 24 Hr. Time Format	17
	Programming Introduction	18
	Personal Program Schedule	19
	Programming	21
	Weekday/Weekend Programming	22
	7-Day Programming	25
	Everyday Programming	27
	Program Options	29

(continued)

Table of Contents (continued)

PROGRAMMING (continued)	Programmable Fan	29
	System Selection Key	31
	Fan Key	31
	Reviewing the Current Temperature Setting	32
OPERATIONS	Temporary Manual Override	33
	Permanent Manual Override	34
	Vacation (Programmable) Hold	35
	Auto Season Changeover	36
	Home Today	37
	Energy Monitor	39
	Filter Monitor	40
	SPAN Settings	41
	Auto Recovery	42
	Keyboard Lock	43
	Backlighting (INDIGLO® Night-Light)	44
	Low Battery Warning	45
	Error Mode	45
	Problems & Solution	46

OPERATIONS (continued)

TROUBLESHOOTING

WIRING DIAGRAMS

Technical Support

47

48

Read This Before Installing Thermostat

IMPORTANT

1 Read the entire installation section of this Owner's Manual thoroughly before you begin to install or operate your Hunter Thermostat.

Remove the Mylar label from the LCD display window.

INSTALLATION

2 All installation is normally performed at your thermostat.

ARMCHAIR PROGRAMMING

3 You can program your thermostat before installation by inserting the batteries and following the instructions starting on page 16. This can be done while you relax in your favorite chair and is a very good way to familiarize yourself with all the functions of your Hunter Thermostat.

SYSTEM COMPATIBILITY

4 Your Thermostat is designed to operate with most gas, oil, electric, or 2-wire hot water heating and air conditioning systems. It will also operate single-stage heat pumps that do not have auxiliary or emergency heat. These have 24 volt or millivolt control systems and represent most central heating, air conditioning, or space heating units in the United States.

This thermostat will not control 120/240 Volt systems or millivolt systems.

COMPRESSOR PROTECTION

5 The thermostat provides a 3.5 minute delay after shutting off the heating or cooling system before it can be restarted. This feature will prevent damage to your compressor caused by rapid cycling.

TEMPERATURE RANGE

6 Your thermostat can be programmed between 45°F and 95°F (7°C and 35°C). However, it will display room temperatures from 15°F to 99°F (-9°C and 37°C). "HI" will be displayed if the temperature is higher than 99°F (37°C), and "LO" will be displayed if the temperature is lower than 15°F (-9°C).

AUTO RECOVERY

7 Your thermostat is set from the factory to gradually recover the room temperature from an energy saving program to your comfort program. Therefore, the thermostat may turn your system on several minutes prior to your programmed time. This operation is normal, but can be turned off. Refer to the Options Menu information on pages 16.

OPERATION

8 NOTE: The INDIGLO® Night-Light will not function when the battery power is low.

BATTERY WARNING

9 Two fresh AA alkaline batteries should provide well over one year of service. However, when the batteries become drained, the Low Battery Indicator will flash on the display. when this message occurs, install new alkaline bat-

teries. You have approximately one minute to change the batteries and keep the thermostat's clock and program settings. Once the batteries have become too low to ensure proper operation, your system will be turned off, and the display will be cleared except for the flashing Low Battery Indicator on the LCD display.

CAUTION: When only the battery icon flashes on the display, the thermostat is shut down and your system will no longer operate. In this condition, there is no

REMOTE SENSORS (does not apply to thermostat model 44660)


1 Your thermostat can support 3 remote sensors that will measure the temperature from three different locations - two indoor and one outdoor. To configure your thermostat to work with the remote sensors, follow the instructions for Sensor Channel selection on page 14 of this manual. To configure the remote sensors, consult the Remote Sensor Instruction Manual.

NOTE (does not apply to thermostat model 44660)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



What You Need

This thermostat includes two #8 slotted screws and two wall anchors for mounting. To install your thermostat, you should have the following tools and materials.

Slotted Screwdriver(s)
Phillips Screwdriver
Hammer

Electric drill and 3/16" bit
Two 1.5 V (AA) size alkaline batteries

Remove Old Thermostat

CAUTION: Do not remove any wiring from existing thermostat before reading the instructions carefully. WIRES MUST BE LABELED PRIOR TO REMOVAL.


IMPORTANT! Turn off the power to the furnace at the main power panel or at the furnace.

Remove existing thermostat cover. See Figure 1. Some thermostats will have screws or other locking devices that must first be removed. Once wall mounting plate is exposed, look for wires.

If wires are not visible, they may be connected to the back of the wallplate. Again, look for screws, tabs, etc. Some models have doors that open to expose wires and mounting screws. (See Figure 1).

TYPICAL HOME THERMOSTATS

Figure 1

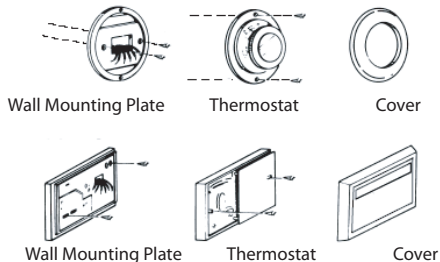

Wire Labeling

Each wire coming from the wall to the existing thermostat is connected to a terminal point on that thermostat. Each of these terminal points is usually marked with a code letter as shown in Table A on the next page.

IMPORTANT! BEFORE DISCONNECTING ANY WIRES, APPLY THE SELF-ADHESIVE LABELS PROVIDED TO THE WIRE AS SHOWN IN TABLE A and B ON PAGES 12-13. (For example, attach the label marked W to the wire that goes to the W or H terminal on your existing thermostat.)


IGNORE THE COLOR OF THE WIRES since these do not always comply with the standard.

After labeling wires, disconnect them from the existing thermostat terminals.

Remove existing wallplate. To make sure wires do not fall back into wall opening, you may want to tape them to the wall.

If hole in wall is larger than necessary for wires, seal this hole so that no hot or cold air can enter the back of the thermostat from the wall. This air could cause a false thermostat reading.

(continued)



Mount Wallplate and Thermostat

Remove the wallplate from your thermostat by pressing the release tab on the bottom of the thermostat. (See Figure 2.)

Position wallplate on wall and pull existing wires through large opening. Then level for appearance. Mark holes for plastic anchors provided if your existing holes do not line up with those on the Hunter wallplate.



Figure 2

Drill holes with 3/16" bit and gently tap anchors into the opening. Insert mounting screws provided into wall anchor and tighten. (See Figure 3.) holes until flush with wall.

Reposition wallplate to wall, pulling wires through large opening. Insert provided mounting screws into wall anchors and tighten.

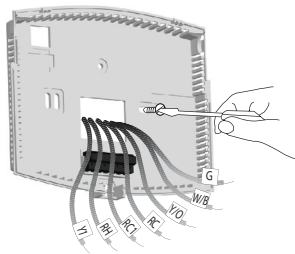


Figure 3

Connect Wires and Mount Thermostat to Wallplate

Straighten bare end of each wire and cut or strip it to 1/4" maximum. Insert each labeled wire into its matching terminal.

Hold the wires in each terminal and tighten the terminal screws securely, otherwise a loose wire could cause operational problems with your system or thermostat.

Push excess wire back into hole to prevent interference with mounting of the thermostat.

Make sure the System Switch is set to OFF.

Insert two AA size alkaline batteries, observing the polarity marked on the unit.

On the back of the thermostat, find Switch SW1 at the lower right-hand corner.

- 1) If your system is a gas furnace, then position the switch to HG.
- 2) If your system is an electric furnace, then position the switch to HG.
- 3) If your system is a single stage heat pump, then position the switch to SSHP.

Insert the upper tabs on the thermostat body into the slot at the top of the wallplate. Press bottom of the thermostat body to snap it into the wallplate. (NOTE: Do not force the thermostat onto the wallplate, as the terminal pins may be damaged. If it does not snap properly, the thermostat may not work.)

Switch on the main power at the panel or furnace.

Option Menu

Your thermostat has many settings that can be adjusted to fit your system and preferences.

 option

Press to enter the Option Menu and to change to the next option selection.

 ret/clear

Press at any time to return to normal mode.

Language Selection

 option

1



or



to select English, Spanish, or French.

English

Battery Status

 option

2

to see how much power remains in the thermostat's battery.

Batt ■■■.

Fahrenheit or Celsius (F°/C°) selection

option 3



or



to change the thermostat display between Fahrenheit and Celsius.

Temp

F

12 Hour or 24 Hour Clock selection

option 4



or



to change the time format display between 12 hour (AM / PM) and 24 hour (Military).

Clock

24 Hr

SPAN selection

option 5



or



to change the SPAN setting to 1, 2, or 3. The factory setting is 2. Setting 1 will cause shorter cycle times. Setting 3 will cause longer cycle times.

Span

2

Auto Season Changeover Deadband

option 6



or






to set the deadband between Heating and Cooling when the System Selection is set to Auto. See page 39 for more information on the Auto Season Changeover feature.

Deadband

3



 or  to set RF communication channel (1-15) for the selected remote sensor.


If you do not have, or are not using the a second or outdoor remote sensor, set the channel to - -.

NOTE: The thermostat will not control your HVAC system from the remote sensor set up as Outdoor . However, it is crucial that you DO NOT place remote sensor ¹ or ₂ outdoors.

LCD Contrast adjustment

 9

 or  to change the LCD contrast between 0 and 9. Lower numbers lighten the display. Higher numbers darken the display. The factory setting is 5.



Setting Time and Day

Step 1


An oval-shaped button with the text "day/time" inside.

Press to enter time and day setting mode. The current hour and the AM / PM indicator will be flashing.



Press to change the Hour up or down to the current hour.

Note the AM / PM indicator, as the display will change at 12 AM and 12 PM.




Step 2

An oval-shaped button with the text "day/time" inside.

Press again to change from hour setting to minute setting. The current minute will be flashing.



Press to change the Minute up or down to the current minute.



Step 3

A button icon with the text "day/time" inside an oval.

Press again to change from minute setting to day setting. The current day will be flashing.



or



Press to change the Day up or down to the current day.

A rectangular display showing the text "Monday" at the top, "PM" on the left, and "12:38" in a large digital font on the right.


Step 4

A button icon with the text "day/time" inside an oval.

Press again to change back to the normal display.

or

A button icon with the text "ret/clear" inside an oval.

NOTE: You may press  at any time during Day and Time setting to return to the normal display.

12 Hr. / 24 Hr. Time Format

Your thermostat is set from the factory in normal 12 (AM / PM) format. To change to 24 hour (military) time, press 

at any time while the Hour, Minute, or Day is flashing to toggle between the 12 hour and 24 hour formats. The AM / PM indicator will not be displayed in the 24 hour mode. Both the current time and all programs will change automatically to the selected format. The time format may also be changed in the Option Menu.

Programming Introduction

Studies conducted by the Department of Energy estimate that setting your thermostat back 10°F (6°C) for two 8-hour periods during winter can reduce your fuel bill by as much as 33%. By setting your thermostat up 5°F (3°C) for two 8-hour periods during summer you can reduce your fuel bill up to 25%.

Your thermostat is capable of holding up to 4 separate programs for each day of the week.

You can program weekdays as a group, weekends as a group, all 7 days individually or everyday as a group.

The system fan may also be set to run continuously during a program time period.

Your Hunter thermostat is pre-programmed to meet the ENERGY STAR® guidelines for energy efficiency.

At power-up or after a reset, all 7 days of the week have these default programs:

Program Number	Time	Temperature in F° (C°)	
		Heat	Cool
1	6:00am	68°F (20°C)	78°F (26°C)
2	8:00am	60°F (16°C)	85°F (29°C)
3	4:00pm	68°F (20°C)	78°F (26°C)
4	10:00pm	60°F (16°C)	82°F (28°C)

The following sections describe how to change these programs.

Personal Program Schedule

Before changing programs, use this Personal Program Schedule to determine which times and temperature settings will best satisfy both your comfort and energy saving requirements.

Heating

Use a pencil so you can revise your records each time you change your temperature settings.

Day	Prog. 1		Prog. 2		Prog. 3		Prog. 4	
Mon.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Tues.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Wed.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Thurs.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Fri.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Sat.	Time	Temp	Time	Temp	Time	Temp	Time	Temp
Sun.	Time	Temp	Time	Temp	Time	Temp	Time	Temp

(continued)

Programming

Your thermostat can be programmed for weekdays and weekends, have unique programs for all 7 days, or the same program for everyday. Use Weekday/Weekend Programming on page 24, 7-day Programming on page 26, or Everyday Programming on page 28 to enter or revise programs to match your Personal Program Schedule.

Familiarize yourself with Manual Programming, so that you can easily modify your programs as your comfort needs change. Follow the steps below to change the program times and temperatures.

- NOTE: 1) The program time can be set in 10 minute increments, and remains the same for both Heat and Cool programs.
- 2) The program temperature can be set in increments of 1°F (1°C).
- 3) The Heat setpoint can not be set higher than the Cool setpoint, and the Cool setpoint can not be set lower than the Heat setpoint.

- 4) If the system selector is in AUTO mode, the current operating mode will be used for programming.
- 5) After 15 seconds without a key press, the thermostat will return to normal display mode.
- 6) When setting the program time, note the AM / PM indicator.
- 7) With the Auto Recovery feature enabled, you do not need to set your comfort program times early. Auto Recovery will determine how early to turn your system on, so that the room is comfortable at the program time.

Weekday/Weekend Programming

Step 1



Press to enter program mode. Weekdays are displayed and program 1 is flashing.



Press to change heat of cool mode programming while in programming mode

Step 2



or



The Program hour and AM or PM indicator are flashing. Press to change the hour.

Step 3




or



Press again to change to the minute position. The current minute will be flashing.

Press to change the minute.



Step 4


 An oval button with the word "program" inside.

Press again to change to the program temperature. The current temperature will be flashing.



Press to change the temperature.

or






Step 5


 An oval button with the word "fan" inside.

Press to select Auto or On for each program. "Auto" will automatically cycle your system to maintain your set temperature. "On" will run your system continuously. "Auto" is the default setting.

Step 6


 A circular button with the word "sensor" below it.

(Does not apply to thermostat model 44660) Press to select the sensor that will control each thermostat program, either ¹ for sensor 1, ₂ for sensor 2, or  for the thermostat. The thermostat can also be configured to take an average of any combination of the three.

Step 7


 An oval button with the word "program" inside.

Press again to move to the next program number.

Repeat Steps 3 through 5 to change the remaining Weekday programs.

Step 8

prog/day

Press to change to Weekend programs.

Repeat steps 3 through 5 to complete the weekend programs.

ret/clear

Press at any time to exit the Program Mode.


After 15 seconds, the thermostat will return to normal mode automatically.

Step 9

Change to program the other system mode, and repeat steps 2 through 7.

7-Day Programming

Step 1  Press to enter program mode, display shows weekday programs.








Press 2 times to reach the Monday program.








Step 2  Press to select HEAT or COOL to program the corresponding system.



Step 3 The Program hour and AM or PM indicator are flashing. Press  or  to change the hour.

Step 4  Press again to change to the minute position. The current minute will be flashing.

Press  or  to change the minute.

- Step 5  Press again to change to the program temperature. The current temperature will be flashing.
Press  or  to change the temperature.
- Step 6  Press to move to programs 2, 3 and 4.
Repeat Steps 3 through 5 to complete the programs for Monday.
- Step 7  Press to change to the next day's programs.
Repeat Steps 3 through 6 to complete the selected day's programs.
Continue repeating Steps 3 through 7 to program all 7 days of the week.
- Step 8  When finished, press to return to normal mode.
After 15 seconds, the thermostat will return to normal mode automatically.
- Step 9  Change to program the other system mode and repeat steps 2 through 8 above.

Everyday Programming

Step 2  Press to enter program mode, display shows weekday programs.



Press 9 times to reach the Everyday program.













Press to select HEAT or COOL to program the corresponding system.

Step 3



The Program hour and AM or PM indicator are flashing. Press to change the hour.



- Step 4  Press again to change the minute position. The current minute will be flashing.
Press to change the minute.

or

- Step 5  Press again to change to the program temperature. The current temperature will be flashing.
Press to change the temperature.

or

- Step 6  Press again to move the next program number.
Repeat Steps 3 through 5 to change the remaining programs.
 Press at any time to exit the Program Mode.
After 15 seconds, the thermostat will return to Normal mode automatically.
- Step 7  Change to program the other system mode and repeat steps 2 through 6.

Program Options

Programmable Fan

fan

Any time during programming, this will change the fan display between "AUTO" and "ON" for the selected system and Program number. (Heat and Cool can be set separately.)

"AUTO" = Fan control runs when the system is ON

"ON" = Fan control runs continuously

NOTE: Fan must be set to "PROG" for the Programmable Fan to be activated.

Reviewing Programs

You may want to review the programs to confirm that the settings are compatible with your lifestyle.

Weekday
Programs

program

Press to display M - F programs.

Press repeatedly to cycle through the 4 programs.

Weekend
Programs

prog/day

Press to display the Sa - Su programs.

program

Press repeatedly to cycle through the 4 programs.

Daily and
Everyday
Programs

program

Press to display M - F programs.

NOTE: Time or Temperature display will be blank when at least one weekday program is different. (All programs will be displayed if programmed in Everyday mode.)

prog/day

Press to change to Sa - Su. Again, if part of the display is blank, one of the weekend programs is different.

Press again to change to Monday's program.

Continue pressing to cycle through each day, or to reach the Everyday programs.

program

Press repeatedly to cycle through the 4 programs.

ret/clear

Press to return to normal mode.

After 15 seconds, the thermostat will return to normal mode automatically.

NOTE: Programs take effect as soon as the thermostat returns to normal mode.

System Selection Key

system

Press to select the desired system.

When Auto is selected, the system will change between Heat and Cool automatically. Refer to the Auto Season Changeover section on page 39.

Fan Key

fan

Press to set the fan operation.

AUTO: the fan will turn on with the system.

ON: the fan will run continuously.

PROG Auto or ON: (Programmable Fan) The fan will select AUTO or ON, depending on the setting in the programs. Refer to the Program Option section on page 30.

NOTE: The fan must be set to "PROG" for the fan's program settings to take effect.

Reviewing the Current Temperature Setting

Current time and temperature.

Thermostat is set to AUTO and the heating system is selected.





Press for 1 second or less.



Set Temperature is shown beside current room temperature.

If held for over 1 second, Temporary Manual Override mode is entered. Refer to the next section.

Temporary Manual Override

To temporarily change the current set temperature without affecting your program:

Press  or  and hold for about 1 second to enter Manual Override mode. Display will flash.

Press  or  to change to your desired new temperature.

 ret/clear

Press to return to normal mode, or wait 5 seconds for it to return automatically.

The current program number will flash to signify the Temporary Override.

At the next program change, the Temporary Override is canceled, and the next program temperature becomes the setpoint temperature.

To end the Temporary Manual Override:

 ret/clear

Press to return the set temperature to the current program set temperature.

NOTE: The Auto Season Changeover feature will not operate while the thermostat is in Temporary Manual Override. Refer to the Auto Season Changeover feature on page 39 for more information

NOTE: If Vacation Hold is set, then the number of days remaining will also be displayed. Refer to the Vacation (Programmable) Hold section on page 38 for more information.

Permanent Manual Override

To hold your manual override for an extended period of time:



hold

Press to make the current room temperature the HOLD temperature. HOLD will alternate on the display with the day and any other messages.

Follow the Temporary Override instructions above to change the Permanent Override temperature.



You can confirm the held set temperature by pressing for less than 1 second.

To end the Permanent Manual Override:



ret/clear

Press to return to the current program. The HOLD display will be canceled.

NOTE: The Auto Season Changeover feature will not operate while the thermostat is in Permanent Manual Override. Refer to the Auto Season Changeover feature on page 36 for more information.

Vacation (Programmable) Hold

This thermostat can hold a fixed temperature for a selected number of days (up to 30). After the selected number of days, the thermostat will return to normal program operation. This feature allows you to return home to your normal comfort setpoint temperatures.



Press and hold for 2 seconds to enter Vacation Hold mode. The set temperature will be the current room temperature and the Vacation counter will be set to 1 day.



Use to set the Vacation Hold temperature.




Press to set the Vacation Hold counter to the number of days you will be away from home.

"Vacation" will alternate on the display with the day and any other messages.

To end Vacation Hold:



Press to return to the current program. The flashing Vacation display will be canceled.



NOTE: The Auto Season Changeover feature will not operate while the thermostat is in Vacation (Programmable) HOLD. Refer to the Auto Season changeover feature on page 36 for more information.

Auto Season Changeover

When the System Selection is in AUTO position, the thermostat will automatically change between Heating and Cooling systems, depending on your program. We recommend keeping your programmed heating and cooling temperatures at least 5°F (3°C) apart to allow the Auto Season Changeover to occur when the appropriate temperature span has been reached. However, if your heating and cooling programs set temperatures are close, there is a built-in program to prevent the thermostat from changing unnecessarily.

Auto Season Changeover is disabled when the thermostat is in Temporary or Permanent Override, or Vacation Hold, as these overrides are energy saving settings. While in any of these modes, "AUTO" will be temporarily removed from the LCD display. "AUTO" will return when these holds are cleared. Auto Season Changeover will still function in Home Today mode, as this is a comfort setting.

For example, you may have the following temperatures programmed at a given time:

Heat Set Temp = 68°F

Cool Set Temp = 78°F

If the room temperature rises above 78°F, then the thermo-

stat will automatically change to cool mode and turn on the air conditioner.

Likewise, the thermostat will automatically change to heat mode and turn on heat when the room temperature falls below 68°F.

Even when in the "Auto" position, Cool Mode and Heat Mode still have to be programmed separately to allow for the "Set Back" periods.



Home Today

This Hunter patented feature allows you to quickly and temporarily override your energy saving program setting on days when you are normally away from home with one key press.

Press to enter the Home Today override. The highest program temperature for today will be selected from your programs in Heat mode and become the set temperature. (In Cool mode, Home Today will select the lowest program temperature for today to be the set temperature.)

“HOME” will alternate on the display with the day and any other messages.

When pressed during the first or second program of the day, Home Today will automatically return to program control at the start of the fourth program of the day. If Home Today is pressed after the start of the third program time of the day, the thermostat will remain in Home Today mode until the first program of the next day.

If Home Today is already active, you may similarly extend it to the first program of the next day by pressing the key again after the start time of the third program.

(continued)

Home Today (cont.)

If the system is changed between Heat and Cool modes (either manually or by Auto Season Changeover) during the “Home Today” override period, the setpoint temperature will be automatically updated. It will automatically change from the highest heat program setpoint to the lowest cool program setpoint, or from the lowest cool program setpoint to the highest heat program setpoint.

Press to exit Home Today mode before the schedule ending time. “HOME” is no longer displayed on the LCD screen, and the thermostat returns to the current program.

You can manually change the setpoint temperature while in Home Today mode. Refer to the Temporary Manual Override instructions on page 36. Manually changing the set temperature while in Home Today mode will not affect the Home Today ending time. However, the set temperature will not change automatically with a manual or Automatic change between heating and cooling.

You may also press the Home Today key while in Temporary Manual Override. The operation is the same as the previous point above.



Energy Monitor

The Energy monitor feature measures and stores the amount of time the heating and air conditioning system operates. Usage can be displayed for Today (since 12AM), Yesterday, This Month (up to 30 days), Last Month (last 30

days), and Total (up to 999 Hrs. 59 Min.). By monitoring your energy usage, you see how much the setback periods are saving and you can test program adjustment to save even more. Use tables on pages 21-22.



To review energy usage, press to cycle through Today, Yesterday, [number] Days, Last 30 days, and Total. Press again to return to normal mode, or wait 15 seconds for the display to return to normal mode. You can also return to normal mode at any time by pressing RET CLEAR.

For example: This LCD display shows Today's usage to be 10 Hours, 26 minutes.

ret/clear

Press and hold for 3 seconds to reset the Energy Monitor's counters while in Energy Monitor mode. The display will blink, and all counters will be cleared to zero.

Filter Monitor

Your thermostat also keeps a record of the number of hours your filter has been in use. To maximize your system's performance and energy efficiency, change or clean your filter regularly.

When the total system run time for heat and cool reaches 500 hours, "FILTER" will alternate on the display with the day to remind you to clean or change your system's filter. "FILTER" will continue to display until the counter is set back to zero.

filter

Press to review total filter usage. After 15 seconds, the display will return to normal mode, or you can hit RET CLEAR to exit immediately. The Filter Monitor will display up to 999 hours and 59 minutes of usage.

ret/clear

In this example, the counter is at 410 Hours, 26 minutes.

To reset the Filter Monitor counter, hold for 3 seconds.

The display will blink, and the counter will be reset to zero.



SPAN Settings

STAGE 1

Your thermostat is set at the factory to cycle at 1°F (0.5°C) above and below the set temperature in Stage 1. (Span = 2.) This setting has been designed to provide a comfortable room temperature under most all conditions. However, if you find your system cycling too fast or too slow, then the Span can be adjusted to modify the cycle time. Refer to the Option Menu Stage 1 Span selection on page 17.

- Span = 1. This decreases the cycle time by causing your system to run shorter.
- Span = 3. This increases the cycle time by causing your system to run longer.

The Span settings remain the same for both HEAT and COOL.

The Span can be changed at any time and is independent of program times or temperatures.

When the thermostat is powered on or the Reset key is pressed, the Span is reset back to setting 2.

Auto Recovery

Hunter's Auto Recovery feature meets the ENERGY STAR® guidelines for energy efficiency by allowing the heating or cooling system to recover gradually from an energy-saving setpoint temperature to a comfort setpoint temperature.

Auto Recovery calculates how early to turn your system back On, so that the room temperature is already comfortable by the start of the comfort temperature program period. Auto Recovery works in both Heat and Cool modes.

For example, in Heat mode, you could have the following programs:

Program #4 (Overnight)	Program #1 (Morning)
Set Temp = 60°F	Set Temp = 68°F
Time = 10PM	Time = 6AM

The room temperature fell to 60°F overnight. Rather than having the thermostat turning on at 6AM, Auto Recovery would note the temperature difference between 60°F and 68°F and turn the Heat on approximately 30 minutes early. Therefore, the room temperature at 6AM would be about 68°F instead of 60°F.

When the thermostat is in Auto Recovery mode, the display will alternate "RECOVERY" with the day, and the program indicator will flash.

Details of Auto Recovery Operation:

Auto Recovery can be disabled by selecting "NO" in the Option Menu. Refer to page 17.

Auto Recovery will not operate if Permanent hold, Vacation hold Temporary hold or Home Today is in operation.

Auto Recovery can be canceled manually if RET CLEAR is pressed during the recovery process. If a recovery process is canceled manually then the recovery process will not start again until the next program period starts (an exception is that if time or program is changed then the thermostat will check Auto Recovery conditions immediately).

Auto Recovery will be canceled if HOME TODAY or HOLD is pressed during the recovery process. The thermostat will enter Home Today, Permanent Hold, or Vacation Hold.

Home Today, Permanent hold or Vacation hold.

Auto Recovery will be canceled and change to Temporary Manual Override mode if the setpoint is adjusted during the recovery process.

If the system changes between heat and cool (automati-

Backlighting (INDIGLO® Night-Light)

Your thermostat has an electroluminescent lamp that backlights the display for easy viewing in the dark.


When any key is pressed the display is illuminated.

The display will remain illuminated for 15 seconds after the last key is pressed. This allows the light to stay on if you need to operate several keys. The backlight will decrease in brightness before shutting off.

NOTE: The backlight is powered by the 24V AC supply. It will not operate when there is an AC power interruption or if the thermostat is removed from the wallplate.

Low Battery Warning

Your thermostat has a low battery warning system. When the batteries are detected to be weak, the low battery warning is indicated by “Low Batt” alternating on the LCD display with the day. You then need to replace the batteries with 2 new AA alkaline batteries. You have 30 seconds to change the batteries before the settings are lost.



Error Mode

If the thermostat is unable to control your system due to an unexpected problem, the thermostat will enter Error Mode. In this condition, the thermostat flashes “Error” and a code number on the LCD display, and shuts off your system.

To correct this problem, replace the batteries with 2 new AA alkaline batteries, even if you have recently replaced them. Next, use a paper clip to press the RESET button next

to the keypad. You will need to reprogram your thermostat and confirm normal operation.

If Error Mode returns, please call 888-830-1326 for Technical Assistance from 7 AM to 7 PM Central Time Monday thru Friday and 8 AM to 5 PM Central Time on Saturday.

**Problem****Solution**

SCRAMBLED OR DOUBLE DISPLAY
(numbers over numbers)

1. Remove clear Mylar sticker

NO DISPLAY

1. Check terminal connection. A common (C) wire is required for operation.
2. Check battery connections and batteries.
3. Press RESET button with a small pin and hold in for two seconds.

ENTIRE DISPLAY DIMS

1. Replace Batteries
2. Adjust LCD contrast in the Option Menu.

PROGRAM DOES NOT CHANGE
AT YOUR DESIRED SETTING

1. Check that the time is set properly to "AM" or "PM".
2. Check that the thermostat is not in "HOLD" or "Home Today" modes.
3. Check for the correct day setting.
4. Check any remote sensor readings or weights.

AUTO / FAN DOES NOT TURN ON

1. Move HG/HE selector to opposite position

FAN RUNS CONTINUOUSLY

1. Check fan setting. It may be "ON" or in Programmable Fan mode "PGMON".

Problem (cont.)Solution (cont.)

HEATING OR COOLING DOES
NOT GO ON OR OFF

1. Check that the system selector key is in the correct position ("HEAT," "COOL" or "AUTO").
2. The thermostat may be in the AUTO mode. Look for "AUTO" on the LCD display. If the Heat and Cool program temperatures are close, then the thermostat requires a larger room temperature change before changing from Heat or Cool.
3. There may be as much as a 4 minute delay before the Heat or Cool system turns On - wait and check. (Compressor protection delay.)
4. Check your circuit breakers and switches to ensure there is power to the system.
5. Replace batteries.
6. Make sure your furnace blower door is closed properly.
7. Check the position of the Heat Pump switch.

ERRATIC DISPLAY

1. Press the RESET button once with a small pin and hold for two seconds. The thermostat will need to be re-programmed.


IF UNIT CONTINUES TO OPERATE
IN THE OFF POSITION

1. Replace unit.


THERMOSTAT PERMANENTLY READS "HI,"
"LO," OR "Error" AFTER PRESSING RESET
BUTTON

1. Replace unit.


If you experience any other problems, call 888-830-1326 for Technical Assistance from 7 AM to 7 PM Central Time Monday thru Friday and 8 AM to 5 PM Central Time on Saturday.

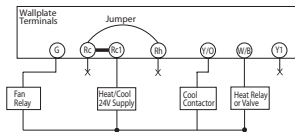


4-Wire Heat/Cool System

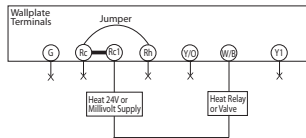


2-Wire Heat Only System

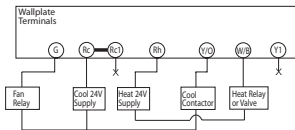


5-Wire Heat/Cool System

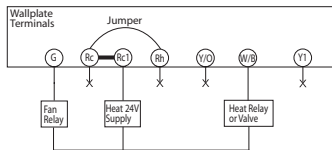

3-Wire Heat Only System

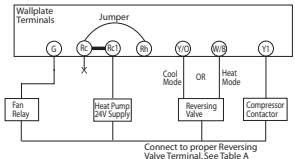

Single-Stage Heat Pump System

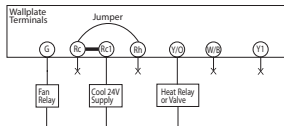

3-Wire Cool Only System



www.hunterfan.com

© 2007 Hunter Fan Co.

Hunter Fan Co.

2500 Frisco Avenue

Memphis, TN 38114

44008-01

05/09/207