

# **AR-B6002 Board**

**Fan-less with Intel ATOM Pineview + ICH8M**

## **User Manual**

**Manual Rev.: 1.1**

## Revision 1.1

## Copyright 2011

### **All Rights Reserved.**

Manual's first edition:

For the purpose of improving reliability, design and function, the information in this document is subject to change without prior notice and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this Manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

### **Trademarks**

AR-B6002 is a registered trademarks of Acrosser; IBM PC is a registered trademark of the International Business Machines Corporation; Pentium is a registered trademark of Intel Technologies Inc; Award is a registered trademark of Award Software International Inc; other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## Table of Contents

<b>1 Introduction .....</b>	<b>6</b>
1.1 Specifications .....	7
1.2 Package Contents .....	8
1.3 Block Diagram .....	9
<b>2 H/W Information .....</b>	<b>10</b>
2.1 Locations of Connector and Jumper Setting.....	10
2.2 Connector and Jumper Setting Table .....	13
<b>3 BIOS Setting .....</b>	<b>23</b>
3.1 Main Setup .....	24
3.2 Advanced Chipset Setup .....	26
3.3 Power Setup.....	28
3.4 PnP/PCI Setup.....	29
3.5 Peripherals Setup .....	31
3.6 PC Health Setup.....	32
3.7 Boot Setup .....	33
3.8 Exit Setup .....	34
<b>4 Watchdog, GPIO, and Bypas Programming .....</b>	<b>36</b>
4.1 Watchdog Programming .....	36
4.2 GPIO Programming .....	40

<b>5 Software Installation and Programming Guide.....</b>	<b>45</b>
5.1 Introduction.....	45
5.2 File Descriptions.....	51
5.3 API List and Descriptions .....	54
5.4 Appendix .....	65

# 1 INTRODUCTION

AR-V6002FL series with Intel Atom D425/D525 processor is a multi-function In-Vehicle computer which is suitable for using in all kind of applications. Besides basic I/O ports like VGA, USB, COM, LAN, and GPIO, AR-V6002FL has complete wireless solutions for selection, embedded CAN BUS function to allow microcontrollers and devices to communicate with each other in vehicle. In addition, AR-V6002FL has intelligent power management function with software utility to monitor power status and control power sequence, and also compliant with most industry standards for in-vehicle usage including CE, FCC, and E-Mark 13.

## 1.1 Specifications


- Intel® Atom D525/D425 1.66GHz
- 1 x SO-DIMM supports DDRIII up to 4GB(Memory DDR3 data transfer rates of 800 MT/s)
- 1 x VGA
- 6 x USB2.0
- 2 x SATA
- 1 x CF II
- 5 x RS-232
- 1 x GbE (Realtek RTL8111D)
- 1 x Line-out , 1 x MIC
- 1 x Canbus (Implementation ISO 11898)
- 8-bit GPIO with 4in / 4out
- Optional WiFi/ Bluetooth/ GPS/ 3.5G solution for selection
- Intelligent power management support standard 12V/24V car battery

## 1.2 Package Contents

Check if the following items are included in the package.

- Quick Manual
- AR-B6002
- 1 x Software Utility CD

## 1.3 Block Diagram

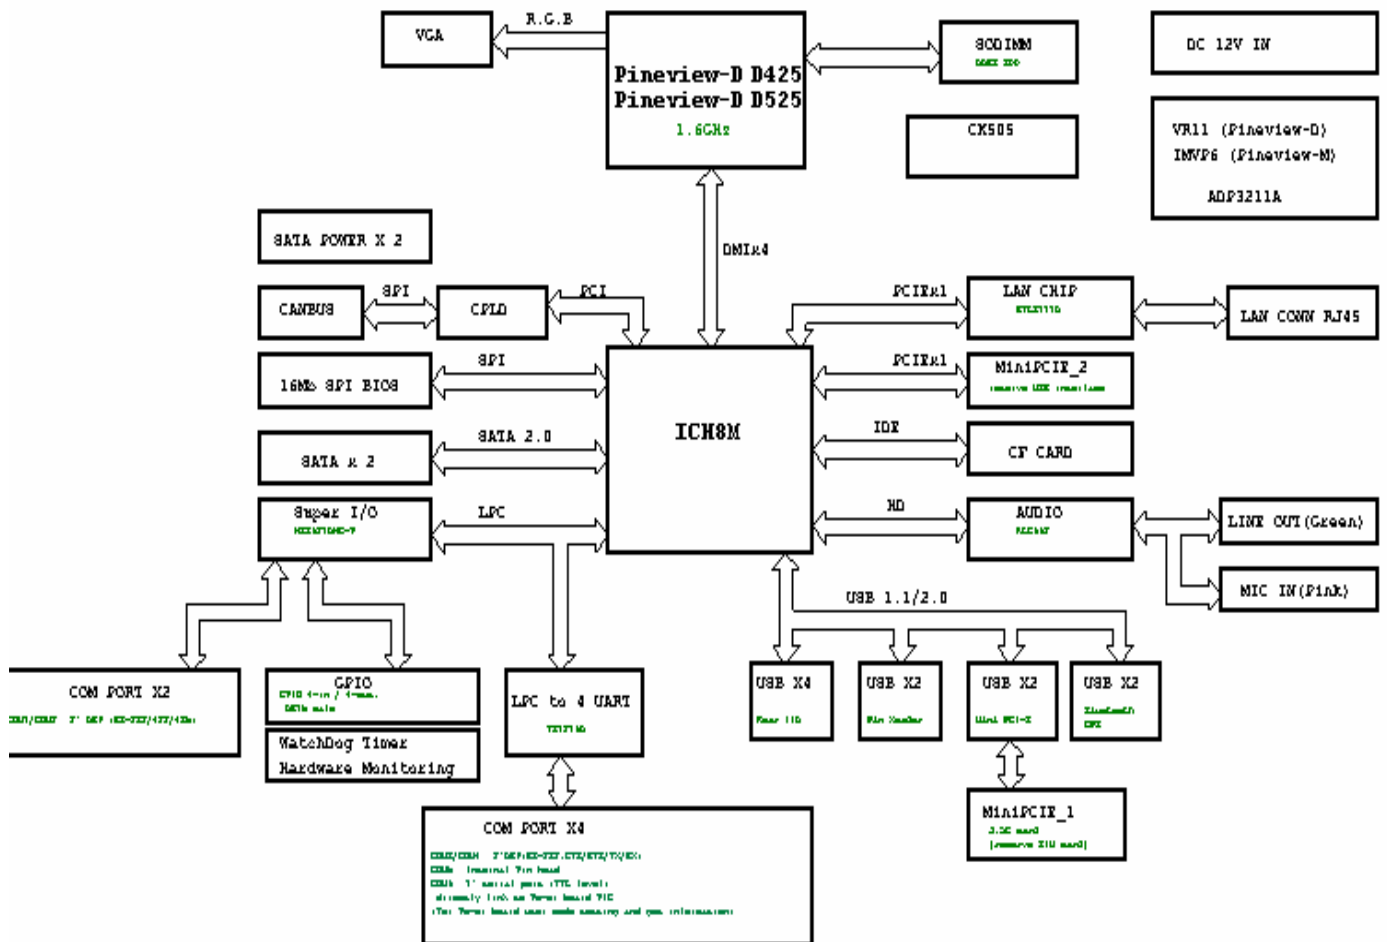


## 2 H/W INFORMATION

This chapter describes the installation of AR-B6050. At first, it shows the Function diagram and the layout of AR-B6050. It then describes the unpacking information which you should read carefully, as well as the jumper/switch settings for the AR-B6050 configuration


### 2.1 Locations of Connector and Jumper Setting

#### 2.1.1 Locations (Top side)

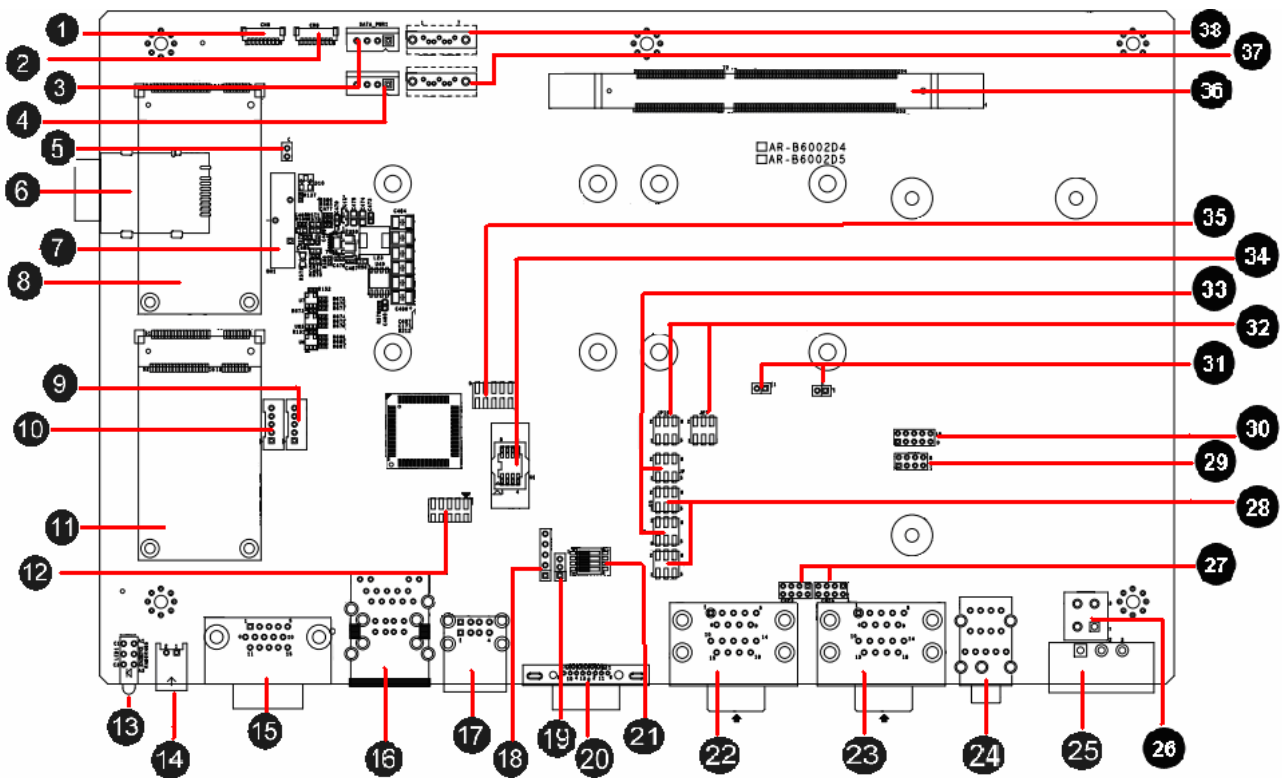






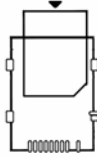
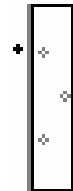
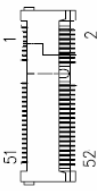
①	CN6	⑭	CN18	⑳	CN23,CN24
②	CN8	⑮	GPIO1	㉑	JP8,JP11
③	SATA_PWR1	⑯	CN5	㉒	CN25 (Reserve)
④	SATA_PWR2	⑰	CN7	㉓	COM5 (Reserve)
⑤	CN2	⑱	CN28	㉔	JP5,JP6 (Reserve)
⑥	CN13	㉀	CN20	㉕	JP7,JP10
⑦	BH1	㉁	VGA1	㉖	JP9,JP12
⑧	Minipcie1	㉂	SW1	㉗	U8
⑨	CN9 (Reserve)	㉃	COM1	㉘	CN21
⑩	CN10 (Reserve)	㉄	COM3	㉙	DIMM1
⑪	Minipcie2	㉅	AUDIO1	㉚	SATA1
⑫	CN17	㉆	PWR1	㉛	SATA2
⑬	LED1	㉇	FUSE1		



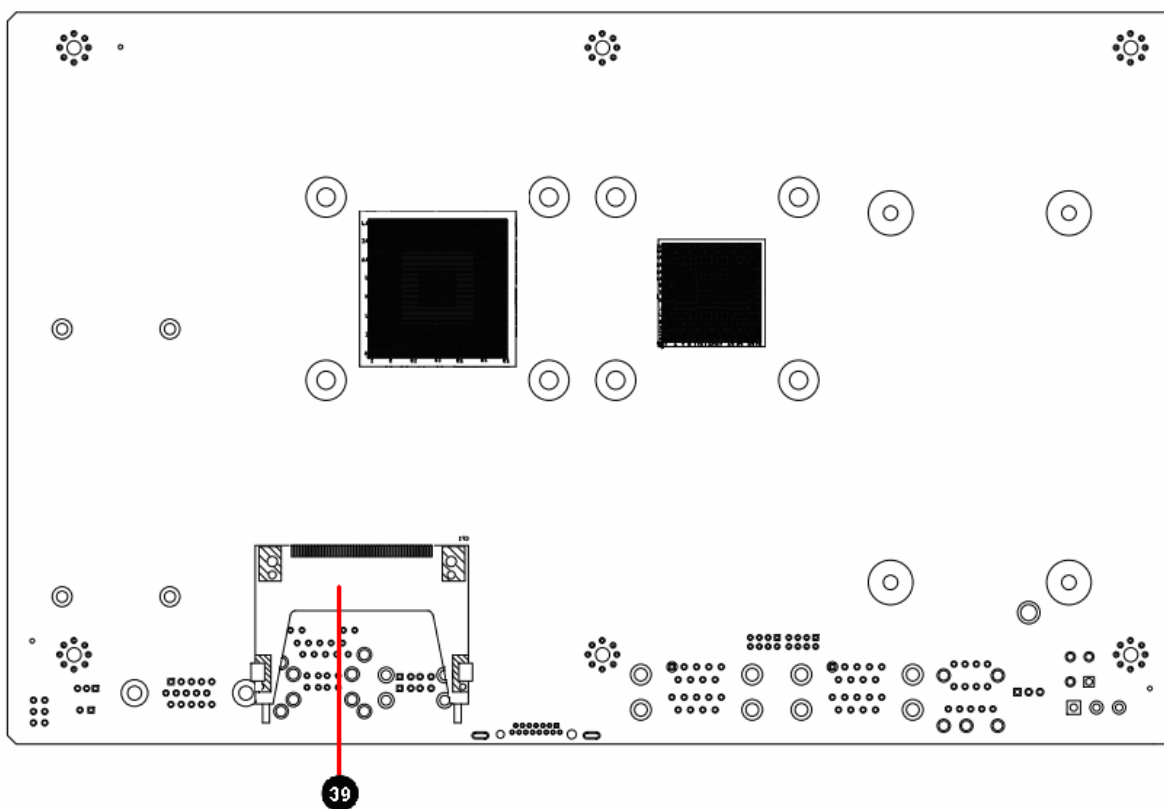



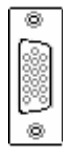
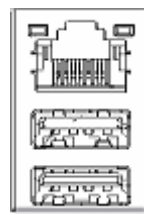
## 2.1.2 Locations (Bottom Side)


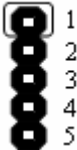





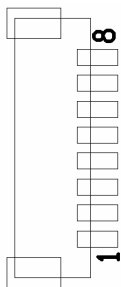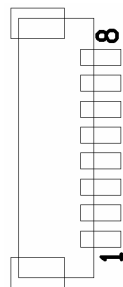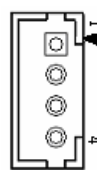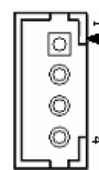

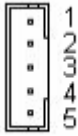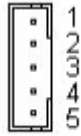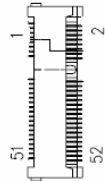



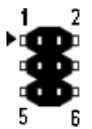




39	CF1
----	-----




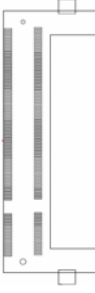



## 2.2 Connector and Jumper Setting Table

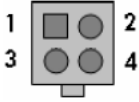1. CN6: BLUETOOTH connector.		2. CN8: GPS connector.																																					
	<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>GND</td></tr><tr><td>2</td><td>USB_D+</td></tr><tr><td>3</td><td>USB_D-</td></tr><tr><td>4</td><td>+3.3V</td></tr><tr><td>5</td><td>LED</td></tr><tr><td>6</td><td>BT_ON</td></tr><tr><td>7</td><td>GND</td></tr><tr><td>8</td><td>+3.3V</td></tr></table>	PIN	DEFINE	1	GND	2	USB_D+	3	USB_D-	4	+3.3V	5	LED	6	BT_ON	7	GND	8	+3.3V		<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>GND</td></tr><tr><td>2</td><td>USB_D+</td></tr><tr><td>3</td><td>USB_D-</td></tr><tr><td>4</td><td>+3.3V</td></tr><tr><td>5</td><td>LED</td></tr><tr><td>6</td><td>GPS_ON</td></tr><tr><td>7</td><td>GND</td></tr><tr><td>8</td><td>+3.3V</td></tr></table>	PIN	DEFINE	1	GND	2	USB_D+	3	USB_D-	4	+3.3V	5	LED	6	GPS_ON	7	GND	8	+3.3V
PIN	DEFINE																																						
1	GND																																						
2	USB_D+																																						
3	USB_D-																																						
4	+3.3V																																						
5	LED																																						
6	BT_ON																																						
7	GND																																						
8	+3.3V																																						
PIN	DEFINE																																						
1	GND																																						
2	USB_D+																																						
3	USB_D-																																						
4	+3.3V																																						
5	LED																																						
6	GPS_ON																																						
7	GND																																						
8	+3.3V																																						
3. SATA_PWR1: SATA Power connector		4. SATA_PWR2: SATA Power connector																																					
	<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>+12V</td></tr><tr><td>2</td><td>GND</td></tr><tr><td>3</td><td>+3.3V</td></tr><tr><td>4</td><td>+5V</td></tr></table>	PIN	DEFINE	1	+12V	2	GND	3	+3.3V	4	+5V		<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>+12V</td></tr><tr><td>2</td><td>GND</td></tr><tr><td>3</td><td>+3.3V</td></tr><tr><td>4</td><td>+5V</td></tr></table>	PIN	DEFINE	1	+12V	2	GND	3	+3.3V	4	+5V																
PIN	DEFINE																																						
1	+12V																																						
2	GND																																						
3	+3.3V																																						
4	+5V																																						
PIN	DEFINE																																						
1	+12V																																						
2	GND																																						
3	+3.3V																																						
4	+5V																																						
5. CN2: Pin Header for clear CMOS		6. CN13: SIM Card Slot																																					
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>1-2</td><td>Clear CMOS</td></tr></table>	STATUS	SETTING	1-2	Clear CMOS		SIM Card Slot for 3G Module.																																
STATUS	SETTING																																						
1-2	Clear CMOS																																						
7. BH1: CMOS battery holder		8. MINIPCIIE1: Mini PCI-E connector. (for 3.5G module)																																					
	CMOS battery holder		MINI PCI-E connector																																				

9. CN9: Internal USB2.0 connector (Reserve)		10. CN10: Internal USB2.0 connector (Reserve)																																					
	<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>+5V</td></tr><tr><td>2</td><td>USB5-</td></tr><tr><td>3</td><td>USB5+</td></tr><tr><td>4</td><td>GND</td></tr><tr><td>5</td><td>GND</td></tr></table>	PIN	DEFINE	1	+5V	2	USB5-	3	USB5+	4	GND	5	GND		<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>+5V</td></tr><tr><td>2</td><td>USB6-</td></tr><tr><td>3</td><td>USB6+</td></tr><tr><td>4</td><td>GND</td></tr><tr><td>5</td><td>GND</td></tr></table>	PIN	DEFINE	1	+5V	2	USB6-	3	USB6+	4	GND	5	GND												
PIN	DEFINE																																						
1	+5V																																						
2	USB5-																																						
3	USB5+																																						
4	GND																																						
5	GND																																						
PIN	DEFINE																																						
1	+5V																																						
2	USB6-																																						
3	USB6+																																						
4	GND																																						
5	GND																																						
11. MINIPCI2: Mini PCI-E connector.		12. CN17: FPGA Programmable HEADER.																																					
	MINI PCI-E connector.		FPGA programmable header.																																				
13. LED1: Power State		14. CN18: CANBUS connector																																					
	<table><tr><th>LED</th><th>SIGNAL</th></tr><tr><td>G</td><td>PIC LED</td></tr><tr><td>G</td><td>HDD LED</td></tr><tr><td>Y</td><td>Power LED</td></tr></table>	LED	SIGNAL	G	PIC LED	G	HDD LED	Y	Power LED		<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>CAN_H</td></tr><tr><td>2</td><td>CAN_L</td></tr></table>	PIN	DEFINE	1	CAN_H	2	CAN_L																						
LED	SIGNAL																																						
G	PIC LED																																						
G	HDD LED																																						
Y	Power LED																																						
PIN	DEFINE																																						
1	CAN_H																																						
2	CAN_L																																						
15. GPIO1: GPIO connector		16. CN5: RJ45 + USB X 2 connector																																					
	<table><tr><th>PIN</th><th>DEFINE</th><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>GPO0</td><td>2</td><td>GPO1</td></tr><tr><td>3</td><td>GPO2</td><td>4</td><td>GPO3</td></tr><tr><td>5</td><td>GND</td><td>6</td><td>GND</td></tr><tr><td>7</td><td>GND</td><td>8</td><td>GND</td></tr><tr><td>9</td><td>GND</td><td>10</td><td>GND</td></tr><tr><td>11</td><td>GPI4</td><td>12</td><td>GPI5</td></tr><tr><td>13</td><td>GPI6</td><td>14</td><td>GPI7</td></tr><tr><td>15</td><td>N.C</td><td></td><td></td></tr></table>	PIN	DEFINE	PIN	DEFINE	1	GPO0	2	GPO1	3	GPO2	4	GPO3	5	GND	6	GND	7	GND	8	GND	9	GND	10	GND	11	GPI4	12	GPI5	13	GPI6	14	GPI7	15	N.C				<p>RJ45 connector for Gigabit Ethernet port #1.</p> <p>Upper: Port #2.</p> <p>Lower: Port #1.</p>
PIN	DEFINE	PIN	DEFINE																																				
1	GPO0	2	GPO1																																				
3	GPO2	4	GPO3																																				
5	GND	6	GND																																				
7	GND	8	GND																																				
9	GND	10	GND																																				
11	GPI4	12	GPI5																																				
13	GPI6	14	GPI7																																				
15	N.C																																						

17. CN7: USB connector		18. CN28: PIC Programming connector.																																																																						
	Upper: Port #4. Lower: Port #3.		PIC programming connector.																																																																					
19. CN20: Setting Voltage level of Battery		20. VGA1: D-SUB-15 female connector for VGA output																																																																						
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>1-2</td><td>+24V</td></tr><tr><td>2-3</td><td>+12V (Default).</td></tr></table>	STATUS	SETTING	1-2	+24V	2-3	+12V (Default).		D-SUB-15 female connector for VGA output																																																															
STATUS	SETTING																																																																							
1-2	+24V																																																																							
2-3	+12V (Default).																																																																							
21. SW1: DIP switch for power mode select (Note 1)		22. COM1: D-SUB-9P Male connector × 2 (Note 2)																																																																						
	<table><tr><th>Mode</th><th>1</th><th>2</th><th>3</th><th>4</th></tr><tr><td>0</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr><tr><td>1</td><td>ON</td><td>ON</td><td>ON</td><td>OFF</td></tr><tr><td>2</td><td>ON</td><td>ON</td><td>OFF</td><td>ON</td></tr><tr><td>3</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td></tr><tr><td>4</td><td>ON</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>5</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td></tr><tr><td>6</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td></tr><tr><td>7</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td></tr></table>	Mode	1	2	3	4	0	ON	ON	ON	ON	1	ON	ON	ON	OFF	2	ON	ON	OFF	ON	3	ON	ON	OFF	OFF	4	ON	OFF	ON	ON	5	ON	OFF	ON	OFF	6	ON	OFF	OFF	ON	7	ON	OFF	OFF	OFF		<table><tr><th>PIN</th><th>DEFINE</th><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>DCD /DT-</td><td>2</td><td>SIN /DT+</td></tr><tr><td>3</td><td>SOUT /422R+</td><td>4</td><td>DTR /422R-</td></tr><tr><td>5</td><td>GND</td><td>6</td><td>DSR</td></tr><tr><td>7</td><td>RTS</td><td>8</td><td>CTS</td></tr><tr><td>9</td><td>RI_12V</td><td></td><td></td></tr></table>	PIN	DEFINE	PIN	DEFINE	1	DCD /DT-	2	SIN /DT+	3	SOUT /422R+	4	DTR /422R-	5	GND	6	DSR	7	RTS	8	CTS	9	RI_12V		
Mode	1	2	3	4																																																																				
0	ON	ON	ON	ON																																																																				
1	ON	ON	ON	OFF																																																																				
2	ON	ON	OFF	ON																																																																				
3	ON	ON	OFF	OFF																																																																				
4	ON	OFF	ON	ON																																																																				
5	ON	OFF	ON	OFF																																																																				
6	ON	OFF	OFF	ON																																																																				
7	ON	OFF	OFF	OFF																																																																				
PIN	DEFINE	PIN	DEFINE																																																																					
1	DCD /DT-	2	SIN /DT+																																																																					
3	SOUT /422R+	4	DTR /422R-																																																																					
5	GND	6	DSR																																																																					
7	RTS	8	CTS																																																																					
9	RI_12V																																																																							
23. COM3: D-SUB-9P Male connector X 2		24. AUDIO1: AUDIO connector																																																																						
	<table><tr><th>PIN</th><th>DEFINE</th><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>DCD</td><td>2</td><td>SIN</td></tr><tr><td>3</td><td>SOUT</td><td>4</td><td>DTR</td></tr><tr><td>5</td><td>GND</td><td>6</td><td>DSR</td></tr><tr><td>7</td><td>RTS</td><td>8</td><td>CTS</td></tr><tr><td>9</td><td>RI_12V</td><td></td><td></td></tr></table>	PIN	DEFINE	PIN	DEFINE	1	DCD	2	SIN	3	SOUT	4	DTR	5	GND	6	DSR	7	RTS	8	CTS	9	RI_12V				<table><tr><th>Color</th><th>SIGNAL</th></tr><tr><td>Blue</td><td>Remote Switch</td></tr><tr><td>Green</td><td>Line Out</td></tr><tr><td>Pink</td><td>MIC IN</td></tr></table>	Color	SIGNAL	Blue	Remote Switch	Green	Line Out	Pink	MIC IN																																					
PIN	DEFINE	PIN	DEFINE																																																																					
1	DCD	2	SIN																																																																					
3	SOUT	4	DTR																																																																					
5	GND	6	DSR																																																																					
7	RTS	8	CTS																																																																					
9	RI_12V																																																																							
Color	SIGNAL																																																																							
Blue	Remote Switch																																																																							
Green	Line Out																																																																							
Pink	MIC IN																																																																							

25. PWR1: Power Input Terminal Block Connector		26. FUSE1: Fuse connector																																			
	<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>12V / 24V</td></tr><tr><td>2</td><td>IGN</td></tr><tr><td>3</td><td>GND</td></tr></table>	PIN	DEFINE	1	12V / 24V	2	IGN	3	GND		<table><tr><th>PIN</th><th>DEFINE</th></tr><tr><td>1,2</td><td>Fuse Out</td></tr><tr><td>3,4</td><td>Fuse In</td></tr></table>	PIN	DEFINE	1,2	Fuse Out	3,4	Fuse In																				
PIN	DEFINE																																				
1	12V / 24V																																				
2	IGN																																				
3	GND																																				
PIN	DEFINE																																				
1,2	Fuse Out																																				
3,4	Fuse In																																				
27. CN23: RI SELECT for COM1/2 CN24: RI SELECT for COM3/4		28. JP8,JP11: RS-232 / RS-422 / RS-485 Selection for COM1/2 (Note 2)																																			
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>RI# (Default)</td><td>1-2(COM1/COM3)</td></tr><tr><td>+12V</td><td>3-4( COM1/COM3)</td></tr><tr><td>RI# (Default)</td><td>5-6( COM2/COM4)</td></tr><tr><td>+12V</td><td>7-8( COM2/COM4)</td></tr></table>	STATUS	SETTING	RI# (Default)	1-2(COM1/COM3)	+12V	3-4( COM1/COM3)	RI# (Default)	5-6( COM2/COM4)	+12V	7-8( COM2/COM4)		<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>RS-232 (Default)</td><td>1-3 2-4</td></tr><tr><td>RS-422</td><td>3-5 4-6</td></tr><tr><td>RS-485</td><td>3-5 4-6</td></tr></table>	STATUS	SETTING	RS-232 (Default)	1-3 2-4	RS-422	3-5 4-6	RS-485	3-5 4-6																
STATUS	SETTING																																				
RI# (Default)	1-2(COM1/COM3)																																				
+12V	3-4( COM1/COM3)																																				
RI# (Default)	5-6( COM2/COM4)																																				
+12V	7-8( COM2/COM4)																																				
STATUS	SETTING																																				
RS-232 (Default)	1-3 2-4																																				
RS-422	3-5 4-6																																				
RS-485	3-5 4-6																																				
29. CN25: RI SELECT for COM5/6 (Reserve)		30. COM5: RS232 signal connector for port #5 (Reserve)																																			
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>RI# (Default)</td><td>1-2(COM5)</td></tr><tr><td>+12V</td><td>3-4(COM5)</td></tr><tr><td>RI# (Default)</td><td>5-6(COM6)</td></tr><tr><td>+12V</td><td>7-8(COM6)</td></tr></table>	STATUS	SETTING	RI# (Default)	1-2(COM5)	+12V	3-4(COM5)	RI# (Default)	5-6(COM6)	+12V	7-8(COM6)		<table><tr><th>PIN</th><th>DEFINE</th><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>DCD #5</td><td>2</td><td>DSR #5</td></tr><tr><td>3</td><td>RX #5</td><td>4</td><td>RTS #5</td></tr><tr><td>5</td><td>TX #5</td><td>6</td><td>CTS #5</td></tr><tr><td>7</td><td>DTR #5</td><td>8</td><td>RI #5</td></tr><tr><td>9</td><td>GND</td><td>10</td><td>N.C</td></tr></table>	PIN	DEFINE	PIN	DEFINE	1	DCD #5	2	DSR #5	3	RX #5	4	RTS #5	5	TX #5	6	CTS #5	7	DTR #5	8	RI #5	9	GND	10	N.C
STATUS	SETTING																																				
RI# (Default)	1-2(COM5)																																				
+12V	3-4(COM5)																																				
RI# (Default)	5-6(COM6)																																				
+12V	7-8(COM6)																																				
PIN	DEFINE	PIN	DEFINE																																		
1	DCD #5	2	DSR #5																																		
3	RX #5	4	RTS #5																																		
5	TX #5	6	CTS #5																																		
7	DTR #5	8	RI #5																																		
9	GND	10	N.C																																		
31. JP5,JP6: RS-485 Termination 120 ohm (Reserve)		32. JP7,JP10: RS-232 / RS-422 / RS-485 Selection for COM1/2 (Note 2)																																			
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>Enable</td><td>short</td></tr><tr><td>Disable</td><td>open (Default)</td></tr></table>	STATUS	SETTING	Enable	short	Disable	open (Default)		<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>RS-232 (Default)</td><td>1-2</td></tr><tr><td>RS-422</td><td>3-4</td></tr><tr><td>RS-485</td><td>5-6</td></tr></table>	STATUS	SETTING	RS-232 (Default)	1-2	RS-422	3-4	RS-485	5-6																				
STATUS	SETTING																																				
Enable	short																																				
Disable	open (Default)																																				
STATUS	SETTING																																				
RS-232 (Default)	1-2																																				
RS-422	3-4																																				
RS-485	5-6																																				

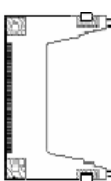33. JP9,JP12: RS-232 / RS-422 / RS-485 Selection for COM1/2 (Note 2)		34. U8: SPI BIOS Socket																									
	<table><tr><th>STATUS</th><th>SETTING</th></tr><tr><td>RS-232 (Default)</td><td>1-3 2-4</td></tr><tr><td>RS-422</td><td>3-5 4-6</td></tr><tr><td>RS-485</td><td>N / A</td></tr></table>	STATUS	SETTING	RS-232 (Default)	1-3 2-4	RS-422	3-5 4-6	RS-485	N / A		SPI BIOS Socket																
STATUS	SETTING																										
RS-232 (Default)	1-3 2-4																										
RS-422	3-5 4-6																										
RS-485	N / A																										
35. CN21: BIOS Programmable HEADER.		36. DIMM1: DDR-II SODIMM Socket.																									
	<table><tr><th>PIN</th><th>DEFINE</th><th>PIN</th><th>DEFINE</th></tr><tr><td>1</td><td>CS0</td><td>2</td><td>+3.3V</td></tr><tr><td>3</td><td>MISO</td><td>4</td><td>HOLD</td></tr><tr><td>5</td><td>WP</td><td>6</td><td>CLK</td></tr><tr><td>7</td><td>GND</td><td>8</td><td>MOSI</td></tr><tr><td>9</td><td>N.C</td><td>10</td><td>N.C</td></tr></table>	PIN	DEFINE	PIN	DEFINE	1	CS0	2	+3.3V	3	MISO	4	HOLD	5	WP	6	CLK	7	GND	8	MOSI	9	N.C	10	N.C		DDR-3 SODIMM Socket
PIN	DEFINE	PIN	DEFINE																								
1	CS0	2	+3.3V																								
3	MISO	4	HOLD																								
5	WP	6	CLK																								
7	GND	8	MOSI																								
9	N.C	10	N.C																								
37. SATA1: SATA device connector #1.		38. SATA2: SATA device connector #2.																									
	SATA device connector #1		SATA device connector #2																								
39. CF1: Type-II compact flash card socket																											
	+3.3V CF card only and UDMA mode supported																										

- **Note1: Power smart function**

- Mode0: ATX function.
- Mode1: Auto PWRBTN function.
- Mode2, Mode3, Mode4: Smart ATX.
- Mode5, Mode6, Mode7: Smart ATX (power-on by trigger Remote SW).
- Others modes are reserved for test only.

### **Definition**

1. Soft off cycle:

A period when received power off signal to generate a off signal (A 500mS pulse, High-Low –High or Low-High-Low depends on SIO configuration, to mother board's Power Button Pin)

2. Hard Off cycle:

A period when system off (S5) to stand by removed (G3). In another word, the A period of 5VSB on to off (when system already off)

*Notes: S5 and G3 is follow by ACPI*

### **Mode description**

The main power-in is controlled by the switch on chassis.

Maximum 16 Modes adjusted by 4 switches. (Mode 8 to mode 15 are reserved for future use).

#### **Mode 0: ATX mode.**

- A. 5V Standby is always on.
- B. Input voltage is not monitored.
- C. Power on/off is controlled by remote switch

#### **Mode 1: Auto PWRBTN mode**

- A. Power output immediately after input is present.
- B. Power output is off immediately when input power to off

### **Smart Mode (Mode 2 to Mode 7)**

#### **Mode 2: See Figure 1**

- A. Power on is controlled by **ignition (remote switch does not make any action to power on)**.
- B. **Power on retry:** If the motherboard cannot be turned on normally (/PSON does not go to low), the Power smart function will turn off 5VSB, and then turn on 5VSB and retry. Send "on"

pulse to motherboard again. The power board will re-try this procedure until successfully turn on motherboard.

- C. Power smart function sends "ON" pulse to motherboard when ignition is on for more than 2 seconds.
- D. Power smart function will ignore the status change of ignition after ON pulse is send to motherboard for 3 minutes. After this period, the Power smart function will start to check its status. This can avoid an improper "OFF" process before the OS is complete booted.
- E. Power off is controlled by **remote switch or ignition**. **Remote switch** has higher priority than ignition. (Remote switch is optional).
- F. Power smart function sends "off" pulse to motherboard **5 seconds** after ignition is turned off or remote switch is pressed. (Soft delay)
- G. Power smart function will ignore the status change of ignition and remote switch during the "OFF" pulse is sent out and the /PSON return to high. This will avoid an improper ON process before the motherboard is completely shot off.
- H. The **digital output (optional)** will go from high to low at the moment that "OFF" pulse is sent to motherboard. The low state will be kept until /PSON back to high. If the /PSON does not back to high within 3 minutes, the Power smart function will enter a retry cycle (described in next section).
- I. **Power off retry:** If the motherboard cannot be shouted down normally (/PSON does not go to high) within 3 minutes after "OFF" pulse is sent, the Power smart function will send off pulse to motherboard again. If the motherboard still cannot be shouted down normally, the power output will be turned off directly. (Figure 3)
- J. Hard off delay: **1 minutes**, During this period system can be turned on again if the off procedure already finished and power button is pushed again(or ignition on again)

#### Mode 3:

- A. Same as mode 2 except for soft/hard off delay time
- B. Soft off delay: **1 minute**
- C. Hard off delay: **5 minutes**

#### Mode 4:

- A. Same as mode 2 except for soft/hard off delay time
- B. Soft off delay: **30 minute**
- C. Hard off delay: **2 Hours**

### Mode 5: See Figure 2

Same as mode 2 except that the power on is controlled by **remote switch**.

- A. Power on is controlled by **remote switch (ignition must be turned on 2 seconds before remote switch is pressed)**.
- B. The Smart Mode sends off pulse to motherboard **5 seconds** after ignition is turned off or remote switch is pressed. (Soft delay)
- C. Hard off delay: **1 minutes**

### Mode 6:

- A. Same as mode 5 except for soft/hard off and delay
- B. Soft off delay: **1 minute**
- C. Hard off delay: **5 minutes**

### Mode 7:

- A. Same as mode 5 except for soft/hard off and delay
- B. Soft off delay: **30 minute**
- C. Hard off delay: **2 Hours**

### Mode15(Software control mode):

- A. Setting by AP
- B. Software mode default as Hardware mode 2
- C. Soft off delay time can be set
- D. Hard off delay time can be set
- E. In-Vehicle system power on by ignition or Remote button can be set
- F. Show Ignition status / Voltage(for AP only)
- G. Create a button "Set default"

Plan AP screen→

The screenshot shows a mobile application interface for configuring a car's system. At the top, there are two status indicators: 'Engine status' and 'Car Battery', each with a small white box next to it. Below these is a green rectangular area containing the main settings. The first setting is 'System on by', with two radio buttons: 'Ignition' (which is selected, indicated by a red dot) and 'Remote Switch'. Below this are two input fields for delay times: 'Soft off delay time' and 'Hard off delay time', both followed by the word 'seconds'. To the right of these input fields is a purple button labeled 'Set Default'. At the bottom of the screen, there are two white buttons with blue borders: 'OK' and 'Cancel'.


Table 1. Control Mode

Mode	Soft OFF Delay	Hard OFF delay	Power ON Control	Power OFF Control
0 (ATX)	No	No	Remote Switch	Remote Switch
1(Auto PWRBTN)	No	No	DC ON	DC OFF
2	5 seconds	1 minute	Ignition	Ignition / Remote Switch
3	1 minute	5 minutes	Ignition	Ignition / Remote Switch
4	30 minutes	2 hours	Ignition	Ignition / Remote Switch
5	5 seconds	1 minute	Remote Switch / Ignition	Ignition / Remote Switch
6	1 minute	5 minutes	Remote Switch / Ignition	Ignition / Remote Switch
7	30 minutes	2 hours	Remote Switch / Ignition	Ignition / Remote Switch
15 (Software control)	By user setting	By user setting	By user setting	Ignition / Remote Switch

### Another function of Smart Mode

1. If ignition turns back “ON” during “Off” Delay, Power smart function will stay in operation. “Off” signal will not be send to motherboard. The “Off” Delay will re-start after next ignition off.
2. Power input monitoring(before system boot on, during runtime, during soft off delay): The Power smart function will constantly monitor the input voltage. If the input voltage is below **X Voltage (the standard might have 5% tolerance)**, the Smart Mode will not start the power on procedure. When Power smart function has ran in operation and the battery drops below **Y Voltage (with 5% tolerance)** more than 10 seconds the Power smart function will shut down the motherboard following the standard shut down procedure. If the input voltage recovers in 10 seconds over **Y Voltage (with 5% tolerance)** again, the Power smart function will continue to run. (Figure 4)if this happens, ignition shall be off and on again (Mode 2, 3, 4) or press the remote switch(Mode 5,6,7) if you want to turn on system again.

**Important: Please make sure the CN20 jumper is set to the right setting which meet your vehicle power system. The power subsystem uses this setting to identify the voltage of your vehicle power system.**

	1	<b>STATUS</b>	<b>SETTING</b>
	2		
	3	<b>1-2</b>	+24V system
		<b>2-3</b>	+12V system (Default).

	For 12V car battery	For 24V car battery
<b>X value</b> (Minimum Start up voltage)	<b>11.2</b>	<b>23</b>
<b>Y value</b> (Auto shut down voltage)	<b>10.8</b>	<b>22.5</b>

**Note2: COM1 / 2 to choose RS-232 / RS-485 / RS-422 by Jump setting**

- JP7,JP8,JP9 setting to COM1
- JP10,JP11,JP12 setting to COM2

### COM1 Type Selection

	JP7	JP8	JP9
RS-232	1 - 2	1 - 3 2 - 4	1 - 3 2 - 4
RS-422	3 - 4	3 - 5 4 - 6	3 - 5 4 - 6
RS-485	5 - 6	3 - 5 4 - 6	N / A

### COM2 Type Selection

	JP10	JP11	JP12
RS-232	1 - 2	1 - 3 2 - 4	1 - 3 2 - 4
RS-422	3 - 4	3 - 5 4 - 6	3 - 5 4 - 6
RS-485	5 - 6	3 - 5 4 - 6	N / A

## 3 BIOS SETTING


This chapter describes the BIOS menu displays and explains how to perform common tasks needed to get the system up and running. It also gives detailed explanation of the elements found in each of the BIOS menus. The following topics are covered:

- Main Setup
- Advanced Chipset Setup
- PnP/PCI Setup
- Peripherals Setup
- PC Health Setup
- Boot Setup
- Exit Setup

Once you enter the Award BIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. Use the arrow keys to highlight the item and then use the <Pg Up> <Pg Dn> keys to select the value you want in each item.

## 3.1 Main Setup

The BIOS setup main menu includes some options. Use the [Up/Down] arrow key to highlight the option, and then press the [Enter] key to select the item and configure the functions.

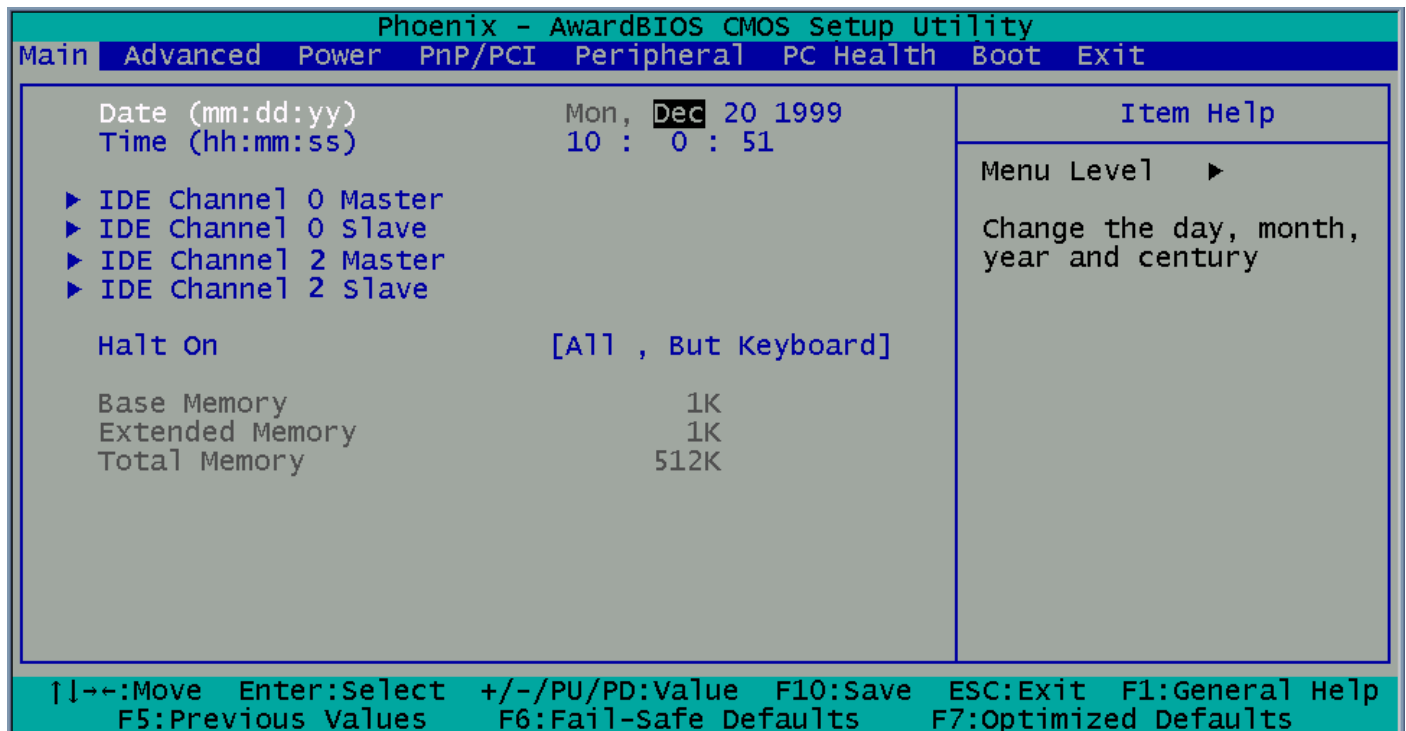


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Item	Option	Description
<b>System Date</b>	Format : MM/DD/YYYY (month/day/year)	Set the system date. Note that the 'Day' automatically changes when you set the date.
<b>System Time</b>	Format: HH:MM:SS (hour:minute:second)	Set the system time.
<b>IDE Channel 0 Master/Slave</b>	N/A	The onboard SATA Ports support user connecting up to 2 SATA HDD. The first SATA Port is the "IDE Channel 0 Master" and the second is "IDE Channel 1 Master". BIOS will auto-detect the HDD type.

<b>Halt On</b>	All Errors, No Errors, All but keyboard.	Select the situation in which you want the BIOS to stop the POST process and notify you.
----------------	--	--

## 3.2 Advanced Chipset Setup

This section consists of configuration entries that allow you to improve your system performance, or modify some system features according to your preference. Some entries are required and reserved by the board's design.

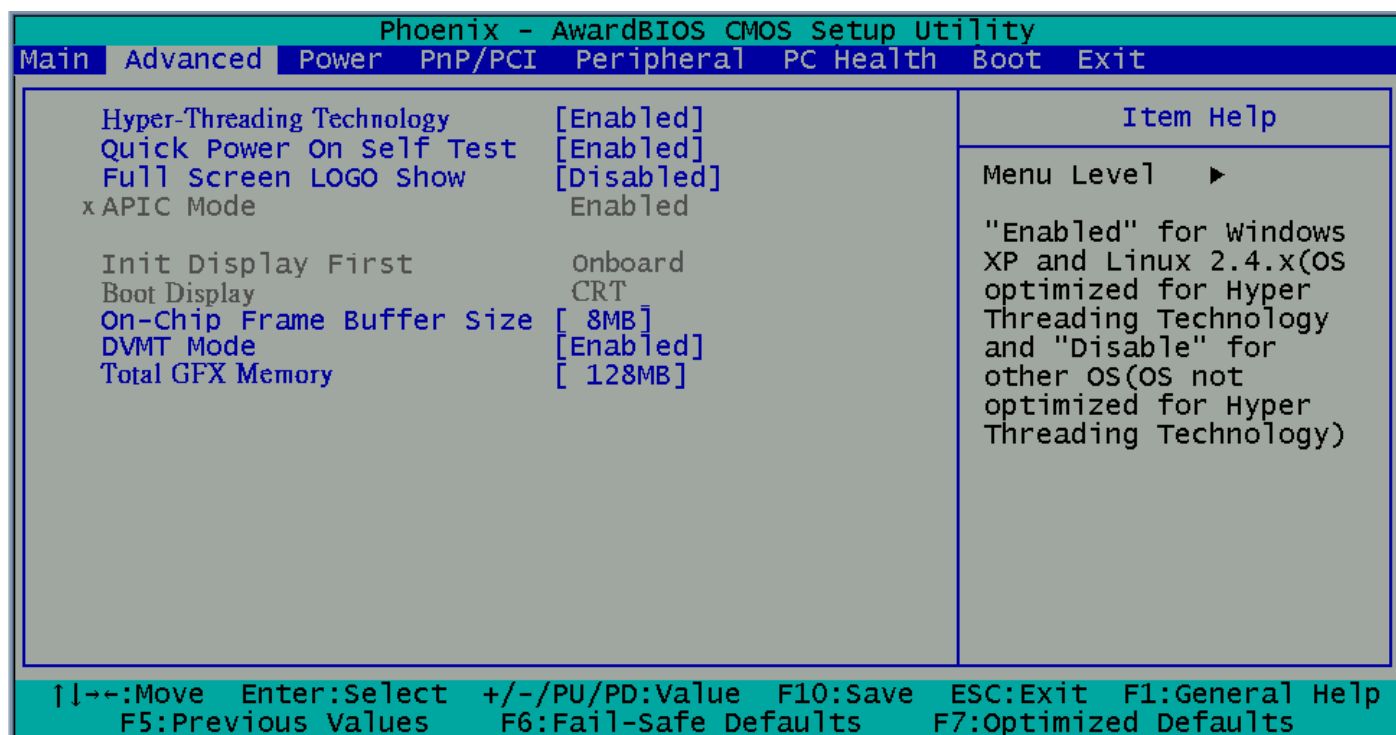


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Option	Choice	Description
<b>Hyper-Threading Technology</b>	Enabled Disabled	Enable for Windows XP and Linux Disable for other OS.
<b>Quick Power On Self Test</b>	Enabled Disabled	This category speeds up the Power On Self Test (POST) after you have powered on the computer. If it is set to Enabled, the BIOS will shorten or skip some check items during POST.
<b>Full Screen Logo Show</b>	Enabled Disabled	Select Enabled to show the full screen logo if you have an add-in BIOS.
<b>On-Chip Frame Buffer Size</b>	1Mb 8Mb	This Item is for setting the Frame Buffer (Share system memory as display

		memory).
<b>DVMT mode</b>	Enabled Disabled	This item sets the mode for dynamic video memory thechology
<b>Total GFX Memory</b>	128MB 256MB MAX	This item sets the mode for GFX video memory

### 3.3 Power Setup

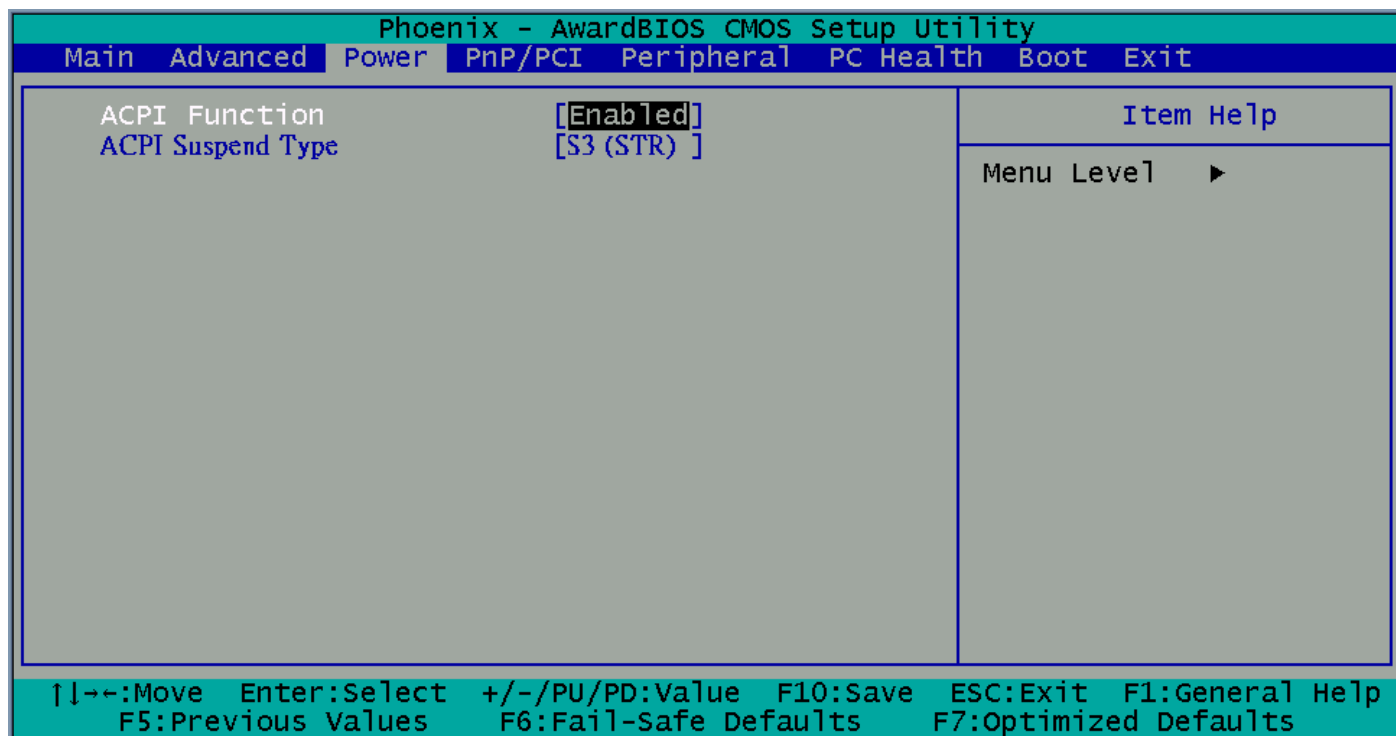


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Item	Option	Description
ACPI Function	Enabled	ACPI System Support
ACPI Suspend Type	S3 S1	ACPI S1/S3 Sleep State.

## 3.4 PnP/PCI Setup

The option configures the PCI bus system. All PCI bus system on the system use INT#, thus all installed PCI cards must be set to this value.

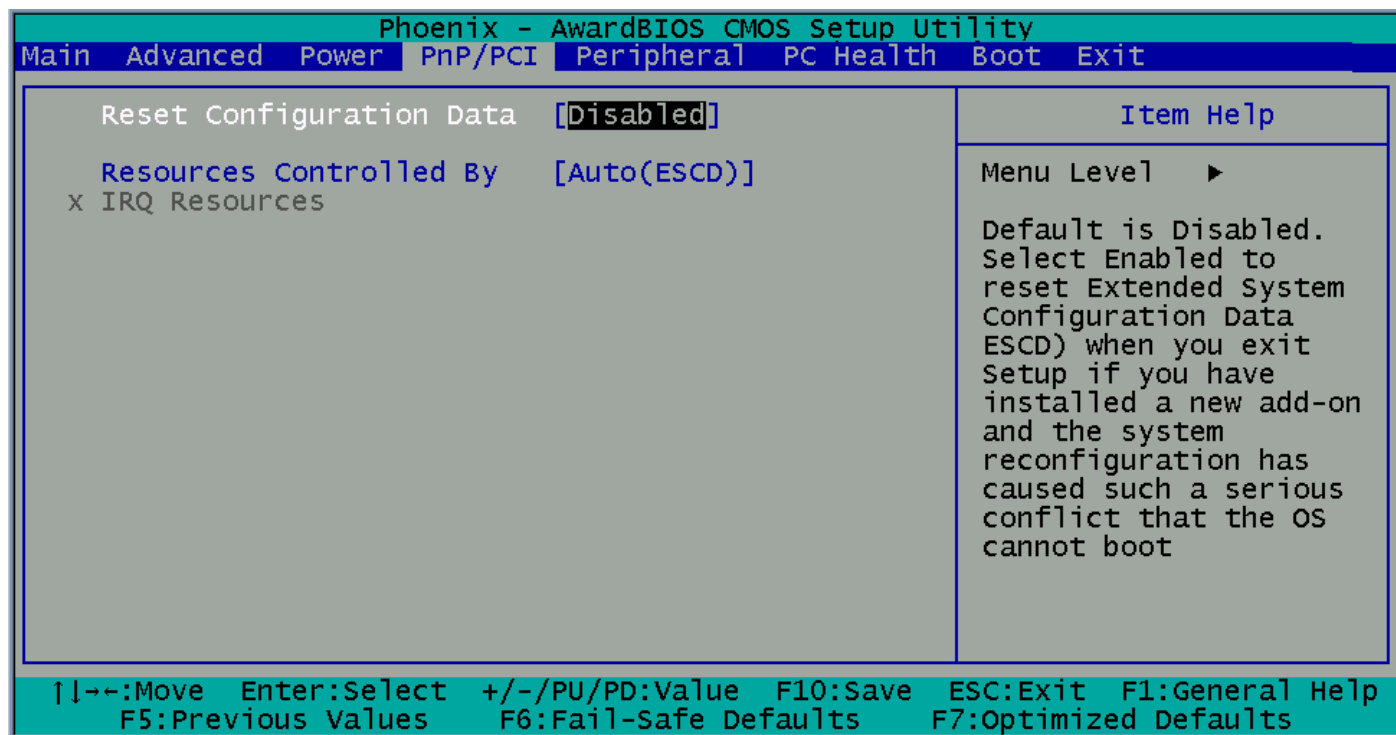


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Item	Option	Description
Reset Configuration Data	Enabled Disabled	Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup. If you have installed a new add-on and the system reconfiguration has caused such a serious conflict, then the operating system cannot boot.
Resources Controlled By	Auto(ESCD) Manual	The Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play

		operating system such as Windows 95. If you set this field to "manual," then you may choose specific resources by going into each of the submenus.
<b>IRQ Resources</b>	N/A	When resources are controlled manually, assign a type to each system interrupt, depending on the type of the device that uses the interrupt

## 3.5 Peripherals Setup

This option controls the configuration of the board's chipset. Control keys for this screen are the same as for the previous screen.

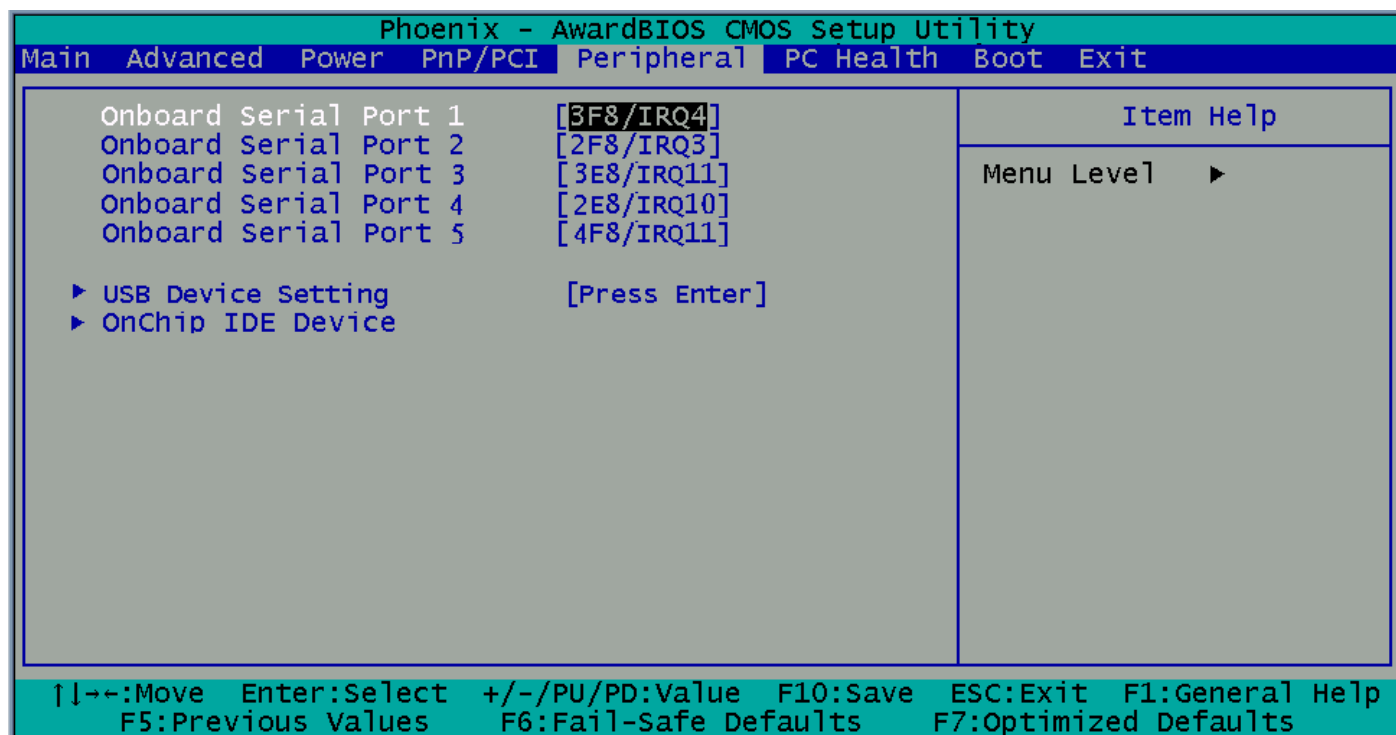


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Option	Choice	Description
Onboard Serial Port 1 Onboard Serial Port 2 Onboard Serial Port 3 Onboard Serial Port 4 Onboard Serial Port 5	Serial Port 1: 3F8 / IRQ4 Serial Port 2: 2F8 / IRQ3 Serial Port 3: 3E8 / IRQ11 Serial Port 4: 2E8 / IRQ10 Serial Port 5: 4F8 / IRQ11	Select an address and the corresponding interrupt for each serial port.
USB Device Setting		Select your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.
On chip IDE DEVICE		The integrated peripheral controller contains an IDE interface with support for two IDE channels.


## 3.6 PC Health Setup

This section shows the parameters in determining the PC Health Status. These parameters include temperatures, fan speeds, and voltages.

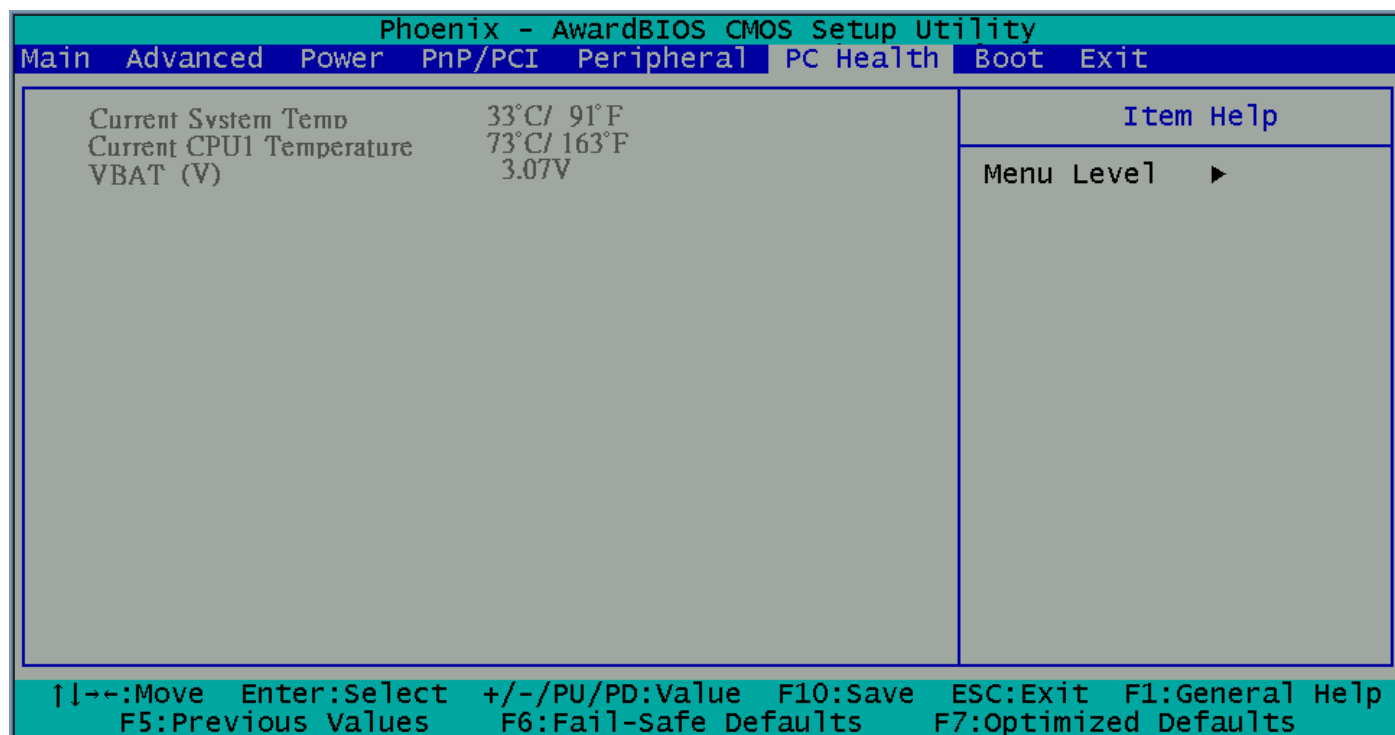

## 3.7 Boot Setup

This option allows user to select sequence/priority of boot device(s) and Boot from LAN.

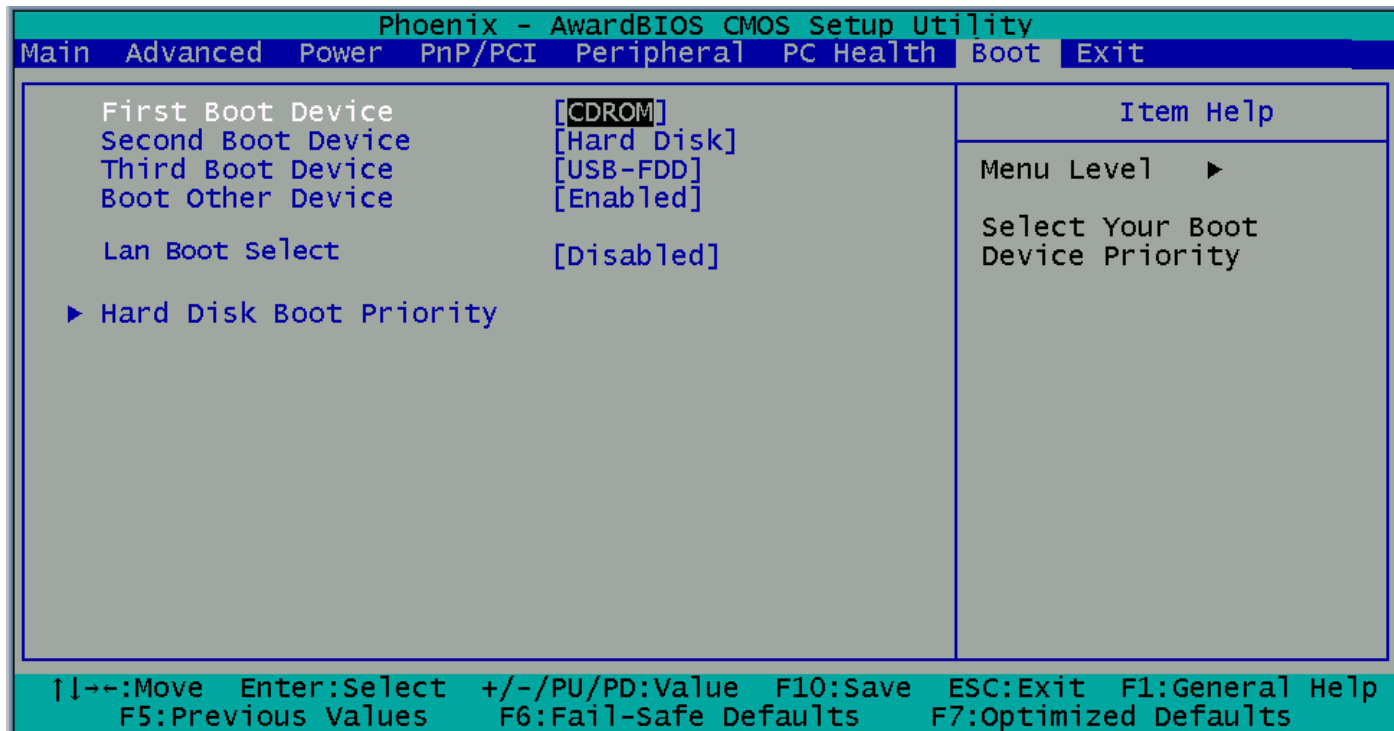


Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Option	Choice	Description
<b>First / Second / Third Boot Device/Other Boot Device</b>	Hard Disk CDROM USB-FDD USB-CDROM LAN Disabled	The BIOS attempts to load the operating system from the devices in the selected sequence.
<b>LAN Boot Select</b>	Enabled Disabled	These fields allow the system to search for an OS from LAN.
<b>Hard Disk Boot Priority</b>	N/A	These fields set the Boot Priority for each Hard Disk.

## 3.8 Exit Setup

This option is used to exit the BIOS main menu and change password.

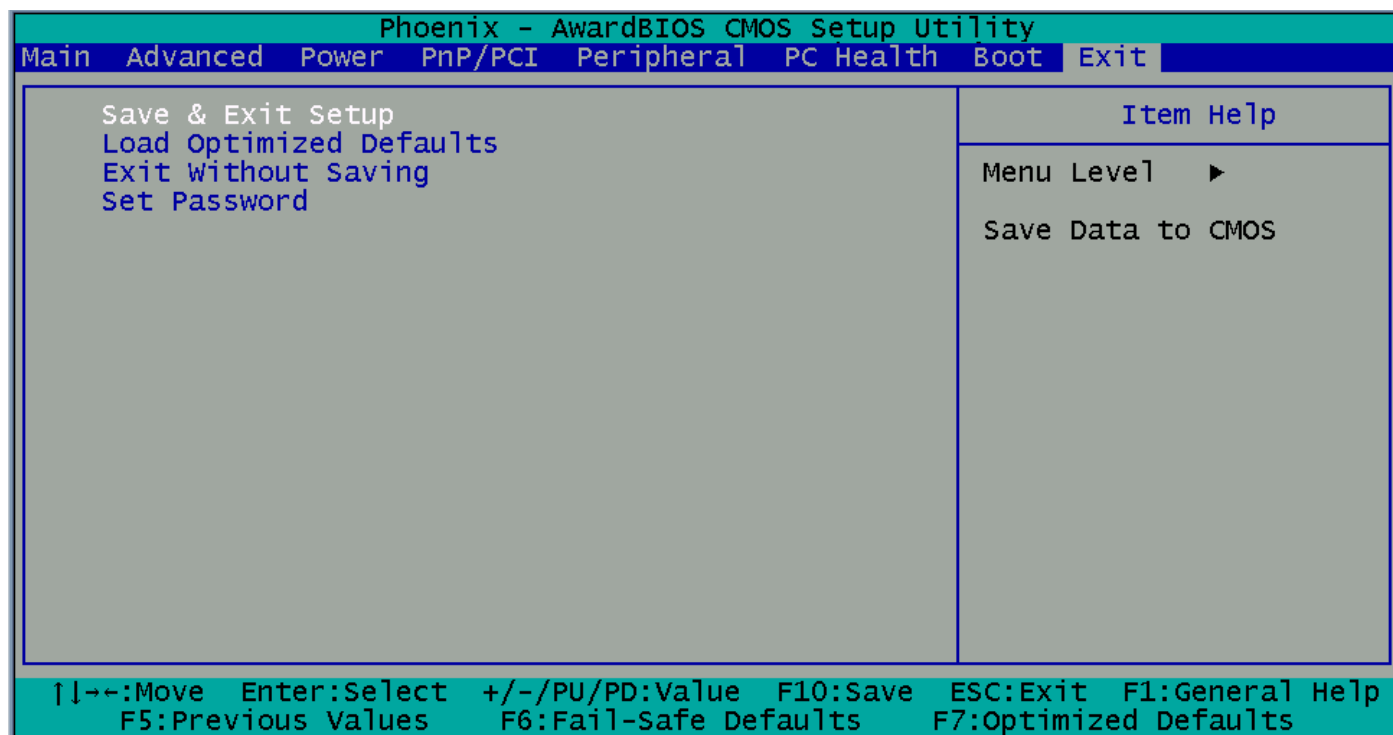

Note: The control keys are listed at the bottom of the menu. If you need any help with the item fields, you can press the <F1> key, and the relevant information will be displayed.

Option	Choice	Description
Save & Exit Setup	Press <Enter> on this item to confirm: <b>Save to CMOS and EXIT (Y/N)? Y</b>	Press "Y" to store the selections made in the menus in CMOS – a special section of the memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the setup selections stored in CMOS. After saving the values, the system will restart.

<b>Load Optimized Defaults</b>	<p>When you press &lt;Enter&gt; on this item, you will see a confirmation dialog box with a message like this:</p> <p><b>Load Optimized Defaults (Y/N)? N</b></p>	<p>Press 'Y' to load the default values that are factory-set for optimal-performance system operations.</p>
<b>Exit Without Saving</b>	<p>Press &lt;Enter&gt; on this item to confirm:</p> <p><b>Quit without saving (Y/N)? Y</b></p>	<p>This allows you to exit Setup without storing any changes in CMOS. The previous selections remain in effect. This will exit the Setup utility and restart your computer.</p>
<b>Set Password</b>	<p>Press &lt;Enter&gt; on this item to confirm:</p> <p><b>ENTER PASSWORD:</b></p>	<p>When a password has been enabled, you will be prompted to enter your password every time you try to enter Setup. This prevents unauthorized persons from changing any part of your system configuration.</p> <p>Type the password, up to eight characters in length, and press &lt;Enter&gt;. The password typed now will clear any previous password from the CMOS memory. You will be asked to confirm the password. Type the password again and press &lt;Enter&gt;. You may also press &lt;Esc&gt; to abort the selection and not enter a password.</p> <p>To disable a password, just press &lt;Enter&gt; when you are prompted to enter the password. A message will confirm that the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.</p>

# 4

## WATCHDOG, GPIO, AND BYPASS PROGRAMMING

### 4.1 Watchdog Programming

This section describes the usage of WATCHDOG. AR-B6050 integrated the WATCHDOG that enable user to reset the system after a time-out event. User can use a program to enable the WATCHDOG and program the timer in range of 1~255 second(s)/minute(s). Once user enables the WATCHDOG, the timer will start to count down to zero except trigger the timer by user's program continuously. After zeroize the timer (stop triggering), the WATCHDOG will generate a signal to reset the system. It can be used to prevent system crash or hang up. The WATCHDOG is disabled after reset and should be enabled by user's program.

Intel also provides a Linux watchdog driver to access the feature on AR-B6050. It can be accessed via /dev/watchdog. About the related operations of Linux watchdog please refer Linux website.

Please refer to the following table to program WATCHDOG properly, and user could test WATCHDOG under 'Debug' program.

Address port: 2E and Data port: 2F	
<b>C:&gt;debug</b>	To enter debug mode.
<b>-o 2E 87</b> <b>-o 2E 01</b> <b>-o 2E 55</b> <b>-o 2E 55</b>	To enter configuration.
<b>-o 2E 07</b>	To point to Logical Device Number Reg.
<b>-o 2F 07</b>	To select logical device 7 (WATCHDOG).
<b>-o 2E 72</b> <b>-o 2F 40</b>	To select "keyboard reset" as WATCHDOG output to reset system.
<b>-o 2E 72</b>	Preparing to select the unit of timer equals minute or second.
<b>-i 2F</b>	To read the value of index "2F".
<b>-o 2F xx</b>	The value "xx" equals [(value of index "2F") OR (80)]. OR (80): unit is second. OR (00): unit is minute.

-o 2E 73	Preparing to set the WATCHDOG timer value.
-o 2F ##	The value "##" ranges between 01 ~ FF (1 ~ 255 seconds). <b>00: To disable WATCHDOG.</b>
-q	To quit debug mode

**Notice: The “actual” timer value may not match with the “theoretical”. That is because of the tolerance of internal oscillating clock and cannot be adjusted or optimized.**

```
//=====
// Rev    Date    Name    Description
//=====
// 1.0 11/22/10  Willy W83627HG WatchDog timer test
//=====
```

```
//=====
// Turbo C++ Version 3.0 Copyright(c) 1990, 1992 by Borland International,Inc.
//=====
```

```
//=====
//  Language include files
//=====
#include <conio.h>
#include <stdlib.h>
#include <stdio.h>
```

```
//=====
//  Assembler Types Define
//=====
typedef unsigned char      BYTE;
typedef unsigned short int WORD;
typedef unsigned long int  DWORD;
```

```
//=====
//  Extern Function
//=====
```

```
//=====
//  Normal procedure
//=====

void Show_Title()
{
    clrscr();
    printf("WatchDog Test for W83627HG\n");
    printf("1. WDT.EXE 10 s ==--> 10 seconds to reset.\n");
    printf("2. WDT.EXE 20 m ==--> 20 minutes to reset.\n");
}

//=====
//  Main procedure
//=====

int main(int argc, char *argv[])
{
    char Time_Format;
    BYTE IO_Port_Address=0x2E;
    BYTE Time=10; // Default is 10
    BYTE Format=0x00; // Default is 0x00 = Seconds

    if ( argc != 3 )
        { Show_Title(); return 1; }

    clrscr();

    textcolor(YELLOW+BLINK);

    Time=atoi(argv[1]);

    Time_Format=argv[2][0];
    if(Time_Format=='m' || Time_Format=='M')
        Format=0x08; // Minutes
    if(Time_Format=='s' || Time_Format=='S')
        Format=0x00; // Seconds

    // Set Watchdog
```

```
outportb(IO_Port_Address,0x87); // (EFER) Extended Functions Enable Register
outportb(IO_Port_Address,0x87);

outportb(IO_Port_Address,0x2D); // Point to Global Reg.
    // Select Multi-Function pin, (Bit0=0 Watchdog Function)
outportb(IO_Port_Address+1,(inportb(IO_Port_Address+1)&0xFE));

outportb(IO_Port_Address,0x07); // Point to Logical Device Number Reg.
outportb(IO_Port_Address+1,0x08);    // Select logical device 8, (Watchdog Function)

outportb(IO_Port_Address,0x30); // Device Active register
outportb(IO_Port_Address+1,0x01);

outportb(IO_Port_Address,0xF5); // Select Watchdog count mode seconds or minutes
outportb(IO_Port_Address+1,Format); // Default is second

outportb(IO_Port_Address,0xF6); // Set Watchdog Timer Value
outportb(IO_Port_Address+1,Time);    // 0x00 to disable, max 0xFF

while(1)
{
    outportb(IO_Port_Address,0xF6);    // Read Watchdog Timer Value
    Time=inportb(IO_Port_Address+1);


    gotoxy(20,10);
    if(Time_Format=='m' || Time_Format=='M')
        printf(">>> After %d Minutes will reset the system. <<<",Time);
    if(Time_Format=='s' || Time_Format=='S')
        printf(">>> After %d Second will reset the system. <<<",Time);
}

return 0;
}
```

## 4.2 GPIO Programming

This section describes the usage of GPIOs.

The electrical characteristics of GPIOs as following table:

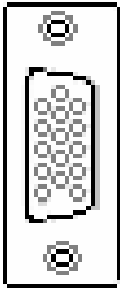

PIN	DEFINE	PIN	DEFINE
1	GPO0	2	GPO1
3	GPO2	4	GPO3
5	GND	6	GND
7	GND	8	GND
9	GND	10	GND
11	GPI4	12	GPI5
13	GPI6	14	GPI7
15	N.C		

To quickly understand the GPIO programming under Linux, we also provide a sample application source code in product CD, naming gpio.c. It can be used to control GPIO pin described above and also LED.

```
//=====
// Rev    Date    Name    Description
//=====
// 1.1 06/30/10  Willy GPIO Test utility for W83627DHG.
//=====

//=====
// Turbo C++ Version 3.0 Copyright(c) 1990, 1992 by Borland International, Inc.
//=====

//=====
//  Language include files
//=====
#include <conio.h>
#include <stdio.h>
```

```
#include <dos.h>

//=====
// Normal procedure
//=====

void Show_Help();
void Show_Fail();
void Show_Pass();

//=====
// Main procedure
//=====

int main(int argc)
{
    char *Model_Name="AR-B6002";
    char *Version="v1.0";
    unsigned char    IO_PORT_BASE=0x2E; // DATA_PORT = IO_PORT_BASE + 1;
    unsigned char data;
    int result=0;

    if ( argc > 1 )
        { Show_Help(); return 1; }

    clrscr();
    textcolor(WHITE);
    gotoxy(1, 1);
    cprintf("<>=====<>");
    gotoxy(1, 2); cprintf("|| W83627HF GPIO Test Utility %s Acrosser Technology Co., Ltd. ||",Version);
    gotoxy(1, 3);
    cprintf("<>=====<>");
    gotoxy(1, 4);
    cprintf("<>=====<>");
    gotoxy(1, 5); cprintf("|| Model Name : ||");
    gotoxy(1, 6); cprintf("|| SIO IO Base : ||");
    gotoxy(1, 7);
    cprintf("<>=====<>");

    // Show Got Parameter Informat
```

```
textcolor(LIGHTGRAY);
gotoxy(18,5);  cprintf("%s",Model_Name);
gotoxy(18,6);  cprintf("%X",IO_PORT_BASE);

// Enter W83627HF Config
outportb(IO_PORT_BASE,0x87);
outportb(IO_PORT_BASE,0x87);

// Set Multi-function Pins to GPIO
outportb(IO_PORT_BASE,0x2C);
outportb(IO_PORT_BASE+1,(inportb(IO_PORT_BASE+1) & 0x1F));

// Select GPIO Port device
outportb(IO_PORT_BASE,0x07);
outportb(IO_PORT_BASE+1,0x09);

// Set GPIO Port Active GPIO3
outportb(IO_PORT_BASE,0x30);
outportb(IO_PORT_BASE+1,0x02);

// Set W83627HF GPIO30~33 to Output, GPIO34~GPIO37 to Input
outportb(IO_PORT_BASE,0xF0);
outportb(IO_PORT_BASE+1,0xF0);

// inversion data to correct, because the protect circuit
outportb(IO_PORT_BASE,0xF2);
outportb(IO_PORT_BASE+1,0xF0);

// Set W83627HF GPIO30~33 to 0x05
outportb(IO_PORT_BASE,0xF1);
outportb(IO_PORT_BASE+1,0x05);
// Read W83627HF GPIO34~37 Status, if not 0x50 error.
    delay(100);
data=inportb(IO_PORT_BASE+1)&0xF0;
if(data!=0x50)
    result=1;

// Set W83627HF GPIO30~33 to 0x0A
```

```
outportb(IO_PORT_BASE,0xF1);
outportb(IO_PORT_BASE+1,0x0A);
// Read W83627HF GPIO34~37 Status, if not 0xA0 error.
    delay(100);
data=inportb(IO_PORT_BASE+1)&0xF0;
if(data!=0xA0)
    result=1;

// Exit W83627HF Config
outportb(IO_PORT_BASE,0xAA);

if(result)
    Show_Fail();
else
    Show_Pass();

return result;
}

//=====
// Function: Show_Help()
// Input    : -
// Change   : -
// Return   : -
// Description : Show Title string.
//=====
void Show_Help()
{
    clrscr();
    printf("GPIO Test utility for W83627HF\n\n");
    printf("GPIO0 ✎  笔      头✎ GPIO1\n");
    printf("GPIO2 ✎  笔  头✎ GPIO3\n");
    printf("GPIO4 ✎  笔 ??  头✎ GPIO5\n");
    printf("GPIO6 ✎  笔  头✎ GPIO7\n");
    printf("GND   ✎          ✎ VCC\n");
}

//=====
```

```
// Function : Show_Fail()
// Input    : -
// Change   : -
// Return   : -
// Description : Show Fail Message.
//=====

void Show_Fail()
{
    textcolor(LIGHTRED);
    gotoxy(20,10);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,11);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,12);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,13);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,14);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 ");
}

//=====

// Function : Show_Pass()
// Input    : -
// Change   : -
// Return   : -
// Description : Show Pass Message.
//=====

void Show_Pass()
{
    textcolor(LIGHTGREEN);
    gotoxy(20,10);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,11);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,12);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,13);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 請輸入密碼 ");
    gotoxy(20,14);  cprintf("  請輸入密碼 請輸入密碼 請輸入密碼 請輸入密碼 ");
}
```

# 5

## SOFTWARE INSTALLATION AND PROGRAMMING GUIDE

### 5.1 Introduction

#### 5.1.1 CAN bus

##### Overview

The CAN bus APIs provide interfaces to CAN bus subsystem. By invoking these APIs, programmers can implement applications which have the functions listed below:

1. Set the BAUD rate.
2. Send the CAN packages over the CAN bus.
3. Receive the CAN packages via the CAN bus hardware interface.

In this CAN bus API package, we provides:

1. On Linux platform:  
Linux driver module of CAN bus subsystem and the driver load / unload scripts.  
On Windows platform:  
Device driver and install program of CAN bus subsystem.
2. API header file.  
API libraries in static library format and shared library format.
3. CAN bus test utility and its source code.

#### Installation Procedure of CAN Bus Driver

On Linux platform:

1. Change to the 'root' user account.
2. In the 'driver' directory, execute the script 'modld'.
3. Execute 'lsmod'.
4. Make sure 'arb104d' is in the module list.
5. If the driver is no longer needed, execute the script 'modul' to unload the driver.

On Windows platform:

1. In the driver directory, execute the 'setup.exe' program.

## The CAN bus APIs

Before executing the applications which invoke the CAN bus APIs, users should make sure that the Linux device driver or the Windows device driver of CAN bus has been installed.

On Linux platform, after successfully installing the device driver, a character device node named "/dev/can0" will be created automatically. The APIs open the device node "/dev/can0" implicitly so acquiring a file descriptor of "/dev/can0" by users is not necessary. In order not to degrade the performance of the CAN bus subsystem, the device node "/dev/can0" is limited to be opened at most once at any moment, i.e., if application A accesses CAN bus via the APIs, the application B which either tries to open '/dev/can0' or uses CAN bus API will result in failure.

On Windows platform, after successfully installing the device driver, there is a device which shows 'Device Driver for the AR-B6002 card' in the 'Device Manager'. The APIs on Windows platform open this device implicitly. User can call the APIs directly without opening the CAN Bus subsystem device.

## CAN Message Format

```
// TPE DEFINE
```

```
typedef char          i8;
typedef unsigned char u8;
typedef short         i16;
typedef unsigned short u16;
typedef unsigned long  u32;
typedef int           i32;
```

```
typedef struct timeval {
    long tv_sec;
    long tv_usec;
} timeval;
```

```
typedef struct {
    i32      flags;
    i32      cob;
    u32      id;
    struct timeval timestamp;
```

```
        i16          length;  
        u8          data[8];  
    } canmsg_t;
```

To transmit a CAN package, the programmer has to fill in the fields in the variable of type `canmsg_t` and pass this `canmsg_t` variable as an argument to invoke the APIs. The fields in CAN message are described below:

**flags:**

This field holds the information of message type. Programmers can set the message type as:

1. Standard Data Frame:

```
canmsg_t msg; // Declare a variable 'msg' of type 'canmsg_t'  
msg.flags = 0; // Setting the flags field to 0 defines the 'msg' as an  
              // ordinary standard data frame.
```

2. Remote Transmission Request in Standard Data Frame format

```
canmsg_t msg;  
msg.flags = 0; // Setting the flags field to 0 defines the 'msg' as an  
              // ordinary standard data frame.  
msg.flags = msg.flags | MSG_RTR; // Enable the RTR flag.
```

3. Extended Data Frame:

```
canmsg_t msg;  
msg.flags = 0 | MSG_EXT; // Setting the EXT flag in the 'flags' field  
                        // defines the 'msg' as an extended data frame.
```

4. Remote Transmission Request in Extended Data Frame format

```
canmsg_t msg;  
msg.flags = 0 | MSG_EXT | MSG_RTR; // Enable the RTR flag.
```

**cob:**

This field is reserved for holding a message communication object number.

**id:**

CAN message ID.

**timestamp:**

When a CAN package is received, the CAN device driver will annotate a timestamp to the timestamp field in the `canmsg_t` variable and return this `canmsg_t` variable to the caller.

**length:**

The number of the data bytes which are sent or received in the 'data' field of CAN message. This field is necessary while transmitting a Standard or Extended Data Frame. Programmers have to explicitly set up this field. The length of data is 0~8.

For example:

```
canmsg_t msg;  
  
msg.data[0] = 0xa1;  
msg.data[1] = 0xb2;  
msg.data[2] = 0xc3;  
msg.length = 3;
```

**data:**

The byte array which holds the message data.

## 5.1.2 GPIO and Watchdog

### Overview

AR-B6002 provides both a GPIO interface and a Watchdog timer. Users can use the GPIO and Watchdog APIs to configure and to access the GPIO interface and the Watchdog timer. The GPIO has four input pins and four output pins. The Watchdog timer can be set to 1~255 seconds. Setting the timer to zero disables the timer. The remaining seconds of the timer to reboot can be read from the timer.

In this GPIO and Watchdog package, on Linux and Windows platform, we provide:

1. API source code.
2. GPIO and Watchdog test utility and the utility source code.

## 5.1.3 Power Subsystem

### Overview

When the AR-B6002 is at Power Mode 15, the Power Subsystem APIs can be used to get and set the configuration of power subsystem. By invoking the Power Subsystem APIs, the users can:

1. Get the current status of ignition (ON or OFF).
2. Set the Power-On mode. This setting will be kept in the power subsystem and will take effect at next system boot.
3. From the power subsystem, get the stored setting of Power-On mode.
4. Get or set the time of Hard Off delay in seconds or in minutes.
5. Get or set the time of Soft Off delay in seconds or in minutes
6. Get the battery voltage.
7. Get the version number of the firmware of the Power Subsystem.
8. Set the Hard Off delay and Soft Off delay to the default value.

The power subsystem connects to the main system via the COM6. The Linux's default supported COM interfaces are COM1~COM4. The Power Subsystem APIs implicitly communicate with power subsystem through COM6. Users must take extra steps to configure Linux kernel in order to support COM6. Please refer to Appendix A for more information. Users don't need extraordinary setup on Windows platform to support COM6.

In this Power Subsystem package, we provide:

1. The APIs to access power subsystem and the source code of the APIs.
2. The utility and source code to monitor and set up power modes, ignition status, and power-off time.
3. On Linux platform, the Makefile to create API libraries and utility.

## 5.2 File Descriptions

### 5.2.1 CAN Bus

On Linux platform:

1. AGC\_LIB.h  
The header file of the API and macro definitions.
2. errcode.h  
The macro definitions of returned error code.
3. libAGC\_LIB.a  
The API library in static library format.
4. libAGC\_LIB.so  
The API library in shared library format.
5. main.c  
The source code of the utility.
6. Makefile

On Windows platform:

1. AR-B6002.h  
The header file of the APIs and macro definition. This header file is an aggregate header which includes APIs declarations and macros for CAN Bus, GPIO, Watchdog, and Power Subsystem.
2. AR-B6002.lib  
The API library in static library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
3. AR-B6002.dll  
The API library in dynamically linked library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
4. CAN\_DEV\_FUNC.h  
The header file for the CAN bus test utility.
5. errcode.h  
The macro definitions of returned error code.
6. CAN\_DEV.cpp  
The source code of the CAN bus test utility.

## 5.2.2 GPIO and Watchdog

On Linux platform:

1. `sio_acce.c`  
The source code of the Watchdog and GPIO APIs for accessing the SuperIO.
2. `sio_acce.h`  
This file includes the declarations of the APIs and macro definitions.
3. `main.c`  
The source code of the utility.
4. `Makefile`

On Windows platform:

1. `AR-B6002.h`  
The header file of the APIs and macro definition. This header file is an aggregate header which includes APIs declarations and macros for CAN Bus, GPIO, Watchdog, and Power Subsystem.
2. `AR-B6002.lib`  
The API library in static library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
3. `AR-B6002.dll`  
The API library in dynamically linked library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
4. `errno.h`  
The macro definitions of returned error code.
5. `GPIO_Watchdog.cpp`  
The source code of the utility.

## 5.2.3 Power Subsystem

On Linux platform:

1. `pwr_acce.c`  
The source code of the APIs for accessing the power subsystem.
2. `pwr_acce.h`  
This file includes the declarations of the APIs and macro definitions.
3. `main.c`  
The source code of the utility.
4. `Makefile`

On Windows platform:

1. `AR-B6002.h`  
The header file of the APIs and macro definition. This header file is an aggregate header which includes APIs declarations and macros for CAN Bus, GPIO, Watchdog, and Power Subsystem.
2. `AR-B6002.lib`  
The API library in static library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
3. `AR-B6002.dll`  
The API library in dynamically linked library format. This library is an aggregate library. It includes APIs for CAN Bus, GPIO, Watchdog, and Power Subsystem.
4. `PWRPIC.h`  
The main header file for the GUI.
5. `PWRPIC.cpp`  
The definitions of the class declared in 'PWRPIC.h'.
6. `PWRPICDlg.h`  
The main header file for the class of performing the Power Subsystem access.
7. `PWRPICDlg.cpp`  
The definitions of the classes declared in 'PWRPICDlg.h'.
8. `SerialPort.h`  
The header file for functions which access the COM port.
9. `SerialPort.cpp`  
The definitions of the functions declared in 'SerialPort.h'.

## 5.3 API List and Descriptions

### 5.3.1 CAN Bus

#### 1. Syntax:

```
unsigned int sendCanMessages( canmsg_t *buffer, u8 count )
```

**Description:** This function sends out CAN packages over the CAN bus.

**Parameters:** If there is more than one CAN package to send, these CAN packages are stored in a 'canmsg\_t' array. This function sends out packages in a sequential fashion. The memory address of the first CAN package to send is pointed at by the parameter 'buffer'. The number of CAN packages to send is indicated by the parameter 'count'. If the resource of sending out the CAN packages is temporarily unavailable, the process which invokes this function will be blocked ( Block I/O) until the resource is available again.

**Return Value:** If this function sends out the packages successfully, it returns ERROR\_API\_SUCC. If this function fails to open the CAN device node, it returns ERROR\_API\_CAN\_OPEN\_FAIL. If this function has any problem with sending out the CAN packages, it returns ERROR\_API\_CANSENDMESSAGES.

Here is an example:

If the CAN packages in the array 'canAry[]' have been initialized. The code listed below will send out the CAN packages in the 'canAry[]' over the CAN bus.

```
unsigned int result = 0;
canmsg_t canAry[30];
/* ...
  Initialize the CAN packages in the canAry[30]
*/
result = sendCanMessages( canAry, 30 );
if( result == ERROR_API_CANSENDMESSAGES ||
    result == ERROR_API_CAN_OPEN_FAIL )
    fprintf( stderr, "Send CAN package error!\n");
```

## 2. Syntax:

```
unsigned int getCanMessages( canmsg_t *buffer, u8 count )
```

**Description:** This function receives CAN packages from the CAN bus subsystem.

**Parameters:** This function stores received CAN packages sequentially at an array of type 'canmsg\_t'. The number of packages to receive is indicated by the parameter 'count'. Before finishing receiving 'count' packages, the process which invokes this function will be temporarily blocked (Block I/O) if there is no incoming CAN package.

**Return Value:** If this function receives the packages successfully, it returns ERROR\_API\_SUCC. If this function fails to open the CAN device node, it returns ERROR\_API\_CAN\_OPEN\_FAIL. If this function has any problem with receiving the CAN packages, it returns ERROR\_API\_CANGETMESSAGES.

Here is an example:

If the array 'canAry[]' of type 'canmsg\_t' has been declared and allocated. The code listed below will receive 30 CAN packages from the CAN bus subsystem and stores the packages in the 'canAry[]'.

```
unsigned int result = 0;
canmsg_t canAry[30];

result = getCanMessages( canAry, 30 );
if( result == ERROR_API_CANGETMESSAGES ||
    result == ERROR_API_CAN_OPEN_FAIL )
    fprintf( stderr, "Send CAN package error!\n");
```

## 3. Syntax:

```
unsigned int configCan( i32 baud )
```

**Description:** This function sets up the speed ( Baud rate ) of sending and receiving CAN packages.

**Parameters:** The parameter 'baud' could be: ( the unit is Kbps )  
10 , 20 , 50 , 100 , 125 , 250 , 500 , 800 , 1000

The default speed is 125 Kbps.

**Return Value:** This function returns `ERROR_API_SUCC` if it set the Baud rate successfully. If this function fails to open the CAN device node, it returns `ERROR_API_CAN_OPEN_FAIL`. If the inputted Baud rate is not any one of the Baud rate listed above, it will return `ERRMSG( ERROR_API_CANCONFIG, ERROR_GEN_INPUT_DATA )`. If it has any other problem with setting the Baud rate, it returns `ERROR_GEN_DEVICE_FAIL`.

## 5.3.2 GPIO and Watchdog

### GPIO

#### 1. Syntax:

```
i32 getInChLevel( i32 channel, u8 *val )
```

**Description:** Get the value of GPIO Input and put the value at \*val.

**Parameters:**

- I. The parameter 'channel' indicates the GPIO Input pins to show. Users can use the macros GPIO0, GPI1, GPI2, GPI3 to indicate the GPIO Input channel. For example:  

```
getInChLevel( GPI2, &val); // Indicate the GPIO Input channel 2  
getInChLevel( GPIO | GPI3, &val); // Indicate the GPIO Input  
// channel 0 and channel 3
```
- II. The parameter 'val' is an unsigned character pointer. The function puts the values of the indicated GPIO channels at the memory pointed by 'val'. The bit 0 of \*val shows the value of GPIO Input channel 0. The bit 1 of \*val shows the value of GPIO Input channel 1. Other bits show the corresponding GPIO Input channels. Because there are only four channels, bit 4 ~ bit 7 of \*val are always zero.

Here is an example:

If GPIO Input channel 1 and channel 3 are both 1.

```
unsigned char ch;  
getInChLevel( GPI1|GPI3, &ch );
```

The returned value of variable 'ch' is 0xa.

**Return Value:** If the function gets the values successfully, it returns 0. If any error, it returns -1.

## 2. Syntax:

i32 setOutChLevel( i32 channel, u8 val )

**Description:** Set the value of GPIO Output according to the variable 'val'.

**Parameters:**

- I. The parameter 'channel' indicates the GPIO Output pins to set. Users can use the macros GPO0, GPO1, GPO2, GPO3 to indicate the GPIO Output channels.
- II. The parameter 'val' indicate the value to be set to GPIO Output channel. The acceptable values is limited to 0 and 1.

For example:

```
/* Setting the GPIO Output channel 2 to 1 */  
setOutChLevel( GPO2, 1 );
```

```
/* Setting the GPIO Output channel 0 and channel 3 to 0 */  
getInChLevel( GPO0 | GPO3, 0 );
```

**Return Value:** If the function sets the values successfully, it returns 0. If any error, it returns -1.

## 3. Syntax:

i32 getOutchLevel( i32 channel, u8 \*val )

**Description:** Get the value of GPIO Output and put the value at \*val.

**Parameters:**

- I. The parameter 'channel' indicates the GPIO Output pins to show. Users can use the macros GPO0, GPO1, GPO2, GPO3 to indicate the GPIO Output channel. For example:  
getOutChLevel( GPO2, &val); // Indicate the GPIO Output channel 2  
  
/\* Indicate the GPIO Output channel 0 and channel 3. \*/  
getOutChLevel( GPO0 | GPO3, &val);
- II. The parameter 'val' is an unsigned character pointer. The function puts the values of the indicated GPIO channels at the memory pointed by 'val'. The bit 0 of \*val shows the value of GPIO Output channel 0. The bit 1 of \*val shows the value of GPIO Output channel 1. Other bits show the corresponding GPIO Output channels. Because there are only four channels, bit 4 ~ bit 7 of \*val are always zero.

Here is an example:

If GPIO Output channel 0 and channel 2 are both 1.

```
unsigned char ch;  
getOutChLevel( GPO0|GPO2, &ch );
```

The returned value of variable 'ch' is 0x5.

**Return Value:** If the function gets the values successfully, it returns 0. If any error, it returns -1.

## Watchdog

### 1. Syntax:

```
u8 getWtdTimer(void)
```

**Description:** This function read the value of the watchdog time counter and return it to the caller.

**Parameters:** None.

**Return Value:** This function return the value of the time counter and return it to the caller as an unsigned integer.

### 2. Syntax:

```
void setWtdTimer( u8 val )
```

**Description:** This function sets the watchdog timer register to the value 'val' and starts to count down. The value could be 0 ~ 255. The unit is second. Setting the timer register to 0 disables the watchdog function and stops the countdown.

**Parameters:** The parameter 'val' is the value to set to watchdog timer register. The range is 0 ~ 255.

**Return Value:** None.

### 5.3.3 Power Subsystem

#### 1. Syntax:

```
i32 getIgnStatus( u8 *ignStatus )
```

**Description:** Get the current ignition status. The ignition has two statuses: ON or OFF.

**Parameters:** This function puts the ignition status at the memory pointed by the unsigned character pointer 'ignStatus'. If the returned status is 0xa5, the ignition is ON. If the returned status is 0x5a, the ignition is OFF. There are macros of Ignition ON and Ignition OFF in pwr\_acce.h.

**Return Value:** If the function gets the ignition status and put it at the memory pointed by the argument successfully, this function will return 0. If any error, the function returns -1.

#### 2. Syntax:

```
i32 setSoftOffDelayS( u32 setTime )
```

**Description:** The Soft Off Delay is the interval between that the system receives a power off signal and that the system generates a power off signal. This function sets up the interval in seconds.

**Parameters:** The parameter is of the type of unsigned long. The value of the parameter ranges from 0~255. The unit of the value of the parameter is seconds.

**Return Value:** If the function sets the delay time successfully, it will return 0. If any error, the function returns -1.

#### 3. Syntax:

```
i32 setSoftOffDelayM( u32 setTime )
```

**Description:** The Soft Off Delay is the interval between that the system receives a power off signal and that the system generates a power off signal. This function sets up the interval in minutes.

**Parameters:** The parameter is of the type of unsigned long. The value of the parameter ranges from 0~255. The unit of the value of the parameter is minutes.

**Return Value:** If the function sets the delay time successfully, it will return 0. If any error, the function returns -1.

**4. Syntax:**

```
i32 setHardOffDelayS( u32 setTime )
```

**Description:** The Hard Off Delay is the interval between that the system is off and that the power 5VSB is off. This functions set up the interval in seconds.

**Parameters:** The parameter is of the type of unsigned long. The value of the parameter ranges from 0~255. The unit of the value of the parameter is seconds.

**Return Value:** If the function sets the delay time successfully, it will return 0. If any error, the function returns -1.

**5. Syntax:**

```
i32 setHardOffDelayM( u32 setTime )
```

**Description:** The Hard Off Delay is the interval between that the system is off and that the power 5VSB is off. This functions set up the interval in minutes.

**Parameters:** The parameter is of the type of unsigned long. The value of the parameter ranges from 0~255. The unit of the value of the parameter is minutes.

**Return Value:** If the function sets the delay time successfully, it will return 0. If any error, the function returns -1.

**6. Syntax:**

```
i32 setPowerOnMode( u8 powerOnMode )
```

**Description:** The function sets up the source of the boot-up signal of the system. There are two choices: boot from the Ignition or boot from the Remote Switch.

**Parameters:**

PowerOnMode = 0xa5, boot up by the Ignition.

PowerOnMode = 0x5a, boot up by the Remote Switch.

There are macros of Ignition mode and Remote Switch mode in pwr\_acce.h (Linux) and AR-B6002.h(Windows).

**Return Value:** If the function sets power-on mode successfully, it will return 0. If any error, the function returns -1.

**7. Syntax:**

```
i32 getSoftOffDelay( u32 *Time )
```

**Description:** The Soft Off Delay is the interval between that the system receives a power off signal and that the system generates a power off signal. This function gets the interval.

**Parameters:** The parameter is a pointer which points to an unsigned long variable. The returned value is stored at this variable. The unit of the returned value is in seconds.

**Return Value:** If the delay time is returned successfully, the function returns 0. If any error, it returns -1.

**8. Syntax:**

```
i32 getHardOffDelay( u32 *Time )
```

**Description:** The Hard Off Delay is the interval between that the system is off and that the power 5VSB is off. This function gets the interval.

**Parameters:** The parameter is a pointer which points to an unsigned long variable. The returned value is stored at this variable. The unit of the returned value is in seconds.

**Return Value:** If the delay time is returned successfully, the function returns 0. If any error, it returns -1.

**9. Syntax:**

```
i32 getPowerOnMode( u8 *powerOnMode )
```

**Description:** The function gets the setting of power-on mode. There are two modes: boot from the Ignition or boot from the Remote Switch.

**Parameters:** The parameter is a pointer which points to an unsigned character. The returned code is stored at this memory. There are two power-on modes:

PowerOnMode = 0xa5, boot up by the Ignition.

PowerOnMode = 0x5a, boot up by the Remote Switch.

**Return Value:** If the power-on mode is returned successfully, the function returns 0. If any error, it returns -1

**10. Syntax:**

```
i32 getBattVolt( float *volt )
```

**Description:** The function gets the voltage reading of the battery.

**Parameters:** The parameter 'volt' is a pointer which points to an variable of type 'float'. The unit of the returned value is voltage.

**Return Value:** If the reading of voltage is returned successfully, the function returns 0. If any error, it returns -1

## 11. Syntax:

```
i32 getPicFwVer( struct PicInfo *ver )
```

**Description:** The function gets version information of Power Subsystem firmware.

**Parameters:** The parameter is a pointer which points to a 'PicInfo' structure, which consists of 9 unsigned characters. Here is the definition of structure 'PicInfo':

```
type struct {  
    u8 type[3];    // The type of the power subsystem  
    u8 mode[4];    // The mode at which the power subsystem is  
                  operating.  
    u8 majorVersion; // Major version number of the firmware  
    u8 minorVersion; // Minor version number of the firmware  
} PicInfo;  
  
PicInfo picInfo;  
  
getPicFwVer( &picInfo );  
printf("%c.%c\n", picInfo.majorVersion, picInfo.minorVersion );
```

**Return Value:** If the version information is returned successfully, the function returns 0. If any error, it returns -1.

## 12. Syntax:

```
i32 getPicMode( u8 *mode )
```

**Description:** The function gets the mode number at which the Power Subsystem is operating..

**Parameters:** The parameter is a pointer which points to a variable of type 'unsigned char'. The returned mode number is put at the memory which is pointed by parameter 'mode'.

**Return Value:** If the mode information is returned successfully, the function returns 0. If any error, it returns -1

### 13. Syntax:

```
i32 setPicDefault( void )
```

**Description:** The function restores the SoftOffDelay and HardOffDelay to the default value.

**Parameters:** None.

**Return Value:** If this function works successfully, the function will return 0. If any error, it will return -1.

## 5.4 Appendix

Users have to modify the boot loader configuration to support COM6. Take the grub configuration file as an example. Add '8250.nr\_uarte=XX noirqdebug' at the setting of kernel. Here, XX represents the number of COM ports the system will support. Because the power subsystem connects to main system via COM6, the XX must be greater or equal to 6.

### 1. Modify the grub.conf.

```
[root@linux ~]# vi /boot/grub/grub.conf
default=0
timeout=5
splashimage=(hd0,0)/grub/splash.xpm.gz
hiddenmenu
title Fedora Core (2.6.27.5.117.FC10)
root (hd0,0)
kernel /vmlinuz-2.6.27.5.117.FC10 ro root=/dev/hda2 rhgb quiet
8250.nr_uarte=6 noirqdebug
initrd /initrd-2.6.27.5.117.FC10.img
```

### 2. List the status of the COM ports in the system.

```
# setserial -g /dev/ttyS*
/dev/ttyS0, UART: 16550A, Port: 0x03f8, IRQ: 4
/dev/ttyS1, UART: 16550A, Port: 0x02f8, IRQ: 3
/dev/ttyS2, UART: 16550A, Port: 0x03e8, IRQ: 11
/dev/ttyS3, UART: 16550A, Port: 0x02e8, IRQ: 10
/dev/ttyS4, UART: 16550A, Port: 0x04f8, IRQ: 11
/dev/ttyS5, UART: 16550A, Port: 0x04e8, IRQ: 10
```

The node '/dev/ttyS5' corresponds to COM6. The IO port is 0x4e8, IRQ 10.