

CELSIUS M720 CELSIUS M730



Thank you for buying an innovative product from Fujitsu.

Latest information about our products, useful tips, updates etc. is available on our website: ["http://www.fujitsu.com/fts/"](http://www.fujitsu.com/fts/)

You can find driver updates at: ["http://support.ts.fujitsu.com/download"](http://support.ts.fujitsu.com/download)

Should you have any technical questions, please contact:

- our Hotline/Service Desk (see Service Desk list or from the Internet at: ["http://support.ts.fujitsu.com/contact/servicedesk"](http://support.ts.fujitsu.com/contact/servicedesk))
- Your sales partner
- Your sales office

We hope you enjoy using your new Fujitsu system!



Published by / Contact address in the EU

Fujitsu Technology Solutions GmbH

Mies-van-der-Rohe-Straße 8

80807 Munich, Germany

["http://www.fujitsu.com/fts/"](http://www.fujitsu.com/fts/)

Copyright

© Fujitsu Technology Solutions GmbH 2013. All rights reserved.

Publication Date

07/2013

Order No.: A26361-K1399-Z320-1-7619, edition 3

CELSIUS M720

CELSIUS M730

Operating Manual

Your CELSIUS...	5
Ports and operating elements	7
Important notes	10
Getting started	14
Operation	22
Troubleshooting and tips	30
System expansions	34
Technical data	71
Index	72

Remarks

Information on the product description meets the design specifications of Fujitsu and is provided for comparison purposes. Several factors may cause the actual results to differ. Technical data is subject to change without prior notification. Fujitsu rejects any responsibility with regard to technical or editorial mistakes or omissions.

Trademarks

Fujitsu, the Fujitsu logo and CELSIUS are registered trademarks of Fujitsu Limited or its subsidiaries in the United States of America and other countries.

PS/2 is a registered trademark of International Business Machines, Inc.

Pentium is a registered trademark of Intel Corporation, USA.

Kensington and MicroSaver are registered trademarks of ACCO Brands.

Microsoft and Windows are trademarks or registered trademarks of the Microsoft Corporation in the United States and/or other countries.

All other trademarks specified here are the property of their respective owners.

Copyright

No part of this publication may be copied, reproduced or translated without the prior written consent of Fujitsu.

No part of this publication may be saved or transferred by any electronic means without the written approval of Fujitsu.

Contents

Your CELSIUS...	5
Validity of the Reference Manual	5
Notational conventions	6
Ports and operating elements	7
CELSIUS M720	7
Front	7
Rear	8
CELSIUS M730	8
Front	8
Rear	9
Important notes	10
Safety information	10
Transporting the device	10
Cleaning the device	11
Energy saving, disposal and recycling	11
CE marking	12
FCC Compliance Statement	12
FCC Class B Compliance Statement	13
FCC Radiation Exposure Statement	13
Getting started	14
Unpacking and checking the delivery	14
Steps for initial setup	14
Setting up the device	15
Connecting the machine to the mains	15
Connecting external devices	16
Cable connecting	16
Disconnecting cables	16
Ports on the device	17
Connecting a monitor	18
Connecting the mouse	19
Connecting the keyboard	19
Connecting external devices to the USB ports	20
Switching on for the first time: installing the software	20
Switching on monitor and device	21
Installing the software	21
Operation	22
Switch the device on	22
Switching off the device	22
Indicators on the device	23
Keyboard	25
Important keys and keyboard shortcuts	25
Settings in BIOS Setup	26
Property and data protection	27
Anti-theft protection and lead-sealing	27
Mechanical casing lock (optional)	28
BIOS setup security functions	28
Access authorisation via SmartCard	29
Operating the SmartCard reader (optional)	29

Troubleshooting and tips	30
Help if problems occur	30
Troubleshooting	30
Power indicator remains off after you have switched on your device	30
The device cannot be switched off with the ON/OFF switch.	31
Monitor remains blank	31
No mouse pointer displayed on the screen	32
Time and/or date is not correct	32
Error messages on the screen	32
Installing new software	32
Restoring the hard disk contents	33
Tips	33
System expansions	34
Information about boards	35
Opening the casing	36
Closing the casing	37
Overview of drive bays and drives in your device	37
Installing and removing the accessible 5 1/4 inch drive	38
Fitting the drive cover for the 5 1/4 inch drive	38
Installing an accessible drive	39
Removing an accessible drive	40
Installing/removing a 3 1/2" reader in a 3 1/2" bay (optional, SmartCard or MultiCard)	41
Removing the module holder	42
Screwing the reader onto the module holder	42
Installing a module holder with reader	43
Removing a module holder with reader	44
Removing the reader from the module holder	44
Installing and removing a WLAN module (optional)	45
Removing the front panel	45
Removing the front fan	45
Installing the WLAN module	47
Removing the WLAN module	49
Installing the front fan	50
Securing the front panel	52
Installing the hard disk drive	53
Replacing the installation kit	54
Installing hard disks	55
Removing a hard disk	58
Installing and removing a board	61
Installing a board	61
Removing a board	63
Upgrading main memory	64
Replacing the processor	65
Installing and removing heat sinks	65
Removing and installing the rear fan	66
Removing and installing the hard disk fan	67
Installing a 4 port SAS upgrade ROM	69
Replacing the lithium battery	70
Technical data	71
Index	72

Your CELSIUS...

... is available with various configuration levels which differ in terms of hardware and software equipment. You can install accessible drives (e.g. DVD drives) and other modules.

This manual tells you how to start using your device and how to operate it in daily use. This manual applies for all configuration levels. Depending on the chosen configuration level, some of the hardware components described may not be available on your PC. Please also read the notes about your operating system.

Depending on the configuration selected, the operating system is preinstalled on your hard disk (e.g. Windows 7).

Further information on this device is also provided:

- in the "Quick Start Guide" poster
- in the "Safety/regulations" manual
- in the "Warranty" manual
- in the operating manual for the monitor
- in the manual for the mainboard
- in the documentation for your operating system
- in the information files (e.g. *.PDF, *.HTML, *.DOC, *.CHM, *.TXT, *.HLP)



Some of the manuals listed can be found in electronic form on the "Drivers & Utilities" DVD.







You can access and view the required information using the *Acrobat Reader* program, which is also included on the DVD. If necessary, you can also print out the manuals.

Validity of the Reference Manual

This Reference Manual is valid for the following systems:

- CELSIUS M720
- CELSIUS M730

Notational conventions

	Pay particular attention to text marked with this symbol. Failure to observe these warnings could pose a risk to health, damage the device or lead to loss of data. The warranty will be invalidated if the device becomes defective through failure to observe these warnings.
	Indicates important information for the proper use of the device.
	Indicates an activity that must be performed
	Indicates a result
This font	indicates data entered using the keyboard in a program dialogue or at the command line, e.g. your password (Name123) or a command used to start a program (start.exe)
This font	indicates information that is displayed on the screen by a program, e.g.: Installation is complete.
<i>This font</i>	indicates <ul style="list-style-type: none"> terms and texts used in a software interface, e.g.: Click on <i>Save</i> names of programs or files, e.g. <i>Windows</i> or <i>setup.exe</i>.
"This font"	indicates <ul style="list-style-type: none"> cross-references to another section, e.g. "Safety information" cross-references to an external source, e.g. a web address: For more information, go to "http://www.fujitsu.com/fts" Names of CDs, DVDs and titles or designations for other materials, e.g.: "CD/DVD Drivers & Utilities" or "Safety/Regulations" manual
	indicates a key on the keyboard, e.g. 
This font	indicates terms and texts that are emphasised or highlighted, e.g.: Do not switch off the device

Ports and operating elements


This chapter presents the individual hardware components of your device. This will provide you with an overview of the ports and operating elements on the device. Please familiarise yourself with these components before starting to work with your device.



After this section, only the CELSIUS M730 is illustrated, as the procedure for both models is identical with the exception of the removal of the hard disk front panel.

CELSIUS M720


Front

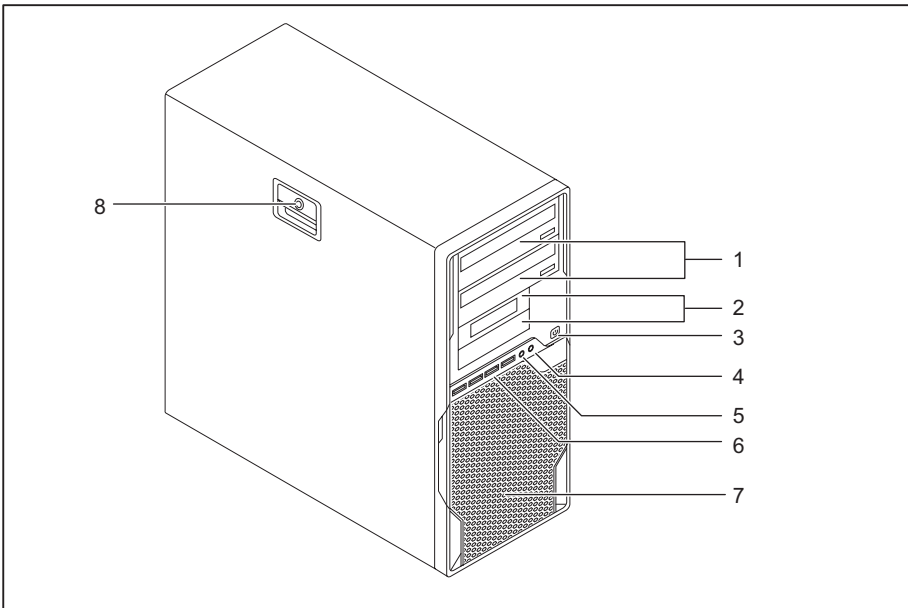

- 1 = Module bays for 5¹/₄" drives
- 2 = Module bays for 3¹/₂" drives
- 3 = ON/OFF switch
- 4 = Headphone port

- 5 = Microphone jack
- 6 = USB ports (2 x USB 3.0, 2 x USB 2.0)
- 7 = Hard disk front panel (removable)
- 8 = Casing lock (optional)


Rear

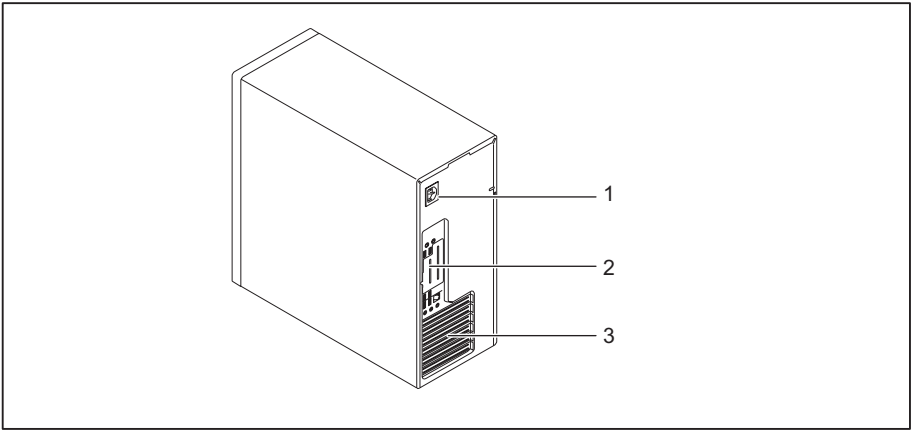

- 1 = Alternating voltage socket (AC IN)
- 2 = Ports for external devices
(device-dependent)
- 3 = Slot covers


CELSIUS M730

Front

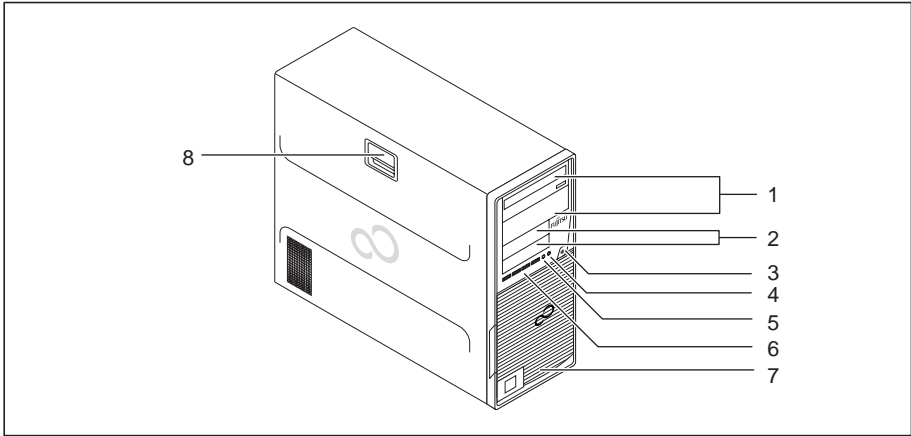

- 1 = Module bays for 5 1/4" drives
- 2 = Module bays for 3 1/2" drives
- 3 = ON/OFF switch
- 4 = Headphone port
- 5 = Microphone jack
- 6 = USB ports (2 x USB 3.0, 2 x USB 2.0)
- 7 = Hard disk front panel (removable)
- 8 = Casing lock (optional)

Rear

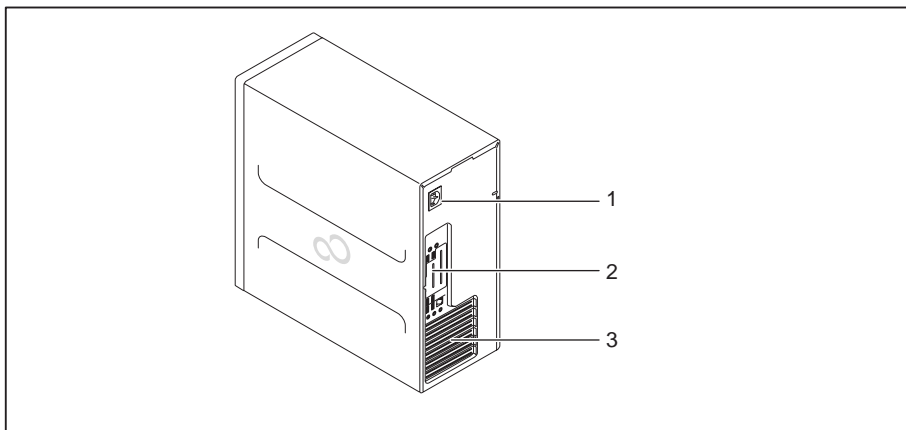

1 = Alternating voltage socket (AC IN)

3 = Slot covers

2 = Ports for external devices
(device-dependent)

Important notes

In this chapter you will find information regarding safety which it is essential to take note of when working with your device.

Safety information



Please note the information provided in the "Safety/regulations" manual and in the following safety notes.

When installing and operating the device, please observe the notes on environmental conditions in Chapter ["Technical data", Page 71](#) as well as the instructions in Chapter ["Getting started", Page 14](#).

When setting up the device, make sure there is clearance all around it so that the casing receives enough ventilation. In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.

You must only operate the device if the rated voltage used by the device is set to the local mains voltage.

You must remove the power plug from the power socket so that the mains voltage is completely disconnected.

Operate the device only with the casing closed.

Replace the lithium battery on the mainboard in accordance with the instructions in ["Replacing the lithium battery", Page 70](#).

Caution, components in the system can get very hot.

The activities described in these instructions must always be performed with the greatest care.

Repairs to the device must only be performed by qualified technicians. Incorrect repairs could put the user at great risk or cause serious damage to the equipment (electric shock, risk of fire).

Transporting the device



Transport all parts separately in their original packaging or in a packaging which protects them from knocks and jolts, to the new site.

Do not unpack them until all transportation manoeuvres are completed.

If the device is brought from a cold environment into the room where it will be used, condensation may occur. To avoid damaging the device, wait until it has reached room temperature and is absolutely dry before initial startup.

Cleaning the device



Turn off all power and equipment switches and disconnect the power plug from the mains outlet.

Do not clean any interior parts yourself, leave this job to a service technician.

Do not use any cleaning agents that contain abrasives or may corrode plastic (alcohol, thinner or acetone).

Never clean the device with water! Water entering into the device could present a serious risk to users (e.g. electric shock).

Ensure that no liquid enters the system.

The surface can be cleaned with a dry cloth. If particularly dirty, use a cloth that has been moistened in mild domestic detergent and then carefully wrung out.

Use disinfectant wipes to clean the keyboard and the mouse.

Energy saving, disposal and recycling

You can find information on these subjects on the "Drivers & Utilities" DVD or on our website (["http://www.fujitsu.com/fts/about/fts/environment-care/"](http://www.fujitsu.com/fts/about/fts/environment-care/)).

CE marking

The shipped version of this device complies with the requirements of European Union directives 2004/108/EC "Electromagnetic compatibility", 2006/95/EC "Low voltage directive" and 2009/125/EC "Ecodesign".

CE marking for devices with radio component

This equipment complies with the requirements of Directive 1999/5/EC of the European Parliament and Commission from 9 March, 1999 governing Radio and Telecommunications Equipment and mutual recognition of conformity.

The CE marking valid for your device can be found on the device label.

Explanation: CE nnnn (!) ; nnnn defines the type of CE marking and the exclamation mark indicates a device with radio components.

You can find more information and declarations of conformity on the Internet at:
["http://globalsp.ts.fujitsu.com/sites/certificates"](http://globalsp.ts.fujitsu.com/sites/certificates).

This equipment can be used in the following countries:

Belgium	Bulgaria	Denmark	Germany
Estonia	Finland	France	Greece
UK	Ireland	Iceland	Italy
Croatia	Latvia	Liechtenstein	Lithuania
Luxembourg	Malta	Netherlands	Norway
Austria	Poland	Portugal	Rumania
Sweden	Switzerland	Slovakia	Slovenia
Spain	Czech Republic	Hungary	Cyprus

Contact the corresponding government office in the respective country for current information on possible operating restrictions. If your country is not included in the list, then please contact the corresponding supervisory authority as to whether the use of this product is permitted in your country.

FCC Compliance Statement

If the device complies with the FCC regulations, the FCC sign can be found on the type rating plate.

FCC Class B Compliance Statement

DOC (INDUSTRY CANADA) NOTICES

Notice to Users of Radios and Television:

This class B digital apparatus complies with Canadian ICES-003.

The following statement applies to the products covered in this manual, unless otherwise specified herein. The statement for other products will appear in the accompanying documentation.

NOTE:

This equipment has been tested and found to comply with the limits for a "Class B" digital device, pursuant to Part 15 of the FCC rules and meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003 for digital apparatus. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in strict accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Fujitsu is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Fujitsu. The correction of interferences caused by such unauthorized modification, substitution or attachment will be the responsibility of the user.

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC and ICES rules.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The transmitters in this device must not be co-located or operated in conjunction with any other antenna or transmitter.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Users are not authorized to modify this product. Any modifications invalidate the warranty.

This equipment may not be modified, altered, or changed in any way without signed written permission from Fujitsu. Unauthorized modification will void the equipment authorization from the FCC and Industry Canada and the warranty.

Getting started



Please observe the safety information in the ["Important notes", Page 10](#) chapter.

Unpacking and checking the delivery

It is recommended not to throw away the original packaging material! It may be required for reshipment at some later date.

- ▶ Unpack all the individual parts.
- ▶ Check the contents of the package for any visible damage caused during transport.
- ▶ Check whether the delivery conforms to the details in the delivery note.
- ▶ Should you discover that the delivery does not correspond to the delivery note, notify your local sales outlet immediately.

Steps for initial setup

Only a few steps are necessary to put your new device into operation for the first time:

- Select a location for device and set up device
- Connect external devices such as mouse, keyboard and monitor
- Check the voltage at the mains outlet and connect the device to an electrical outlet
- Switch the device on

You will learn more about the individual steps in the following sections.

External devices



If you have received other external devices in addition to your own device (e.g. a printer), do not connect these until after the initial installation. The following sections describe how to connect these external devices.

Drives and boards



If you have received drives or boards with your device, please do not install them until after first-time setup. How to install drives and boards is described in the ["System expansions", Page 34](#) chapter.

Setting up the device



When installing your device, please read the recommendations and safety notes in the "Safety/regulations" manual.

We recommend that you place your device on a surface which is not slippery. In view of the many different finishes and varnishes used on furniture, it is possible that the rubber feet will mark the surface they stand on.

Depending on the location of your device, bothersome vibrations and noises may occur. To prevent this, a distance of at least 10 mm / 0.39" should be maintained from other devices on casing sides without ventilation surfaces.


In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.

A minimum distance of 200 mm / 7.87" from the device must be observed for ventilation areas.

Do not stack several devices on top of each other.

Do not expose the device to extreme ambient conditions (see ["Technical data", Page 71](#), section "Ambient conditions"). Protect the device against dust, humidity and heat.

Connecting the machine to the mains

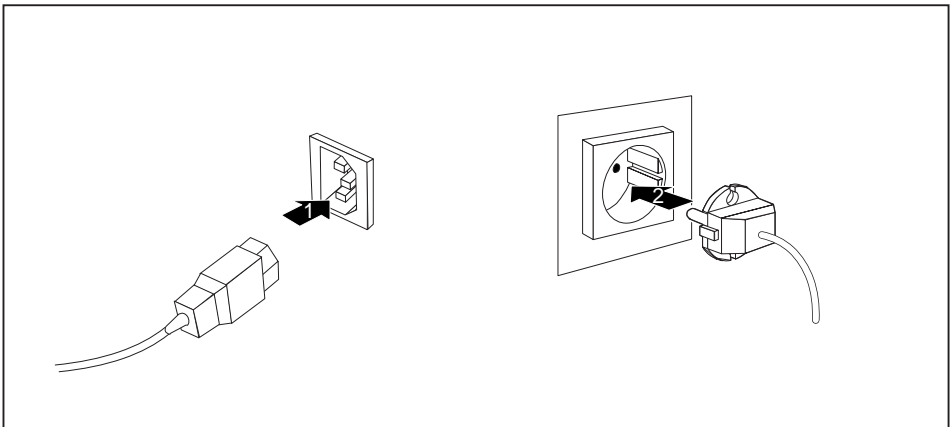

- ▶ Connect the mains cable to the machine (1).
- ▶ Plug the mains plug into a three-pin socket (2).



After the mains power cable has been attached, the device automatically switches itself on for a few seconds to run a system test, then switches off again.

Connecting external devices



Read the documentation on the external device before connecting it.

With the exception of USB devices, always remove all power plugs before connecting external devices!

Do not connect or disconnect cables during a thunderstorm.

Always take hold of the actual plug when disconnecting a cable. Never pull the cable!

Connect and disconnect the cables in the order described below.

Cable connecting

- ▶ Switch off all affected devices.
- ▶ Remove power plugs from the mains outlets for all devices.
- ▶ Plug all cables into the device and peripherals. Please make sure that you always observe the safety notes provided in ["Important notes", Page 10](#).
- ▶ Plug all data communication cables into the sockets provided for the data / telecommunication networks.
- ▶ Plug all power cables into the grounded mains outlets.



USB devices are hot-pluggable. This means you can connect and disconnect USB cables while your device is switched on.












Additional information can be found in ["Connecting external devices to the USB ports", Page 20](#) and in the documentation for the USB devices.

Disconnecting cables

- ▶ Switch off all affected devices.
- ▶ Remove power plugs from the mains outlets for all devices.
- ▶ Unplug all data communication cables from the utility sockets.
- ▶ Unplug all cables from the device and peripherals.

Ports on the device

The ports are located on the front and back of the device. Not all ports are necessarily present on your device. The standard ports are marked with the symbols shown below (or similar). Detailed information on the location of the ports is provided in the manual for the mainboard.

	PS/2 keyboard port, purple		Microphone port, pink (back of device) or black (front of device)
	VGA monitor connection, blue		Audio input (Line in), light blue
	Headphones, light green (back of device) or black (front of device)		PS/2 mouse port, green
	Audio output (Line out), light green		LAN port
	USB - Universal Serial Bus, black		SCSI connection
	FireWire port		




Some of the connected devices require special software (e.g. drivers) (refer to the documentation for the connected device and operating system).

Connecting a monitor

You can use the monitor ports of an optional display adapter in one of the board slots (1) to connect a monitor to your device.

If you have opted for a device with an integrated display adapter and an optional display adapter, the integrated display adapter is first deactivated when the optional display adapter is attached. You need to activate this function first in the *BIOS-Setup*.

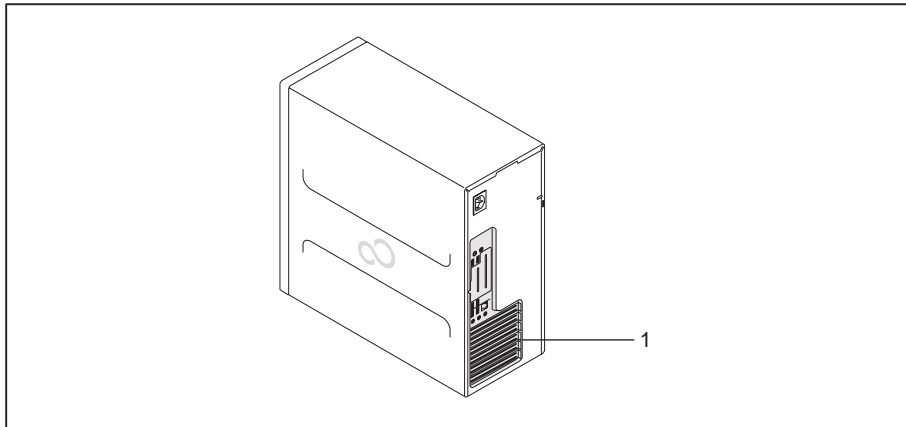

1 = Monitor ports of the display adapter



Only attach the monitor to your device when it is switched off.

- ▶ Follow the instructions contained in the monitor manual to prepare the monitor for operation (e.g. connecting cables).
- ▶ Plug the data cable into a suitable monitor port of the device.

Connecting the mouse

You can connect a USB mouse or a PS/2 mouse to your device.

Connecting a USB mouse

- ▶ Connect the USB mouse to one of the USB ports on the device.

Connecting a PS/2 mouse



The PS/2 mouse is only detected by the device if you connect the mouse when the device is switched off and then switch the device on again.

- ▶ Switch your device off.



If you do not attach a mouse to the PS/2 mouse port, you can disable the mouse controller in the *BIOS Setup* in order to free the IRQ12 for a different application.

- ▶ Connect the PS/2 mouse to the PS/2 mouse port of the device.
- ▶ Switch your device on again.

Connecting the keyboard

You can connect a USB keyboard or a PS/2 keyboard to your device.

Connecting a USB keyboard

Use the supplied keyboard cable only.

- ▶ Plug the rectangular connector of the keyboard cable into the rectangular socket on the underside or on the rear of the keyboard.
- ▶ Insert the flat rectangular USB plug of the keyboard cable into one of the device's USB ports.

Connecting a PS/2 keyboard

Use the supplied keyboard cable only.



The PS/2 keyboard is only detected by the device if you connect the keyboard when the device is switched off and then switch the device on again.

- ▶ Switch your device off.
- ▶ Plug the rectangular connector of the keyboard cable into the rectangular socket on the underside or on the rear of the keyboard.
- ▶ Plug the round plug of the keyboard cable into the keyboard port on the device.
- ▶ Switch your device on again.

Connecting external devices to the USB ports

You can connect a wide range of external devices to the USB ports (e.g. printer, scanner, modem or keyboard).



USB devices are hot-pluggable. This means you can connect and disconnect USB cables while your device is switched on.

Additional information can be found in the documentation for the USB devices.

- ▶ Connect the data cable to the external device.
- ▶ Connect the data cable to one of the USB ports on your device.

Device drivers



External USB devices which you connect to one of the USB ports don't usually need their own drivers because the software required is already included in the operating system. If the device requires separate software, please follow the instructions in the manufacturer's manual.

To ensure the transmission capacity of USB 2.0, the cable from the external USB device to the USB port of your device must not be longer than 3 m.

The USB port for USB 3.0 is located on the front of your device.

Switching on for the first time: installing the software



Once the installation has been started the device must not be switched off, unless the installation has been completed.

During installation, the device may only be rebooted when you are requested to do so!

The installation will otherwise not be carried out correctly and the contents of the hard disk must be completely restored.



If the device is integrated into a network, the user and server details as well as the network protocol are required during the software installation.

Contact your network administrator if you have any questions about these settings.

When you switch on the device for the first time, the supplied software is installed and configured. Plan a reasonable amount of time for this, as this process must not be interrupted.

You may need the licence number for Windows during the installation. The licence number is located on a label on your device.


Switching on monitor and device



In order to avoid overheating, do not cover the ventilation areas of the monitor or the device.

- ▶ Switch the monitor on (see the operating manual for the monitor).
- ▶ Switch the device on. To do this, follow the instructions below.

Switching on the device

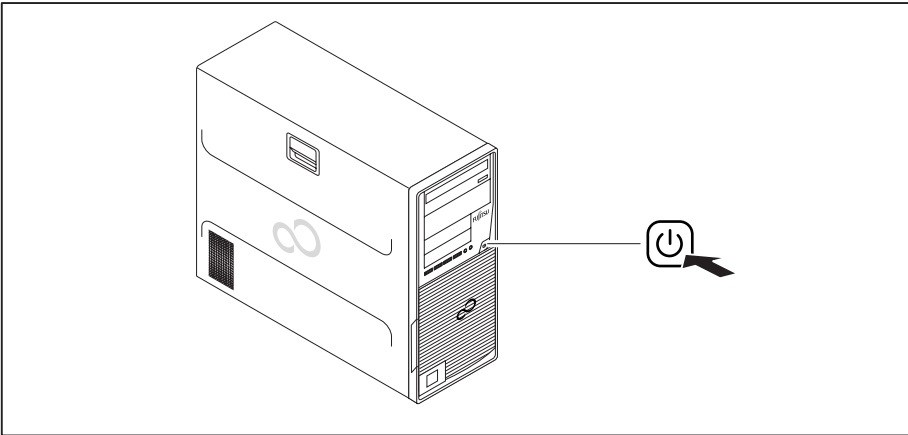

- ▶ Press the ON/OFF switch on the front of the device.
- ↳ The power indicator lights up and the device starts.

Installing the software

- ▶ During installation, follow the on-screen instructions.
- ▶ If anything is unclear regarding the data you are asked to input, read the online Help in your operating system.



You will find more information on the system, as well as drivers, utilities and updates on the "Drivers & Utilities" DVD and on the Internet at ["http://www.fujitsu.com/fts/support"](http://www.fujitsu.com/fts/support).

You can find information and help on the Windows operating system functions on the Internet at ["http://windows.microsoft.com"](http://windows.microsoft.com).

Operation

Switch the device on

- ▶ If necessary, switch the monitor on (see the operating manual for the monitor).
- ▶ Press the ON/OFF switch on the front of the device.
- ↳ The power indicator lights up and the device starts.

Switching off the device

- ▶ Shut down the operating system in a defined manner. In Windows: via the *Start* menu and the *Turn Off Computer* function.

or

- ▶ Briefly press the ON/OFF switch.
- ▶ If the operating system does not automatically switch the device into energy-saving mode or switch it off, press the ON/OFF switch until the device switches off. Warning, this could lead to a loss of data!
- ↳ If the device is switched off, the device consumes a minimum of energy.




The ON/OFF switch does not disconnect the device from the mains voltage. To completely disconnect the mains voltage, remove the power plug from the power socket.

- ▶ If necessary, switch the monitor off (see the operating manual for the monitor).


Indicators on the device

The indicators are on the front of the casing. Which indicators are available on your device depends on the configuration level you have selected.

CELSIUS M720:

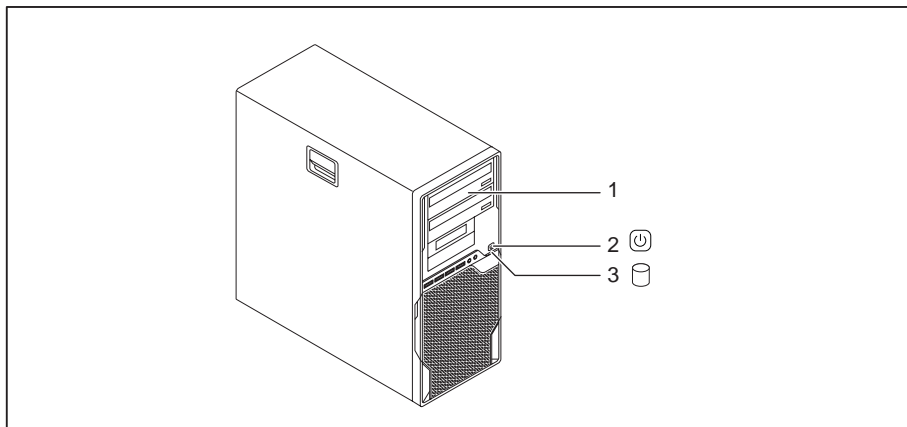

CELSIUS M730:

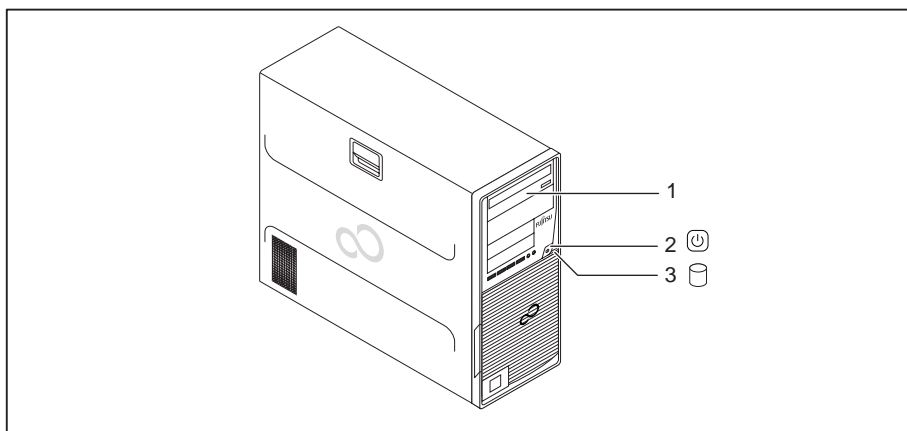

No.	indicator	Description
1	Drive indicators	The indicator lights up when the CD-ROM or DVD drive of the device is accessed. You must never under any circumstances remove the CD/DVD while the indicator is lit.
2	Power-on indicator	Caution: In energy-saving mode the device must not be switched off with the main power switch (if present) or disconnected from the mains, as this may result in data loss. <ul style="list-style-type: none">• The indicator is illuminated: The device is switched on.• The indicator is flashing: The device is in energy-saving mode. After being switched on with the ON/OFF switch, the device powers up or returns to the state it was in before it entered energy-saving mode.• The indicator is not illuminated: the device is switched off (power switch at 0 or disconnected from the mains) or is ready. If the device is ready it can be switched on with the ON/OFF switch.
3	Hard disk indicator	The indicator lights up when the hard disk drive in the device is being accessed.




In energy-saving mode the device must not be disconnected from the mains supply, as data loss may occur.

Keyboard



The illustrated keyboard is an example and may differ from the model you use.

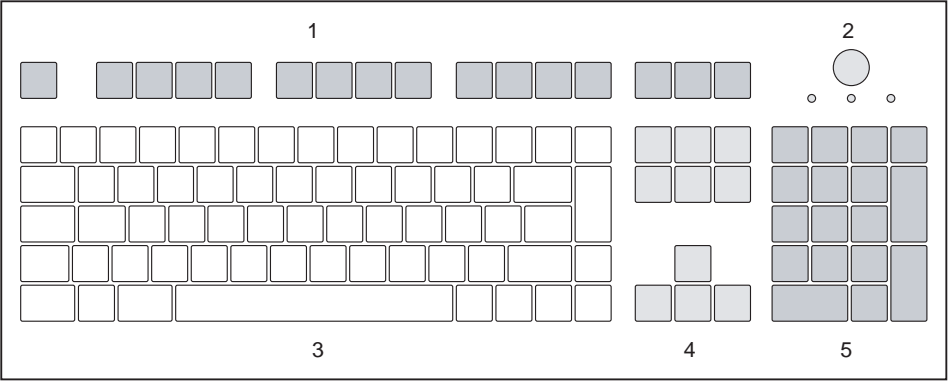












- 1 = Function keys
- 2 = On/off switch (optional)
- 3 = Alphanumeric keypad
- 4 = Cursor keys
- 5 = Numeric keypad (calculator keypad)

Important keys and keyboard shortcuts

The description of the following keys and keyboard shortcuts applies to Microsoft operating systems. Details of other keys and keyboard shortcuts can be found in the documentation for the relevant application program.

Key / key combination	Description
	On/off switch (optional) Depending on the setting in the <i>BIOS Setup</i> , the device can be switched on or off with this switch. Some operating systems allow you to configure additional functions of the ON/OFF switch in the Control Panel. With some keyboards the ON/OFF switch can only be used with an ACPI (Advanced Configuration and Power Management Interface). Otherwise the key is inoperative. The mainboard must support this function.
	Enter key confirms the highlighted selection. The Enter key is also referred to as the "Return" key.

Key / key combination	Description
	Windows key (device-dependent: variant 1) calls up the Windows <i>Start</i> menu.
	Menu key (device-dependent: variant 1) calls up the menu for the marked item (Windows).
	Windows key (device-dependent: variant 2) Switches between the start screen and the last used application.
	Menu key (device-dependent: variant 2) Opens the menu for the active application.
	Shift key enables upper-case letters and the upper key symbols to be displayed.
	Alt Gr key (country-dependent) produces a character shown on the bottom right of a key (e.g. the @ sign on the  key).
	Num Lock key By pressing the Num Lock key you switch between the upper- and lower-case levels of the calculator keypad. When the Num Lock indicator is lit the numeric keypad and arithmetic keys are active. When the Num Lock indicator is not lit the cursor control functions on the Numeric keypad are active.
	Ctrl key performs a special operation when pressed in conjunction with another key. The  key is also called the "Control" or "Control key".
	Windows Security/Task Manager This key combination opens the Windows Security/Task Manager window.


Settings in BIOS Setup

In *BIOS Setup*, you can set the system functions and the hardware configuration of the device. When the PC is delivered, the default entries are valid (see "BIOS Setup" manual or manual for the mainboard). You can customise these settings to your requirements in the *BIOS Setup*.

Property and data protection

Software functions and mechanical locking offer a broad range of functions for protecting your device and your personal data from unauthorised access. You can also combine these functions.

Anti-theft protection and lead-sealing

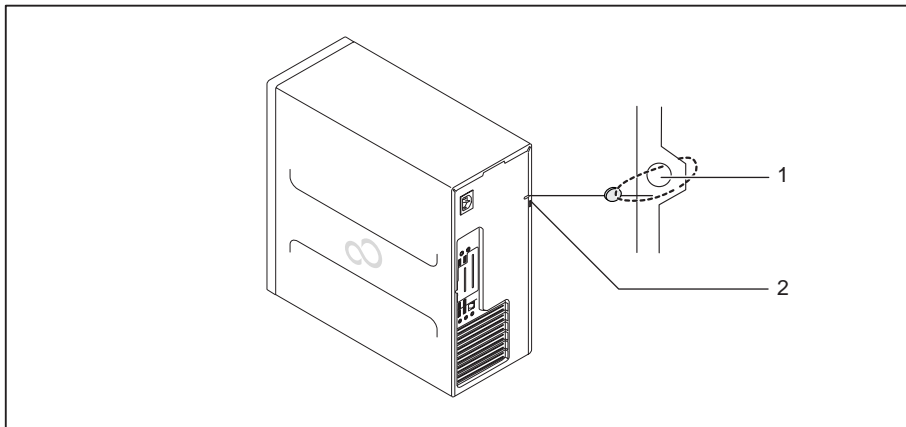

1 = Holes for padlock

2 = Device for Security Lock

Anti-theft protection

You can protect your device from theft

- with the Security Lock device (1) and with a Kensington MicroSaver. Consult the manual for your Security Lock.
- with the holes (2) and a padlock and chain which you have connected to a fixed object beforehand.


Lead-sealing

To prevent unauthorised persons from opening the casing, the casing can be lead-sealed. To do this, feed the sealing chain through the holes (2) and seal the chain with the lead seal.

Mechanical casing lock (optional)

With the casing lock you can mechanically lock the casing to prohibit unauthorised persons from opening it. The keys can be found on the rear panel of your device.

If you use a casing with a casing lock, the safety guard in front of the drives is also secured against unauthorised opening.

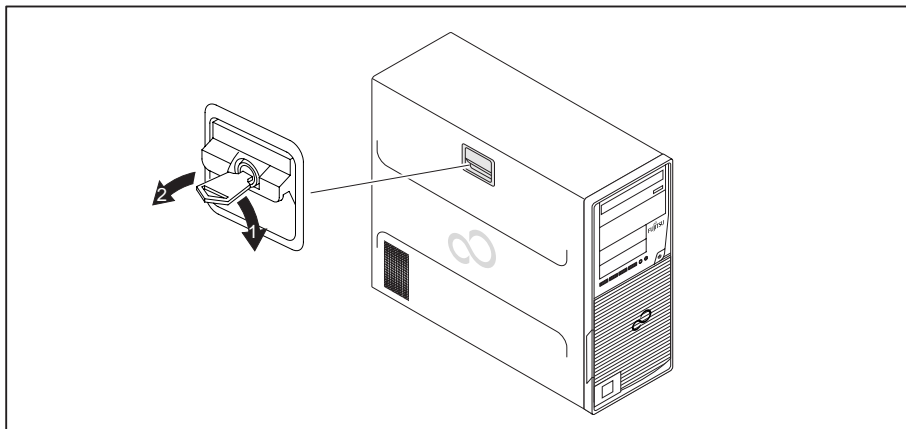

Locking the casing

- Turn the key in the direction of the arrow (1).

Unlocking the casing

- Turn the key in the direction of the arrow (2).

BIOS setup security functions

The *Security* menu in *BIOS Setup* offers you various options for protecting your personal data against unauthorized access, e.g.:

- Prevent unauthorized access to *BIOS Setup*
- Prevent unauthorised system access
- Prevent unauthorised access to the settings of boards with their own BIOS
- Activate virus warnings
- Protect BIOS from overwriting
- Protect the device from being switched on by an external device

You can also combine these functions.

You will find a detailed description of the *Security* menus and how to assign passwords in the manual for the mainboard or in the "BIOS Setup" manual.

Access authorisation via SmartCard

In systems equipped with a SmartCard reader, access can be restricted to those users who have a corresponding SmartCard.

Operating the SmartCard reader (optional)



Operation of this module is not permitted in Taiwan.

- ▶ Connect the external SmartCard reader to your system as described in the instructions for the SmartCard reader.
- ↳ After the device is switched on, you will be prompted to insert your SmartCard.

Troubleshooting and tips



Refer to the safety notes in the "Safety/regulations" manual and in the ["Getting started", Page 14](#) chapter when connecting or disconnecting cables.

If a fault occurs, try to correct it as described in the following documentation:

- in this chapter
- in the documentation for the connected devices
- in the help systems of the software used
- in the documentation for your operating system

Help if problems occur

Should you encounter a problem with your computer that you cannot resolve yourself:

- ▶ Note the ID number of your device. The ID number is found on the type rating plate on the back, the underside or the top of the casing.
- ▶ For further clarification of the problem, contact the Service Desk for your country (see the Service Desk list or visit the Internet at ["http://support.ts.fujitsu.com/contact/servicedesk"](http://support.ts.fujitsu.com/contact/servicedesk)). When you do this, please have ready the identity number and serial number of your system.

Troubleshooting

Power indicator remains off after you have switched on your device

Cause	Remedy
The mains voltage supply is faulty.	<ul style="list-style-type: none">▶ Check that the power cable is correctly plugged into the device and into a grounded mains outlet.▶ Check that the main switch at the rear of the monitor is set to the "I" position.▶ Switch the device on.
Internal power supply overloaded.	<ul style="list-style-type: none">▶ Pull the power plug of the device out of the mains outlet.▶ Wait for about 3 minutes.▶ Plug the power plug into a properly grounded mains outlet again.▶ Switch the device on.

The device cannot be switched off with the ON/OFF switch.

Cause	Remedy
System crash	<ul style="list-style-type: none"> ▶ Keep the on/off switch pressed for at least 4 seconds until the machine switches off. <p>Caution: This can lead to a loss of data!</p> <p>This procedure does not allow the operating system to shut down in an orderly way. The next time the system is started there may well be error messages.</p>

Monitor remains blank

Cause	Remedy
Monitor is switched off.	<ul style="list-style-type: none"> ▶ Switch your monitor on.
Power saving has been activated (screen is blank)	<ul style="list-style-type: none"> ▶ Press any key on the keyboard. <p>or</p> <ul style="list-style-type: none"> ▶ Deactivate the screen saver. If necessary, enter the appropriate password.
Brightness control is set to dark	<ul style="list-style-type: none"> ▶ Adjust the brightness control. For detailed information, please refer to the operating manual supplied with your monitor.
Power cable not connected	<ul style="list-style-type: none"> ▶ Switch off the monitor and the device. ▶ Check that the monitor power cable is properly connected to the monitor and to a grounded mains outlet or to the monitor socket of the device. ▶ Check that the device power cable is properly plugged into the device and a grounded mains outlet. ▶ Switch on the monitor and the device.
Monitor cable not connected	<ul style="list-style-type: none"> ▶ Switch off the monitor and the device. ▶ Check that the monitor cable is properly connected to the device and monitor. ▶ Switch on the monitor and the device.
Incorrect setting for the monitor	<ul style="list-style-type: none"> ▶ Restart the system. ▶ Press [F8] while the system is booting. ▶ Start the system in Safe Mode. ▶ Set up the monitor as described in the documentation for your operating system and monitor.

No mouse pointer displayed on the screen

Cause	Remedy
The mouse is not correctly connected.	<ul style="list-style-type: none"> ▶ Shut down the operating system properly. ▶ Switch the device off. ▶ Check that the mouse cable is properly connected to the system unit. If you use an adapter or extension lead with the mouse cable, check the connections. ▶ Switch the device on.
The mouse controller is not enabled.	<ul style="list-style-type: none"> ▶ Check in the <i>BIOS-Setup</i> whether the mouse controller is <i>enabled</i>. ▶ Check that the mouse driver is properly installed and is present when the application programme is started. Detailed information can be found in the user guide for the mouse and application programme.

Time and/or date is not correct

Cause	Remedy
Time and date are incorrect.	<ul style="list-style-type: none"> ▶ Set the correct time and date within the operating system you are using. <p>or</p> <ul style="list-style-type: none"> ▶ Set the correct time and/or date in the <i>BIOS Setup</i>.
The lithium battery is discharged.	<ul style="list-style-type: none"> ▶ If the time and date are repeatedly wrong when you switch on your device, replace the lithium battery (see "Replacing the lithium battery", Page 70).

Error messages on the screen

Error messages and their explanations are provided:

- in the technical manual for the mainboard
- in the documentation for the programs used

Installing new software

When installing programs or drivers, important files may be overwritten and modified. To be able to access the original data in the event of any problems following installation, you should backup your hard disk prior to installation.

Restoring the hard disk contents

You will find the instructions for restoring the contents of the hard disk in the "Recovery Guide" manual.

Tips

Topic	Tip
Lack of system resources	<p>► Close unnecessary applications.</p> <p>or</p> <p>► Run the applications in a different order.</p>
Other manuals	Further manuals are provided as PDF files on the "Drivers & Utilities" DVD.

System expansions



Repairs to the device must only be performed by qualified technicians. Incorrect repairs may greatly endanger the user (electric shock, fire risk) and will invalidate your warranty.

After consulting the Hotline/Help Desk, you may remove and install the components described in this manual yourself.



As the device has to be shut down in order to install/deinstall system hardware components, it is a good idea to print out the relevant sections of this chapter beforehand.

The following illustrations may differ slightly from your device, depending on its configuration level.

If further documentation was delivered with your device, please also read this through carefully.

In addition, before removing or installing system components, please pay attention to the following:



The device must be switched off when installing/removing the system expansions and may not be in energy-saving mode.

Remove the power plug before opening the device.

Be careful that no wires become trapped when removing or installing components.

When installing components that become very hot, make sure that the maximum permissible temperature of the components in operation is not exceeded.



An update of the BIOS may be required for a system expansion or hardware upgrade. Further information can be found in the BIOS help section or if necessary in the Technical Manual for the mainboard.

Information about boards

Take care with the locking mechanisms (catches and centring pins) when you are replacing boards or components on boards.

Note that some components on the mainboard may be very hot if the device was in use shortly before the casing was removed.

To prevent damage to the board or the components and conductors on it, please take care when you insert or remove boards. Make sure expansion boards are inserted straightly.

Never use sharp objects (screwdrivers) for leverage.



Boards with electrostatic sensitive devices (ESD) are identifiable by the label shown.

When handling boards fitted with ESDs, you must always observe the following points:

- You must always discharge static build up (e.g. by touching a grounded object) before working.
- The equipment and tools you use must be free of static charges.
- Only touch or hold the boards by the edge or, if present, at the areas marked green (Touch Points).
- Never touch pins or conductors on boards fitted with ESDs.

Opening the casing

- Switch the device off. The device must not be in power-saving mode.




Please observe the safety information in ["Important notes", Page 10.](#)

Disconnect the mains plug from the mains outlet.

Only insert the power plug after you have closed the casing.


- Remove any connected wires which are in the way.
- On devices with a casing lock: Unlock the casing.
- Lay the device on its side in the manner shown.

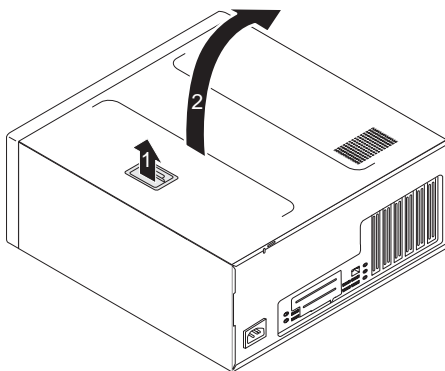

- Pull the locking device (1) and swivel the side part in the direction of the arrow (2).

Closing the casing

- Insert the side part in the guide rail on the lower part of the casing.

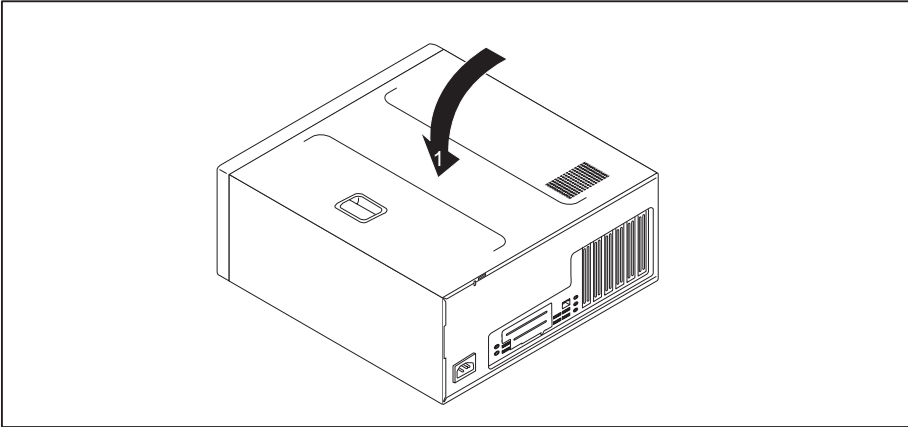

- Swivel the side cover in the direction of the arrow (1) until it engages.
- On devices with a casing lock: Lock the casing.
- Reconnect the cables that you disconnected before.

Overview of drive bays and drives in your device

The casing can accommodate multiple accessible and non-accessible drives:

- two drive bays for accessible 5 $\frac{1}{4}$ " drives
- two drive bays for accessible 3 $\frac{1}{2}$ " drives
- Drive bays for multiple non-accessible 2 $\frac{1}{2}$ " and 3 $\frac{1}{2}$ " drives (hard disks):
 - four 2 $\frac{1}{2}$ -inch drives (Standard)
 - or: four 3 $\frac{1}{2}$ -inch drives (Standard)
 - or: two 3 $\frac{1}{2}$ " drives and two 2 $\frac{1}{2}$ " drives (optional)
 - or: eight 2 $\frac{1}{2}$ -inch drives (optional)




"Accessible drives" are e.g. DVD or CD ROM drives, into which a data medium can be inserted from outside. "Non-accessible drives" are for example hard disk drives.

Installing and removing the accessible 5¹/₄ inch drive


Fitting the drive cover for the 5 ¹/₄ inch drive

- Requirement: The casing is open (see section ["Opening the casing", Page 36](#)).

To use the latch function of the accessible 5¹/₄ inch drive, you must fit the corresponding drive cover before installing the drive in the casing. Proceed as follows:

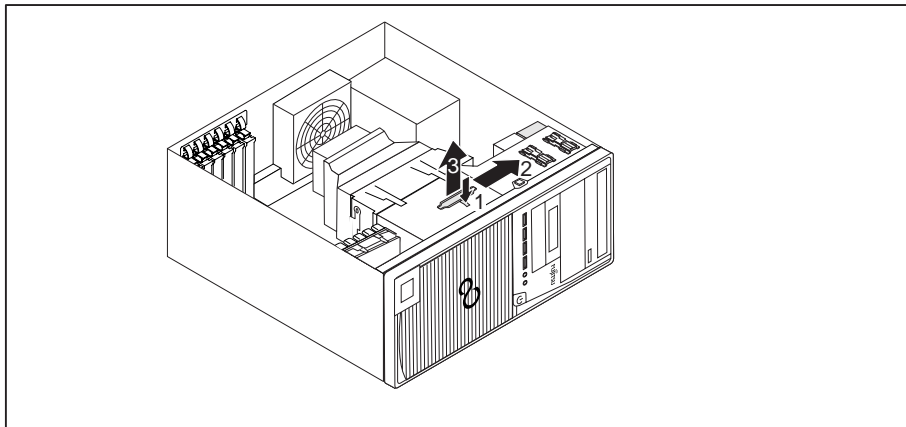

- ▶ Unlock the drive cover (1).
- ▶ Push the drive metal plate upwards (2) so it is released from the catches with which it is secured.
- ▶ Lift the drive cover away from the casing (3).

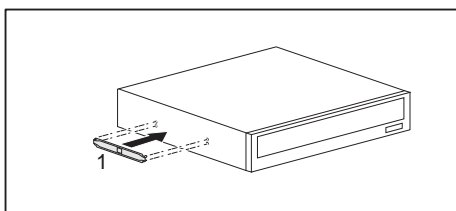

- ▶ Connect the drive cover to the drive (1).

Installing an accessible drive


- ▶ If you are installing the drive in the upper bay and a cover (optional) is already in place, please remove it.

or

- ▶ If you are installing the drive in the lower bay, also remove the metal panel on the drive bay.
- ▶ Fit the drive cover for the 5 1/4 inch drive (see ["Fitting the drive cover for the 5 1/4 inch drive", Page 38](#)).



Do not throw away the cover. For cooling and protection against fire you must refit the cover if you remove the drive again later (see ["Removing an accessible drive", Page 40](#)).

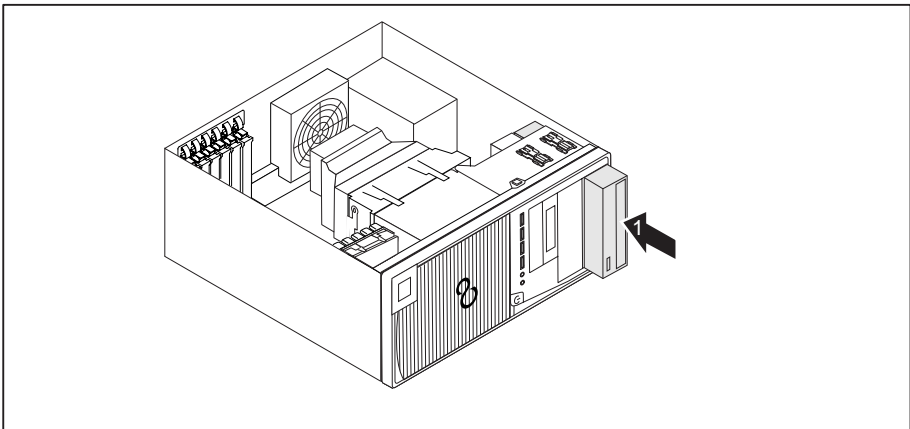


- ▶ Slide the accessible drive together with the attached drive metal plate into the casing until it engages (1).
- ▶ Connect the cables to the drive. Make sure the polarity is correct.
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).




It may be necessary to modify the entry for the drive in the *BIOS Setup*.


Removing an accessible drive

- Requirement: The casing is open (see ["Opening the casing", Page 36](#)).

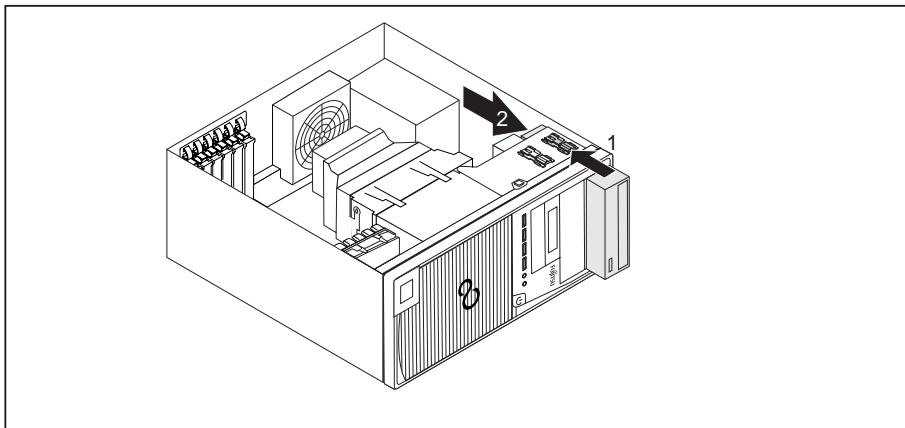

- ▶ Disconnect the cables connected to the drive.
- ▶ Slide the clip in the direction of the arrow (1).
- ▶ Pull the drive out of the casing in the direction of the arrow (2).
- ▶ Remove the drive cover from the drive (1).

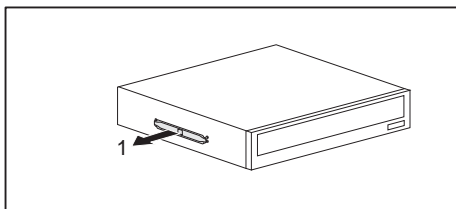

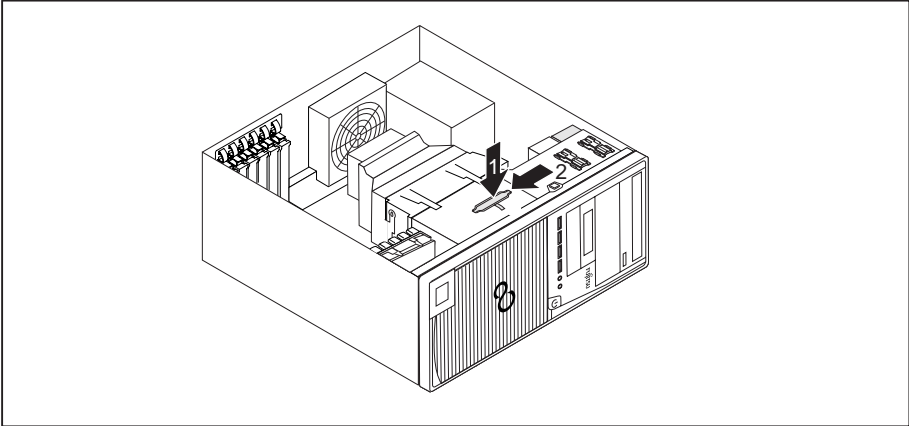

- ▶ Place the drive cover on the casing (1).
- ▶ Slide the drive cover downwards (2) so that the drive cover clicks into the catches.
- ▶ If necessary, make the required settings on the remaining hard disk drives.
- ▶ If you are not installing a new drive, reinstall the cover (optional) which was previously removed. The drive bay must be closed off to ensure cooling, to protect against fire and to prevent the entry of foreign bodies.
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).



It may be necessary to modify the entry for the drive in the *BIOS Setup*.

Installing/removing a 3½" reader in a 3½" bay (optional, SmartCard or MultiCard)



Operation of the module is not permitted in Taiwan.

You can for instance install a SmartCard or MultiCard reader in the 3½" drive bay. The reader is mounted onto a module holder when installed in the casing.




SmartCard or MultiCard readers can be mounted on a module holder (optional). If you have ordered a device with a SmartCard or MultiCard reader, the module holder, SmartCard or MultiCard reader are already built in on delivery.

If you have ordered a device without a SmartCard or MultiCard reader, a blind cover is installed instead of the module holder.


Removing the module holder

- Requirement: open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Disconnect the cables connected to the module holder.

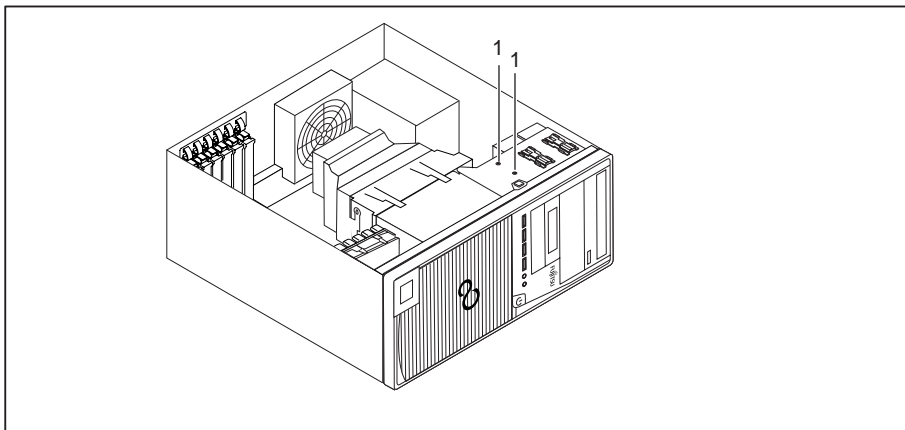


- ▶ Remove the screws (1) on the module holder.
- ▶ Slide the module holder out of the casing in the direction of the arrow (2).

Screwing the reader onto the module holder

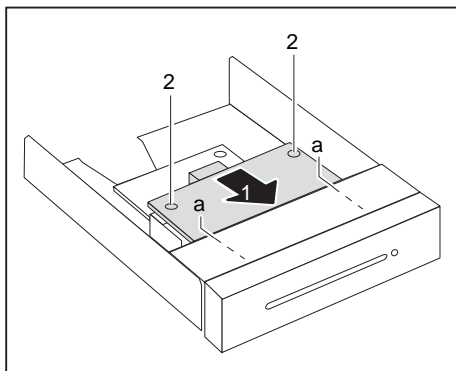

- ▶ With the component side facing downwards, slide the reader in the direction of arrow (1) into the guide on the module holder (a).
- ▶ Fasten the reader with the screws (2).


Installing a module holder with reader

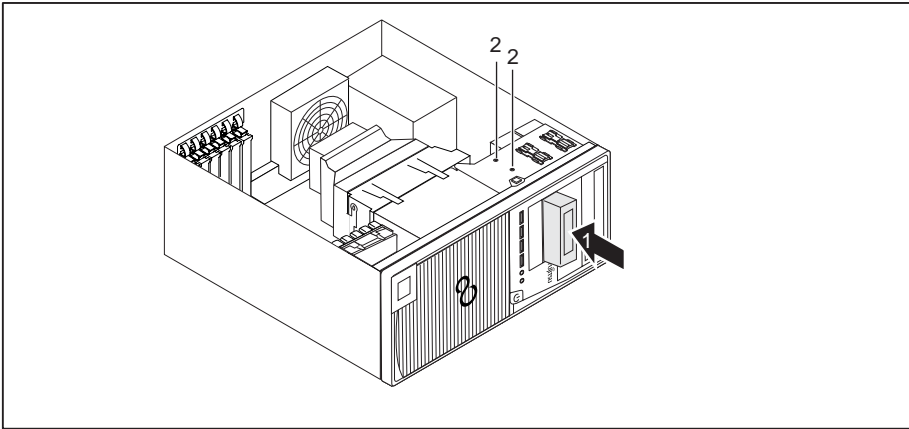

- ▶ Push the module holder into the casing in the direction of the arrow (1).
- ▶ Fasten the module holder with the screws (2).
- ▶ Connect the cables to the boards and the mainboard. Make sure the polarity is correct.
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).

Removing a module holder with reader

- Requirement: The casing is open (see ["Opening the casing", Page 36](#)).
- ▶ Disconnect the cables connected to the module holder.

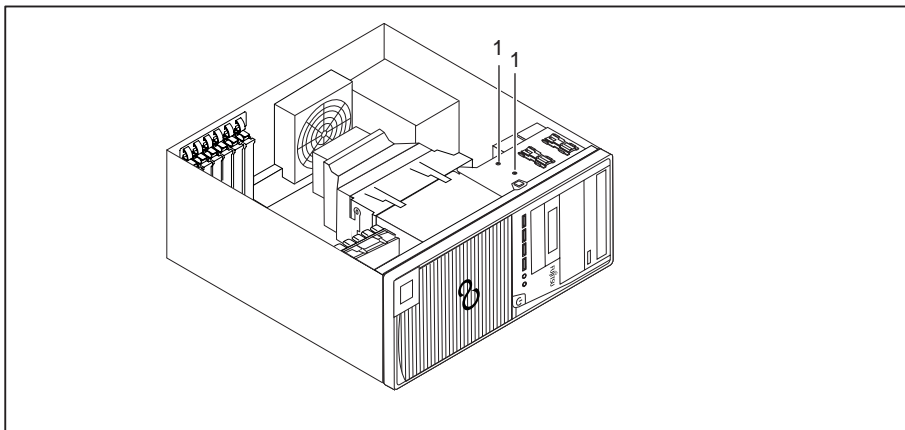


- ▶ Remove the screws (1).
- ▶ Slide the module holder out of the casing in the direction of the arrow (2).
- ▶ Remove the reader from the module holder (see ["Removing the reader from the module holder", Page 44](#)) and reinstall the module holder (corresponds to ["Installing a module holder with reader", Page 43](#)).

or

- ▶ Remove the reader from the module holder (see ["Removing the reader from the module holder", Page 44](#)) and install the metal and plastic cover in the drive bay.
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).

Removing the reader from the module holder

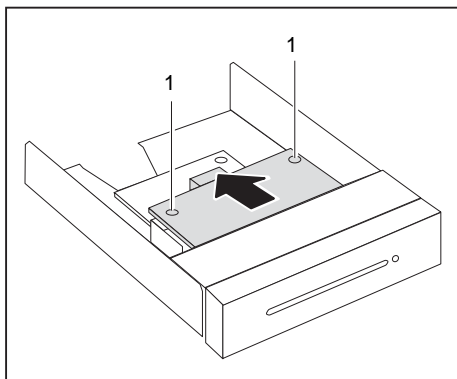

- ▶ Undo the screws (1).
- ▶ Pull the reader out of the module holder in the direction of the arrow.

Installing and removing a WLAN module (optional)



The WLAN module is also available as a board and is then installed like a board (see ["Installing and removing a board", Page 61](#)).


You can install an additional WLAN module in your device.

Operation of the module is not permitted in Taiwan.

Removing the front panel

- Requirement: open the casing (see ["Opening the casing", Page 36](#)).

To access the WLAN module bay, you first need to remove the front panel.

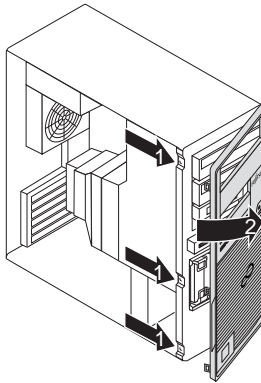

- ▶ Lift the locking lugs on the front panel (1).
- ▶ Fold the front panel in the direction of the arrow (2) and remove it from the casing.


Removing the front fan

- Requirement: open the casing (see ["Opening the casing", Page 36](#)).
- Requirement: remove the front panel (see ["Removing the front panel", Page 45](#)).


To access the WLAN module bay, you need to remove the front fan after removing the front panel.

The front fan is secured using several locking hooks that will need to be unlocked one after the other.

- ▶ Disconnect the fan cable from the mainboard.

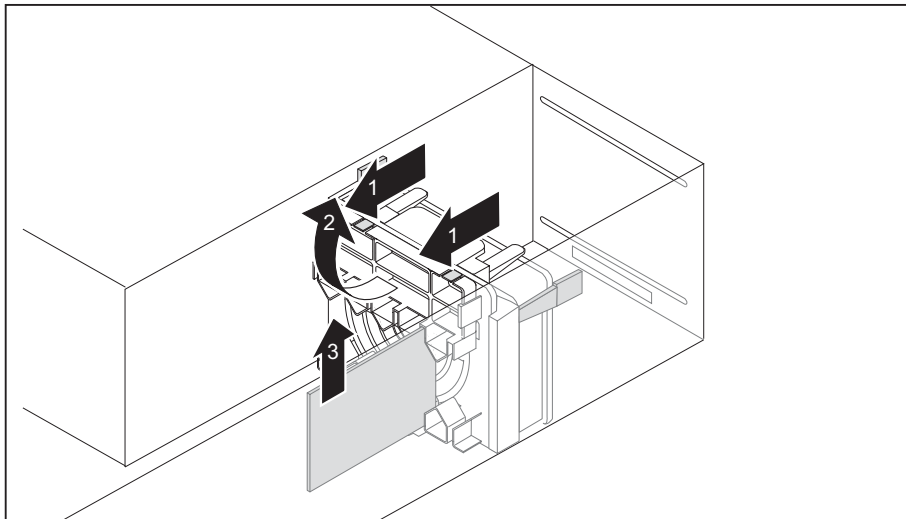

- ▶ Push the locking lug on the upper, removable part of the card holder in the direction of the arrow (1).
- ▶ Lift the card holder off the fan (2).
- ▶ If boards are fitted at the fan, remove these (3) (see ["Removing a board", Page 63](#)),

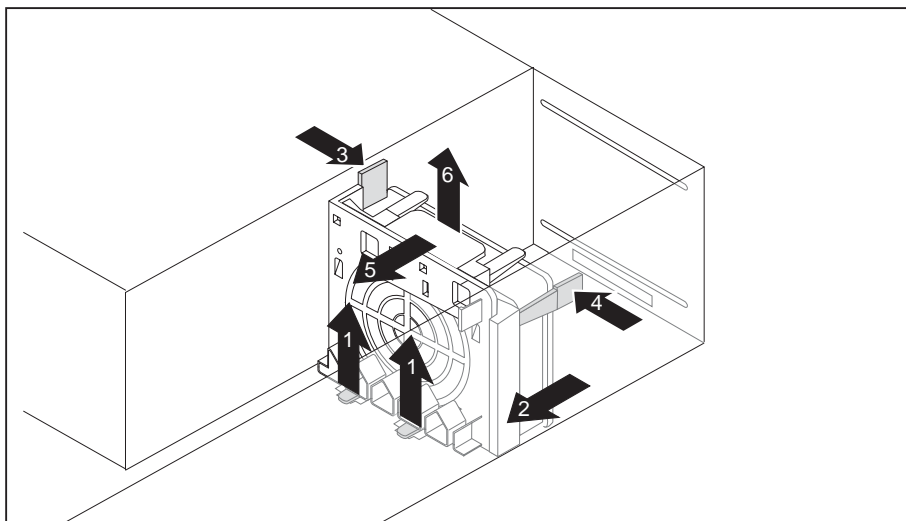


- ▶ Lift the lower locking lugs of the fan slightly (1). At the same time, slide the fan in direction of the arrow (2).
- ▶ To release the left-hand locking lug, push it in the direction of the arrow (3).

- ▶ To release the right-hand locking lug, push it in the direction of the arrow (4).
- ↳ The fan is unlocked.
- ▶ To prevent the fan from engaging again, tilt it slightly in the direction of the arrow (5).
- ▶ Remove the fan from the casing (6).

Installing the WLAN module


Remove the metal panel

The slot for the WLAN module is protected by a metal cover on delivery.

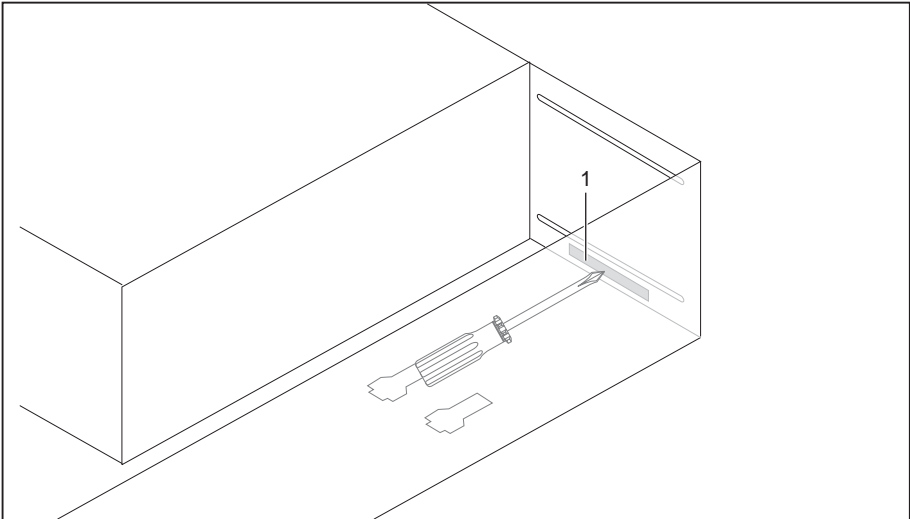

- ▶ Break out the pre-stamped metal cover (1) with a screwdriver.


Installing the WLAN module

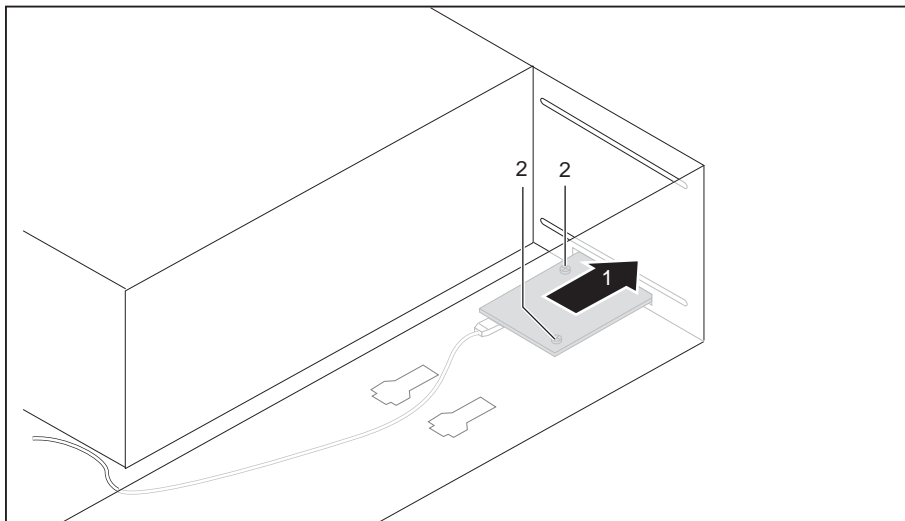

- ▶ Slide the WLAN module into the slot in the direction of the arrow (1). Ensure that the screw holes on the casing and those on the WLAN module are precisely aligned over one another.
- ▶ Secure the WLAN module with the screws (2).
- ▶ Attach the cables to the WLAN module and mainboard.


Removing the WLAN module

- ▶ Detach the cables from the WLAN module and mainboard.

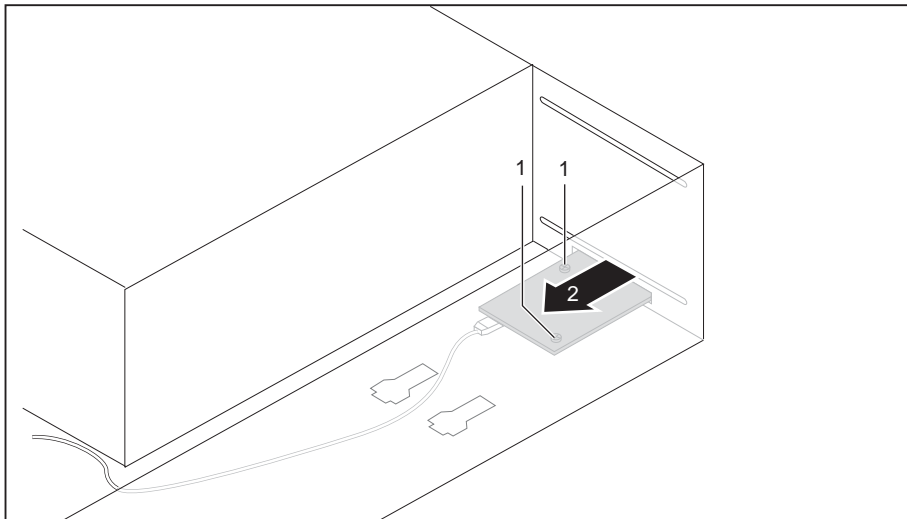


- ▶ Undo the screws (1).
- ▶ Pull the WLAN module out of the bay the direction of the arrow (2).

Installing the front fan

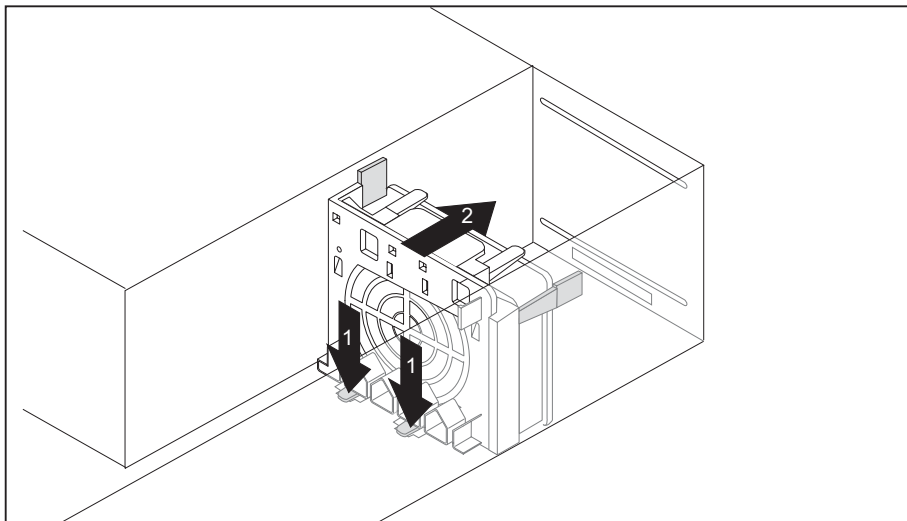


- ▶ Insert the lower catches of the fan into the grooves (a) (1).
- ▶ Push the fan in the direction of the arrow (2) until the lower catches engage.
- ▶ Make sure that the two upper catches also engage.
- ▶ If necessary, reinstall the boards previously removed from the fan (see ["Installing a board", Page 61](#)).

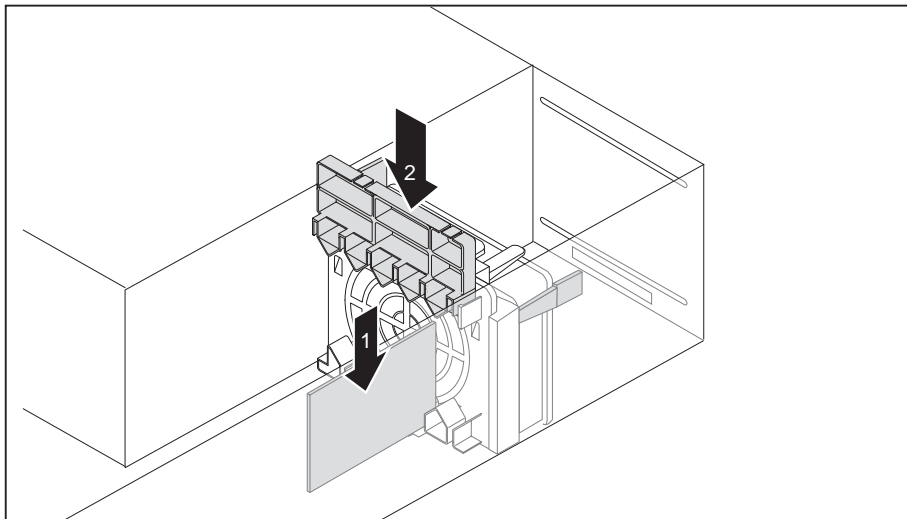

- ▶ Install the board (1).
- ▶ Insert the upper part of the card holder in the guide (2) and push it to the edge of the guide.
↳ The upper part of the card holder engages.
- ▶ Connect the fan cable to the mainboard.
- ▶ Reattach the front panel (see ["Securing the front panel", Page 52](#)).

Securing the front panel

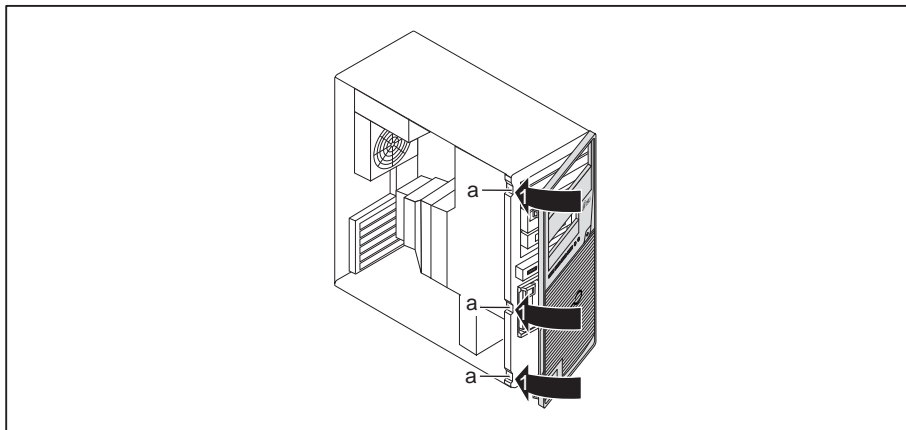


- ▶ Put the front cover onto the guide openings on the right of the casing.
- ▶ Fold the front panel in the direction of the arrow (1) until the catches (a) engage.
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).

Installing the hard disk drive

In the installation kit for hard disk drives, two hard disks of type 3 $\frac{1}{2}$ inch or 2 $\frac{1}{2}$ inch can be preinstalled as standard upon delivery of your device. With the optional add-on installation kit, you receive the necessary EasyChange rails. At most, you can install the following hard disks:


- four 2 $\frac{1}{2}$ inch drives
- or: two 2 $\frac{1}{2}$ inch drives and two 3 $\frac{1}{2}$ inch drives
- or: four 3 $\frac{1}{2}$ -inch drives

Standard installation kit

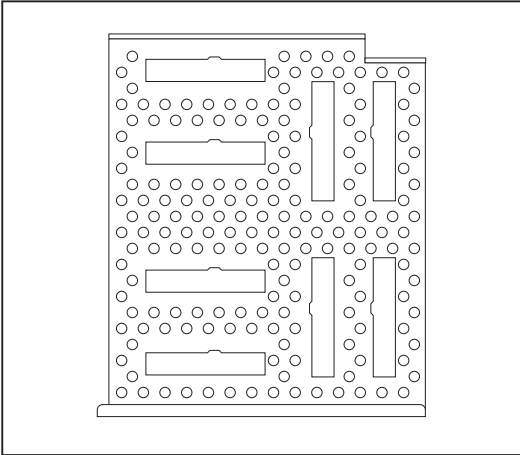

Alternatively, you can purchase an optional installation kit in which you can install up to eight 2 $\frac{1}{2}$ -inch drives:

Optional installation kit

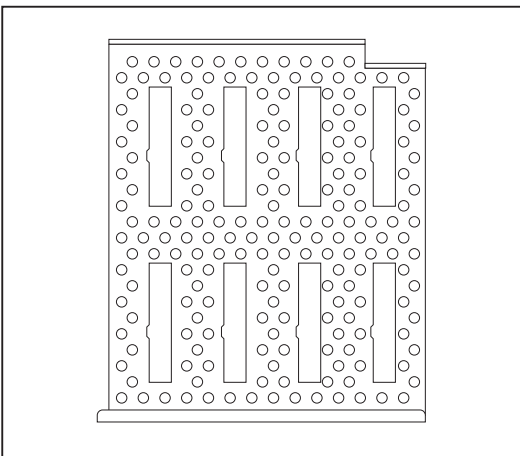

Replacing the installation kit

- Requirements:
There are not any hard disk drives installed in the drive bays.
Otherwise you must first remove the hard disk drives.

- The casing is open (see ["Opening the casing", Page 36](#)).

If you wish to use an installation kit for your hard disks which is other than that which was installed in your device in the factory, proceed as follows:

- ▶ If any hard disk drives are already installed, remove them (see ["Removing a hard disk", Page 58](#)).
- ▶ If necessary, disconnect the drive cables from the installation kit:
Press the locking lug to unlock the cable bracket and push the cable bracket to the rear and out of the opening.
- ▶ Undo the screws on the old installation kit.
- ▶ Remove the installation kit from the casing.
- ▶ Position the new installation kit at the bay.
- ▶ Fasten the new installation kit with the screws.
- ▶ Secure the drive cables on the installation kit again.
- ▶ If required, connect further drive cables with sufficient drive connectors to the installation kit and the mainboard.



When connecting the cables, note the numbering on the installation kit and on the cables.


Installing hard disks

The principles for installing/removing hard disks for the device as described below are identical for all types of hard disk. Only the size and alignment of the hard disk in the casing may vary (install either horizontally or vertically depending on the hard disk type).


The following images illustrate the installation of a 3 1/2" drive.

Removing the hard disk front panel

CELSIUS M720

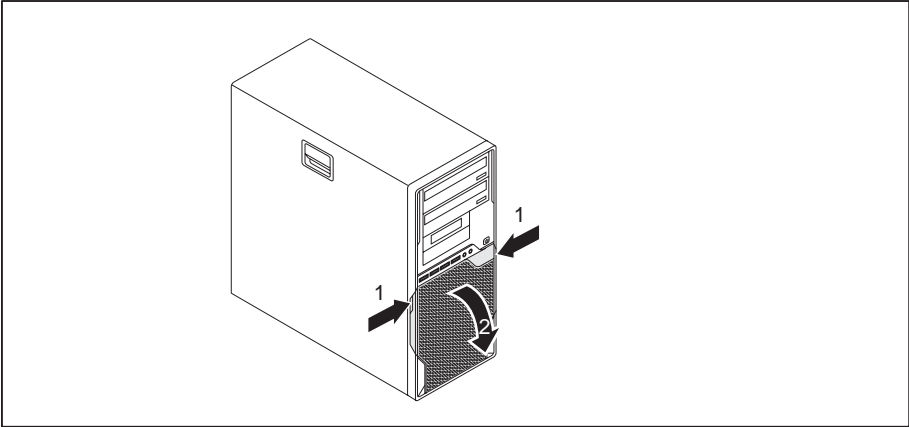


CELSIUS M730

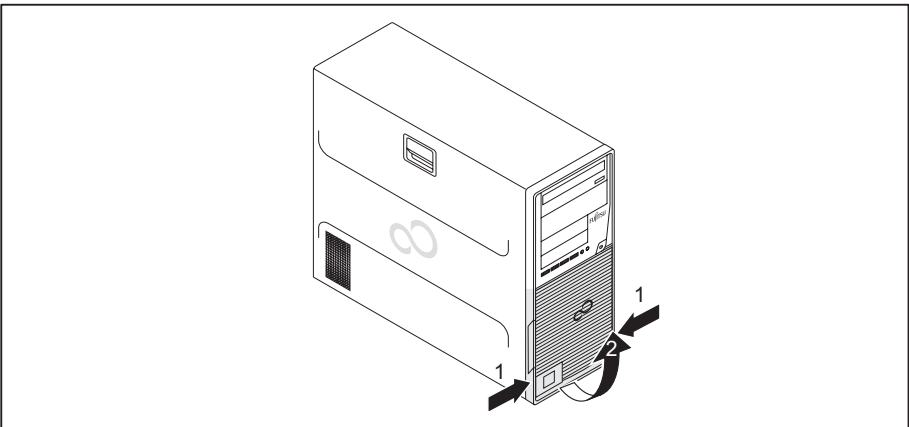

- ▶ Press the unlocking keys on the sides of the hard disk front panel (1).
- ▶ Fold the hard disk front panel in the direction of the arrow (2) and remove it from the casing.

Removing the protective grille

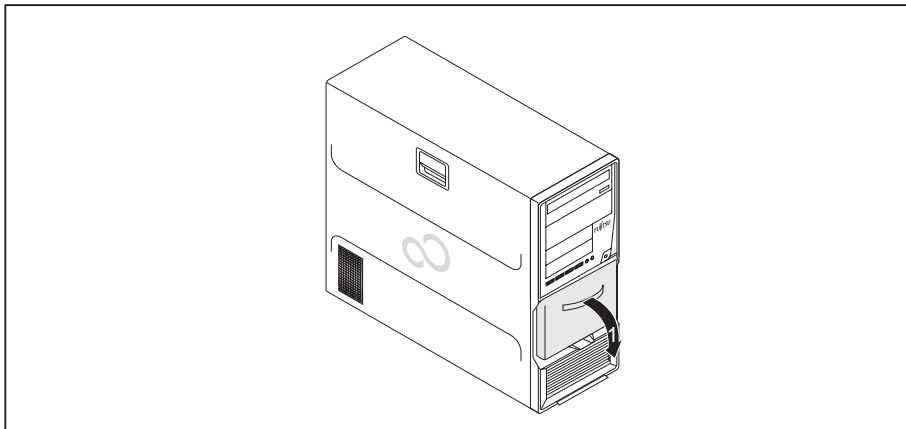


- Pull the protective grille away from the casing (1).

Installing a hard disk drive

- Requirement: The casing is open and the side cover removed (see ["Opening the casing", Page 36](#)). If you use a casing with a casing lock, the safety guard in front of the drives is also secured against unauthorised opening.
- Requirement: remove the protective grille (see ["Removing the protective grille", Page 56](#)).




EasyChange rails for a second hard disk drive are mounted on the drive cage.

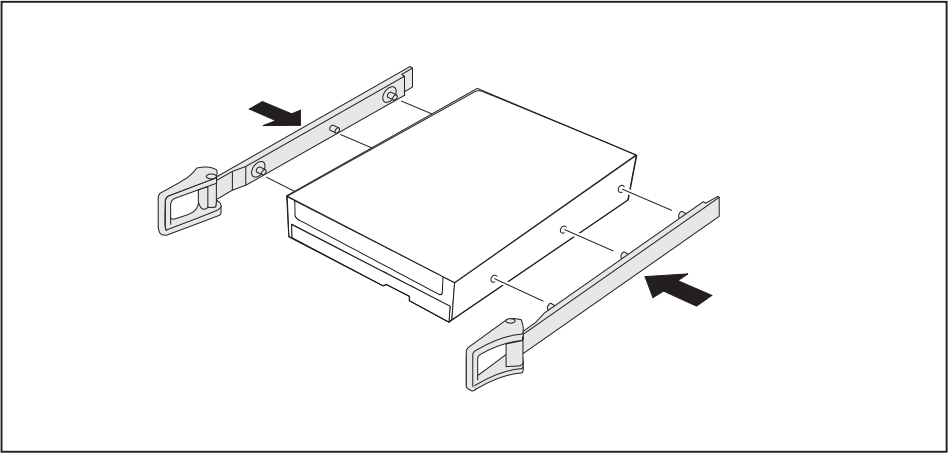

- Secure the EasyChange rails on the side of the hard disk by inserting the upper pins of the EasyChange rail in the corresponding holes on the hard disk.

i

By default, the wiring for standard installation (max. four 2 1/2-inch drives) is installed.
If you wish to install other or different drives, use the supplied cables.

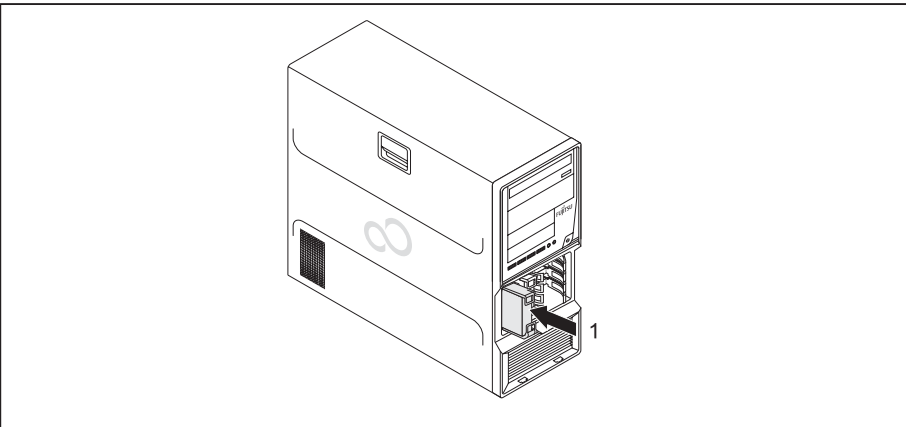

- Slide the hard disk drive with the EasyChange rails into the drive cage in the direction of the arrow (1). Ensure that the label on the 3 1/2" hard disk drive is facing the side cover to be opened. If you are installing a 2 1/2" hard disk drive, ensure that the label is on the top.
- Connect the cables to the hard disk drive.



It may be necessary to modify the entry for the drive in the *BIOS Setup*.


Removing a hard disk

The principles for installing/removing hard disks for the device as described below are identical for all types of hard disk. Only the size and alignment of the hard disk in the casing may vary (install either horizontally or vertically depending on the hard disk type).


The following images illustrate the installation of a 3 1/2" drive.

Removing the hard disk drive

- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Remove the hard disk front panel (see ["Removing the hard disk front panel", Page 55](#)).
- ▶ Remove the protective grille (see ["Removing the protective grille", Page 56](#)).

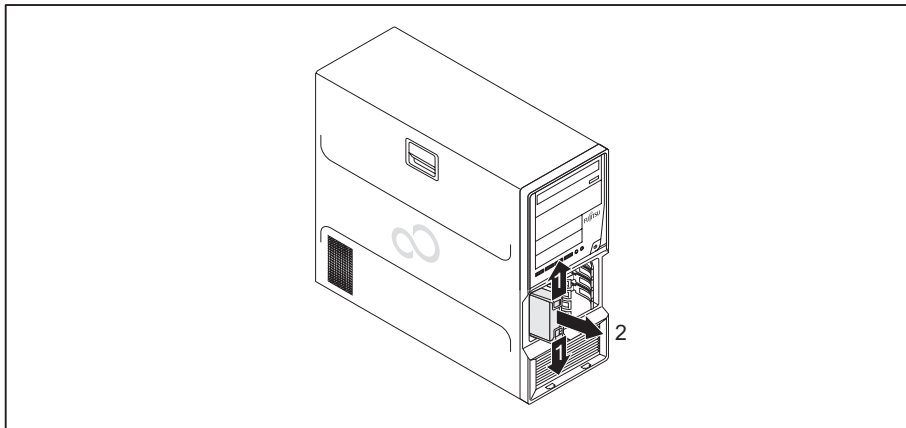

- ▶ Press the levers of the EasyChange rails, which are secured to the hard disk drive, outwards (1) until the hard disk is released.
- ▶ Pull the hard disk drive out of the drive cage in the direction of the arrow (2).

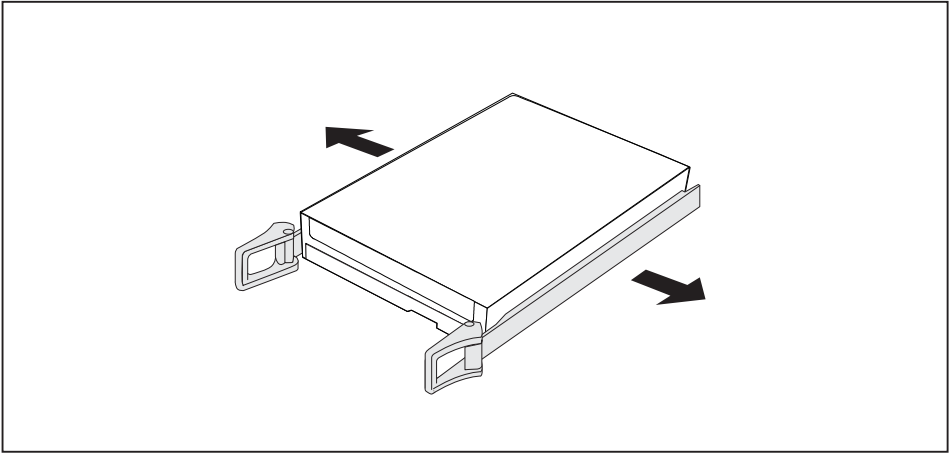


- ▶ Pull the EasyChange rails off the hard disk drive.
- ▶ If you no longer need the EasyChange rails, secure them again at their location in the drive cage.



It may be necessary to modify the entry for the drive in the *BIOS Setup*.


Securing the protective grille

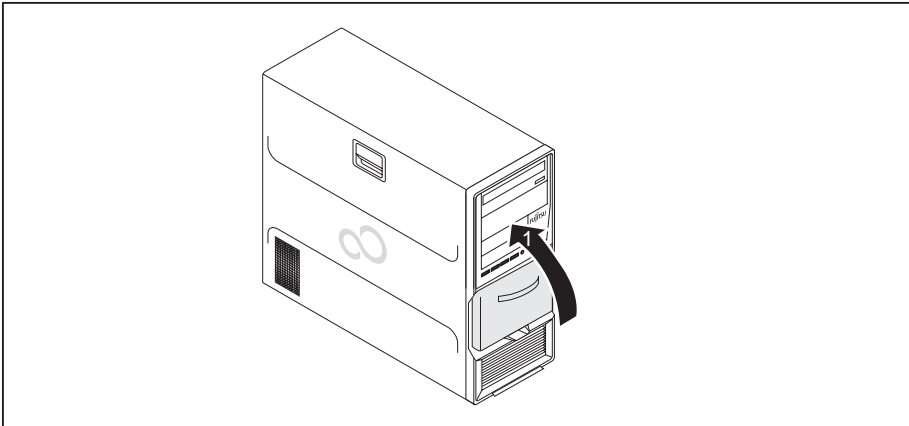


- ▶ Put the protective grille into the sheet metal lugs on the casing and fold it in the direction of the arrow (1).
- ↳ The protective grille is secured.
- ▶ Reattach the front panel to the casing (see ["Securing the hard disk front panel", Page 60](#)).

Securing the hard disk front panel

CELSIUS M720

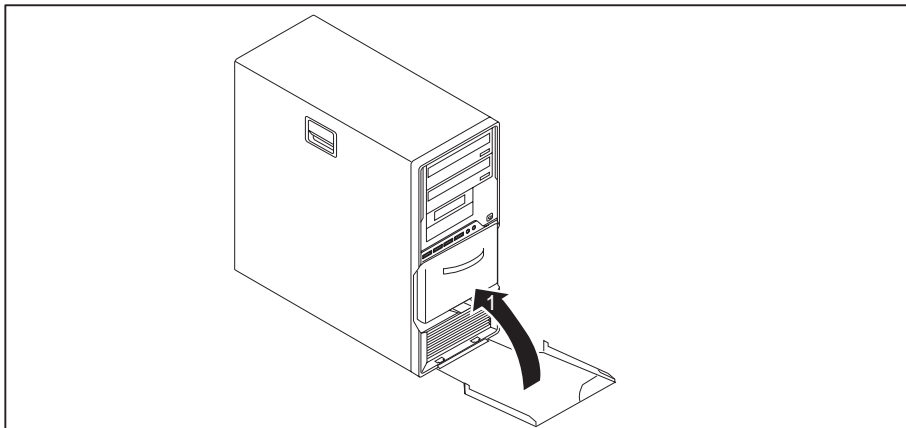

CELSIUS M730

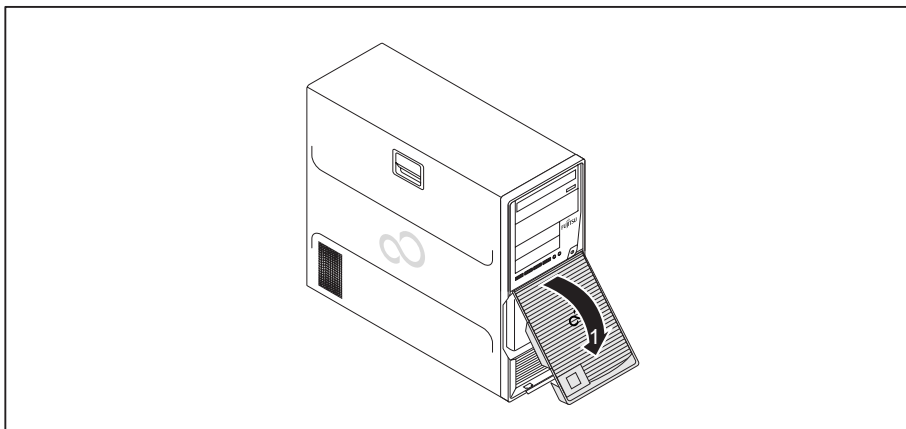

- ▶ Place the hard disk front panel in the guide openings as illustrated.
- ▶ Fold the hard disk front panel in the direction of arrow (1) until you feel it engage.

Installing and removing a board

You can install additional modules in order to increase the performance of your machine.


The number, position and arrangement of the board slots on the mainboard can be found in the manual for the mainboard. Boards may already be installed on shipment.

Installing a board



Always install display adapters with an additional power connection in the second slot on the right (see following illustration).


- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ For long PCI boards: Remove the upper part of the card holder at the front fan in order to be able to click the board into place at the front fan (see ["Removing the front fan", Page 45](#)).

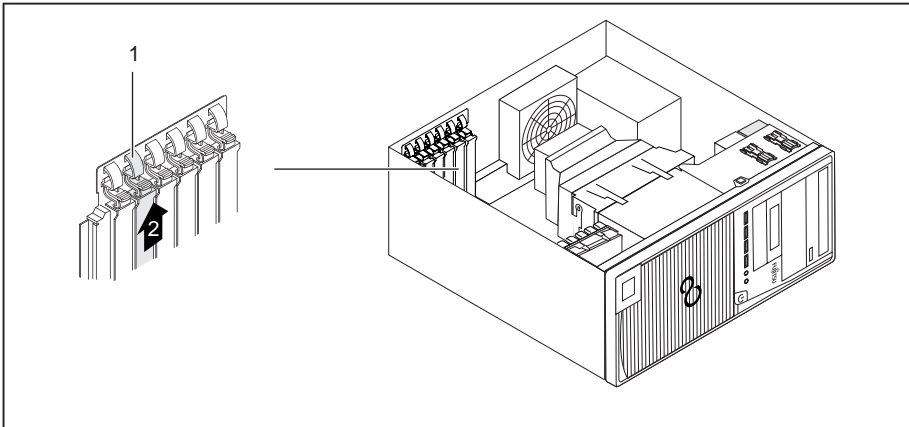

- ▶ Push the retaining clip (1) towards the slot cover to unlock it, then move it towards the back panel of the device.
- ▶ Pull the slot cover out of the slot in the direction of the arrow (2).



Do not throw away the slot cover. For cooling, protection against fire and in order to comply with EMC regulations, you must refit the slot cover if you remove the board.

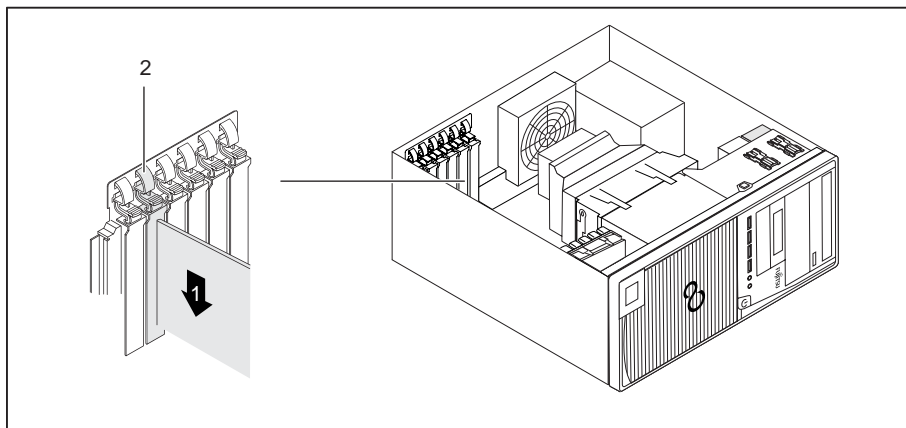


- ▶ Push the board into the slot (1).
- ▶ Swivel the retaining clamp back again until you feel it click into place (2).
- ▶ Connect the cables to the board.
- ▶ For display adapters with additional power supply: Attach the display adapter power cable to the power supply.
- ▶ For long PCI boards: Fit the upper part of the card holder at the front fan again (see ["Installing the front fan", Page 50](#)).
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).



If you have installed or removed a board, please check the relevant slot settings in the *BIOS Setup*. If necessary, change the settings. Further information is provided in the board documentation.

Removing a board


- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Disconnect the cables connected to the board.
- ▶ For long PCI boards: Remove the upper part of the card holder at the front fan in order to be able to click the board into place at the front fan (see ["Removing the front fan", Page 45](#)).

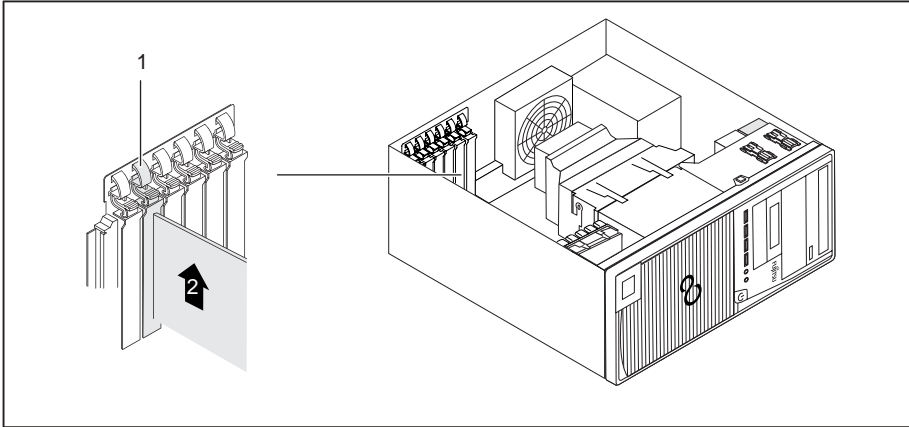

- ▶ Push the retaining clip (1) towards the slot cover to unlock it, then move it towards back panel of the device.
- ▶ Pull the board out of the slot in the direction of the arrow (2).
- ▶ Place the board in suitable packaging.



For cooling, protection against fire, and in order to comply with EMC (electromagnetic compatibility) regulations, you must refit the slot cover.

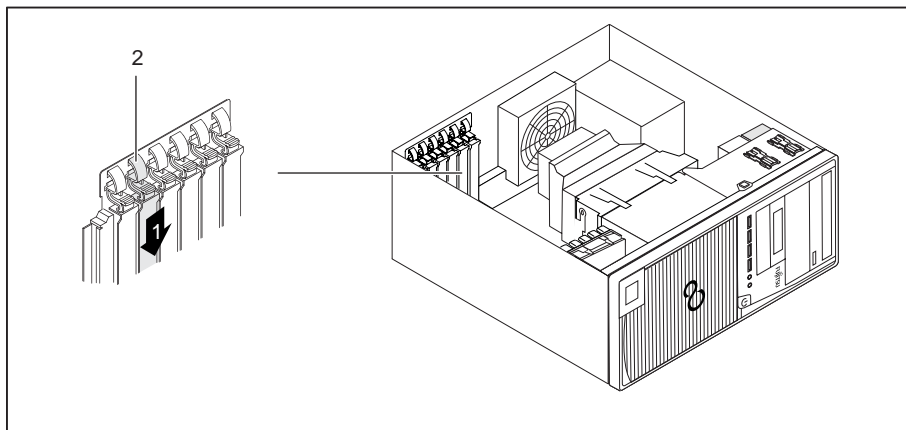

- ▶ Slide the slot cover into the slot (1).
- ▶ Press on the retaining clip until you feel it engage (2).
- ▶ For long PCI boards: Fit the upper part of the card holder at the front fan again (see ["Installing the front fan", Page 50](#)).
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).



If you have installed or removed a PCI board, please check the relevant PCI slot settings in the *BIOS Setup*. If necessary, change the settings. Further information is provided in the PCI board documentation.

Upgrading main memory

- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ If the bays are located below the hard disk fan: Remove the hard disk fan (see ["Remove the hard disk fan", Page 68](#)).
- ▶ If the bays are located below the fan at the power supply: Remove the fan at the power supply (see ["Removing the rear fan", Page 66](#)).
- ▶ Upgrade the main memory according to the description in the manual for the mainboard.
- ▶ If the bays are located below the fan at the power supply: Install the fan at the power supply again (see ["Installing the rear fan", Page 67](#)).
- ▶ If the bays are located below the hard disk fan: Install the hard disk fan again (see ["Install the hard disk fan", Page 69](#)).
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).

Replacing the processor

- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Remove the heat sink (see ["Removing the heat sink", Page 65](#)).
- ▶ Replace the processor as described in the manual for the mainboard.
- ▶ Install the heat sink again (see ["Installing the heat sink", Page 65](#)).
- ▶ Close the casing (see ["Closing the casing", Page 37](#)).

Installing and removing heat sinks

Removing the heat sink

The shape and position of the heat sink are device-dependent.

- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
 - ▶ Remove the hood of the hard disk fan and the hard disk fan itself (see ["Remove the hard disk fan", Page 68](#)).
 - ▶ Undo the screws on the heat sink.
 - ▶ Lift the heat sink out of the casing.
- ↳ You can now replace the processor.

Installing the heat sink

- ▶ Open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Reinstall the heat sink so that the air flow is fed towards the back of the casing (see arrow on the heat sink).
- ▶ Tighten the screws.
- ▶ Reinstall the hard disk fan and the hood of the hard disk fan (see ["Install the hard disk fan", Page 69](#)).




Never attach or detach fans during operation. This can cause problems controlling the mainboard fan.

Removing and installing the rear fan

To access the rear main memory slots, you must remove the rear fan.


Removing the rear fan

- Requirement: open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Disconnect the fan cable from the mainboard.

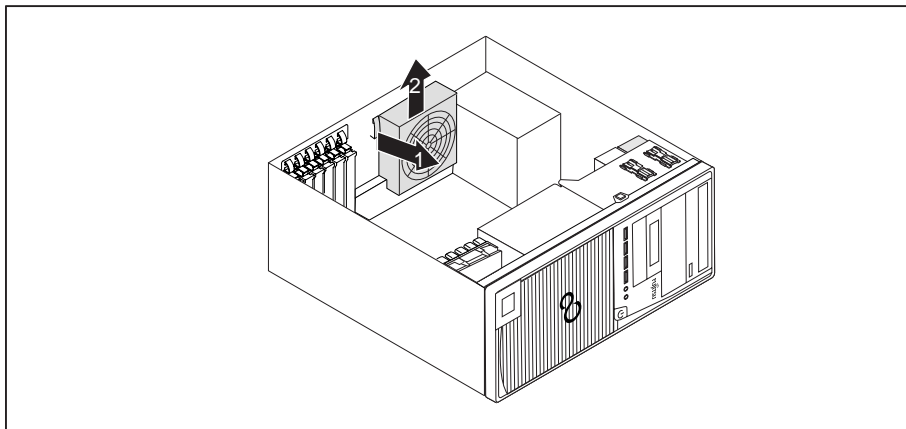

- ▶ Press the catch of the fan in the direction of the arrow (1) so that the fan releases from the location.
- ▶ Remove the fan from the casing (2).

Installing the rear fan

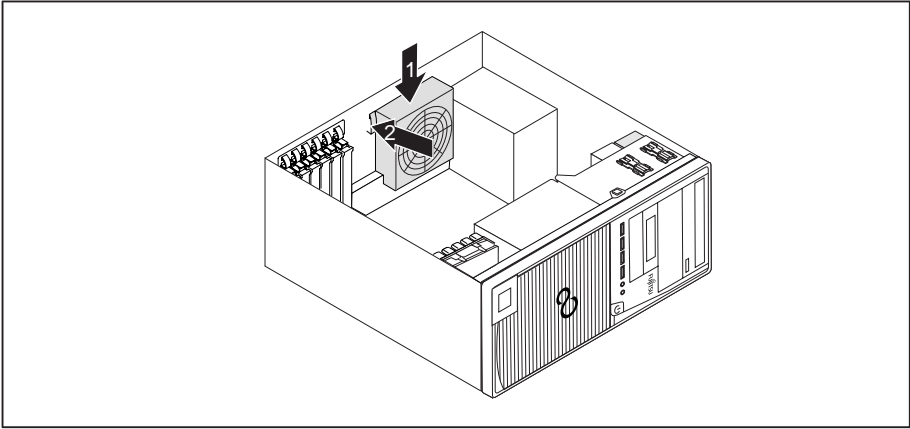


- Position the fan in the casing (1) and ensure that the catch (2) engages in the openings on the back of the device.
- Connect the fan cable to the mainboard.

Removing and installing the hard disk fan


To access the front main memory slots, you must remove the hard disk fan.

Remove the hard disk fan

- Requirement: open the casing (see ["Opening the casing", Page 36](#)).
- ▶ Disconnect the fan cable from the mainboard.

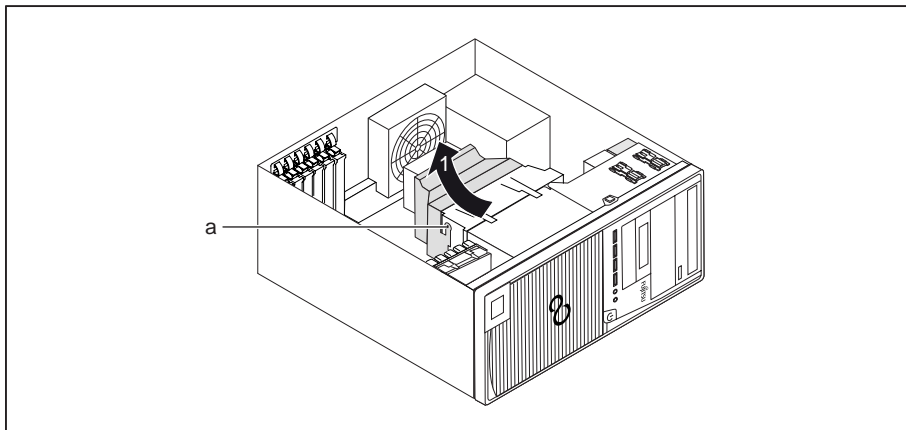


- ▶ Swivel the hood in the direction of the arrow (1) until the guide on the fan (a) fits through the grooves of the hood.
- ▶ Unhook the hood.
- ▶ Remove the hood from the casing.

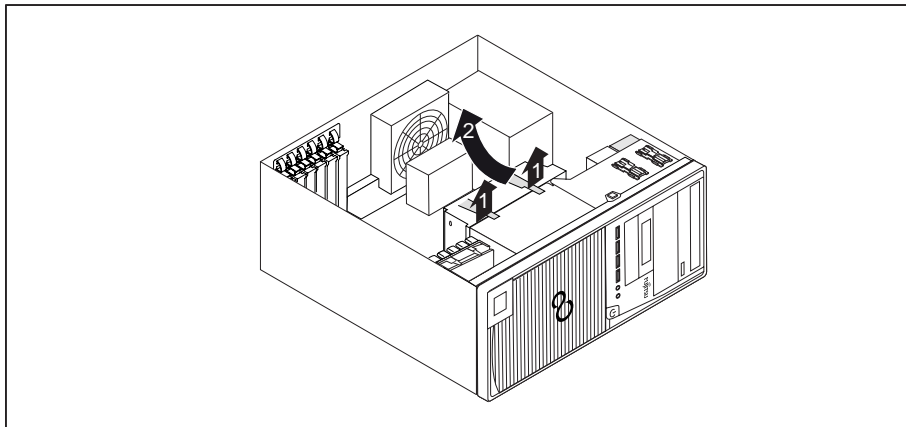


- ▶ Move the catches of the fan in the direction of the arrow (1) so that the fan releases from the location.
- ▶ Remove the fan from the casing (2).

Install the hard disk fan

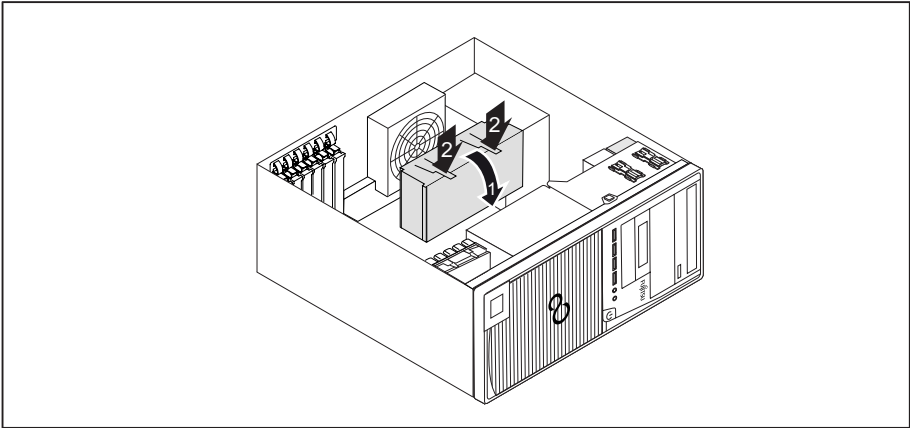

- Insert the fan in the casing (1) and ensure that the catches (2) engage.
- Connect the fan cable to the mainboard.

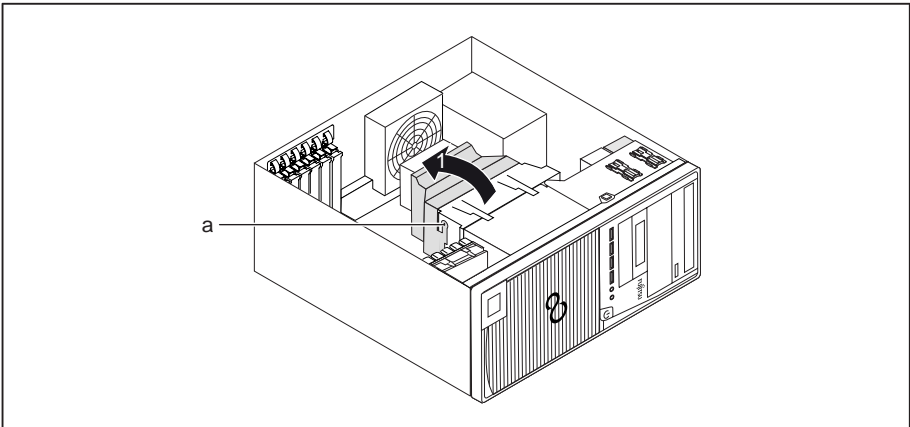

- Position the hood in the casing and slide the grooves of the hood into the guides on the fan (a).
- Carefully fold the hood down (1) until you feel it latch into place.

Installing a 4 port SAS upgrade ROM

Proceed as follows to install the 4 port SAS upgrade ROM mass storage controller:

- Open the casing (see ["Opening the casing", Page 36](#)).
- Plug the upgrade ROM connector into the mainboard – refer to the mainboard manual for details.
- Close the casing (see ["Closing the casing", Page 37](#)).

Replacing the lithium battery

In order to permanently save the system information, a lithium battery is installed to provide the CMOS-memory with a current. A corresponding error message notifies the user when the charge is too low or the battery is empty. The lithium battery must then be replaced.




Incorrect replacement of the lithium battery may lead to a risk of explosion!

The lithium battery may be replaced only with an identical battery or with a type recommended by the manufacturer.

Do not dispose of lithium batteries with household waste. They must be disposed of in accordance with local regulations concerning special waste.

Make sure that you observe the correct polarity when replacing the lithium battery. The plus pole must be on the top!

The lithium battery holder exists in different designs that function in the same way.

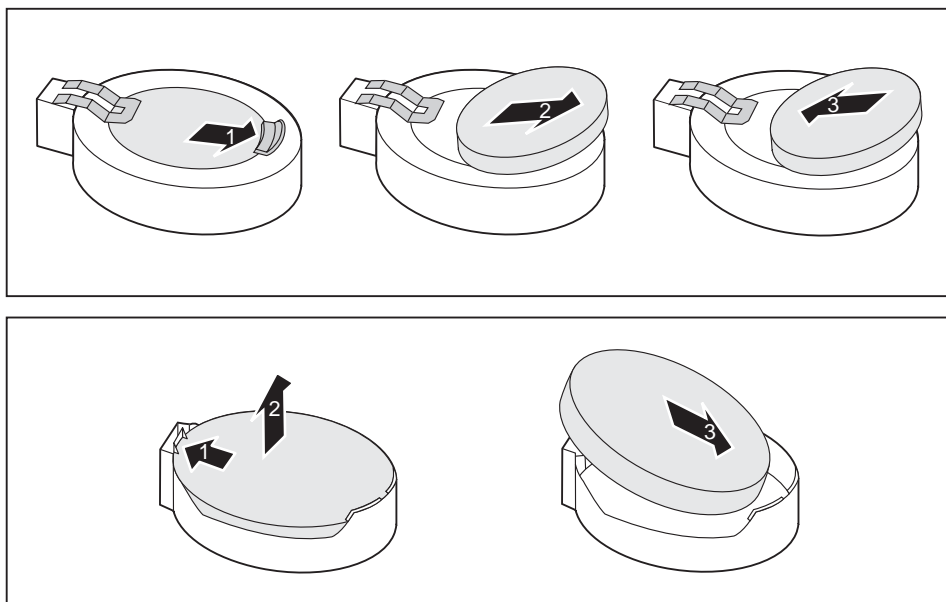

- ▶ Press the catch in the direction of the arrow (1).
- ↳ The battery jumps out of the holder slightly.
- ▶ Remove the battery (2).
- ▶ Push the new lithium battery of the identical type into the holder (3) and press it down until it engages.

Technical data

Electrical data	
Safety standards complied with:	IEC 60950-1, EN 60950-1, UL 60950 CSA 22.2 No.60950-1
Protection class:	I
Rated voltage range	100 V – 240 V
Rated frequency	50 Hz – 60 Hz
Max. rated current	
Celsius M720 Power (800W PSU), 100 V – 240 V	4 A - 9.5 A
Celsius M720 (500W PSU), 100 V – 240 V	2.5 A - 5.5 A
Dimensions	
Width/depth/height:	186 mm x 481 mm x 430 mm / 7.32 inches x 18.93 inches x 16.92 inches
Weight	
in basic configuration:	approx. 11 kg / 24.25 lbs
Ambient conditions	
Environment class 3K2	DIN IEC 721 part 3-3
Environment class 2K2	DIN IEC 721 part 3-2
Temperature	
Operation (3K2)	10 °C 35 °C / 50 °F 95°F
Transportation (2K2)	-25 °C 60 °C / -13°F 140 °F
The formation of condensation is not permitted while the device is in operation !	
Clearance required to ensure adequate ventilation:	
without air vents	min. 10 mm / 0.39 inches
with air vents	min. 200 mm / 7.87 inches



The data sheets for these devices contain further technical data. The data sheets can be found on our website at ["http://www.fujitsu.com/fts"](http://www.fujitsu.com/fts).

Index

A

Access permission, SmartCard 29
Alphanumeric keypad 25
Anti-theft protection 27
Audio input 17
Audio output 17

B

Battery 70
BIOS Setup 26
 security functions 28
BIOS Setup,
 configuration 26
 settings 26
 system settings 26
Board
 installing 61
 removing 63
Board,
 installing 61
 removing 61
Button,
 ON/OFF switch 25

C

Cable
 connecting 16
 disconnecting 16
Casing
 Mechanical lock 28
Casing lock 28
Casing mechanical lock 28
Casing,
 closing 37
 Lead-sealing 27
 opening 36
CE marking 12
Chain 27
Components
 installing/removing 34
Connecting a PS/2 keyboard 19
Connecting,
 keyboard 19
 mouse 19
 PS/2 keyboard 19
 PS/2 mouse 19
 USB keyboard 19
Contents of delivery 14
Cord

 see Cable 16

Ctrl+Alt+Del 26
Cursor keys 25

D

Data protection 27
Device
 Connections 17
 setting up 15
Device,
 Anti-theft protection 27
 closing 37
 Lead-sealing 27
 opening 36
 switching off 22
 switching on 21–22
 transporting 10–11
 upgrades 34
Devices,
 connecting 20
Disposal 11
Drivers & Utilities DVD 11

E

Electromagnetic compatibility 12
Energy saving 11
Ergonomic
 Workstation 15
External devices
 Ports 17
External devices,
 connecting 20

F

Function keys 25

G

Getting started 14

H

Headphones 17

I

Important notes 10
Installing,
 software 20–21
 switching on for the first time 20

K

- Keyboard 25
- Keyboard port 17
- keyboard shortcuts 26
- Keyboard shortcuts 25
- Keyboard,
 - alphanumeric keypad 25
 - connecting 19
 - cursor keys 25
 - function keys 25
 - numeric keypad 25
 - port 19
- Keys 25
 - Ctrl 26
 - Ctrl+Alt+Del 26
 - Menu key 26
- Keys,
 - Alt Gr 26
 - Control 26
 - Ctrl key 26
 - cursor keys 25
 - Enter 25
 - Enter key 25
 - menu key 26
 - Num Lock 26
 - Return 25
 - shift 26
 - shift key 26
 - Start key 26

L

- LAN port 17
- Lead-sealing 27
- Line in 17
- Line out 17
- Lithium battery,
 - replacing 70
- Lock 28
- Low voltage directive 12

M

- Main memory
 - upgrading 64
- Mains adapter,
 - connecting 15
- Microphone jack 17
- Monitor port 17
- Monitor,
 - switching off 22
 - switching on 21–22
- Mouse port 17
- Mouse,

- connecting 19

N

- Note
 - safety 10
- Notes
 - CE marking 12
 - important 10
- Numeric keypad 25

O

- ON/OFF switch 25
- Overview
 - Device 5

P

- Packaging 14
- Packaging,
 - unpacking 14
- Ports 7, 17
- Preparing for first use, overview 14
- Preparing for use,
 - overview 14
- Property protection 27
- PS/2 mouse port 17
- PS/2 mouse,
 - connecting 19
 - port 19

R

- Recycling 11
- Replacing,
 - lithium battery 70
- Replacing, lithium battery 70
- Retransportation 10–11

S

- Safety information 10
- Security functions
 - BIOS Setup 28
- Security functions,
 - SmartCard 29
- Security measures 27
- SecurityLock 27
- Servicing 34
- Setup,
 - see BIOS Setup 26
- SmartCard reader,
 - operating 29
- Software,
 - installing 20–21

System expansion 34
System settings,
 BIOS Setup 26
System unit, see Device 11

T

Transportation 10–11

U

Universal Serial Bus 17
Upgrades,
 device 34

USB devices,
 connecting 20
USB port 19
USB port,
 connecting devices 20
 connecting keyboard 19
 connecting the mouse 19
User Documentation DVD 11

W

Workstation 15