

SKOPE Counterline & Slimline Chillers

CL400/600/800r-2 CC300/500/700r-2

REMOTE models



Model: CL400r-2-2SD



Model: CL600r-2-3SD

User Manual

MAN0686 Rev. 3.0 Feb. 2008 edition

SKOPE[®]
Refrigeration

SKOPE Counterline & Slimline Remote Chiller
Models: CL400/600/800r-2 & CC300/500/700r-2
User Manual

MAN0686

Rev. 3.0 Feb. 2008 edition.

Copyright © 2007

SKOPE Industries Limited.

All rights reserved.

SKOPE Industries Limited reserve the right to alter specifications without notice.

SKOPE[®] is a registered trade mark of SKOPE Industries Limited.

TRADE MARK INFRINGEMENT

The SKOPE trade mark on this product is infringed if the owner, for the time being, does any of the following:

- Applies the trade mark to the product after their state, condition, get-up or packaging has been altered in any manner
- Alters, removes (including part removal) or obliterates (including part obliteration) the trade mark on the product
- Applies any other trade mark to the product
- Adds to the product any written material that is likely to damage the reputation of the trade mark

Notice of the above contractual obligations passes to:

- Successors or assigns of the buyer
- Future owners of the product

TABLE OF CONTENTS

SPECIFICATIONS

Cabinet and Refrigeration Unit	4
--	---

INSTALLATION

Safety Information.	5
Installing the Cabinet	6
Refrigeration System	8

OPERATION

Cabinet Operation.	10
----------------------------	----

ELECTRONIC CONTROLLER

Controller Display	12
Temperature Setpoint.	14

SERVICING

Troubleshooting	15
Lighting	18
Contact Addresses	19
Warranty	19

SPECIFICATIONS

Cabinet and Refrigeration Unit

Cabinet Construction			
Finish:	Stainless steel or powdercoated galvanised steel		
Insulation:	50mm thick, polyurethane foam Cyclo-iso Pentane blowing agent: C ₅ H ₁₀ /C ₅ H ₁₂		
Dimensions			
Models:	CL400r-2 CC300r-2	CL600r-2 CC500r-2	CL800r-2 CC700r-2
Doors:	2 Door	3 Door	4 Door
Height:	725mm*	725mm*	725mm*
Width:	1455mm	2065mm	2675mm
Depth:	680mm**	680mm**	680mm**
Floor area:	0.99m ²	1.40m ²	1.82m ²
Internal volume:	390 litres	600 litres	810 litres
Electrical			
Power supply:	220-240 V a.c. 50 Hz, single phase power supply		
Run Amps:	0.35 Amps	0.46 Amps	0.66 Amps
Interior light:	1 x 21 Watt	1 x 35 Watt	2 x 21 Watt
Refrigeration Unit			
Product temp:	+1°C to +4°C		
Rated ambient:	32°C at 65% RH		
Evap. capacity:	480 Watts	615 Watts	850 Watts
Evaporator:	CLS9902R		
TX valve - R134a	VAL7923		
TX valve - R404A	VAL9641		
TX valve - R22	VAL9643		
Orifice:	'0X' REF9761	'00' REF7596	'00' REF7596
Refrigeration tail Ø:	Liquid line: 1/4" Suction line: 3/8"		
Drain Ø:	19mm O.D.		

* Height excludes castors or legs ** Depth with optional worktop is 700mm (additional 20mm)

Table 1: Specifications

INSTALLATION

Safety Information

When using any electrical appliance, safety precautions should always be observed. Read these instructions carefully and retain for future reference.

- When used by, or near, young children or infirm persons, close supervision is necessary. Young children should be supervised to ensure that they do not play with the appliance.
- Do **NOT** use this appliance for other than its intended use.
- Do **NOT** cover the grilles or block the entry or exhaust of airflow by placing objects up against the refrigeration unit.
- Do **NOT** probe any opening.
- Do **NOT** overload the power supply. See the rating label inside the cabinet for power supply and current draw.
- Only use this appliance with voltage specified on the rating label.
- Ensure adequate ventilation of the SKOPE refrigeration unit.
- Be careful not to touch moving parts and hot surfaces.
- Regulations require that all electrical work be carried out by authorised persons. For your own safety, and that of others, ensure this is done.
- If the supply cord becomes damaged, it must be replaced by a SKOPE authorised service agent, or similarly qualified person, in order to avoid a hazard.
- This chiller is not designed to be stable in motion. Exercise caution when moving or transporting this chiller.

Caution:

Disconnect the cabinet from the mains power supply before attempting any cleaning or maintenance.

INSTALLATION

Installing the Cabinet

Castors / Legs

If your SKOPE Counterline Chiller has been supplied with either the optional adjustable height castors or adjustable legs (packed with the cabinet), they should be fitted to the base of the cabinet before final positioning of the chiller.

IMPORTANT: Do NOT lay the chiller onto its back when fitting the castors or legs.

Positioning

When positioning the chiller, avoid direct sunlight, and warm draughts etc. Adequate allowance should be made for door opening. The chiller must be positioned on a level surface for the doors to shut and seal correctly, and to prevent the condensate tray from overflowing.

Ventilation

For efficient operation of the chiller, it is essential that adequate ventilation be provided around the refrigeration unit. The maximum recommended operating ambient temperature is 32°C at 65% RH for standard cabinets and 40°C at 75% RH for tropical cabinets.

Warning:

Never store cardboard cartons or other items in front of the refrigeration unit. The ventilation slots in the unit front cover must be kept clear at all times.

Shelves

Remove all packaging material from the shelves. Clip the shelf support brackets into the shelf support strips, at the desired heights, and fit the shelves. The shelves may be positioned at different heights to suit various products. Always ensure that the shelf clips are securely engaged in each of the shelf support strips.

The shelf support strips are marked '+' for easy location of shelf clips and can be lifted up and removed for cleaning purposes.

INSTALLATION

Power Supply

The chiller is supplied with a 2.3m flexible power cord fitted with a 3-pin plug, which exits below the refrigeration unit front cover. Initial retrieval of the power cord is from inside the refrigeration unit compartment, behind the unit front cover. To retrieve the power cord:

1. Open the unit front cover, by undoing the bottom fixing screw and then lifting the cover up from the bottom and swing open.
2. Pull the power cord fully out from the unit compartment and remove the rubber band.
3. Push the unit end of the power cord into the grey plastic clip on the front of the unit base and close the plastic clip over the cord, ensuring it is held firmly in place (see Figure 1 below).
4. The power cord can now be run under the cabinet and plugged into a power supply socket.
5. Close the unit front cover, by lifting the cover up from the bottom and pushing firmly closed. Remember to refit the bottom fixing screw.

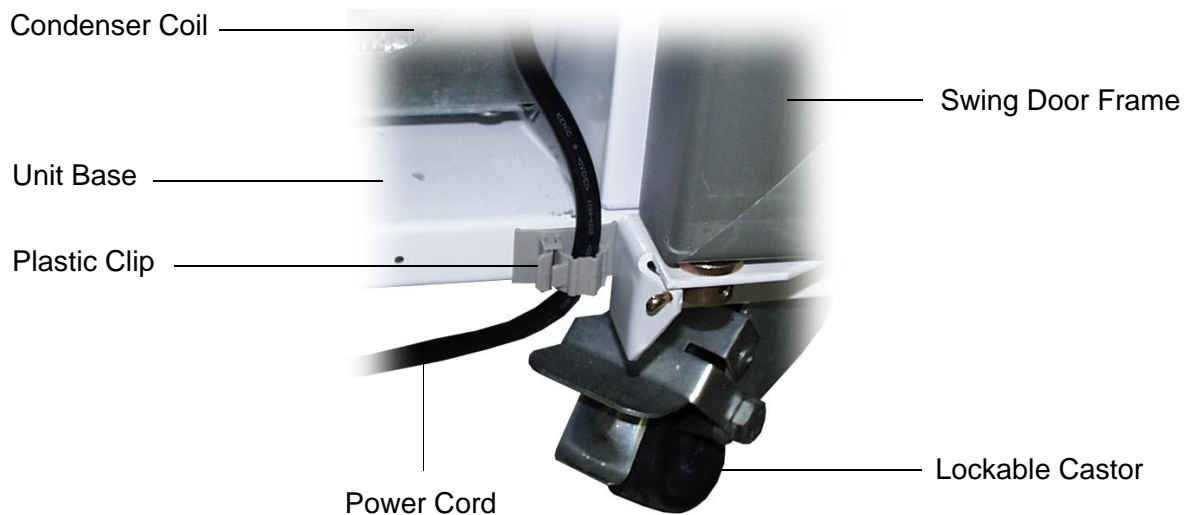


Figure 1: Power Cord Clip

INSTALLATION

Refrigeration System

Drain

A 500mm long, 19mm O.D. PVC drain hose is supplied (see Figure 2 on page 9). All drainage is to conform to local regulations, covering removal of condensate to waste water. Ensure drain is trapped with adequate fall. Venting the drain may be required for a restrictive run.

Refrigeration lines

A 1/4" liquid line and 3/8" suction line are provided to attach pipe lines to. The suction lines must be insulated.

NOTE: The electronic controller supplied with the cabinet can switch a solenoid. No solenoid is supplied with the remote unit.

Refrigeration Practice

Installation must be performed by a refrigeration tradesperson to an appropriate standard complying with all local regulations.

Performance depends on the overall installation (including condensing unit). Cabinet suitability must always be quantified for the application. The final responsibility for condensing unit performance and component selection rest with the installer. The installer must check matters such as:

- Heat load
- Refrigeration load
- Variable operating conditions (usage, ambient, humidity)
- Refrigeration pipe sizing
- Refrigeration pipe length (distance, elevation, pressure drop)
- Location and ventilation (cabinet and condensing unit)
- Drainage
- Power supply
- Unit is fully evacuated prior to charging
- All cabinet penetrations are sealed

INSTALLATION

Electrical

The cabinet is supplied with a 3-core 10 Amp mains flex and plug. The cabinet lighting and centre pillar heater elements are protected by a 3 Amp fuse, located in the unit junction box.

If a solenoid is fitted and controlled by the electronic controller, the solenoid will need connected to the connector block inside the unit junction box.

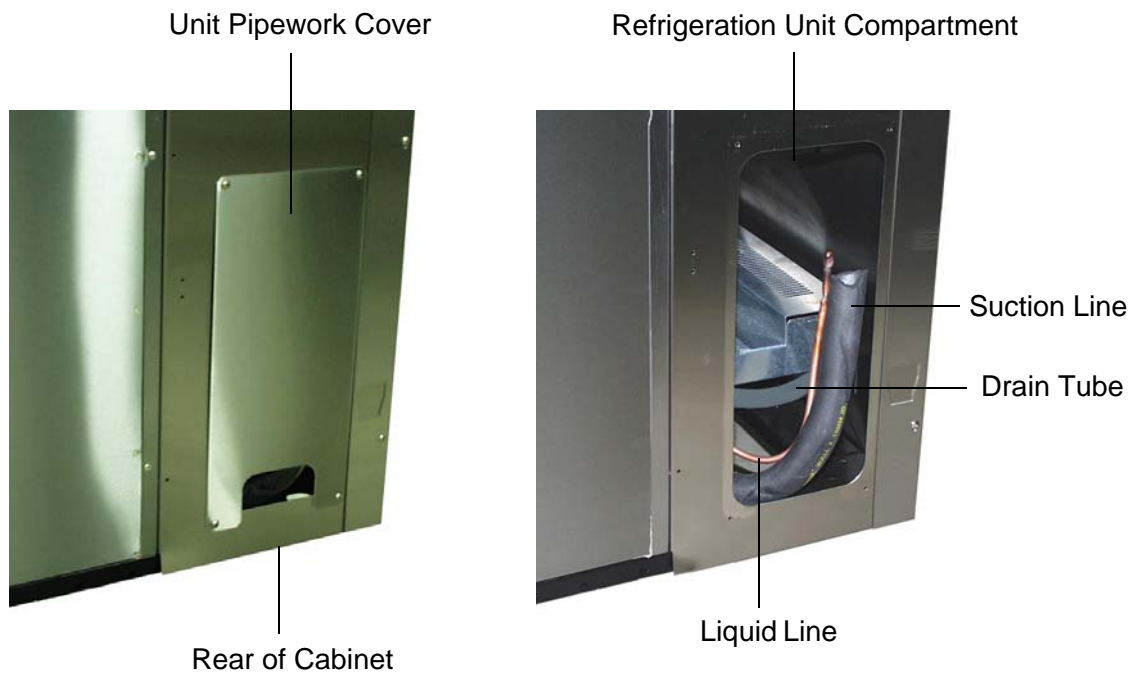


Figure 2: Refrigeration Pipework

OPERATION

Cabinet Operation

Plug in the machine and check operation of the refrigeration unit and cabinet lights. The electronic controller and evaporator fan motor should operate initially. Note: If the solenoid valve is fitted, and operated by electronic control, then the solenoid should open when compressor indicator is shown.

Checking operation

- The solenoid / compressor relay should switch off when cabinet internal temperature reaches approximately +1°C. and on again at approximately +4°C. The internal cabinet air will continue to circulate at all times.
- The light switch, located next to the electronic controller on the refrigeration unit front cover, activates the cabinet interior lighting and can be switched on or off as required.
- For efficient operation, ensure the door gaskets form a good seal with the cabinet.

Loading Product

The chiller should be left running for 30 minutes before loading with product. When loading the cabinet shelves with product:

- Allow air space around all the product, to ensure even cooling and efficient operation of the chiller. Leave airspace above product loaded on the top shelf and leave a gap of approx. 50mm next to the return air grille between the cabinet interior and the refrigeration unit compartment.
- Do not allow products to overhang the front of the shelf as this could prevent the doors from shutting or cause glass breakage. .
- Do not exceed a maximum loading of 195 kg/m².
- Remove some product if the shelves are flexing or bending.

OPERATION

Cleaning

When necessary, wash both the interior and exterior of the cabinet with soapy water. Ensure the machine is disconnected from the mains power supply before washing the cabinet with water.

The shelf support strips can be lifted up and removed for cleaning purposes. Exterior of cabinet may be waxed with automobile polish for extra protection.

Caution:

Disconnect the chiller from the mains power supply before washing the cabinet with water.

ELECTRONIC CONTROLLER

Controller Display

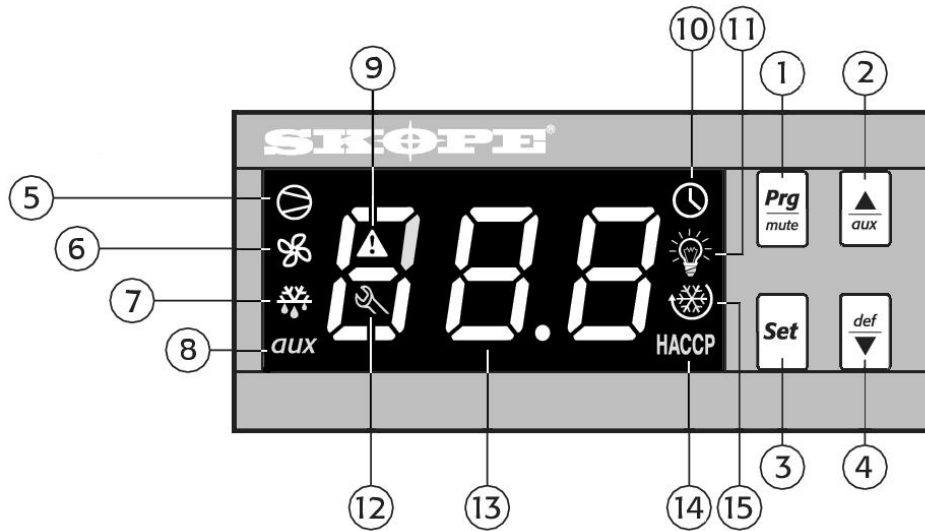


Figure 3: Controller Display

Keypad

ITEM	KEY	FUNCTION
1		Prg / mute: To initiate programme sets, press for 5 seconds. Mutes the audible alarm (buzzer) and deactivates the alarm relay.
2		UP / aux: To scroll settings UP (in programme mode).
3		Set: If pressed for more than 2 seconds displays and / or enables changing the temperature setpoint (see page 14).
4		DOWN / def: To scroll settings DOWN (in programme mode).

Table 2: Keypad Functions

ELECTRONIC CONTROLLER

Icons









ITEM	ICON	FUNCTION
5		COMPRESSOR: ON when the compressor and condenser fan starts. Flashes when activation of the compressor is temporarily delayed.
6		FAN: n.a.
7		DEFROST: ON when the defrost is activated. Flashes when the activation of the defrost is temporarily delayed due to procedures in progress.
8	<i>AUX</i>	AUX: n.a.
9		ALARM: Flashes in the event of alarms.
10		CLOCK: n.a.
11		LIGHT: n.a.
12		SERVICE: Flashes in the event of malfunctions.
13		DISPLAY: Shows the cabinet temperature.
14	HACCP	HACCP: n.a.
15		CONTINUOUS CYCLE: n.a.

Table 3: Icon Functions

ELECTRONIC CONTROLLER

Temperature Setpoint

The chiller temperature setpoint is factory set at 1.0°C. If necessary the standard setting can be adjusted between 0.5°C and 3.5°C (see Table 4 below).

SKOPE do not recommend that the setpoint be changed unless it is absolutely necessary, and then only by small increments at a time.

To View and Adjust the Temperature Setpoint:

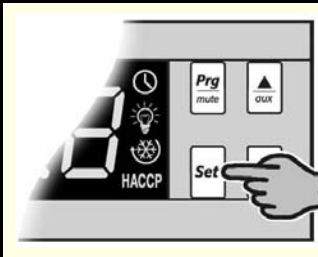
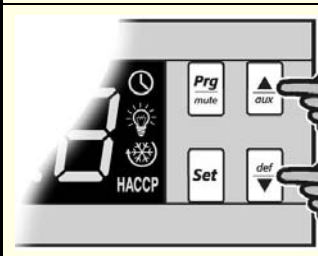
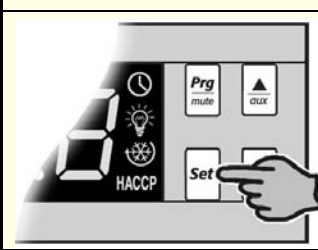
	<p>1. To view the setpoint: press and hold the SET key for 2 seconds, until the setpoint value flashes.</p>
	<p>2. To adjust the setpoint: press either the UP or DOWN keys to display the required setpoint value.</p>
	<p>3. Press the SET key again to memorise the new setpoint value. If this is not done within 60 seconds, changes will be lost and you will need to repeat the above procedure.</p>

Table 4: Viewing and Adjusting the Temperature Setpoint

Troubleshooting

Complaint	Possible Cause	Repair
1. Cabinet not operating and no controller display:	<ul style="list-style-type: none">• Loss of power supply.	<ul style="list-style-type: none">• Check mains power supply.
2. Cabinet lights not operating:	<ul style="list-style-type: none">• Blown cabinet fuse.• Failed fluorescent tube.• Controller alarm.	<ul style="list-style-type: none">• Requires technical repair by a SKOPE Authorised Service Agent.• Check fluorescent tubes.• Determine cause and eliminate (see pages 16-17).
3. Power consumption is higher than expected:	<ul style="list-style-type: none">• Unit operating too hot.• Cabinet door is opened excessively.	<ul style="list-style-type: none">• Clean condenser. Ensure the chiller is installed with good ventilation around the refrigeration unit.• Keep door/s open for minimum time.
4. Product is too warm and spoiling:	<ul style="list-style-type: none">• Restricted cabinet airflow.• Temperature setpoint is too warm.	<ul style="list-style-type: none">• Ensure product is not blocking airflow slots and there is air space around all the product.• Adjust setpoint (see page 14).
5. Warm cabinet temperatures and/or compressor operating for long periods (more than 1 hour):	<ul style="list-style-type: none">• Blocked condenser.• Poor refrigeration unit ventilation.	<ul style="list-style-type: none">• Clean condenser.• Ensure the cabinet is installed with good ventilation around the refrigeration unit.

Table 5: Troubleshooting

SERVICING

Controller Alarms




















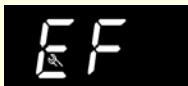



CODE	DISPLAY ICON	ALARM DESCRIPTION
	 Flashing	Product HIGH temperature alarm
	 Flashing	Product LOW temperature alarm
	 Flashing	Refrigeration system high temperature pre-warning
	 Flashing	Refrigeration system high temperature shutdown
	 Flashing	Ambient probe fault
	 Flashing	Evaporator probe fault
	 Flashing	Condenser probe fault
	None	Defrost over-time limit
	 Flashing	Real-time clock fault
	 Flashing	Controller E prom error
	 Flashing	Controller E prom error
	None	Start defrost request
	None	End defrost request

Table 6: Controller Alarms

SERVICING

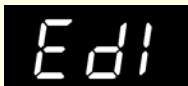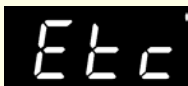INITIAL ACTION	FINAL ACTION
<ol style="list-style-type: none"> 1. Check the cabinet product loading to ensure ventilation slots are not blocked and that product does not overhang the shelves. 2. Ensure the cabinet is installed with good refrigeration unit ventilation. 3. Check and clean the condenser coil. 4. Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. 	<p>If alarm persists, contact SKOPE.</p>
<ol style="list-style-type: none"> 1. Clean the condenser coil. 2. Check refrigeration ventilation. Ensure clear airpath at the top and front of the cabinet (to extract hot air). A minimum of 200mm clear space is required in front of the refrigeration unit. 3. Ensure the cabinet is installed in a suitable environment. 4. Unplug cabinet from the power supply for 1 minute, then reconnect to power supply. 	
<p>Unplug cabinet from the power supply for 1 minute, then reconnect to power supply.</p>	
<p>None</p>	<p>None</p>

Lighting

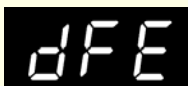Cabinet Interior Lights

Depending on the model cabinet, the chiller is fitted with either one or two fluorescent tubes. See Table 7 below for the correct tube size.

Model	Fluorescent Tube	Qty
2 Door	21 Watt T5 fluorescent tube (Ø16mm x 850mm)	1
3 Door	35 Watt T5 fluorescent tube (Ø16mm x 1450mm)	1
4 Door	21 Watt T5 fluorescent tube (Ø16mm x 850mm)	2

Table 7: Fluorescent Tube Sizes

To Replace a Fluorescent Tube:

1. Disconnect the cabinet from the mains power supply.
2. Remove the top light diffuser, by compressing the back section of the diffuser until it disengages from the aluminium housing and then push the diffuser back (see Figure 4 below).
3. The fluorescent tube can now be removed by revolving the tube until the pin position allows withdrawal.
4. When refitting the light diffuser, engage the back section into the housing, and then compress and snap the front section of diffuser back into place working along the full length of the light.

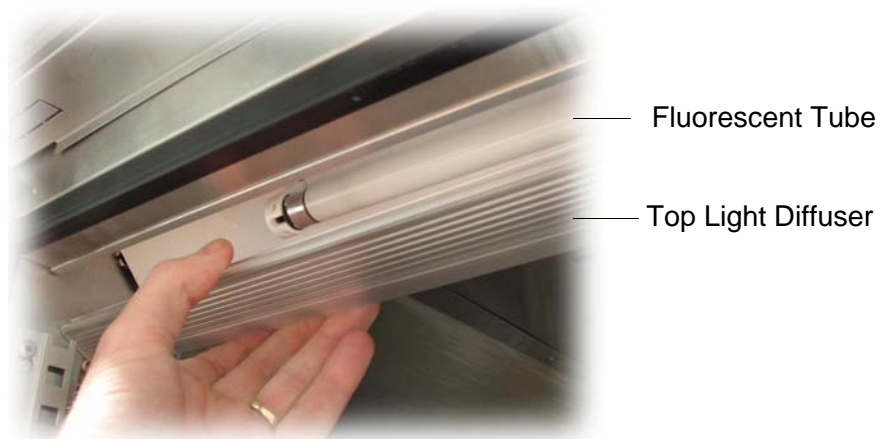


Figure 4: Replacing the Fluorescent Tube

Contact Addresses

New Zealand

SKOPE INDUSTRIES LIMITED

Head Office

PO Box 1091, Christchurch

New Zealand

Freephone: 0800 947 5673

Fax: (03) 983 3896

E-mail: enquiry@skope.co.nz

Website: www.skope.co.nz

Australia

SKOPE AUSTRALIA PTY LTD

A.C.N. 000 384 270

PO Box 7543, Baulkham Hills B.C.

NSW 2153, Australia

Freephone: 1800 121 535

Fax: 1800 121 533

E-mail: enquiry@skope.com.au

Website: www.skope.com.au

Warranty

To receive a warranty for your purchased cabinet, you **MUST** register your cabinet within four weeks from the date of invoice either by:

- filling out the in-cabinet warranty form and posting or faxing it back to SKOPE
- or filling out the online warranty form.

Cabinets that are not registered within the four weeks are not eligible for a warranty.