

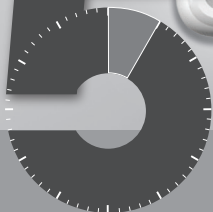
Hunter

Owner's Manual

English



5 MINUTE
INSTALLATION



Model
44372
44377

7 Day Programmable
M T W T F S S

Form# 44040-01
20100511
©2010 Hunter Fan Co.

Table Of Contents

At A Glance

Know Your Thermostat	3
----------------------------	---

Setup

Setting Day and Time	10
----------------------------	----

Scheduling

Scheduling Introduction	12
-------------------------------	----

Personal Scheduling Charts	13
----------------------------------	----

Setting Your Schedule	14
-----------------------------	----

Temporary Temperature Change	20
------------------------------------	----

Turning Off Scheduling	22
------------------------------	----

Home Today	24
------------------	----

Save Away	26
-----------------	----

Features

Alerts	28
--------------	----

Menu Options	32
--------------------	----

Energy Saver Bar	38
------------------------	----

Additional Features	40
---------------------------	----

Thermostat Assistance

Troubleshooting and Support	41
-----------------------------------	----

Technical Support	43
-------------------------	----

Warranty

1 Year Guarantee	44
------------------------	----

Your thermostat has been pre-programmed from the factory with no programming necessary. We recommend using these pre-programmed settings for a few days before altering them as they offer maximum energy saving benefits. If you do decide to alter your programs, use the charts on page 13 to write out your scheduled times and temperatures. After you have recorded your preferences, follow the instructions on page 14 to alter your temperature settings.

There is no need to program the thermostat at the wall it is mounted to! Remove the thermostat from the backplate by gripping the sides firmly and pulling it straight off. This allows you to program the thermostat in comfort.

After you have programmed your thermostat, no other setting changes are necessary unless you wish to browse through the menu to see how you may further adjust the independent settings of your thermostat to meet your lifestyle. The features section starting on page 32 of this manual will describe these settings. Most settings have been preset for optimal performance.

If you need any assistance with installation or setup of your new Hunter Thermostat, please call us, our technical support staff are ready to help!

USA: 1-888-830-1326

Canada: 1-866-268-1936

Hours of operation are from 7:00 am to 7:00 pm Monday - Friday and 8:00 am to 5:00 pm on Saturday, Central Time. You may also contact us over the Internet at:

www.hunterfan.com

1. Enters Schedule Setup for altering scheduled programs.
2. Sets the Home Today feature for when you are home during a regularly scheduled Away period.
3. Sets the Save Away feature for when you will not be home during a regularly programmed time.
4. Confirms completion of an action or returns you to the Home screen.
5. Allows access to the advanced features of the thermostat.
6. Moves you forward or backward while setting up features or schedules.
7. Adjusts time and temperature settings as well as moving up or down menu lists.
8. Indicates whether the system is set to Heat, Cool, or Off.
9. Shows if the fan is set to Auto or On modes.
10. Allows you to switch between Heat, Cool, and Off modes.
11. Allows you to switch between fan Auto and On modes.

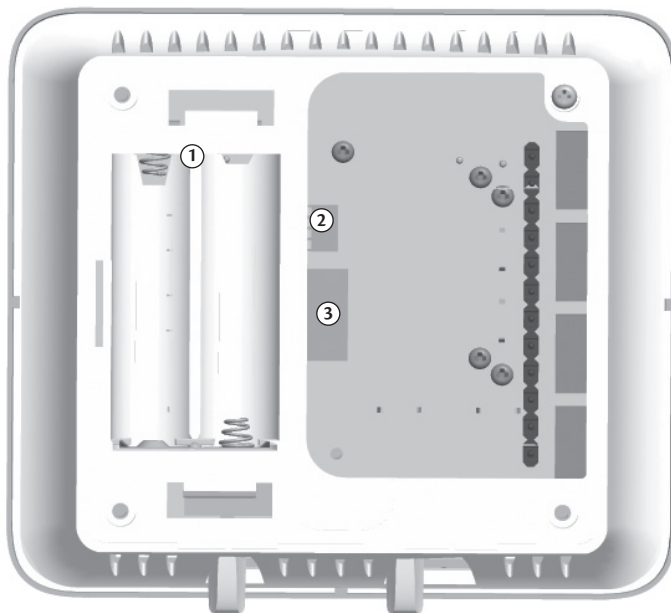


1. Holds 2 "AA" Batteries.
2. HE/HG Switch - allows you to set your furnace to Gas/Oil or Electric, based on the type of system you have.
3. Conventional/Heat Pump System Switch - Allows your thermostat to operate your HVAC system properly by selecting the system type that you have.

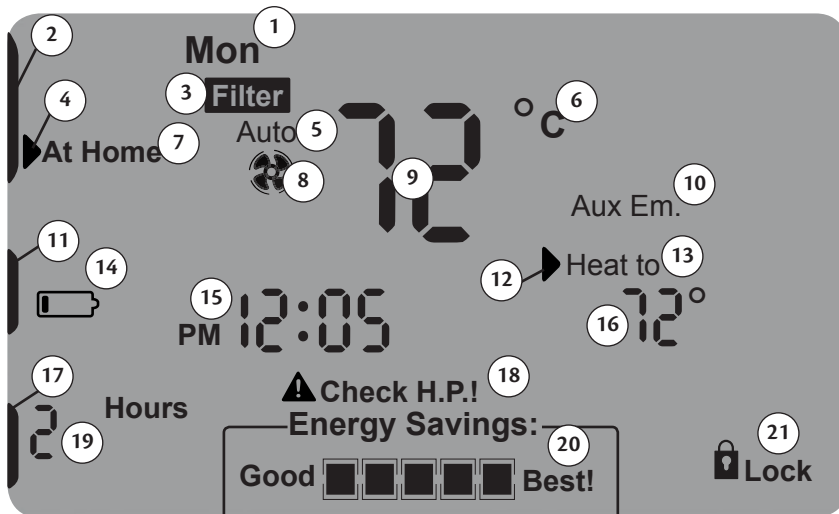
* **Conventional System:** Uses a condensing unit for cooling and a separate furnace system for heating.

* **Heat Pump System:** Uses the condensing unit for both heating and cooling.






NOTE: If you are unsure of your system type it may be necessary to contact our technical support department, your HVAC manufacturer, or a local HVAC technician to determine this. Improper selection of your system type could cause the thermostat to not operate your system properly.



1. Shows the current day of the week or weekend.
2. Indicates the thermostat is running in schedule mode.
3. Flashes when the furnace filter should be checked for replacement.
4. On when the current schedule period is running.
5. Shows the current mode of the fan: Auto or On.
6. C will display when in Celsius mode. Nothing will display when set to Fahrenheit.
7. Indicates the current active schedule period.
8. Shows the system fan is running.
9. Indicates the current room temperature.
10. Indicates your Heat Pumps Auxiliary Heat is running.
11. Shows when the Home Today feature is running.
12. On when the current operating mode, heat or cool, is running.
13. Current operating mode, heat or cool.
14. Low battery warning, indicates you need to replace the batteries in the thermostat.
15. Indicates the current time in am or pm .
16. Current Set temperature the thermostat is scheduled to run.
17. Indicates the Thermostat is running in save away mode.
18. Will show when your heat pump or system is reporting a problem to the Thermostat.
19. Indicates in hours or days how long the Save Away period is set for.
20. Energy saver bar helps you make decisions on conserving energy.
21. Indicates the thermostat is locked and will not accept input.



Once you install the batteries, the thermostat will prompt you to set the current day and time.

1. You will notice that “Mon” will be flashing at the top left of your screen. Use the \oplus or \ominus buttons to move to your current day of the week and press the  button to advance to the next step.
2. Use the \oplus or \ominus button to change between am and pm. Choose  to advance.
3. Next you will select your current hour by using the \oplus or \ominus buttons. The  button advances you to the next step.
4. Set your minutes using the \oplus or \ominus and press  to finish or  if you need to make a correction to a previous step.
5. When finished, the thermostat will show “Updated!” to confirm your settings are saved.
6. Your thermostat will next prompt you to set your programming, see page 14 step 2 if you wish to alter your programs at this time.

1-2 *Hunter*

Schedule  **Mon**  

Home Today **PM 12:05**

Save Away

  Done/Home  Menu 

3 *Hunter*




Schedule  **Mon**  

Home Today **PM 12:05**

Save Away




  Done/Home  Menu 

4 *Hunter*

Schedule  **Mon**  

Home Today **PM 12:05**

Save Away

  Done/Home  Menu 

5 *Hunter*




Schedule   

Home Today **Updated!**

Save Away

  Done/Home  Menu 

Read the scheduling section thoroughly to ensure you understand your scheduling options and which will best fit with your lifestyle. The following notes should help you with scheduling:

- *The schedule time can be set in 15 minute increments, and remains the same for both Heat and Cool programs.
- *The scheduled temperature can be set in increments of 1°F (1°C).
- *After 15 minute without a key press, the thermostat will return to the home display screen.
- *When setting the schedule time, note the AM / PM indicator.
- *At any stage during your scheduling, you can use the  or  buttons to move forward or backwards through the steps.  will save any changes, even if you have not scheduled or altered all settings.
- *Arrows beside each schedule mode and beside heat/cool modes will indicate which ones are active.



This thermostat has been pre-programmed to provide optimal energy savings. No programming is necessary. We recommend you run these programs for a few days before adjusting your programming. If it is necessary to change these settings, use the scheduling table on the next page to record your new settings. You will also find the default schedule there as well.

Default Schedule	Day	Away	Asleep	Home	
	Monday-Friday	Start Time: 8:00am End Time: 4:00pm Heat Temp: 60°F (16°C) Cool Temp: 85°F (29°C)	Start Time: 10:00pm End Time: 6:00am Heat Temp: 60°F (16°C) Cool Temp: 82°F (28°C)	Heat Temp: 68°F (20°C) Cool Temp: 78°F (26°C)	
		Saturday	Start Time: 8:00am End Time: 4:00pm Heat Temp: 60°F (16°C) Cool Temp: 85°F (29°C)	Start Time: 10:00pm End Time: 6:00am Heat Temp: 60°F (16°C) Cool Temp: 82°F (28°C)	Heat Temp: 68°F (20°C) Cool Temp: 78°F (26°C)
			Sunday	Start Time: 8:00am End Time: 4:00pm Heat Temp: 60°F (16°C) Cool Temp: 85°F (29°C)	Start Time: 10:00pm End Time: 6:00am Heat Temp: 60°F (16°C) Cool Temp: 82°F (28°C)






*The Home schedule automatically calculates the remaining times from Away and Asleep and assigns them the Home temperature.

Alternate Schedule	Day	Away	Asleep	Home	
	Monday-Friday	Start Time: End Time: Heat Temp: Cool Temp:	Start Time: End Time: Heat Temp: Cool Temp:	Heat Temp: Cool Temp:	
		Saturday	Start Time: End Time: Heat Temp: Cool Temp:	Start Time: End Time: Heat Temp: Cool Temp:	Heat Temp: Cool Temp:
			Sunday	Start Time: End Time: Heat Temp: Cool Temp:	Start Time: End Time: Heat Temp: Cool Temp:

Note: Use a pencil so these records may be changed at a later time if necessary.

1. Press the  Button to enter Scheduling mode.
2. Use the \oplus or \ominus buttons to select "On" and then  to move forward to Scheduling.

Note: If you do not wish to use the scheduling option on your thermostat, refer to page 22, step 2.

3. Monday will be flashing on the screen, to proceed with scheduling, press . If you wish to start programming another day, press the \oplus or \ominus button until it shows at the top of the screen and press .
4. By default "Away" will be flashing on screen to start your scheduling. Use the  button to proceed to the next step.
5. Use the \oplus or \ominus buttons to adjust the start time on the left of the screen for the period and press . Again you will use the \oplus or \ominus buttons to adjust the end time on the right of the screen for this scheduled period. Press  again.

1

Hunter

Schedule

Mon

At Home Auto 72°

AM 8:00 Heat to 70°

Energy Savings: Good [Progress Bar] Best!

Home Today

Save Away

Back Done/Home Menu Next

2

Hunter

Schedule

Off

Schedule On

Home Today

Save Away

Back Done/Home Menu Next

3

Hunter

Schedule

Mon Tues Wed Thu Fri Sat Sun

Home Today

Save Away

Back Done/Home Menu Next

4-5

Hunter

Schedule

Away Mon

Asleep

At Home

AM 8:00 to 4:00 PM

Energy Savings: Good [Progress Bar] Best!

Home Today


Save Away

Back Done/Home Menu Next

6. Set the temperature for your heating cycle as indicated by the flashing "Heat to" icon on your screen. Use the \oplus and \ominus buttons to change the temperature and press $\boxed{\text{Next}} \triangleright$. You will be asked to set your cooling cycle, indicated by the flashing "Cool to". Set this temperature with your \oplus or \ominus buttons and hit $\boxed{\text{Next}} \triangleright$.
7. The thermostat will start this process again for "Asleep". Repeat steps 1-5 to schedule the time and set the temperature for your sleep period. When finished pressed $\boxed{\text{Next}} \triangleright$ to get to "At Home"
8. When setting "At Home", you will only be asked to set a temperature. The thermostat calculates your "At Home" time by what remains unscheduled from your "Away" and "Asleep" periods. Set your "Heat To" temperature first and press $\boxed{\text{Next}} \triangleright$, then Set your "Cool To" temp and press $\boxed{\text{Next}} \triangleright$ To finish Scheduling your current day.
9. When you have completed scheduling your day, the screen will flash "Schedule Updated!" and return you to the day select screen.

6

Hunter

Schedule  **Mon**

Away
Asleep
At Home

70 °

AM 8:00 to 4:00 PM

Heat to
Cool to

Energy Savings: Good  Best!

Home Today

Save Away

Back Done/Home Menu Next

+

-

7

Hunter

Schedule  **Mon**

Away
Asleep
At Home

70 °

PM 10:00 to 6:30 AM

Heat to
Cool to

Energy Savings: Good  Best!

Home Today

Save Away

Back Done/Home Menu Next

+

-

8

Hunter

Schedule  **Mon**

Away
Asleep
At Home

72 °

Heat to
Cool to

Energy Savings: Good  Best!

Home Today

Save Away


Back Done/Home Menu Next

+

-

9

Hunter

Schedule  **Mon**

Schedule Updated!







Home Today

Save Away


Back Done/Home Menu Next


+

-

10. The day select screen will now show "Copy Day" and ask you if you wish to copy the day you just scheduled to any other days. Select "YES" and  or see step 13 for selecting "NO".
11. Select each day you wish to copy the schedule to by using the  or  buttons to turn days on or off and the  or  buttons to scroll through the days. An arrow  above each day will indicate it has been selected.

Note: The original day you schedule will not show on the screen as it is the one being copied.

12. Select  and the screen will show the days that now have the same schedule and flash "COPIED". You will be taken back to the day select screen to schedule your remaining days. Repeat steps 3-12 to finish scheduling.

Note: If you select "NO" and then  you will be asked to select the next day to schedule, bypassing the "Copy" function. Repeat steps 3-11 for each day you wish to schedule separately.

13. When all days have been scheduled, whether using the copy function or not, the screen will flash "Schedule Updated!" along with all the days, and return you to the home screen.

Note: To go back and edit schedules, you will follow the same process as outlined above.

10 *Hunter*

Schedule **Mon**

Copy Day

Home Today **YES NO**

Save Away

Back Done/Home Menu Next

11 *Hunter*

Schedule **Tues Wed Thu Fri Sat Sun**

Home Today

Save Away

Back Done/Home Menu Next

12 *Hunter*

Schedule **Mon Tues Wed Thu Fri**

Home Today **COPIED**

Save Away

Back Done/Home Menu Next

13 *Hunter*


Schedule

Home Today **Schedule Updated!**

Save Away

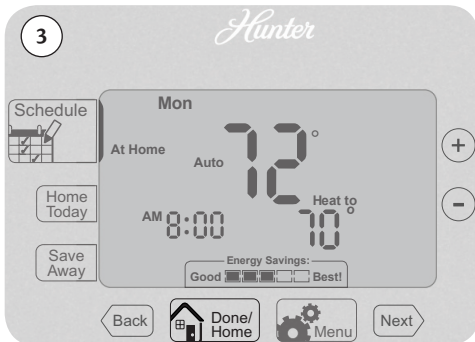
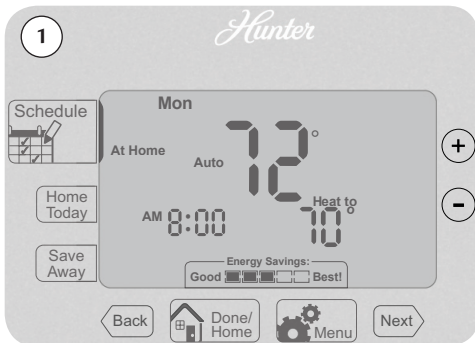
Back Done/Home Menu Next

With Temporary Temperature Change you have the ability to alter the temperature for only the current running schedule for one day.



1. Press the \oplus or \ominus button once to activate the screen, the backlight will come on.
2. Use the \oplus or \ominus buttons again to select a new temperature.
3. Press the  button to save changes.

Note: Temporary Temperature Change is not a permanent setting. Your thermostat will only run the new temperature until the next scheduled period change. After your thermostat changes to a new schedule set, your thermostat will forget the temporary setting and resume your existing schedule.

4. To escape Temporary Temperature Change, press the  button. The screen will flash "Schedule ON" to indicate the thermostat has resumed your regular schedule.





To turn off your schedule and have the thermostat permanently set to one temperature:

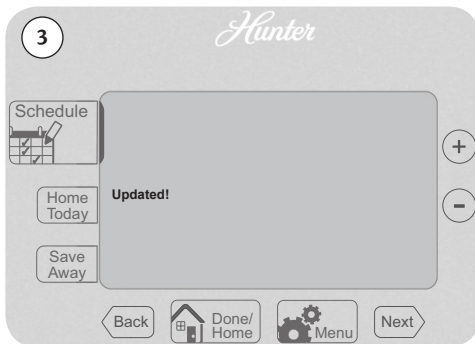
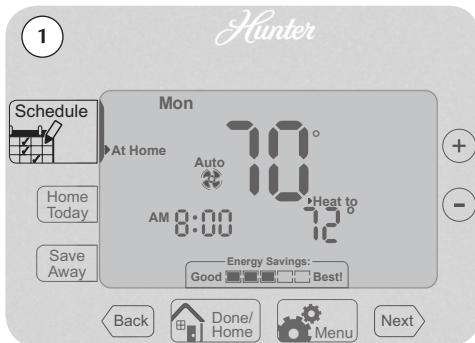
1. Press the  button once.
2. Use the \oplus or \ominus button to switch to Off and select .
3. The screen will show "Updated!" and return you to the home screen.

Note: You will notice the black bar on the screen beside the Schedule button is not displayed anymore. This indicates, no schedule is set to run. You can see the difference between figure 1 and 4.




4. From the home screen, use the \oplus or \ominus buttons to adjust your temperature.

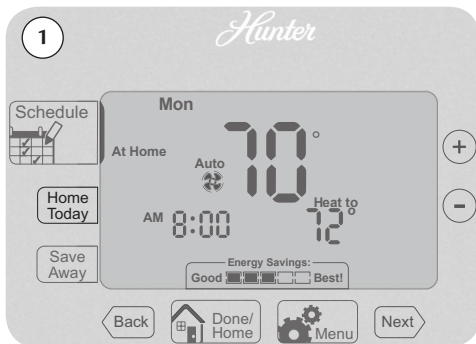
The system will now ignore all schedules and run at the temperature set by you on the home screen.

5. If at anytime you wish to change the temperature, just use the \oplus or \ominus buttons.
6. If you wish to reactivate your schedules, press the  button, use the \oplus or \ominus buttons to select "ON" and then press .





The Home Today feature allows you to override your schedule for 1 day. It can be used for example if you are home on a day when you would normally have the thermostat's "Away" mode active. When used, the Home Today feature will select your At Home temperature to run at for the course of the day until your scheduled Asleep time starts, then revert back to running your normal schedule. To activate:

1. Press the  button.
2. The current "At Home" temperature will be defaulted on the screen.
3. Press the  button and the screen will flash "Updated!". The bar beside the  button will indicate it is active.



The Save Away feature allows you to set a lower or higher temperature for the time you will be away from your home outside of your normal Away schedule. This can include days you will be away for vacation, or a few hours away from your home.



The Save Away feature can be set for as little as 1 hour or as much as 30 days. To set the save away feature:

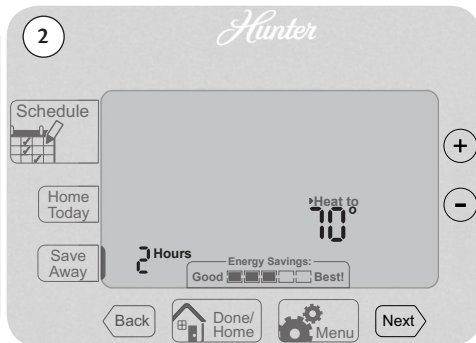
1. Press the  button.
2. You will see the number of hours or days flashing on the screen, use the \oplus or \ominus to adjust the amount of time you will be away. Press the  button to advance to your temperature setting. By default, the "Away" temperature will be selected. You can use the \oplus or \ominus to adjust the degrees if you do not want to run this temperature .

Note: Up to 12 hours can be set before changing to day increments.

3. Press the  button to finish save away settings. The screen will show "Update!" and return to the home screen.

Note: You will notice the bar will be active beside the Save Away button to indicate it is running. Also, the screen displays the number of hours or days the Save Away feature is set for. See figure 4.

Note: To escape Save Away mode, press the  button and select "ON" using the \oplus or \ominus buttons. Press  to resume your schedules.



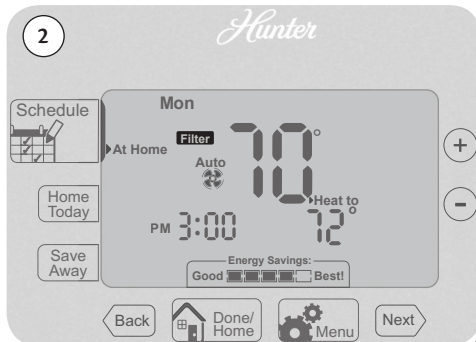
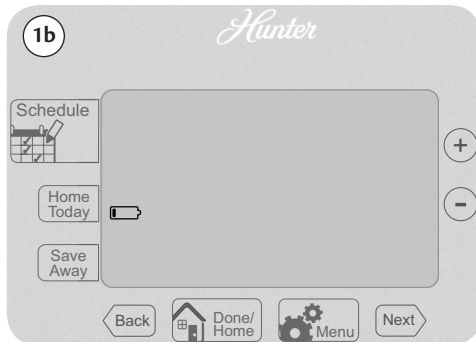
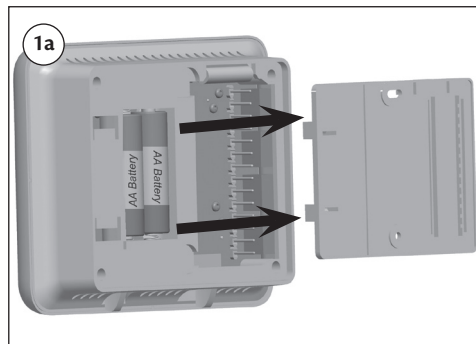
This chapter will outline the various alerts the thermostat will report to you and how to respond to them.

- 1. Low Battery:** This icon will appear when your batteries are starting to run low on power and should be changed to avoid system interruptions, (Figure 1) Change the batteries by gripping the sides of the thermostat firmly and pulling straight back, (Figure 1a). The batteries are located in the backside of the thermostat. The thermostat requires 2 (AA) alkaline batteries to operate. If you do not replace the batteries in a timely manner, the screen will go blank except for the low battery warning, (Figure 1b). Your system will shut down and will not operate until you replace the batteries. Replacing the batteries will clear this alert.

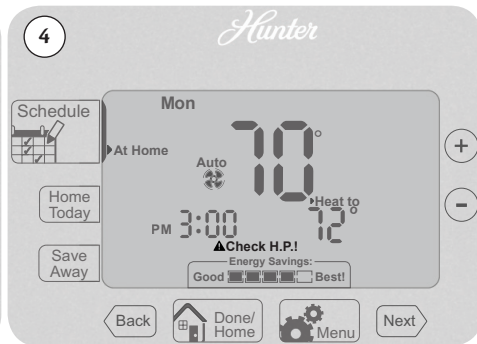
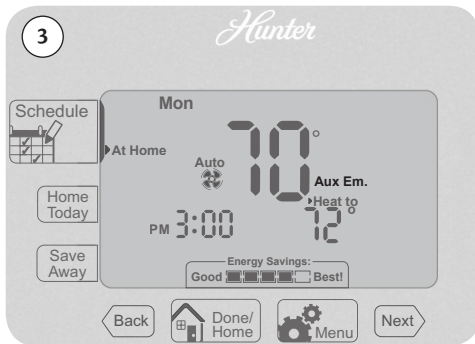
Note: Settings will not be lost while replacing the batteries. They are stored in the thermostat's memory.

- 2. Filter Change:** When this icon appears on the screen, it indicates you should check your furnace filter to see if it needs to be replaced. To reset this counter see page 32.

Alerts












- 3. Auxiliary Heat:** On multi-stage heat pumps this alert indicates your second stage heat is running.
- 4. Check System:** Some heat pump systems are equipped with the ability to check system performance, indicated by the presence of an "L" wire attached to the mounting plate. This icon will flash on screen to alert the user that the heat pump is reporting a problem with the system. It may be necessary to have the heat pump checked or serviced by an HVAC technician.

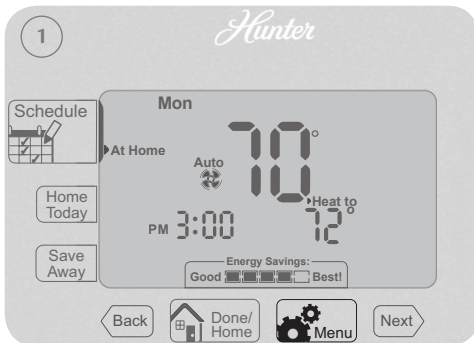


Under your menu options you have the ability to reset your filter counter, change your day/time, span settings, temperature measurement, as well as locking the thermostat. After making changes to each menu option, the thermostat will show “Updated” and save your changes.



To access these options:

1. Press the  button.
2. Once in the menu options list, use the \oplus or \ominus buttons to scroll through the menu items. The  button will take you into the selected menu item. To escape menu options, press .
3. **RESET FILTER:** If the filter indicator is flashing on the home screen you can reset it here. Use the \oplus or \ominus buttons to select “Yes”. If “No” is selected, the filter alert will not be reset, and will continue to flash on the home screen. Press , the screen will flash “Updated” and return to menu options or  to return the home screen.
4. **CHANGE DATE/TIME:** Next you are given the option of changing your day/time. You will use the same instructions as on page 10 to change these settings. The \oplus and \ominus buttons change the day of week, am/pm, hour, and minutes. The  or  buttons browse through each option. Press  after setting the minutes, the screen will flash “Updated” and return to menu options or  to return the the home screen.




Menu Options

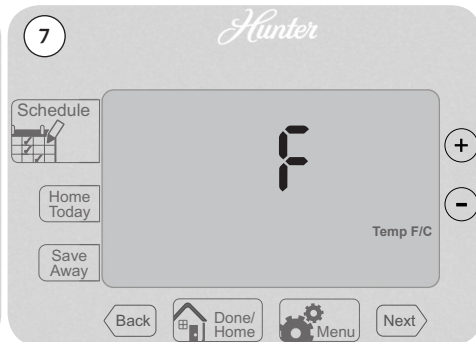
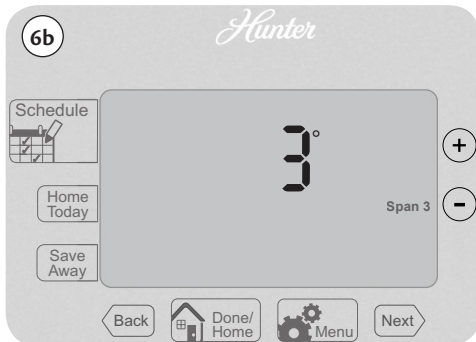
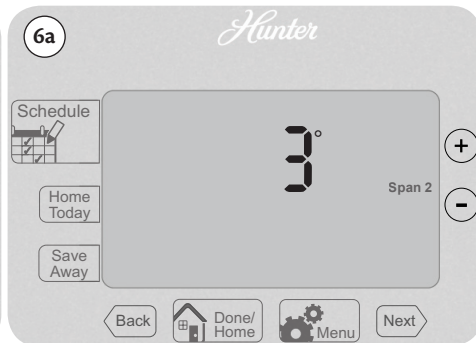
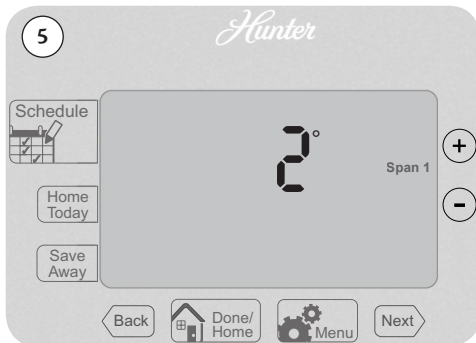


Menu Options









5. SPAN 1: The next menu option is to set your thermostats primary span. Use the \oplus or \ominus buttons to adjust between 1, 2, or 3 degrees. Press , the screen will flash "Updated" and return to menu options or press  to return to the home screen. The span setting regulates when and how long your system will run. The span has been set at the factory to 1 which will allow the system to turn on $.5^{\circ}\text{F}$ ($.05^{\circ}\text{C}$) above or below the set temperature and run for $.5^{\circ}\text{F}$ ($.05^{\circ}\text{C}$) above or below the set temperature.

Example: If your thermostat is set to turn on at 72° in heat mode, with a span setting of 2, your thermostat will activate your furnace at 71° and shut it down when it reaches 73° . For cooling at 72° with a span of 2, your air conditioner will activate at 73° and shut down at 71° . This setting can be changed to 1, 2, or 3. 1 will shorten your running time while 3 will lengthen it.

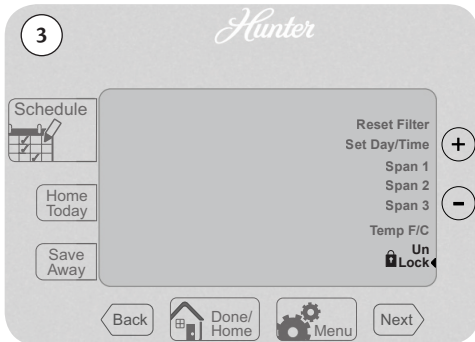
6. SPAN 2 & 3: Unless you have a multi-stage conventional or heat pump system, there is no need to change the second or third stage span. If you do, use the \oplus or \ominus buttons to adjust between 1, 2, or 3 degrees. Press  once this has been changed or if you need to make no changes. Second and third stage spans act the same as your primary, but it determines when and how long your second or third stage heat runs.
7. TEMP F/C: The thermostat can change your temperature reading between Fahrenheit and Celcius. Use the \oplus or \ominus buttons to switch between Fahrenheit (F) and Celsius (C) Press , the screen will flash "Updated" and return to menu options or press  to return the the home screen.



Menu Options

1. **LOCK/UNLOCK:** Allows you to lock the thermostat so random keypress' will not change your settings. Use the \oplus or \ominus buttons to change between "YES" and "NO". Choose "YES" to lock the thermostat or "NO" to keep the thermostat unlocked. Press , the screen will flash "Updated" and return to menu options or press  to return the home screen.
2. When locked, the thermostat will disable all keys except the  key. If any other key is pressed, the word "Lock" will appear with the  lock icon and flash 3 times to indicate the thermostat is in locked mode.
3. To unlock the thermostat, Press the  button and use the \oplus or \ominus buttons to select "UnLock" and hit .
4. Use the \oplus or \ominus buttons to select "YES" to unlock the thermostat, or "NO" to leave it locked. Press , the screen will flash "Updated" and return to menu options or press  to return the home screen.

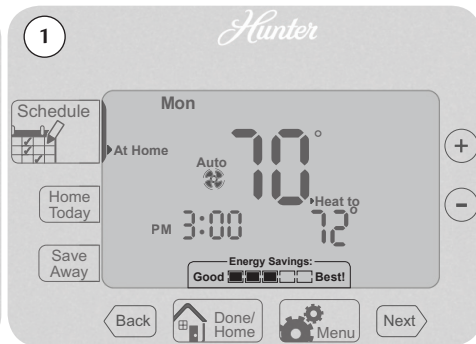
Menu Options



The Energy Saver Bar indicates estimated energy savings. The preset schedules in the thermostat have been designed to give you optimal energy savings, five bars. Altering these schedules has a direct impact on the energy saver indicator. Altering the temperatures and/or times that the schedules run could decrease the estimated energy savings.

1. Example one shows the thermostat running the default schedules in the thermostat.
2. Example two shows the thermostat running altered schedules. This example could indicate the "At Home" schedule running for a longer time frame, or the temperatures may have been altered to where there is less of a gap between the "At Home" and "away" or "Asleep" temperatures.

Note: The Energy Saver Bar is only to be used as a guide to potential energy savings. Due to varied energy consumption costs, regional temperatures, and personal comfort levels, this bar cannot be equated into actual dollar or energy amounts.



Armchair Programming

There is no need to stand at the wall where the thermostat is mounted while programming or changing settings. Simply remove the thermostat from the wall and make the necessary changes in the comfort of a chair. You can also set your programming and settings before you even install the thermostat.

Power Failure Protection

In the event that power is lost, the batteries will act as backup, saving your settings and programs.

Blue Backlight

Your thermostat has a blue LED lamp that backlights the display for easy viewing in the dark. When any key is pressed, the backlight will be activated. The display will stay illuminated for 15 seconds after the last key is pressed.

System Protection

To protect your system from cycling, system turning on and off rapidly, your thermostat will prevent your system from turning back on for up to 4 minutes after it has been shut down.

Reset

In situations where your thermostat may not seem to be operating properly or if you just want to reset and start over, press and hold the \oplus and \ominus buttons for 5 seconds until the screen flashes "Updated!". This will restore the thermostat to factory condition.

Problem:

No display.

Solution:

1. Check battery position and battery life.

Problem:

Program does not change at desired setting.

Solution:

1. Check the time in all programs for proper am/pm time.
2. Ensure thermostat is not in "Save Away" mode.
3. Make sure the thermostat is set to the proper day.

Problem:

Auto / Fan does not turn on.

Solution:

1. Move HG/HE switch to opposite position.
2. Check the fan setting and make sure that it is not set to off.

Problem:

Fan runs continuously.

Solution:

1. Check fan setting to see if it is set to on.
2. Move HG/HE switch to opposite position.

Problem:

Heating or cooling does not turn on or off.

Solution:

1. Check the system is in the right mode (heat or cool).
3. Be sure to wait up to 4 minutes for system protection if your system was just on.
4. Check breakers to make sure power is getting to your system
5. Replace the batteries.

Technical Support

If you need any assistance with installation or setup of your new Hunter Thermostat, please call us, our technical support staff is ready to help!

USA: 1-888-830-1326

Canada: 1-866-268-1936

Hours of operation are from 7:00 am to 7:00 pm Monday - Friday and 8:00 am to 5:00 pm on Saturday, Central Time. You may also contact us over the Internet at www.hunterfan.com.

Hunter Fan Company
Thermostats
LIMITED WARRANTY

The Hunter Fan Company warrants your Hunter Thermostat to be free from defects in material or workmanship for a period of one year from the date of sale to the original user or consumer purchaser. If your Hunter Thermostat malfunctions or fails within the warranty period because of a defect in material or workmanship, we will replace it.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO YOUR HUNTER THERMOSTAT IS LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE.

This warranty is voided if your Hunter Thermostat is not purchased and used in the USA. This warranty excludes and does not cover defects, malfunctions or failures or your Hunter Thermostat which were caused by repairs by persons not authorized by us, mishandling, improper installation, modifications or damage to the Hunter Thermostat while in your possession, or unreasonable use, including failure to provide reasonable and necessary maintenance.

This warranty neither applies to batteries nor to deterioration of, nor damage to the product caused by the use of faulty batteries. Return your product, along with proof of purchase to Hunter Fan Company Service Department, 7130 Goodlett Farms Pkwy

Suite 400, Memphis, TN 38016. You will be responsible for all insurance and freight or other transportation charges to our factory. We will return your Hunter Thermostat freight prepaid. Your Hunter Thermostat should be properly packed to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service.

IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.