



2005-2006 Jeep Liberty CRD ®
Edge EZ Module
Installation Instructions and Manual

OLD P/N: EZJ1000
NEW P/N: 30500



© 2007 Edge Products
All rights reserved.
Edge Products
1080 South Depot Dr.
Ogden, UT 84404
1-888-360-3343
www.edgeproducts.com

Manual Version 3

Table of Contents

| | |
|---|-----------|
| <i>DISCLAIMER OF LIABILITY</i> _____ | 4 |
| <i>LIMITATION OF WARRANTY</i> _____ | 4 |
| <i>About the Jeep CRD EZ</i> _____ | 7 |
| <i>Jeep 2.8LTurbo Diesel EZ Installation</i> _____ | 8 |
| Supplied Items: _____ | 8 |
| Tools Required: _____ | 8 |
| <i>This picture shows the Edge EZ Module with the harness cable</i> _____ | 8 |
| <i>Module Installation</i> _____ | 9 |
| MAP (Manifold Absolute Pressure) Connection _____ | 10 |
| Final Inspection and Operation _____ | 10 |
| Adjusting Power Levels _____ | 11 |
| <i>Power Levels</i> _____ | 12 |
| Expected output power and torque _____ | 12 |
| <i>How to Use Your Edge EZ Module</i> _____ | 13 |
| Using your Edge EZ Module _____ | 13 |
| Towing _____ | 13 |
| Exhaust Gas Temperature _____ | 14 |
| <i>Technical Support</i> _____ | 14 |

THIS IS A HIGH PERFORMANCE PRODUCT. USE AT YOUR OWN RISK.

Do not use this product until you have carefully read the following agreement.

This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions

DISCLAIMER OF LIABILITY

Edge Products Inc. and its successors, distributors, jobbers, and dealers (hereafter **SELLER**) shall in no way be responsible for the product's proper use and service. THE BUYER HEREBY WAIVES ALL LIABILITY CLAIMS.

The **BUYER** acknowledges that he/she is not relying on the **SELLER's** skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof and the **BUYER** hereby waives all remedies or liabilities, expressed or implied, arising by law or otherwise, (including without any obligations of the **SELLER** with respect to fitness, merchantability and consequential damages) or whether or not occasioned by the **SELLER's** negligence.

The **SELLER** disclaims any warranty and expressly disclaims any liability for personal injury or damages. The **BUYER** acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the **BUYER** agrees to indemnify the **SELLER** and to hold the **SELLER** harmless from any claim related to the item of the equipment purchased. Under no circumstances will the **SELLER** be liable for any damages or expenses by reason of use or sale of any such equipment.

The **SELLER** assumes no liability regarding the improper installation or misapplication of its products.

It is the installer's responsibility to check for proper installation and if in doubt, contact the manufacturer.

LIMITATION OF WARRANTY

Edge Products Inc. (hereafter "**SELLER**") gives Limited Warranty as to description, quality, merchantability, fitness for any product's purpose, productiveness, or any other matter of **SELLER's** product sold herewith. The **SELLER** shall be in no way responsible for the product's open use and service and the **BUYER** hereby waives all rights other than those expressly written herein. This Warranty shall not be extended or varied except by a written instrument signed by **SELLER** and **BUYER**.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the product's kit. All products that are in question of Warranty must be returned shipping prepaid to the **SELLER** and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by Edge Products Inc.

Under no circumstances shall the **SELLER** be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product, or any other contingent expenses.

If the **BUYER** sends back a failed unit that is out of warranty and chooses to buy a refurbished unit, the refurbished unit will only carry a 60 day warranty. If the **BUYER** purchases a new unit at a predetermined discounted rate, it will have the standard 1 year warranty.

Under no circumstances will the **SELLER** be liable for any damage or expenses insured by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN SIXTY (60) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Legal in California only for racing vehicles which may *never* be used upon a highway

AFTERMARKET PRODUCTS AND YOUR VEHICLE'S WARRANTY

Many of our customers ask, "Will your product void my vehicle's manufacturer's warranty?" While the answer is straightforward from a legal standpoint, we also want to educate our customers (and after-market consumers) on some industry realities and offer some common sense precautions to minimize your risk.

Consumers of aftermarket products are protected by The Federal Magnusson-Moss Warranty Act. The Act states that if something breaks on your car and you take it in for warranty repair, the dealer must honor your warranty unless they can prove that whatever modifications you have added to your car actually caused the problem. Please keep in mind that towing in anything higher than level two and hard driving in level three is not recommended.

While as a consumer, you have strong legal protection with regards to your vehicle's warranty, there is also a practical reality that different automotive manufacturers and dealers have greatly varying views on aftermarket products, in particular those that produce horsepower, such as (performance enhancement) chips and intakes. There are dealers and manufacturers out there that will use the presence of a horsepower upgrade to void your vehicle's warranty. They will do this regardless of whose box or chip you are using. Any aftermarket company that does not acknowledge this is misleading you.

The bottom line is that while the law protects the consumer and provides for enforcement of the warranty, it is very difficult for most people to hire an attorney and fight a voided warranty. Edge recommends that you **always disconnect and remove your module when you take your vehicle to a dealer for warranty work** in order not to interfere with Diagnostic equipment.

This warranty is void for any new products purchased through auction websites. Warranty is valid only for new products purchased through Authorized Dealers (proof of purchase required for all warranty claims).

All Edge modules and programmers are built to operate with OEM calibrations. When you take your vehicle to a service center they may, by your request or otherwise, update your vehicles calibrations. Therefore it is important that you return your vehicle to stock before taking it in for service. Edge updates its active products (i.e. those currently being manufactured) to work effectively with updated OEM calibrations. However, this process can take some time as Edge is not always made aware of calibration changes made by the OEM. In the case of discontinued products, Edge cannot ensure that your unit will work effectively if you take your vehicle to a dealership and you are given, by your request or otherwise, a new calibration.

About the Jeep CRD EZ

Introduction

Thank you for purchasing the *Edge EZ* Module for the Jeep CRD 2.8L Turbo Diesel. The *Edge EZ* module has been developed and produced from the highest quality materials available to ensure the best performance for years to come. If you have any questions, please contact Edge Products. We will be very happy to answer your questions about our complete product line.

- The *Edge EZ* Module is an add-on Engine Control Module (ECM) for the Jeep CRD 2.8L Turbo Diesel Engine that offers additional features not available on a stock engine. Since it is an “add on” ECM, it uses all the factory data, and then enhances the factory settings to optimize your truck’s performance.

The EZ module offers a power increase over stock throughout the RPM range, but the power is most noticeable in low to midrange RPM’s. This greatly improves drivability and towing performance. Transmission downshifting is greatly reduced, especially while passing or towing.

Jeep 2.8L Turbo Diesel EZ Installation

Supplied Items:

1. Edge EZ Module
2. Three Wire Ties
3. Two Velcro Strips


Tools Required:

None

Please read these instructions completely so that you understand each step prior to installation.

The Edge EZ Module

This picture shows the Edge EZ Module with the harness cable

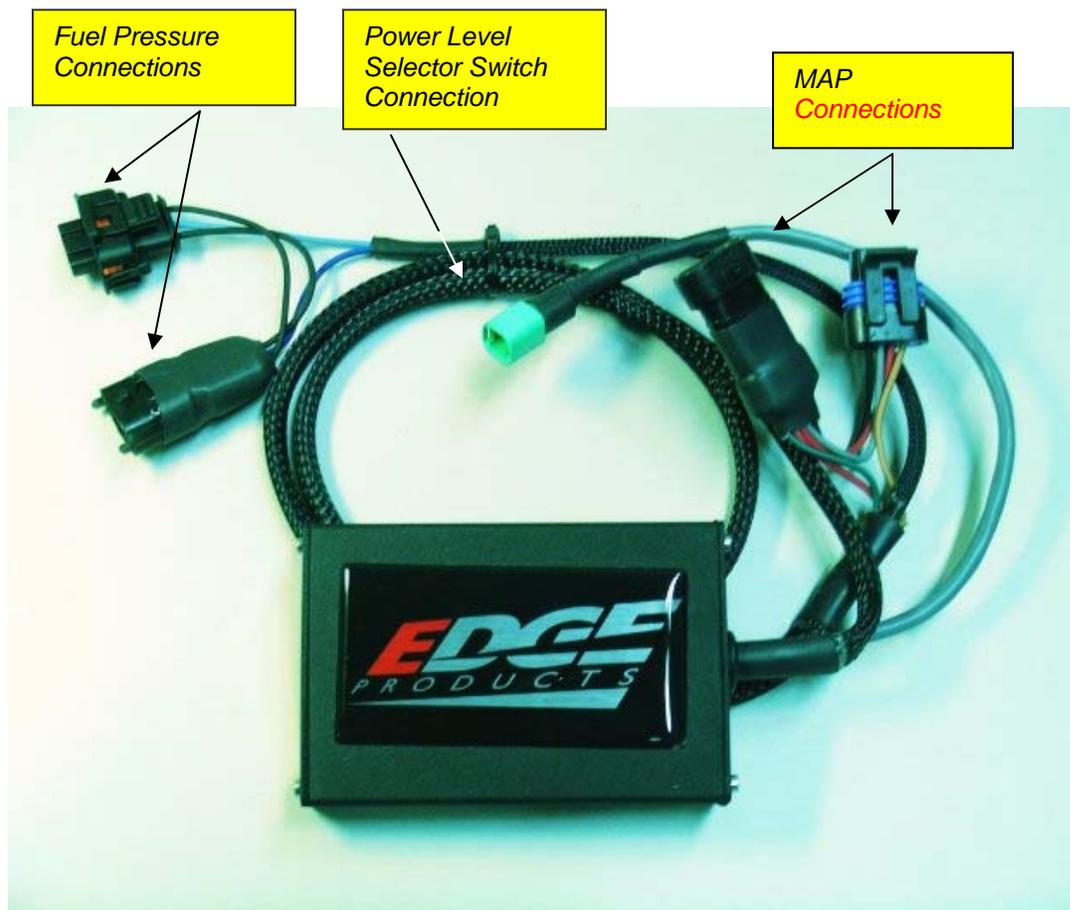

Module Installation

The *Edge EZ Module* can mount on the flat black plastic fuse box cover located in the engine compartment, right in front of the battery on the driver's side. Attach the module to the top of the fuse box using the supplied VELCRO® strips, allowing enough harness movement for removal of the cover.

Harness Connector – Your EZ module may be equipped with a harness that can be disconnected at the EZ module itself (See figure 1A). It is important to make sure that your EZ module is always connected to the harness when the wiring harness is connected to the truck, otherwise the truck may not run properly, or may trip engine “codes.”



FIGURE 1A

Important: *The truck must be turned off and the keys pulled out of the ignition for at least one minute prior to installation or removal of the connectors and module.*


1. Remove the plastic engine cover by taking off the yellow oil cap. Replace the yellow oil cap once the cover is off.

MAP (Manifold Absolute Pressure) Connection



connector into the stock engine MAP sensor and the stock engine wiring harness connector into the supplied MAP sensor connector.

2. Disconnect the stock wiring harness connector at the MAP sensor. The MAP sensor is located on top of the of the intake manifold towards the rear of the engine on the driver's side. The intake manifold is located on top of the engine. It may be necessary to move the plastic race that holds the harness on top of the engine up in order to reach the Map sensor connector. Plug the supplied MAP sensor

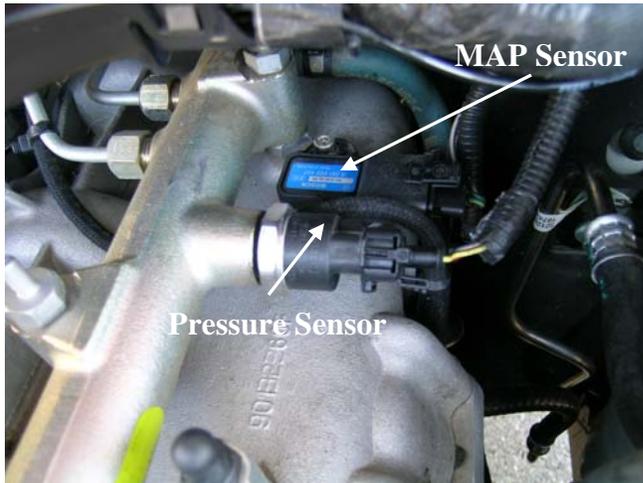

a convenient but safe place.

Fuel Pressure Sensor Connection

3. Disconnect the stock wiring harness at the sensor located on the main fuel rail on the driver's side towards the rear of the engine. Plug the supplied pressure sensor connector into the stock pressure sensor on the engine and the stock engine wiring harness connector into the supplied pressure sensor connector.

4. Run the wire with the switch into the cab of the truck so the switch is in

Final Inspection and Operation


5. Recheck all connections, fittings and fasteners for a properly secure installation.

6. Using the supplied wire ties, secure the wiring harness from possible damage from moving engine parts.

Adjusting Power Levels

The *Edge EZ Module* offers 2 levels of power beyond stock. The power from the *Edge EZ Module* begins by plugging the module into your Jeep. The power levels are adjusted by changing the “in cab” switch position to the level you need. Adjusting power levels on an EZ module has never been EZier!

Refer to the power level switch picture for position and power level selection.

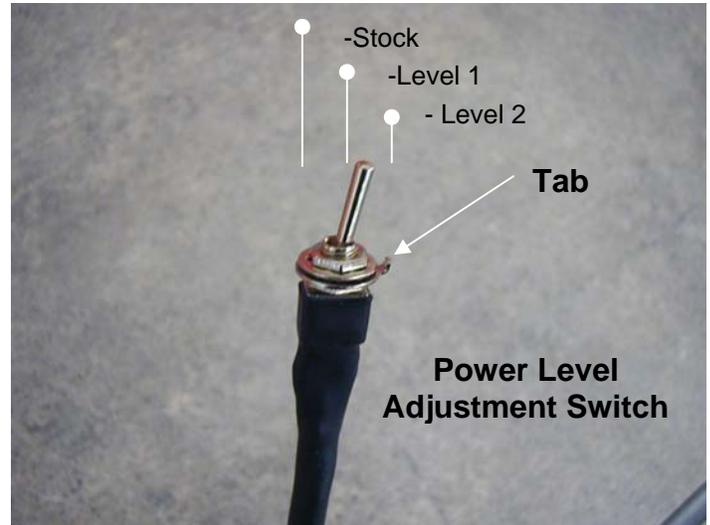

Power Levels

Expected output power and torque

The following power gains are representative of an actual test vehicle. Power gains may vary somewhat on a different vehicle or in different geographic settings.

| | Horsepower | Torque |
|----------|------------|--------|
| Level 1: | Stock | Stock |
| Level 2: | 10 | 15 |
| Level 3: | 23 | 32 |

How to Use Your Edge EZ Module

Using your Edge EZ Module

This section is to help you use the Edge EZ module effectively and add enjoyment to your diesel truck experience.

The first thing you will probably notice especially if this is your first time driving a diesel Jeep with a performance module is that you will experience more power, quicker take-offs, better passing and acceleration, and even better fuel economy. Level one is specifically designed to maximize fuel economy improvements.

Another thing you may notice is that your Jeep is suddenly a lot more responsive to drive. *Now, a word of caution;* normally, driving the stock Jeep you have a feel for how fast you are going in each gear, but that changes with the EZ module. You may find yourself doing 55 in a 35 mph zone or taking corners too fast. Be cautious and be aware that there may be an adjustment period to your new-found power.

Towing

What about towing? What can this do for you when you are towing? The great thing about *Edge EZ Module* and all the other Edge® power modules is that they were created for towing. That is why Edge built them, and why we keep making them better. Let's assume that in a stock Jeep you would pull your 2,000lb load up the grades in 3rd gear. Your EGT (Exhaust Gas Temperature) may run at about 1200° F. With the EZ module on level 1, you have effectively increased the horsepower by 10, and the torque by 15 Foot-pounds. That is like adding a fifth horse to pull a four horse carriage. That is representative of how much your power has increased. That means you will be running at a lower rpm and your EGT has decreased. And best of all you are going faster and the truck may have already shifted into 4th gear. Power level 1 is designed to match fueling with any additional upgrades you may have done to your vehicle. Power level 2 should never be used while towing. In hot weather when the vehicle is warmed up and while driving in stop and go traffic level 2 should only be used for a few minutes. Level 2 is designed to take advantage of the built-in safety margins the manufacture needs to add in order to make sure your vehicle can tow at its maximum capacity. When driven responsibly, and used with an EGT gauge, level 2 will not stress the stock engine or transmission as long as you are not towing or driving in hot weather with stop and go traffic for more than a few minutes.

Exhaust Gas Temperature

Now let's talk about the different power levels and the Exhaust Gas Temperature (EGT) readings, and what they mean. As mentioned earlier the EGT tells you how hot the exhaust gases are in the exhaust manifold coming from the engine. This is important because you shouldn't let them run for long periods above 1350 F. The higher the level, the more fuel is fed to the engine, and potentially, the higher the EGTs. Since towing is harder on the engine and the transmission, we recommend that you tow in level 1 for a load. This will protect you from putting too much stress on the engine and transmission. Level 1 is a good all-around mode, allowing for better economy and better performance, while not stressing the engine and transmission. We recommend that you run your truck in level 1 or lower for your normal daily activities.

Technical Support 888-360-3343

To expedite your support call, please have the part number, version number, and Date of Manufacture ready prior to calling support.