

BEANAIR

BEANDEVICE® ECOSENSOR PRODUCTS LINE USER MANUAL



Ambient Temperature



Temperature, humidity
and dew point



IR temperature sensor



BeanDevice
ECOSENSOR



“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

DOCUMENT

Document number		Version	1.9
External Reference		Last Publication date	10/04/2015
Author	Maxime Obr.		
Document code		Project Code	
Document Name	BeanDevice® EcoSensor User Manual		

VALIDATION

Function	Recipients	Validation	Information
Writer	Maxime Obr., embedded software engineer		
Reader	Yosri Jaouadi, Embedded software engineer		X
Approbation	Maneli PARSY	X	

DIFFUSION

Function	Recipients	Validation	Action
Reader 1	Yosri Jaouadi, Embedded software engineer	X	

Updates

Version	Date	Author	Evolution & Status
1.9	10/04/2015	Maxime Obr.	Beandevicé® ONE-BN wiring code specified





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Contents

- 1. TECHNICAL SUPPORT..... 8
- 2. VISUAL SYMBOLS DEFINITION 9
- 3. ACRONYMS AND ABBREVIATIONS 10
- 4. RELATED DOCUMENTS & VIDEOS 11
 - 4.1 Applications Notes..... 11
 - 4.2 Technical Notes..... 12
 - 4.3 Related videos 13
- 5. BEANDEVICE® VERSIONS 14
- 6. DOCUMENT ORGANISATION 15
- 7. BEANDEVICE® PRODUCT PRESENTATION 16
 - 7.1 BeanDevice ECOSENSOR: common specifications 16
 - 7.2 BeanDevice® ONE-BN 18
 - 7.2.1 Applications 18
 - 7.2.2 Product reference..... 18
 - 7.2.3 Binary/Pulse counter specifications 19
 - 7.3 BeanDevice® ONE-T 20
 - 7.3.1 Applications 20
 - 7.3.2 Product reference..... 20
 - 7.3.3 Temperature sensor specification 21
 - 7.4 BeanDevice® ONE-TIR..... 22
 - 7.4.1 Applications 22
 - 7.4.2 Product reference..... 22
 - 7.4.3 IR temperature sensor specifications 22
 - 7.4.4 Sensor field of view and accuracy 23





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

- 7.5 BeanDevice® ONE-TH 25
 - 7.5.1 Applications 25
 - 7.5.2 Product reference 25
 - 7.5.3 Temperature/Humidity sensors specifications 25
- 7.6 Products focus 27
 - 7.6.1 BeanDevice® ONE-TIR 27
 - 7.6.2 BeanDevice® ONE-BN 28
 - 7.6.3 BeanDevice® ONE-T 30
 - 7.6.1 BeanDevice® ONE-TH 31
 - 7.6.2 Led description 33
 - 7.6.3 Enclosure mechanical drawing 34
 - 7.6.3.1 BeanDevice® ONE-T 34
 - 7.6.3.2 BeanDevice® ONE-TH, ONE-TIR, ONE-BN 35
 - 7.6.4 Antenna specifications 36
- 7.7 BeanDevice® Power supply 37
- 8. BEANDEVICE® INSTALLATION GUIDELINE 38
 - 8.1 Powering ON your BeanDevice® ONE-XX 38
 - 8.2 Primary cell replacement 39
 - 8.3 BeanDevice® ONE-BN – wiring code 41
 - 8.4 BeanDevice® Network Association 44
 - 8.5 DataLogger feature 44
 - 8.6 OTAC (Over-the-air-Configuration) process 44
 - 8.7 Coexistence With others Frequencies at 2.4 GHz 44
 - 8.8 Operating temperature 45
 - 8.9 Mechanical mounting 45
 - 8.1 Factory settings 46
- 9. BEANDEVICE® SUPERVISION FROM THE BEANSCAPE 48
 - 9.1 Starting the BeanScape® 48
 - 9.2 BeanDevice® status Informations 50
 - 9.2.1 Frame: Identity 50
 - 9.2.2 Frame : Wireless Network Diagnostic 50
 - 9.2.3 Frame : Power Supply diagnostic 51
 - 9.2.3.1 BeanDevice® Power Mode status 51





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

9.2.4 Frame : System 52

9.3 Frame : BeanDevice® 54

9.3.1 Frame : Product Version 54

9.3.2 Frame : Current Data Acquisition mode 55

9.4 Main settings 56

9.4.1 Tab : Custom Display 57

9.4.2 Tab: Notes 57

9.4.3 Tab: Data Acquisition configuration 58

9.4.1 Tab: DataLogger 61

9.4.1 Tab : System config 61

9.4.1 Tab : Sleep mode management 63

9.4.2 Tab : AllGraph 65

9.5 Sensor channel profile 67

9.5.1 Sensor channel status 68

9.5.1.1 *General informations on Temperature sensor (available on the BeanDevice ONE-T only)* 68

9.5.1.2 *General informations on IR temperature sensor (available on the BeanDevice® ONE-TIR only)* 68

9.5.1.3 *General informations on binary input (available on the BeanDevice® ONE-BN only)* 70

9.5.1.4 *Frame: Measurement data* 70

9.5.1.5 *Frame : Alarm threshold* 70

9.5.1 Sensor configuration & calibration frame 71

9.5.1.1 *Tab: Custom display* 72

9.5.1.2 *Tab : Notes* 75

9.5.1.3 *Tab: Configuration* 76

9.5.1.4 *Tab : Sensor & Analog conditioning calibration* 76

9.5.1.5 *Tab : Log configuration* 77

9.5.2 Graphical display 77

9.5.2.1 *Frame: Marks* 81

9.5.2.2 *Frame: Symbols* 81

9.5.2.3 *Frame : Scale* 83

9.6 Datalogger configuration 84

10. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER) 85

10.1 Extending the battery life 85





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

10.1 Over-the-air Configuration (OTAC) parameters	85
10.1.1 Level 1: End-user OTAC parameters	87
10.2 Network diagnostic from your BeanScope® software	88
10.2.1 Sensor operating status	88
10.2.2 Displaying Network information	88
10.2.1 System maintenance (for expert only)	90
10.2.1 Scrolling menu « BeanSensor »	92
11. FAQ	97





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Disclaimer

The information contained in this document is the proprietary information of BeanAir.

The contents are confidential and any disclosure to persons other than the officers, employees, agents or subcontractors of the owner or licensee of this document, without the prior written consent of BeanAir GmbH, is strictly prohibited.

BeanAir makes every effort to ensure the quality of the information it makes available. Notwithstanding the foregoing, BeanAir does not make any warranty as to the information contained herein, and does not accept any liability for any injury, loss or damage of any kind incurred by use of or reliance upon the information.

BeanAir disclaims any and all responsibility for the application of the devices characterized in this document, and notes that the application of the device must comply with the safety standards of the applicable country, and where applicable, with the relevant wiring rules.

BeanAir reserves the right to make modifications, additions and deletions to this document due to typographical errors, inaccurate information, or improvements to programs and/or equipment at any time and without notice.

Such changes will, nevertheless be incorporated into new editions of this document.

Copyright: Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights are reserved.

Copyright © BeanAir GmbH 2015



Please consider the environment before printing this document.

Page : 7 / 97



"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

1. TECHNICAL SUPPORT

For general contact, technical support, to report documentation errors and to order manuals, contact **BeanAir Technical Support Center** (BTSC) at:
tech-support@beanair.com

For detailed information about where you can buy the BeanAir equipment/software or for recommendations on accessories and components visit:

www.beanair.com

To register for product news and announcements or for product questions contact BeanAir's Technical Support Center (BTSC).

Our aim is to make this user manual as helpful as possible. Please keep us informed of your comments and suggestions for improvements. Beanair appreciates feedback from the users.



Please consider the environment before printing this document.

Page : 8 / 97

2. VISUAL SYMBOLS DEFINITION

<i>Symbols</i>	<i>Definition</i>
	<i>Caution or Warning</i> – Alerts the user with important information about BeanAir wireless sensor networks (WSN), if this information is not followed, the equipment /software may fail or malfunction.
	<i>Danger</i> – This information MUST be followed if not you may damage the equipment permanently or bodily injury may occur.
	<i>Tip or Information</i> – Provides advice and suggestions that may be useful when installing BeanAir Wireless Sensor Networks.



3. ACRONYMS AND ABBREVIATIONS

<i>AES</i>	Advanced Encryption Standard
<i>CCA</i>	Clear Channel Assessment
<i>CSMA/CA</i>	Carrier Sense Multiple Access/Collision Avoidance
<i>GTS</i>	Guaranteed Time-Slot
<i>kSps</i>	Kilo samples per second
<i>LLC</i>	Logical Link Control
<i>LQI</i>	Link quality indicator
<i>LDCDA</i>	Low duty cycle data acquisition
<i>MAC</i>	Media Access Control
<i>PAN</i>	Personal Area Network
<i>PER</i>	Packet error rate
<i>RF</i>	Radio Frequency
<i>SD</i>	Secure Digital
<i>WSN</i>	Wireless sensor Network





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

4. RELATED DOCUMENTS & VIDEOS

In addition to this User manual, please consult the related application notes, technical notes and videos:

4.1 APPLICATIONS NOTES

<i>Document name (Click on the weblink)</i>	<i>Related product</i>	<i>Description</i>
<u>AN RF 007 :“ Beanair WSN Deployment”</u>	All BeanAir products	Wireless sensor networks deployment guidelines
<u>AN RF 006 – „How to extend your wireless range“</u>	All BeanAir products	A guideline very useful for extending your wireless range
<u>AN RF 005 – BeanGateway® & Data Terminal Equipment Interface</u>	BeanGateway®	DTE interface Architecture on the BeanGateway®
<u>AN RF 004 – “Coexistence And Interferences@2.4GHz”</u>	All BeanAir products	Coexistence & interferences of different RF technologies in the 2.4 GHz frequencies band.
<u>AN RF 003 - “IEEE 802.15.4 2.4 GHz Vs 868 MHz”</u>	All BeanAir products	Comparison between 868 MHz frequency band and a 2.4 GHz frequency band.
<u>AN RF 002 – “Structural Health monitoring on bridges”</u>	All BeanAir products	The aim of this document is to overview Beanair® products suited for bridge monitoring, their deployment, as well as their capacity and limits by over-viewing various data acquisition modes available on each BeanDevice®.





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

4.2 TECHNICAL NOTES

<i>Document name (Click on the weblink)</i>	<i>Affected product</i>	<i>Description</i>
<u>TN RF 010 – « BeanDevice® Power Management »</u>	All the BeanDevice®	This technical note describes the sleeping & active power mode on the BeanDevice®.
<u>TN RF 009 – « BeanGateway® management on LAN infrastructure »</u>	BeanGateway®	BeanGateway® integration on a LAN infrastructure
<u>TN RF 008 – “Data acquisition modes available on the BeanDevice®”</u>	All the BeanDevice®	Data acquisition modes available on the BeanDevice®
<u>TN RF 007 – “BeanDevice® DataLogger User Guide ”</u>	All the BeanDevice®	This document presents the DataLogger feature on the BeanDevice®
<u>TN RF 006 – “WSN Association process”</u>	All the BeanDevice®	Description of the BeanDevice® network association
<u>TN RF 005 – “Pulse counter & binary data acquisition on the BeanDevice® ONE-BN”</u>	BeanDevice® ONE-BN	This document presents Pulse counter (ex: energy metering application) and binary data acquisition features on the BeanDevice® ONE-BN.
<u>RF TN 003 V1.0- “Wireless Network capacity”</u>	All the products	Network capacity characterization of Beanair Wireless Sensor Networks
<u>RF TN 002 V1.0 - Current consumption in active & sleeping mode</u>	BeanDevice®	Current consumption estimation of the BeanDevice in active and sleeping mode
<u>RF TN 001 V1.0- Wireless range benchmarking</u>	BeanDevice®	Wireless range benchmarking of the BeanDevice®



Please consider the environment before printing this document.

Page : 12 / 97



“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

4.3 RELATED VIDEOS



[All the videos are available on our Youtube channel](#)

<i>Beanair video link (Youtube)</i>	<i>Related products</i>
<u>Company Presentation</u>	All
<u>BeanGateway® - Ethernet Outdoor version introduction</u>	BeanGateway® - Ethernet Outdoor version introduction
<u>BeanGateway® – Ethernet Indoor version presentation</u>	BeanGateway® Ethernet Indoor version
<u>Beandevicé® AN-XX wireless range demonstration</u>	BeanDevice® AN-XX & Beandevicé® AN-XX Extender
<u>BeanDevice® AN-XX presentation</u>	BeanDevice® AN-XX & Beandevicé® AN-XX Extender
<u>BeanDevice® AX-3D presentation</u>	BeanDevice® AX-3D
<u>BeanDevice® HI-INC presentation</u>	BeanDevice® HI-INC
<u>BeanDevice® AX-3DS presentation</u>	BeanDevice® AX-3DS
<u>BeanScape® – WSN supervision software</u>	BeanScape®
<u>BeanGateway® Ethernet/LAN Configuration, directly connected to the Laptop/PC</u>	BeanGateway®
<u>Performing an energy scan on your BeanGateway®</u>	BeanGateway®
<u>Automatic RF Channel selection</u>	BeanGateway®
<u>Wireless sensors profile deletion from the BeanGateway® Database</u>	All
<u>Network Diagnostic configuration on the BeanGateway®</u>	BeanGateway®
<u>RF Power configuration on the BeanGateway®</u>	BeanGateway®





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

5. BEANDEVICE® VERSIONS

	<i>Hardware</i>	<i>Embedded Software</i>	<i>Wireless Stack</i>
BeanDevice® ONE-XX	V1.0 – First hardware Version V1.1 – Hardware filter added on pulse inputs (BeanDevice® ONE-BN)	V1.0 – First version	IEEE 802.15.4 V2006



These ID versions should be transmitted to our technical support center when you encountered a material or software issue.



Please consider the environment before printing this document.

Page : 14 / 97

6. DOCUMENT ORGANISATION

This manual is organized in 7 chapters, as follows:

BeanDevice® product presentation

- Introduces BeanDevice® Ecosensor products line :
 - BeanDevice® ONE-T
 - BeanDevice® ONE-TH
 - BeanDevice® ONE-BN
 - BeanDevice® ONE-TIR

Data acquisition mode description

- Details the data acquisition mode available on the BeanDevice®

BeanDevice® installation guidelines

- Details the installation guidelines of the BeanDevice® :
 - Power Management
 - BeanDevice® power supply
 - BeanDevice® network association
 - Datalogger feature
 - OTAC (over-the-air configuration) process

BeanDevice® supervision from the Beanscape®

- Details the BeanDevice® supervision from the Beanscape®

BeanDevice® maintenance & supervision (for experienced user)

- Details the BeanDevice® maintenance (for experienced user)

Installation procedures

- Details the installation procedures



7. BEANDEVICE® PRODUCT PRESENTATION



It is highly recommended to read all the user manual related to BeanAir software & equipment (BeanScape®, BeanGateway® BeanDevice®) before getting start your BeanDevice®.

7.1 BEANDEVICE ECOSENSOR: COMMON SPECIFICATIONS

This section describes the common technical features for the following BeanDevice®

- ✓ *BeanDevice® ONE-T*
- ✓ *BeanDevice® ONE-TH*
- ✓ *BeanDevice® ONE-TIR*
- ✓ *BeanDevice® ONE-BN*

RF Specifications	
Wireless Protocol Stack	IEEE 802.15.4 (2006 version)
WSN Topology	Point-to-Point / Star
Data rate	250 Kbits/s
RF Characteristics	ISM 2.4GHz – 16 Channels
TX Power	-7 dBm to +18 dBm
Receiver Sensitivity	-95.5 dBm to -104 dBm
Max. Radio Range	300 m (L.O.S)
Antenna	Omdirectional antenna 2.2dBi

Over-the-air configuration (OTAC) parameters	
Data Acquisition mode	Low Duty Cycle Data Acquisition (LDCDA) Mode: 1s to 24 hour
	Alarm & Survey mode: 1s to 24 hour
Alarm Threshold	2 high levels alarms & 2 low levels alarms
Power Mode	Sleeping, Sleeping with Network Listening & Active
TX Power	-7 dBm / -1 dBm / 5 dBm / 11 dBm / 15 dBm / 18 dBm

Embedded data logger	
Storage capacity	up to 1 000 000 data points





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Wireless data downloading

3 minutes to download the full memory
(average time)

Environmental and Mechanical

Enclosure

Polycarbonate, Watertight IP67 – Fire
Protection : ULV94
Enclosure dimensions (Lxlxh) : 119 mm x 35
mm x 35 mm
Weight (battery included): 120g

Operating Temperature

-40°C to +75°C

Norms

FCC & CE compliant
ROHS - Directive 2002/95/EC

Power supply

Current consumption @3.3 Volts

- During data acquisition : 20 to 30 mA
- During Radio transmission : 40 mA @ 5dBm ,
70 mA @ 18 dBm
- During sleeping : < 10 µA

Included primary cell

Lithium-thionyl chloride battery with 1800
mAh capacity (AA size)

Option(s)

Calibration

COFRAC connected calibration (on 1 point)

Choose an ultra low power wireless sensor

RF transmission

Battery life (temperature room 25°C)

Every 2 minutes

22 months

Every 5 minutes

51 months

Every 10 minutes

102 months



Please consider the environment before printing this document.

Page : 17 / 97

7.2 BEANDEVICE® ONE-BN

7.2.1 Applications

This product is adapted for the following applications:

- ✓ Energy Metering (Gas, Water, Electric)
- ✓ Process control
- ✓ Technical Building Management
- ✓ Logistics



7.2.2 Product reference





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

7.2.3 Binary/Pulse counter specifications



For further informations about the "Pulse counter" and "Binary" data acquisition, please read the technical note TN_RF_005: "Pulse counter & binary data acquisition on the BeanDevice® ONE-BN".



Please consider the environment before printing this document.

Page : 19 / 97

7.3 BEANDEVICE® ONE-T

7.3.1 Applications

This product is adapted for the following applications:

- ✓ Technical Building Management
- ✓ Cold chain traceability
- ✓ Medical lab & white room
- ✓ Solar Panels Monitoring
- ✓ Transport
- ✓ Air-conditionning System (HVAC)

7.3.2 Product reference

Product Reference	
BND-ONE-T- SA-CL	
<p>SA—temperature sensor accuracy & design</p> <ul style="list-style-type: none"> · ST : standard accuracy · HA: High accuracy · HAEY: High accuracy with eyelet probe for wall mounting (minimum cable length 25 cm) 	<p>CL—Sensor Cable length</p> <p>Sensor cable length in cm</p> <p>Maximum cable length: 150 cm</p> <p>If this field is empty: no cable length</p>
<p>Example 1 : BND-ONE-T-ST, wireless temperature sensor with 1 probe, standard accuracy (temperature range -25°C to +75°C), no cable length</p> <p>Example 2 : BND-ONE-T-HA-120, wireless temperature sensor with 1 probe, High accuracy (temperature range -10°C to +60°C), cable length 120 cm</p> <p>Example 3 : BND-ONE-T-HAEY-25, wireless temperature sensor with eyelet probe for wall mounting , high accuracy (temperature range -10°C to +60°C), cable length 25 cm</p>	



7.3.3 Temperature sensor specification

Temperature probe types	
Probe type HAEY	Temperature probe with eyelet mounting  (Length 50 mm, Diameter 6 mm, Hole diam. 5.3 mm)
Probe type ST & HA	Length 40 mm, Diameter 6 mm 

Temperature sensor specifications		
Temperature Sensor technology	Silicon temperature probe — Probe watertightness : IP67 Mechanical assembly type : steel tube	
Measurement range	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	-10 °C to +60 °C
	Standard accuracy temperature probe with cable length: BND-ONE-T- ST-CL	-50 °C to +150 °C
	Standard accuracy temperature probe without cable length: BND-ONE-T- ST	-25°C to +75°C
Measurement accuracy	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	±0.2°C between -10°C and -5 °C ±0.1°C between -5°C and +45°C ±0.2°C between +45°C and +60°C
	Standard accuracy temperature probe : BND-ONE-T- ST-CL	±0.3 °C between -10 °C and +60 °C ±(0.3 + 0.012(T-60)) °C between +60 °C and +150 °C +/- (0.3 - 0.012(T+10)) °C between -50 °C and -10 °C
Sensor resolution	High accuracy temperature probe: BND-ONE-T- HA-CL BND-ONE-T- HAEY-CL	0.0034 °C
	Standard accuracy temperature probe : BND-ONE-T- ST-CL	0.1 °C



7.4 BEANDEVICE® ONE-TIR

7.4.1 Applications

This product is adapted for the following applications:

- ✓ Railway temperature control
- ✓ Industrial temperature control of moving parts
- ✓ Gas detection
- ✓ Plastic, glass & metal processing
- ✓ Movement Detection
- ✓ Chemistry & pharmaceutical industry
- ✓ Automotive diagnosis
- ✓ Electrical Systems & equipment monitoring
- ✓ Healthcare

7.4.2 Product reference

Product reference
BND-ONE-TIR

7.4.3 IR temperature sensor specifications

IR temperature Sensor Specification	
Measurement range	-40°C to +85°C for ambient temperature (Ta) -70°C to +380°C for object temperature (To)
Sensor Technology	Thermopile
Emissivity coefficient	0 to 1 (Configurable from the BeanScope®)
Accuracy	CF. IR Temperature Table
Measurement resolution	0.02 °C
Field of View (FOV)	Peak zone ±0°, Width Zone ±90°C . See curve



7.4.4 Sensor field of view and accuracy

All accuracy specifications apply under settled isothermal conditions only. Furthermore, the accuracy is only valid if the object fills the FOV of the sensor completely.

Ta (Ambient temperature) and To (Object temperature)

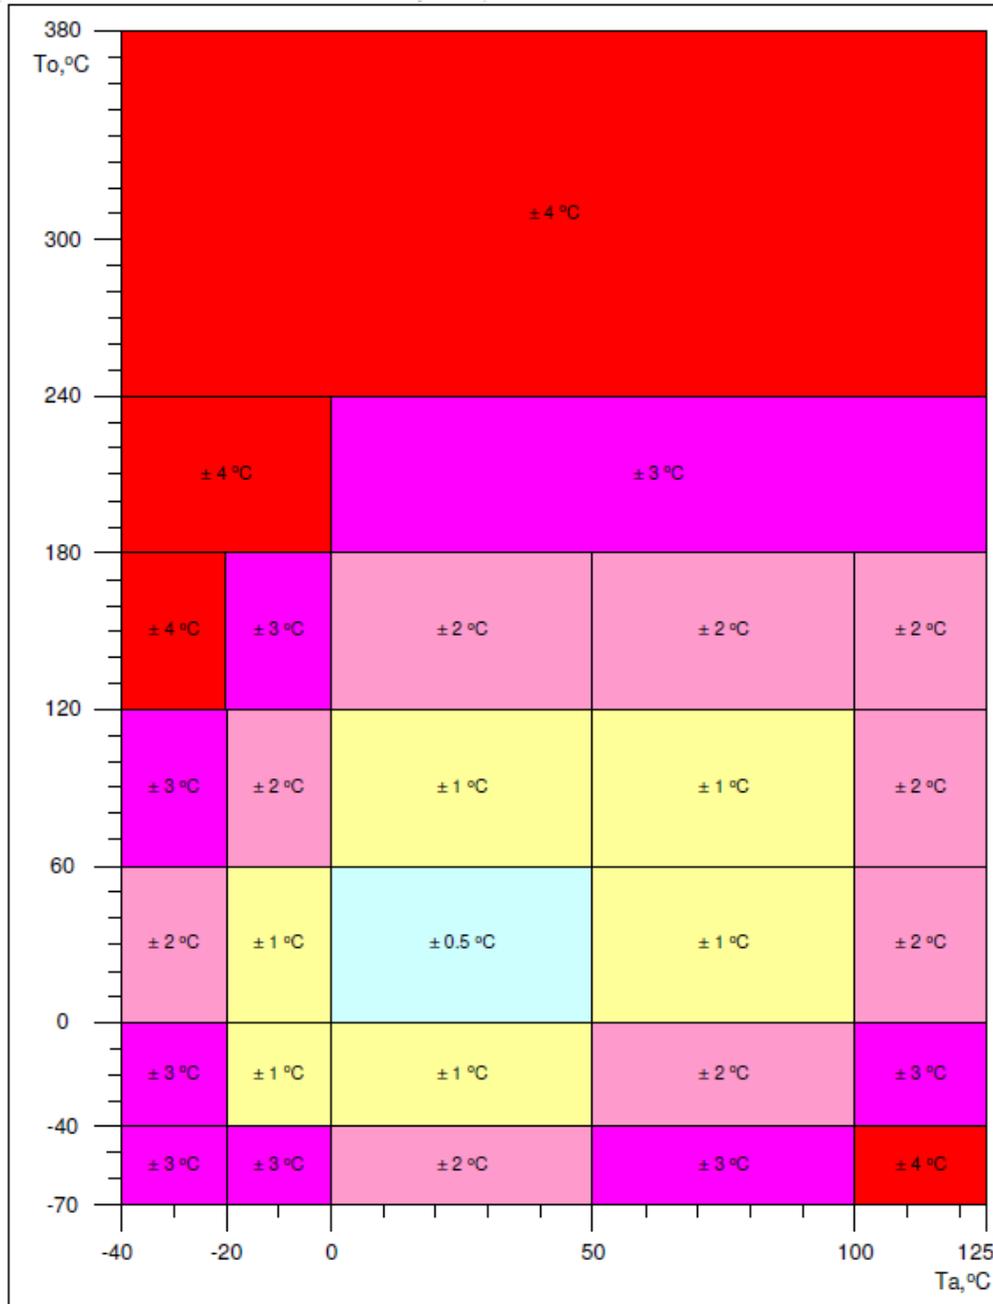


Figure 1: ONE-TIR sensor accuracy



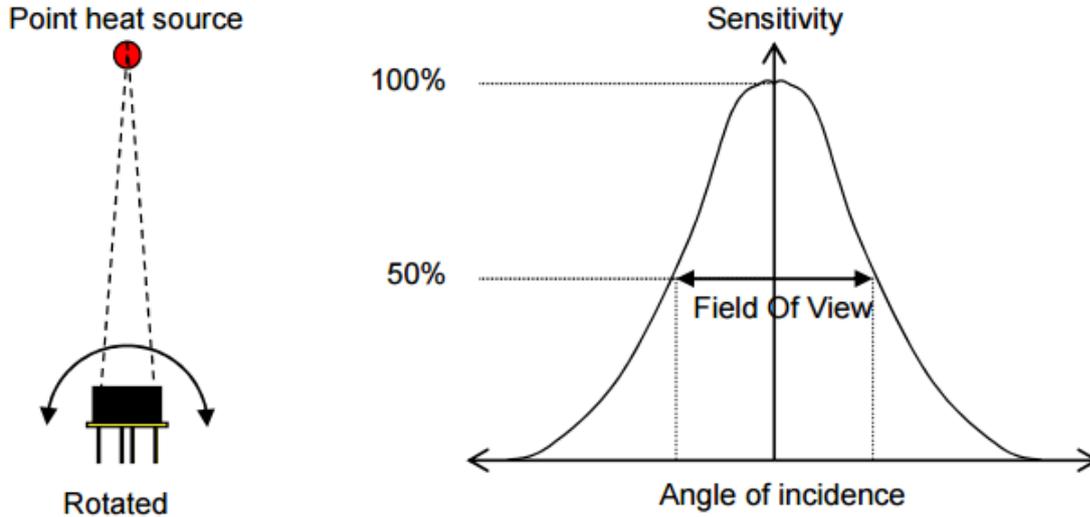


Figure 2: Field of view measurement

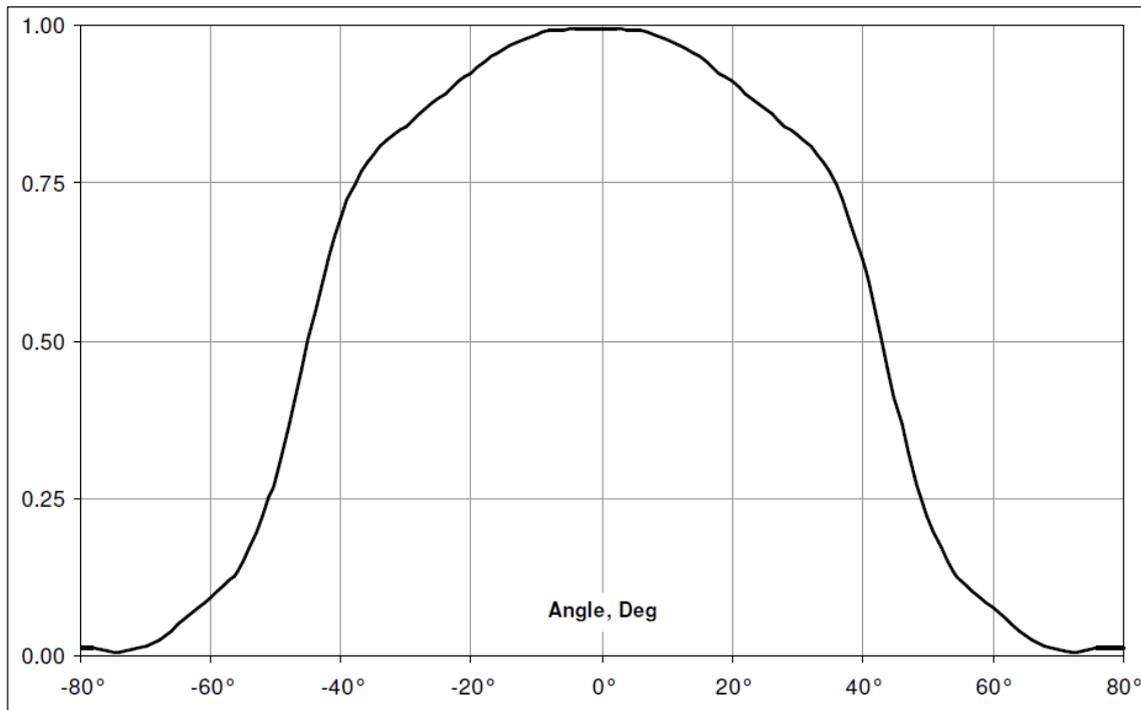


Figure 3: Typical FOV curve



7.5 BEANDEVICE® ONE-TH

7.5.1 Applications

- ✓ HVAC (heating, ventilation, and air conditioning)
- ✓ Cold chain traceability
- ✓ Medical lab & clean room
- ✓ Agriculture & Greenhouse
- ✓ Environment

7.5.2 Product reference

Product Reference

BND-ONE-TH

7.5.3 Temperature/Humidty sensors specifications

Sensor filter cap mechanical specifications

Filter cap	Glass grommet and sinter filter	
Pressure Resistant	Up to 16 bar	
Dew formation resistant	Yes	

Temperature sensor specifications

Temperature Sensor technology	Thermistor
Measurement range	- 40°C to +85 °C
Measurement accuracy	±0.2 °C (0 ... 60 °C)
Sensor resolution	0.015 °C
Long term drift	< 0.05 K / year
Response time	< 10s with sensor cap

Humidity sensor specifications

Humidity Sensor technology	Capacitive polymer humidity sensor
-----------------------------------	------------------------------------





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Measurement range	0 to 100% RH
Sensor accuracy (at 23°C)	±1.8% RH (10 ... 80% RH)
Sensor resolution	0.02% RH
Hysteresis (50% rH)	< ±1% RH
Linearity error	< ±1% RH
Response time	<10s with sensor cap
Long term drift	< 0.5 % RH / year



Please consider the environment before printing this document.

Page : 26 / 97

7.6 PRODUCTS FOCUS

7.6.1 BeanDevice® ONE-TIR



Figure 4: Beandevic[®] ONE-TIR -Product description

Number	Function	Description
1	IR Sensor	Waterproof (IP67) infrared Sensor
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the “ Network LED ” illuminates in GREEN color, the BeanDevice [®] is powered on. If the “ Network LED ” illuminates in RED color, the BeanDevice [®] is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network.



		See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“Network” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “Network” label circle. Hold the magnet for approximately 2s Please read the following section for more information “click here”
7	Eyelet	Eyelet for screw mounting

7.6.2 BeanDevice® ONE-BN



Figure 5 : Beandevicé® ONE-BN - Product description





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Number	Function	Description
1	Binary inputs	M12-5pins A coding socket dedicated to pulse measurement <i>Please read the following section for more information</i> “click here”
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the “ Network LED ” illuminates in GREEN color, the BeanDevice® is powered on. If the “ Network LED ” illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network. See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“ Network ” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “ Network ” label circle. Hold the magnet for approximately 2s <i>Please read the following section for more information</i> “click here”



7.6.3 BeanDevice® ONE-T

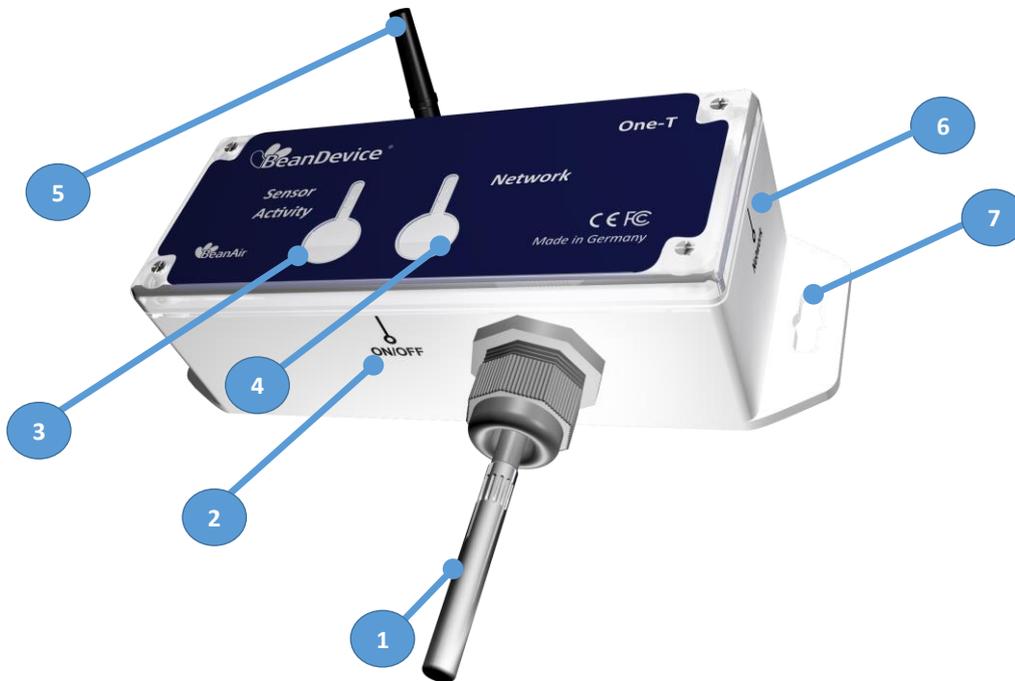


Figure 6: Beandevicé® ONE-T - Product description

Number	Function	Description
1	Silicon Temperature Sensor	Silicon temperature sensor Up to 1.5 meters of cable length
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the "Network LED" illuminates in GREEN color, the BeanDevice® is powered on. If the "Network LED" illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network.



		See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“Network” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “Network” label circle. Hold the magnet for approximately 2s Please read the following section for more information “click here”
7	Eyelet	Eyelet for screw mounting

7.6.1 BeanDevice® ONE-TH



Figure 7: Beandevicel® ONE-TH - Product description





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

Number	Function	Description
1	Temperature/Humidity/Dew Point sensor	Temperature/Humidity sensor coming with IP67 sensor filter
2	ON/OFF	ON/OFF Reed Switch. Activated using a magnet. (waiting time : 2 seconds) If the “ Network LED ” illuminates in GREEN color, the BeanDevice® is powered on. If the “ Network LED ” illuminates in RED color, the BeanDevice® is powered off.
3	Sensor/Activity LED	Bi-color led light, either displays in GREEN or RED color depending up on the status of the device See Led Description table
4	Network LED	Bi-color led light for network status, GREEN or RED depending upon the status of the network. See Led Description table
5	Antenna	2.2 dBi omnidirectional antenna See antenna description section
6	Network	“ Network ” non-contact button restores the factory settings on the BeanDevice®. Point the pole of the Neodymium magnet that was provided with your BeanDevice® towards the “ Network ” label circle. Hold the magnet for approximately 2s Please read the following section for more information “click here”
7	Eyelet	Eyelet for screw mounting



7.6.2 Led description

This table shows the led description depending on the BeanDevice® status:

<i>BeanDevice® status</i>	<i>Leds Description</i>
The BeanDevice® is power on	Network Led flashes one time in GREEN
The BeanDevice® is power off	Network Led flashes one time in RED
The Beandevicé® starts successfully a Network association	Network Led flashes slowly in GREEN
The BeanDevice® transmits a data to the BeanGateway®	Network Led flashes fastly in GREEN
The Beandevicé® fails to start a Network association	Network Led flashes one time in RED and then restart flashing in GREEN for a new Network association
The BeanDevice® fails to transmit a data to the BeanGateway®	Network Led flashes fastly in RED
Data acquisition and/or data logging are correctly performed on the BeanDevice®	Sensor activity Led flashes one time in GREEN
Data acquisition and/or data logging fails	Sensor activity Led flashes one time in RED



7.6.3 Enclosure mechanical drawing

Material type	PUR (Polycarbonate)
Enclosure size (w/o external sensor & antenna) in mm LxIxH	110 x 30 x 34
Impact EN 50 102	IK 08
Protection	IP67

7.6.3.1 BeanDevice® ONE-T

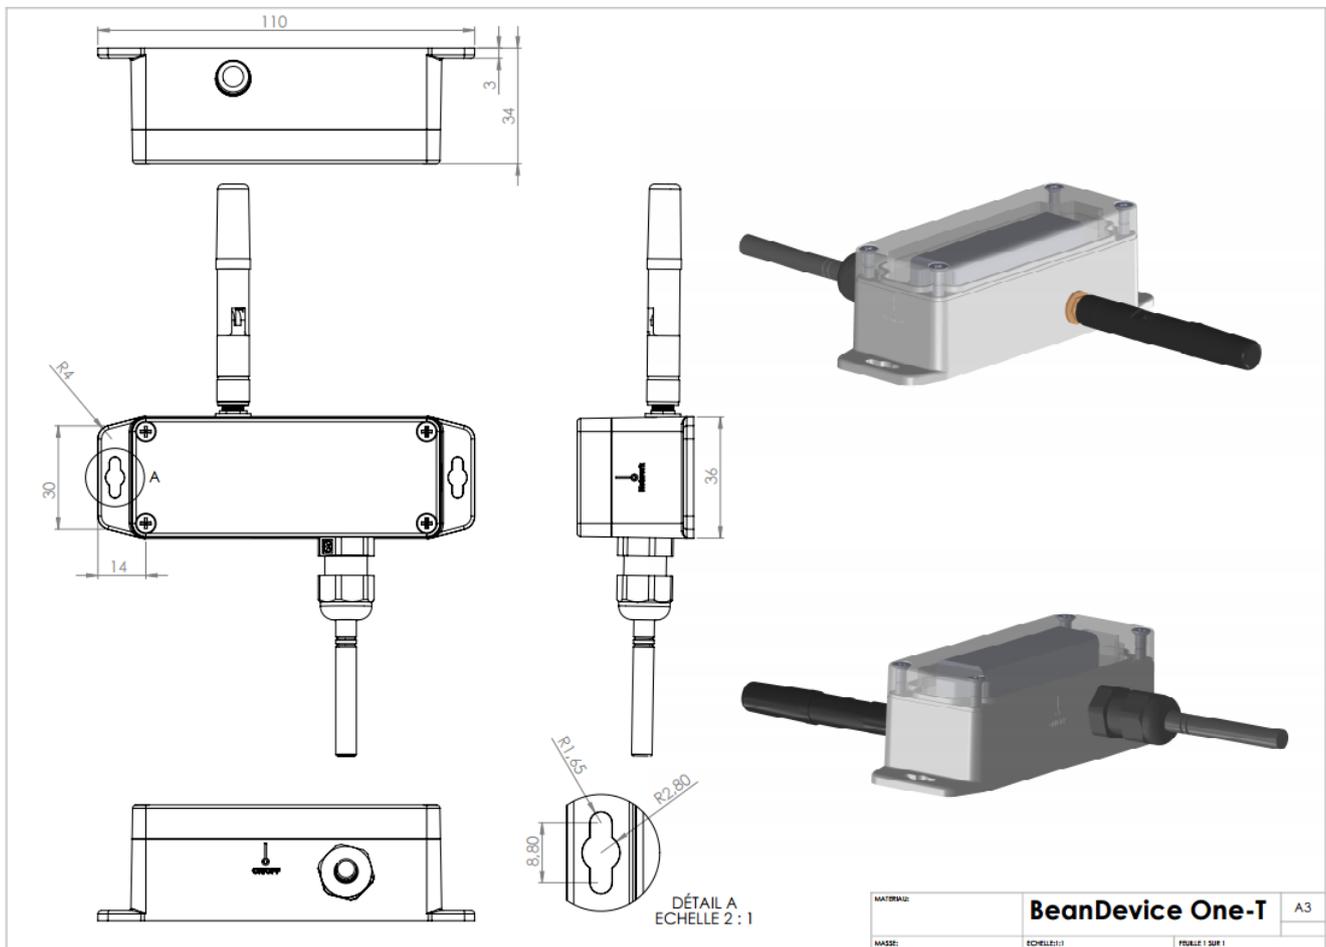


Figure 8: Beandevic[®] ONE-T Mechanical drawing

Mechanical drawing is available on the following weblink: [Click here](#)



7.6.3.2 BeanDevice® ONE-TH, ONE-TIR, ONE-BN

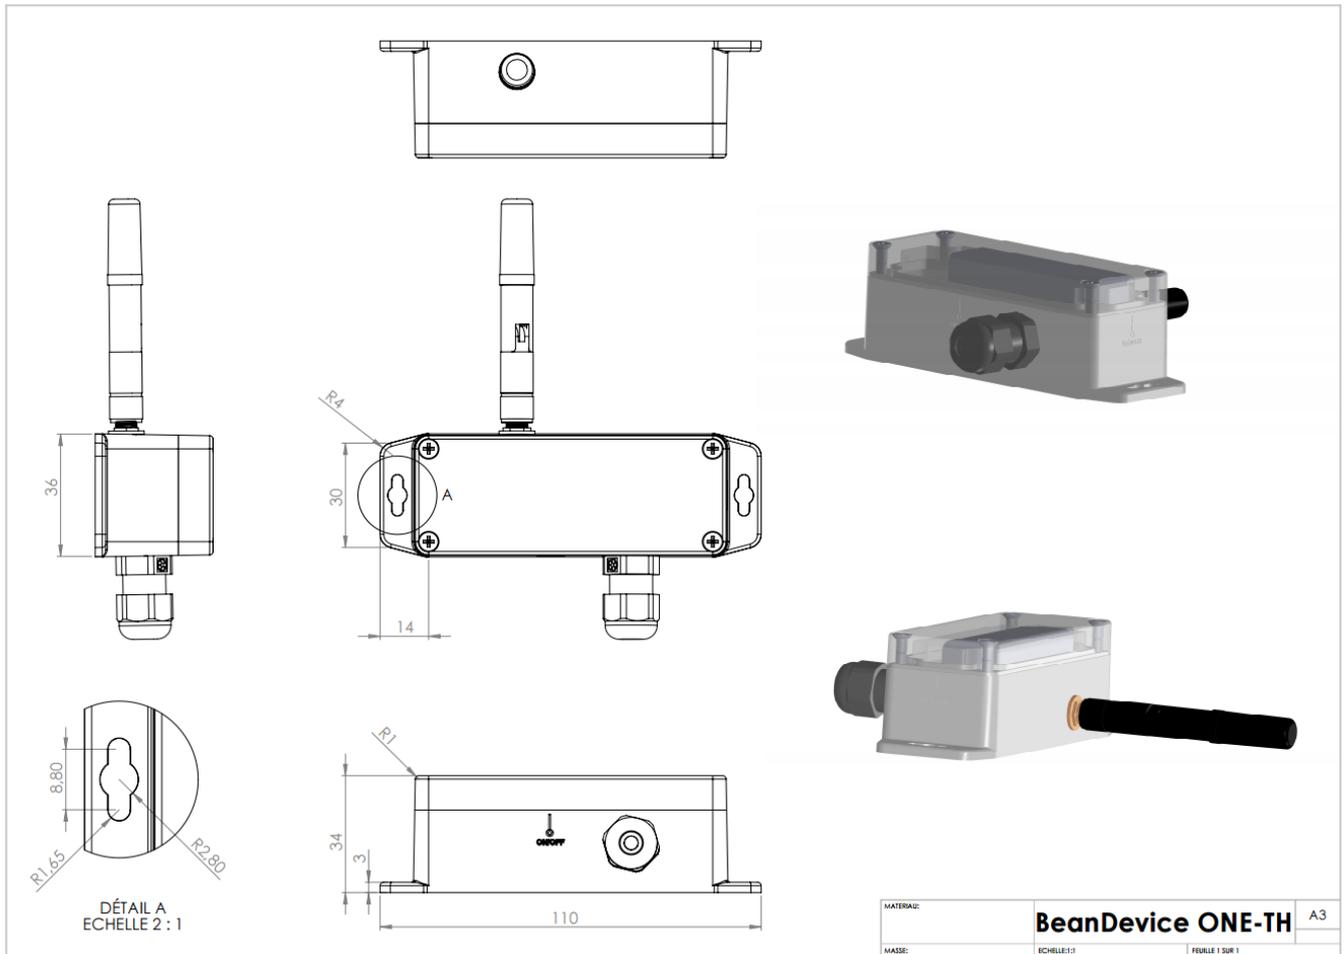


Figure 9 : Beandevicé® ONE-TH/ONE-TIR/ONE-BN Mechanical drawing

Mechanical drawing is available on the following weblink: [Click here](#)



7.6.4 Antenna specifications

The BeanDevice® EcoSensor range comes with an external omnidirectional antenna.



Figure 10 : Omnidirectional 2.2dBi Antenna

RF Properties	Value	Unit	Tol.
Frequency range	2400 ... 2500	MHz	
VSWR	1.5		max
Impedance	50	Ω	
Peak Gain	2.8	dBi	Typ.
Average Gain	2.2	dBi	Typ.

Table 1 : Antenna Specifications table

During BeanDevice® installation, test several orientation of the antenna in order to get best wireless link quality.

Check the LQI (Link Quality Indicator) of your BeanDevice® for being sure that your antenna is right oriented.



For further information, read the application note: [AN RF 007 :“ Beanair WSN Deployment”](#)



7.7 BEANDEVICE® POWER SUPPLY

The BeanDevice® ONE-XX is power supplied by a Lithium-thionyl chloride primary cell with a very low leakage current (less than 2%/year)



A primary cell is not a rechargeable battery, don't try to recharge it. You will damage your primary cell and your BeanDevice®.

Primary cell technology	LiSOCl ₂ (Lithium -thionyl chloride)
Nominal Voltage	3,6V
Nominal capacity	1800 mAh
Size	14.5*33.5mm (AA)
Maximum continuous current	500mA
Maximum pulse current	1A
Type	ER14505M

Table 2 : Primary cell specifications table

List of LiSOCl₂ primary cell manufacturer:

Manufacturer	Product Reference
EEMB	ER14505M
BIPOWER CORP	
EVE	
Ultralife	



Important Precautions to follow:

- ✓ ***Lithium-thionyl chloride primary cell with a size of AA must be used. Don't try to use another primary cell technology, you will damage your BeanDevice® ;***
- ✓ ***Use only the ER14505M battery type with the “M” extension for high power management;***
- ✓ ***Primary cell is not a rechargeable battery. Don't try to recharge a primary cell; you will damage your BeanDevice®.***



8. BEANDEVICE® INSTALLATION GUIDELINE

8.1 POWERING ON YOUR BEANDEVICE® ONE-XX

The BeanDevice® ONE-XX includes a reed switch that allows switching ON or OFF the wireless sensor. The device could be powered ON by hovering the magnet on the ON-OFF label.

This technology allows you to power on your BeanDevice® instantly and without any physical contact between the magnet and the BeanDevice® enclosure.


Powering ON your BeanDevice® ONE-XX is very simple:

1. Please make sure that your **BeanDevice® ONE-XX** is provided with a magnet (the magnet is provided in another box separated from the BeanDevice®)



2. As shown in the picture below, hover your magnet slowly above the ON-OFF label for about 2 seconds, your BeanDevice® turns on automatically. The LED light illuminates **GREEN**. You can hold your magnet position diagonally or in parallel to your device label.



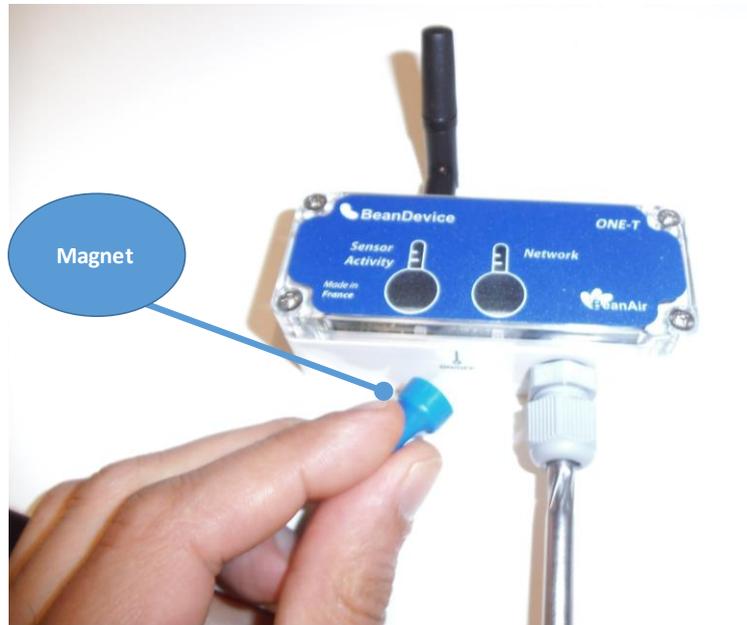

3. Repeat the same process to Power OFF your BeanDevice®. The LED illuminates in RED. Your BeanScape will specify that the device is no longer active.

8.2 PRIMARY CELL REPLACEMENT


Located inside the BeanDevice® enclosure, the primary cell provides the BeanDevice® power supply. The self-discharge rate is very low on a primary cell (2% / year).

The BeanScape® displays the battery charge level, if it is in low state you will need to change the battery as follows.

Step n°1: Open the
BeanDevice® casing


- Power down your BeanDevice®
- Use a Philips screwdriver with the right size
- Unscrew the cover

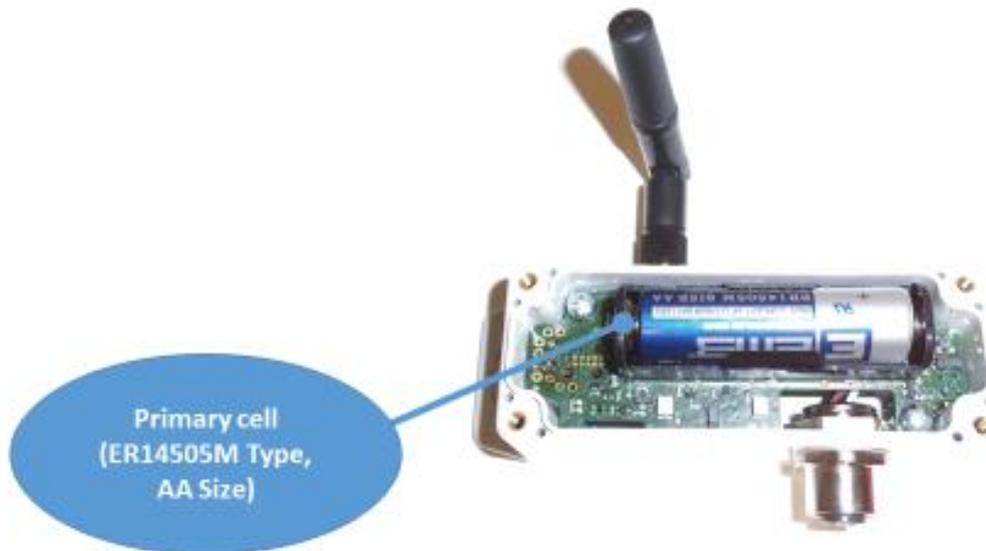

**Step n°2: Primary cell
replacement**

- Remove the primary cell from the battery holder
- Replace the primary cell. Follow the electrical polarity on the battery holder(see picture)
- Close the cover



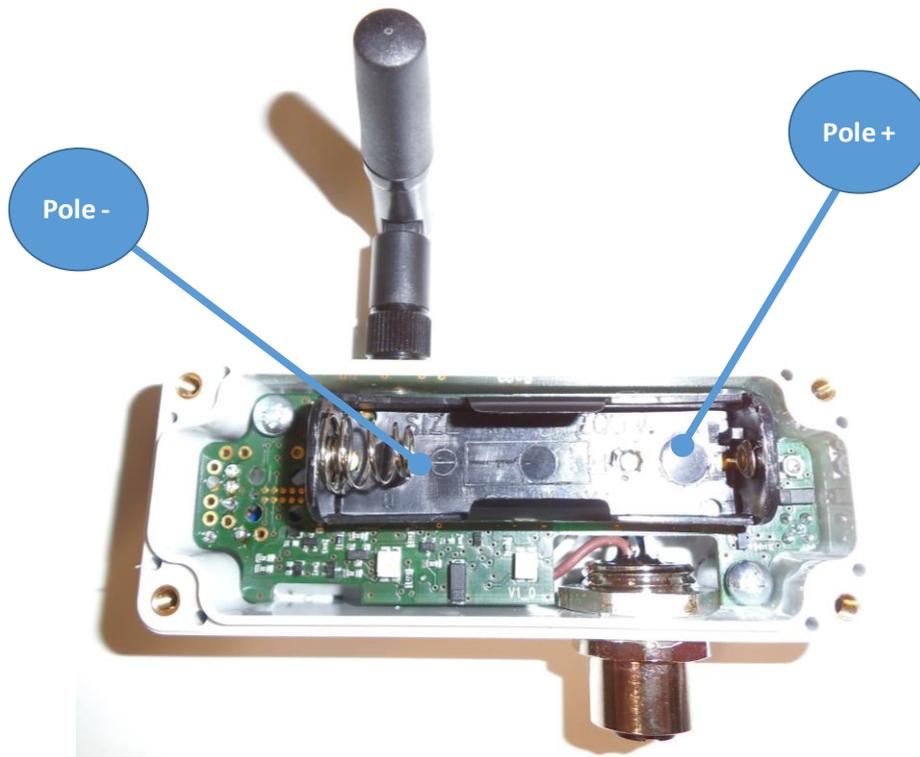

8.3 BEANDEVICE® ONE-BN – WIRING CODE

The BeanDevice® ONE-BN comes with a M12-4Pins Socket. This socket is watertight IP67, the user should use a M12-4Pins plug coming with IP67 Rating.




M12 Socket




The wiring code is described in the following drawing:

Wiring code – M12 Socket side

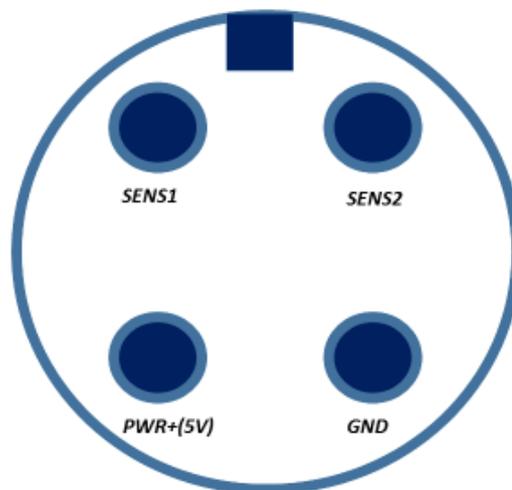

<i>Signal</i>	<i>Description</i>	<i>M12 Pin Number</i>
<i>Sens1</i>	Digital input signal 1	<i>PIN2</i>
<i>Sens2</i>	Digital input signal 2	<i>PIN1</i>
<i>PWR+</i>	Sensor power supply (5V). A maximum current could be to an external sensor is 25mA	<i>PIN3</i>
<i>Gnd</i>	Ground	<i>PIN4</i>

Wiring code – M12 Plug side

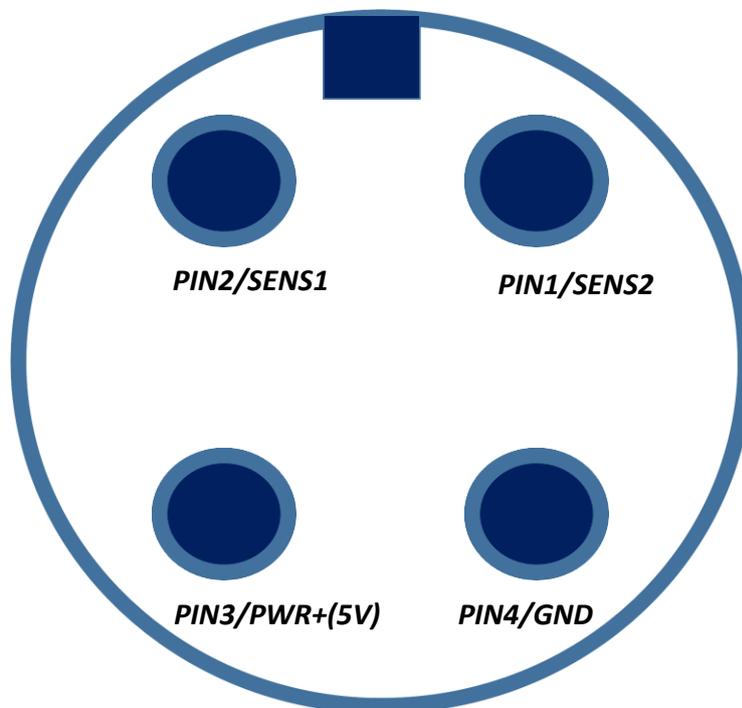

8.4 BEANDEVICE® NETWORK ASSOCIATION



Please read the technical note [TN_RF_006 – "WSN Association process"](#)

8.5 DATALOGGER FEATURE



Please read the technical note [TN_RF_007 – "BeanDevice® DataLogger User Guide"](#)

8.6 OTAC (OVER-THE-AIR-CONFIGURATION) PROCESS



Please read the technical note [TN_RF_010 – « BeanDevice® Power Management »](#)

8.7 COEXISTENCE WITH OTHERS FREQUENCIES AT 2.4 GHZ

The BeanDevice® is sensitive to noise 2.4GHz (Wi-Fi as a source for example), but many protections are already in place, particularly in the IEEE 802.15.4®.

It should however be careful when installing the product, check all the possibilities of radio channels on the frequency range 2.4-2.5GHz. The operation of the product will be improved.



For further information, read the application note: [AN_RF_004 – "Coexistence And Interferences@2.4GHz"](#)



8.8 OPERATING TEMPERATURE

The table below shows the BeanDevice® operating temperature:

Operating temperature
-45 ° C to +75 ° C

BeanDevice® can operate in an area with 90% humidity.

However, the wireless range can be reduced in the presence of water. Avoid mounting the BeanDevice® in an enclosure surrounded by water, or near bushy plants (plants are composed of 90% water),...

8.9 MECHANICAL MOUNTING

The BeanDevice® ONE-XX enclosure can be easily mounted to the wall through 2 mounting holes provided on the back of the box.

The diameters of these holes are 4.2mm respectively.



8.1 FACTORY SETTINGS

If desired, the user can perform a Network context deletion. It allows to restore default parameters on the BeanDevice®:

Parameter	BeanDevice® version			
	ONE-TH	ONE-T	ONE-TIR	ONE-TIR
Power Mode	Sleep with Network listening			
Data Acquisition duty cycle	10s			
Data Acquisition mode	LowDutyCycle			
TX Power	+18dBm			

To restore these defaults parameters, you must perform a **Network context deletion**. The “**Network**” non-contact button is outside the product. Hold the magnet on the button network (“Network”) for more than 2 seconds.





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines



Please consider the environment before printing this document.

Page : 47 / 97

9. BEANDEVICE® SUPERVISION FROM THE BEANSCOPE




Don't hesitate to read the BeanScope® user manual for further information about the BeanScope®

9.1 STARTING THE BEANSCOPE®

The BeanScope® is a supervision software monitor fully dedicated to BeanAir WSN (Wireless Sensor Networks):


- ✓ Start the BeanScope® by double-clicking on the BeanScope™ icon 
- ✓ Click on the button « start » 
- ✓ All the BeanDevice® operating on the WSN will appear on the left window
- ✓ Select the BeanDevice® you want to configure.

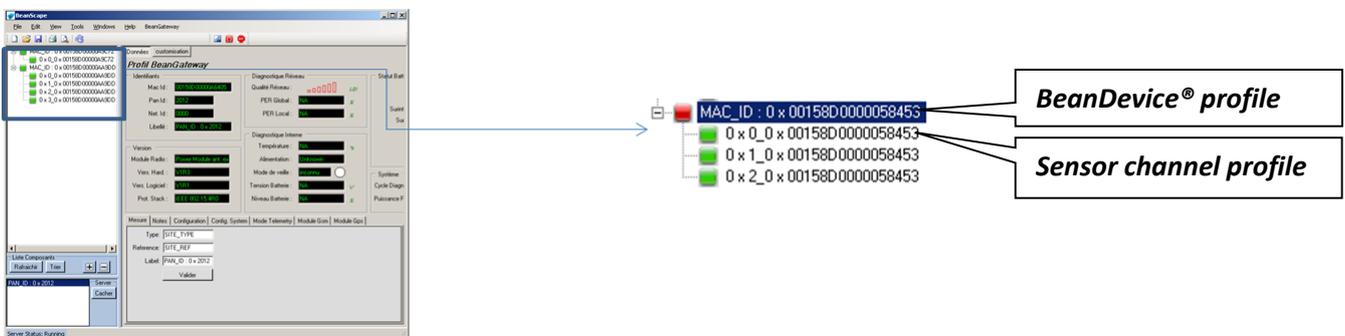

The screenshot shows the BeanScope interface. On the left, a list of devices is displayed with their MAC addresses. On the right, a detailed configuration window for a selected device is shown, with various status indicators and settings. A callout box points to the MAC address list, identifying it as the **BeanDevice® profile** and **Sensor channel profile**.

The User interface is structured as follow:

- ✓ **Green text on black background:** displays the current status information

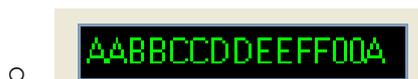


- ✓ **Black text on white background :** device settings



"**BeanDevice® System Profile**" frame is composed of two parts:

- ✓ Status information;
- ✓ Main settings;

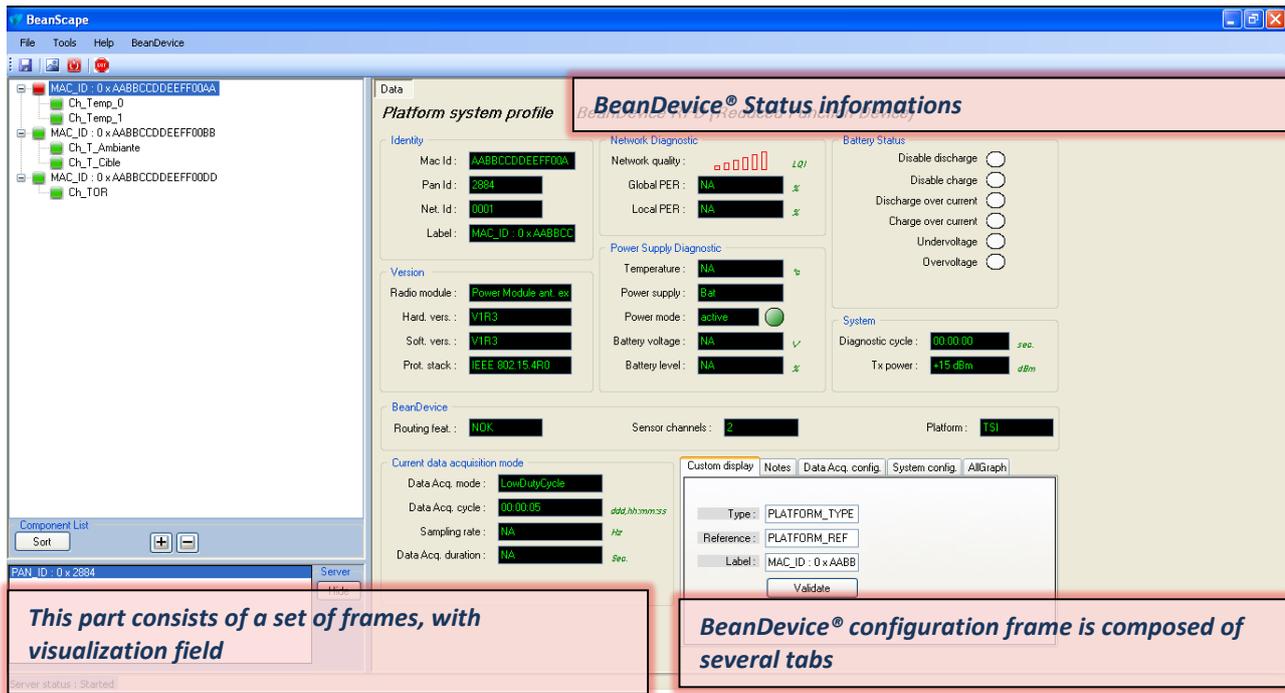

BeanDevice® Status informations

Platform system profile

Identity

Mac Id: 0xAABBCCDDEEFF00A
Pan Id: 2884
Net. Id: 0001
Label: MAC_ID : 0 x AABBC

Version

Radio module: Power Module ant. ex
Hard. vers.: V1R3
Soft. vers.: V1R3
Prot. stack: IEEE 802.15.4P0

Network Diagnostic

Network quality: 100% LQI
Global PER: NA %
Local PER: NA %

Battery Status

Disable discharge:
Disable charge:
Discharge over current:
Charge over current:
Undervoltage:
Overvoltage:

Power Supply Diagnostic

Temperature: NA
Power supply: Bat
Power mode: active
Battery voltage: NA ✓
Battery level: NA %

BeanDevice

Routing feat.: NOK
Sensor channels: 2
Platform: TSI

Current data acquisition mode

Data Acq. mode: LowDutyCycle
Data Acq. cycle: 00:00:05 odd,bb,mm,ss
Sampling rate: NA Hz
Data Acq. duration: NA Sec.

Custom display

Type: PLATFORM_TYPE
Reference: PLATFORM_REF
Label: MAC_ID : 0 x AABBC

Validate

This part consists of a set of frames, with visualization field


BeanDevice® configuration frame is composed of several tabs



9.2 BEANDEVICE® STATUS INFORMATION

You will find below a description of the data information fields for each frame.

9.2.1 Frame: Identity

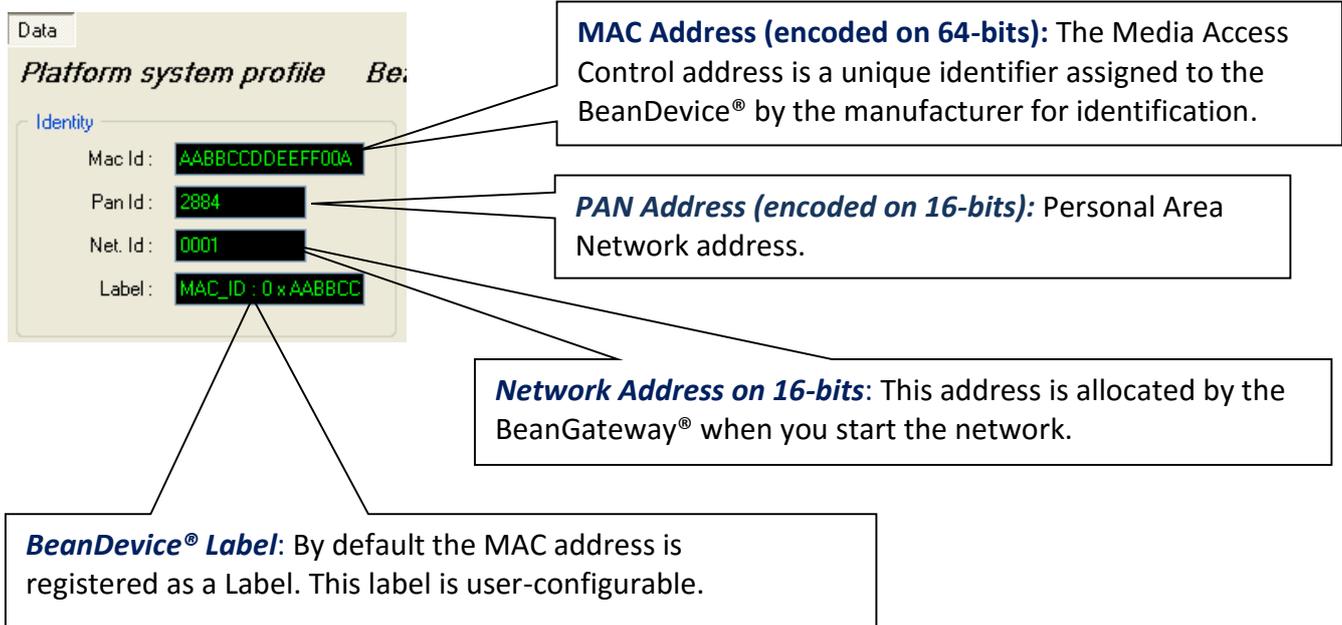

MAC Address (encoded on 64-bits): The Media Access Control address is a unique identifier assigned to the BeanDevice® by the manufacturer for identification.

PAN Address (encoded on 16-bits): Personal Area Network address.

Network Address on 16-bits: This address is allocated by the BeanGateway® when you start the network.

BeanDevice® Label: By default the MAC address is registered as a Label. This label is user-configurable.




How PAN ID is assigned ?

The BeanGateway® starts the WSN, assigning a PAN ID (Personal Area Network identifier) to the network. The PAN ID is pre-determined and cannot be modified. If several WSN are used, before deploying your BeanDevice® check to which BeanGateway® is assigned your BeanDevice®.

9.2.2 Frame : Wireless Network Diagnostic



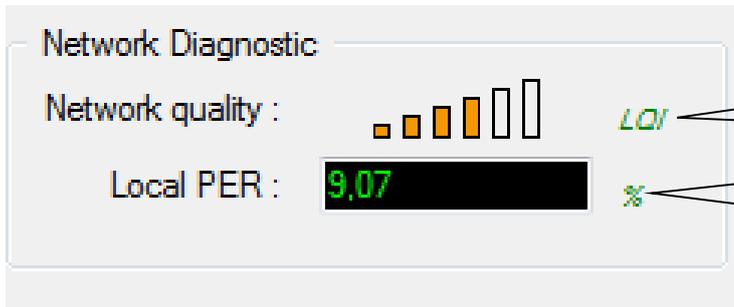


LQI : Link quality indicator of the BeanDevice® (0 to 255).

Local Packet error rate (PER): represents the PER between the BeanGateway® and the BeanDevice®

$PER = \text{Number of lost packet} / \text{Total of packet transmitted}$

9.2.3 Frame : Power Supply diagnostic

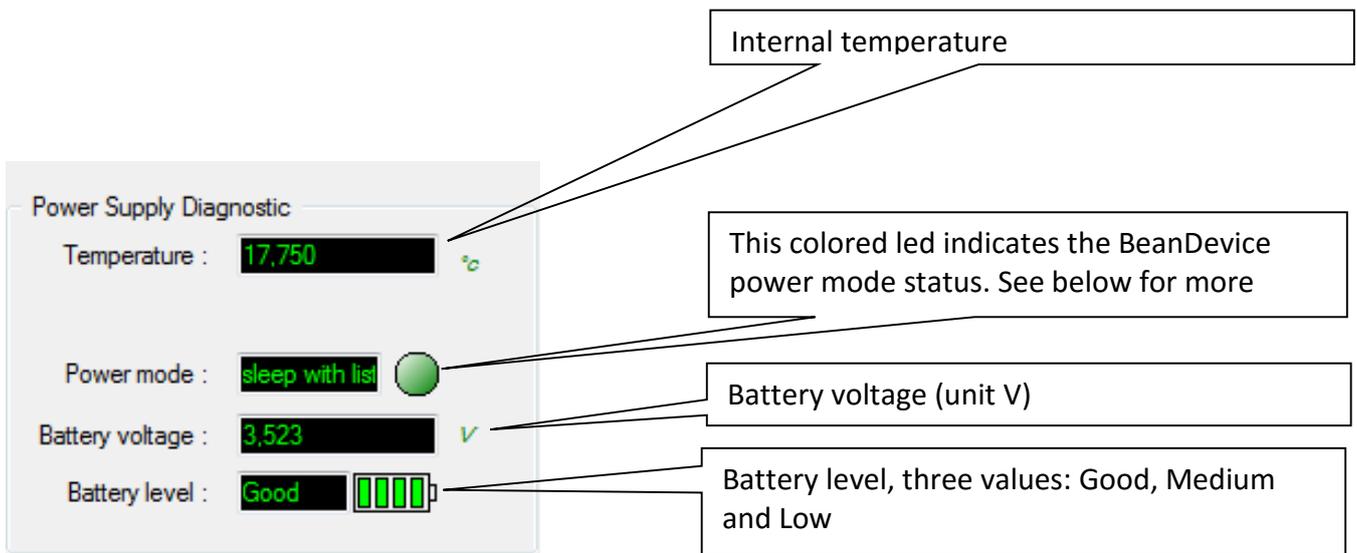

If the battery level is low, it is highly recommended to change your primary cell.

9.2.3.1 BeanDevice® Power Mode status



Power Supply Diagnostic

Temperature : 16,500 °C

Power mode : down 

Battery voltage : 3,542 V

Battery level : Good 

BLUE LED: The BeanDevice® is power off

Power Supply Diagnostic

Temperature : 17,625 °C

Power mode : sleep with list 

Battery voltage : 3,489 V

Battery level : Good 

GREEN LED: The BeanDevice® is in sleeping with network listening power mode

Sleeping with network listening power mode is displayed

Power mode : sleep mode 

GREEN LED: The BeanDevice® is in active sleeping power mode

Sleeping power mode is displayed

9.2.4 Frame : System

System

Diagnostic cycle : 00:00:03 sec.

Tx power : +15 dBm dBm

Diagnostic cycle in seconds (battery charge status, internal temperature, LQI, PER...).

Radio TX Power in dBm





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines




Please consider the environment before printing this document.


Page : 53 / 97

9.3 FRAME : BEANDEVICE®

According to the BeanDevice® version, the information displayed in the frame will not be the same. For example (BeanDevice® ONE-BN):

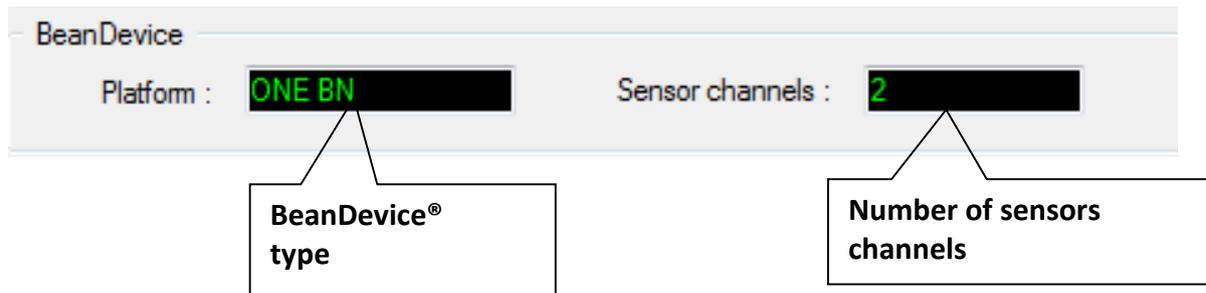

9.3.1 Frame : Product Version

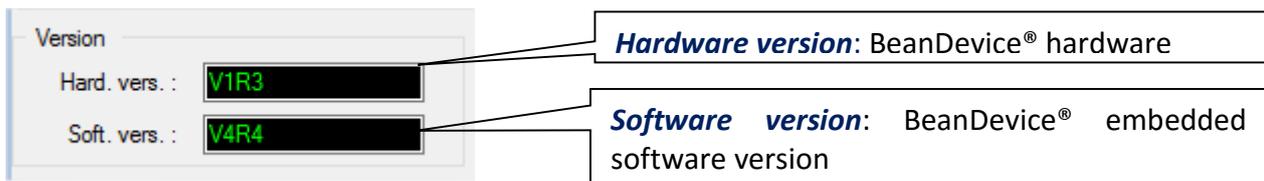

V (version) related to a major modification of the embedded software.

R (Release) related to a minor modification of the embedded software



These ID versions should be transmitted to our technical support center when you encountered a material or software dysfunction.



9.3.2 Frame : Current Data Acquisition mode

This frame displays the current data acquisition mode :

Current data acquisition mode

Data Acq. mode :	LowDutyCycle	
Data Acq. cycle :	00:04:00	<i>ddd, hh:mm:ss</i>
Sampling rate :	NA	<i>Hz</i>
Data Acq. duration :	NA	<i>ddd, hh:mm:ss</i>

Tx Log

If Green, Radio transmission is enabled *If Green, data logging is enabled*

Data acquisition mode available on the BeanDevice®

Data acquisition cycle in Day, hour, minute and second


Not available for Ecosensor products

Not available for Ecosensor products



9.4 MAIN SETTINGS

Select the BeanDevice® which should be configured

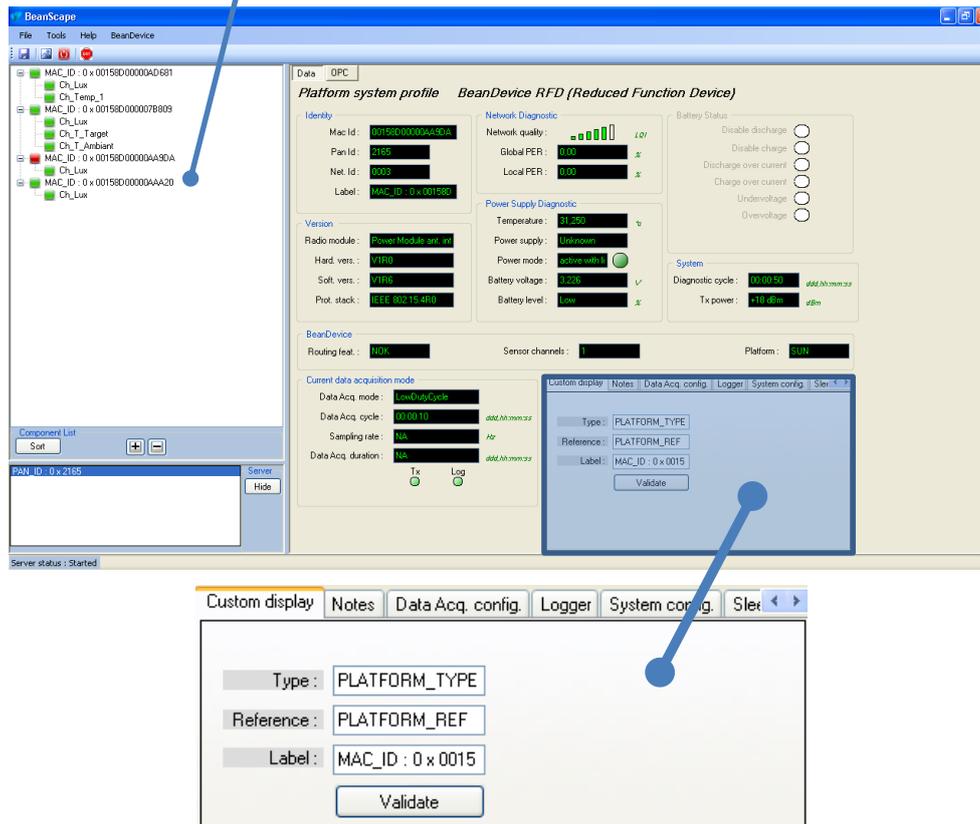

The screenshot shows the BeanScape software interface. On the left, there is a 'Component List' with several entries under 'MAC_ID : 0 x 00158D000000'. One entry is selected. The main area displays the 'Platform system profile' for a 'BeanDevice RFD (Reduced Function Device)'. It includes sections for 'Identity', 'Network Diagnostic', 'Power Supply Diagnostic', 'Battery Status', 'System', and 'Current data acquisition mode'. At the bottom, there are tabs for 'Custom display', 'Notes', 'Data Acq. config.', 'Logger', 'System config.', and 'Server'. The 'Custom display' tab is active, showing fields for 'Type', 'Reference', and 'Label', along with a 'Validate' button.

This frame is composed of several Tabs and includes BeanDevice® OTAC (Over the Air Configuration) Parameters:

Tab	Description
Custom Display	Customize the BeanDevice® label
Notes	This area contains the notes related to the BeanDevice®.
Data acquisition mode configuration	Configure the data acquisition mode , set the acquisition cycle, enable/disable the data logger function.
Data logger	Data logger function on the BeanDevice®
System configuration	Diagnostic cycle and the TX Power





Power Mode Management

Configure the Power Mode (Sleep, Sleep with network listening)

9.4.1 Tab : Custom Display

Custom display | Notes | Data Acq. config. | System config. | AllGraph

Type: PLATFORM_TYPE
Reference: PLATFORM_REF
Label: MAC_ID : 0 x AABB
Validate

Parameter	Description
Type	Enter here the type of BeanDevice® you want to use
Reference	Assign an internal reference to the BeanDevice®
Label	Assign any sort of Label to your BeanDevice®. Therefore, the user can easily associate the BeanDevice® with its equipment (example: Room_N521_Second_Floor)

Then click on “**Validate**” to confirm these new settings.

9.4.2 Tab: Notes

Custom display | Notes | Data Acq. config. | System config. | AllGraph

Validate


This field contains the user notes related to the BeanDevice®.



To change this field, enter your text and click on « **Validate** » button. To back up your text, press the icon 

Example: Machine failure n°XX, requested intervention.

9.4.3 Tab: Data Acquisition configuration

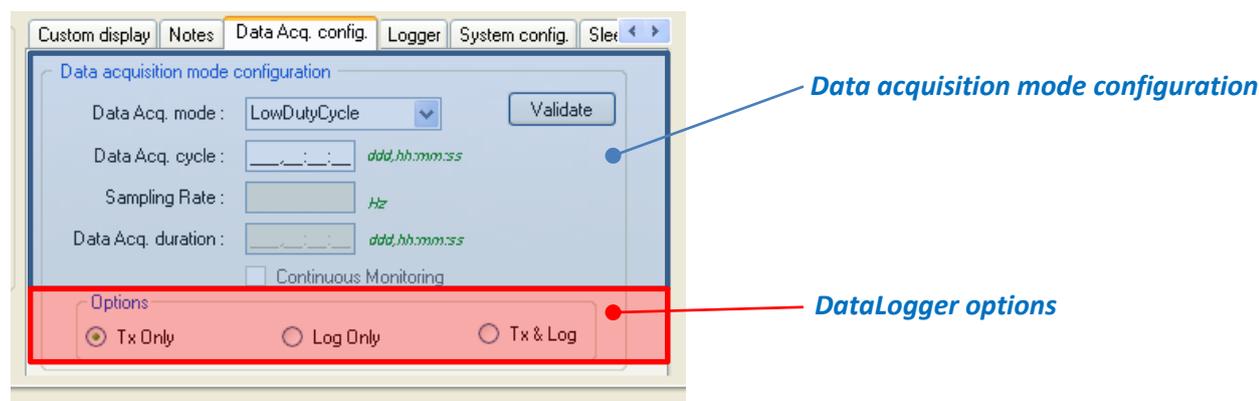



Parameter	Different values	Description
Data Acquisition mode	Low duty cycle Data Acquisition (LDCDA)	Low duty cycle data acquisition is adapted for static measurement (tilt, pressure, temperature) requiring a low power consumption on your BeanDevice®. The duty cycle can be configured between 1 data acquisition & transmission per second to 1 data acquisition & transmission per day.
	Alarm	Data acquisitions are transmitted by radio whenever an alarm threshold (fixed by the user) is reached (4 alarms threshold levels High/Low).
	Survey	Survey mode is a mix between the LDCDA mode and Alarm mode. A data acquisition is transmitted <ul style="list-style-type: none"> ▪ Whenever an alarm threshold (fixed by the user) is reached (4 alarm threshold levels High/Low). ▪ A transmission cycle is reached, the transmission cycle is configurable through the BeanScope® 1s to 24h ;



Data acquisition Cycle	<p>Select the Data acquisition cycle between 1s and 24hours.</p> <p>The format is: Day : Hour : Minute :Second</p>
Sampling rate	Not available on Ecosensor product lines
Data acquisition duration	Not available on Ecosensor product lines
Options	<p><i>Tx only:</i> The BeanDevice® transmits the data acquisition without Datalogging</p> <p><i>Log only:</i> The Beandevicé® logs the data acquisition without wireless transmission</p> <p><i>Tx & Log:</i> The BeanDevice® transmits and logs the data acquisition;</p> <p>For further information about the DataLogger feature, read the technical note TN_RF_007 – “BeanDevice® DataLogger User Guide ”</p>



All the new modifications are displayed on “**Current data acquisition mode**” frame:

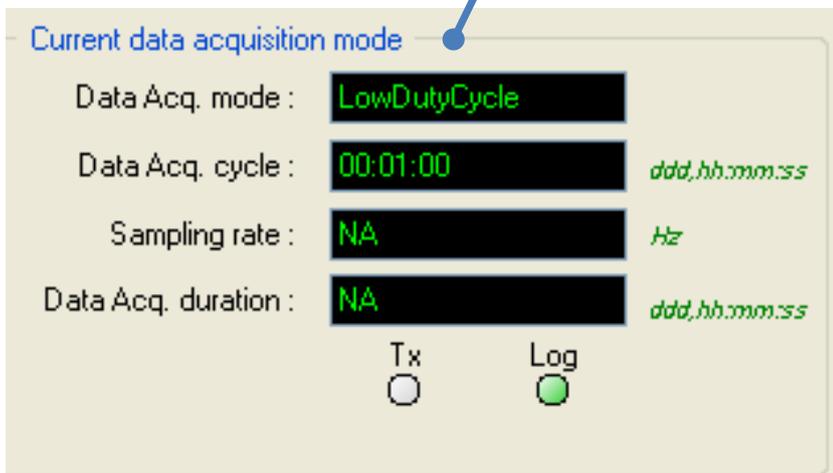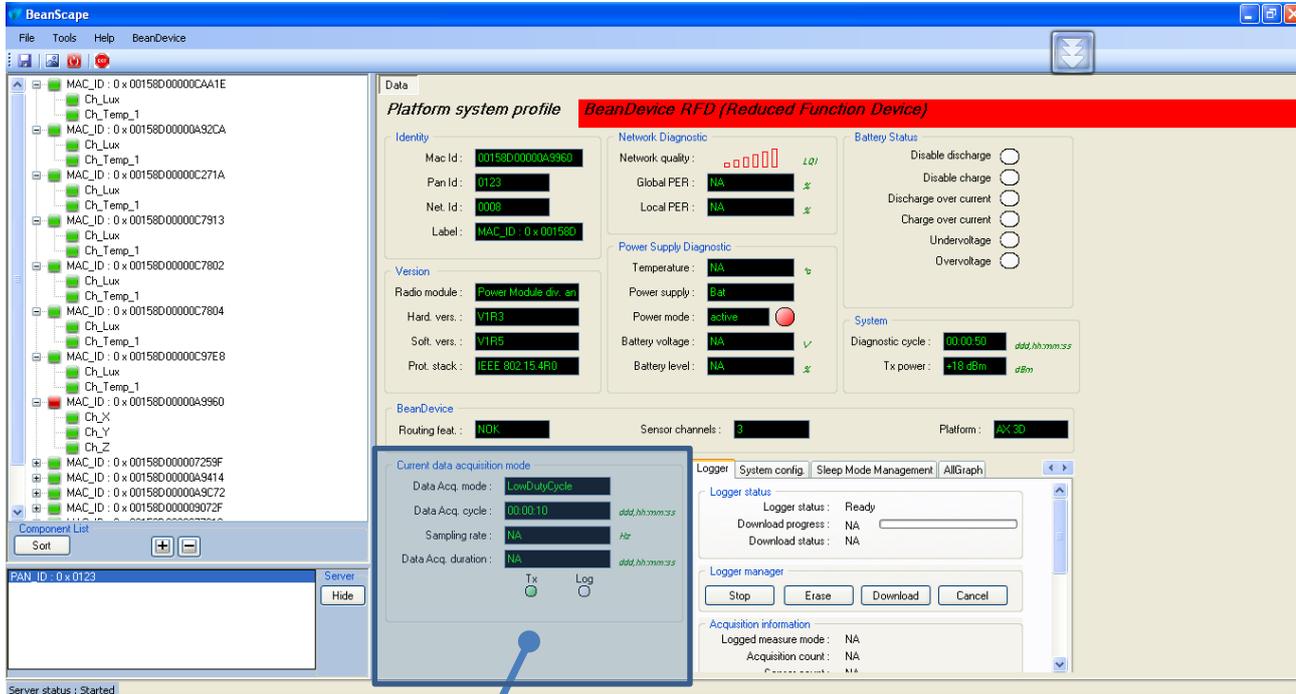


9.4.1 Tab: DataLogger



Please read the technical note [TN_RF_007 – “BeanDevice® DataLogger User Guide”](#)

9.4.1 Tab : System config.

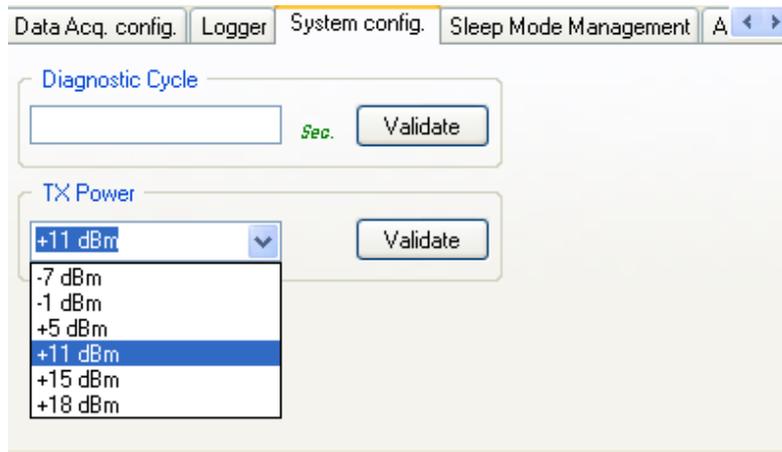

Parameter	Description
Diagnostic cycle	You can set the BeanDevice® diagnostic cycle (Battery status, LQI, PER ...). The Diagnostic cycle is modulo the data acquisition cycle. <i>Ex:</i> If you try to set the diagnostic cycle at 10s while the data acquisition cycle is set at 20s, the diagnostic cycle will be adjusted to 10s ;
TX Power	BeanDevice® TX Power unit is in dBm, it represents the power ratio in decibels (dB) of the measured power referenced to one milliwatt (mW). The antenna radio power is not included. If the BeanDevice® PER is high or the LQI is too low, try to increase the transmission power.



The following flow chart shows the effect of a higher TX power:





TX Power

- Higher Tx Power

Wireless
Range

- Wireless range will increase

Pwr
consumption

- Power consumption will increase

It is highly recommended to set the minimum RF power required for your applications.





If you set the TX power at its minimum value (-7dBm), and the wireless range is more than 5m, you will lose the radio link between your BeanGateway® and the BeanDevice®. To restore the network context with a maximum RF Power:

- By pressing the Network push button for more than 2s, you can reset to factory settings (default RF power is fixed at its maximum: 18 dBm).



How to convert dBm to mW

Zero dBm equals one milliwatt. A 3dB increase represents roughly doubling the power, which means that 3 dBm equals roughly 2 mW. For a 3 dB decrease, the power is reduced by about one half, making -3 dBm equal to about 0.5 milliwatt. To express an arbitrary power P as x dBm, or go in the other direction, the following equations may be used:

$$x = 10 \log_{10}(1000P)_{or}, x = 10 \log_{10} P + 30$$

and

$$P = 10^{(x/10)}/1000_{or}, P = 10^{(x-30)/10}$$

where P is the power in W and x is the power ratio in dBm.



Inside a building, the maximum authorized power is +12 dBm (antenna power included). It is highly recommended to follow the R&TTE guidelines. For more information please visit <http://www.etsi.org>. It is your responsibility to carefully observe the R&TTE guidelines.


9.4.1 Tab : Sleep mode management

This Tab is composed of three frames:


- ✓ **Sleep mode configuration:** Configure the Power mode on your BeanDevice®



- ✓ **Listening Mode Status** : Describes the status of an OTAC (Over-the-air-Configuration)
- ✓ **Sleep mode with listening config.** : Configuration settings for Sleep mode with network listening

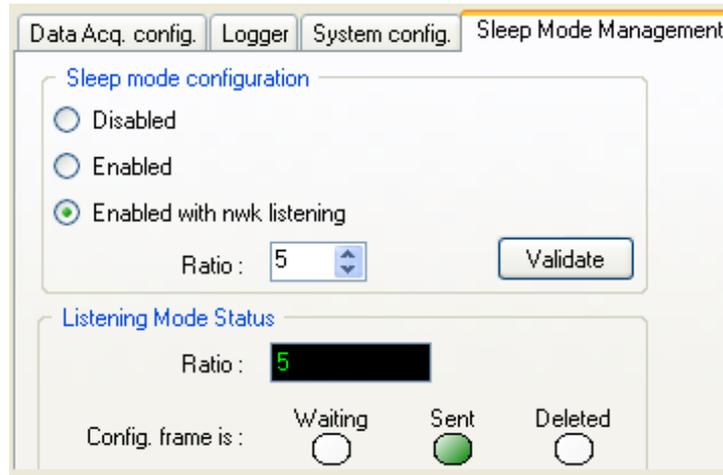

The screenshot shows the 'Sleep Mode Management' window with tabs for 'Data Acq. config.', 'Logger', 'System config.', and 'Sleep Mode Management'. The 'Sleep mode configuration' section has three radio buttons: 'Disabled', 'Enabled', and 'Enabled with nwk listening' (which is selected). Below the radio buttons is a 'Ratio' field set to '5' and a 'Validate' button.

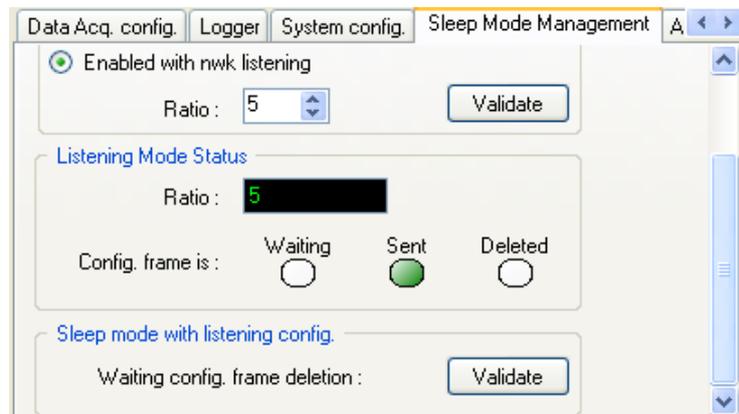

The screenshot shows the 'Sleep Mode Management' window with the 'Listening Mode Status' section. The 'Ratio' field is set to '5'. Below it are three radio buttons: 'Waiting', 'Sent' (which is selected), and 'Deleted'. The 'Sleep mode with listening config.' section is also visible, showing a 'Waiting config. frame deletion' field and a 'Validate' button.




Parameter	Description
<i>Sleep mode configuration</i>	<p>Disabled: Sleeping mode is disabled. The BeanDevice® operates in Active power mode.</p> <p>Enabled: Sleeping mode is enabled</p> <p>Enabled with nwk listening: Sleeping with network listening mode is enabled.</p> <p>Ratio: Fix the Ratio of the listening cycle depending on the data acquisition low duty cycle.</p> <p>Example : If the data acquisition is 30 seconds, the Listening cycle will be 150 seconds.</p>
<i>Listening mode status</i>	<p>Ratio: displays the latest Ratio value</p> <p>Waiting: This led is green if an OTAC (Over-the-Air configuration) frame is pending for a transmission to the BeanDevice®</p> <p>Sent: This led is green if an OTAC (Over-the-Air configuration) frame is transmitted to the BeanDevice®.</p> <p>Deleted: This led is red if a pending OTAC (Over-the-Air configuration) is deleted</p>
<i>Sleep mode with listening config</i>	By clicking on “validate”, the pending OTAC frame is deleted

9.4.2 Tab : AllGraph

Allgraph mode allows displaying all the sensors curves of a BeanDevice® on the same graph.



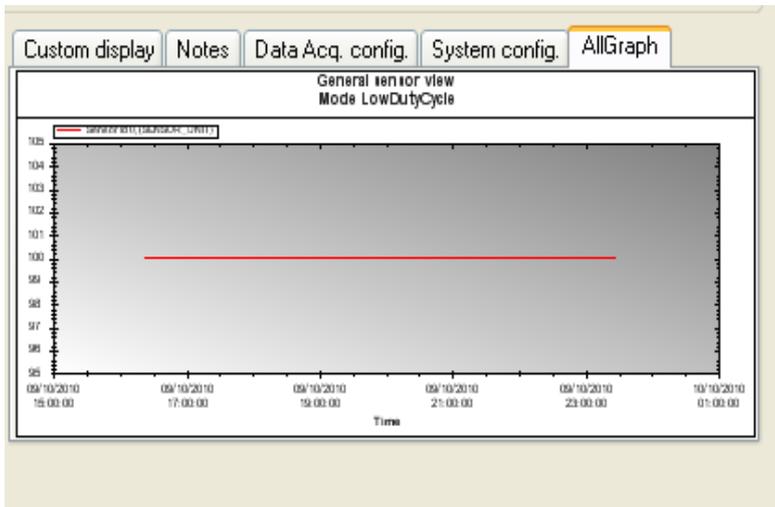

9.5 SENSOR CHANNEL PROFILE

The screen « Sensor profile » consists of three parts:

1


General information on the measurement channel;

2

Measurement channel configuration;


3

A graph which displays in real-time sensor signals during data acquisition;

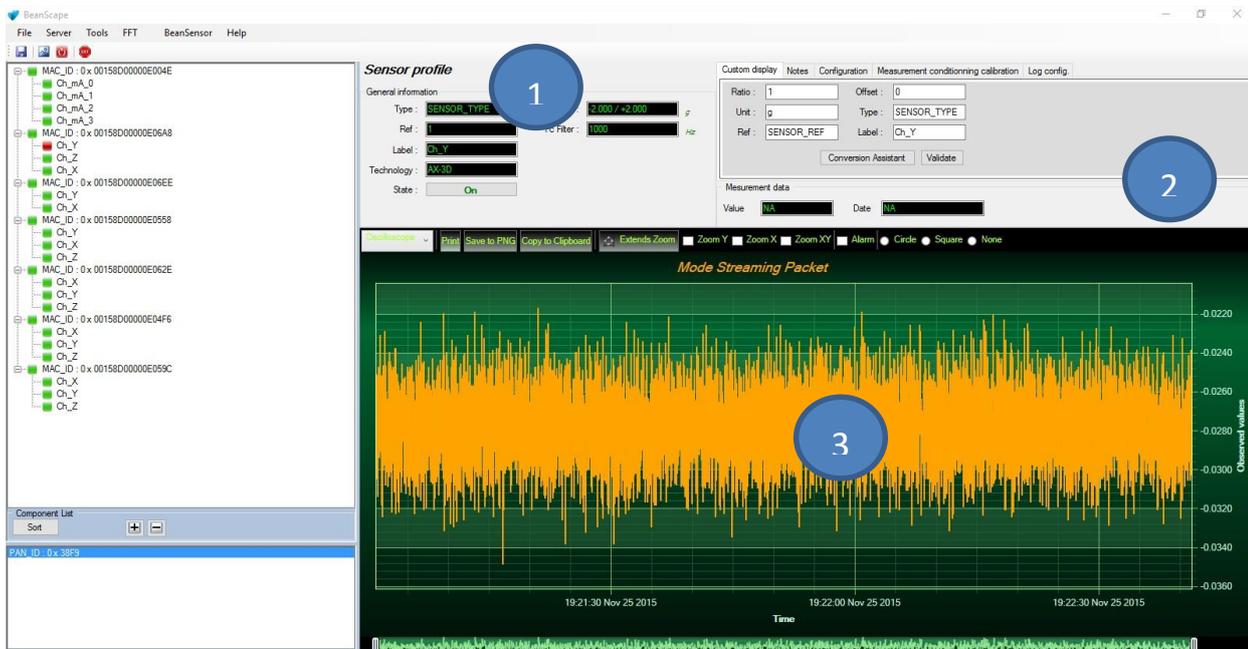

9.5.1 Sensor channel status

9.5.1.1 General informations on Temperature sensor (available on the BeanDevice ONE-T only)

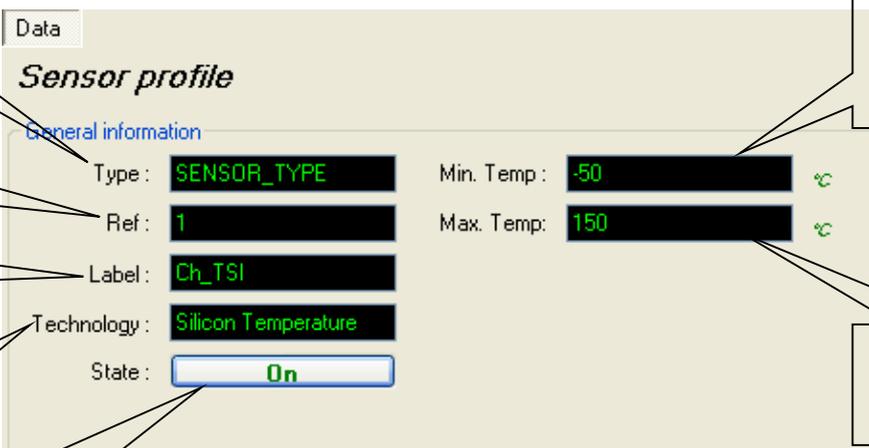

Sensor Type

Sensor Reference

Sensor label displayed on

Sensor technology

Sensor ON/OFF Button: enable/disable

Minimum Temperature value

Maximum Temperature value

Field	Value
Type	SENSOR_TYPE
Ref	1
Label	Ch_TSI
Technology	Silicon Temperature
State	On
Min. Temp	-50 °C
Max. Temp	150 °C

9.5.1.2 General informations on IR temperature sensor (available on the BeanDevice® ONE-TIR only)

Ambient temperature



Sensor Type

Minimum Temperature value



Data

Sensor profile

General information

Type :	SENSOR_TYPE	Min. Temp :	-38,19	°C
Ref :	2	Max. Temp :	125,01	°C
Label :	Ch_T_AMBIENT			
Technology :	TIr - ambient			
State :	<input type="button" value="Off"/>			

Sensor Reference

Sensor label displayed on

Sensor technology

Sensor ON/OFF Button:
enable/disable

Maximum Temperature value

IR temperature

Data

Sensor profile

General information

Type :	SENSOR_TYPE	Min. Temp :	-273,15	°C
Ref :	1	Max. Temp :	382,19	°C
Label :	Ch_T_object			
Technology :	Infrared Temperature	Emissivity :	1	
State :	<input type="button" value="Off"/>			

Sensor Type

Sensor Reference

Sensor label displayed on the

Sensor technology

Sensor ON/OFF Button:
enable/disable

Minimum Temperature value

Maximum Temperature value

IR Emissivity coefficient




9.5.1.3 General informations on binary input (available on the BeanDevice® ONE-BN only)



Please read the Technical note: [TN RF 005 – "Pulse counter & binary data acquisition on the BeanDevice® ONE-BN"](#)

9.5.1.4 Frame: Measurement data

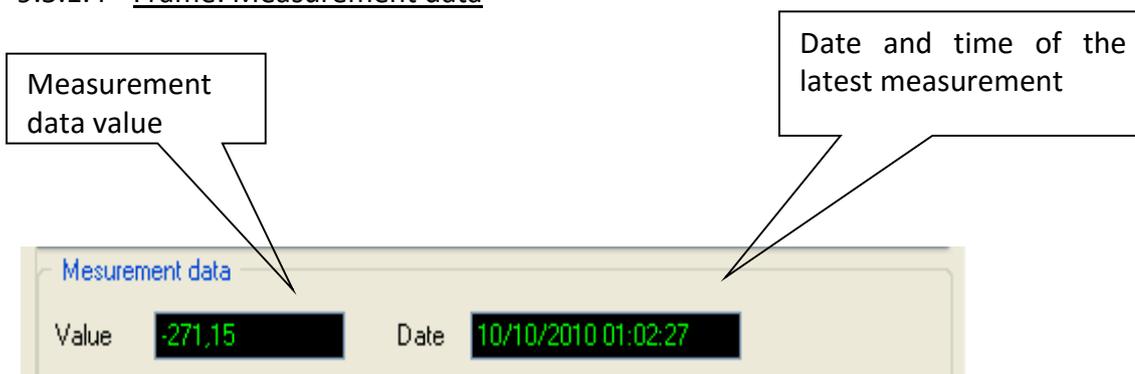


By default, sensor unit format is

- **BeanDevice® ONE-T** : °C for the temperature sensor
- **BeanDevice® ONE-TIR** : °C for IR & ambient temperature sensors
- **BeanDevice® ONE-TH** : °C for the temperature sensor, %RH for humidity sensor
- **BeanDevice® ONE-BN** : Pulsecounter or binary 1/0 measurement for binary inputs


9.5.1.5 Frame : Alarm threshold



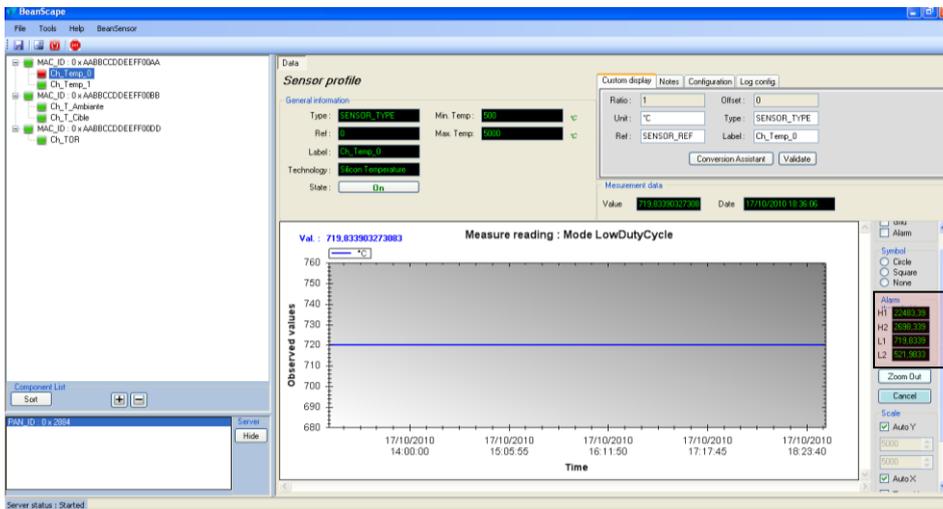

Alarm threshold frame

Alarm threshold are displayed in this frame:

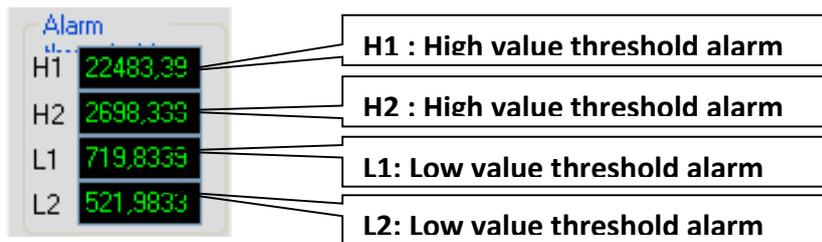

Depending on your sensor resolution, the displayed threshold value can differ from the reference value.

9.5.1 Sensor configuration & calibration frame

This frame contains a set of 5 tabs:



Custom Display

- Allows the end user to customzie the sensor

Notes

- Contains notes relating to the BeanDevice® sensor

Configuration

- Sensor configuration interface. The user can configure the alarm thresholds related to the sensor
- Depending on the BeanDevice® version which is used, other configuration parameters are available

**Measurement conditioning
& calibration**


- Sensor or measurement channel calibration

Log configuration

- Logs configuration on the BeanScape®

9.5.1.1 Tab: Custom display

These parameters allow the user to customize his sensor:

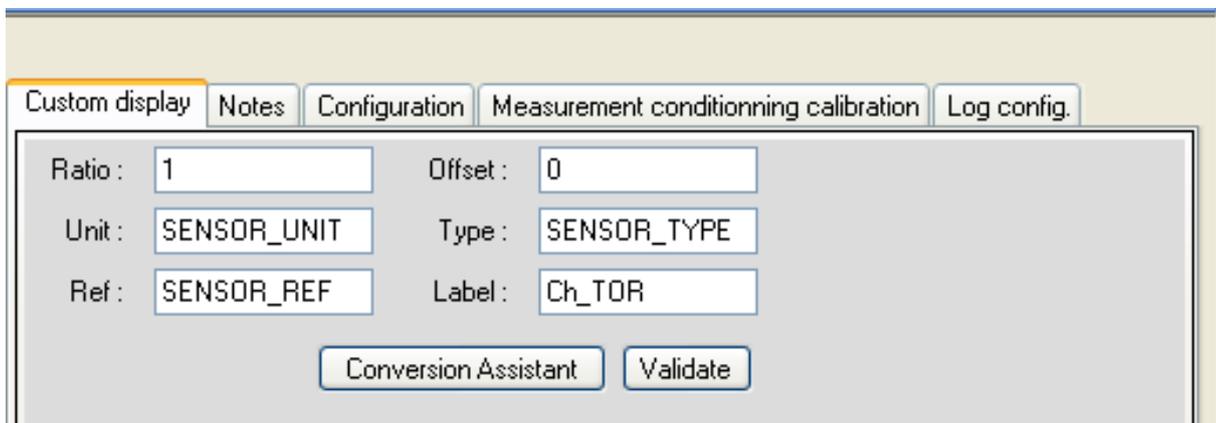

The screenshot shows a software interface with five tabs: "Custom display", "Notes", "Configuration", "Measurement conditioning calibration", and "Log config.". The "Custom display" tab is active. It contains the following fields and buttons:

Ratio :	<input type="text" value="1"/>	Offset :	<input type="text" value="0"/>
Unit :	<input type="text" value="SENSOR_UNIT"/>	Type :	<input type="text" value="SENSOR_TYPE"/>
Ref :	<input type="text" value="SENSOR_REF"/>	Label :	<input type="text" value="Ch_TOR"/>

At the bottom of the form are two buttons: "Conversion Assistant" and "Validate".



- **Type:** Describe the sensor type (ex: load cell, pressure, Strain gage +/- 2 Mv/v, LVDT,....)
- **Unit:** customer sensor unit (bar, °C, l/h....)
- **Ratio :** Sensor Ratio coefficient (RAT);
- **Offset :** Sensor Offset Coefficient (OFF);
- **Label:** Give a name to your sensor. (ex : Sensor on StatorMachine 1, sensor in Room 2 Floor 3)

Measurement conversion formula:

$$\text{Converted Measurement} = \text{Measurement} \times \text{RAT} + \text{OFF}$$

Example with a temperature sensor: By default the temperature unit is in degree Celsius. The user wants to convert the unit of his temperature sensor in degree Fahrenheit.

$$\text{Converted Measurement}[^{\circ}\text{F}] = \text{Measurement}[^{\circ}\text{C}] \times \text{RAT} + \text{OFF}$$


With **RAT** = 1.8 and **OFF** = 32



Conversion assistant

To avoid conversion error, a conversion assistant is available to help you to setup quickly your measurement channel of your BeanDevice®.

Click on conversion assistant from the tab "Custom display", a window will open allowing you to do a linear conversion.

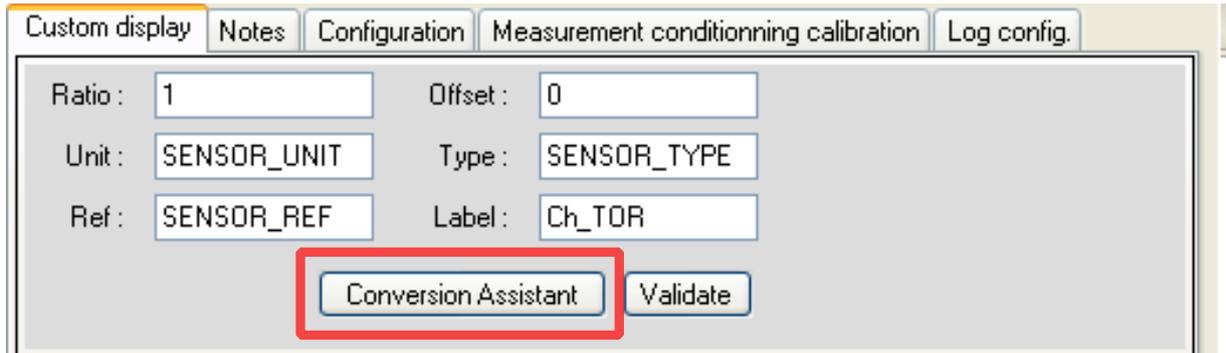

Custom display | Notes | Configuration | Measurement conditioning calibration | Log config.


Ratio : Offset :

Unit : Type :

Ref : Label :

On the left column, the user can enter the non-converted measurement data. On the right column, the user can enter the converted measurement values with the desired unit.

The ratio and offset values are calculated automatically by the conversion assistant.

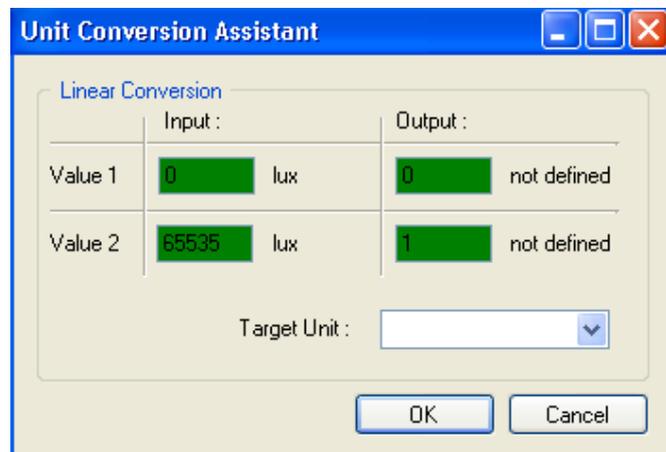


Unit Conversion Assistant

Linear Conversion

	Input :	Output :
Value 1	<input type="text" value="0"/> lux	<input type="text" value="0"/> not defined
Value 2	<input type="text" value="65535"/> lux	<input type="text" value="1"/> not defined

Target Unit :

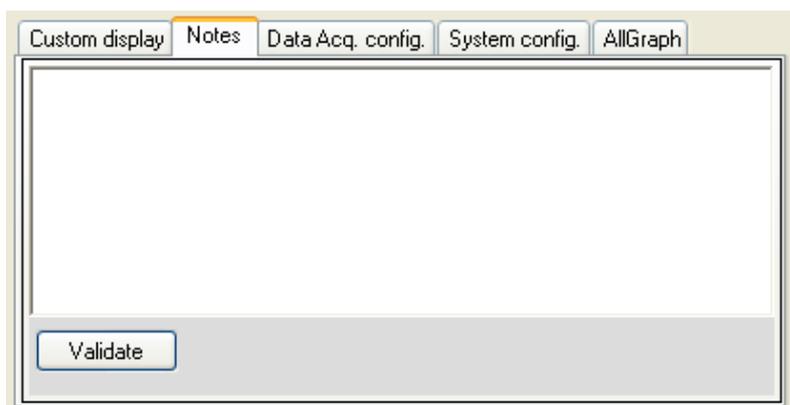

9.5.1.2 Tab : Notes

This field contains notes relating to the BeanDevice® sensor. To change this field, enter a value or free text and click the "**Validate**" button.


A new window opens; accept your modifications by clicking on "OK".



To backup your text click on the icon "Backup your Database"



9.5.1.3 Tab: Configuration

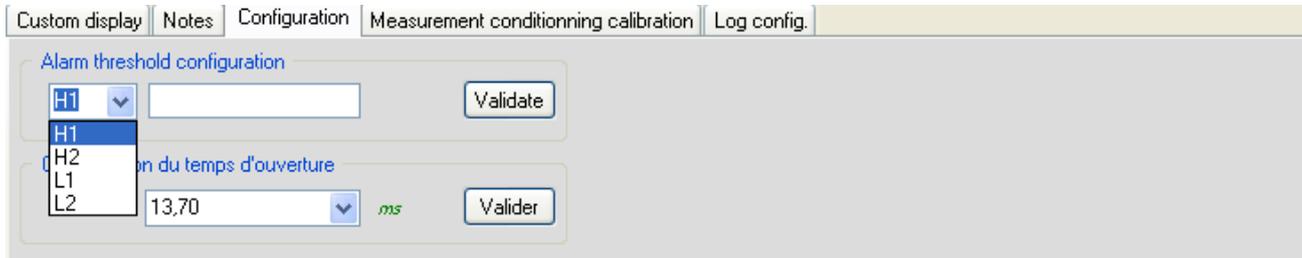

Alarm threshold

■ You can configure threshold high values (H1, H2) and low values (L1,L2) . In alarm mode, when a higher low threshold value is reached, an alarm notification is transmitted to the BeanGateway® ;


- ✓ If the sensor value is higher than H1/H2, an alarm notification is send to the BeanGateway®/BeanScape®;
- ✓ If the sensor value is lower than L1/L2, an alarm notification is send to the BeanGateway®/BeanScape®;.

Threshold values must be organized in this manner:

$$H2 \geq H1 > L1 \geq L2$$

9.5.1.4 Tab : Sensor & Analog conditioning calibration

These coefficients are used to calibrate the *external sensors (temperature, IR Temperature, Humidity....)* sensor.

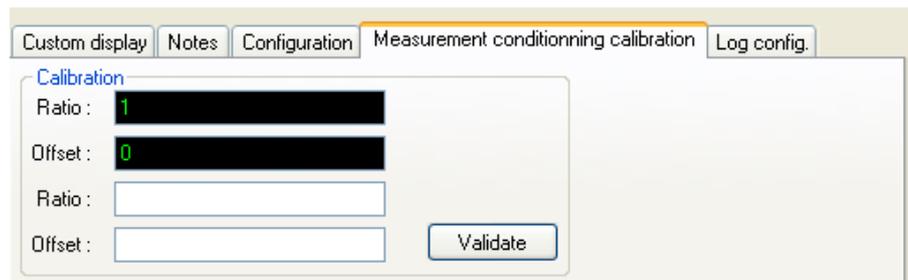

The BeanScape® provides a calibration interface for each measurement channel:

- **Ratio** : multiplier coefficient
- **Offset**: adder/subtracted coefficient. Its unit is the sensor unit.

$$\text{Calibrated_value} = (\text{Ratio} \times \text{Non_Calibrated_Value}) + \text{Offset}$$



Enter the calibration coefficients and then click on Validate.



The calibrations coefficients are backed up on the BeanDevice® flash memory and are conserved during the lifetime of your product.




WARNING: These calibration coefficients should be accessible to an advanced user. A wrong calibration will result in false measurements.

9.5.1.5 Tab : Log configuration

For more info, see [BeanScope® user manual](#)


9.5.2 Graphical display

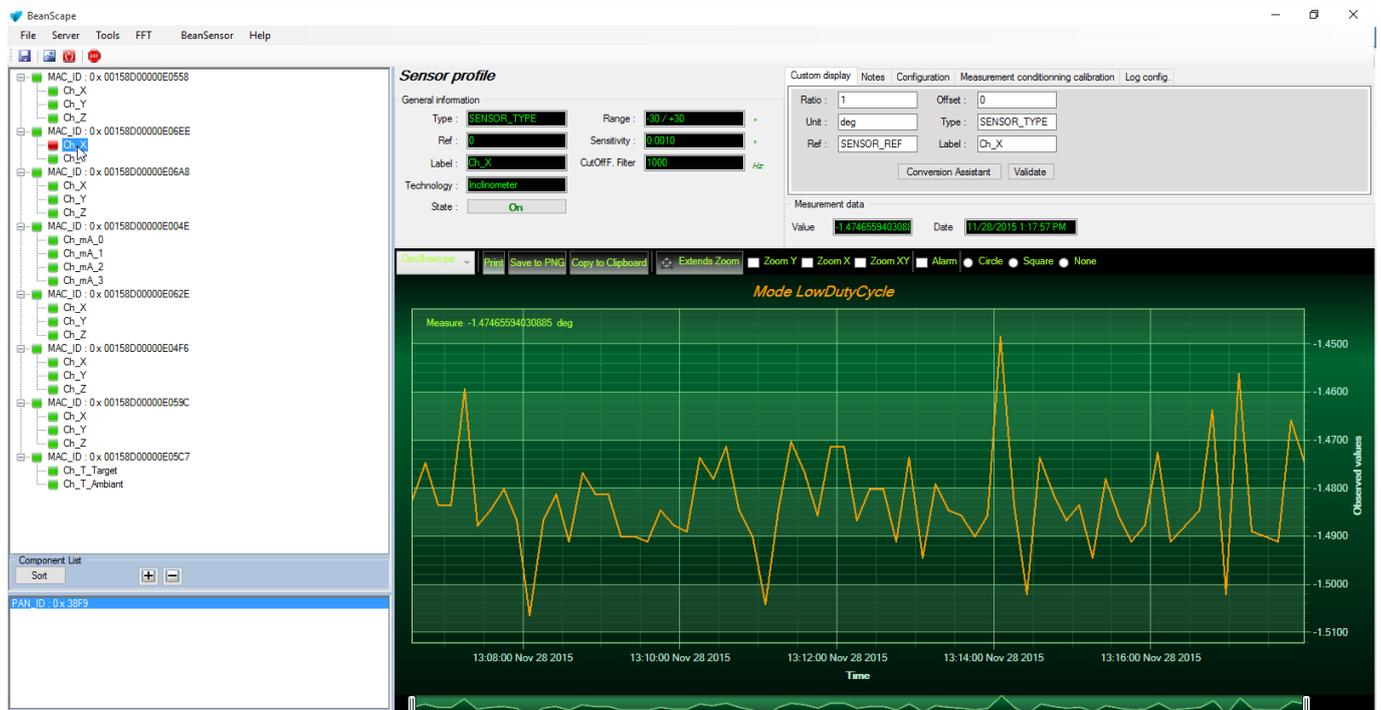

The chart is composed of two parts:

- ✓ **Part 1:** This is a preview window, allowing you to observe sensors acquisitions;
- ✓ **Part 2:** A strip on the side composed of different frames allows customizing the graph;

The graph has two axes:

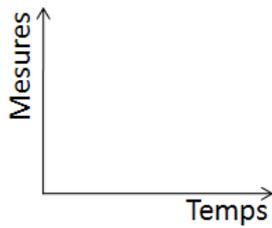


Axe-X: Timeline


Axes-Y: received sensor acquisitions



We can visualize the BeanDevice® data acquisition mode, and the last data acquisition obtained directly from the graph:

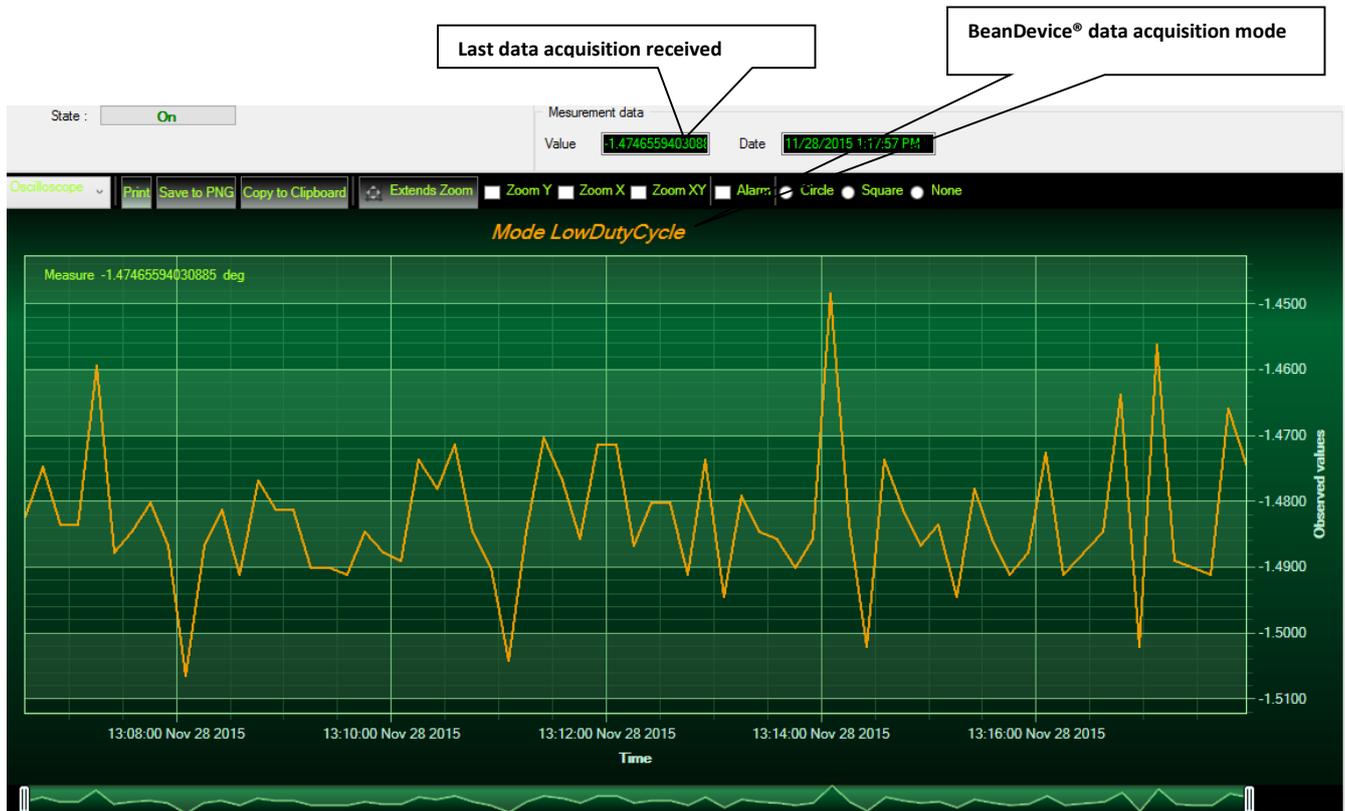

A right click on the graph allows a set of actions:

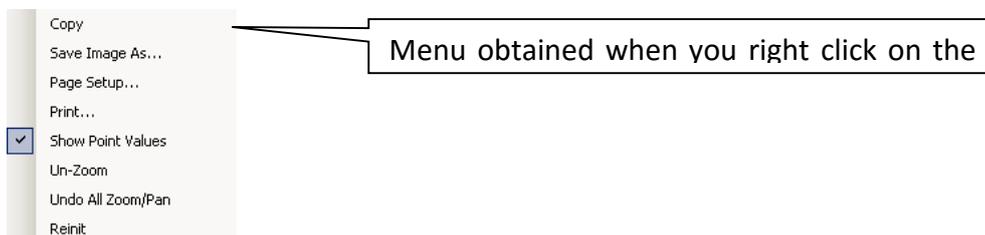

The meaning of each field of the menu is:

Copy: Copies the graph to the clipboard






Save Image As ...: Save your graph

The application offers a wide choice of type, for recording your graphs

Page Setup...: Use page setup to fine-tune pages before printing

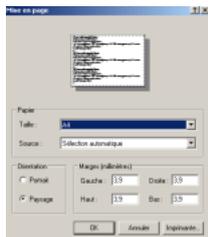

Print ...: Select your printer and start printing



Show Point Values: Enabling this option allows you to see the detail of each measurement plot

A zoom of the graph is possible using the mouse. This is possible only if one or both boxes "Zoom X and Y Zoom" is checked. Indeed, in this case the passage of the mouse cursor over the figure changes its shape. The form taken by the cursor is .

Two options available to you to zoom the graph:



- 1) You use the mouse wheel
- 2) Or holding down the left mouse button, you select a chart area. Release the left mouse button causes a zoom selection.




9.5.2.1 Frame: Marks



This frame consists of two check boxes that are "grid and alarm."

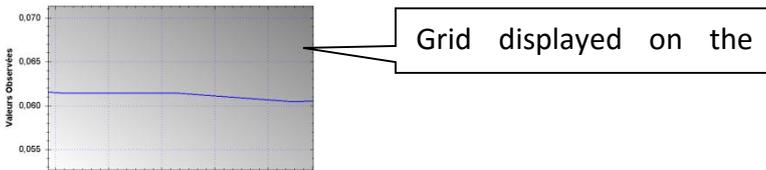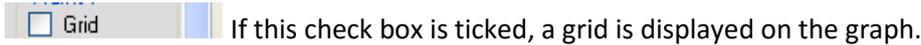

If this check box is ticked, all the alarms threshold H1/H2/L1/L2 are displayed on the graph

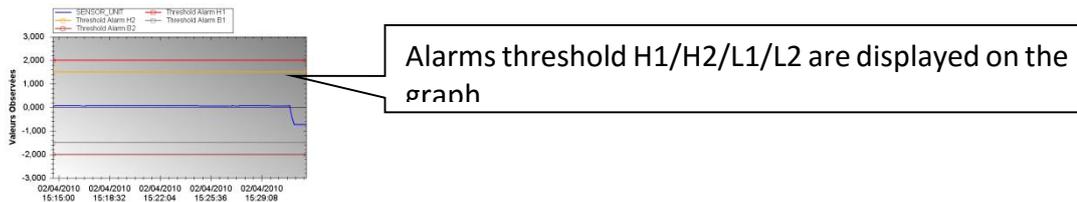


9.5.2.2 Frame: Symbols


From this frame you can select the display mode of action of the chart. Three types of symbols are available:

<p>Symbol</p> <p><input type="radio"/> Circle</p> <p><input type="radio"/> Square</p> <p><input checked="" type="radio"/> None</p>	<p>Circle: Brings up a point on each bar graph</p> <p>Square: brings up a square on each measure of the graph</p> <p>None: No logo is displayed on the graph</p>
--	---



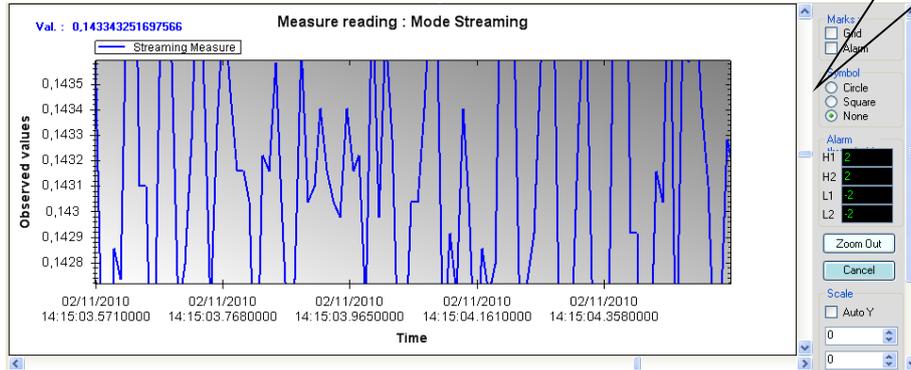


No symbol activated

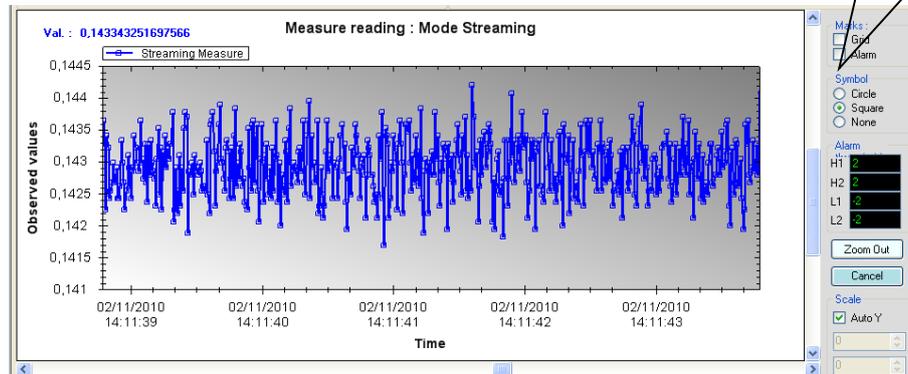


Square symbol activated



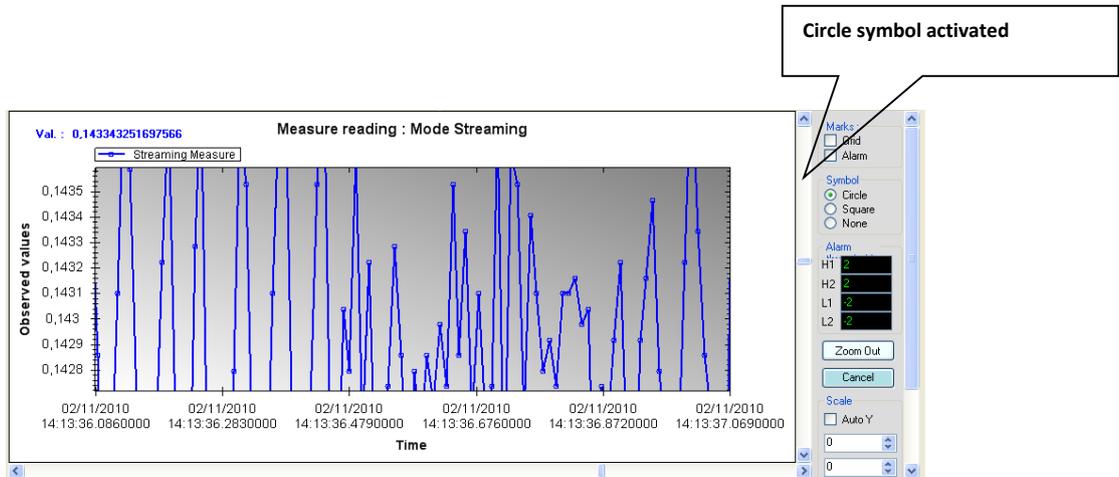

9.5.2.3 Frame : Scale

From this frame, you can customize the scaling of your graphics to suit your needs.

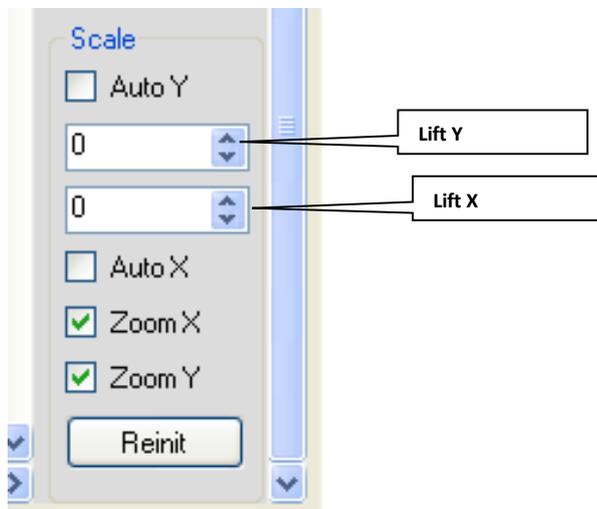

Check box "Auto Y" and "Auto X"

- ✓ Select “Auto X” scales the X-axis automatically on the graph
- ✓ Select “Auto Y” scales Y-axis automatically on the graph

Lifts Y and X



- ✓ Where the "Auto Y" box is unchecked, you can set the limits for the graph from the field "X-lift"
- ✓ Where the "Auto X" box is unchecked, you can set the limits for the graph from the field "Y-lift"

Checkbox "Zoom X and Y Zoom"

These boxes are useful for performing a graph zoom from the mouse wheel, there are four cases:

- ✓ **Case 1**: Case "Zoom X checked" and "Zoom Y unchecked." The graph zoom will only affect the X axis.
- ✓ **Case 2**: Case "Zoom X unchecked" and "Zoom Y ticked." The graph zoom will only affect the Y axis.
- ✓ **Case 3**: Case "Zoom X checked" and "Zoom Y ticked." Zoom will affect both X and Y axes
- ✓ **Case 4**: Case "Zoom X unchecked" and "Zoom Y unchecked." The zoom function from the mouse wheel is disabled.

9.6 DATALOGGER CONFIGURATION



Please read the technical note [TN RF 007 – "BeanDevice® DataLogger User Guide"](#)



10. BEANDEVICE® MAINTENANCE & SUPERVISION (FOR EXPERIENCED USER)

This section allows to an experienced user to configure correctly the Wireless Sensor Networks.

10.1 EXTENDING THE BATTERY LIFE

The battery life depends on several parameters:

- ✓ Operating temperature
- ✓ Data acquisition cycle & mode



For further information about the current consumption on a BeanDevice® during sleeping & active power mode, please read the technical note: [RF TN 002 V1.0 - Current consumption in active & sleeping mode](#)

The following table gives you a list of recommendations in order to extend the battery autonomy of your BeanDevice®:

Influence factors on battery autonomy	Observations	Recommendations
<i>Data acquisition cycle</i>		
<i>TX Power</i>	Power consumption will grow with the TX Power	If your wireless range is low, try to use a lower TX Power.
<i>Packet Error Rate (PER)</i>	A high packet error rate can cause a higher retransmission data and this increase the current consumption.	Try to replace your BeanDevice® in an area where the radio link is much better (see Link Quality Indicator value).

10.1 OVER-THE-AIR CONFIGURATION (OTAC) PARAMETERS

The BeanDevice® integrates an internal flash memory used for backing up OTAC (Over-the-air configuration) parameters.

This memory is organized into several levels:





“Rethinking sensing technology”

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

- Level 1 • End-user parameters
- Level 2 • Sensor calibration coefficients
- Level 3 • Network maintenance (only fo experts)
- Level 4 • Battery/Primary cell calibration



10.1.1 Level 1: End-user OTAC parameters

The following table presents all the defaults configuration parameters:

Parameter	BeanDevice® version			
	ONE-T	ONE-TH	ONE-TIR	ONE-BN
Power Mode	Sleeping with Network listening			
Data Acquisition duty cycle	1 minute			
Data Acquisition mode	LowDutyCycle			
TX Power	+15dBm			
Alarms Threshold	H1 :2 ou10 H2 :2 ou 10 S2 :-2 ou -10 S1 :-2 ou -10	H1 :20 H2 :20 S2 :0 S1 :0	H1 :20 H2 :20 S2 :0 S1 :0	H1 :20 H2 :20 S2 :0 S1 :0



To restore these defaults parameters, you must perform a Network context deletion. The user should press the button network ("Network") network for more than 2 seconds.



Level 2, 3 & 4 of Configuration parameters are not affected by network context deletion (by hardware or software)




10.2 NETWORK DIAGNOSTIC FROM YOUR BEANSCAPE® SOFTWARE

This chapter describes the network diagnostic tool available on the BeanScope®.

10.2.1 Sensor operating status

Two states of the sensor operating status exist:

- **On** : the sensor is enabled
- **Off** : the sensor is disabled

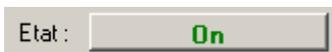


The BeanDevice® checks the sensor connection and its status. It decides to disable the sensor when:


- ✓ The sensor is disconnected;
- ✓ A short-circuit is present on the sensor;
- ✓ The sensor doesn't respond;

10.2.2 Displaying Network information

From your BeanScope® interface, click on a BeanDevice® profile displayed on the left window, a tab "BeanDevice" will appear on the top of the window. Click on this tab, then click "View History Network".

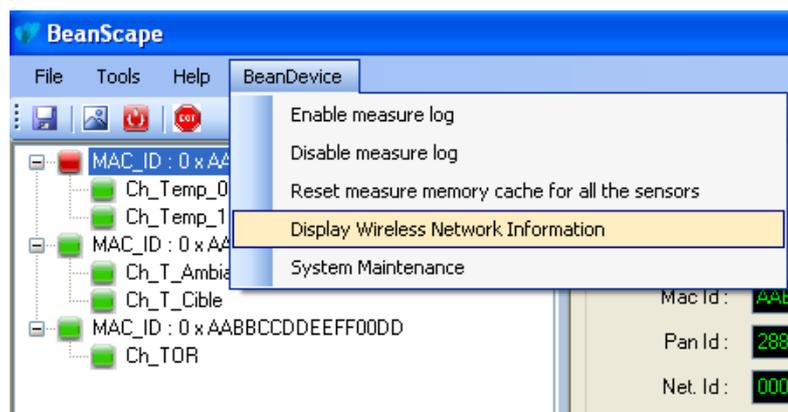

A new window will appear:

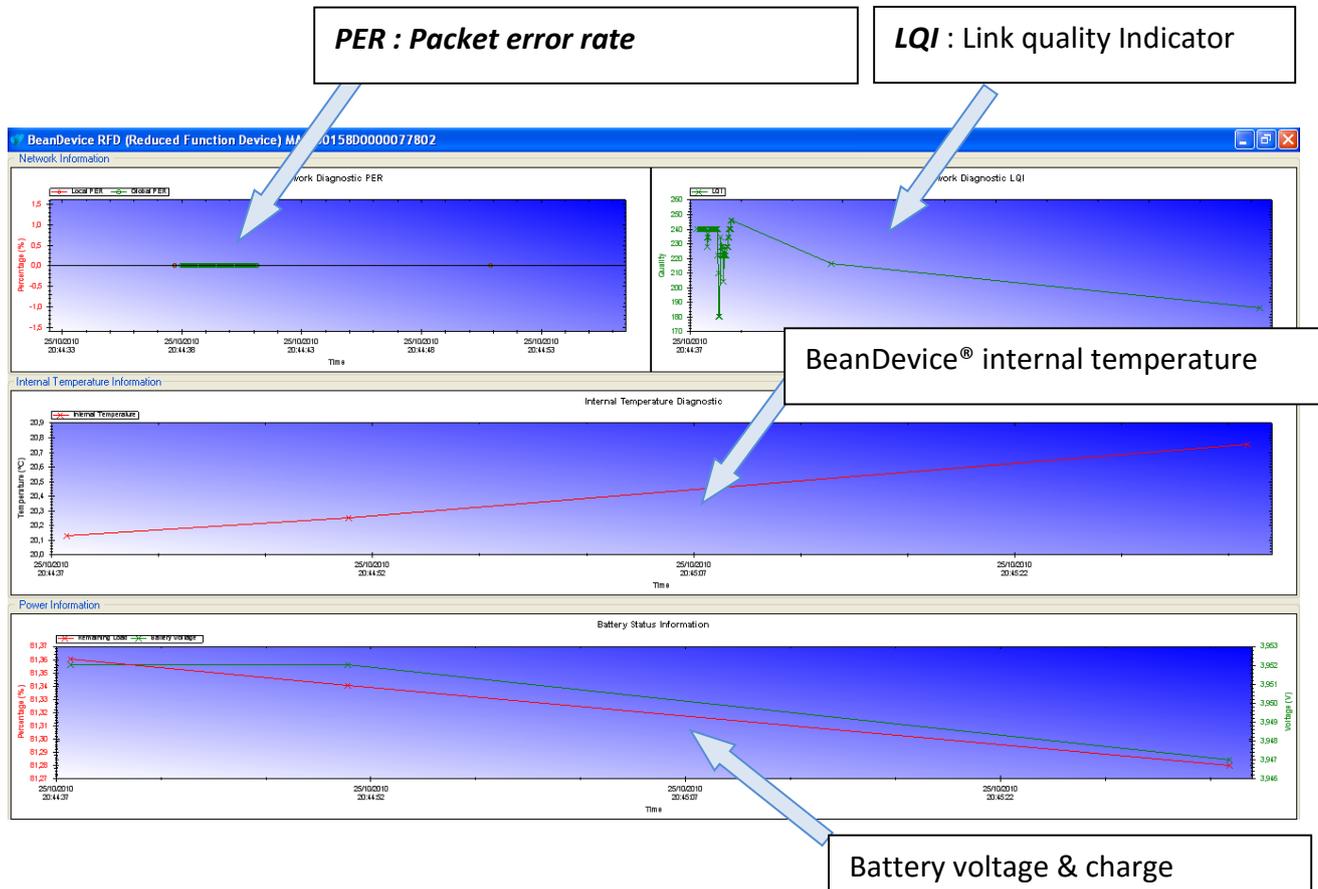

✓ **PER (Packet Error Rate):**

Packet error rate (PER) is the number packet errors divided by the total number of transferred packet during a studied time interval. PER is a unit less performance measure, often expressed as a percentage number.

PER is only available with IEEE 802.15.4 Network, it represents the ratio of “lost data/data send” between the BeanDevice® and the BeanGateway®.

✓ **LQI (Link Quality Indicator)**

LQI (Link Quality Indicator) represents the radio signal quality in your Environment. It is possible that LQI is low due to EMC interference or metal presence in the environment.

If you encounter such problems, several solutions are proposed to increase your LQI:



- ✓ Use the Maximum TX Power on your BeanDevice. The maximum TX Power authorized in Europe for indoor application is 12 dBm. For Outdoor application, you are authorized to extend the TX Power to 18 dBm. You can easily configure the TX Power on your BeanDevice from your BeanScape WSN software supervision.
- ✓ Try to configure your receiver antenna and your transmitter antenna on the same antenna pattern (cf. the Beam with of your antenna)
- ✓ Use a high gain antenna (in outdoor use only) for a better RF Link Budget
- ✓ Fix your BeanDevice & BeanGateway on a top of a mast or a building.



For further information, read the application note on “How to extend your wireless range?”

Internal temperature monitoring

An internal temperature sensor is used for onboard & battery temperature monitoring


Battery charge monitoring


Battery charge is based on current accumulation. The BeanDevice® integrates a current accumulator circuit which facilitates remaining capacity estimation by tracking the net current flow into and out of the battery. Current flow into the battery increments the current accumulator while current flow out of the battery decrements it.

Voltage measurement corresponds to battery voltage.

10.2.1 System maintenance (for expert only)

This section is dedicated to experimented persons in Wireless sensor networks. Configuring wrongly on such an interface may cause malfunction your BeanDevice®.

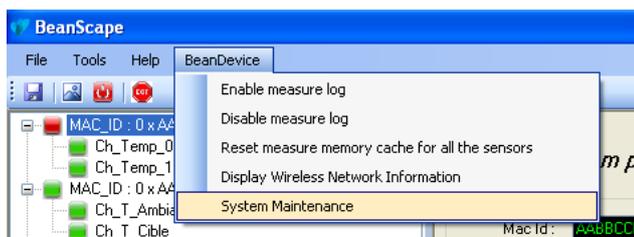


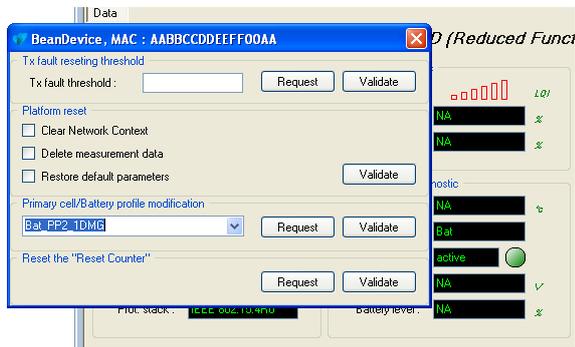

- ✓ **[TX Fault Threshold](#)**: By default this value is fixed to 15. This value allows to set the threshold for TX failure transmission before a reboot system
- ✓ **[Clear Network context \(software\)](#)** : This option may be substituted for the push button “Network”. However, when the BeanDevice ® is not available (not powered or in sleeping mode) this option is not usable.
- ✓ **[Delete measurement data](#)**: Delete stored measurements.
- ✓ **[Restore default parameters](#)**: This function restores all the default parameters stored on the BeanDevice flash memory
- ✓ **[Primary Cell/Battery profile modifications](#)** : You can change your primary cell / battery profile here;
- ✓ **[Reset the « Reset counter »](#)** : resets the reset counter which is used for BeanDevice reboot ;

The following diagram describes how the BeanDevice® is restarted after radio transmission failures:



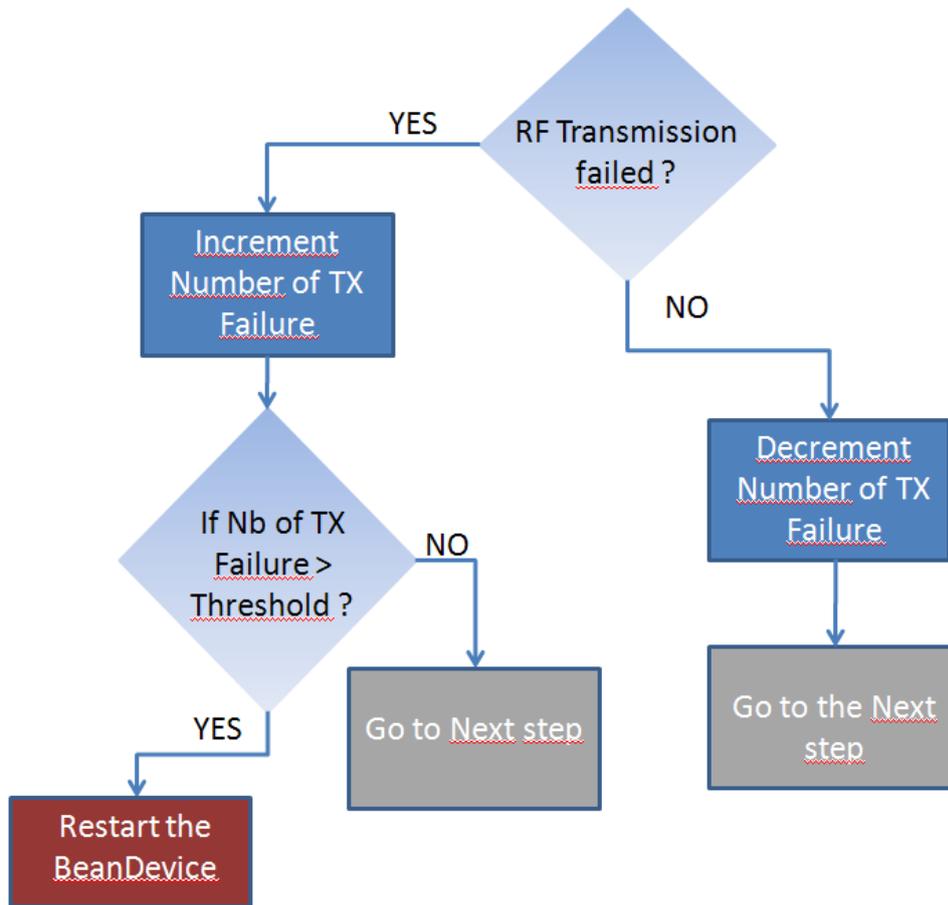


10.2.1 Scrolling menu « BeanSensor »

The BeanSensor® scrolling menu provides access to additional features: like the multi-graph mode (display of multiple windows on a graph measuring the same screen), deleting graphs displayed and the activation / deactivation of logging measurements.

To access to this scrolling menu, click on the sensor attached to your BeanDevice®. You will then see the BeanSensor® scrolling menu appearing.



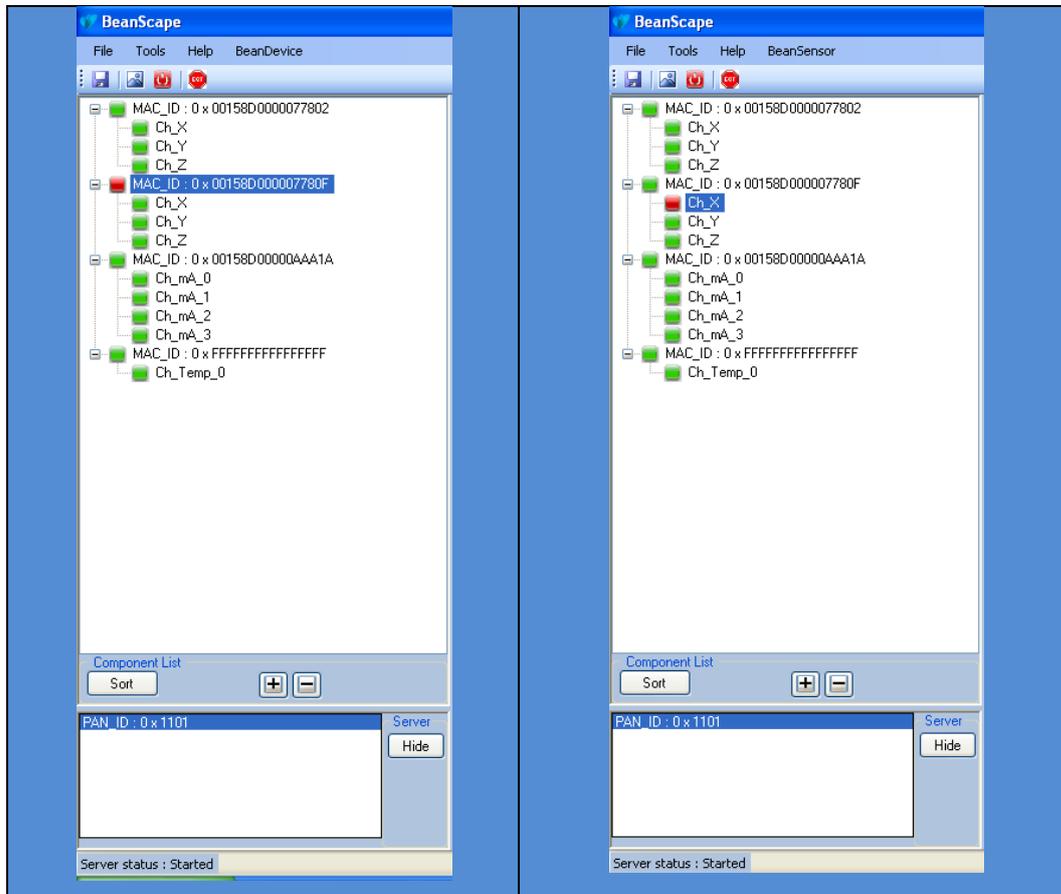



By clicking on the scrolling menu « BeanSensor », you can access to the following features :

Disable/Enable log

All the data received on the BeanScope® are stored in a log file in CSV format.

This feature allows you to enable / disable data logging on your log file.

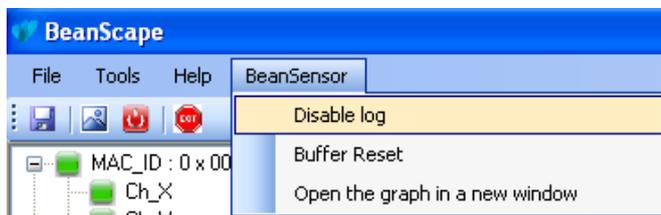

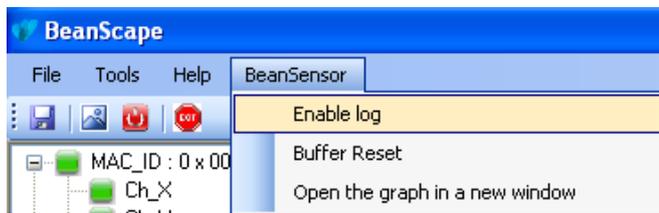


For further information about CSV log file, please read the BeanScape® user manual.


Buffer reset

This function clears the graphical display concerning recorded measurements of your sensor. The data stored in a log are not affected by this function.

By clicking on « Buffer reset », a second window appears asking you to confirm your choice:


- ✓ Yes, you accept to delete the whole measure data of this BeanSensor;
- ✓ No, don't delete the whole measure data of this BeanSensor;

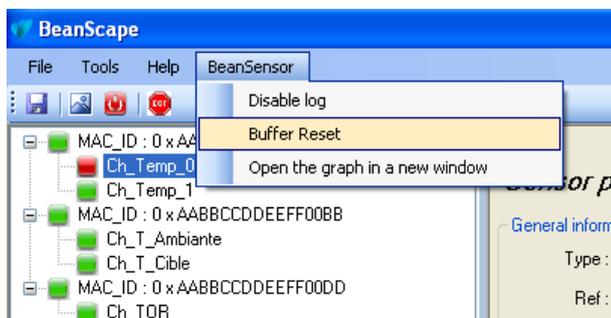

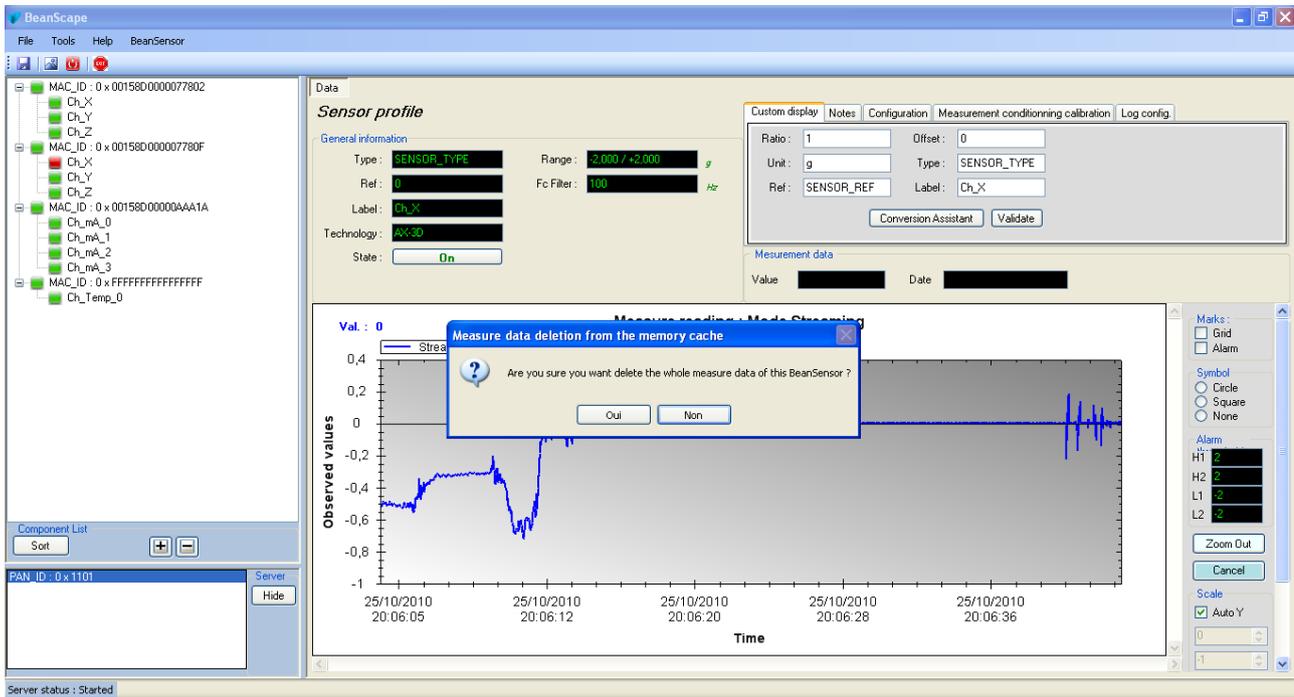


Open the graph in a new window

By clicking on “Open the graph in a new window”, you can open a graph corresponding to your sensor.

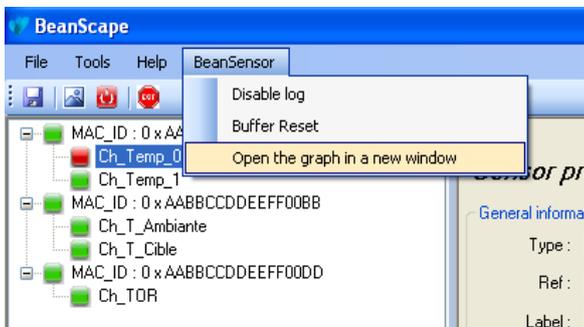

You can easily open several graphs in a window.



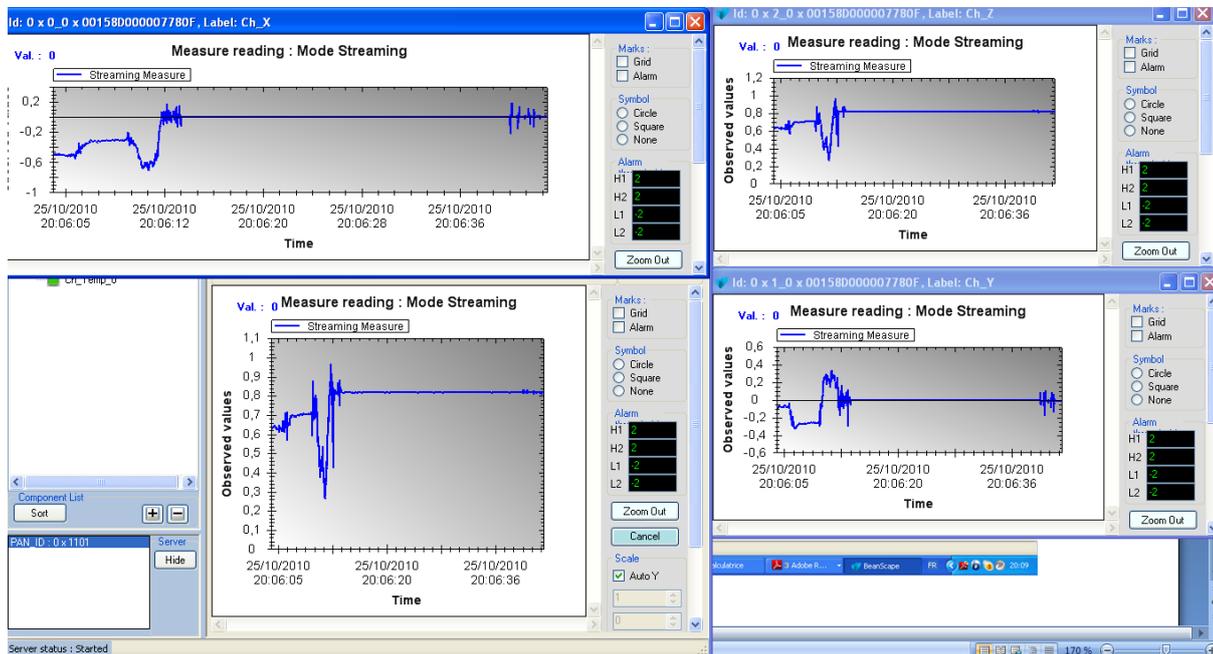

The multi-graph mode requires a lot of resources on your computer, it is recommended to install the BeanScape® software on a powerful computer.





"Rethinking sensing technology"

Document version : 1.9

Document type : User Manual

BeanDevice® User Manual –
EcoSensor product lines

11. FAQ

Visit our FAQ page:

<http://www.industrial-wsn.com/category/faq>



Please consider the environment before printing this document.

Page : 97 / 97