

# USER MANUAL

## Line Interactive UPS



**Uninterruptible Power System**

# **IMPORTANT SAFETY INSTRUCTIONS**

**SAVE THESE INSTRUCTIONS** – This manual contains important instructions for models Line Interactive 400, 600, and 800 that should be followed during installation and maintenance of the UPS and batteries.

## Safety – CAUTION!

- This UPS utilizes voltages that may be hazardous. Do not attempt to disassemble the unit. The unit contains no user serviceable parts. Only factory service personnel may perform repairs.
- Internal battery voltage is 12Vdc.
- Connection to any other type of receptacle other than a two-pole, three-wire grounding receptacle may result in a shock hazard as well as violate local electrical codes.
- In the event of an emergency, turn the power switch to the “off” position and disconnect the power cord from the AC power supply to properly disable the UPS
- Do not allow any liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.
- This unit intended for installation in a controlled environment (temperature controlled, indoor area free of conductive contaminants). Avoid installing the UPS in locations where there is standing or running water, or excessive humidity.
- Do not plug the UPS input into its own output.
- Do not attach a power strip or surge suppressor to the UPS.
- Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS
- To reduce the risk of overheating the UPS, do not cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.
- Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
- Do not dispose of battery or batteries in a fire. The battery may explode.
- Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
- A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries :
  - 1) Remove watches, rings, or other metal objects from the hand.
  - 2) Use tools with insulated handles.
  - 3) Wear rubber gloves and boots.
  - 4) Do not lay tools or metal parts on the top of batteries.
  - 5) Disconnect charging source prior to connecting or disconnecting batteries terminal.

- Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.
- When replacing batteries, replace with the same number of the sealed lead-acid batteries.

# 1. Introduction


This UPS is specially designed for Personal Computer with multi-functions. Its light weight, compact design perfect fits to the limited working environment. The line of UPS is equipped with boost and buck AVR to stabilize input voltage range. It is also built-in with DC start function. This function enables the UPS to be started up without AC power supplied. Although it's a small UPS, it's equipped with Smart RS-232 Communication Port to offer users more benefits. The download software helps users monitor UPS inside status. The main features of the UPS are listed below:

- Microprocessor control guarantees high reliability.
- Equipped with Boost and Buck AVR.
- Built-in RS-232 Communication Port.
- Free Software Download from the Internet.  
(Please check **Free Software Download** in Installation & Operation for detail information).
- Green Power Function for energy saving.
- DC Start Function.
- Auto restart while AC recovery.
- Compact size, Light Weight.
- Provides Modem/Phoneline surge protection.

## 2. Installation and operation

### 1. Inspection

Remove the UPS from its packaging and inspect it for damage that may have occurred during shipping. If any damage is discovered, repack the unit and return it to the place of purchase.

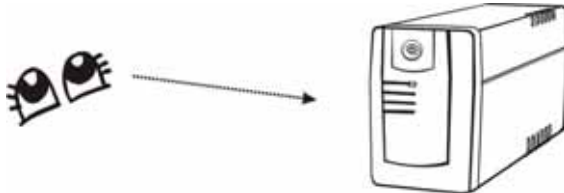

## 2. Charging

This unit is shipped from the factory with its internal battery fully charged, however, some charge may be lost during shipping and the battery should be recharged prior to use. Plug the unit into an appropriate power supply and allow the UPS to charge fully by leaving it plugged in for at least 8 hours with no load (no electrical devices such as computers, monitors, etc.) connected.




## 3. Placement

Install the UPS unit in any protected environment that provides adequate airflow around the unit, and is free from excessive dust, corrosive fumes and conductive contaminants. Do not operate your UPS in an environment where the ambient temperature or humidity is high.




On the other hand, place the UPS away from the monitor at least 20cm to avoid interference.

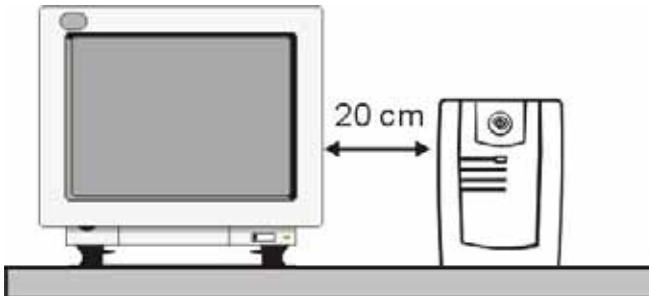

#### 4. Connection

Plug the UPS into a 2-pole, 3-wire grounded receptacle. Then connect one computer-related device into each of the power receptacles supplied on the back of the UPS.

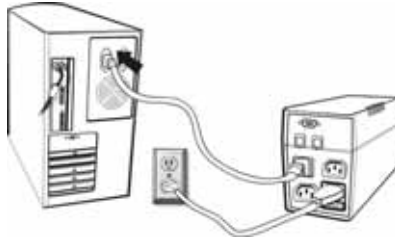

#### 5. Turn On/Off

To turn on the UPS unit, press the power switch lightly. To turn off the UPS unit, press the power switch again.



#### 6. DC Start

All this Series are equipped with DC Start. To start the UPS when AC utility power is not available, simply press the power switch.

#### 7. Green Power Function

This UPS is equipped with Green Power Function. For saving power and protecting battery, the method of deep discharging protection is adopted on inverter mode.

#### 8. Free Download Software – WinPower

- Go to Website <http://www.ups-software-download.com>
- Click WinPower icon to enter software download area.
- Choose operating system you need for your Server/Workstation and double click to download the software automatically.
- After downloading software from the internet:  
For Windows: just click on setup.exe and follow the on-screen instructions to install WinPower software.

**Note:** The Power Switch must be kept in the 'ON' position, otherwise, the UPS will be disabled and your equipment will not be protected during a


power failure.



### 3. System Description


#### Front panel:

- 1. Power Switch
- 2. LED Indicators –
  - AC Mode: Green lighting
  - Battery Mode: Green flashing

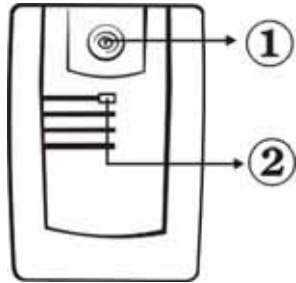


#### Back Panel

- 1. Output receptacles
- 2. AC input with AC fuse
- 3. Modem/Phoneline Surge Protection
- 4. Communication Port

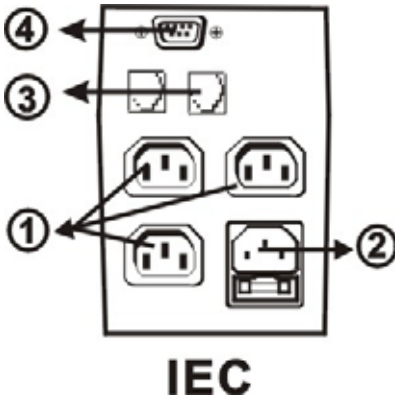

**IEC**

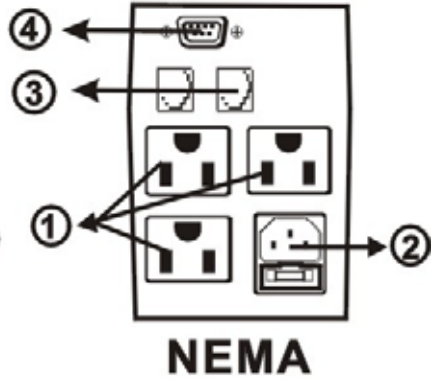

**NEMA**

## 4. Trouble Shooting

Symptom	Possible Cause	Remedy
No LED display on the front panel.	1. Missing battery.	1. Charge battery up to 8 hours.
	2. Battery defect.	2. Replace with the same type of battery.
	3. Power switch is not pressed at least 5 seconds.	3. Press and Hold power switch for at least 5 seconds.
Alarm buzzer beeps continuously when AC supply is normal.	Overload of the UPS.	Verify that the load matches the UPS capability specified in the specs.
When power failure, back-up time is shorten.	1. Overload of the UPS.	1. Remove some noncritical load.
	2. Battery voltage is too low.	2. Charge battery 8 hours or more.
	3. Battery defect due to high temperature operation environment, or improper operation to battery.	3. Replace with the same type of battery.
Mains normal but LED is flashing.	1. Fuse is blown.	1. Replace the same type of fuse.
	2. Power cord is loose.	2. Reconnect the power cord properly.

## 5. Specification

MODEL		400	600	800
CAPACITY	VA	400VA	600VA	800VA
	W	240W	360W	480W
INPUT	Voltage	115VAC or 220/230/240VAC		
	Voltage Range	85-140VAC or 162-290VAC		
	Frequency	45-65 Hz (Auto Sensing)		
OUTPUT	Voltage	115/220/230/240VAC		
	Voltage Regulation (Batt. Mode)	+/-10%		
	Frequency	50Hz or 60Hz		
	Frequency Regulation (Batt. Mode)	+/-1 Hz		
	Output Waveform	Modified Sinewave		
BATTERY	Battery Type	Sealed, lead-acid battery, maintenance free		
	Backup Time (at a PC load with 15" monitor)	12 minutes	33 minutes	34 minutes
	Recharge Time	8 hours to 90% after complete discharge		
TRANSFER TIME	Typical	2-6 ms		
INDICATOR	AC Mode	Green lighting		
	Backup Mode	Green flashing		
AUDIBLE ALARM	Backup Mode	Sounding every 10 seconds		
	Low Battery	Sounding every second		
	Overload	Sounding every 0.5 second		
	Battery Replacement	Sounding every 2 seconds		
	Fault	Continuously sounding		
PROTECTION	Full Protection	Discharge, overcharge, and overload protection		
PHYSICAL	Dimension (mm), DXWXH	330X100X140		
WEIGHT	Net Weight	5kgs	6kgs	6.5kgs
ENVIRONMENT	Operating Environment	0- 40°C, 0-90 % relative humidity (non-condensing)		
	Noise Level	Less than 40dB		
INTERFACE	Smart RS-232	Support windows 95/98/NT/2000/XP, and Linux		