



DIP-34A

Analogue Addressable Photoelectric Smoke Detector



INSTRUCTION MANUAL

GENERAL

DIP-34A Analogue Addressable Photoelectric Smoke Detector (hereinafter referred to as the DIP-34A or the detector) is designed to be used in a fire alarm system in order to initiate fire alarms.

The DIP-34A operates under control of the S2000-KDL controller which the detector is connected to and which supplies power and communicates data with the DIP-34A via the two wire multiplex addressable loop. Up to 127 DIP-34A detectors can operate under a single S2000-KDL.

The DIP-34A detects smoke inside its smoke chamber by sensing light reflected by smoke particles and responds with its statuses to the S2000-KDL controller. Depending on detected smoke amount these statuses can be Norm, Fire Prealarm or Fire Alarm. In addition, the detector can respond with the condition of its smoke chamber (is it dirt or dust). The area protected by a single DIP-34A is approximately 85 m² unless it is set higher than 3.5 m.


The DIP-34A supports DPLS_v2.xx Multiplex Addressable Loop Protocol enabling monitoring addressable loop voltage at the detector location. The version of DIP-34A software is 1.20.

The detector operability must be periodically tested either by using test aerosol (as described below) or by means of a laser test tool (such as the test tool produced by the System Sensor Company).

SPECIFICATIONS

Sensitivity	0.05 - 0.2 dB/m (1.2 %/m to 4.7 %/m)
Response Time	10 s max
Ingress Protection Rating	IP 41
Input Voltage (from a S2000-KDL)	8 ÷ 10 VDC
Current Consumption (via the loop of the S2000-KDL)	0.5 mA max
Pre-operation Time	60 s max
Operating Temperatures	-30 to +55°C
Storage Temperatures	-50 to +55°C
Humidity	93% at 40°C, non-condensing
Overall Dimensions (diameter x height)	100x46 mm max
Weight	0.2 kg max
Average Lifetime	at least 10 years

DIP-34A VIEW AND DIMENSIONS

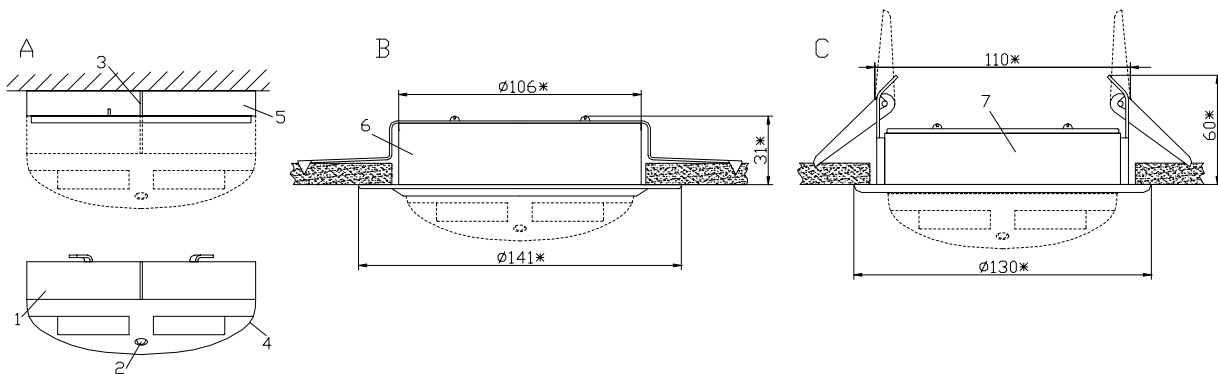

- 1 DIP-34A Smoke Detector
 - 2 Light Emitter
 - 3 Base Aligning Mark by Light Emitter
 - 4 Mark and Rectangle (**Open here**)
 - 5 Mounting Base
 - 6* MK-1 Suspended Ceiling Mounting Kit
 - 7* MK-2 Suspended Ceiling Mounting Kit
- * are purchased separately

Figure 1 Three Ways to Mount the Detector

MOUNTING

A DIP-34A is to be mounted on a ceiling at a distance of no more than 4.5 m from the wall. In such a case the protected area is 85 square meters provided the height of the ceiling doesn't exceed 3.5 m.

There are three ways to mount the detector (see Figure 1).

To set the detector to a solid surface (variant **A**) use the mounting base provided (see the drilling pattern in Figure 2). For doing this match the detector mark with the short mark line on the mounting base, and then turn the detector clockwise until the detector mark will be aligned with the mark 3 as shown in Figure 1 (A).

To build the detector into a suspended ceiling use separately purchased mounting kits MK-1 (variant **B**) or MK-2 (variant **C**).




Figure 2 Drilling Pattern

WIRING

Figure 3 shows the wiring diagram to connect DIP-34A detectors to the multiplex addressable loop of a S2000-KDL controller.

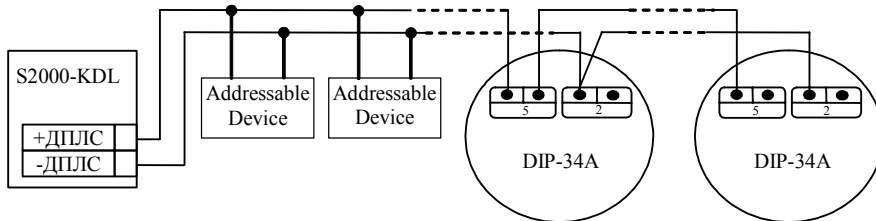


Figure 3 Wiring Diagram

PROGRAMMING

In order the DIP-34A to operate properly within two-wire addressable loop of the S2000-KDL controller, it must be assigned to a unique number from 1 to 127 within the loop – the address which is stored in the DIP-34A non-volatile memory. This address provides identifying the detector by the S2000-KDL controller. Moreover, a monitoring strategy must be defined which will be used by the S2000-KDL controller while processing signals received from the DIP-34A.

Programming the DIP-34A Address within the S2000-KDL Addressable Loop

A DIP-34A is supplied with the default address of 127. This address value can be changed using either S2000(M) console tools or PC tools such as UProg Configuration Tool.

In order to program the unique DIP-34A loop address connect it to a S2000-KDL controller which is in turns connected to a network controller (a S2000(M) console or PC under UProg software). Then send one of the following commands to the S2000-KDL controller (for getting more information see the relevant user's Manual):

Change the Device Address

Use the *Change Device Address* command specifying the old detector address and the new detector address as the parameters (see more information in the referred Manuals). The network controller will display the messages about disconnecting the device with the old address and then detecting the device with newly programmed address.

Program the Device Address

If the device address is unknown or two devices have the same address then use the *Program Device Address* command specifying a required address as the parameter. Then press the detector light emitter or send the laser test tool beam into it. The message about detecting the device with the newly assigned address shall be displayed by a network controller (S2000(M)) or UProg Configuration Tool. Then write the address on the label and stick it on the detector base.

Programming the S2000-KDL to Operate the DIP-34A

To handle signals from a DIP-34A correctly, a S2000-KDL controller must be programmed with the *Zone Type* parameter for this DIP-34A being set to value 1 (*Smoke*) or 8 (*Smoke Analogue Addressable with Variable Thresholds*). To program the S2000-KDL, connect it to a PC under UProg Configuration Tool and follow the relevant programming instructions in accordance with the S2000-KDL User's Manual.

DIP-34A ROUTINE TESTING



Before testing DIP-34A, please disconnect executive outputs of all system devices and modules that can release an extinguishing agent or activate light and sound alarms. Notify the fire department and persons where the audible signals can be heard.

After testing verify that all detectors are ready to operate properly. Then restore operability of all the system components disconnected before testing and inform the relevant departments about completing the test.

To test the DIP-34A detector, turn on the network controller and the S2000-KDL controller. The light emitter of the detector will light steady. When the communications between the detector and S2000-KDL will be set the light emitter will flash once per 4 seconds indicating Norm detector status.

Take a spray can of smoke detector test aerosol and spray some of the test material into the detector. The network controller shall display *Fire Alarm* message for the device with the address of the DIP-34A. The detector light emitter will flash double each 4 seconds.

Alternately, you can perform a simplified test just by pressing the detector light emitter or lighting it with the laser beam of a laser test tool. This will cause steady lighting of the detector light emitter followed by its double flashing each 4 seconds. The network controller will display a:

- *Fire Alarm* message for the device with the address of the DIP-34A when the S2000-KDL of versions 1.35 and below is in use
- *Test* message or *Fire Alarm* message (depending on the current test mode) when the S2000-KDL of versions 1.36 and above is in use (see the Manuals for the S2000-KDL controller and the network controller)

When the aerosol is scattered (or light emitter pressing is terminated, or laser test tool is disposed) the detector must enter Norm status.

If the network controller has displayed no messages mentioned above or the light emitter behavior differs from that mentioned above then the detector is defective and must be replaced.

MAINTENANCE

Please test the detector operability annually as said above.

When a *Service Required* message is received from the detector remove the dust and dirt from the detector smoke chamber.

WARNINGS



To avoid contamination of the detector please DO NOT remove protective cover until the environment will be cleaned from dirt and dust.

DO NOT remove the detector PCB because this automatically cancels the warranty.

DO NOT mount the detector within the premises where air velocity values exceed 15 m/s.



ZAO NVP Bolid, 4 Pionerskaya Str., Korolev 141070, Moscow Region, Russia

Phone/fax: +7 495 513-32-35

Email: info@bolid.ru, overseas@bolid.com

www.bolid.com

BOLID ONE YEAR LIMITED WARRANTY

Bolid Company and its divisions and subsidiaries («Seller»), 4 Pionerskaya Str., Korolev 141070, Moscow Region, Russia warrants its security equipment (the «product») to be free from defects in materials and workmanship for one year from date of original purchase, under normal use and service. Seller's obligation is limited to repairing or replacing, at its option, free of charge for parts or labor, any product proven to be defective in materials or workmanship under normal use and service. Seller is not responsible for results where the product is used improperly, where it is used for any application it is not intended for, used under unacceptable environmental conditions and mishandled or stored under improperly. Seller shall have no obligation under this warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than the Seller. In case of defect, contact the security professional who installed and maintains your security equipment or the Seller for product repair.

This one year Limited Warranty is in lieu of all other express warranties, obligations or liabilities. There are no express warranties, which extend beyond the face hereof. Any implied warranties, obligations or liabilities made by seller in connection with this product, including any implied warranty of merchantability, or fitness for a particular purpose or otherwise, are limited in duration to a period of one year from the date of original purchase. Any action for breach of any warranty, including but not limited to any implied warranty of merchantability, must be brought within 12 months from date of original purchase. In no case shall seller be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, express or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by the seller's own negligence or fault. Some countries do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Seller does not represent that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty gives you specific legal rights, and you may also have other rights which vary from country to country. No increase or alteration, written or verbal, to this warranty is authorized.