

SM-2200

DIGITAL SATELLITE METER

USERS MANUAL

Please read this manual carefully before using your meter for the first time.

The technical specifications and operating methods included in this manual are subject to changes without notice. In case of any inquiries after a period of usage, please contact the manufacturer.

Please charge the battery before using your meter for the first time. (Recommend 5 hours)

Contents

Chapter I. Introduction	3
Chapter II. Function	4
A. Front Panel	4
B. Quick Operation	5
1. Language setting	
2. Quick operation guide	
C. Detailed operation Guide	6
1. Turn on the equipment.....	6
2. Satellite Setting	
(1) Edit Satellite	
(2) Dish Set-up	
(3) Auto Scan	
3. System Setting.....	6
4. System Information	
5. Current Program Information	
6. Dish angle calculation.....	12
Chapter III. Specification	14

Chapter I Introduction



This meter is simple and convenient for setting and aligning a satellite dish. Using the parameters of satellite, you can set and align a satellite dish quickly, easily and accurately.

Chapter II Function

A. Front Panel



<Figure2-1>


- (1) LNB INPUT :
Satellite signal input port, connects directly to satellite antenna using coaxial cable.
- (2) LCD Screen :
Shows MENUs and Programs clearly
- (3) Power Light :
Indicates the power status.
Red: the meter is power on,
Dim: the meter is power off,
Charge,
Green: the battery is being charged,
Red: the battery is charged.
- (4) Lock Light :
This light will be on when signal is locked.
- (5) 22K/13V/18V light
Indicate the 22K/13V/18V
- (6) Function Key :
Made of 4 keys, F1 -- F4.
(Tip) F1: turn on or off the LCD screen
F2: Mute
F3 : To show information about the current program
- (6) Arrow Key and OK key :
Use the Arrow key to select the right item, OK key to confirm.
- (7) Numerical Key :
To enter numerical settings directly.
- (8) FIND Key:
Go to the easy satellite find menu, can set and align a satellite dish quickly.
- (9) MENU Key:
To enter or exit the main menu.
- (10) EXIT Key :
To exit from the present menu and move to the previous menu
- (11) ANGLE Key :
Go to the AZ , EL and Polarity calculation menu
- (12) SYSTEM Key :
To set all system parameters.
- (13) Power Key :
To turn the meter on/off , press and hold for 2 seconds to power on the meter.
- (14) Scan Key
Go to auto scan menu and scan channels
- (15) Charge port:
To connect with the charger cord.
-   USB Port:
Connect to PC to upgrade .

B. Quick Operation

Through this function, user can quickly and easily find the right satellite and accurately set the dish.

Input the Register Code


1. *When you turn on the Meter first time or when you reset the Meter, it may need input the Register Code* <Figure2-1>

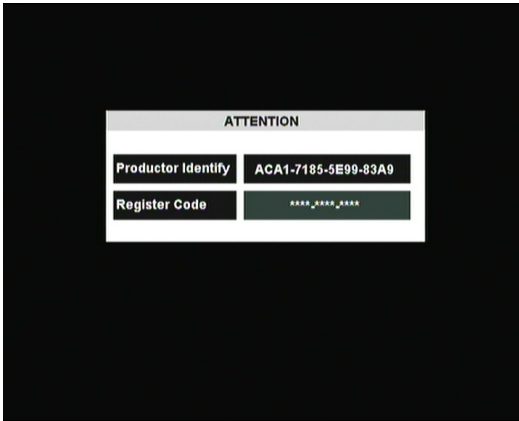

<Figure2-1>

Menu language Setting

2. Turn on your satellite meter
3. Press the SYSTEM button to display the system setting menu <Figure2-2>

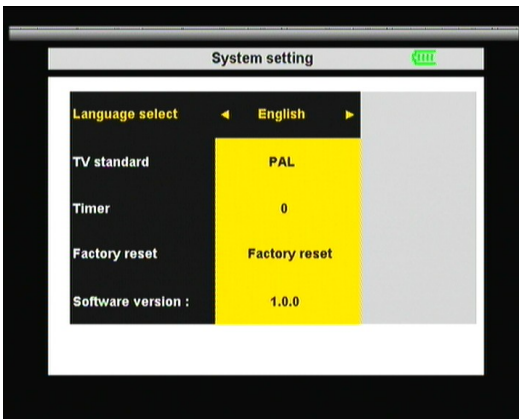


<Figure2-2>

4. Use [◀][▶] button to change the language . Select the language that you want .
5. TV Standard : Tv output standard

2) Quick operation guide

- 1 . Press the FIND button to display the signal finding menu <Figure2-3>

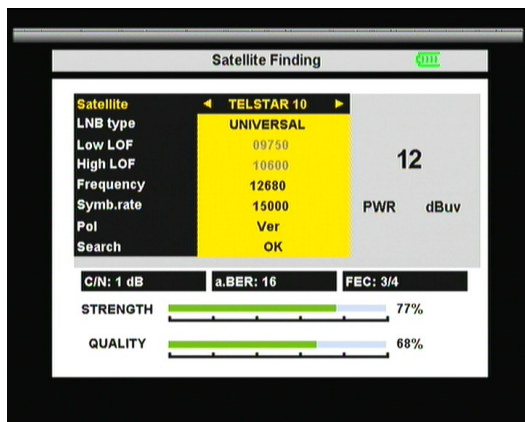

<Figure2-3>

- 3 . Use [◀][▶] button to select the satellite .
- 4 . Select the item that you want to edit, and set its parameters as desired.
LNB Type : Use [◀][▶] button to choose LNB Type
LOW L.O.F : Use digital button to input the LOW L.O.F once the LNB Type is Customized
HIGH L.O.F : Use digital button to input the High L.O.F once the LNB Type is Customized
- 5 . Use [◀][▶] button to select the TP frequency you want.
FREQUENCY : Set its parameters, can input numerically .
SYMBOL RATE : Set its parameters, can input numerically .
POLARITY : Select between Vertical and horizontal.
- 6 . When signal finding: you can see the bar meter of the LEVEL and QUALITY, and the numerical of S.N.R ,FEC, MER, a.BER (after BER) at the same time the LOCK light will come on and the speaker will notify.
- 7 . Adjust the dish slightly to get the strongest signal
- 8 . Go to "SEARCH" and press "OK" to scan for channels.

C. Detailed operation Guide


📁) Turn on the equipment

- 1 . Press and hold POWER button for 2 seconds to turn on the satellite meter

📄) SATELLITE SETTING


➤ EDIT SATELLITE

- 1 . Press the MENU button to display the main menu
- 2 . Use[▲][▼]button to move cursor
- 3 . Press OK on 'SATELLITE SETTING' The following window will appear.<Figure2-4>

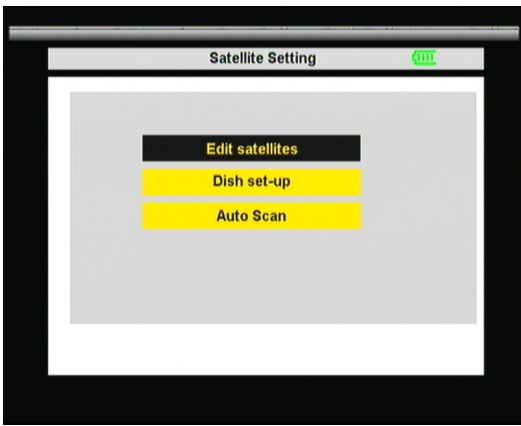


<Figure2-4>

Press OK on 'EDIT SATELLITE' The following window will appear<Figure2-5>

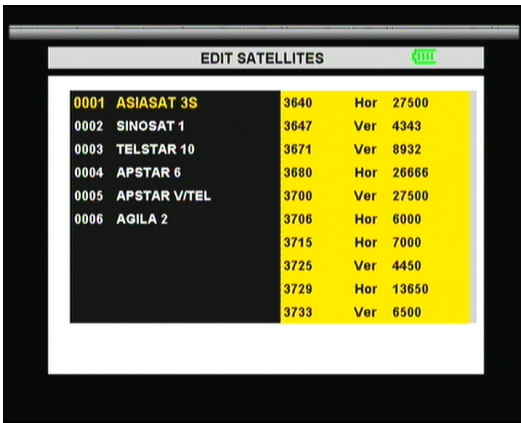


<Figure2-5>

Use [◀][▶] button to move cursor, it'll show the satellite name ,angle and location.

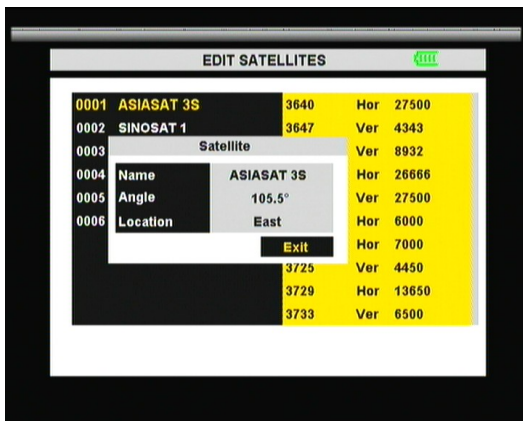

<Figure2-6>


Use [▶] to move to TP list , and press OK , you can modify Frequency, Pol and symbol rate<Figure2-7>

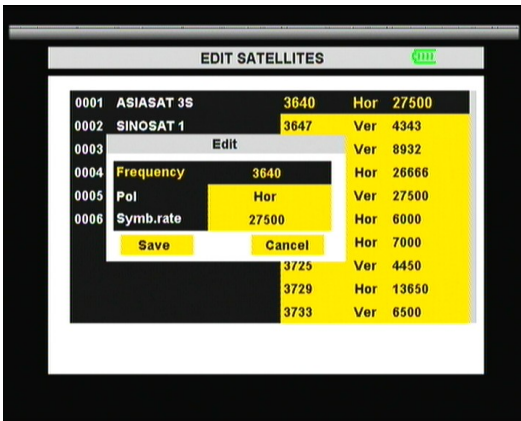

<Figure2-7>

➤ DISH SET-UP

1. Press OK on 'DISH SET-UP' The following window will appear,<Figure2-8>

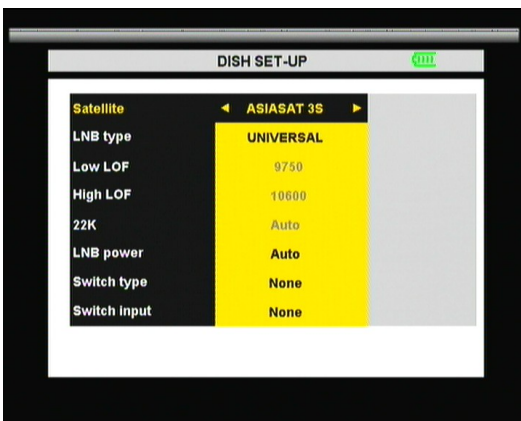

<Figure2-8>

2. use [▲][▼]to move cursor
3. Use [◀][▶]button to select the item you want
 - LNB Type : Use [◀][▶] button to choose LNB Type between UNIVERSAL/5150/9750/10750/Customized
 - LOW L.O.F : Use digital button to input the LOW L.O.F once the LNB Type is Customized
 - HIGH L.O.F : Use digital button to input the High L.O.F once the LNB Type is Customized
 - 22K : choose AUTO/ON/OFF
 - SWITCH TYPE : choose NONE/DiSEqC1.0
 - SWITCH INPUT: choose from 1/2/3/4 input

➤ AUTO SCAN

1. Use [▲][▼]button to move cursor


2. Use [◀][▶] button to select the item you want
 SATELLITE : choose the SATELLITE you want
 TRANSPONDER: choose the TRANSPONDER you want
 NETWORK SEARCH : ON/OFF
 MODE: ALL/ FTA/SCRAMBLED
 SEARCH: choose SATELLITE/TRANSPONDER

3) **System Setting**

1 . TIMER

Through this setting you can select the satellite meter LCD shut off time

- a) Press the SYSTEM button to display the system setting menu <Figure2-9>

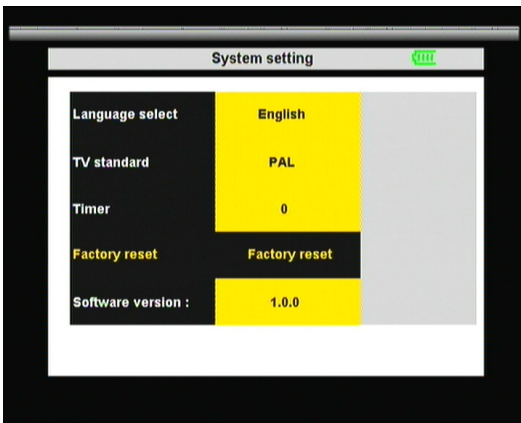

<Figure2-9>

- b) Use [◀][▶] button to select shut off LCD screen time


2 . TV STANDARD

This menu allows you to specify the video output

Video Format : Select the video output format.(Auto/PAL/NTSC)

3.FACTORY RESET

This sub menu allows you to restore the factory default value<Figure2-10>

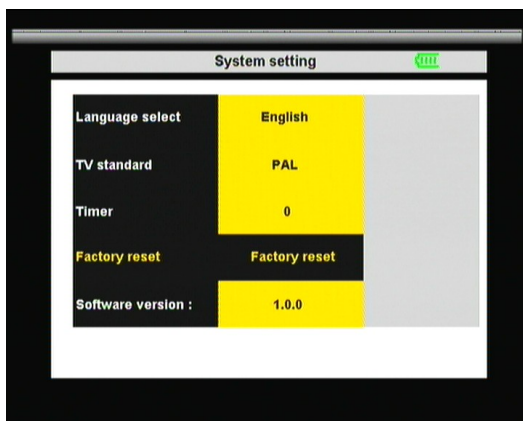

<Figure2-10>

- Factory Reset : Erase all channels and restore the factory default settings.

🕒👉 Channel Selection – Press “OK”

You can use [▲][▼] to navigate between channels until you find the channel you want<Figure2-11>



<Figure2-11>

- If you know the channel number, you can enter it with the NUMERIC buttons and wait 2 seconds until the channel is changed

🕒👉 Channel Information

- While watching a channel, you can press the F3 button to display the information menu <Figure2-12>



<Figure2-12>

- Use this menu to check the satellite name, channel name, TP parameters, Signal intensity, etc.


7) SYSTEM button

You can check the current information about your satellite meter such as meter S/W(software) version, <Figure 2-10>

Note : This information is useful to see if there is a newer software available.

8) Calculation

1 . Press the ANGLE button to display the Calculation menu <Figure2-13>

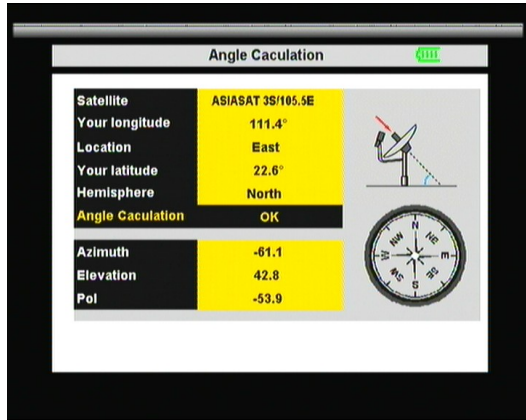

<Figure2-13>

1. SATELLITE : choose the satellite you want
2. Your longitude : input your local longitude
3. Location : input your local location
4. Your Latitude: input your local latitude
5. Hemisphere: input your local Hemisphere
6. Antenna azimuth: shows the azimuth of the chosen satellite.
7. Antenna elevation: shows the elevation of the chosen satellite.
8. Antenna Polarity: shows the polarity angle of the chosen satellite

Specifications

System capabilities	Fully DVB compliant	Yes
LNB/Tuner input	Connector	F type, female
	Frequency range	950MHz-2150MHz
	Signal level	-65dBm~-25dBm
	LNB supply	13/18V,max400mA
	LNB switch control	22KHz
	DiSEqC	Ver 1.0
Demodulator	Front end	QPSK
	Symbol rate	2Mbps~45Mbps
	SCPC and MCPC Capable	Yes
	Spectral inversion	Auto conversion
System resource	Processor	32bit processor (200MHz)
	SDRAM	16Mbyte
	FLASH	2Mbyte
	EEPROM	8Kbyte
Video decoder	MPEG 2	Main Profile@Main Level
	Data Rate	up to 15M bits/s
	Resolution	720*576,720*480
	Video format	PAL/NTSC/SECAM
MPEG Audio	MPEG 1 layer 1&2	
	Type	Mono
	Sampling rates	32,44.1 and 48KHz
Serial data interface	Connector	USB type
Power supply	Li-ion Battery	1950 mA
	Supply voltage	12.6Volt
	charger	90-240Volt
Panel connectors	Digital tuner input	F type, female
Physical Specification	Size	9.5x15.5x4.5 (cm)
	Weight(Net)	0.5 Kg