

UART/RS232/RS485/USB/Ethernet Over Powerline Communication Transceiver Module

User Manual



LinkSprite Technologies, Inc

January 2011

www.linksprite.com

Revision

Rev	Applicable parts	Description	Data
1.0		First generation of low speed PLC-UART modem	2008
2.0	PLC-UART-Xbee PLC-UART-12V PLC-UART-24V	Second generation of low speed PLC-UART modem	Jan 2009
3.0	Spyder-PLC-UART -LS-DC	PLC-UART Pro version 1. Longer transmission distance 2. Opto-electronic coupling on the UART interface to provide protection of the host 3. DC power supply only 4. AC or DC power line for communication	Jan 2011

Table of Content

I	Summary	3
1	Introduction	3
2	Features	5
3	Specifications	6
4	Applications	7
II	Diagram.....	8
1	Functional Diagram.....	8
2	Board Layout.....	8
3	Switch Description	9
4	LED.....	9
5	Definition of Pin.....	10
6	Interface Card Socket Definition and Layout.....	11
III	Command Interface	13
1	Command Mode.....	13
1.1	Enter command mode.....	13
1.2	Exit command mode.....	13
2	Arguments and Responses	13
2.1	Arguments and Responses	13
2.2	Commands without Arguments.....	13
2.3	Modified arguments	14
3	Command List.....	15
IV	Repeater Function.....	18
1	Introduction.....	18
2	Function Setting	19
2.1	Start repeater function	19
2.2	Turn off repeater function	19
2.3	Setting Illustration	20
3	Repeater Grade.....	20
V	Logic Address	21
1	Logic Address	21
2	Address Setting	22
VI	Application Illustration.....	25

I Summary

1. Introduction

This document documents LinkSprite third-generation powerline communication modem. Based on the feedbacks of the first and second generations, LinkSprite third-generation powerline communication modem products are consisted of a PLC-UART motherboard, UART-RS232 daughter board, UART-RS485 daughter board, UART-USB daughter board, and UART-Ethernet daughter board.

On the PLC-UART motherboard, there is a 20-pin receptacle, users can choose different daughter boards based on the interface needs. This 20-pin receptacle is pin-compatible with Xbee module from Digi (www.digi.com). So a Xbee module can also be used on PLC-UART, and PLC-UART will become a powerline communication to Zigbee bridge.

The new generation PLC-UART motherboard also support DIP by optional pins that can be used to directly plug to user's board without doing screwing. The interface board signals such as RS232/RS485/USB signals are also routed back to motherboard through the 20-pin receptacle, and again to users' board through these DIP pins.

Powerline communication transceiver modules from LinkSprite (LinkSprite modules) are transceiver modules designed to send/receiver serial data over the powerline network. PLC-UART is designed to transparently move serial data over the powerline network, and achieves the target of replacing cables by the ubiquitous powerline network.

LinkSprite modules have the built-in packet-level repeater function. This feature can greatly extend the coverage of the powerline communication.

LinkSprite module has both physical and logic addresses. In a network, both physical and logic addresses can be used to address different nodes in the network.

2 Features



A Spyder-PLC-UART-LS-DC modem

- AC and DC powerline Communications
- 5~24V wide range DC power supply.
- Opto-electronic coupling on the UART interface to provide protection of the host machine or board.
- No ceramic filter and therefore non-fragile.
- Fully transparent mode, plug and play coming out of the box without the need to do any programming.
- Built-in error correction codes.
- Built-in repeater function to extend the coverage.
- Physical and logic address
- AT commands used for advanced configuration.
- 3.3V TTL UART, Optional RS232, RS485. USB, Ethernet, Zigbee interfaces
- FSK (Frequency Shift Keying) modulation used in physical layer
- Low power
- RoHS

- Small module size (55mm X 85mm including the on-board power switch regular keep out area), and easy to be implemented into existing products.

3 Specifications


Product name	Spyder-PLC-UART-LS-DC Transceiver Module
Interface	3.3V TTL UART Optional interface cards: RS232 (model/ordering no: UART-RS232) RS485 (model/ordering no: UART-RS485) USB (model/ordering no: UART-USB) Ethernet (model/ordering no: UART-Ethernet) Zigbee (model: Xbee from Digi.com)
Communication Line Voltage	230VAC/50Hz 110VAC/60Hz 0-400V DC
Supply Voltages	5~24V DC Peak Current During Transmission < 100mA Current During Receiving < 50mA Standby current < 30mA
Modulation	FSK (Frequency Shift Keying)
Carrier frequency	262K/144KHz
Error Correction	FEC (Forward Error Correction)
Data rate on Powerline	30Kbps
Maximum packet data length	512bytes
Repeater Hops	3 Hops
Transmission distance	300 feets (no repeater)
Support nodes number	65535
LED	Power Line Activity LED system LED serial port LED

4 Applications


- AMR
- Industry manufacture and control
- Safeguard, fire alarm, smoke alarm
- Collect and transmit instrument data
- Safeguard and monitor
- Home automation
- Solar/Wind electricity generation system

II Diagram

1 Functional Diagram

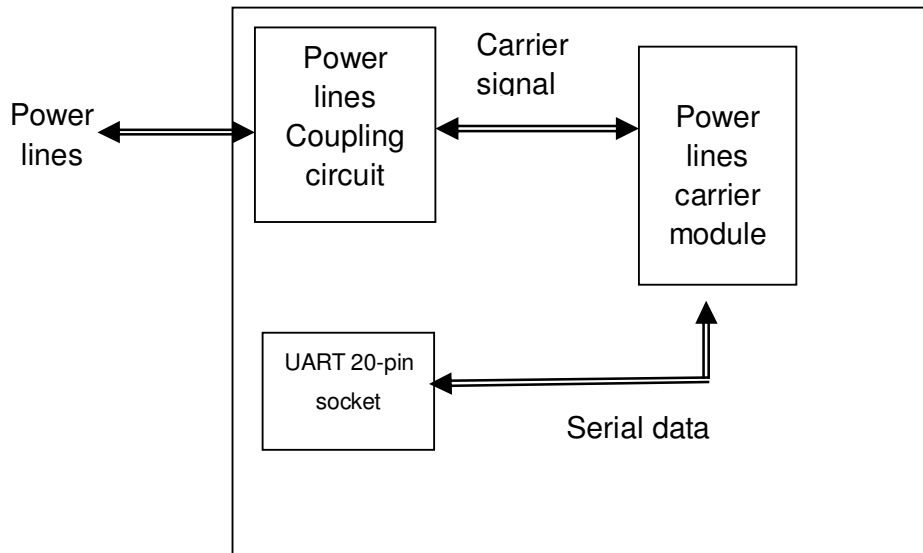

2 Board Layout

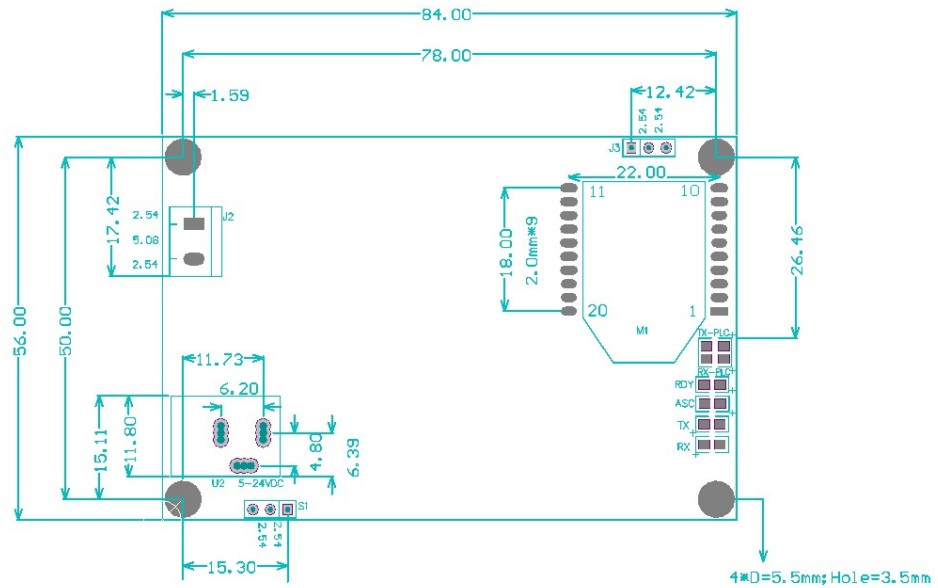


3 Switch and Connector Description

A switch S1 is used to control the DC power supply. To use 5V directly without regulated by a DC regulator, connect the left two pins; to use >5~24V, connect the right two pins:



This version PLC-UART modem cannot be powered by the power line directly. If you want to do so, you need a trivial AC-DC or DC-DC adaptor to provide the DC power.

Connector J3 is for DIP user of the UART interface.



Connector J4 is the ISP programming connector that is used to burn firmware into the Atmega168 microcontroller.

4 LED

PLC LED	PLC LED: green means module is sending data to PLC; red means module is receiving data from PLC
RDY LED	System LED, green means system is in normal
ASC LED	Association LED for the Xbee.
TXD LED	Serial port transmission LED, flashing means module is transmitting data to serial port.
RXD LED	Serial port receiving LED, flashing means module is receiving data from serial port.

5 Definition of DIP Pins

- ```
1) Module=X_BEE:
 J7_1(X1) -> NONE
 J7_2(X2) -> NONE
 J7_3(X3) -> NONE
 J7_4(X4) -> NONE
 J6_1(GND) -> GND
 J6_2(TX) -> UART_TX TTL
 J6_3(RX) -> UART_RX TTL


2) Module=UART_RS232:
 J7_1(X1) -> GND
 J7_2(X2) -> UART_TX RS232
 J7_3(X3) -> UART_RX RS232
 J7_4(X4) -> NONE
 J6_1(GND) -> GND
 J6_2(TX) -> UART_TX TTL
 J6_3(RX) -> UART_RX TTL

3) Module=UART_RS485:
 J7_1(X1) -> GND
 J7_2(X2) -> UART_485_A
 J7_3(X3) -> UART_485_B
 J7_4(X4) -> NONE
 J6_1(GND) -> GND
 J6_2(TX) -> UART_TX TTL
 J6_3(RX) -> UART_RX TTL

4) Module=UART_USB:
 J7_1(X1) -> USB_GND
 J7_2(X2) -> USBDP(+)
 J7_3(X3) -> USBDM(-)
 J7_4(X4) -> VBUS
 J6_1(GND) -> GND
 J6_2(TX) -> UART_TX TTL
 J6_3(RX) -> UART_RX TTL
```

## 6 Interface Card Socket Definition and Layout

The pin layout of interface cards is compatible with Xbee module from Digi ([www.digi.com](http://www.digi.com)). The socket on the PLC-UART motherboard can be used to receive any interface card with the pin out shown below:

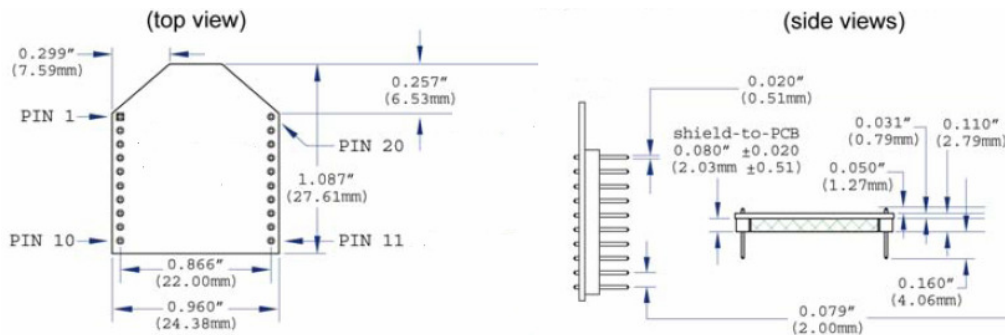

Pin assignment of the interface card socket:

| Pin # | Name      | Direction | Description          |
|-------|-----------|-----------|----------------------|
| 1     | VCC       | -         | 3.3V Power supply    |
| 2     | DOUT      | Output    | UART Data Out        |
| 3     | DIN       | Input     | UART Data In         |
| 4     | Unused    | -         | -                    |
| 5     | RESET     | Input     | Module Reset         |
| 6     | Unused    | -         | -                    |
| 7     | Unused    | -         | -                    |
| 8     | Unused    | -         | -                    |
| 9     | Unused    | -         | -                    |
| 10    | GND       | -         | Ground               |
| 11    | Unused    | -         | -                    |
| 12    | Unused    | -         | -                    |
| 13    | Unused    | -         | -                    |
| 14    | Unused    | -         | -                    |
| 15    | Associate | Output    | Associated Indicator |
| 16    | Unused    | -         | -                    |
| 17    | Unused    | -         | -                    |
| 18    | Unused    | -         | -                    |

|    |        |   |   |
|----|--------|---|---|
| 19 | Unused | - | - |
| 20 | Unused | - | - |

## III Command Interface

### 1 Command Mode

#### 1.1 Enter command mode

The module can be put into command mode by sending “+++” through serial port. The module will respond with an “ok”. In order to prevent the situation where the user data “+++” mistakenly triggers the command mode, there must be no serial port data input one second before and after the receiving of “+++”. At the same time, the gap between the three “+” should not be more than one second, otherwise, it will be considered as a data rather than a command.

#### 1.2 Exit command mode

There are two approaches to exit command mode. One way is to input command “ATEX”. The other is to timeout and automatically exit. In either case, the modules will response “exited”. The timeout value can be set by command “ATTO”

### 2 Arguments and Responses

#### 2.1 Arguments and Responses

For all the commands with arguments: if the parameters are correct, the module will respond with an “ok”. Otherwise, the modules will response with an “invalid para”. If there are no arguments associated with the commands, it will be treated as polling modem and the module will respond with the existing arguments residing in the module.

## 2.2 Commands without Arguments

There are four commands without arguments.

- + + +: enter command mode; will directly return “ok”.
- ATEX: exit the command mode, return “exited”.
- ATRS: software reset, will reset the module immediately, no return.
- ATSR: in search for other modules on the power lines, this will return the name of the found module. Please wait for two seconds after sending a command. The name of module received in two seconds will be shown in the serial port, otherwise, the name received after two seconds will be ignored. Note: In the course of searching, all bytes input from serial port also will also be ignored.

## 2.3 Modified arguments

Except for serial arguments, the modified arguments will be immediately saved into eeprom and take effect. The serial arguments won't take effect immediately after being modified to avoid user from modifying PC serial arguments before inputting command. Serial arguments will take effect through automatically resetting module when exiting the command mode.

### 3 Command List

| Command       | Description                  | Arguments | Description                                                                                                                                | Default |
|---------------|------------------------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Control Class |                              |           |                                                                                                                                            |         |
| +++           |                              | none      | Enter command mode                                                                                                                         |         |
| ATEX          | Exit                         | none      | Exit command mode                                                                                                                          |         |
| ATSN          | Read SN                      | none      | Read back module's serial number                                                                                                           |         |
| ATTO          | Time out                     | 1-30      | Timeout value,<br>unit: second                                                                                                             | 5       |
| ATRS          | Reset                        | none      | Software reset                                                                                                                             |         |
| ATWT          | Save to flash memory control | Y,N       | This controls if the following setting will be saved to flash:<br><br>ATDA ATNA<br><br>ATDT ATRT<br><br>ATWT itself is not saved to flash. | N       |
| Network class |                              |           |                                                                                                                                            |         |
| ATDA          | Domain Address               | 1-32767   | Domain Address of Logic Address                                                                                                            | 1       |



|                     |                                                     |                                   |                                                                                                                                                                               |          |
|---------------------|-----------------------------------------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| ATNA                | Node Address                                        | 1-65535                           | Node Address of logical address                                                                                                                                               | 1        |
| ATDT                | Packet Destination Serial Number (Physical Address) | 0-2147483646                      | When set to 0, the packet will be broadcasted in the same logical domain. Otherwise, the packet will be sent to the node with the specified physical address (serial number). | 0        |
| Function class      |                                                     |                                   |                                                                                                                                                                               |          |
| ATRP                | Repeater                                            | Y,N                               | Relay function, Y is on, N for off                                                                                                                                            | Y        |
| ATRT                | Repeater Threshold                                  | 0- 32708                          | When the received signal strength is below this threshold and the repeater function is enabled, the packet will be repeated.                                                  | 1023     |
| ATRR                | Remote Repeater                                     | Y,N                               | Turn on the repeater function remotely.<br>It may be set broadcast or individually depending on the ATDT settings.                                                            | Y        |
| ATNM                | Name                                                | A string with length less than 15 | Set the name of the module                                                                                                                                                    | PU-R485A |
| Communication class |                                                     |                                   |                                                                                                                                                                               |          |
| ATBD                | Baud Rate                                           | 1200, 2400, 4800, 9600, 19200     | Baud Rate                                                                                                                                                                     | 9600     |
| ATDB                | Data Bit                                            | 5,6,7,8                           | Data bit                                                                                                                                                                      | 8        |


|             |          |         |                                                                                                                                                                            |   |
|-------------|----------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| ATPA        | Parity   | N, O, E | Parity bit, N = no, O = odd<br><br>, E = even                                                                                                                              | N |
| ATST        | Stop Bit | 1,2     | Stop bit                                                                                                                                                                   | 1 |
| Debug class |          |         |                                                                                                                                                                            |   |
| ATRW        | Raw      | Y,N     | The raw data for debugging. The module will output sent raw packets from host to the module, and not just the payload. Y means turn on this function, N means turning off. | N |
| ATSR        | Search   | none    | Search for peer module on the power line network                                                                                                                           |   |

## IV Repeater Function


### 1 Introduction

To extend the coverage, LinkSprite modules have built-in repeater function.

When the module's repeater function is turned on (off is the default setting), the module echos the data packet from the power line, while entertaining the data sent by host through the serial port.



Because of far distance, data transmission can not be reached.



After adding repeater function to proper locations, the data can be transmitted farther.

Transceiver function is not influenced by repeater function, that is to say, each module can be used as a separate repeater or can be seen as repeater when sending and receiving data. It can not only send and receive data from the power line, but also repeat other data packets.

In order to prevent network congestion, the module is smart smart enough to know the data were sent or repeated by itself and will discard the data packets when receiving the duplicated ones.

**Note:** Due to the fact that repeaters will resent the received data packets, if the number of repeater is too large, a number of repeaters will seize the channel, and lead to increased communication time. When deploying the repeater, one should take full account of the balance of reliability and real-time.

## 2 Function Setting

AT command 'ATRP' is designed to set up the repeater function.

### 2.1 Turn on repeater function

| Steps | input  | response | description                                      |
|-------|--------|----------|--------------------------------------------------|
| 1     | +++    | ok       | Enter command mode                               |
| 2     | ATRP   | Y or N   | Poll current repeater status, Y is on, N for off |
| 3     | ATRP Y | ok       | Turn on repeater function                        |
| 4     | ATRP   | Y        | Check present repeat status, ON                  |
| 5     | ATEX   | exit     | Exit command mode                                |

### 2.2 Turn off repeater function

| steps | input  | response | description                                       |
|-------|--------|----------|---------------------------------------------------|
| 1     | +++    | ok       | Enter command mode                                |
| 2     | ATRP   | Y or N   | Check current repeater status, Y is on, N for off |
| 3     | ATRP N | ok       | Turn off repeater function                        |


|   |      |      |                                    |
|---|------|------|------------------------------------|
| 4 | ATRP | N    | Check current repeater status, OFF |
| 5 | ATEX | exit | Exit command mode                  |

## 2.3 Setting Illustration

- Repeater function is available in the factory.
- Once repeater function is modified; it will immediately take effect and be preserved permanently, even if the module is restarted.

## 3 Repeater Hops

A data packet could at most pass through third repeater three times. It is shown as follows:

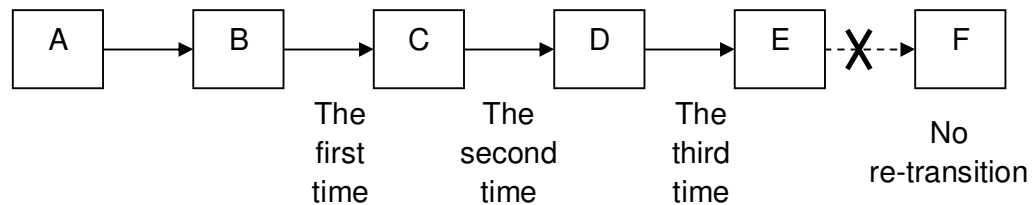

Data packet is sent from module A to module B. From module B to module C is the first time, to module D is the second time, and to module E is the third time. Module F is the termination. Therefore, data packet won't be sent to module F.

# V Logic Address


## 1 Logic Address

Module data packets are transmitted in the way of broadcasting in power lines. All modules will receive the data packets issued by the module and sent them, through the serial port under carrier signals area.

When multiple modules are installed on the same power line network, however, one does not want them to communicate directly; thus, the networks can be addressed by the logic address.

Logic address is composed of two parts: domain and nodes. For example, the logic address (10:200) means that the domain value is 10, node value is 200. Logic address is the default setting (1:1).

Module data packets can only be received and processed by the module at the same domain. Other modules, even detecting the carrier signal will not receive, nor to transmit to the serial port or repeater.

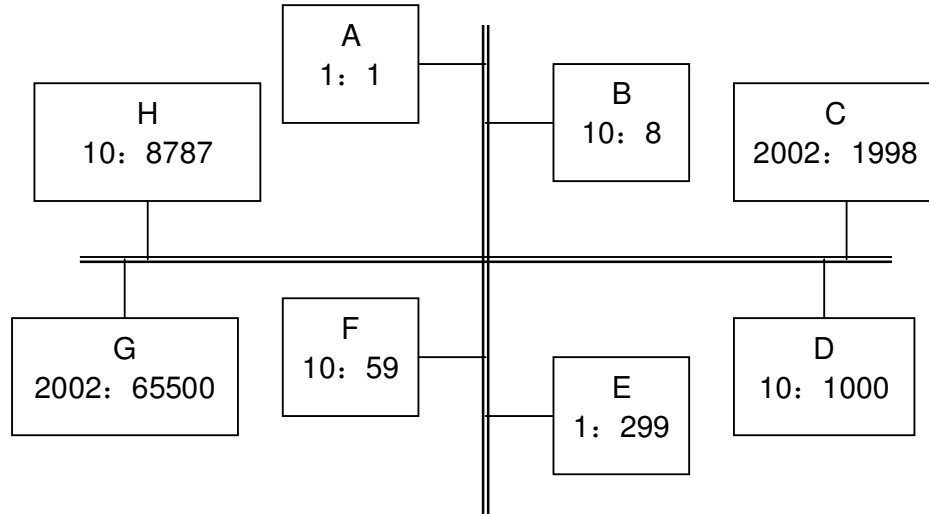

On the above figure, A, E are at the same network, their domain values are 1; B, D, F, H are at the same network, its domain values are 10; C, G are at the same network, their domain values are 2002. Although in the physically speaking, all the modules are in a power line network, the packet issued by A, will only be received and processed by E, other modules will not respond. Similarly, packet issued by F, only B, D, H will receive and process packet issued by F, other modules will not work.

## 2 Address Setting


| step | input  | response | description                                                                 |
|------|--------|----------|-----------------------------------------------------------------------------|
| 1    | +++    | ok       | Enter command mode                                                          |
| 2    | ATDA   | 1-32767  | Check domain values of present logic address. Default factory setting is 1. |
| 3    | ATNA   | 1-65535  | Check nodes values of present logic address. Default factory setting is 1.  |
| 4    | ATDA 2 | ok       | Set domain value of logic address as 2                                      |

|   |         |        |                                      |
|---|---------|--------|--------------------------------------|
| 5 | ATNA 45 | ok     | Set nodes of logic address as 45     |
| 6 | ATDA    | 2      | Check domain values of logic address |
| 7 | ATNA    | 45     | Check node values of logic address   |
| 8 | ATEX    | exited | Exit command mode                    |




## VI Application Illustration

Intelligent instruments widely adopt RS485 bus to communicate. For example, the power meter automatic meter reading systems, data concentrator through the RS485 bus read the message from power meter.

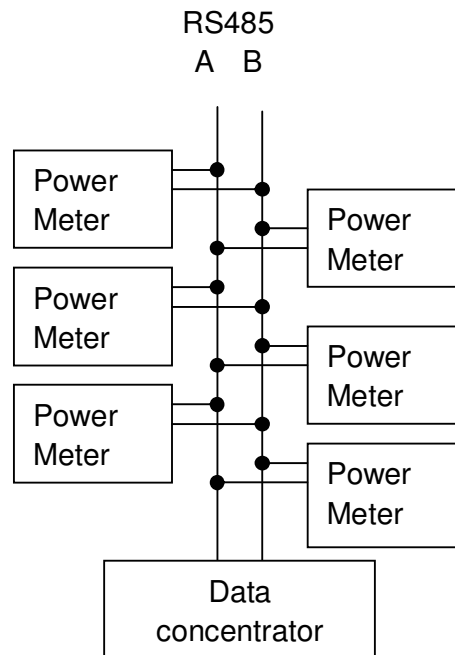

In order to automatically meter reading, RS485 bus needs to be deployed. Here, using PLC-UART module, one can use the existed power lines to directly complete data transmission.

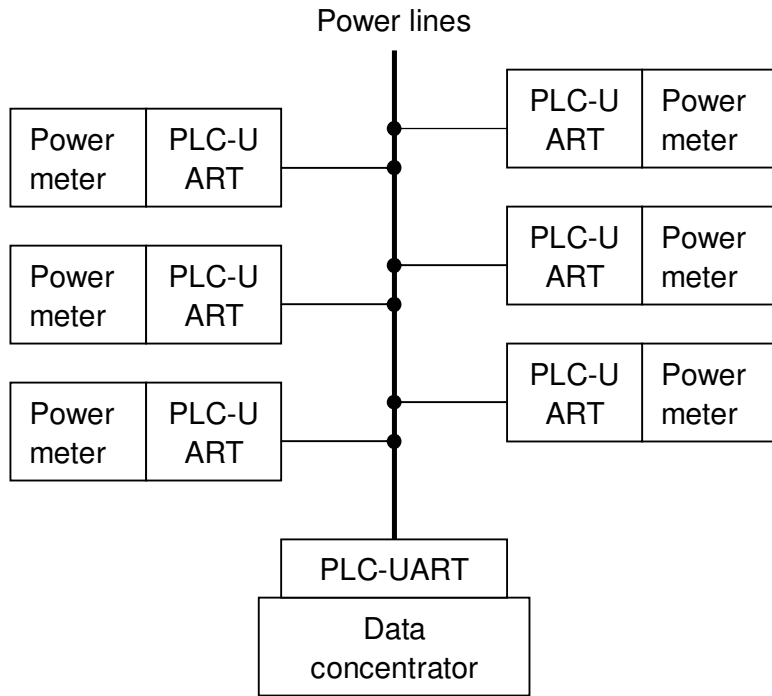

**LinkSprite Technologies, Inc.**

**1067 S. Hover St, Unit E-186, Longmont, CO 80501**

**Phone: 720-204-8599**

**Sales: [sales@linksprite.com](mailto:sales@linksprite.com)**

**Support: [support@linksprite.com](mailto:support@linksprite.com)**

**Web: <http://www.linksprite.com>**

