


STEP 1


Check Package Contents

When unpacking the QB-241/242 phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your shipper for a replacement.


•Phone Base

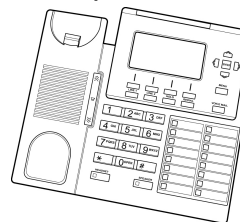


•Handset

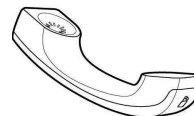


•Bracket

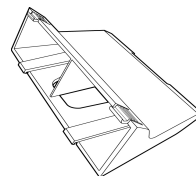


•Ethernet Cable

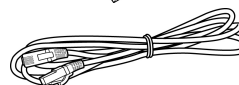

•Handset Cable

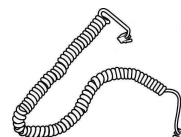

•QuickStart Guide

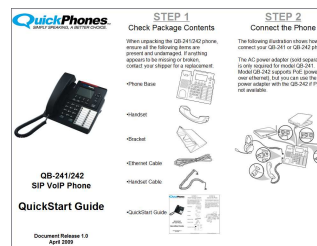


STEP 2

Connect the Phone

The following illustration shows how to connect your QB-241 or QB-242 phone.

The AC power adapter (sold separately) is only required for model QB-241. Model QB-242 supports PoE (power over ethernet), but you can use the AC power adapter with the QB-242 if PoE is not available.

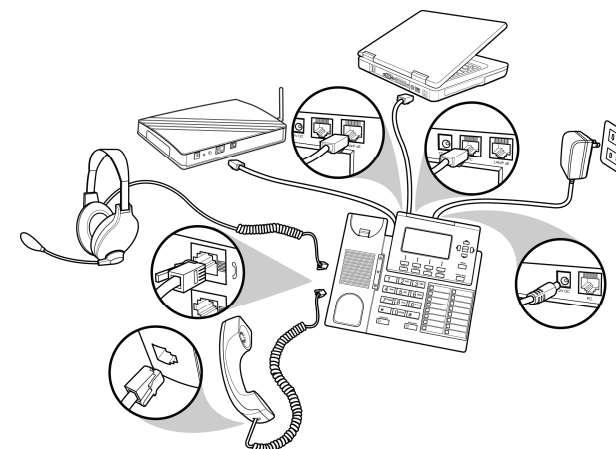

**QB-241/242
SIP VoIP Phone**

QuickStart Guide

Document Release 1.0
April 2009

STEP 3

Basic Configuration

Web Configuration:

Note: If you are not using a DHCP server to assign IP addresses, you must manually set the phone's network information (see next panel).

1. Determine phone's IP address: Press the **Menu** key. Choose **Network**. Type the password (default is "1234"), and press the OK softkey. Highlight **LAN Port Settings**, and press the **Info** softkey.

2. Login to the phone's web interface: Use a web browser to navigate to the phone's IP address at port **8000** (example: **http://192.168.100.50:8000**). The phone's login screen will be displayed. The default username is "**admin**" and the default password is "**1234**".

3. Setup SIP account: After logging in, click **SIP Accounts**, and click ID # **1**. Next to **Registration**:, click the **Enable** radio button. Enter the information for your SIP account provided by your network administrator.

4. Click the **Submit** button.

5. The phone should register with the SIP server. The Username for the registered SIP account will show on the phone's LCD.

For complete configuration and reference information, download the QB-241/242 User Manual at:

<http://www.QuickPhones.com/support.html>

<http://www.QuickPhones.com>

STEP 3 (cont'd)

Basic Configuration

Manual Configuration:

Basic configuration can be accomplished using the phone's keypad and LCD.

NOTE: When entering addresses, press the * key to enter a period (i.e. "dot"). In some submenus, you can use the # key to toggle character entry mode ("ABC" or "123").

1. Enter network information: Press the **Menu** key. Choose **Network**. Type the password (default is "1234"), and press the **OK** softkey. Use these submenus to enter information required to connect the phone to your network. Use the navigation keys and softkeys to make selections. Use the keypad to enter numbers/text. Press the **Save** softkey after typing in information to save changes.

2. Setup SIP Account: Press the **Menu** key. Choose **SIP Accounts**. Type the password (default is "1234"), and press the **OK** softkey. Select **1**. Use these submenus to enter the information for your SIP account provided by your network administrator.

NOTE: Before leaving the configuration submenu for the SIP account, you must press the **Apply** softkey to save changes. Otherwise, the configuration information will be lost.



The **Complete User Manual** and


Firmware Upgrades

can be found at:

<http://www.QuickPhones.com/support.html>

STEP 4

Use the Phone

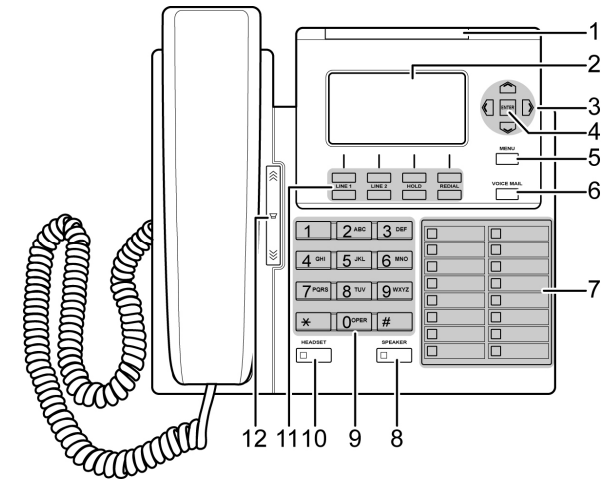

- 1-Message Indicator: indicates that you have an incoming call or new voicemail
- 2-Display Screen: displays calls and status information
- 3-Navigation Keys: scroll through lists and menus
- 4-Enter: enter a highlighted menu
- 5-Menu: access menu or quit to main screen
- 6-Voice Mail: dials programmed voicemail number; when lit, indicates new voicemail message
- 7-Speed Dial/BLF: speed dial programmed numbers; in BLF (busy lamp field) mode, also shows status of each programmed extension
- 8-Speaker: activates/deactivates speakerphone
- 9-Keypad: use to enter numbers/text
- 10-Headset: activates/deactivates headset
- 11-Softkeys/Function keys:
 - Softkeys: context-sensitive functions; see bottom of LCD for current menu functions
 - LINE1/LINE2: Press to activate/deactivate a line; also lights to indicate line status:
 - (not lit): line is idle
 - GREEN: incoming call or off-hook
 - RED: active call
 - FLASHING GREEN: call on hold
 - Hold: put an active call on hold
 - Redial: display dialed calls history
- 12-Volume keys: adjust ring volume and voice volume

<http://www.QuickPhones.com>