

N3752 & N3552 SERIES

Digital Two Video Channels with Two Audio, Two Data and Ethernet Signal

User Manual

Infinova

Contents

SERVICE NOTICE
PRODUCT DESCRIPTION
ORDERING INFORMATION
INSTALLATION4
POWER SUPPLY
PANEL DESCRIPTION
N3752T/R-2A2D&N3552T/R-2A2D
N3752T/R-2A2B&N3552T/R-2A2B7
N3752T/R-2A1D1E&N3552T/R-2A1D1E
N3752T/R-2A1D2C&N3552T/R-2A1D2C
N3752T/R-2A1D1B&N3552T/R-2A1D1B10
N3752T/R-ADBE&N3552T/R-ADBE11
N3752T/R-ADB2C&N3552T/R-ADB2C12
N3752T/R-2A2D-IP&N3552T/R-2A2D-IP
DIP SWITCH AND JUMPERS14
TYPICAL SYSTEM CONFIGURATION
Two video channels with two audio and two DIP selectable data18
Two video channels with two audio and two RS23219
Two video channels with two audio, one DIP selectable data and one two-way C.C20
Two video channels with two audio, one DIP selectable data and two one-way C.C21
Two video channels with two audio, one DIP selectable data, and one RS23222
Two video channels with one audio, one DIP selectable data, one RS232 and one
two-way C.C
Two video channels with one audio, one DIP selectable data, one RS232 and two
one-way C.C24
Two video channels with two audio, two DIP selectable data and one Ethernet signal25
DAISY CHAIN
SURGE PROTECTION
TRANSMISSION REPEATER
CONTACT CLOSURE SIGNAL
CODE DISTRIBUTOR
CABLE DIAMETER CALCULATION AND LIGHTNING & SURGE PROTECTION31

SERVICE NOTICE

The installation of this product should be made by qualified personnel. Do not attempt to service this product yourself. Refer all servicing to qualified personnel.

If you require information during installation of this product or if service seems necessary, contact the local suppliers or Infinova at 1-732-355-9100 in 51 Stouts Lane, Monmouth Junction, NJ 08852 U.S.A. You must obtain a Return Authorization Number and shipping instructions before returning any product for service.

Our obligation under this warranty is limited only to the repair or replacement of any of our products, provided that products are used within the specified ratings and applications, and that products are applied in accordance with good engineering practices, and that products are proved by our examination to be defective.

This warranty does not extend to any Infinova products which have been subject to acts of accident, misuse, abuse, neglect, improper application or installation, improper operation or maintenance, connection to an improper voltage supply or to materials which have been altered or repaired outside an authorized Infinova factory repair center.

Information provided by Infinova is accurate and reliable. However, no responsibility is assumed by Infinova for its use; nor for any infringements of other rights of third parties which may result from its use. No license is granted by implications or otherwise under any patent or patent rights of Infinova.




TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

DO NOT LOOK INTO OPTICAL PORTS WITH POWER ON.

PRODUCT DESCRIPTION

Description

The N3752 and N3552 series provide high quality reliable transmission of two digitally encoded composite video channels with multiple audio, two data and Ethernet signal over one optical fiber. The modules are compatible with PAL, SECAM, and NTSC EIA video signal. Audio interface supports 600 Ω balanced/unbalanced, 10k Ω unbalanced and 47k Ω unbalanced. Data interface supports DIP selectable RS422, Manchester, Biphase, 2-wire RS485, and 4-wire RS485.The factory default setting is RS232 or contact closure. Plug-and-play design ensures ease of installation requiring no electrical or optical adjustments. Each transmitter or receiver incorporates status indicators for monitoring of proper system operation. The modules are available in either standalone, or card unit versions.

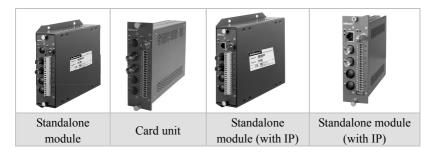

The N3752 series are compatible with 9/125 micron single-mode fibers.

The N3552 series are compatible with 50/125 or 62.5/125 micron multimode fibers. Camera end transmitter N3752T is compatible with monitor end receiver N3752R. Camera end transmitter N3552T is compatible with monitor end receiver N3552R.


Related product (optional)

e video channel and one data channel
ector

System Diagram



Use the configuration chart below to select the options available for this product.

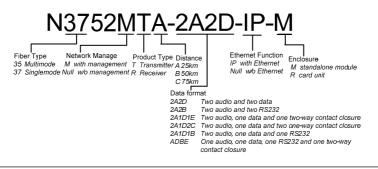


- The transmission distance category is valid for single-mode product only. For all multi-mode products, there are only TA and RA models, and the transmission distance is 2km. For single-mode products, if the transmission distance is within 15km, the letter standing for distance shall be omitted, e.g. N3752T/R-2A2D-IP.
- 2. The product with "-IP" model number indicates it has Ethernet function.

Installation of video and data/audio interface

To install the apparatus, it is necessary to allow enough space to accommodate the bend radius of the optical cable connected to it. The transceiver requires as short as practical two BNC terminated coaxial cables to input/output the video signal. Audio/data input/output uses a 20-pin terminal block connector.

Installation of card unit

Push the card unit along the guide rails (not in spaces between the rails). There is an Infinova logo on the front panel indicating the proper orientation. Press hard to make a good connection to motherboard - loud snap indicates firm connection. There are two captive screws on the front panel that can fasten the card unit to the subrack. They must be locked by hand in a clockwise manner (do not over tighten), see figure right below.

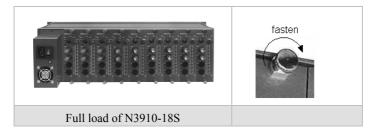

There are 18 slots on N3910-18S. Besides N3910-18S, there are N3910-2S, N3910-3S, N3910-4S, N3910-6W and N3910-15R optional. There are 2 slot on N3910-2S, 3 slots on N3910-3S, 4 slots on N3910-4S, 6 slots on N3910-6W and 15 slots on N3910-15R respectively.

WARNING:

A FULL LOAD OF N3910-15R AND N3910-18S REQUIRES FORCED AIR COOLING IN THE RACK. TO AVOID OVER HEATING OF CARD UNITS, WHENEVER POSSIBLE, INSTALL IN EVERY OTHER SUBRACK.




Power supply for card unit

The unit is powered by a plug-in power supply that is provided with the appropriate desk chassis or EIA 19" rack.


Power supply for stand-alone module

The card unit can be converted into a standalone module when installing into a 2-slot chassis N3910-2S that is powered by a plug-in 24VAC@830mA (N3921-24A-1 for 110V; N3921-24A-2 for 230V) power supply. Plug the wires into the connector; fasten the screws to make a firm connection.

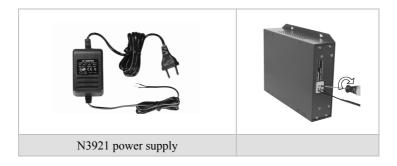


Note:

When the series is powered together with other devices (cameras and etc.) by a single 24VAC power supply, please make sure that the related device has a full-wave (bridge) rectifier circuit.

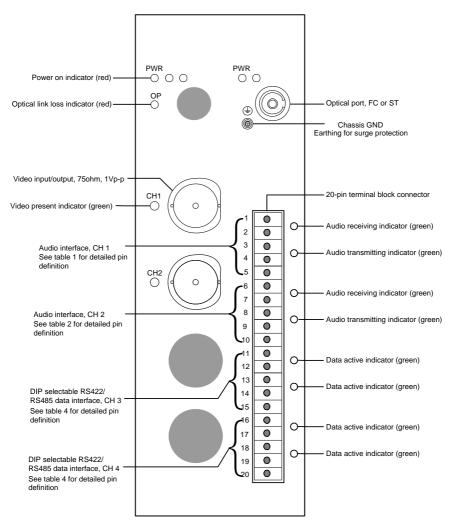


N3752T/R-2A2D&N3552T/R-2A2D (The interface definition is the same with IP series)

Figure 1. N3752T/R-2A2D&N3552T/R-2A2D

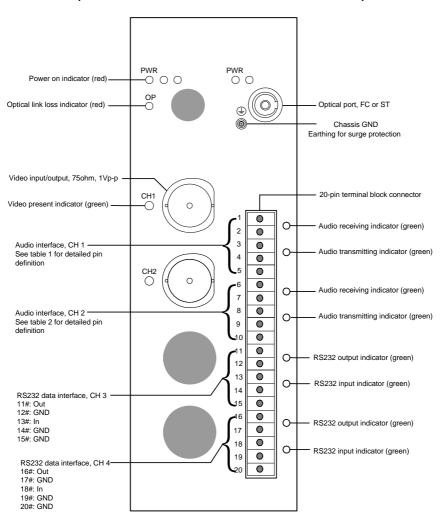


N3752T/R-2A2B&N3552T/R-2A2B (The interface definition is the same with IP series)

Figure 2. N3752T/R-2A2B&N3552T/R-2A2B

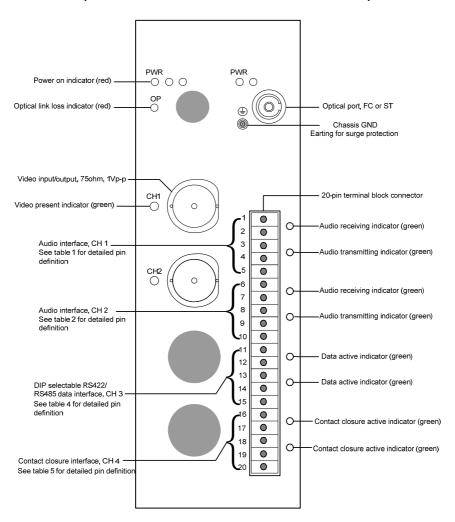


N3752T/R-2A1D1E&N3552T/R-2A1D1E (The interface definition is the same with IP series)

Figure 3. N3752T/R-2A1D1E&N3552T/R-2A1D1E

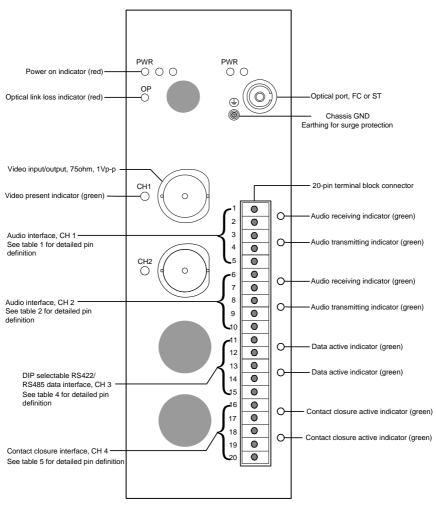


N3752T/R-2A1D2C&N3552T/R-2A1D2C (The interface definition is the same with IP series)

Figure 4. N3752T/R-2A1D2C&N3552T/R-2A1D2C

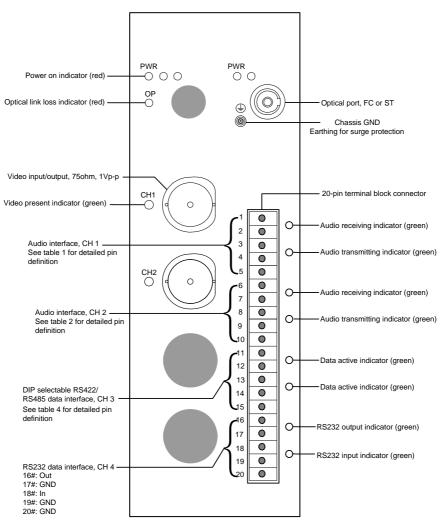


N3752T/R-2A1D1B&N3552T/R-2A1D1B (The interface definition is the same with IP series)

Figure 5. N3752T/R-2A1D1B&N3552T/R-2A1D1B

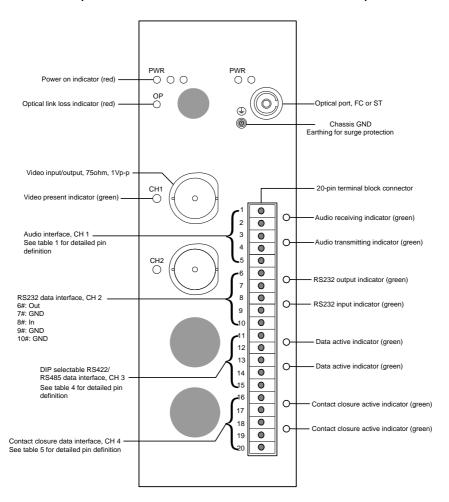


N3752T/R-ADBE&N3552T/R-ADBE (The interface definition is the same with IP series)

Figure 6. N3752T/R-ADBE&N3552T/R-ADBE

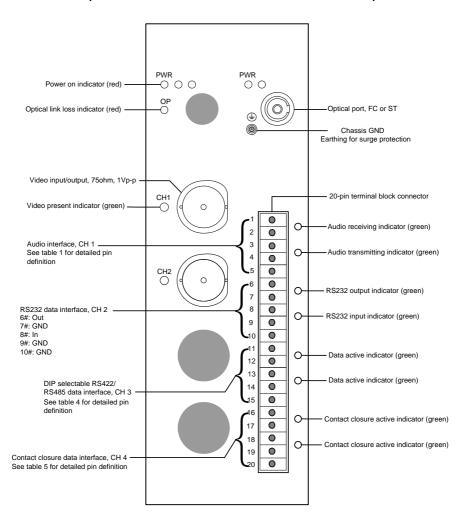

N3752T/R-ADB2C&N3552T/R-ADB2C (The interface definition is the same with IP series)

Figure 7. N3752T/R-ADB2C&N3552T/R-ADB2C

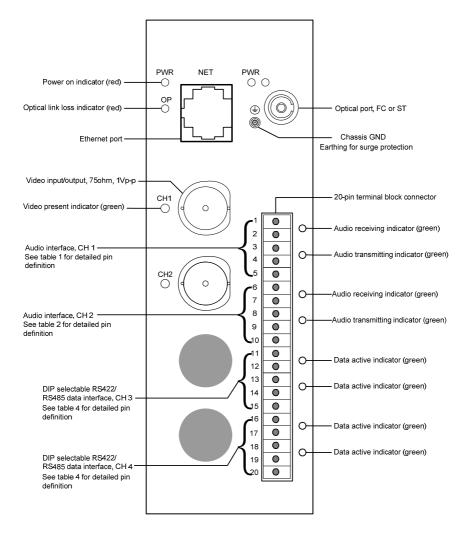

N3752T/R-2A2D-IP&N3552T/R-2A2D-IP

Figure 8. N3752T/R-2A2D-IP&N3552T/R-2A2D-IP

Location of DIP switch and jumpers

Figure 9 shows the detailed location and concise functions of DIP switch and jumpers.

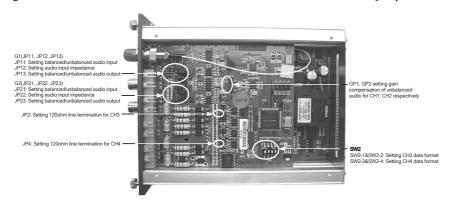


Figure 9. Location of jumpers and switch

Setting audio format

See Table 1 for detailed audio format setting for Pin1 ~ Pin5 (CH1). See Table 2 for detailed audio format setting for Pin6 ~ Pin10 (CH2).

GP1 and GP2 are jumpers for gain compensation. When CH1/CH2 is unbalanced audio, attach GP1/GP2 to augment the gain. Detach GP1/GP2 when CH1/CH2 is balanced audio.

600 Ω balanced	600Ω Unbalanced	10kΩUnbalanced	47kΩUnbalanced
JP11 0 0 JP12 0 0 JP13 0 0	JP 13	JP11	JP17
1 0+ In+ 2 0+ Out+ 3 0 Out+ 5 0 GND		1 In 2 GND 3 GND 4 GND GND GND GND	

Table 1. AUDIO FORMAT SETTINGS REFERENCE FOR CH1

600Ω balanced	600Ω Unbalanced	10kΩUnbalanced	47kΩUnbalanced
JP21 O O JP22 O O JP23 O O	JP21	JP21	JP21 JP22 JP23 JP23 JP23 JP23 JP23 JP23 JP23 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP21 JP22 JP21 JP22 JP23 J
6		6 In GND 9 GND 10 GND	

Table 2. AUDIO FORMAT SETTINGS REFERENCE FOR CH2

RS232 Pin Definition

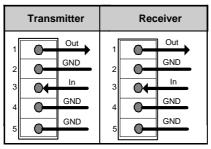


Table 3. RS232 PIN DEFINITION

Note:

In table 3, pin 1 represents the pin with MINIMUM number of each RS232 data channel; pin 4 represents the pin with MAXIMUM number of each RS232 data channel.

Setting data format

Please refer to table 4 for detailed data format settings and pin definitions.

Data format	DIP	Transmitter	Receiver
Full duplex RS485	OFF 1 OFF 2	1 2 3 4 5 0 0 0 0 0 0 0 0 0 0 0 0 0	1 Out + 2 Out - 3 Ot in + 4 Ot GND
RS422/Manchester/Biphase	off 1 on 2	$1 \qquad \bigcirc \qquad \bigcirc \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\$	1 Out+ 2 Out- 3 Out- 1 In- 6 GND
Half duplex RS485 (two channels)	on 1 off 2		$\begin{array}{c} 1 \\ 0 \\ 2 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0$
Return RS422/Manchester/Biphase (two channels)	on 1 on 2	CH1 CH1 CH1 CH1 CH1 CH1 CH2 CH2 CH2 CH2 CH2	$\begin{array}{c}1\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0\\0$

Table 4. DIP SWITCH SETTING REFERENCE

Note:

- 1. In table 4, pin 1 represents the pin with MINIMUM number of each data channel; pin 5 represents the pin with MAXMUM number of each data channel.
- 2. In table 4, DIP-1 and DIP-2 represents the DIP with SMALLER number and the DIP with LARGER number of the two configuring DIPs respectively.

Contact Closure Transmission


Two-way conta	Two-way contact closure		2-ch forward contact closure 2-ch		ontact closure
Transmitter	Receiver	Transmitter	Receiver	Transmitter	Receiver
16 17 18 19 GND	16 17 18 19 COM N.O Alarm in GND	16 GND 17 GND 18 GND 19 GND CH2	17 18 COM	16 COM 17 O NO. 18 O NO. 19 O NO. CH2	16 GND 17 GND 17 GND Alarm in 18 GND CH2

Table 5. CONTACT CLOSURE PIN DEFINITION

Termination resistor

A multipoint bus architecture requires termination at both ends of the bus line to restrain signal reflection. The termination resistors must be within 20 percent of the characteristic impedance of the cable and can vary from 90Ω to 120Ω .


JP2 and JP4 are jumpers for connecting/disconnecting 120 Ω line termination for CH3 and CH4 when they are DIP selectable data. Attach the jumper to connect 120 Ω termination resistor for their related data channel, whenever termination resistor is required. Otherwise, detach the jumper.

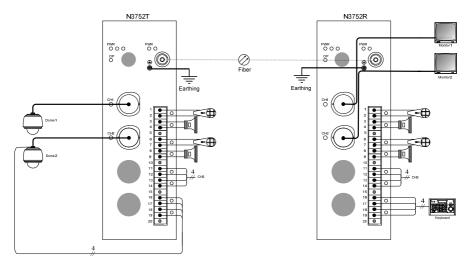

Two video channels with two audio and two DIP selectable data

Figure 10. Two video channels with two audio and two DIP selectable data


- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 2. The date selectable for CH3 and CH4 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 3. Please refer to termination resistor (page 17) for detailed settings of termination

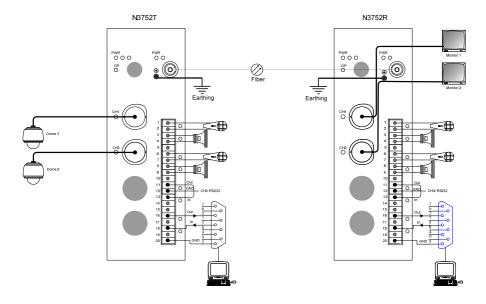

Two video channels with two audio and two RS232

Figure 11. Two video channels with two audio and two RS232


- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 2. Please refer to table 3 (page 15) for pin definitions for CH3 and CH4 RS232.

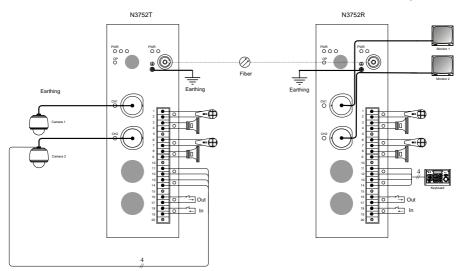

Two video channels with two audio, one DIP selectable data and one two-way C.C.

Figure 12. Two video channels with two audio, one DIP selectable data and one two-way C.C.


- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 2. The date selectable for CH3 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 3. Please refer to termination resistor (page 17) for detailed settings of termination.

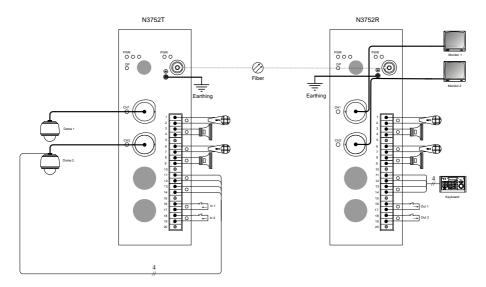

Two video channels with two audio, one DIP selectable data and two one-way C.C.

Figure 13. Two video channels with two audio, one DIP selectable data and two one-way C.C.

- 1. The contact closure for CH4 can be either forward or return.
- 2. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 3. The date selectable for CH3 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 4. Please refer to termination resistor (page 17) for detailed settings of termination.

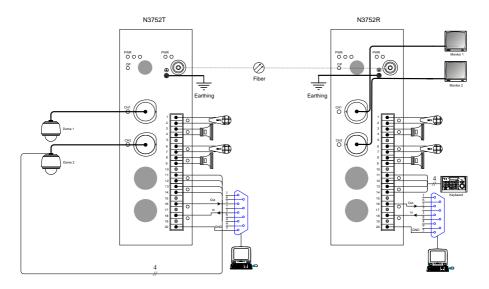

Two video channels with two audio, one DIP selectable data, and one RS232

Figure 14. Two video channels with two audio, one DIP selectable data and one RS232

- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 2. The date selectable for CH3 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 3. Please refer to table 3 (page 15) for RS232 pin definitions of CH 4.
- 4. Please refer to termination resistor (page 17) for detailed settings of termination.

Two video channels with one audio, one DIP selectable data, one RS232 and one two-way C.C.

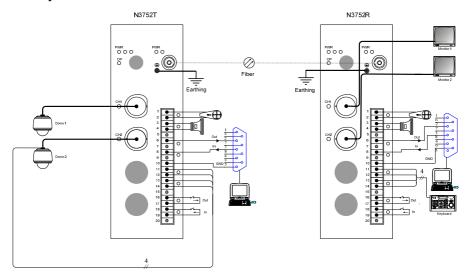


Figure 15. Two video channels with one audio, one DIP selectable data, one RS232 and one two-way C.C.

- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1.
- 2. Please refer to table 3 (page 15) for RS232 pin definitions of CH 2.
- 3. The date selectable for CH3 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 4. Please refer to termination resistor (page 17) for detailed settings of termination.

Two video channels with one audio, one DIP selectable data, one RS232 and two one-way C.C.


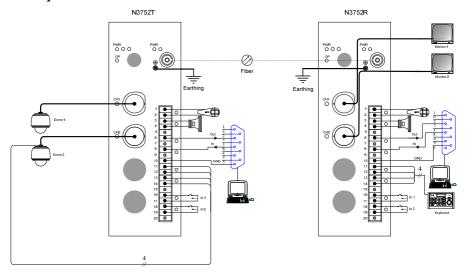


Figure 16. Two video channels with one audio, one DIP selectable data, one RS232 and two one-way C.C.

- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1.
- 2. Please refer to table 3 (page 15) for RS232 pin definitions of CH 2.
- 3. The date selectable for CH3 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 4. Please refer to termination resistor (page 17) for detailed settings of termination.

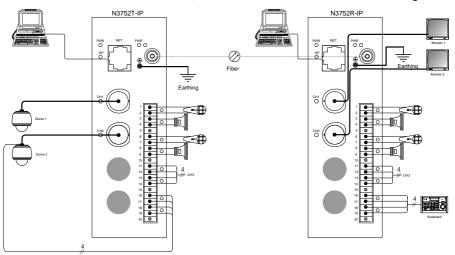

Two video channels with two audio, two DIP selectable data and one Ethernet signal

Figure 17. Two video channels with two audio, two DIP selectable data and one Ethernet signal

- 1. Please refer to table 1(page 14) and table 2 (page 15) for audio setting & pin definitions of CH1 and CH2.
- 2. The date selectable for CH3 and CH4 is RS422, Manchester/Biphase or RS485. Please refer to Table 4 (Page 16) for detailed data format settings and pin definitions.
- 3. Please refer to termination resistor (page 17) for detailed settings of termination.

We can use daisy chain connection to simplify the wiring and controlling of remote domes. The control signal is connected to all of the receivers, and transmitted to all of the transmitters through fiber optic respectively. In the remote site, the specified dome will act as the control signal instructs. The number of video receiver daisy-chained depends on the driving capability of code source.

System Diagram

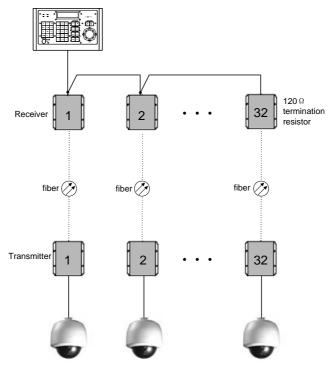


Figure 18. Daisy chain diagram


Note:

There should be a 120Ω termination resistor on the final receiver for restraining signal reflection. Please pay attention to it.

SURGE PROTECTION

Surge protection circuits are implemented to protect Infinova's products against transient surge and over voltage. Over voltage can be caused by AC power or lightning flash disturbances that are induced or conducted onto the data line. It's important that good earthing or grounding be applied to ensure the proper function of surge protection circuit.

For reinforced protection, N3932 are strongly recommended to protect your investment.

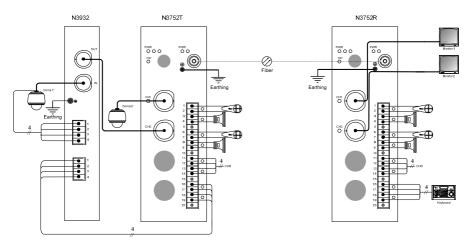

Typical application connection

Figure 19. Lightning surge protection

TRANSMISSION REPEATER

The N3951 series is used between transmitter and receiver to extend the transmission distance of fiber optical system. It magnifies the optical signal received from transmitter, and sends it to receiver. By using a N3951, the transmission distance of the system is doubled.

Typical application connection


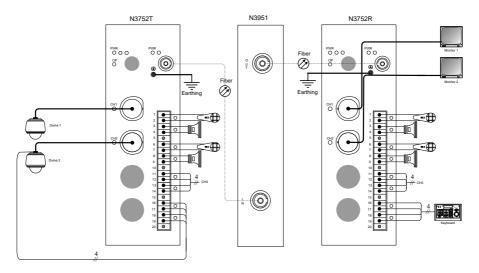


Figure 20. Transmission repeater

CONTACT CLOSURE SIGNAL

The N3952 series is a contact closure signals collector. This series can convert the 8 channel input contact closure signals to one RS232/RS422/RS485 data, and convert input RS232/RS422/RS485 data to 8 channel contact closure signals. It can transmit the contact closure signals over a long distance when connecting with fiber optical transmission system. The number of contact closure channels is default setting, so is the data format.

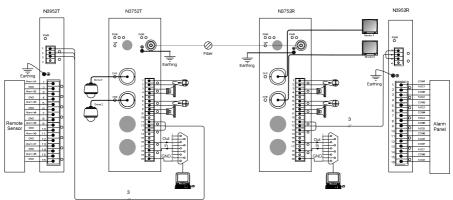

Typical application connection

Figure 21. Contact closure signal connection

The N3954 is a code distributor designed for star connection where the code source is too far away from the video receiver and overload or reflection occurs.

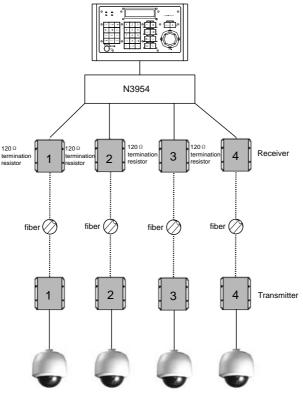


Figure 22. Code distributor diagram

Relation between 24VAC Cable Diameter and Transmission Distance


In general, the maximum allowable voltage loss rate is 10% for AC-powered devices. The table below shows the relationship between transmission power and maximum transmission distance under a certain specified cable diameter, on condition that the 24VAC voltage loss rate is below 10%. According to the table, if a device rated at 50W is installed 17-meter away from the transformer, the minimum cable diameter shall be 0.8000mm. A lower diameter value tends to cause voltage loss and even system instability.

Diameter (mm)				
Distance (ft / m) Power (W)	0.8000	1.000	1.250	2.000
10	283 (86)	451 (137)	716 (218)	1811 (551)
20	141 (42)	225 (68)	358 (109)	905 (275)
30	94 (28)	150 (45)	238 (72)	603 (183)
40	70 (21)	112 (34)	179 (54)	452 (137)
50	56 (17)	90 (27)	143 (43)	362 (110)
60	47 (14)	75 (22)	119(36)	301 (91)
70	40 (12)	64 (19)	102 (31)	258 (78)
80	35 (10)	56 (17)	89 (27)	226 (68)
90	31 (9)	50 (15)	79 (24)	201 (61)
100	28 (8)	45 (13)	71 (21)	181 (55)
110	25 (7)	41 (12)	65 (19)	164 (49)
120	23 (7)	37 (11)	59 (17)	150 (45)
130	21 (6)	34 (10)	55 (16)	139 (42)
140	20 (6)	32 (9)	51 (15)	129 (39)
150	18 (5)	30 (9)	47 (14)	120 (36)
160	17 (5)	28 (8)	44 (13)	113 (34)
170	16 (4)	26 (7)	42 (12)	106 (32)
180	15 (4)	25 (7)	39 (11)	100 (30)
190	14 (4)	23 (7)	37 (11)	95 (28)
200	14 (4)	22 (6)	35 (10)	90 (27)

Lightning & Surge Protection

The product adopts multi-level anti-lightning and anti-surge technology integrated with gas discharge tube, power resistor and TVS tube. The powerful lightning and surge protection barrier effectively avoids product damage caused by various pulse signals with power below 4kV, including instantaneous lightning, surge and static. However, for complicated outdoor environment, refer to instruction below for lightning and surge protection:

- The product features with dedicated earth wire, which must be firmly grounded. As for surveillance sites beyond the effective protection scope, it's necessary to erect independent lightening rods to protect the security devices. It's recommended to separate the lightning rod from the mounting pole, placing the rod on an independent pole, as shown in the figure below. If the product has to be installed on the same pole or pedestal for lightning rod, there should be strict insulation between the video cable BNC terminal, power cable, control cable and the standing pole of the lightning rod.
- For suburb and rural areas, it's recommended to adopt direct burial for the transmission cables. Overhead wiring is prohibited, because it's more likely to encounter lightning strike. Use shielded cables or thread the cables through metal tubes for burial, thus to ensure the electric connection to the metal tube. In case it's difficult to thread the cable through the tube all the way, it's acceptable to use tube-threaded cables only at both ends of the transmission line, yet the length in burial should be no less than 15 meters. The cable sheath and the tube should be connected to the lightning -proof grounding device.
- Additional high-power lightning-proof equipment and lightning rods should be installed for strong thunderstorm or high induced voltage areas (such as high-voltage substation).
- The lightning protection and grounding for outdoor devices and wires should be designed in line with the actual protection requirement, national standards and industrial standards.
- The system should perform equipotential grounding by streaming, shielding, clamping and earthing. The grounding device must meet anti-interference and electric safety requirements. There should be no short-circuiting or hybrid junction between the device and the strong grid. Make sure there's a reliable grounding system, with grounding resistance below 4 Ω (below 10 Ω for high soil resistivity regions). The cross-sectional area of the earthing conductor should be no less than 25mm².

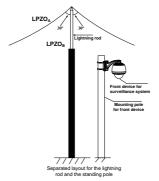



51 Stouts Lane, Monmouth Junction, NJ 08852, U.S.A. Tel: 1-888-685-2002 (toll-free, USA) 1-732-355-9100 Fax: 1-732-355-9101 E-mail: sales@infinova.com

V2.3 1I 0F